

CFP5E-7E SERIES

Operation & Maintenance Manual Fire Pump Drive Engines

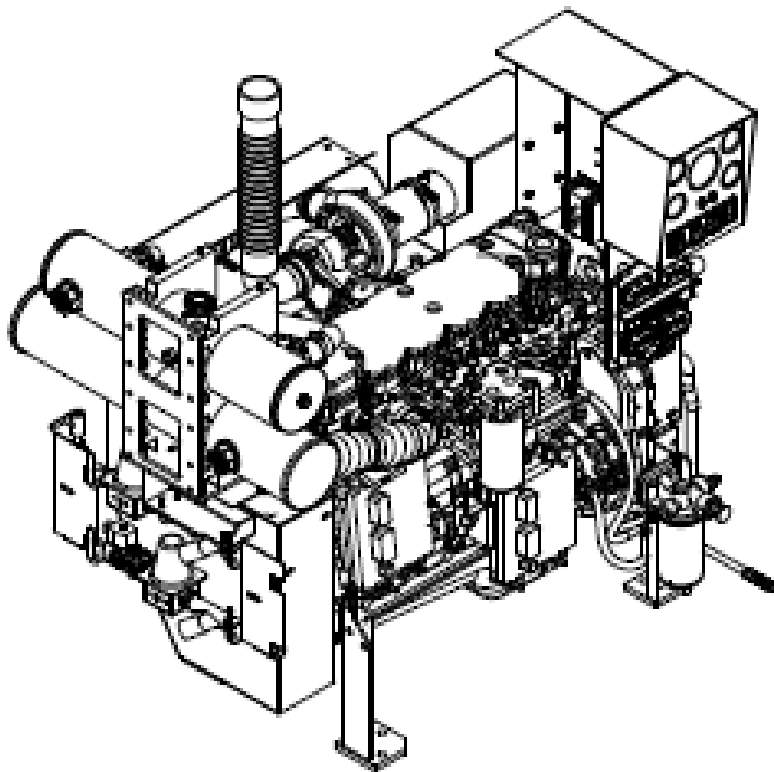




Table of Contents

Warranty Information

Section 1 - Safety

1.1 Introduction	1-1
1.2 Advisory and Cautionary Statements	1-1
1.3 Safety Precautions	1-1

Section 2 - Description

2.1 Introduction	2-1
2.2 Fire Pump Engines	2-1
2.3 Operator Control Panel	2-3
2.3.1 Overspeed Switches	2-3
2.3.2 Operating Speed	2-4
2.4 Fire Pump Controller	2-4
2.5 Air Intake System	2-4
2.6 Raw Water Cooling System	2-5
2.6.1 Fuel Supply and Drain Location	2-9
2.7 High Pressure Common Rail (HPCR) Fuel System	2-9
2.8 Engine Oil System	2-9
2.9 Exhaust System	2-10

Section 3 - Installation

3.1 Receiving and Handling Information	3-1
3.1.1 Damage During Shipping	3-1
3.1.2 Claim Filing Procedure	3-1
3.2 Site Preparation	3-1
3.2.1 Site Considerations	3-1
3.3 Fuel Supply Installation	3-3
3.3.1 Fuel System Preparation	3-3
3.3.2 Fuel Recommendations	3-4
3.4 Raw Water Supply Installation	3-4
3.4.1 Install Raw Water Piping	3-5
3.5 Battery Selection	3-6
3.5.1 Battery Requirements	3-6
3.5.2 Battery Installation	3-7
3.5.3 Auxiliary Battery Starting	3-7
3.6 Signal and Control Installation	3-8
3.7 Coolant System Preparation	3-9
3.8 Charge Air Cooler System	3-10
3.9 Engine Oil System Preparation	3-11
3.10 Pre-Start Inspections	3-12
3.11 Engine Start Test	3-12
3.11.1 Engine Will Not Start	3-14
3.11.2 Engine Starts	3-14

Table of Contents

Section 4 - Controls

4.1	Operator Control Panel	4-1
4.1.1	Coolant Temperature Gauge	4-1
4.1.2	Engine Oil Pressure Gauge	4-1
4.1.3	Tachometer and Hour Meter	4-1
4.1.4	Battery A and B Voltmeters	4-2
4.1.5	Circuit Breaker Switches	4-2
4.1.6	AUTO/MANUAL Mode Switch	4-2
4.1.7	Overspeed Warning Lamp	4-2
4.1.8	Engine Overspeed Warning Lamp	4-3
4.1.9	Overspeed RESET/STOP Switch	4-3
4.1.10	High Coolant Temperature Warning Lamp	4-3
4.1.11	Low Oil Pressure Warning Lamp	4-3
4.1.12	CRANK BATT A/B Switch	4-3
4.1.13	ECM Fault Code Lamps	4-4
4.1.14	ECM A/B Indicator Lamps	4-4
4.2	Electronic Control Module	4-4
4.2.1	ECM Data Plate	4-4
4.3	Overspeed Switch	4-5
4.4	Raw Water Flow Control Valves	4-5
4.5	Engine Protection System	4-6
4.5.1	Engine Protection Fault	4-6

Section 5 - Operation

5.1	Start-up Procedures	5-1
5.2	General Operating Information	5-1
5.3	Remote Starting Procedure	5-1
5.4	Local Starting Procedure	5-2
5.5	Emergency Starting Procedure	5-3
5.6	Engine Operating Speed	5-3
5.7	Overspeed Set Point	5-3
5.8	Crank Terminate Set Point	5-4
5.9	ECM Fault Code Lamps	5-4
5.10	Isolated Acceptance Testing	5-5
5.10.1	Integrated Acceptance Testing	5-5

Section 6 - Maintenance

6.1	Introduction	6-1
6.2	Engine Operation Report	6-1
6.3	Weekly Maintenance	6-4
6.3.1	General Walk Around Inspection	6-4
6.3.2	Air Filter and Piping	6-4
6.3.3	Cooling System	6-4
6.3.4	Engine Oil System	6-5
6.3.5	Fuel System Inspections	6-6
6.3.6	Engine Exhaust System	6-7
6.3.7	Electrical Supply and Controls	6-7
6.3.8	Crankcase Breather	6-7
6.3.9	Clean Raw Water Strainers (optional raw water manifold)	6-7
6.3.10	Check Battery Condition	6-8
6.3.11	Engine Run Testing	6-9
6.3.12	Engine Heater	6-9

Table of Contents

6.3.13 Check Antifreeze	6-9
6.3.14 Air Cleaner Service Indicator	6-10
6.4 Annual Maintenance	6-10
6.4.1 Electrical Components	6-10
6.4.2 Turbocharger Mounting Nuts	6-11
6.4.3 Engine Mounting Bolts	6-11
6.4.4 Inspect Fuel Pump and Filters	6-12
6.4.5 Engine Oil and Oil Filter Change	6-12
6.4.6 Change Fuel Filters.	6-14
6.4.7 Output Shaft Lubrication	6-14
6.4.8 Engine Operation Checks	6-15
6.4.8.1 Crank Termination Set Point	6-15
6.4.8.2 Engine Speed Calibration	6-16
6.4.8.3 Overspeed Set Point Adjustment	6-16
6.4.9 Coolant Pump/Alternator Belt Inspection	6-17
6.4.10 Coolant Pump/Alternator Belt Tension	6-18
6.4.11 Heat Exchanger Pressure Test.	6-18
6.4.12 Turbocharger Inspection	6-18
6.5 Every 2 Years or 2000 Hours	6-19
6.5.1 Water Pump Inspection.	6-19
6.5.2 Drain and Flush Cooling System	6-19
6.6 Every 4 Years or 5000 Hours	6-21
6.6.1 Coolant Thermostat Removal/Installation	6-21
6.6.2 Coolant Pump/Alternator Belt Replacement	6-22
6.6.3 Charge Air Cooler (CAC) Heat Exchanger	6-23

Section 7 - Troubleshooting

7.1 Troubleshooting	7-1
7.1.1 Alternator Overcharging with the Engine Running	7-11
7.1.2 Neither Battery is Charging with the Engine Running.	7-11
7.1.3 Only One Battery is Charging with the Engine Running	7-12
7.1.4 Voltage Indications Differ	7-12
7.1.5 Coolant Contamination	7-13
7.1.6 Excessive Coolant Loss	7-14
7.1.7 Coolant Temperature Above Normal	7-15
7.1.8 Coolant Temperature Below Normal.	7-16
7.1.9 Raw Water Drain Steaming	7-17
7.1.10 Raw Water Solenoid Valve fails to Operate	7-17
7.1.11 Auto Start failure - Does not Crank on BATT A or B.	7-18
7.1.12 Auto Start failure - Cranks but does not Start	7-18
7.1.13 Auto Start failure - Engine Starts but Crank Terminate Does Not Occur	7-19
7.1.14 Manual Start Failure from Solenoid Lever - Does not Crank on A or B	7-20
7.1.15 Manual Start Failure from Control Panel - Does not Crank on A or B	7-20
7.1.16 Engine Cranks Normally But Will Not Start (No Exhaust Smoke).	7-21
7.1.17 Engine Cranks Slowly But Does Not Start	7-22
7.1.18 Engine Stops During Operation	7-23
7.1.19 Engine Will Not Reach Rated Speed (RPM).	7-25
7.1.20 Engine Will Not Shut Off Remotely.	7-25
7.1.21 Engine Will Not Shut Off Locally.	7-26
7.1.22 Fuel Consumption is Excessive	7-26
7.1.23 Fuel or Engine Oil Leaking From Exhaust Manifold	7-26
7.1.24 Engine Oil is Contaminated	7-27
7.1.25 Engine Oil Consumption is Excessive	7-27

Table of Contents

7.1.26 Engine Oil in the Coolant. 7-28

7.1.27 Engine Overspeed Trip 7-29

7.1.28 Tachometer Does not Indicate Engine Speed. 7-29

Section 8 - Component Parts and Assemblies

8.1 Part Ordering Information 8-1

8.2 Routine Service and Parts 8-1

8.3 Emergency Repairs and Technical Service 8-1

8.4 Recommended Spares Inventory 8-1

Index

List of Figures

Figure 2-1 Engine Components - Instrument Panel Side (CFP7E Shown)	2-2
Figure 2-2 Engine Components - Turbocharger Side (CFP7E Shown)	2-3
Figure 2-3 Engine Overspeed Control Module	2-4
Figure 2-4 Turbocharger and Exhaust Manifold	2-4
Figure 2-5 Engine Air Intake and Charge Air Cooling Flow Diagram (CFP7E Shown)	2-5
Figure 2-6 Engine Cooling System Flow Diagram	2-6
Figure 2-7 Heat Exchanger Tanks	2-7
Figure 2-8 Raw Water Manifold (optional)	2-7
Figure 2-9 Fuel System Components - High Pressure Common Rail (HPCR - CFP7E Shown)	2-8
Figure 2-10 Flow Diagram - Engine Lubricating Oil System (typical)	2-9
Figure 2-11 Oil Level Dipstick and Oil Fill Port	2-10
Figure 2-12 Flow Diagram - Exhaust System (typical)	2-10
Figure 2-13 Turbocharger Exhaust Flow Diagram (typical)	2-10
Figure 3-1 Engine Lifting lugs (Engine Only)	3-2
Figure 3-2 Drive Coupling Alignment	3-2
Figure 3-3 Drive Coupling Grease Fittings	3-2
Figure 3-4 Fuel Line Connections	3-3
Figure 3-5 Engine Fuel System Components	3-4
Figure 3-6 Raw Water Manifold (optional)	3-5
Figure 3-7 Cooling Loop Heat Exchangers	3-6
Figure 3-8 Series Battery Connection - 24 VDC (optional)	3-6
Figure 3-9 Termination Blocks and Wiring Decal	3-8
Figure 3-10 Coolant Hoses and Clamps	3-10
Figure 3-11 Coolant Heat Exchanger/ Expansion Tank	3-10
Figure 3-12 Charge Air Cooler Tubing	3-10
Figure 3-13 Turbocharger and CAC Piping	3-11
Figure 3-14 Oil Level Dipstick and Fill Port	3-11
Figure 3-15 Turbocharger Oil Line Location	3-12
Figure 3-16 Turbocharger Turbine Wheel (typical)	3-12
Figure 3-17 Operator's Control Panel	3-13
Figure 3-18 Operator's Controls	3-13
Figure 3-19 Manual Starter Contactors	3-13
Figure 4-1 Instrument Panel	4-1
Figure 4-2 Operator Panel Controls	4-2
Figure 4-3 Engine Settings Plates	4-3
Figure 4-4 ECM Selector Panel and Switch	4-4
Figure 4-5 Electronic Control module (ECM)	4-5
Figure 4-6 Engine Overspeed Control Module	4-5
Figure 4-7 Raw Water Flow Control Valves	4-6
Figure 5-1 Instrument Panel Switch Module	5-1
Figure 5-2 ECM Selector Panel and Switch	5-2
Figure 5-3 Raw Water Manual Valves (open)	5-2
Figure 5-4 Manual Starter Contactors	5-3
Figure 5-5 ECM Diagnostic Reader Plug-ins	5-4
Figure 5-6 Instrument Panel Indicator Lamps	5-4

Table of Contents

Figure 6-1	Air Intake Filter	6-4
Figure 6-2	Heat Exchanger Tanks	6-5
Figure 6-3	Oil Level Dipstick and Oil Fill Port	6-6
Figure 6-4	Engine Fuel Pre-Filter/Water Separator	6-6
Figure 6-5	Crankcase Breather.	6-7
Figure 6-6	Raw Water Wye Strainers (optional raw water manifold)	6-7
Figure 6-7	24 VDC Battery Connection (optional)	6-8
Figure 6-8	Engine Heater	6-9
Figure 6-9	Air Cleaner Service Indicator.	6-10
Figure 6-10	Electrical Control Modules.	6-11
Figure 6-11	Turbocharger.	6-11
Figure 6-12	Engine Mounting Bracket	6-12
Figure 6-13	Fuel Pump and Filters	6-12
Figure 6-14	Oil Pan Drain Plug and Oil Filter	6-13
Figure 6-15	Oil Level Dipstick and Oil Fill Port	6-13
Figure 6-16	Fuel Filter and Pre-Filter/Separator.	6-14
Figure 6-17	Drive Coupling Grease Fittings	6-15
Figure 6-18	Engine Overspeed Control Module	6-15
Figure 6-19	Coolant Pump/Alternator Belt	6-17
Figure 6-20	Turbocharger Connections	6-19
Figure 6-21	Turbocharger Turbine Wheel (typical).	6-19
Figure 6-22	Engine Coolant Drain	6-20
Figure 6-23	Thermostat Housing	6-21
Figure 6-24	Coolant Pump/Alternator Belt	6-22
Figure 6-25	Cooling Loop and Heat Exchangers	6-24



This manual contains proprietary information to equipment produced by Cummins Fire Power or Cummins, Inc. and is being supplied solely for the purpose of operating, maintaining and servicing the fire pump engine purchased from Cummins Fire Power.

© Copyright 2009, Cummins Fire Power

Warranty Information

LIMITED WARRANTY

EXCLUSIVE EXPRESS LIMITED WARRANTY: Cummins Fire Power (CFP), division of Cummins NPower, LLC expressly warrants to the original end consumer only that, for a period not to exceed the earlier of two (2) years or 2000 hours of use from the start-up date (or, if the original end consumer fails to register as purchaser with CFP, six (6) months from CFP shipment date), the diesel fire pump drivers, manufactured and sold by CFP, shall be free from defects in material and workmanship when used and serviced in accordance with the Operations and Maintenance manual for the applicable Cummins Fire Pump engine model (the "Exclusive Warranty"). The Exclusive Warranty is nontransferable and shall immediately terminate and be of no further force or effect upon the sale, lease, assignment, transfer or other disposition by an original end consumer of a Cummins Fire Pump engine that contains a diesel fire pump driver covered by this Exclusive Warranty. Nothing contained herein shall be construed to extend the Exclusive Warranty, and the Exclusive Warranty shall not be extended, to:

- Maintenance, adjustment, installation or start-up costs;
- Diesel fire pump driver failure due to normal wear, accident, misuse, abuse, neglect, improper installation or a defect attributable to a Cummins Fire Pump engine;
- Alterations or modifications not authorized in writing by CFP;
- Additional components added to a diesel fire pump driver package subsequent to shipment of the engine; or
- Starting batteries
- Coolant heaters are covered for 12 months.

DISCLAIMER OF WARRANTIES: Except for the Exclusive Warranty provided above, which is in lieu of all other express and implied warranties, CFP EXPRESSLY DISCLAIMS ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

LIMITATION AND EXCLUSION OF REMEDIES: All claims under this Exclusive Warranty shall be deemed waived by the original end consumer if not submitted to CFP or an authorized distributor within thirty (30) days of initial discovery that a diesel fire pump driver is not conforming to the Express Warranty. The original end consumer's remedy under this Exclusive Warranty is limited, in CFP's reasonable discretion, to repair, replacement or other appropriate adjustment of a nonconforming diesel fire pump driver determined, upon CFP's inspection, to have been properly installed, maintained and operated in accordance with the Operations and Maintenance manual furnished by CFP. IN ANY EVENT, **CFP SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

The Cummins Industrial Warranty covers the base engine for a period of time not to exceed the earlier of two (2) years or 2000 hours of operation from the date of delivery and start-up of the engine. Reference bulletin numbers 3381321 US/Canada & 3381322 Outside US/Canada. Cummins Fire Power components are warranted for a period of time not to exceed the earlier of two (2) years or 2000 hours of operation from the start-up date of the fire pump system, and the coverage includes travel time and mileage for the first year of the Limited Warranty, and repair or replacement of parts and reasonable cost of labor. The Cummins Fire Power Limited Warranty does not cover failures or damage due to abuse or neglect and including, but not limited to: shipping damage, improper storage, improper installation, unauthorized modification or lack of maintenance. Cummins Fire Power is not responsible for incidental or consequential damages.

Section 1 - Safety

1.1 Introduction

Cummin's Fire Power and Engine Manuals should be considered part of the equipment. Keep the manuals with the equipment. If the equipment is traded or sold, give the manuals to the new owner.

All personnel responsible for operation and maintenance of the equipment should read and thoroughly understand this manual.

1.2 Advisory and Cautionary Statements

Advisory and Cautionary Statements are used throughout this manual to call attention to special information, correct operating procedures and to safety precautions.

NOTE: *A general advisory statement relating to equipment operation and maintenance procedures*

IMPORTANT: *A specific advisory statement intended to prevent damage to the equipment or associated components.*

Cautionary Statements consist of two levels:



WARNING

Indicates the presence of a hazard which CAN cause severe personal injury.



CAUTION

Indicates the presence of a hazard which CAN cause personal injury, or cause equipment damage.

1.3 Safety Precautions

Warning: Read and understand all of the safety precautions and warnings before performing any repair. This manual contains the general safety precautions that must be followed to provide personal safety. When they apply, special safety precautions are included with operating procedures.

Warning: Perform a walk around inspection and alert all area personnel that the equipment will be starting before manual operation.

Warning: Do not operate faulty or damaged equipment. Ensure that all hoses, pipe connections, clamps and guards are in place and securely fastened. Electrical components should be kept in good working condition and repaired immediately by qualified personnel.

Warning: After performing maintenance, remove all tools and foreign materials, reinstall and securely fasten ALL guards, covers and protective devices.

Warning: Exposed in-running belt nips can cause severe personal injury or dismemberment. Ensure that guards are in place and securely fastened before operation.

Warning: Rotating drive shafts can lacerate, dismember or cause strangulation. Keep hands, body parts, long hair, or loose-fitting clothing clear at all times.

Warning: Never attempt to manually clean a machine while it is operating or in standby mode.

Warning: Never open ports on tanks or piping while the engine is operating. Contact with pressurized agents can cause severe personal injury.

Warning: Relieve all pressure in the air, oil, and the cooling systems before any lines, fittings, or related items are removed or disconnected.

Caution: Engine fuel is flammable when in contact with electrical spark or flame sources. Remove all sources of spark or flame from the work area.

Caution: Always use the same fastener part number (or equivalent) when replacing fasteners.

Caution: Some state and federal agencies in the USA have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Dispose of waste oil in accordance with applicable requirements.



**Fire
Power**

Section 2 - Description

2.1 Introduction

This manual contains information for the correct operation and maintenance of a Cummins Fire Pump Engine. Read and follow all safety instructions. Refer to the General Safety Instructions in [Section 1 - Safety](#).

This manual covers installation, operation, and maintenance of models CFP5E and CFP7E. Most illustrations are representations that are common between both models. Where differences occur, refer to [Section 8 - Component Parts and Assemblies](#) for specific information.

Keep this manual with the equipment. If the equipment is traded or sold, give the manual to the new owner.

Cummins Fire Power, Cummins NPower and Cummins, Inc. reserve the right to make changes at any time without obligation. If any differences are found between an engine and the information in this manual, contact the local Cummins Authorized Repair Location.


The latest technology and the highest quality components were used to produce this engine. When replacement parts are needed, we recommend using only genuine Cummins or ReCon® exchange parts.

2.2 Fire Pump Engines

Cummins complete line of fire pump engines have been approved as packaged units (engine and all accessories) by Factory Mutual Approvals and listed by Underwriter's Laboratories, Inc. and Underwriter's Laboratories of Canada.

This product meets Tier 3 emission levels. This turbo-charged engine requires charge air cooling (CAC).


No deviations are permitted without prior written approval. These engines are to be used only for fire protection applications. Refer to [Figure 2-7](#), [Figure 2-8](#), [Figure 2-1](#) and [Figure 2-2](#).

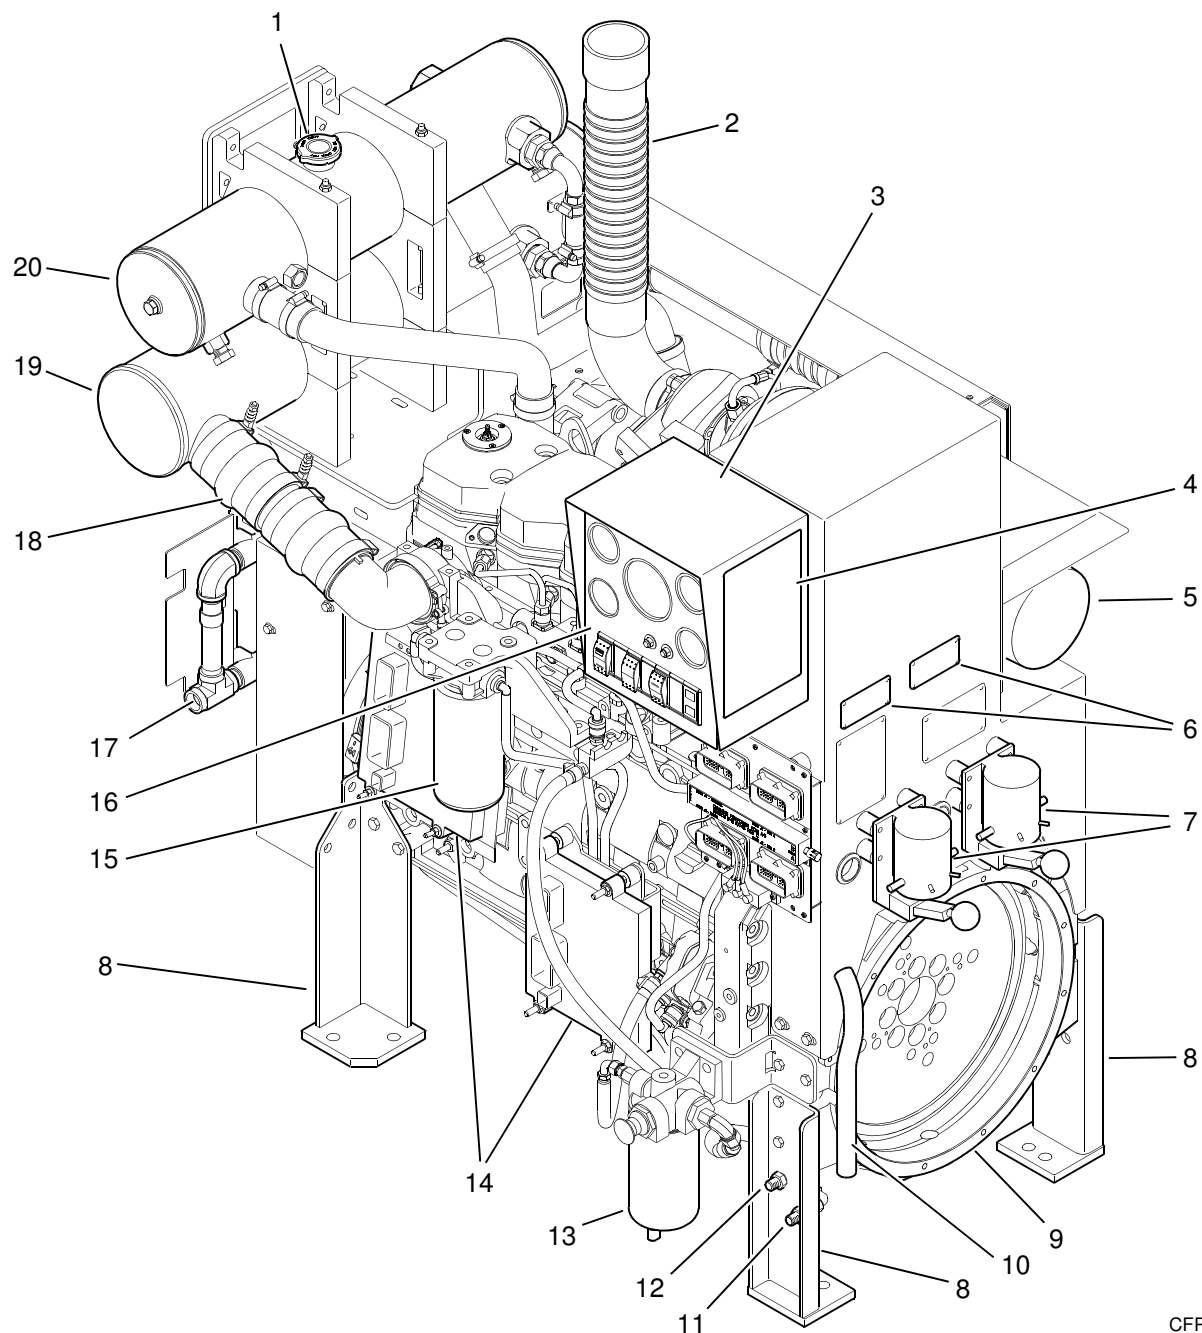

CFP-103

- | | |
|-----------------------------------|--|
| 1. Coolant Fill Cap | 11. 3/8" Fuel Return Outlet |
| 2. Exhaust Flex Connection | 12. 1/2" Fuel Inlet |
| 3. Terminal Box | 13. Fuel Pre-Filter/Water Separator |
| 4. Manual Start Instruction Decal | 14. Electronic Control Modules (ECMs) |
| 5. Air Cleaner Assembly | 15. Primary Fuel Filter |
| 6. Engine Speed Setting Plates | 16. Operator Control Panel |
| 7. Battery Starter Contactors | 17. Raw Water Inlet (optional manifold) |
| 8. Engine Supports | 18. Charge Air Cooler Hose |
| 9. Flywheel Housing | 19. Charge Air Cooler (CAC) Heat Exchanger |
| 10. Engine Breather Hose | 20. Coolant Heat Exchanger/Expansion Tank |

Figure 2-1 Engine Components - Instrument Panel Side (CFP7E Shown)

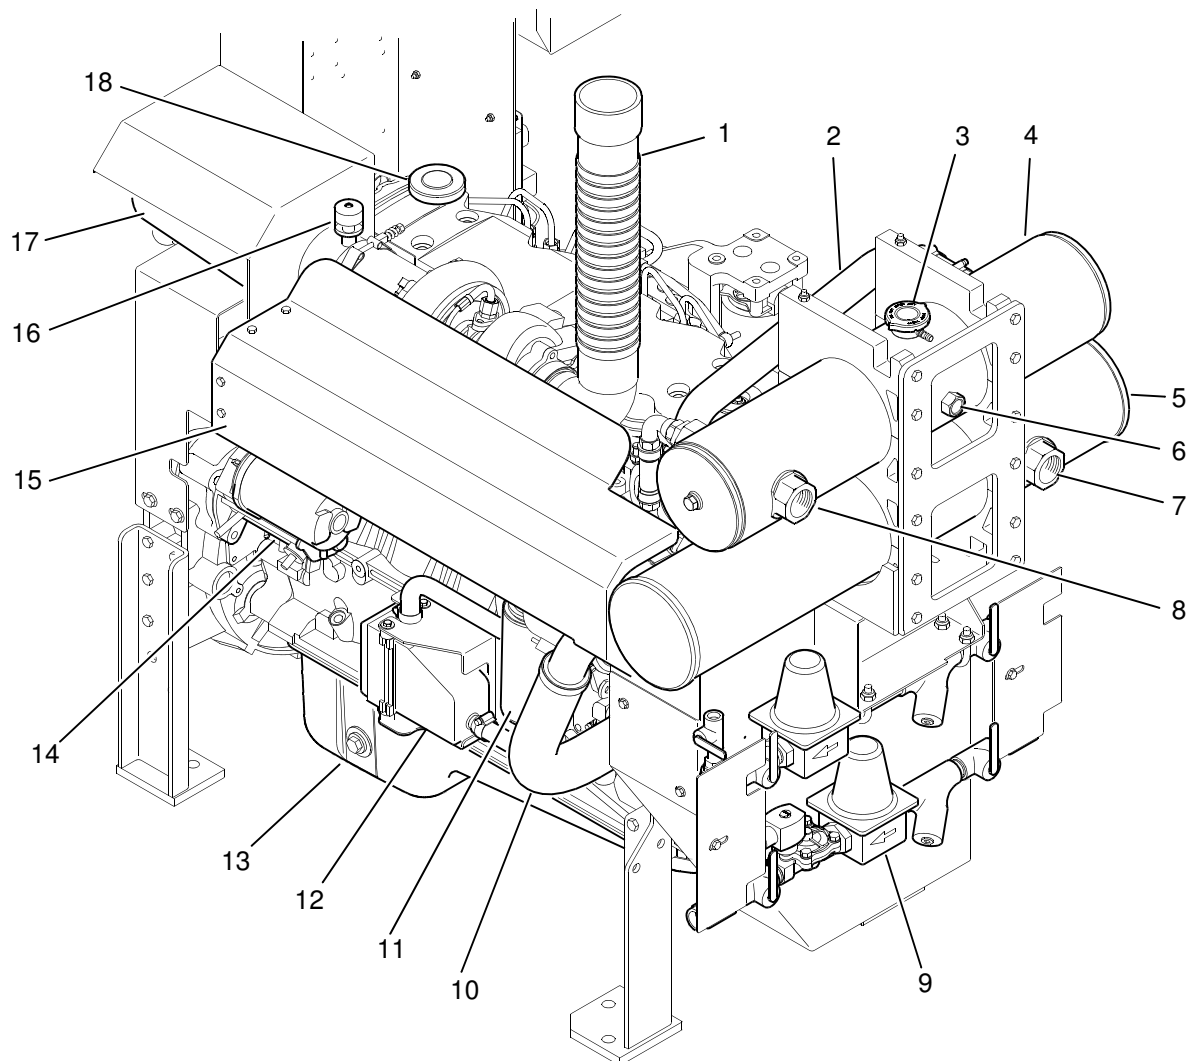

CFP-104

- | | |
|---|-----------------------------------|
| 1. Exhaust Flex Connection | 10. Lower Coolant Hose/Tube |
| 2. Upper Coolant Hose | 11. Engine Oil Filter |
| 3. Coolant Pressure/Fill Cap | 12. Engine Heater |
| 4. Coolant Heat Exchanger/Expansion Tank | 13. Engine Oil Pan (drain below) |
| 5. Charge Air Cooler (CAC) Heat Exchanger | 14. Starter Motor |
| 6. Coolant Level Sight Glass | 15. Manifold Heat Shield |
| 7. Raw Water Inlet (standard) | 16. Air Cleaner Service Indicator |
| 8. Raw Water Outlet | 17. Air Cleaner Assembly |
| 9. Raw Water Manifold (optional) | 18. Engine Oil Fill Port |

Figure 2-2 Engine Components - Turbocharger Side (CFP7E Shown)

2.3 Operator Control Panel

The operator control panel is mounted on the right side of the engine at the flywheel end. Refer to [Section 4 - Controls](#) for additional information.


The operator control panel contains controls for starting, monitoring engine performance and controlling fire pump engine operation.

2.3.1 Overspeed Switches

Each engine is equipped with an electronic overspeed module which activates the fuel pump solenoid valve and ECM ignition to shut off the engine when the RPM exceeds a preset limit. The overspeed switch senses engine speed during the start cycle and stops the starting motor cranking cycle. Refer to [Figure 2-3](#).

2.3.2 Operating Speed

All Cummins fire pump engines are shipped from the factory adjusted to the requested operating speed (RPM). Final operating speed adjustment must be made during the in-service inspection to obtain the required operating speed specified by the pump manufacturer.

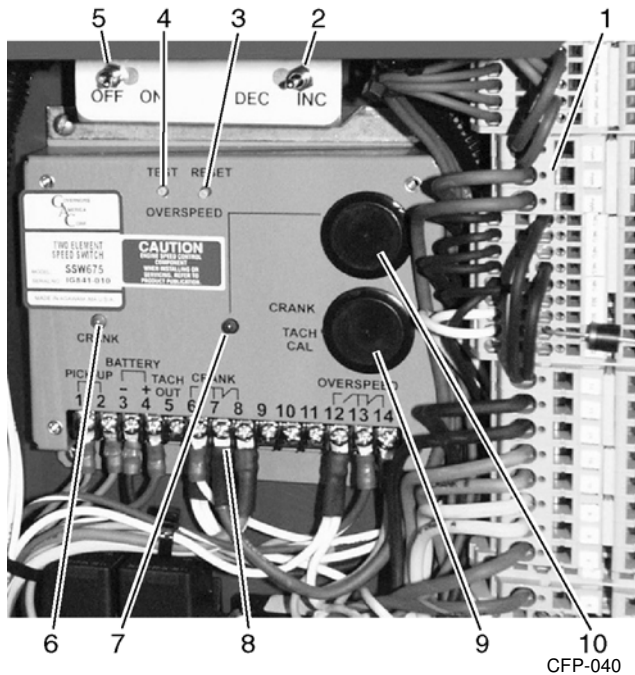

1. Spring Clamp Terminal Blocks
2. Speed Increase/Decrease Toggle Switch
3. RESET Button
4. TEST Button
5. Diagnostic ON/OFF Toggle Switch
6. CRANK Termination or RUN Signal Indicator LED (Factory Use Only)
7. Overspeed Indicator LED
8. Pre-wired Terminals
9. Crank Terminate Potentiometer Cover
10. Overspeed Potentiometer Cover

Figure 2-3 Engine Overspeed Control Module

2.4 Fire Pump Controller

Fire pump controller is not supplied by Cummins Fire Power, or Cummins, Inc. The fire pump controller starts the engine automatically when a remote fire demand signal is initiated and automatically shuts


down the engine when the fire demand signal is discontinued.

The engine may be started locally in the Manual Mode and shut down using the operator control panel Stop Switch or by returning the switch back to automatic mode.

NOTE: Pressure recorders are available to provide a permanent record of water pressure fluctuations and engine starts. Sequential starting is available for multiple-pump installations to prevent all pumps from starting simultaneously.


2.5 Air Intake System

The Air Intake System supplies combustion air to the fire pump engine cylinders. The air filter prevents particulate matter from entering the air intake. Combustion air drawn into the system by the turbocharger is directed through the charge air cooler (CAC) heat exchanger for cooling before entering the intake manifold where the charge air is mixed with fuel. Refer to [Figure 2-4](#) and [Figure 2-5](#).

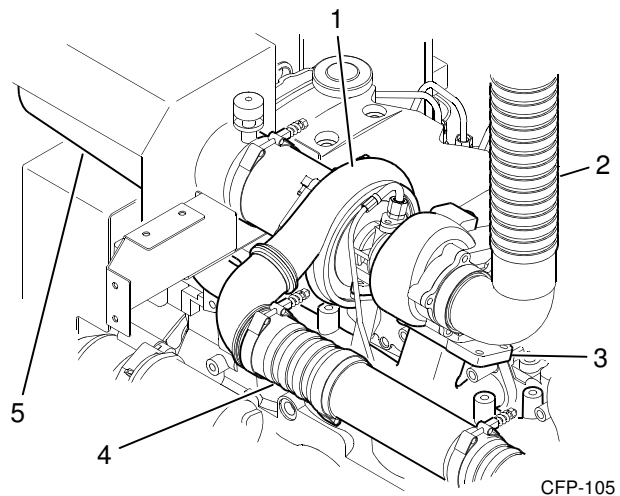

1. Turbocharger
2. Exhaust Flex Connection
3. Exhaust Manifold
4. Turbo Connection to Charge Air Cooler
5. Air Cleaner Assembly (intake)

Figure 2-4 Turbocharger and Exhaust Manifold

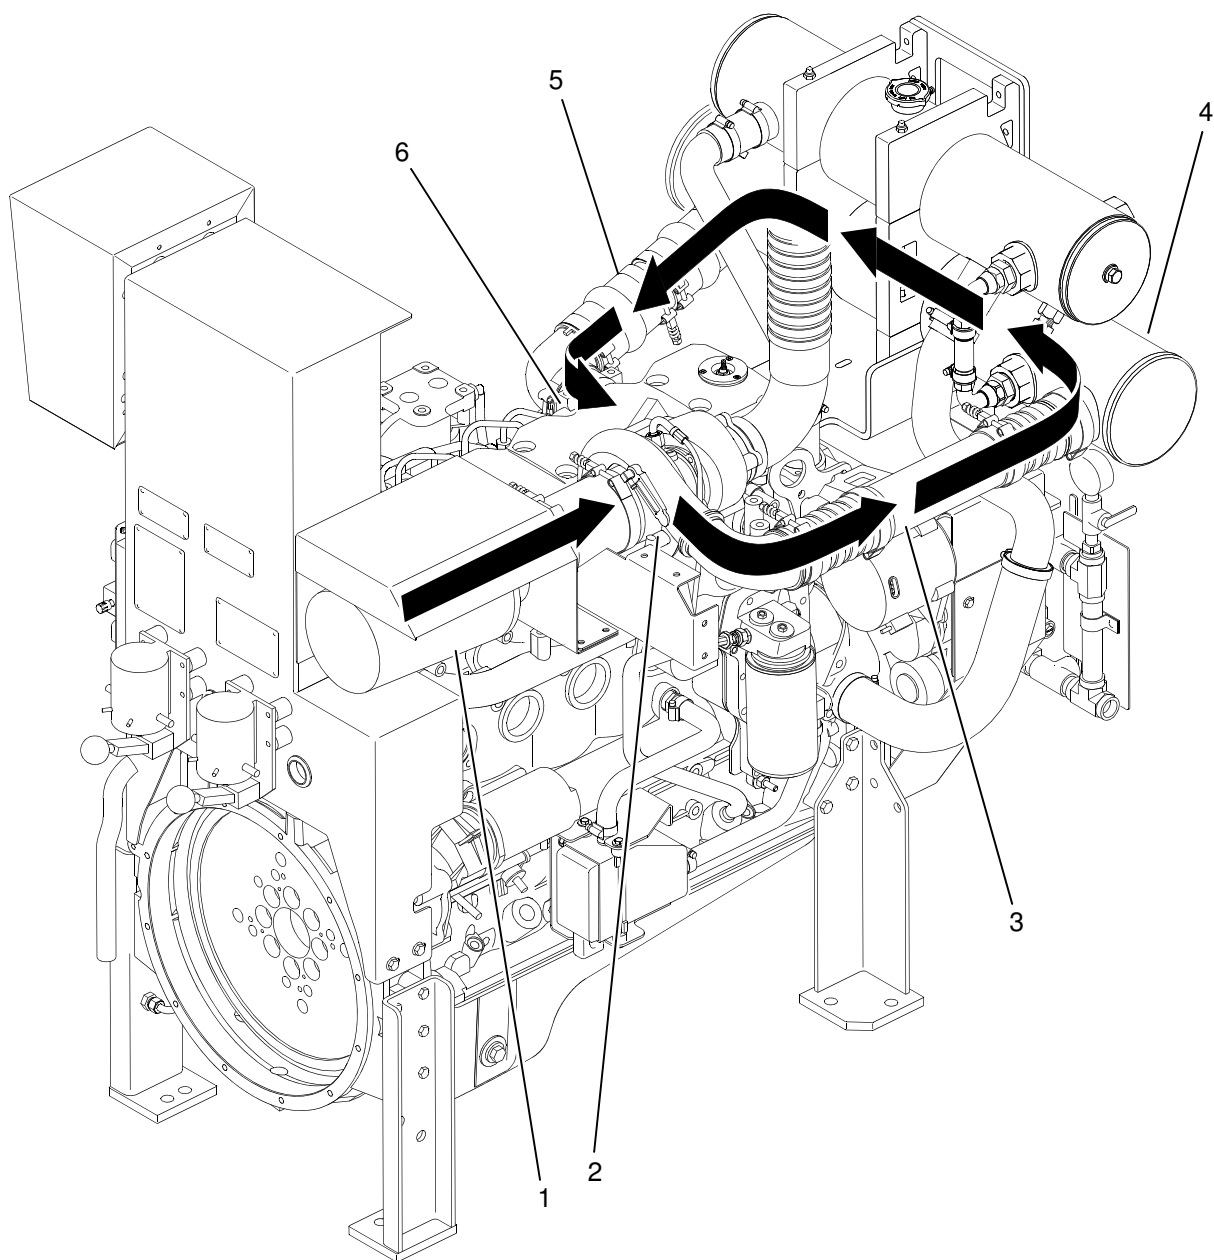

CFP-106


- | | |
|---------------------------------------|---|
| 1. Air Cleaner Assembly (intake) | 4. Charge Air Cooler (CAC) Heat Exchanger |
| 2. Turbocharger | 5. Charge Air Cooler Outlet Hose/Pipe |
| 3. Air Hose/Pipe To Charge Air Cooler | 6. Combustion Air Intake Manifold |

Figure 2-5 Engine Air Intake and Charge Air Cooling Flow Diagram (CFP7E Shown)

2.6 Raw Water Cooling System


The fire pump raw water supply provides cooling water for the engine heat exchanger system. A water-to-air Charge Air Cooler (CAC) Heat Exchanger,

reduces the combustion air temperature at the intake manifold. A low charge air temperature (requirement of 60° C (140° F) (with 25° C (77° F) ambient) meets emission levels, while improving engine performance and efficiency.

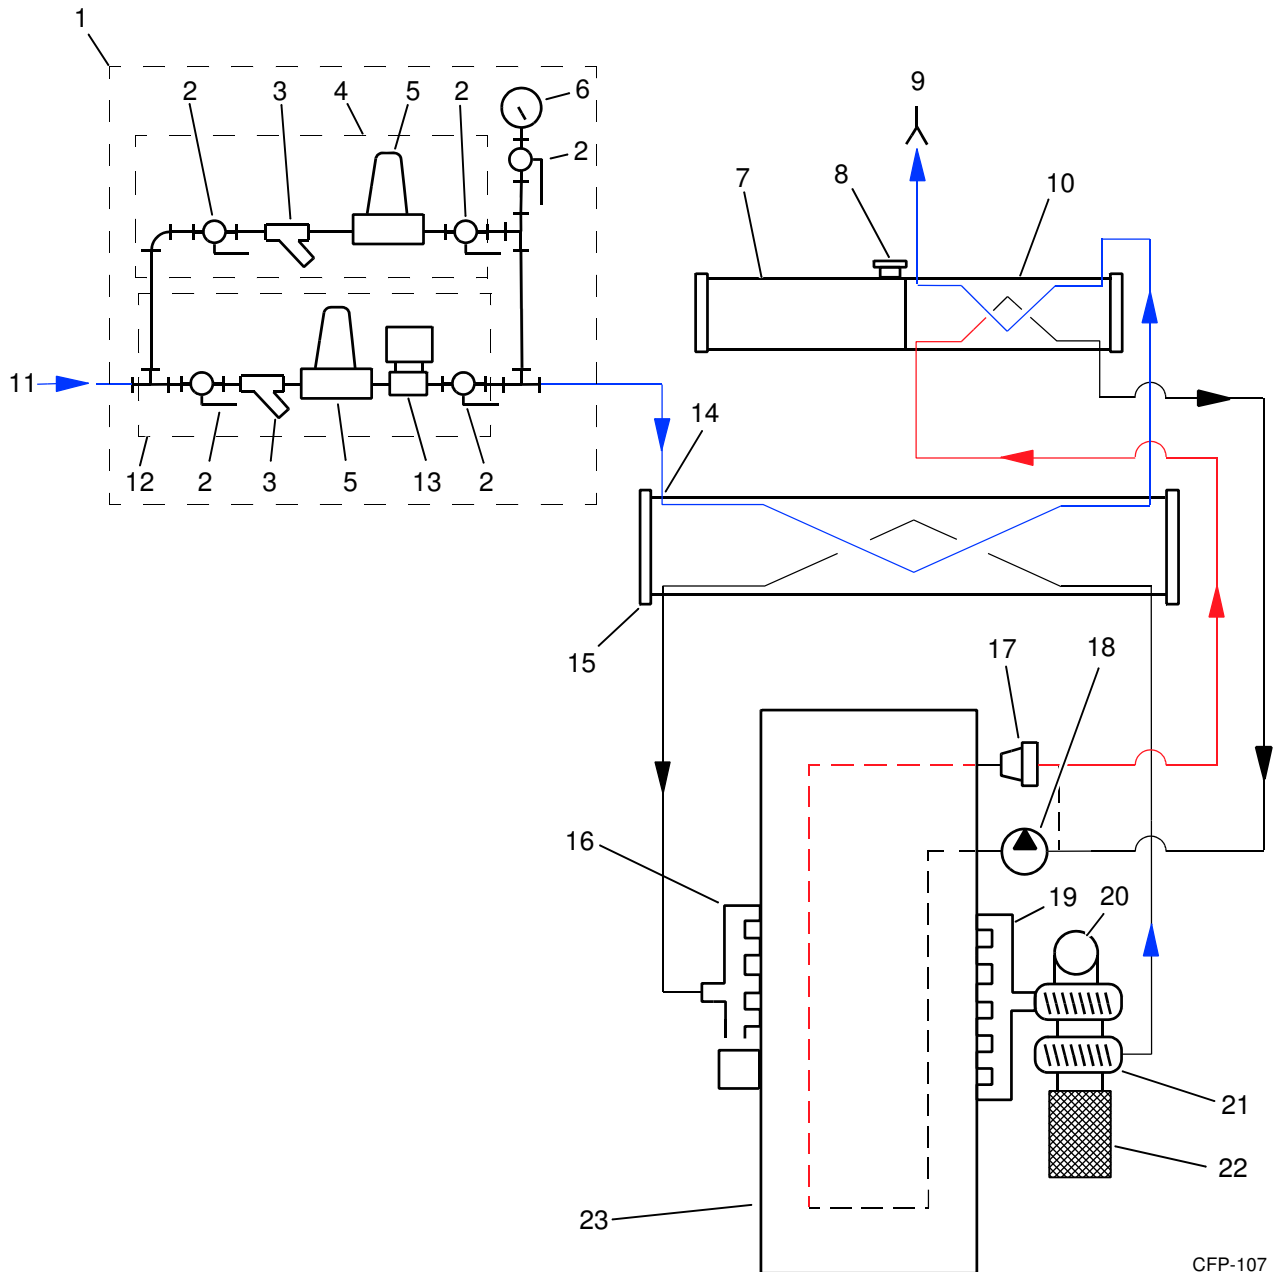

- | | |
|--|---|
| 1. Raw Water Manifold (optional) | 13. Raw Water Solenoid Valve |
| 2. Manual Shut-off Valve | 14. Raw Water Supply Connection (standard) |
| 3. Raw Water Wye Strainer | 15. Charge Air Cooler (CAC) /Heat Exchanger |
| 4. Raw Water - Bypass Loop | 16. Combustion Air Intake Manifold |
| 5. Raw Water Pressure Regulator | 17. 180° F. Thermostat |
| 6. Raw Water Pressure Gauge | 18. Coolant Pump |
| 7. Coolant Expansion Tank | 19. Exhaust Manifold |
| 8. Coolant Pressure/Fill Cap | 20. Exhaust Flex Connection |
| 9. Raw Water Return Connection | 21. Turbocharger |
| 10. Coolant Heat Exchanger | 22. Air Filter |
| 11. Raw Water Supply Connection (optional) | 23. Engine Block |
| 12. Raw Water - Normal Loop | |

Figure 2-6 Engine Cooling System Flow Diagram

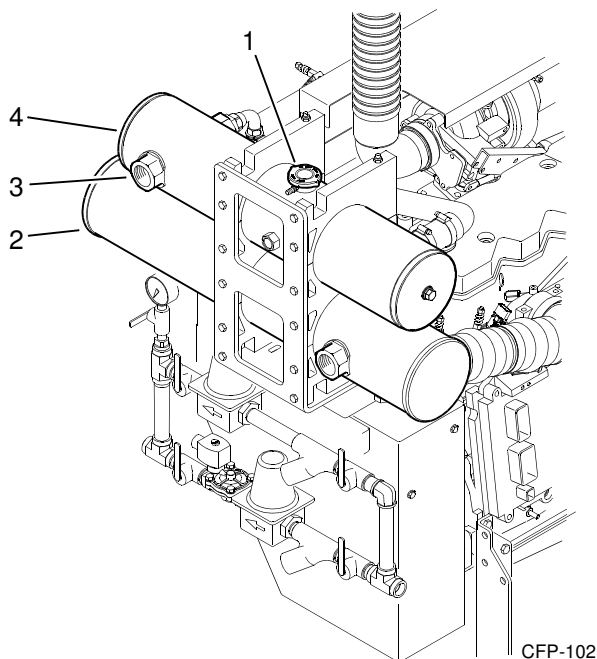

1. Coolant Fill Cap
2. Charge Air Cooler (CAC) Heat Exchanger
3. Raw Water Discharge Connection
4. Coolant Heat Exchanger/Expansion Tank


Figure 2-7 Heat Exchanger Tanks

Water entering the cooling system through the raw water inlet, first circulates through the charge air cooler heat exchanger, cooling the compressed air from the turbocharger outlet ducting. The cooled combustion air exits the CAC outlet duct to the engine air intake manifold. Refer to [Figure 2-7](#), [Figure 2-8](#) and [Figure 2-5](#).

NOTE: The raw water supply must be immediately available when the engine is started.

The raw water from the CAC heat exchanger then passes through the Engine Coolant Heat Exchanger. The raw water exits the Coolant Heat Exchanger through a 1" NPT discharge connection.

IMPORTANT: If the piping will be supplied by the customer, provide raw water supply piping and components equivalent to components supplied by Cummins Fire Power and as shown in Assembly Diagram, Raw Water Piping. Refer to National Fire Protection Association NFPA20 Chapter 11 for US installation requirements. When choosing components for the raw water supply and bypass, ensure that the internal cross sectional area of the component is at least as large as the recommended pipe size.

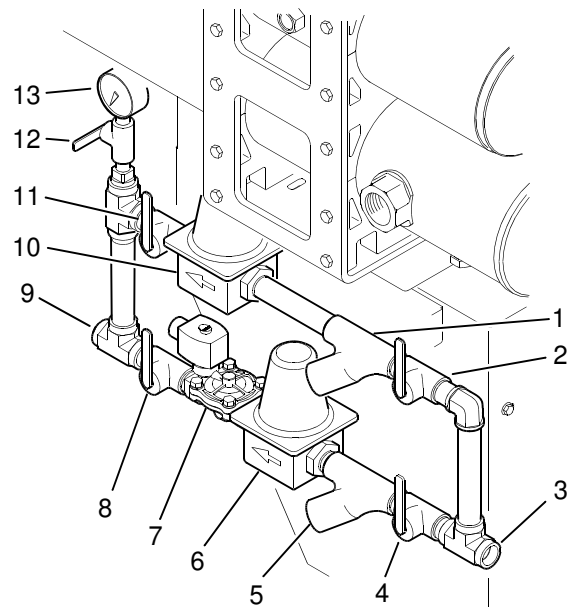

CFP-101

1. Bypass Water Wye Strainer
2. Bypass Water Inlet Valve
3. 3/4" NPT Raw Water Inlet
4. Normal Water Inlet Valve
5. Normal Water Wye Strainer
6. Normal Water Pressure Regulator
7. Normal Water Solenoid Valve
8. Normal Water Outlet Valve
9. 3/4" NPT Outlet To Heat Exchanger
10. Bypass Water Pressure Regulator
11. Bypass Water Outlet Valve
12. Pressure Gauge Isolation Valve
13. Water Supply Pressure Gauge

Figure 2-8 Raw Water Manifold (optional)

When the raw water piping is installed, adjust both pressure regulator set points (optional raw water manifold) before operating the pump.

1. The upper line is the bypass line. The bypass line outlet valve should be closed.
2. The lower line with the solenoid valve is the normal inlet line. The pressure gauge isolation valve must be open. The normal water inlet line valve should be open.

IMPORTANT: Monitor the oil pressure and coolant temperature gauges frequently. Refer to Lubricating Oil System Specifications or Cooling System Specifications in the Engine Data Sheets for recommended operating pressures and temperatures. Shut off the engine if any pressure or temperature does not meet the specifications.


Maximum engine coolant temperature should not exceed 107° C (225° F). The coolant expansion pressure/fill cap must meet the minimum pressure of 10 kPa (15 psi).

The engine coolant system contains a mixture of at least 50 percent antifreeze and 50 percent water. The coolant level should be maintained so it is visible in the coolant level sight gauge.



CAUTION

Continuous operation with low coolant temperature (below 70° C (158° F)) or high coolant temperature (above 107° C (225° F)) can damage the engine. Verify raw water pressure and flow.

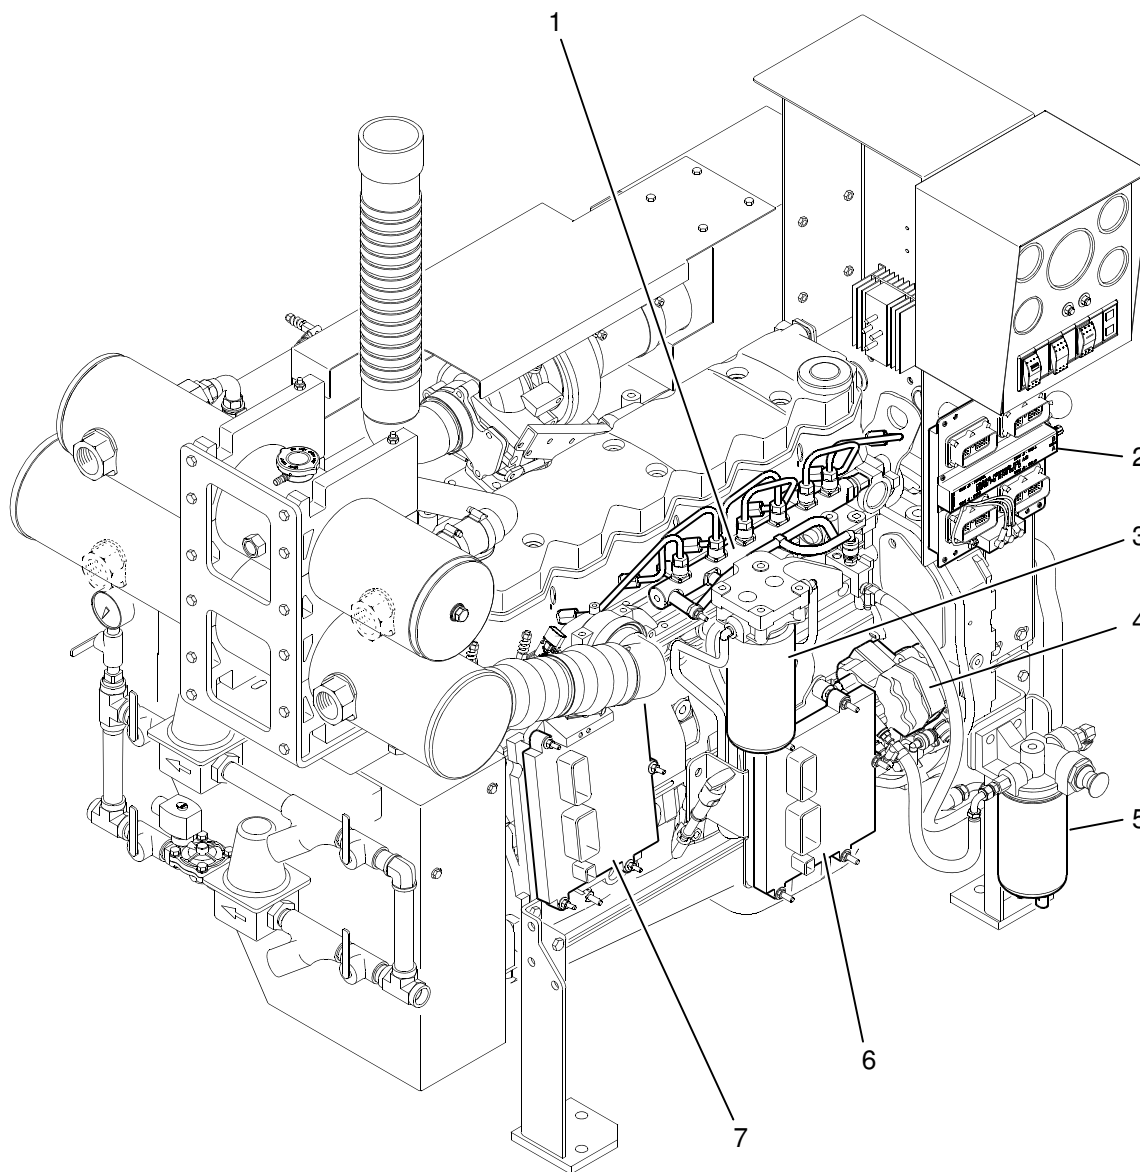

CFP-108

- | | |
|----------------------------------|------------------------------------|
| 1. Fuel Rail | 5. Fuel Pre-Filter/Water Separator |
| 2. ECM Selector Panel and Switch | 6. ECM Module B |
| 3. Primary Fuel Filter | 7. ECM Module A |
| 4. High Pressure Fuel Pump | |

Figure 2-9 Fuel System Components - High Pressure Common Rail (HPCR - CFP7E Shown)

2.6.1 Fuel Supply and Drain Location

The fuel supply and return connections are located on the rear engine support below the operator's control panel. Refer to [Figure 2-9](#).

2.7 High Pressure Common Rail (HPCR) Fuel System

The fire pump engine is equipped with an electronic fuel system that delivers precise fuel quantities with precise injection timing at high injection pressures. The system consists of a high pressure pump (up to 1600 BAR) that supplies a common fuel rail and accumulator manifold feeding 6 high-pressure electronic controlled injectors to provide precise fuel metering and timing. The system is controlled by the Engine Control module CM850 for fueling and timing based on temperature, altitude, boost pressure, and throttle position. Refer to [Figure 2-9](#).

With the High Pressure Common Rail (HPCR) fuel system, fuel priming is required for conditions such


as: initial start-up, running out of fuel and maintenance of fuel system components (i.e., filter change).

2.8 Engine Oil System

The Engine Oil System lubricates moving internal engine parts (pistons, piston arms, valves, cam shafts, drive shafts and bearings). The oil pump circulates oil from the oil pan, through the oil filter and into engine areas where friction may develop. Refer to Section D of the Cummins Operation and Maintenance Manual QSB4.5 and QSB6.7 Engine for additional information.


Typically engine oil has been added during manufacture and testing procedures, however, shipping restrictions can affect whether the oil is maintained in the engine or drained for shipment.

Check the oil level at the dipstick. Add oil as necessary to bring the oil level to the H (high) mark on the dipstick. Refer to [Figure 2-11](#).

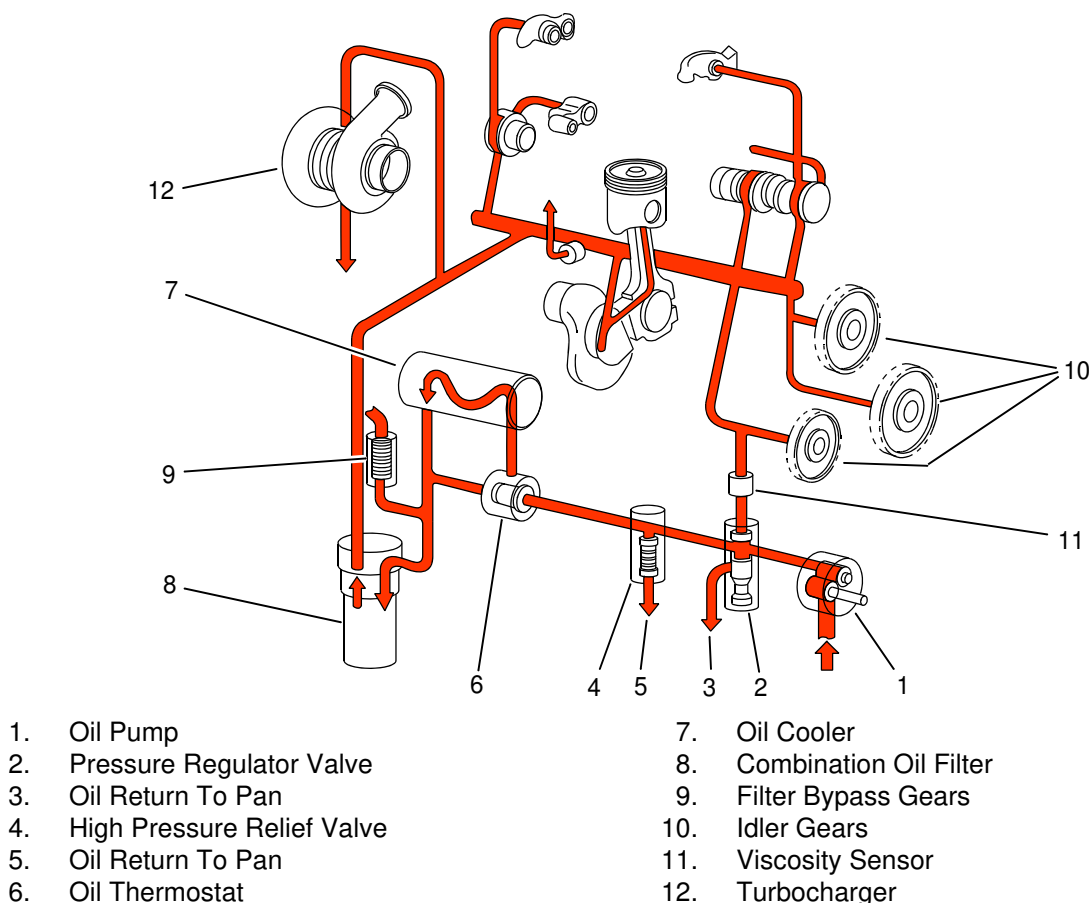


CFP-010

Figure 2-10 Flow Diagram - Engine Lubricating Oil System (typical)

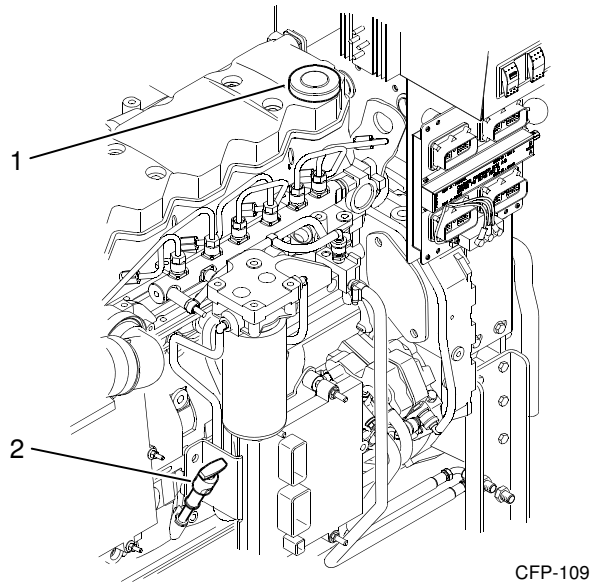


1. Oil Fill Port
2. Oil Level Dipstick

Figure 2-11 Oil Level Dipstick and Oil Fill Port

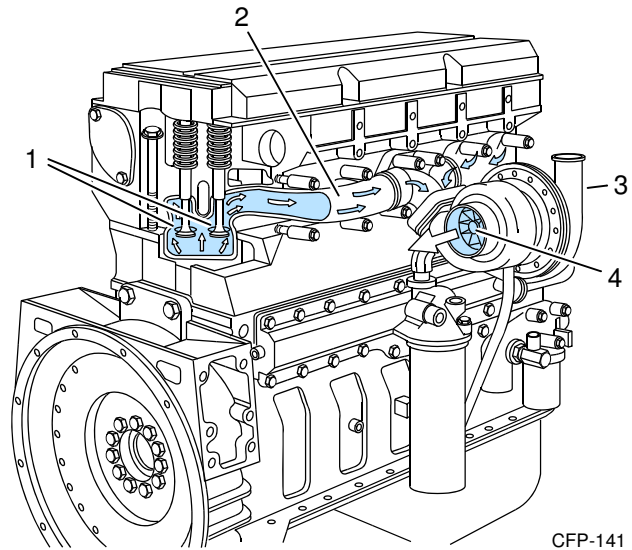

1. Exhaust Valve Ports
2. Engine Exhaust Manifold
3. Combustion Air To Charge Air Cooler
4. Turbocharger Turbine

Figure 2-12 Flow Diagram - Exhaust System (typical)

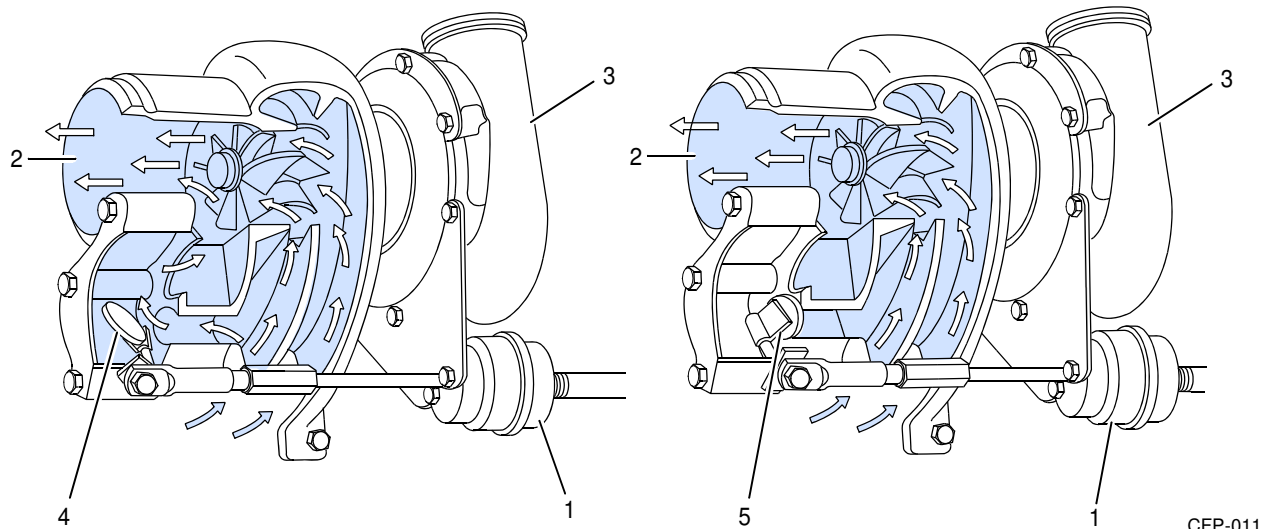

1. Wastegate Actuator Cylinder
2. Exhaust Flow to Flex Pipe
3. Combustion Air To Charge Air Cooler

4. Wastegate OPEN
5. Wastegate CLOSED

Figure 2-13 Turbocharger Exhaust Flow Diagram (typical)

2.9 Exhaust System

The exhaust system removes engine exhaust from the cylinders after the combustion process. The exhaust discharges from the exhaust manifold,

passes through (drives) the turbocharger, and exits through the exhaust flex-pipe. Refer to [Figure 2-12](#), and [Figure 2-13](#).



Section 3 - Installation

3.1 Receiving and Handling Information

Cummins Fire Power Pump Engines are pre-assembled and tested before shipment. Parts not shipped attached to the engine are sometimes shipped individually. The equipment was thoroughly inspected and prepared for shipping before it was turned over to the carrier.

1. Carefully remove the components from the shipping container. Remove crating, shipping tape, braces and tie-downs.
2. Inspect the equipment for damage that may have occurred in shipping.
3. Check each item carefully against the shipping manifest or bill of lading.

3.1.1 Damage During Shipping

File a *Claim For Damages* with the carrier, if your equipment was received damaged or not received at all. Notify Cummins Fire Power, or Cummins Inc. as soon as possible to determine if a replacement item or repair is required.

3.1.2 Claim Filing Procedure

The following information is required if a claim is filed:

1. A *Claim Statement* describing the damaged or lost merchandise and how the claim was determined.
2. A *Bill of Lading* or *Freight Bill* is required as proof of who transported the freight.
3. A noted *Freight Bill* or *Inspection Report Copy*, as evidence of loss or damage.
4. *Invoice Copy* or other documents establishing the cost to you of the freight lost or damaged, or an *Invoice for Repairs*.

3.2 Site Preparation

This section provides instructions for the initial installation, adjustment, and testing of the Cummins Fire Pump Engine. Appropriate portions of this section

should be used when returning the engine to operation after overhaul or major maintenance.

The site should be clean and relatively level. Clear the proposed equipment area of overhanging obstructions and obstacles protruding from the floor.

Raw water piping should be installed by trained technicians, familiar with local, state and federal codes and regulations, per the equipment layouts supplied by Cummins Fire Power, or Cummins Inc.

3.2.1 Site Considerations

Refer to the general fire pump and engine layout drawings for installation dimensions supplied with this manual.



CAUTION

Avoid installation in a dusty or dirty environment. Provide adequate physical protection from other physical damage as may be present in the specific location.


Refer to National Fire Protection Association NFPA 20, Chapter 11 for US installation and applicable local code requirements.

1. Lay out a designated center line on the site floor. Find the center line of the engine drive shaft. Lay out a center line on the cross frame members.

IMPORTANT: *Ensure that the lifting device or forklift is capable of handling the package weight and size requirements.*

2. If the engine is lifted separately, use the lifting hooks (supplied with the engine) and a spreader bar to position the engine. Refer to [Figure 3-1](#).

If the engine is assembled with the drive line, pump and mounting base, use the lifting points provided on the mounting base or lift the entire skid using an approved fork lift. Refer to the layout drawings supplied with this manual for lifting points.

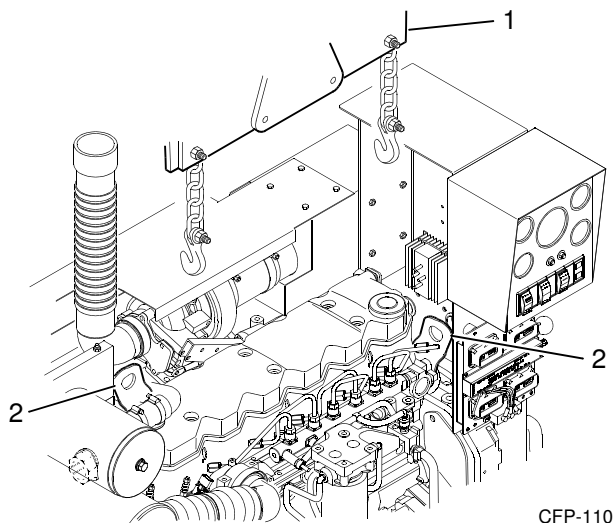


1. Lifting Spreader Bar
2. Lifting Lug

Figure 3-1 Engine Lifting lugs (Engine Only)

CAUTION

Ensure that the lifting device is capable of safely lifting the weight of the engine or the combined weight of the assembled pump base, drive line and pump. Refer to the Bill of Lading for combined shipping weights.

3. Position the engine as required for the interface with the fire pump, water piping, fuel piping, exhaust and air system connections.
4. Position the engine center line to align the engine drive shaft with the fire pump drive. Ensure that the engine and pump are correctly aligned.
 - a. Ensure engine position is centered on frame side to side within $\pm .03$ inch, by measuring outside of frame side to engine support leg mounting pad. (Compare two front engine supports and two back engine supports).
 - b. Align engine center line to pump center line within $\pm .03$ inch. Refer to [Figure 3-2](#).
 - c. The pump center line to the engine crankshaft center line (in vertical plane) is to be .25 inch: +0, -.25 inch offset.
 - d. Drive shaft mounting flanges must be parallel.

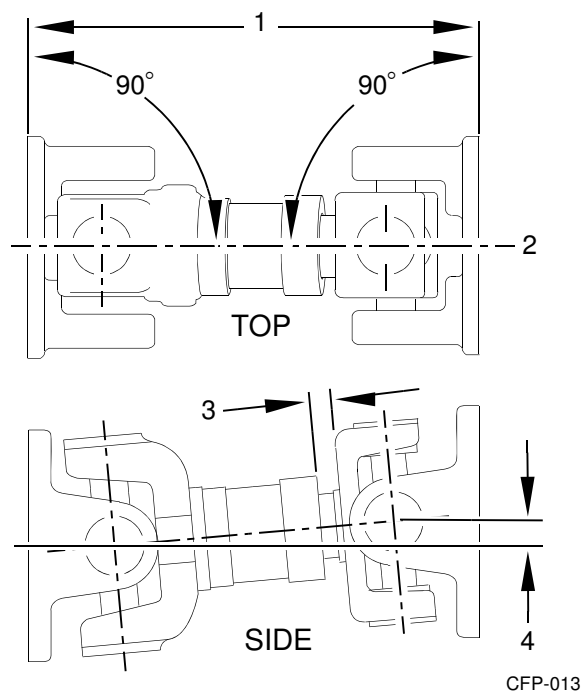

1. Planes Must Be Parallel
2. Align Both Mounting Center lines to $\pm .03$ "
3. Distance to Equal Half of Total Travel
4. .25": +0, -.25" Offset

Figure 3-2 Drive Coupling Alignment

5. Check that the fire pump is properly installed per the pump manufacturer's specifications.
6. Connect the exhaust piping to a safe location, away from building air intake sources (air conditioners, windows, fresh air intake pipes, etc.).

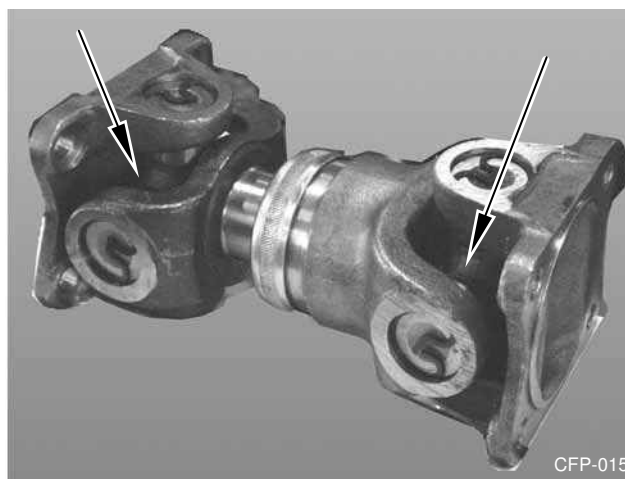


Figure 3-3 Drive Coupling Grease Fittings


7. Check that the alternator/coolant pump drive belt is properly installed.
8. Check that all hoses and tubes are properly installed and all clamps secure.
9. Lubricate grease fittings on the drive shaft universal joint. Refer to [Figure 3-3](#).
 - a. Wipe the grease fittings and grease gun nozzle with a clean cloth.
 - b. Add grease to the universal joint grease fittings.
 - c. Wipe excess grease from the grease fittings.

NOTE: Cummins Fire Power, or Cummins Inc. recommends using a good quality semi-synthetic, molybdenum-fortified NLGI #2 lithium complex grease which protects from -54° to 400° F such as Valvoline Durablend®.

NOTE: Some lubrication loss may occur during transport and storage. It is recommended that the drive shaft be re-lubricated upon installation.

3.3 Fuel Supply Installation

1. Install an elevated no. 2 diesel fuel tank or other fuel supply arrangement which is compatible with ASTM no. 2 diesel fuel specifications.

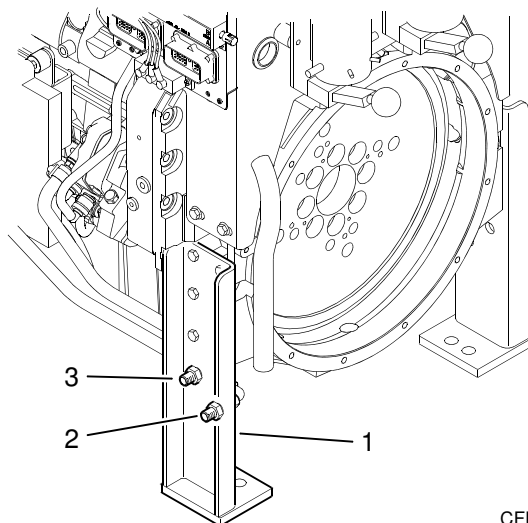

CFP-111

1. Engine Pedestal Leg
2. 3/8" NPT Fuel Return Connection
3. 1/2" NPT Fuel Supply Connection

Figure 3-4 Fuel Line Connections

NOTE: The fuel supply line at the fuel tank must be higher than the fuel intake port on the engine fuel pre-filter/water separator. Ensure that the fuel system is installed in a safe and effective manner.

2. Size the fuel tank for the maximum expected full-load engine operation period with the initial fuel level at the minimum level for refueling.
3. Install a 3/8" NPT (minimum) fuel return line. Route this line to the bottom of the fuel tank in order to minimize the return head. Refer to [Figure 3-4](#).
4. Install a 1/2" NPT (minimum) fuel supply line to the fire pump engine.

NOTE: DO NOT use copper or galvanized pipe for the fuel return or supply lines.

3.3.1 Fuel System Preparation

The fire pump engine fuel system has been primed during manufacturing and test procedures. The engine is equipped with an mechanical lift pump which primes the fuel pre-filter/water separator, primary fuel filter, and high pressure fuel pump when the engine is cranked. Refer to [Figure 3-5](#).


A Water Separator must be integrated into the fuel delivery system of the fire pump engine. A Fuel Filter/Water Separator may be installed directly on the unit in the primary fuel filter location, or a separate Fuel Pre-Filter/Water Separator may be installed near the fire pump engine assembly.

1. Ensure that the filter/water separator is free of water by opening the fuel filter/water separator drain at the bottom of the separator. Refer to [6.3.5 Fuel System Inspections](#) for additional information.
2. Drain the fuel into a container until no water is present. Dispose of the contaminated fuel in accordance with local environmental regulations.



CAUTION

Due to the precise tolerances of diesel injection systems, it is extremely important that the fuel be kept clean and free of dirt or water. Dirt or water in the system can cause severe damage to both the fuel pump and the fuel injectors.

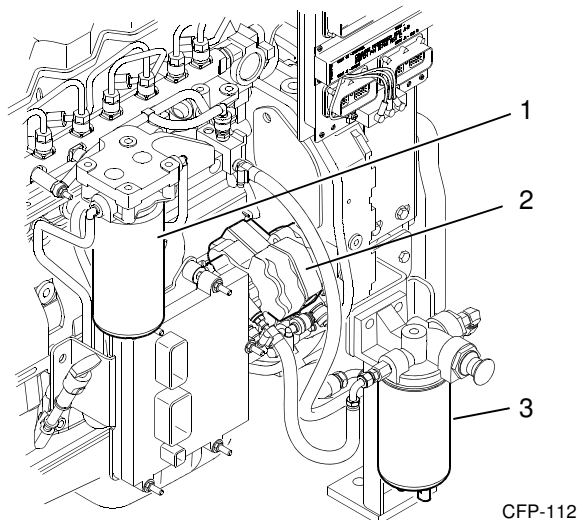

1. Primary Fuel Filter
2. High Pressure Fuel Pump
3. Fuel Pre-Filter/Water Separator

Figure 3-5 Engine Fuel System Components

3.3.2 Fuel Recommendations

! WARNING

Do not mix gasoline, alcohol, gasohol, ethanol or methanol with diesel fuel. This mixture will cause severe engine damage or explosion.

! CAUTION

*Use **ONLY** no. 2 diesel (ASTM no. 2D) fuel. Any adjustment to compensate for reduced performance with a fuel system using alternate fuel is not warrantable.*

3.4 Raw Water Supply Installation

Raw water circulated through the system cools the charge air cooler (CAC) heat exchanger and the engine coolant heat exchanger. Raw water supplied from the fire pump water source prior to the pump discharge flange, is forced through the cooling system to the various heat exchangers. Refer to [Figure 3-6](#) and [Figure 3-7](#).

IMPORTANT: *The raw water supply must be immediately available when the engine is started. Ensure that the supply line valves are in the OPEN position.*


! CAUTION

When the raw water piping is installed, adjust pressure regulator set points before operating the pump. Damage to the heat exchanger may occur from improperly regulated raw water supply pressure.

3.4.1 Install Raw Water Piping

NOTE: *The velocity of the raw water should be as great as possible without exceeding the maximum allowable pressure shown in the appropriate engine data sheet.*

1. Provide 1" NPT raw water discharge line at the outlet of the engine coolant heat exchanger. Refer to [Figure 3-7](#).

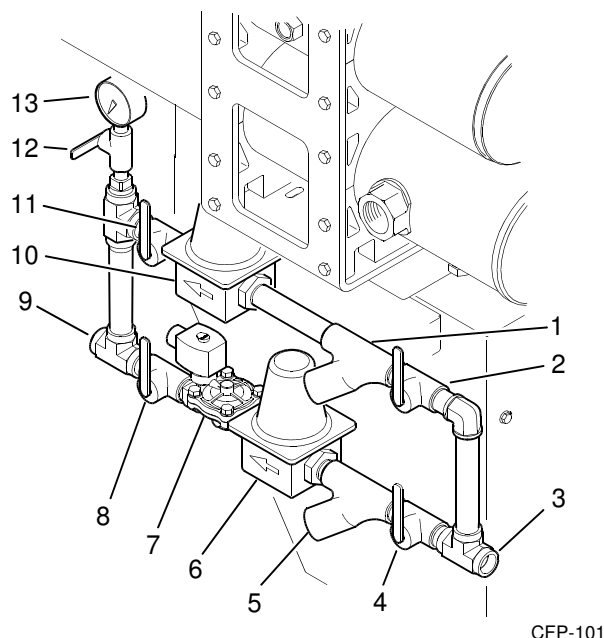

1. Bypass Water Wye Strainer
2. Bypass Water Inlet Valve
3. 3/4" NPT Raw Water Inlet
4. Normal Water Inlet Valve
5. Normal Water Wye Strainer
6. Normal Water Pressure Regulator
7. Normal Water Solenoid Valve
8. Normal Water Outlet Valve
9. 3/4" NPT Outlet To Heat Exchanger
10. Bypass Water Pressure Regulator
11. Bypass Water Outlet Valve
12. Pressure Gauge Isolation Valve
13. Water Supply Pressure Gauge

Figure 3-6 Raw Water Manifold (optional)

NOTE: Raw water outlet piping from the heat exchanger should be one pipe size larger than the supply piping.

2. Provide a raw water supply line to the engine assembly.
 - a. 3/4" NPT connection when using optional Raw Water Manifold
 - b. 1" NPT connection when using standard connection at Charge Air Cooler (CAC) Heat Exchanger

NOTE: The water supply set points have been set by the manufacturer during engine assembly and testing.

3. Check the pressure regulator setting with water flowing through the heat exchanger. If supplied as an option from CFP, both water pressure regulators have been set at 207 kPa (30 psig) or slightly less water pressure, during manufacture and testing. The raw water should be adjusted based on water flow rather than water pressure. The flow is dependent on the raw water temperature. Refer to the engine curve and data sheets for details.

4. Use a 5 gallon container to measure and time the flow from discharge pipe.

Flow rate = time to fill container/container size.

Example: Time to fill 5 gallon container = 15 seconds.


Divide 15 by 5 = 3 (seconds per gallon).

Divide 60 seconds by 3 = 20 gallons per minute.

5. Adjust both pressure regulators to a pressure that will provide a flow rate at or above the specifications.

The minimum raw water flow rate is provided on the Engine Data Sheets found in [Section 8 - Component Parts and Assemblies](#).

IMPORTANT: The manual raw water valves for the Automatic Loop should remain OPEN at ALL times. The manual raw water valves for the Bypass Loop should be CLOSED during Automatic (pump controller) operation.

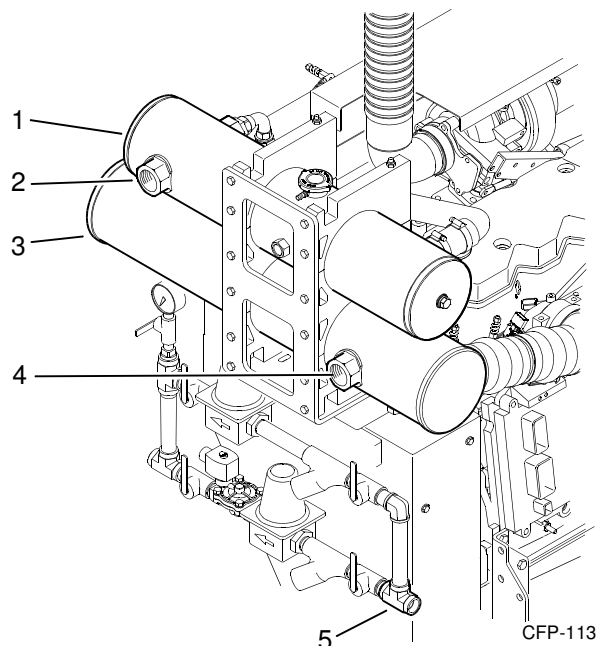

1. Coolant Heat Exchanger/ Expansion Tank
2. 1" NPT Raw Water Discharge
3. Charge Air Cooler (CAC) Heat Exchanger
4. 3/4" NPT Raw Water Inlet (optional manifold)
5. 1" NPT Raw Water Inlet (standard)

Figure 3-7 Cooling Loop Heat Exchangers

NOTE: When running, the engine should stabilize between 180° F and 185° F. The flow rate may need to be increased if the temperature stabilizes above this range. Do not exceed 60 psi.

NOTE: Excess cold (40° F to 75° F) raw water flow can cause condensation inside the charge air cooler.

IMPORTANT: Continuous operation with low coolant temperature (below 70° C (158° F)) or high coolant temperature (above 107° C (225° F)) can damage the engine.

3.5 Battery Selection

The minimum recommended reserve capacity (SAE RC) and cold cranking ampere (SAE CCA) values for a particular engine can be found on the engine curve and data sheets. RC and CCA definitions can be found in SAE standard J537. All battery information is for lead/acid batteries.

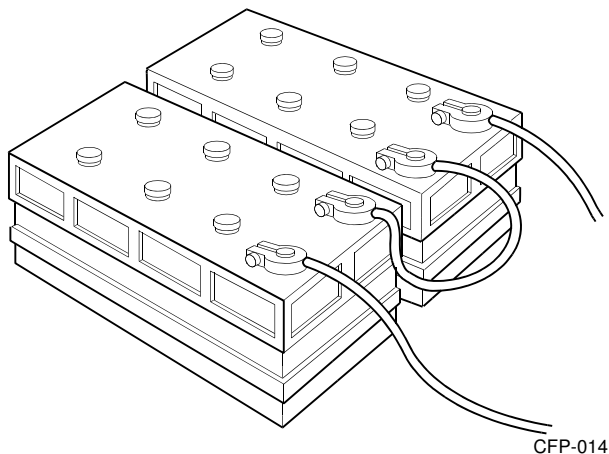


Figure 3-8 Series Battery Connection - 24 VDC (optional)

3.5.1 Battery Requirements

One set of batteries must be supplied for the standard 12VDC operating voltage. Two redundant sets of batteries must be supplied for the optional 24 VDC operating voltage. Refer to National Fire Protection Association, NFPA 20, Chapter 11 and [Section 1 - Safety](#) of this manual for additional battery installation information.

IMPORTANT: Batteries must meet the requirement listed in Electrical System Specifications. Batteries may be supplied by Cummins Fire Power, or Cummins Inc. as an option or may be supplied by the customer.



WARNING

Battery electrolyte (sulfuric acid) is highly caustic and can burn clothing, and skin. Wear impervious neoprene gloves, and safety goggles or full face shield, when working with the batteries. Always disconnect the negative battery cable first and reconnect it last.



CAUTION

Do not connect battery charging cables to any electronic control system component. This can damage the electronic control system.

NOTE: Use the inductive charging-cranking systems analyzer, Cummins Part Number 3377193, to test the output amperage of either maintenance-free or con-

ventional vent cap batteries. Follow the instructions provided with the test equipment.

3.5.2 Battery Installation

Install the Loose Wire Kit per instructions on Cummins Drawing 9767. If purchased, install the optional Battery Cable Kit (Cummins Fire Power Part No. 9614). Otherwise, install equivalent customer supplied wiring. Install battery sets in a well ventilated or otherwise protected location.

NOTE: There are two possible heavy-duty battery connections: Battery terminal and clamp or threaded battery terminal and nut.

1. Provide adequate room for servicing or replacing the batteries. Provide protection from extremes of temperature and weather.
2. Locate the batteries near the engine or increase the size of the conductors as required by applicable codes. Ensure that the batteries are configured properly for standard 12 VDC operations or optional 24 VDC operations. Refer to [Figure 3-8](#).
3. Check the battery cables and connections.

NOTE: Coat the terminals with petroleum jelly to prevent corrosion. Install the cables and tighten the battery connections.

3.5.3 Auxiliary Battery Starting

If a battery charging system is not provided, the engine can be started using charged batteries.

NOTE: For maintainable lead acid batteries supplied by Cummins Fire Power, or Cummins Inc., check the state of charge by measuring battery cell specific gravity. Refer to Battery Testing in [Section 6 - Maintenance](#) for additional information.



WARNING

Batteries can emit explosive gases during charging. Always ventilate the compartment before servicing the batteries. Remove sources of spark or open flame. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

3.6 Signal and Control Installation

This section explains how to connect the controller wires to the terminal block.



CAUTION

If the batteries have been installed prior to the control wiring, disconnect the negative cable first and then disconnect the positive battery lead.

Install the cables with the positive cable first and the negative cable last before testing.

NOTE: *Install signal and control wiring at Terminal Board TB. Refer to the terminal wiring schematic decal on the inside of the instrument enclosure.*

1. Ensure that the fire control system is properly installed and configured per the manufacturer's instructions. Refer to the Wiring Schematic Drawings provided with the pump manual.

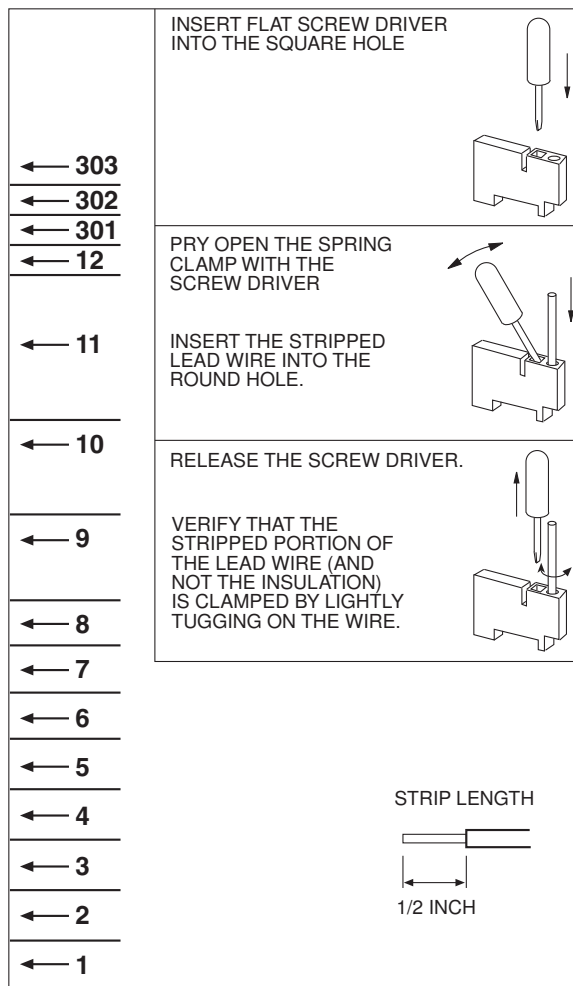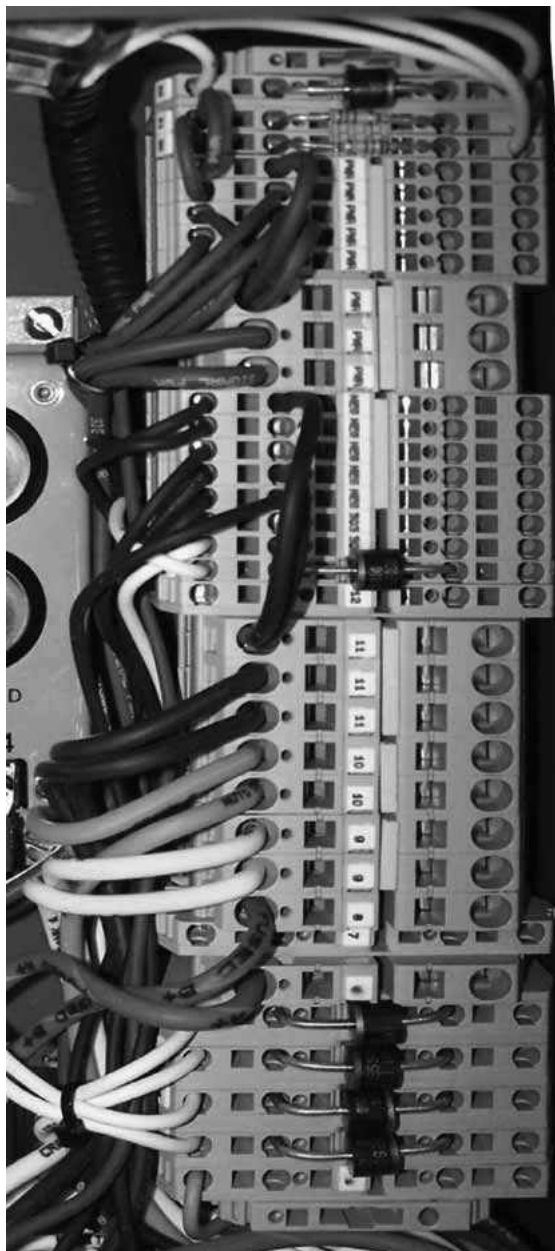

CFP-044

Figure 3-9 Termination Blocks and Wiring Decal

-
2. Complete the fire pump controller wiring (customer supplied) per the manufacturer's instructions.
 3. Connect the following wires to the Fire Pump Engine Instrument Panel per the engine electrical diagrams. Refer to [Figure 3-9](#).
 - a. TB-1: Connect the Control Power from the Fire Pump Controller. This power source is necessary for fire pump operations while in the AUTO Mode.
 - b. TB-2: Connect the Crank Terminate Input signal for the Fire Pump Controller. This signal is present when the engine is running. This signal indicates that the engine has started and that the crank command from the fire pump controller should stop immediately.
 - c. TB-3: Connect the remote Overspeed Alarm Input to the Fire Pump Controller. This signal is present when the overspeed switch has operated. If this event occurs, the fire pump engine will stop.
 - d. TB-4: Connect the Low Oil Pressure Alarm Input from the Fire Pump Controller. This 0 VDC grounded signal is present when the oil pressure has dropped below the 110 ± 13 kPa (16 ± 2 psig) Set Point.
 - e. TB-5: Connect the High Coolant Temperature Alarm Input from the Fire Pump Controller. This 0 VDC grounded signal is activated when the engine is running and the coolant temperature is at or above 93°C (200°F). The alarm will deactivate when the engine is running and the coolant temperature drops below 88°C (190°F).
 - f. TB-6: Connect Battery Set "A" lead from the controller. The controller senses Battery A charge state and charges the battery through this heavy gauge wire.
 - g. TB-8: Connect Battery Set "B" lead from the controller. The controller senses Battery B charge state and charges the battery through this heavy gauge wire.
 - h. TB-9: Connect Crank From Battery A Lead. During a cranking cycle, the controller energizes the coil of Starter Contactor A through terminal TB-9 to start the engine.
 - i. TB-10: Connect Crank From Battery B Lead. During a cranking cycle, the controller energizes the coil of Starter Contactor B through terminal TB-10 to start the engine.
 - j. TB-11: Connect the "Battery Ground" lead from the controller. This heavy gauge wire provides a common ground between the engine and controller.
 - k. TB-301: Connect the "Operating On Alternate ECM" lead. This 0 VDC ground signal is present when the engine's ECM selector switch is set to ECM-B.
 - l. TB-302: Connect the "ECM / Fuel Fault" signal wire. This 0 VDC ground signal is present when the engine signals a trouble fault.
 4. Ensure electrical continuity and adequate insulation resistance for the installed wiring.
 5. Provide the initial charge on the redundant batteries per the battery charger's instructions.
 6. Check that both voltmeters on the local control panel indicate the approximate battery voltage.
-

3.7 Coolant System Preparation

The fire pump engine coolant and lubrication system was initially filled during manufacture and testing.



CAUTION

Ensure that all coolant and lubrication systems have been filled to the proper level before operation.


1. Inspect the engine coolant hoses and hose clamps. Ensure that all coolant hoses and clamps are properly installed and water tight. Refer to [Figure 3-10](#).
2. Ensure that the engine coolant level is visible at the center of the expansion tank sight gauge. Add coolant as required. **DO NOT OVERFILL!**

- a. If engine coolant temperature is below 50° C (122° F), remove the expansion tank pressure cap and add coolant if necessary. Refer to [Figure 3-11](#).

NOTE: Supplemental engine coolant should be a mixture of 50% ethylene glycol antifreeze and 50% water to avoid engine damage. Refer to Antifreeze information found in [Section 6 - Maintenance](#) for additional information.


- b. Install the pressure/fill cap on the coolant expansion tank.
- c. Check and correct any cooling system leaks.
3. The engine coolant heater must maintain an engine coolant temperature of 49° C (120° F) or above.

Ensure that water is present in the engine heater before plugging in the heater element.

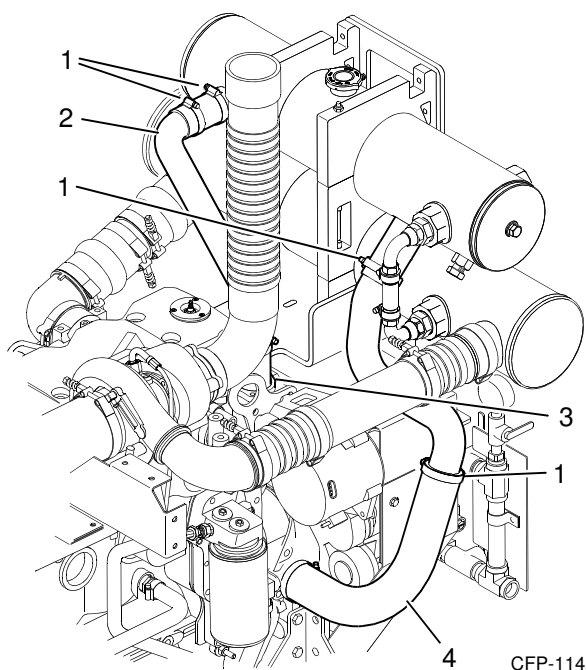

1. Hose Clamps
2. Upper Coolant Hose
3. Thermostat Housing
4. Lower Coolant Hose

Figure 3-10 Coolant Hoses and Clamps

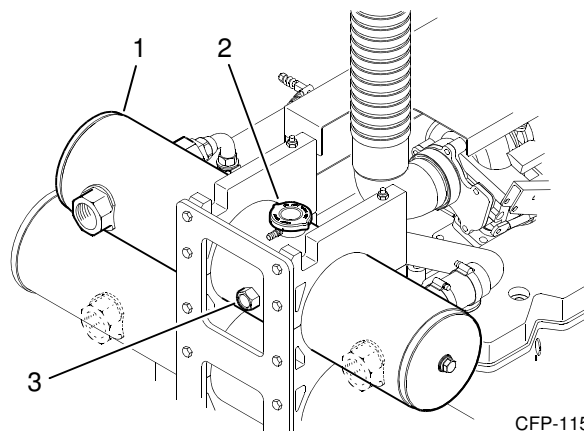


1. Coolant Heat Exchanger/Expansion Tank
2. Coolant Pressure/Fill Cap
3. Coolant Level Sight Gauge

Figure 3-11 Coolant Heat Exchanger/ Expansion Tank


3.8 Charge Air Cooler System

The charge air cooler system reduces the temperature of the compressed combustion air from the turbocharger before entering the air intake manifold. Refer to [Figure 3-12](#) and [Figure 3-13](#).

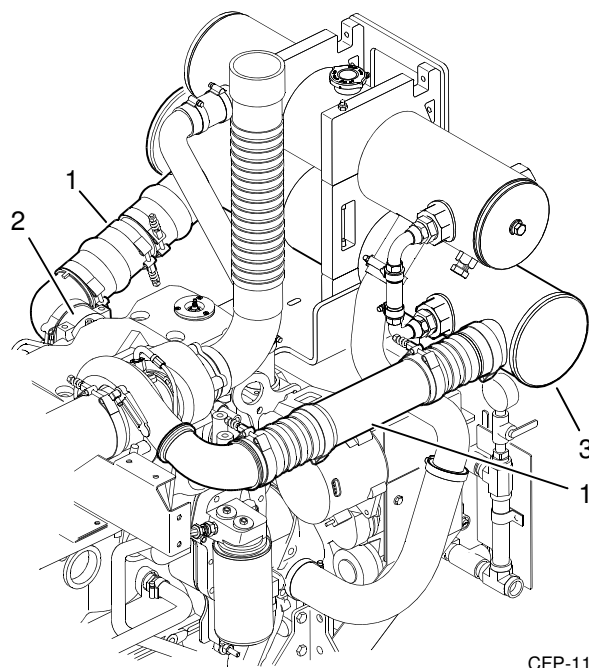

1. CAC Tubing and Clamps
2. Intake Manifold
3. Charge Air Cooler Heat Exchanger

Figure 3-12 Charge Air Cooler Tubing

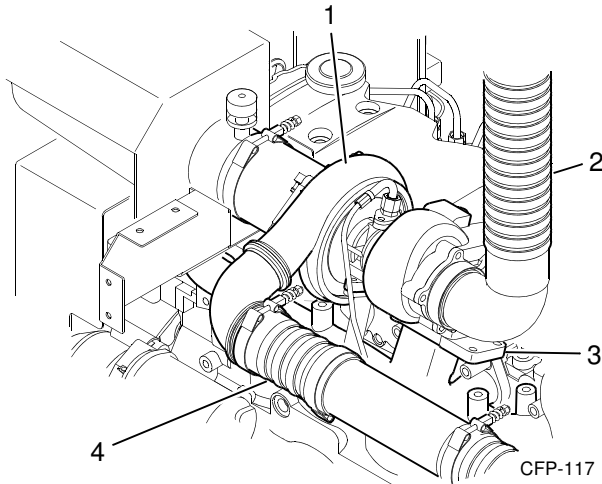

1. Turbocharger
2. Exhaust Flex Connection
3. Exhaust Manifold
4. CAC Piping

Figure 3-13 Turbocharger and CAC Piping

1. Inspect the charge air cooler piping and hoses for loose/missing hose clamps, hose punctures, leaking manifold seals, or corrosion. Torque the hose clamps to 8 N-m (72 in-lb).
2. After the engine starts, a whistling noise may indicate an air leak from the turbocharger to discharge elbow connection, loose hose clamps, damaged manifold seals, missing hose clamps, or hose punctures.
3. Inspect for damage. Tighten loosen clamps. Torque hose clamp screws to 8 N-m (72 in-lb).

3.9 Engine Oil System Preparation


The fire pump engine was initially lubricated during manufacture and testing.



CAUTION

Some regulatory and shipping restrictions may require that all lubricants, fuels and coolants be drained for transport. Ensure that all cooling and lubrication systems have been filled to the proper level before operation.

1. Check the oil level using the crankcase dip stick before operating. Refer to [Figure 3-14](#).
2. Fill the crankcase at the oil fill port, to the "H" mark on the dipstick with engine oil. Refer to [Figure 3-14](#).

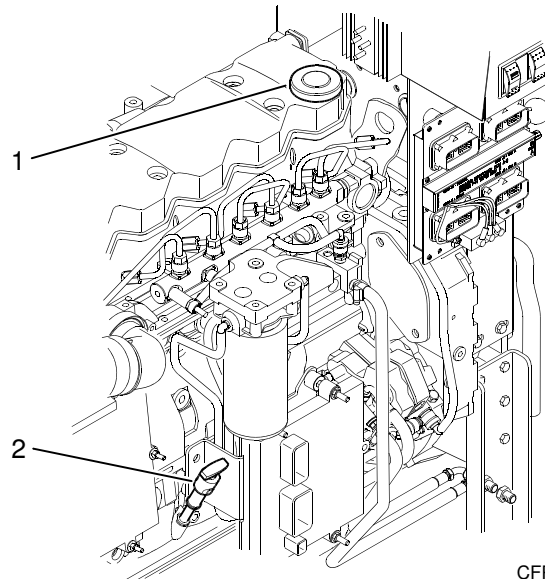


1. Engine Oil Fill Port
2. Engine Oil Level Dipstick

Figure 3-14 Oil Level Dipstick and Fill Port

NOTE: Do not use special "break-in" oils for new or rebuilt Cummins engines. Use the same type of oil during the "break-in" as used in normal operation.


NOTE: Using multi-viscosity engine oil can improve oil consumption control and improve engine cranking in cold temperatures while maintaining lubrication at high operating temperatures. Cummins Inc. recommends Valvoline Premium Blue® 15W-40 oil for most climates.

3. The turbocharger has been lubricated during manufacture and testing.
 - a. Remove the air filter element.
 - b. Rotate the compressor wheel to allow oil to enter the bearing housing. Any excess oil will drain through the oil drain line. Refer to [Figure 3-15](#) and [Figure 3-16](#).
 - c. Lubricate the bearings by pouring 59 to 89 ml (2 to 3 oz.) of clean engine lubricating oil into the turbocharger oil supply line fitting.
 - d. Reconnect the turbocharger oil inlet line.
 - e. Install the air intake filter assembly.

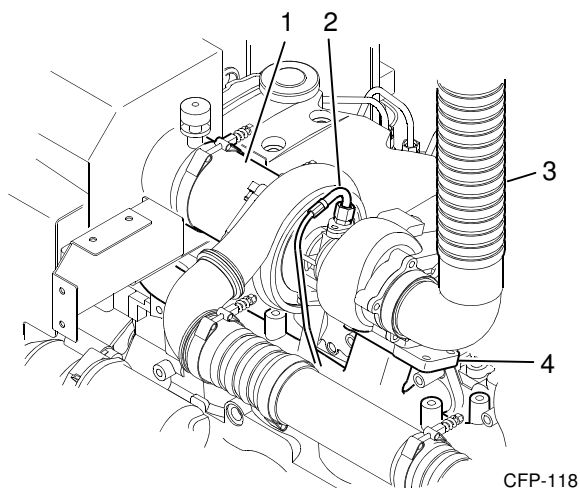

1. Turbocharger Air Intake
2. Turbocharger Oil Line
3. Exhaust Flex Connection
4. Exhaust Manifold

Figure 3-15 Turbocharger Oil Line Location

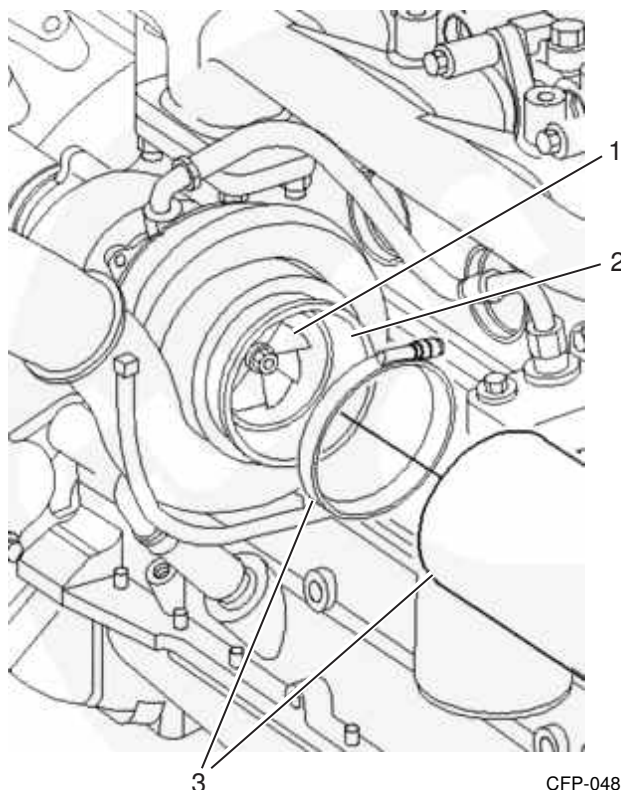

1. Turbocharger Compressor Wheel
2. Turbocharger Intake Housing
3. Air Intake Tube and Clamp

Figure 3-16 Turbocharger Turbine Wheel (typical)

3.10 Pre-Start Inspections

Perform a visual inspection as follows:

1. Check that there is no apparent damage and that all components are installed.
2. Check that the drive belt is properly installed.
3. Check that all hoses and tubes are properly installed.
4. Check that all electrical connections are properly installed.
5. Check that the fire pump is properly installed per the pump manufacturer's instructions, is correctly aligned, and is free to rotate.
6. Lubricate grease fittings on the auxiliary drive shaft.

NOTE: Some lubrication loss may occur during transport and storage. It is recommended that all drive shafts be re-lubricated upon installation.

7. Ensure that the engine exhaust pipe exhausts to atmosphere away from other building air intake piping.

3.11 Engine Start Test


Perform the following engine start test after completing all preliminary setup procedures, previously covered. Additional engine start tests and speed adjustment procedures are explained in [Section 5 - Operation](#).



WARNING


Before operating the equipment, complete all safety checks, remove all tools and foreign objects from the equipment, ensure that all guards are in place and securely fastened. Alert area personnel that the equipment will be starting. Unintentional equipment start-up or contact with exposed or moving components can cause personal injury or equipment damage.

The object of this test is to check that the engine starts and operates normally with oil pressure being displayed and raw water flow being established to the coolant heat exchanger. Operation at the factory-adjusted rated speed is also checked.

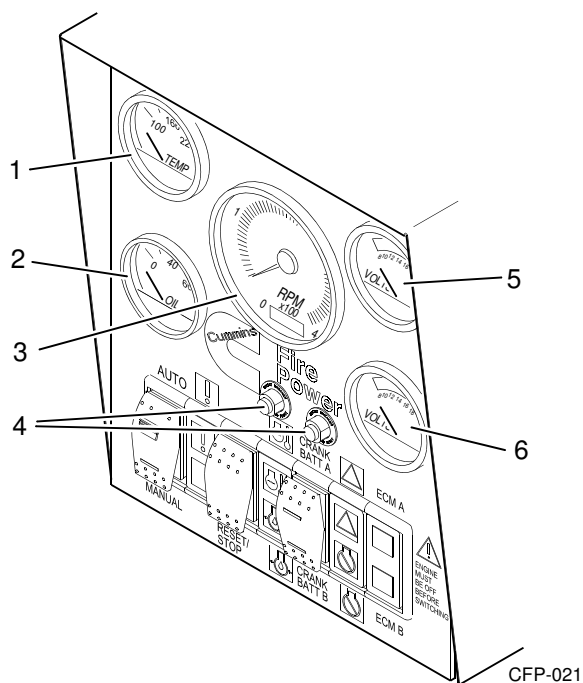

1. Water Temperature Gauge
2. Engine Oil Pressure Gauge
3. Tachometer and Hour Meter
4. Circuit Breaker
5. Battery "A" Voltmeter
6. Battery "B" Voltmeter

Figure 3-17 Operator's Control Panel

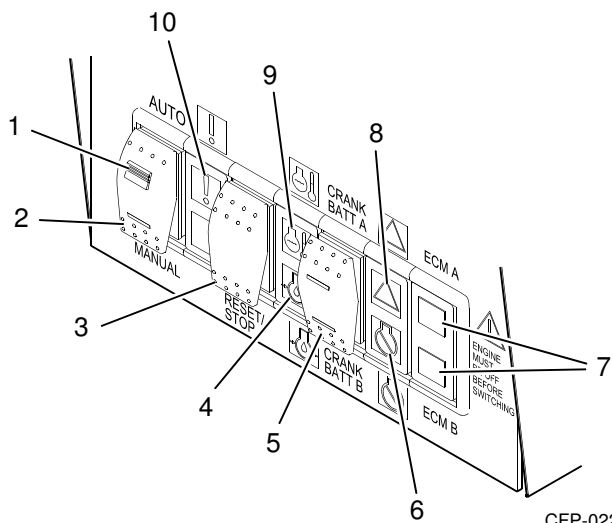


1. ON/OFF Switch Locking Button
2. AUTO/MANUAL Mode Switch
3. Overspeed RESET/STOP Switch
4. Low Oil Pressure Warning Lamp
5. Crank Battery A/B Momentary Start Switch
6. ECM Engine Shut Down Lamp (red)
7. ECM A/B Indicator Lamps
8. ECM Warning Lamp (amber)
9. High Water Temperature Warning Lamp
10. Overspeed Warning Lamp

Figure 3-18 Operator's Controls

1. To start the engine from the Fire Pump Controller Panel:
 - a. The AUTO Mode Switch position is the default operating position.
 - b. Place the AUTO/MANUAL Mode Switch on the operator's Instrument Panel in the AUTO Mode position. Refer to [Figure 3-17](#) and [Figure 3-18](#).
 - c. Start the engine by initiating an engine start signal from the Fire Pump Controller Panel.

NOTE: The fire pump engine will crank automatically when either solenoid A or solenoid B is selected at the fire pump control panel.

2. To start the engine from the Operator's Control Panel:
 - a. Disengage the AUTO/MANUAL Mode Switch Locking Button and place the switch in the MANUAL Mode position.

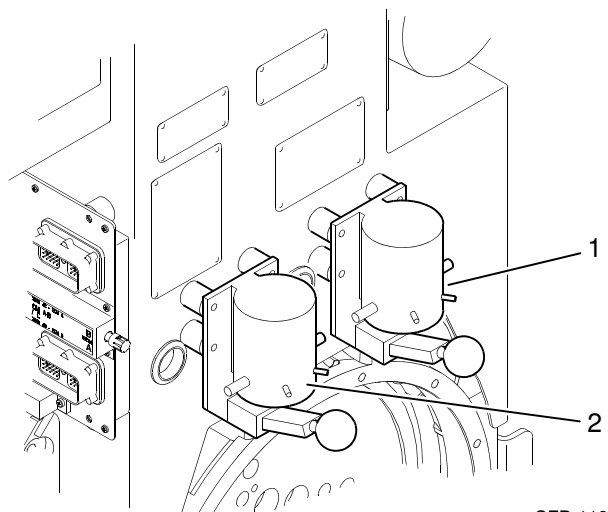

1. Battery B Starter Contactor
2. Battery A Starter Contactor

Figure 3-19 Manual Starter Contactors

- b. Place the AUTO/MANUAL Mode Switch on the operator's Instrument Panel in the MANUAL position.
 - c. Press downward on either CRANK BATT A/B Rocker Switch to start the engine.
3. To start the engine using the Manual Override Contactor A/B Levers:
 - a. Place the AUTO/MANUAL Mode Switch on the operator's Instrument Panel in the MANUAL position.
 - b. Press downward on either Manual Override Contactor A/B Lever to start the engine. Refer to [Figure 3-19](#).
 - c. Release the Contactor Lever immediately after the engine starts.
4. Check that the engine starts and operates at rated speed.
5. The engine may be stopped locally by pressing and holding the Overspeed RESET/STOP Switch until the engine stops.
2. Immediately check that raw water flow is established through the coolant heat exchanger. Raw water flow should be established immediately but some delay may occur before the flow exits the heat exchanger drain connection.
 - a. Ensure that raw water is flowing through the heat exchanger and water pressure shown on the local pressure gauge is no more than 414 kPa (60 psig). The minimum raw water flow rate is provided on the Engine Data Sheets found in [Section 8 - Component Parts and Assemblies](#).



CAUTION

If the water temperature gauge is not reading properly or if the Water Temperature Lamp is illuminated for 15 seconds, STOP THE ENGINE immediately! Continued operation without proper cooling water will cause engine damage.

3.11.1 Engine Will Not Start

If the engine still will not start, refer to [Section 7 - Troubleshooting](#) for possible causes.

3.11.2 Engine Starts

When the engine starts it is important to monitor the oil and cooling water pressure gauges to ensure safe operation.



CAUTION

If the oil pressure is not displayed on the gauge or if the Low Oil Pressure Lamp is illuminated for 15 seconds, STOP THE ENGINE immediately! Continued operation without proper lubrication will cause engine damage.

1. Immediately check that oil pressure is displayed at the pressure gauge within a few seconds. Ensure that the oil pressure is between 276-414 kPa (40-60 psi).

If oil pressure is not within the rated range, troubleshoot per Engine Oil Pressure High or Engine Oil Pressure Low in [Section 7 - Troubleshooting](#).
3. Ensure that engine operating temperature stabilizes between 82° and 95° C (180° and 203° F).
 - a. If temperature does not stabilize, stop the engine and refer to Coolant Temperature Above Normal or Coolant Temperature Below Normal (Engine Running) in [Section 7 - Troubleshooting](#).
4. Operate the engine for 8 to 10 minutes.
5. Inspect for leaks, unusual noises, or other indications of incorrect operation.
6. Shut off the engine by pressing and holding the Overspeed RESET/STOP Switch.
7. Check that raw water flow stops automatically shortly after the engine stops.
8. Correct any problems found during the inspection before proceeding.
9. Check the engine lubricating oil level at the crankcase dip stick. Top off if necessary.
10. Check the coolant expansion tank level. Top off if necessary.
11. Check the raw water wye strainers. Clean the strainers as required per the instructions in [Section 6 - Maintenance](#).
12. Perform engine speed control and safety system tests per the instructions in [Section 5 - Operation](#).

Section 4 - Controls

4.1 Operator Control Panel

The operator control panel is mounted on the fly-wheel end of the engine.

The instrument panel contains controls for starting, monitoring engine performance and controlling fire pump engine operation. Refer to [Figure 4-1](#).

4.1.1 Coolant Temperature Gauge

The Coolant Temperature Gauge displays the temperature of the coolant circulating through the fire pump engine. The gauge works in unison with the High Water Temperature Alarm Sensor to the fire pump controller at terminal TB-5. This 0 VDC grounded signal is present when the engine is running and the coolant temperature has risen above the 93° C (200° F) Set Point.

When the engine starts, immediately check that raw water flow is established through the heat exchangers. Raw water flow should be established immediately but some delay may occur before the flow exits the coolant heat exchanger drain connection. Stop the engine if the water temperature alarm is illuminated for more than 15 second.



CAUTION


If the coolant temperature exceeds the high coolant temperature set point, the High Coolant Temperature Warning Lamp is illuminated. The engine will continue to operate but immediate attention is necessary in order to prevent extensive damage to the engine or catastrophic engine failure.

4.1.2 Engine Oil Pressure Gauge

The Engine Oil Pressure Gauge displays the engine oil pressure. The gauge works in unison with the Low Oil Pressure Alarm Input from sensor TB-5. The 0 VDC grounded signal is terminated when the oil pressure has dropped below the 110 kPa (16 psig) set point.

When the engine starts, immediately check that oil pressure is displayed. It should be on-scale within a

few seconds. If oil pressure is not present or if the Low Oil Pressure Lamp does not go out, stop the engine and troubleshoot per the instructions in [Section 7 - Troubleshooting](#).

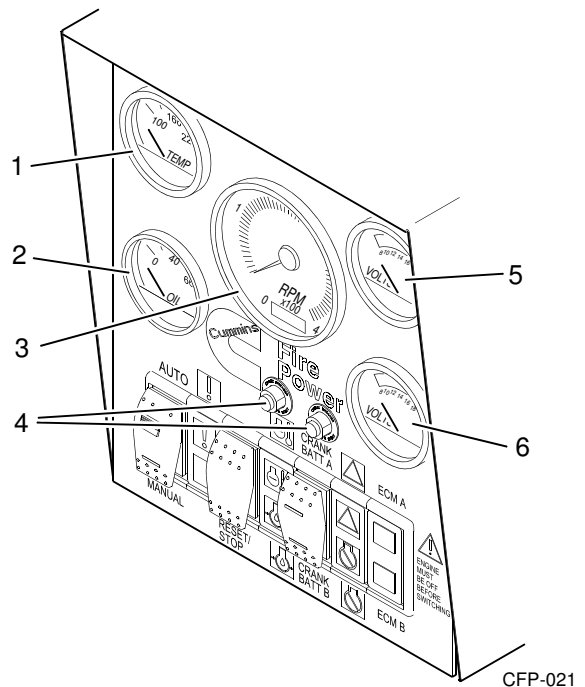

1. Coolant Temperature Gauge
2. Engine Oil Pressure Gauge
3. Tachometer and Hour Meter
4. Circuit Breaker
5. Battery "A" Voltmeter
6. Battery "B" Voltmeter

Figure 4-1 Instrument Panel



CAUTION

Warning Lamp is illuminated. The engine will continue to operate but immediate attention is necessary in order to prevent extensive damage to the engine or catastrophic engine failure.

4.1.3 Tachometer and Hour Meter

The Tachometer displays the engine speed in revolutions per minute (RPM) whenever the engine is operating. The Hour Meter maintains a running total of the

hours of operation (run time). The Tachometer works in unison with the Engine Overspeed Alarm Input from sensor TB-3. This 12 VDC signal is present when the overspeed switch has operated.

CAUTION

If this event occurs, the fire pump engine will stop to avoid fire system over-pressurization. The fault must be corrected and the local RESET Button must be pressed in order to restart the engine.

NOTE: The Run Speed and Engine Overspeed Set Point are displayed on the Factory Setting Tag, on the side of the operator instrument panel.

NOTE: Electronically controlled engines should operate within a few RPM of the rated speed whether the engine is fully loaded or unloaded. If it becomes necessary to adjust the engine's actual speed to match the rated value, refer to Rated Speed Set Point Adjustment in [Section 5 - Operation](#).

4.1.4 Battery A and B Voltmeters

The Battery Voltmeters display the charge status (VDC) of the relative battery connections. Permanently installed redundant battery charging systems with connections at TB-6 and TB-8 (+) and TB-11 (-) should also be used for remote battery voltage indications at the fire pump control system or elsewhere.

NOTE: The two voltmeters may differ slightly due to calibration differences between the meters. Normal differences in battery condition may also cause indication differences. These are normal differences and require no action.

4.1.5 Circuit Breaker Switches

The engine control panel has two manual-reset type, 30 A Circuit Breakers. They protect against a catastrophic failure, such as a direct battery-terminal ground fault or a battery charger malfunction. One breaker is for Battery A, and the other breaker is for Battery B.

NOTE: If one of the circuit breakers trips, locate and repair the source of the fault before pressing the RESET Button.


4.1.6 AUTO/MANUAL Mode Switch

The AUTO/MANUAL Mode Switch determines whether the engine starts and is controlled by the

operator (MANUAL) or by an automatic signal from the fire pump controller (AUTO). Refer to [Figure 4-2](#).

The Manual Mode is typically used for engine setup, testing and maintenance procedures. The AUTO Mode is used to start the engine under the control of the fire pump control system (in the absence of a live operator).

In the AUTO mode, the fire pump engine stops upon loss of signal power from the fire pump controller.

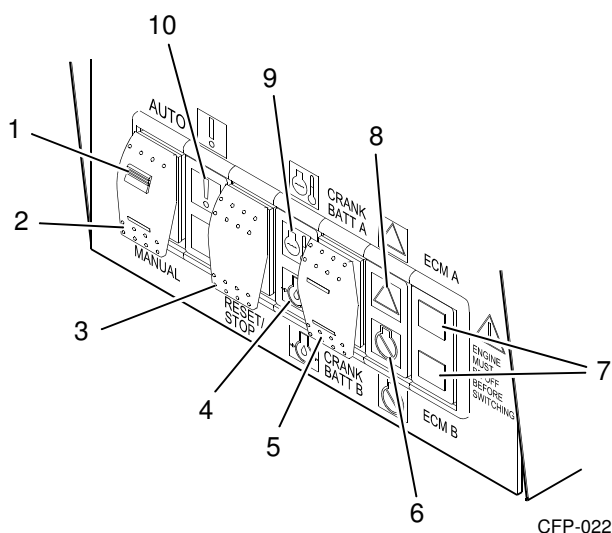

1. ON/OFF Switch Locking Button
2. AUTO/MANUAL Mode Switch
3. Overspeed RESET/STOP Switch
4. Low Oil Pressure Warning Lamp
5. Crank Battery A/B Momentary Start Switch
6. ECM Engine Shut Down Lamp (red)
7. ECM A/B Indicator Lamps
8. ECM Warning Lamp (amber)
9. High Coolant Temperature Warning Lamp
10. Overspeed Warning Lamp

Figure 4-2 Operator Panel Controls

4.1.7 Overspeed Warning Lamp

The Overspeed Warning Lamp is illuminated whenever the engine RPM rate exceeds the factory set Engine Overspeed Set Points. The lamp is not lit when the engine is operating within the normal engine RPM range. Refer to [Figure 4-2](#).

NOTE: The Run Speed and Engine Overspeed Set Point are displayed on the Factory Setting Tag, on the side of the operator instrument panel. Refer to [Figure 4-3](#).

4.1.8 Engine Overspeed Warning Lamp

The Overspeed Sensor monitors engine speed during the start cycle and engine operation. The remote Overspeed Alarm Input from the engine controller is connected to terminal TB-3. The speed switch is factory programmed to enable at 115% rated engine speed. If the engine RPM's exceed 115% rated speed, the engine Overspeed Warning Lamp is illuminated and the engine will shut down.

NOTE: The overspeed switch has been set at the factory during assembly and testing. It should not require additional programming unless the pump operating speed is changed.




CAUTION

If the Overspeed Sensor is tripped, the fire pump engine will stop to avoid catastrophic failure. The fault must be corrected and the local RESET Button must be pressed in order to restart the engine.

4.1.9 Overspeed RESET/STOP Switch

Pressing the Overspeed RESET Switch after correcting an engine overspeed shutdown, resets the operator controls, allowing subsequent restart of the fire pump engine.

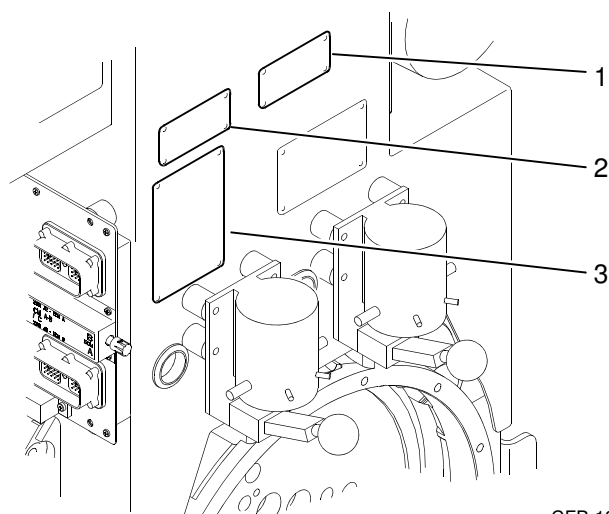

CFP-120

1. Field Engine Speed and Overspeed Settings
2. Factory Engine Speed and Overspeed Settings
3. Engine Serial Number Plate

Figure 4-3 Engine Settings Plates

4.1.10 High Coolant Temperature Warning Lamp

The High Coolant Temperature Lamp is lit whenever the engine is running and the coolant temperature has risen above the 93° C (200° F) Set Point.

IMPORTANT: If high coolant temperature lamp does not go out, stop the engine and troubleshoot per the instructions in [Section 7 - Troubleshooting](#).



CAUTION

If the coolant temperature exceeds the high coolant temperature set point, the high coolant temperature warning lamp is illuminated. The engine will continue to operate but immediate attention is necessary in order to prevent extensive damage to the engine or catastrophic engine failure.

4.1.11 Low Oil Pressure Warning Lamp

The Low Oil Pressure Warning Lamp is switch activated at a falling pressure of 110 kPa (16 psig), and deactivates at a rising pressure of 83 kPa (12 psig) Set Point. (When the engine is not running, the Low Oil Pressure Lamp will be illuminated). When a Low Oil Pressure condition exists, the Low Oil Pressure Lamp on the Engine Control Panel will illuminate.

IMPORTANT: If oil pressure is not present or if the Low Oil Pressure Lamp does not go out, stop the engine and troubleshoot per the instructions in [Section 7 - Troubleshooting](#).



CAUTION

If the engine oil pressure drops below the minimum oil pressure set point, the low oil pressure warning Lamp is illuminated. The engine will continue to operate but immediate attention is necessary in order to prevent extensive damage to the engine or catastrophic engine failure.

4.1.12 CRANK BATT A/B Switch

The fire pump engine requires (2) 12 VDC lead/acid core batteries for standard 12V operation. If using the optional 24VDC operation, (2) sets of (2) 12VDC lead/acid core batteries are required with each pair wired in series to produce 24 VDC. The batteries can be supplied by Cummins Inc. or by the customer.

The CRANK BATT A and CRANK BATT B Momentary Start Switches initiate an immediate engine start using the selected A or B Crank Battery.

4.1.13 ECM Fault Code Lamps


The AMBER Engine Warning Lamp and the RED Engine Shutdown Lamp serve three purposes:

1. To alert the operator of an engine malfunction. Refer to [Figure 4-2](#).

An illuminated AMBER Lamp indicates an engine malfunction that requires timely operator attention.
2. An illuminated RED Lamp indicates an engine malfunction that requires immediate and decisive operator response.
3. To flash out a 3-digit diagnostic fault code, which can then be used to help describe the nature of the engine malfunction. Refer to [Section 5 - Operation](#) for Fault Code Information.

4.1.14 ECM A/B Indicator Lamps

The two ECM Indicator Lamps show the position of the ECM Switch. If the ECM Switch is in the ECM A (normal) position, ECM A is controlling the engine, and the ECM A lamp is illuminated. Refer to [Figure 4-2](#) and [Figure 4-4](#).

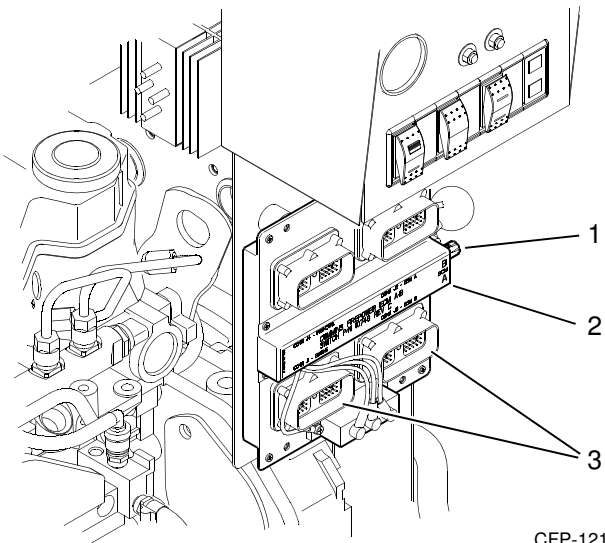

1. ECM A/B Selector Switch
2. ECM Selector Panel
3. ECM Harness Connections

Figure 4-4 ECM Selector Panel and Switch

If the ECM Switch is in the ECM B (alternate) position, ECM B is controlling the engine, and the ECM B lamp is illuminated. Terminal 301 will be active (ground) for remote annunciation.

4.2 Electronic Control Module

The system has an electronically controlled fuel injection system that optimizes fuel economy and reduces exhaust emissions. It does this by controlling the torque and horsepower curve, AFC function, engine high speed, low idle, and load speed. Refer to [Figure 4-5](#).

The engine control system is an electronically operated fuel control system that also provides many operator or equipment features. The base functions of the control system include: Fueling and timing control, limiting the engine speed operating range between the low and high-idle set points and reducing exhaust emissions while optimizing engine performance.

The control system uses inputs from the operator and engine sensors to determine the fuel amount and timing required to operate at the desired engine speed. The ECM is the control center of the system. It processes all of the inputs and sends commands to the fuel system, vehicle, and engine control devices.

The ECM performs diagnostic tests on most of its circuits and will activate a fault code if a problem is detected in one of these circuits.


Active fault codes will cause a diagnostic lamp to activate to signal the driver. The ECM can communicate with the Insite™ service tool and some other engine controllers.

4.2.1 ECM Data Plate

The ECM Data Plate shows information about the ECM and how the ECM was programmed. The data plate is located on the front of the ECM. Refer to [Figure 4-5](#).

The following information is available on the ECM Data Plate: ECM Part Number (PN), ECM Serial Number (SN), ECM Date Code (DC), Engine Serial Number (ESN), ECM Code: Identifies the software in the ECM.

NOTE: Have the ECM code for your engine available when communicating with a Cummins Authorized Repair Location.

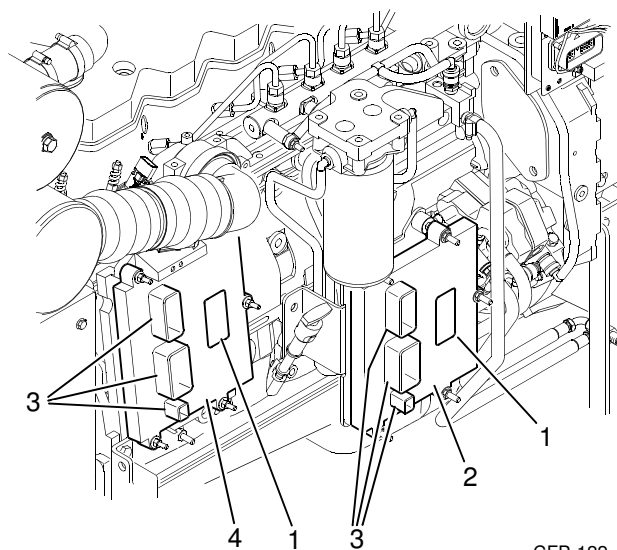

CFP-122

1. ECM Data Plate
2. Electronic Control Module (ECM) B
3. ECM Harness Connections
4. Electronic Control Module (ECM) A

Figure 4-5 Electronic Control module (ECM)

4.3 Overspeed Switch

The overspeed switch senses engine speed during normal operation and during the start cycle. The switch deactivates the fuel pump solenoid valve and shuts off the engine whenever the speed exceeds the overspeed set point. Refer to [Figure 4-6](#).


NOTE: The overspeed switch is set during manufacture and test procedures and typically does not require setup at installation.

1. Use the Adjustment and Test Procedure in [Section 6 - Maintenance](#) to change the set point.
2. Repeat the adjustments and checks until the desired set point is demonstrated. When the overspeed set point is set, check that the engine operates normally while not in the Test Mode.

NOTE: The overspeed set point must be set at between 115 and 120% of the engine's rated speed.

The speed switch located on the engine's local control panel has a TEST button which lowers the currently adjusted overspeed by 20%.

Thus, an overspeed set point of 2112 rpm would be reduced to $(2112 * 0.8) = 1689$ RPM when the test button is pressed.

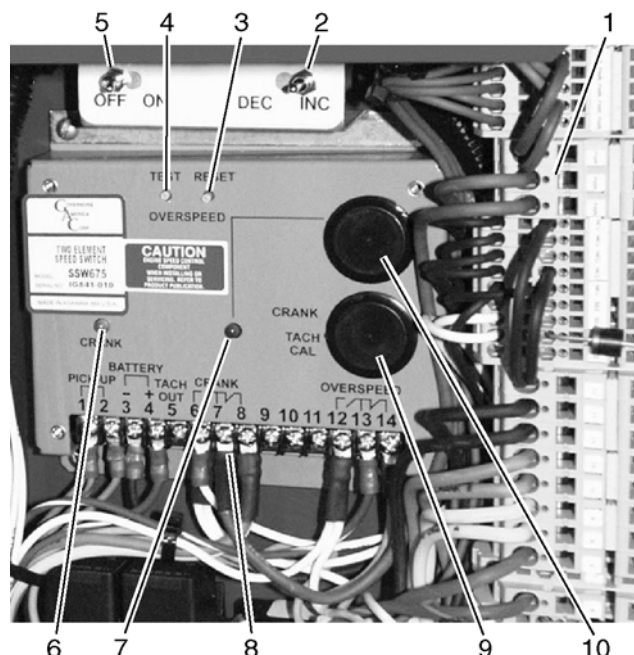

CFP-040

1. Spring Clamp Terminal Blocks
2. Speed Increase/Decrease Toggle Switch
3. RESET Button
4. TEST Button
5. Diagnostic ON/OFF Toggle Switch
6. CRANK Termination or RUN Signal Indicator LED (Factory Use Only)
7. Overspeed Indicator LED
8. Pre-wired Terminals
9. Crank Terminate Potentiometer Cover
10. Overspeed Potentiometer Cover


Figure 4-6 Engine Overspeed Control Module

4.4 Raw Water Flow Control Valves

The engine controller should be set to open the raw water Normal Loop Solenoid Valve in either Manual or Automatic Mode. In the OPEN position, water can flow through the heat exchangers. Refer to [Figure 4-7](#).

The manual raw water valves control whether the Automatic or Bypass lines are supplying water.

1. Manual raw water valves for the Automatic Loop should remain OPEN at ALL times.
2. Manual raw water valves for the Bypass Loop should be CLOSED during Automatic (pump controller) operation.

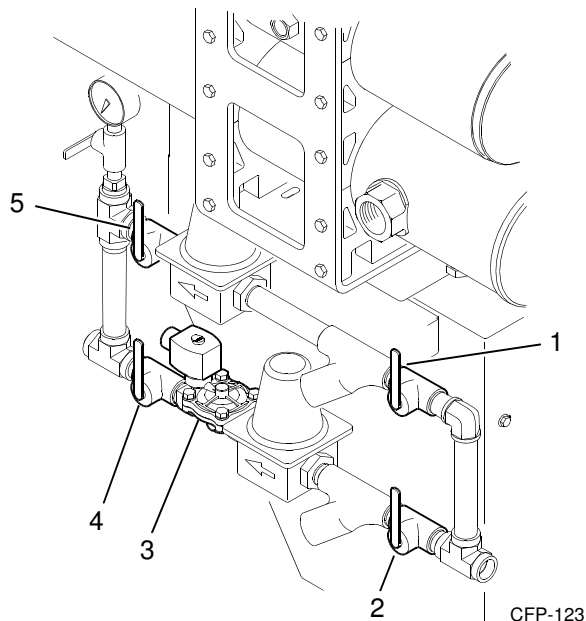

1. Bypass Water Inlet Valve
2. Normal Water Inlet Valve
3. Normal Water Solenoid Valve
4. Normal Water Outlet Valve
5. Bypass Water Outlet Valve

Figure 4-7 Raw Water Flow Control Valves

4.5 Engine Protection System

The engine ECM monitors any engine abnormalities, and displays active faults via the AMBER Warning Lamp and the RED Shutdown Lamp on the operator

instrument panel. Refer to [Section 7 - Troubleshooting](#) for additional Fault Code information.

CAUTION

Normally, Cummins engines with ECMs have derate and shutdown protection calibrated into the ECM. However, the ECM on this Cummins engine has no such derate or shutdown protection. The engine will run to destruction. Therefore, preventive maintenance is essential.

4.5.1 Engine Protection Fault

When an Engine Protection Fault (EPF) occurs, a corresponding Warning Lamp is illuminated on the operator's instrument panel. If an overspeed situation exists, the EPF automatically shuts down the fuel supply solenoid valve.

The EPF System uses a combination of any of the following engine controller sensor inputs:

1. Low Coolant Temperature (lamp warning).
2. High Coolant Temperature (lamp warning).
3. Low Coolant Level (lamp warning).
4. Low Oil Pressure (lamp warning)
5. Low Oil Level (lamp warning)

Section 5 - Operation

5.1 Start-up Procedures

This section provides the operator with the information required to prepare the fire pump engine for normal operation, in a safe manner. This Operator's Manual is provided for your specific equipment and should be considered a part of that equipment. All personnel responsible for the operation and maintenance of the equipment should read and thoroughly understand this manual.



WARNING

Before preparing the machine for normal production, complete all safety checks, remove all tools and foreign objects from the machine, ensure that all guards are in place and securely fastened, and alert area personnel that the equipment will be starting.

5.2 General Operating Information

Cummins Fire Pump Engines are tested before being shipped from the factory. The engine operating speed must be set per the pump RPM requirements.

NOTE: The engine speed set points are displayed on the Factory and Field Setting Plates, located on the flywheel end of the engine.

5.3 Remote Starting Procedure

If the AUTO/MANUAL Mode Switch is in the AUTO Mode position, the pump engine starts automatically upon receipt of the start command from the customer installed pump control panel. The AUTO Mode is the default switch position.


NOTE: The AUTO/MANUAL Mode Switch Locking Button must be disengaged to place the switch in the MANUAL Mode.

The remote start command consists of a CRANK Signal from the pump controller. When the pump has started, the CRANK TERMINATE Signal is sent to the pump controller to indicate that the engine is running and to discontinue the CRANK Signal.

NOTE: How the crank and crank terminate signals are displayed depends upon the fire pump control panel manufacturer. This indication should be checked in the event that an automatic start is initiated. If the signal is not present, the engine can be started locally using the Local Starting Procedure in this section.

To start the engine from the Fire Pump Controller Panel:

1. Place the AUTO/MANUAL Mode Switch on the operator's Instrument Panel in the AUTO Mode position. Refer to Figure 5-1.
2. Start the engine by initiating an engine CRANK Signal from the Fire Pump Controller.
 - a. When the engine starts, a CRANK TERMINATE Signal is sent to the fire pump control panel, indicating that the engine is running.

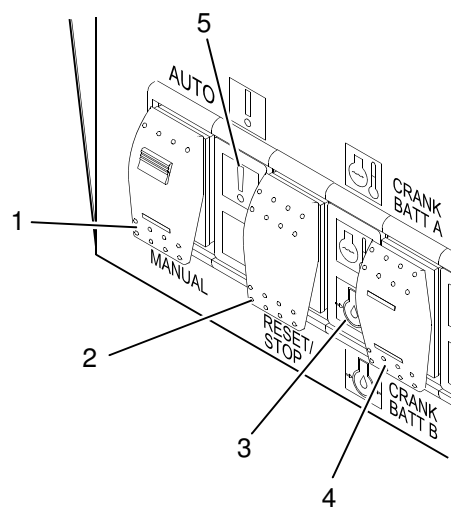

CFP-025

1. AUTO/MANUAL Mode Switch
2. STOP/RESET Switch
3. Low Oil Pressure Warning Lamp
4. Battery A/B Switch
5. Overspeed Warning Lamp

Figure 5-1 Instrument Panel Switch Module

CAUTION

If the Crank Terminate Signal is absent, the engine starter motor will continue to operate. Shut the engine off immediately to avoid damaging the starter motor or the starter motor gears.


- b. If the signal is not present, the engine can be started locally using the Local Starting Procedure in this section.
3. The engine continues to operate as long as the RUN signal is present. When the RUN signal is terminated by the fire pump control panel, the engine stops immediately.
4. The engine may be stopped locally by pressing the STOP/RESET Rocker Switch.

5.4 Local Starting Procedure

The fire pump engine can be started locally from the operator control panel for testing and maintenance. To start the engine from the Operator Control Panel:

1. Place the ECM A/B Selector Switch in the desired operating position (ECM A is the normal position, ECM B is the alternate position). Refer to [Figure 5-2](#).

IMPORTANT: Never switch from ECM A to ECM B while the engine is running.

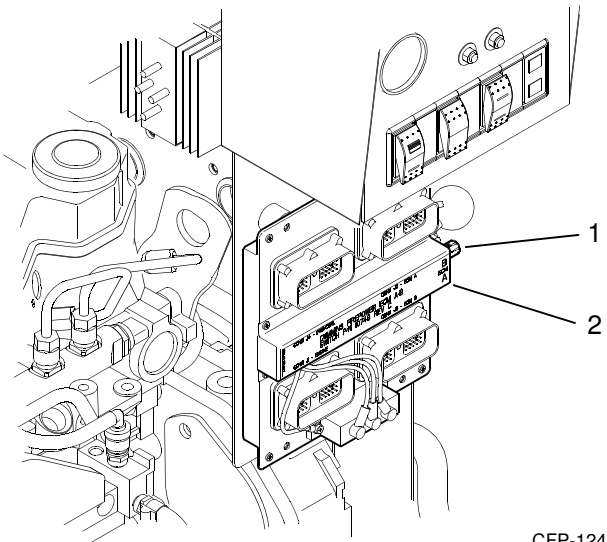

1. ECM A/B Selector Switch
2. ECM Selector Panel


Figure 5-2 ECM Selector Panel and Switch

2. Disengage the AUTO/MANUAL Mode Switch Locking Button.
3. Place the AUTO/MANUAL Mode Switch in the MANUAL position. Refer to [Figure 5-1](#).
4. Observe the battery voltages displayed on the engine instrument panel. Use the battery with the highest indicated voltage.
5. Press either the CRANK BATT A or CRANK BATT B Switch to start the engine.
 - a. Depress the selector switch for up to 15 seconds or until the engine starts. Repeat up to three times if necessary.

CAUTION

To prevent damage to the starter, do not engage the starting motor more than 15 seconds. Wait 15 seconds between each start attempt.

IMPORTANT: If the engine does not start after three attempts, check the fuel supply system. Absence of blue or white exhaust smoke during cranking indicates no fuel is being delivered.

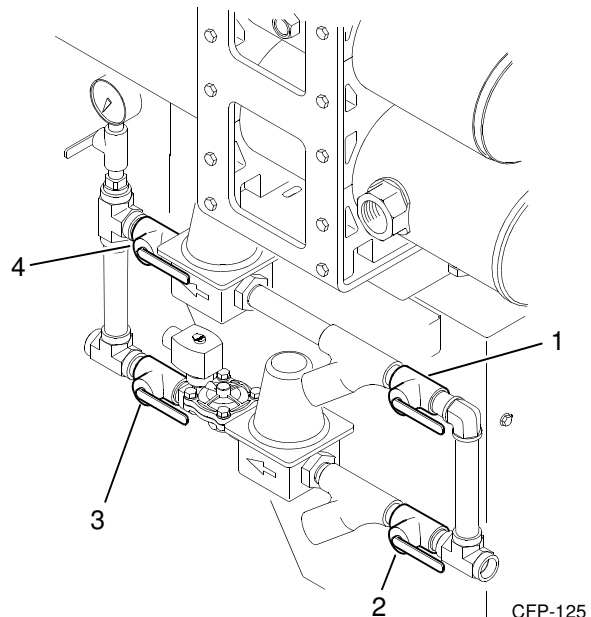

1. Bypass Raw Water Manual Inlet Valve
2. Normal Raw Water Manual Inlet Valve
3. Normal Raw Water Manual Outlet Valve
4. Bypass Raw Water Manual Outlet Valve

Figure 5-3 Raw Water Manual Valves (open)

NOTE: Engines used in fire pumps or standby service are expected to accelerate from crank to full load within a short period of time.

- b. Engine oil pressure must be indicated on the gauge within 15 seconds after starting.
6. Stop the engine locally by pressing the STOP/RESET Rocker Switch.

5.5 Emergency Starting Procedure

The engine starts automatically in the event of a fire emergency. However, if it fails to start automatically, the engine can be started locally. The following procedure outlines an Emergency Manual Mode Electrical Start.


1. Open both manual bypass valves in the raw water supply loop. Refer to [Figure 5-3](#).
2. Place the ECM A/B Selector Switch into the desired operating position. Refer to [Figure 5-2](#).
3. Disengage the AUTO/MANUAL Mode Switch Locking Button.
4. Place the AUTO/MANUAL Mode Switch on the Operator's Control Panel in the MANUAL position. Refer to [Figure 5-1](#).
5. Observe the battery voltages displayed on the engine instrument panel. Use the battery with the highest indicated voltage.
6. Press downward on either Battery A or Battery B Contactor Lever to start the engine. Refer to [Figure 5-4](#).
 - a. If Crank Solenoid Lever A does not engage the starter, repeat using Crank Solenoid Lever B.

IMPORTANT: If the engine does not start after three attempts, check the fuel supply system. Absence of blue or white exhaust smoke during cranking indicates no fuel is being delivered.



CAUTION

To prevent damage to the starter, do not engage the starting motor more than 15 seconds. Wait 15 seconds between each attempt to start (electrical starting motors only).

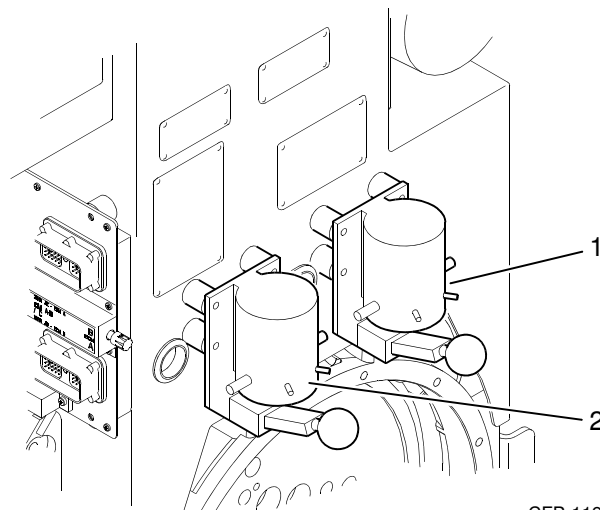

CFP-119

1. Battery B Starter Contactor
2. Battery A Starter Contactor

Figure 5-4 Manual Starter Contactors

- b. Release the Contactor Lever immediately after the engine starts.
7. Check that the engine starts and operates at rated speed.

Engine oil pressure must be indicated on the gauge within 15 seconds after starting.
8. The engine may be stopped locally by pressing the STOP/RESET Rocker Switch.

5.6 Engine Operating Speed

The Engine Operating Speed was factory set during manufacturing and test procedures. It may, however, be necessary to adjust the operating speed based on the fire pump application.

If the speed does not match the Engine RPM shown on the Factory Settings Plate, refer to Section 6 for adjustment procedures.

5.7 Overspeed Set Point

The Engine Overspeed Set Point was set during manufacturing and test procedures. It may, however, be necessary to adjust the overspeed set point based on the actual fire pump application. Refer to [Section 6 - Maintenance](#) for adjustment procedures.

5.8 Crank Terminate Set Point

The Crank Terminate Signal informs the pump controller that the engine has started and discontinues the pump controller crank signal. The crank terminate signal was factory set at the manufacturer. Refer to [Section 6 - Maintenance](#) for set point adjustment and testing procedures.


5.9 ECM Fault Code Lamps

The Electronic Control Module can display and record operation irregularities, which are displayed as fault codes on the operator instrument panel. Fault codes can be read using the two ECM lamps on the operator instrument panel or with an Insite™ Diagnostic Reader. Refer to [Figure 5-5](#)

NOTE: *Not all engine irregularities are shown as fault codes.*

The AMBER engine warning lamp and the RED engine shutdown lamp serve three purposes:

1. An illuminated AMBER Lamp indicates an engine malfunction that requires timely operator attention. Refer to [Figure 5-6](#).

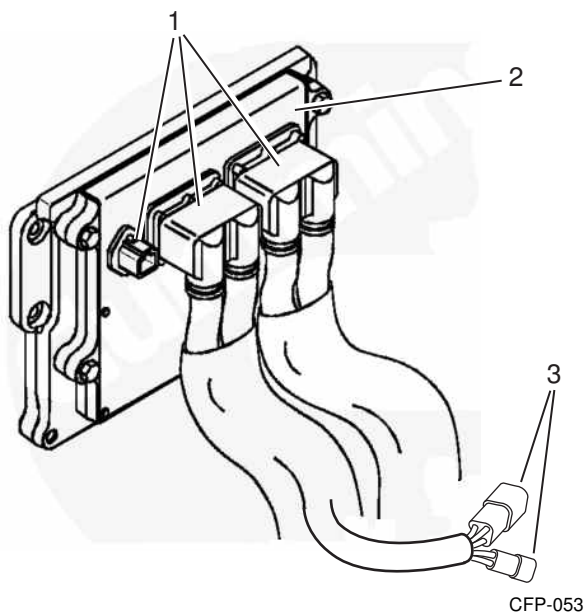


1. ECM Harness Connections
2. Electronic Control Module (ECM) A
3. Diagnostic Reader Plug-ins

Figure 5-5 ECM Diagnostic Reader Plug-ins

2. An illuminated RED Lamp indicates an engine malfunction that requires immediate and decisive operator response.
3. To flash out a 3-digit diagnostic fault code, which can then be used to help describe the nature of the engine malfunction. When either of the RED or AMBER lamps is illuminated, the fault code can be determined as follows:
 - a. The AUTO/MANUAL Mode Switch must be placed in the MANUAL position with the engine NOT running.
 - b. Open the engine control panel and place the Diagnostic ON/OFF Switch in the ON position.
 - c. The RED and AMBER Fault Code Lamps will immediately begin to flash the 3-digit diagnostic code.

The AMBER lamp will blink once to indicate the beginning of a 3-digit code.

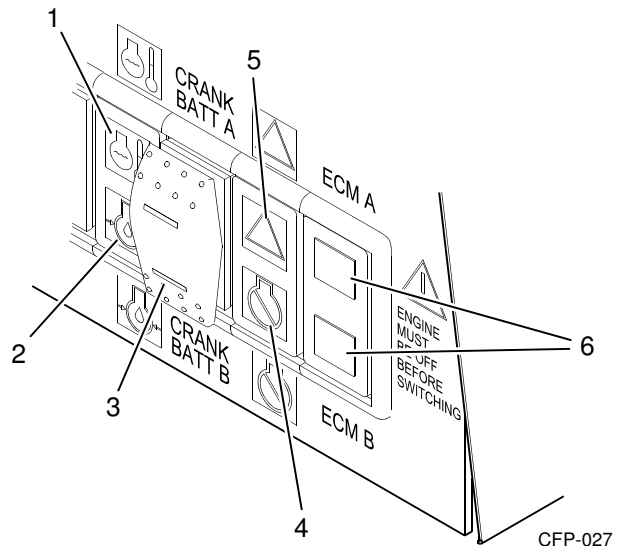

1. High Coolant Temperature Warning lamp
2. Low Oil Pressure Warning Lamp
3. Crank Battery A/B Momentary Start Switch
4. ECM Engine Shut Down Lamp (red)
5. ECM Warning Lamp (amber)
6. ECM A/B Indicator Lamps

Figure 5-6 Instrument Panel Indicator Lamps

For example: For a fault code of 241, the RED Lamp will blink 2 times to indicate the first digit, pause, blink 4 times to indicate the second digit, pause, then blink 1 time to indicate the third and final digit.

The AMBER lamp will then flash once, indicating the end of the three digit code.

4. If there is more than one fault code present, press the INC/DEC Toggle Switch to the INC position to proceed to the next 3-digit fault code. Refer to the Fault Code Chart to identify the 3-digit code.
5. If the Diagnostic Switch is placed in the ON position and both the RED and AMBER Lamps remain lit (do not flash), then there are no active fault codes present.

IMPORTANT: *Return the Diagnostic Switch to the OFF position before attempting to start the engine.*

5.10 Isolated Acceptance Testing

The following tests demonstrate the MANUAL Local Start, operation, and shutdown of the fire pump from the engine's local Starter Solenoid Controls.

1. Demonstrate that the engine will not operate in the event of blown fuses or other faults in the local control panel.
2. Demonstrate manual engine speed control.
3. Demonstrate manual raw water valve operations to the engine cooling system.
4. Demonstrate the manual local start, operation, and shutdown of the fire pump from the engine's control panel.
5. Demonstrate that the engine starts, operates at speed, and stops in the event that the fire pump controller is not functioning.
6. Demonstrate the start of the fire pump engine using each battery set separately.
7. Demonstrate that the fire pump engine alternator operates while the engine is running.
8. Demonstrate that any customer supplied battery charging systems operate when the engine is not running.
9. Demonstrate engine start-up, operation, and shutdown of the engine with each of the redundant ECM.
10. Check that engine fault codes are not being set during normal operations.

5.10.1 Integrated Acceptance Testing

The following tests outline integrated acceptance testing.

1. Demonstrate the start-up, operation, and shutdown of the fire pump engine in response to operations of the customer-installed fire pump controller. Perform this testing with the testing of the fire pump controller.
2. Demonstrate that the fire pump controller provides design indications and/or alarms for simulated engine oil pressure, water temperature, and overspeed faults.
3. Demonstrate the actual operation of the crank terminate output from the overspeed switch.
4. Participate in any flushing, pressure testing, flow testing, or capacity testing required for the fire protection system.
5. Complete the Cummins Fire Power Start-Up Inspection (SUI) Checklist. This is available on the Cummins Fire Power web site www.CumminsFirePower.com).
6. When these items have been demonstrated, contact operating personnel responsible for fire protection system that engine is ready for service.



Section 6 - Maintenance

6.1 Introduction

Before performing maintenance procedures, read and understand the Safety Section of this manual. Improper performance or lack of critical information could result in personal injury or equipment damage.

Cummins encourages our customers to perform maintenance and repairs whenever necessary. However, servicing complex components within the normal warranty period may void the Cummins warranty and any specified warranty extended by the manufacturer of OEM products.

Cummins recommends that the engine be maintained according to the Maintenance Schedule in this Section.

Maintenance procedures should be performed by skilled technicians, who are familiar with the equipment, local regulations and service procedures for fire pump engine and pump systems. Improper maintenance can damage the engine, the fire pump or cause severe personal injury.

IMPORTANT: *If your engine is equipped with a component or accessory not manufactured by Cummins Inc, refer to the component manufacturer's Vendor supplied literature for specific maintenance recommendations.*

6.2 Engine Operation Report

The engine must be maintained in top mechanical condition if the operator is to get optimum satisfaction from its use. The maintenance department needs daily running reports from the operator to make necessary adjustments in the time allocated.

The weekly running report also helps to make provisions for more extensive maintenance, as the reports indicate the necessity.

Comparison and intelligent interpretation of the weekly report, along with a practical follow-up action, will eliminate most failures and emergency repairs. Report to the maintenance department any of the following conditions:

1. Low engine oil pressure.
2. Low power.
3. Power increases or engine surge.
4. Erratic or no speed control or frequent shut-downs.
5. Any warning lamps flashing or staying illuminated.
6. Abnormal water or oil temperature.
7. Unusual engine noise.
8. Excessive smoke.
9. Excessive use of coolant, fuel, or engine oil.
10. Any fuel, water-cooling loop, engine coolant, fuel or engine oil, leaks.
11. Loose or damaged parts.
12. Worn or damaged belts.

Maintenance Chart

Task	Period	Page
6.3 Weekly Maintenance	Weekly (40-60 Hrs)	6-4
6.3.1 General Walk Around Inspection	Weekly (40-60 Hrs)	6-4
6.3.2 Air Filter and Piping	Weekly (40-60 Hrs)	6-4
6.3.3 Cooling System	Weekly (40-60 Hrs)	6-4
6.3.4 Engine Oil System	Weekly (40-60 Hrs)	6-5
6.3.5 Fuel System Inspections	Weekly (40-60 Hrs)	6-6
6.3.6 Engine Exhaust System	Weekly (40-60 Hrs)	6-7
6.3.7 Electrical Supply and Controls	Weekly (40-60 Hrs)	6-7
6.3.8 Crankcase Breather	Weekly (40-60 Hrs)	6-7
6.3.9 Clean Raw Water Strainers (optional raw water manifold)	Weekly (40-60 Hrs)	6-7
6.3.10 Check Battery Condition	Weekly (40-60 Hrs)	6-8
6.3.11 Engine Run Testing	Weekly (40-60 Hrs)	6-9
6.3.12 Engine Heater	Weekly (40-60 Hrs)	6-9
6.3.13 Check Antifreeze	Weekly (40-60 Hrs)	6-9
6.3.14 Air Cleaner Service Indicator	Weekly (40-60 Hrs)	6-10
6.4 Annual Maintenance	Annual (1000 Hrs)	6-10
6.4.1 Electrical Components	Annual (1000 Hrs)	6-10
6.4.2 Turbocharger Mounting Nuts	Annual (1000 Hrs)	6-11
6.4.3 Engine Mounting Bolts	Annual (1000 Hrs)	6-11
6.4.4 Inspect Fuel Pump and Filters	Annual (1000 Hrs)	6-12
6.4.5 Engine Oil and Oil Filter Change	Annual (1000 Hrs)	6-12
6.4.6 Change Fuel Filters	Annual (1000 Hrs)	6-14
6.4.7 Output Shaft Lubrication	Annual (1000 Hrs)	6-14
6.4.8 Engine Operation Checks	Annual (1000 Hrs)	6-15
6.4.8.1 Crank Termination Set Point	Annual (1000 Hrs)	6-15
6.4.8.2 Engine Speed Calibration	Annual (1000 Hrs)	6-16
6.4.8.3 Overspeed Set Point Adjustment	Annual (1000 Hrs)	6-16
6.4.9 Coolant Pump/Alternator Belt Inspection	Annual (1000 Hrs)	6-17
6.4.10 Coolant Pump/Alternator Belt Tension	Annual (1000 Hrs)	6-18
6.4.11 Heat Exchanger Pressure Test	Annual (1000 Hrs)	6-18
6.4.12 Turbocharger Inspection	Annual (1000 Hrs)	6-18
6.5 Every 2 Years or 2000 Hours	2 Years (2000 Hrs)	6-19
6.5.1 Water Pump Inspection	2 Years (2000 Hrs)	6-19
6.5.2 Drain and Flush Cooling System	2 Years (2000 Hrs)	6-19
6.6 Every 4 Years or 5000 Hours	4 Years (5000 Hrs)	6-21
6.6.1 Coolant Thermostat Removal/Installation	4 Years (5000 Hrs)	6-21
6.6.2 Coolant Pump/Alternator Belt Replacement	4 Years (5000 Hrs)	6-22
6.6.3 Charge Air Cooler (CAC) Heat Exchanger	4 Years (5000 Hrs)	6-23

NOTE: All maintenance and inspections intervals are accumulative. When performing annual maintenance, also perform maintenance listed under daily, weekly, monthly, and 3 month intervals.

Maintenance Record Form

[illegible]

6.3 Weekly Maintenance

When the engine is running, to be alert for mechanical problems that could create unsafe or hazardous conditions.

6.3.1 General Walk Around Inspection

The following areas should be inspected weekly to maintain safe and reliable operation.

1. Check fluid levels, oil pressure and coolant temperatures frequently. Most engine problems give an early warning.
 - a. Look and listen for changes in engine performance, sound, or appearance that will indicate that service or repair is needed. Be alert for misfires, vibration, excessive exhaust smoke, loss of power, or increases in oil or fuel consumption.
 - b. Check the engine appearance for excessive heat, wiring short circuits, excessive end-play, vibrations, excessive wear, excessive abrasion, damaged electrical wiring or loose electrical wiring.
 - c. Check the engine for odors of diesel fuel, burning rubber, electrical system failure, exhaust fumes or smoke.



WARNING

Engine fuel is highly flammable and represents an extreme hazard for fire or explosion when exposed to electric spark or open flame. Clean up spilled fuel immediately. Keep sources of electric spark or open flame away from a fuel source.

6.3.2 Air Filter and Piping

1. The frequency of cleaning or replacing the air cleaner filter element is determined by the conditions in which the engine operates. Refer to [Figure 6-1](#). Visually inspect the air intake filter and piping daily for blockage, damage to piping, loose clamps, or punctures that can allow debris to enter the engine. Refer to [Figure 6-1](#).
 - a. Some serviceable filter elements can be cleaned and reused if not damaged.

NOTE: Cummins recommends using Air Cleaner Element CFP p/n 9606 for Models CFP5E and CFP7E.

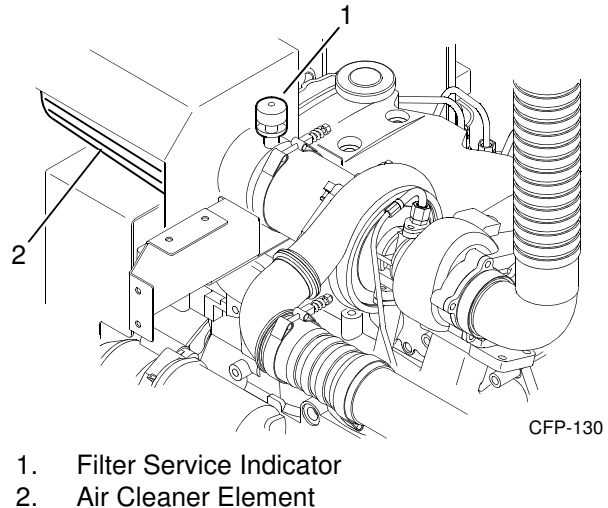


Figure 6-1 Air Intake Filter

- b. Check that the filter service indicator has not popped up, indicating a filter blockage.
 - c. Check for corrosion under the clamps and hoses of the intake system piping. Corrosion can allow corrosive products and dirt to enter the intake system. Disassemble and clean as required.
2. Replace damaged air filter or hoses, and tighten loose clamps, as necessary, to prevent the air system from leaking. Torque hose clamps to 8 N-m (72 in-lb).

6.3.3 Cooling System



CAUTION


Do not remove a pressure cap from a hot engine. Shut down the engine and wait until the coolant temperature is below 50° C (120° F) before removing the pressure cap. Heated coolant spray or steam can cause severe personal injury.



CAUTION

Never use a sealing additive to stop leaks in the cooling system. This can result in cooling system plugging and inadequate coolant flow, causing the engine to overheat.

1. Inspect the raw water piping, coolant heat exchanger tanks, charge air cooling system, engine coolant hoses and hose clamps for loose fittings, leaks, holes, damage and corrosion.

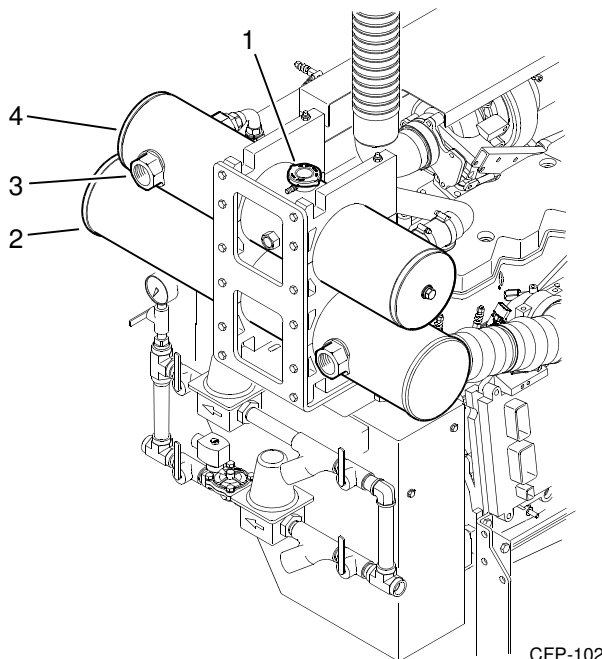

1. Coolant Fill Cap
2. Charge Air Cooler (CAC) Heat Exchanger
3. Raw Water Discharge Connection
4. Coolant Heat Exchanger/Expansion Tank

Figure 6-2 Heat Exchanger Tanks

- a. Tighten the hose clamps as necessary.
- b. Check for cracks, holes or other damage. Repair or replace as necessary.
2. With the coolant expansion tank at ambient temperature, press down, unscrew and remove the pressure cap. Refer to [Figure 6-2](#).
 - a. Ensure that the coolant level is visible in the coolant level sight gauge.
 - b. Add coolant as required. **DO NOT OVER-FILL!**

NOTE: Supplemental engine coolant should be a mixture of 50% ethylene glycol antifreeze and 50% water to avoid engine damage. Refer to Antifreeze information in [Section 6.5.2](#).

NOTE: Cummins recommends using Fleetguard® ES Compleat™ Ethylene-Glycol (EG) or Fleetguard® Propylene-Glycol (PG) Plus™ Antifreeze/Coolants. Both products are available in concentrated or pre-mixed formulations.

3. Drain a small amount of coolant from the return line and inspect the coolant for excessive rust or particulate matter. Change the coolant more frequently if particles are present.

CAUTION

Do not mix coolant brands or chemical solutions, as this could damage the cooling system. Keep a record of the coolant concentration and manufacturer with the engine maintenance records.

4. Check for soft, overly pliant hoses, oxidation, and loose hose clamps. Torque hose clamps to 8 N-m (72 in-lb). Replace damaged hoses and clamps as required.
5. Check the heat exchanger for leaks, damage, and dirt buildup. Clean and repair as required.

6.3.4 Engine Oil System


WARNING

Perform the specific checks in this section only after the engine is fully stopped. Unless tests require engine operation, disconnect the battery leads from the batteries (negative terminal first). Contact with exposed or moving components can cause severe personal injury.

CAUTION

Never operate the engine with oil level below the L (low) mark or above the H (high) mark. Poor engine performance or engine damage can occur.

1. For accurate dipstick readings, shut off the engine and wait approximately 10 minutes to allow the oil in the upper portions of the engine to drain back into the crankcase.
2. Check the oil level at the engine dipstick. Refer to [Figure 6-3](#).
 - a. If the oil level is excessively high, refer to Oil Level Rises in [Section 7 - Troubleshooting](#).
 - b. If the oil level is greater than the high mark (H), drain excess oil and recheck the level.

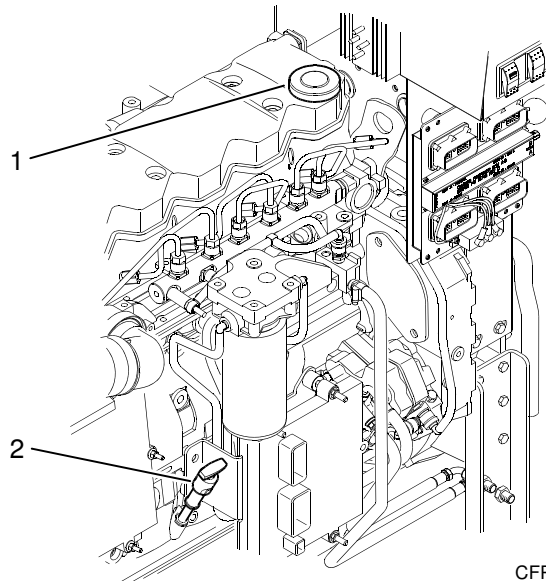

CFP-109

1. Engine Oil Fill Port
2. Engine Oil Level Dipstick

Figure 6-3 Oil Level Dipstick and Oil Fill Port

- c. If the oil levels are consistently below normal after a fill, check for leaks, loose or damaged gaskets, or oil in the water system. Troubleshoot per Engine Oil Consumption Excessive in [Section 7 - Troubleshooting](#).
3. If the oil level is below the low mark (L), add the equivalent type oil.

Keep the oil level as near as possible to the “full” mark on the dipstick by adding the same quality and brand of oil.


NOTE: Cummins recommends using Valvoline® Premium Blue S.A.E. 15W-40 Multi-viscosity Engine Oil or equivalent. Refer to the oil change interval and the procedures in [Section 6.4.5 Engine Oil and Oil Filter Change](#).

6.3.5 Fuel System Inspections



WARNING

Engine fuel is highly flammable and represents an extreme hazard for fire or explosion when exposed to electrical sparks or open flame. Clean up spilled fuel immediately. Keep sources of electrical spark or open flame away from a fuel source.

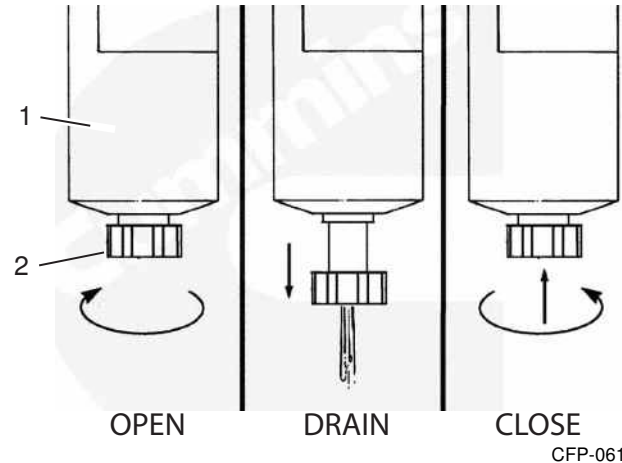

1. Fuel Pre-Filter/Water Separator Canister
2. Drain Valve

Figure 6-4 Engine Fuel Pre-Filter/Water Separator

1. Shut off the engine.
2. Inspect the fuel supply line, return line, primary filter, pre-filter/water separator and fittings for cracks or abrasions.
 - a. Ensure the lines are not rubbing against anything that could damage the fuel system hoses. Repair any leaks or alter line routing to eliminate wear immediately.
 - b. Relieve fuel line pressure by carefully loosening the fuel inlet line.
3. Drain the Fuel Pre-Filter/Water Separator.

NOTE: A Water Separator must be integrated into the fuel delivery system of the fire pump engine. A Fuel Filter/Water Separator may be installed directly on the unit in the primary fuel filter location, or a separate Fuel Pre-Filter/Water Separator may be installed near the fire pump engine assembly.

- a. Open the drain valve: Turn the valve counter-clockwise approximately 3-1/2 turns until the valve drops down 25.4 mm (1 in.) and draining occurs. Drain the Fuel Pre-Filter/Water Separator until clear fuel is visible. Refer to [Figure 6-4](#).
- b. Close the drain valve: Lift the valve and turn it clockwise until it is hand-tight. Do not over-tighten the valve. Overtightening can damage the threads.
- c. Dispose of the contaminated fuel in accordance with local environmental regulations.

NOTE: Cummins recommends using Fleetguard (Cummins) fuel filter FF5612 or equivalent in the primary fuel filter location, and Fleetguard (Cummins) fuel filter/water separator FS19732 or equivalent in the pre-filter location.

6.3.6 Engine Exhaust System

With the engine operating, inspect the entire exhaust system including the exhaust manifold, exhaust flex pipe, muffler and piping.


Check for leaks at all connections, welds, gaskets and joints, and make sure that the exhaust pipes are not heating surrounding areas excessively. Repair any leaks immediately.

6.3.7 Electrical Supply and Controls

Check the terminals on the starting batteries for clean and tight connections. Loose or corroded connections create resistance which can hinder starting.


6.3.8 Crankcase Breather

1. Inspect the crankcase breather for a worn or damaged hose, sludge, blockage, or dirt buildup. Refer to [Figure 6-5](#).
2. Clean the breather if obstructed or blocked. Replace worn or damaged breather as required.

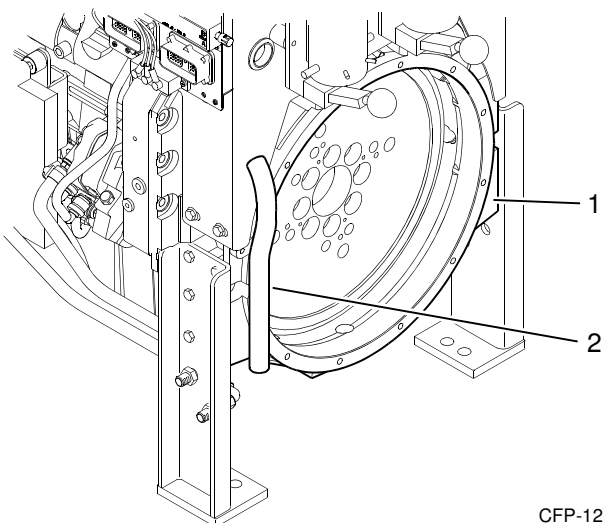

1. Flywheel Housing
2. Crankcase Breather

Figure 6-5 Crankcase Breather

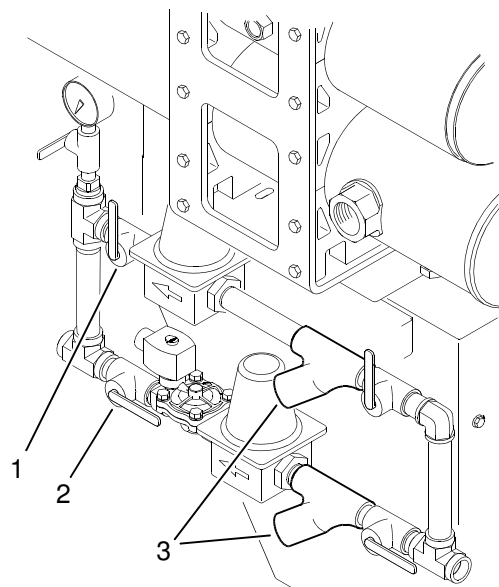

1. Bypass Water Line
2. Normal Water Line
3. Raw Water Wye Strainers

Figure 6-6 Raw Water Wye Strainers (optional raw water manifold)


6.3.9 Clean Raw Water Strainers (optional raw water manifold)

The (2) raw water wye strainers (one on the normal line and 1 on the bypass line) should be cleaned weekly, to remove sediment. Refer to [Figure 6-6](#).

To clean the normal line wye strainer, ensure that the normal line valves are closed and the bypass line valves are open.

To clean the bypass line wye strainer, ensure that the bypass line valves are closed and the normal line valves are open.

1. For each raw water strainer, remove the plug.
2. Inspect and remove any debris.
3. Install the strainer plugs.
4. When finished, open the normal line valves and close the bypass line valves

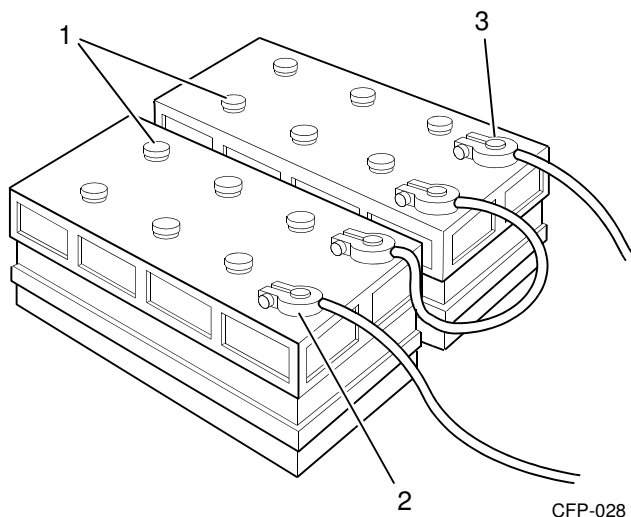

1. Battery Cell Covers
2. Negative Battery Terminal
3. Positive Battery Terminal

Figure 6-7 24 VDC Battery Connection (optional)

6.3.10 Check Battery Condition

Weak or undercharged starting batteries are the most common cause of standby power system failures. Even when kept fully charged and maintained, lead-acid starting batteries are subject to deterioration over time and must be periodically replaced when they no longer hold a proper charge.

Only a regular schedule of inspection and testing under load can prevent engine starting problems. Use a manual battery load tester to verify the condition of each starting battery. Inspect the condition of the batteries, the electrical cables and the engine ground lug. Refer to [Figure 6-7](#).

CAUTION

Batteries can emit explosive gases during charging. To reduce the possibility of personal injury, always ventilate the battery compartment before servicing the batteries.

CAUTION

To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

1. Keep the batteries clean by wiping them with a damp cloth whenever dirt appears excessive. Refer to [Figure 6-7](#).

2. Use a battery hydrometer to check the specific gravity of the electrolyte in each battery cell. A fully charged battery will have a specific gravity of 1.260. Charge the battery if the specific gravity reading is below 1.215.
3. Check battery wiring and cable connections for loose, corroded, worn or damaged cables. Include both connectors at the alternator, battery connections and engine grounding lug (near starter motor).
 - a. If the battery cables are corroded, remove the battery cable clamps, starting with the (-) negative battery cable.
 - b. Use fine emery cloth or a wire brush to clean the cable clamps and battery cables. The metal should be shiny.
 - c. Wash the battery terminals with a solution of baking soda and water (1/4 lb. baking soda to one quart of water).
 - d. Be careful to prevent the solution from entering the battery cells, and flush the batteries with clean water when done.
 - e. After cleaning the connections, coat the terminals with a light application of petroleum jelly.
 - f. Reinstall and tighten the cable clamps.

WARNING

Battery electrolyte (sulfuric acid) is highly caustic and can burn clothing, the skin or cause blindness. Wear protective clothing, impervious neoprene gloves, safety goggles or full-face shield, when working with the batteries.

4. Check the electrolyte level in the batteries monthly. If low, fill the battery cells to the bottom of the filler neck with distilled water.
5. Check for continuity between terminals using a digital multimeter or other test equipment. Check also the insulation resistance to ground. Correct any electrical faults.

Continuity should be in the single digit ohms or less. Resistance to ground should be in the mega-ohm range. Refer to the Vendor supplied literature for additional information.

6.3.11 Engine Run Testing

Fire pump engines on continuous standby must be able to go from a cold start to being fully-operational in a matter of seconds. This can impose a severe burden on engine parts. The engine normally starts automatically in an emergency situation, upon receipt of the start command from the fire pump controller.

Regular operation keeps engine parts lubricated, prevents oxidation of electrical contacts, uses up fuel before it deteriorates, and, in general, helps provide reliable engine starting.

1. Start at least once a week for a minimum of 30 minutes with as much load as possible. Periods of no-load operation should be held to a minimum, because unburned fuel tends to accumulate in the exhaust system.
2. Refer to the instructions in [Section 5 - Operation](#).
3. Check that the engine starts and operates at the recommended fire pump speed specification.
4. Engine oil pressure must be indicated on the gauge within 15 seconds after starting.
5. Run the engine no less than 30 minutes to attain normal running temperature. Observe that the engine is operating at proper operating speed.
6. Check unusual engine noise. Listen for any unusual engine noise which can indicate that service is required.
7. Ensure oil pressure is greater than 10 PSI.
8. Check coolant temperature between 70° C (158° F) and 107° C (225° F).
9. Check that both battery voltmeters indicate 12 VDC for standard or 24 VDC for optional operating systems.
10. Check that the inlet air restriction indicator has not popped-up; indicating an air filter blockage. Replace the air filter as required.
11. End test run by pressing and holding the Over-speed RESET/STOP Switch until the engine stops.

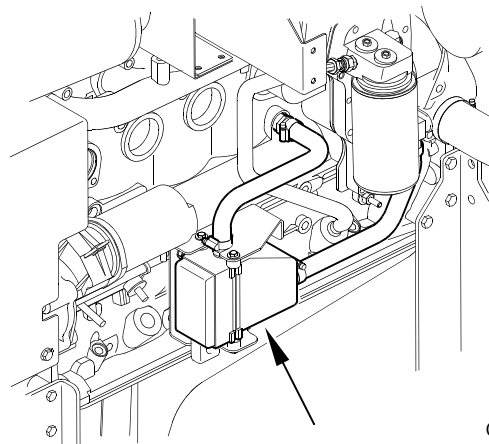


Figure 6-8 Engine Heater

6.3.12 Engine Heater

NOTE: Perform this inspection procedure 24 hours after shutting off the engine.

The engine coolant heater must maintain an engine coolant temperature of 49° C (120° F) or above. The engine block must be warm to the touch in the water jacket areas. Refer to [Figure 6-8](#).

If the heater does not appear to be working correctly, contact a Cummins Authorized Repair Location.

6.3.13 Check Antifreeze

Antifreeze is essential in any climate. It broadens the operating temperature range by lowering the coolant freezing point and raising its boiling point. The corrosion inhibitors also protect the cooling system from corrosion and provide longer component life.



CAUTION

Coolant is toxic. Avoid prolonged and repeated contact with used antifreeze - wash skin thoroughly after contact. Prolonged, repeated contact can cause skin disorders. Dispose of waste antifreeze in accordance with local environmental regulations.



CAUTION

Over concentration of antifreeze or use of high-silicate antifreeze can damage the engine. Do not use more than 50% antifreeze in the mixture unless additional freeze protection is required. Antifreeze at 68% concentration provides the maximum freeze protection, and must never be exceeded under any condition. Antifreeze protection decreases above 68%.

1. Check the antifreeze concentration using a refractometer (such as Fleetguard® Part No. CC2800).

IMPORTANT: *Floating-ball type density testers or hydrometers are not accurate enough for use with heavy-duty diesel cooling systems.*

- a. At least twice per year.
- b. At every subsequent oil drain interval, if the concentration is above 3 units.
- c. Whenever coolant is added to the cooling system between filter changes.

6.3.14 Air Cleaner Service Indicator

Turbocharged engines must be operated at rated RPM and full load to check maximum intake air restriction. Replace the air filter per the manufacturer's recommendation as required.

CAUTION

Never operate the engine without an air cleaner. Intake air must be filtered to prevent dirt and debris from entering the engine and causing premature wear. Dirt or foreign objects could cause engine damage. Contact with exposed or moving components can cause personal injury.


IMPORTANT: Maximum intake air restriction is 762 mm H₂O (25.0 in H₂O) for turbocharged engines.

NOTE: Follow the manufacturer's instructions when cleaning or replacing the air cleaner element. Do not remove the felt washer from the indicator. The felt washer absorbs moisture.

1. The air cleaner service indicator is actuated when excessive air restriction has occurred at the air cleaner. Refer to [Figure 6-9](#).
 - a. If the red indicator flag is at the raised position in the window, clean or replace the air filter per the manufacturer's recommendation as required.

NOTE: Cummins recommends using Air Cleaner Element CFP p/n 9606 for Models CFP5E and CFP7E.

- b. After the air cleaner has been serviced, push the flag IN, to reset the service indicator.

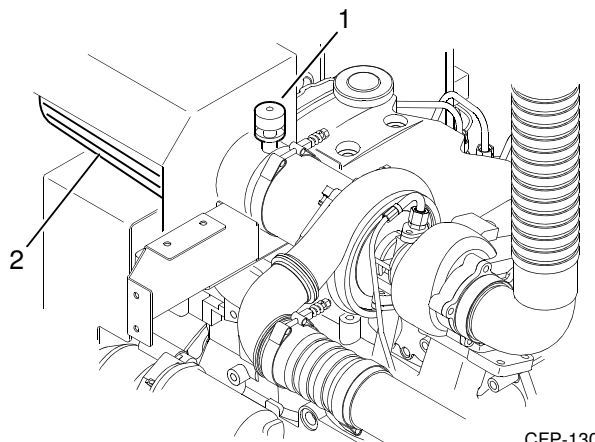

CFP-130

1. Air Cleaner Service Indicator
2. Air Filter Element

Figure 6-9 Air Cleaner Service Indicator

6.4 Annual Maintenance

All checks or inspections listed under previous maintenance intervals must also be performed at this time, in addition to those listed under this maintenance interval.

6.4.1 Electrical Components


CAUTION

AVOID SERVICING complex components such as: ECM controllers, printed circuit boards, and, programmable controllers, not specifically authorized by the manufacturer. Contact the local Cummins Authorized Repair Location before performing any extensive maintenance.

CAUTION

To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

1. Remove the battery terminal cables, starting with the (-) negative cable first.
2. Inspect the electrical wiring harness, terminal panels, and electrical plug-ins, for secure, clean electrical contacts, worn or damaged insulation, burnt wires, broken wires and loose connections. Refer to [Figure 6-10](#).
 - a. Clean and tighten any loose electrical connections.

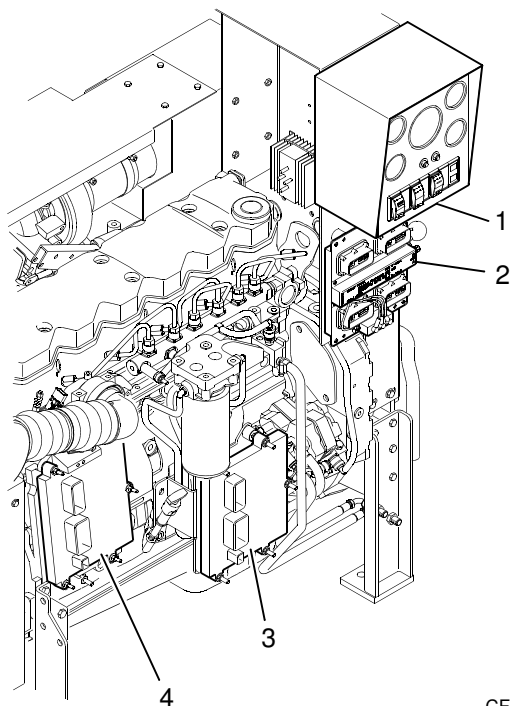

CFP-132

1. Operator's Control Panel
2. ECM Selector Panel and Switch
3. ECM B
4. ECM A

Figure 6-10 Electrical Control Modules

- b. Replace worn, damaged, burnt or poorly insulated wiring immediately.
- c. Refer to the OEM Vendor supplied literature for recommended maintenance procedures.

IMPORTANT: Solid state or sealed electrical components have no user serviceable parts. Contact your local Cummins Authorized Repair Location for additional information.


- d. Repair or replace damaged components using recommended Recon® or Cummins service parts only. Refer to [Section 8 - Component Parts and Assemblies](#) or contact a Cummins Authorized Repair Location.
3. Inspect electrical terminal connectors on the instrument panel for burnt, loose, damaged or broken contacts.

4. Inspect the function of all gauges, voltmeters, switches, warning lamps and circuit breakers. Replace panel components, breakers and warning lamps as required.

6.4.2 Turbocharger Mounting Nuts

Check the turbocharger mounting nuts. Refer to [Figure 6-11](#).

Torque the mounting nuts to 65 N-m (50 ft-lb).

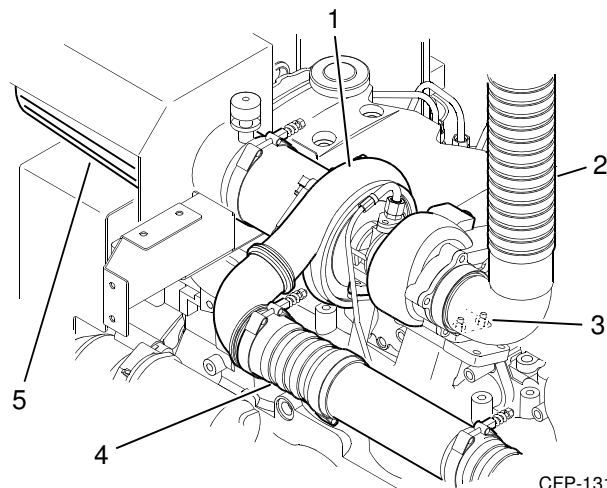

CFP-131

1. Turbocharger
2. Exhaust Flex Connection
3. Turbocharger Mounting Nuts (4)
4. Air Hose to Charge Air Cooler
5. Intake Air Cleaner

Figure 6-11 Turbocharger


6.4.3 Engine Mounting Bolts



CAUTION

Loose engine mount bolts or damaged brackets can cause engine misalignment or excessive vibration. These conditions can cause engine or pump damage.

1. Inspect all engine mounts for cracks or loose bolts. Refer to [Figure 6-12](#).
2. Check the torque on the engine mounting bolts. Torque the support bracket to engine mounting cap screws to 47 N-m (35 ft-lb).

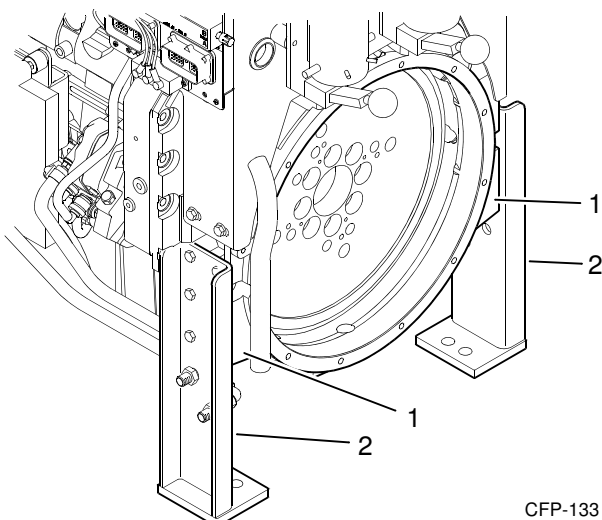


CFP-133

1. Flywheel Housing
2. Engine Mounting Bracket

Figure 6-12 Engine Mounting Bracket

6.4.4 Inspect Fuel Pump and Filters

1. Inspect the fuel injection pump mounting nuts, including the support bracket, for loose or damaged hardware. Refer to [Figure 6-13](#).
2. Inspect the fuel line hoses and fuel filters for wear, damage, loose fittings, and leaks. Repair or replace damaged hoses and filters as required.

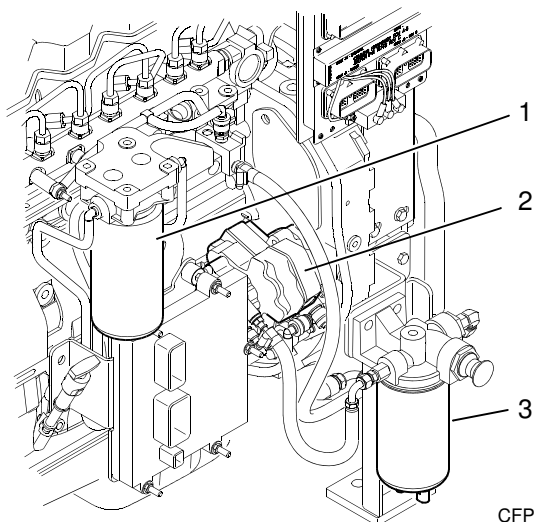

CFP-112

1. Primary Fuel Filter
2. High Pressure Fuel Pump
3. Fuel Pre-Filter/Water Separator

Figure 6-13 Fuel Pump and Filters

6.4.5 Engine Oil and Oil Filter Change

Engine oil becomes contaminated and essential oil additives are depleted with use. The amount of contamination is related to the total amount of fuel and oil consumed. Change the oil at least once annually.

NOTE: For composite oil pans, always use a new sealing washer on the oil drain plug. Hold the external locking nut in place while tightening the oil drain plug.

1. Change the oil and the oil filter to remove the contaminants suspended in the oil.

IMPORTANT: If the engine oil is drained from the oil pan to make an engine repair, new oil must be used. Do not use oil that has been drained from the oil pan.


NOTE: Cummins does not recommend exceeding 600 hours on oil change intervals.



WARNING

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin. Some state and federal agencies have determined that used engine oil can be carcinogenic. Prolonged, repeated contact can cause skin disorders or other bodily injury. Wash thoroughly after contact. Avoid inhalation of vapors, and ingestion of used engine oil. Dispose of the oil in accordance with local environmental regulations.

2. Operate the engine until the water temperature reaches 70° C (158° F). Shut the engine off.
3. Place an appropriate container with a 5 gallon (19 L) minimum capacity under the oil pan drain plug. Refer to [Figure 6-14](#).
4. Remove the oil drain plug and drain the oil immediately to make sure all the oil and suspended contaminants are removed from the engine.
5. Remove the oil filter. Refer to [Figure 6-14](#).
 - a. Clean the area around the engine oil filter canister.
 - b. Use a filter wrench to remove the filter.

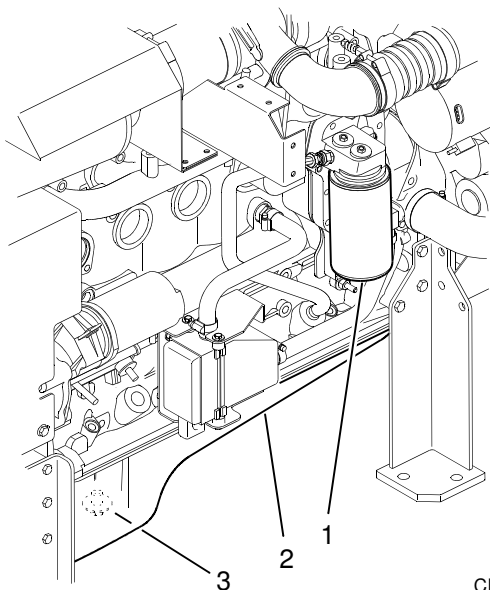

CFP-135

1. Oil Filter
2. Oil Pan
3. Oil Drain Plug

Figure 6-14 Oil Pan Drain Plug and Oil Filter


- c. Remove and discard the O-ring seal if it has remained attached to the mounting flange. Clean the filter, mounting flange with a clean lint-free cloth.
- d. Apply a light film of 15W-40 oil to the replacement filter gasket before installing the filter.
6. Fill the oil filter with a high-quality 15W-40 multi-viscosity engine oil, such as Cummins Premium Blue®, or its equivalent.
7. Center the filter on the threaded mounting nipple. Screw the filter canister onto the mounting flange until the gasket is snug against the mounting flange. Tighten the filter an additional 1/4 turn.

CAUTION

Mechanical over tightening can distort the threads or damage the filter element seal.

NOTE: Cummins recommends using Fleetguard Lube Oil Filter LF3970.

8. Check and clean the oil pan drain plug threads and sealing surface. Install the oil pan drain plug. Torque the plug to 50 N-m (37 ft-lb).

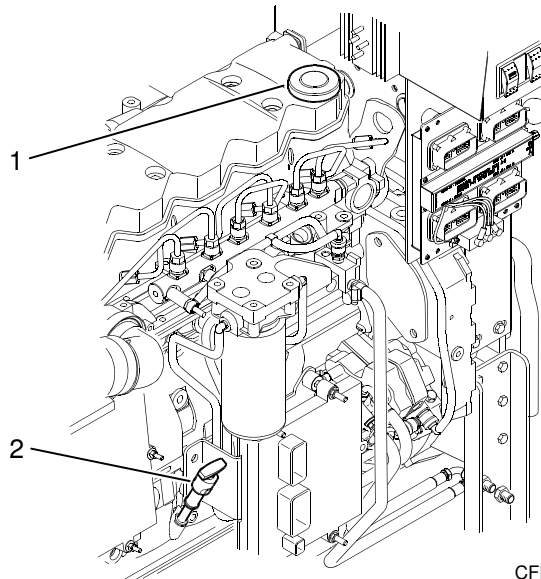

CFP-109

1. Oil Fill Port
2. Oil Level Dipstick

Figure 6-15 Oil Level Dipstick and Oil Fill Port

9. Add a high-quality 15W-40 multi-viscosity engine oil, such as Cummins Premium Blue®, or its equivalent.
10. Fill the engine to the proper level with clean oil at the fill port. Refer to [Figure 6-15](#).

The CFP5E engine models have a 3.2 gallon (12 L) oil capacity.

The CFP7E engine models have a 4.0 gallon (15.1 L) oil capacity.

NOTE: Capacities assume standard pan. Total system assumes standard pan plus filter.

CAUTION

If no oil pressure is noted within 15 seconds after the engine is started, shut down the engine to reduce the possibility of internal damage.

11. Stop the engine.
12. Wait approximately 15 minutes to let the oil drain from the upper parts of the engine.
13. Check the oil level again. Add oil as necessary to bring the oil level to the H (high) mark on the dipstick. Refer to [Figure 6-15](#).

6.4.6 Change Fuel Filters


WARNING

Engine fuel is highly flammable and represents an extreme hazard for fire or explosion when exposed to electrical sparks or open flame. Clean up spilled fuel immediately. Keep sources of electrical spark or open flame away from a fuel source.

WARNING

Do not open the fuel filter/water separator drain valve or dismantle the fuel lines on the high-pressure fuel system with the engine running. High pressure fuel spray from and operating engine can cause serious personal injury, fire hazard or fatality.

1. Shut off the engine.
2. Close any OEM fuel valves (if equipped) to prevent fuel from draining or siphoning.
3. Clean the area around the fuel filter head.
4. Remove the spent filter canister using a filter wrench. Refer to [Figure 6-16](#).

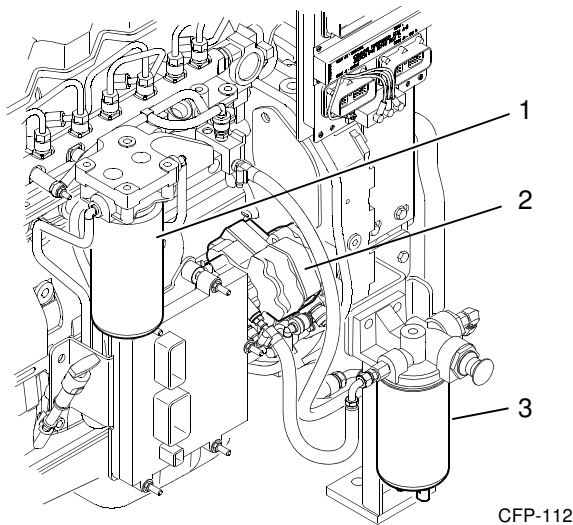

1. Primary Fuel Filter
2. High Pressure Fuel Pump
3. Fuel Pre-Filter/Water Separator

Figure 6-16 Fuel Filter and Pre-Filter/Separator

5. Clean the filter mounting head surface of sludge buildup and foreign particles. Ensure mating gasket surfaces are clean.
6. Lubricate the gasket seal with clean S.A.E. 15W-40 engine oil.

NOTE: Cummins recommends using Fleetguard (Cummins) fuel filter FF5612 or equivalent in the primary fuel filter location, and Fleetguard (Cummins) fuel filter/water separator FS19732 or equivalent in the pre-filter location.

7. Center the filter ring on the threaded mounting nipple. Screw the filter canister onto the mounting flange until the gasket is snug against the mounting flange. Then tighten an additional 1/4 turn.

CAUTION

Mechanical over tightening can distort the threads or damage the filter element seal.

8. Open the fuel supply valves (optional).
9. Press either the CRANK BATT A or CRANK BATT B Switch to start the engine.
10. Depress the selector switch for up to 15 seconds or until the engine starts. Repeat up to three times, if necessary.

CAUTION

To prevent damage to the starter, do not engage the starting motor more than 15 seconds. Wait 15 seconds between each start attempt.

IMPORTANT: If the engine does not start after three attempts, check the fuel supply system. Absence of blue or white exhaust smoke during cranking indicates no fuel is being delivered.

NOTE: Engines used in fire pumps or standby service, are expected to immediately ramp accelerate from crank to full load.

6.4.7 Output Shaft Lubrication

It is recommended that proper lubrication to drive shafts and output shafts is to be completed on a regular schedule.

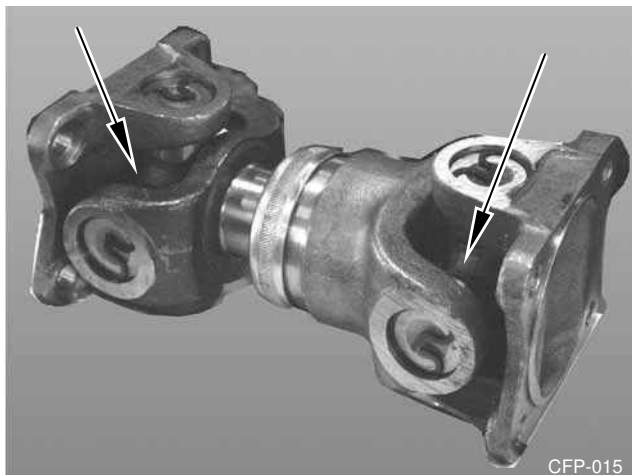


Figure 6-17 Drive Coupling Grease Fittings

1. Remove the output shaft guards.
2. Wipe the grease fittings and grease gun nozzle with a clean cloth to avoid contamination.
3. Add grease to the universal joint grease fittings. Refer to [Figure 6-17](#).

NOTE: Cummins, Inc recommends using a good quality semi-synthetic, molybdenum-fortified NLGI #2 lithium complex grease which protects from -54° to 400° F such as Valvoline Durablend®.

4. Wipe excess grease from the grease fittings.



WARNING

Before equipment operation, ALL guards, covers and protective devices MUST BE in place and securely fastened. Serious personal injury could result from contact with exposed or moving components.

6.4.8 Engine Operation Checks

The following service procedures ensure that the engine starts and operates properly under normal conditions.

6.4.8.1 Crank Termination Set Point


The Speedswitch Crank Termination Set Point is factory set at 650 rpm, and should not be changed from this value. Refer to [Figure 6-18](#).

If the crank termination set point must be set, proceed as follows:

1. Open the engine control panel and remove the crank terminate potentiometer cover.

There will be 2 potentiometers visible. The Crank Terminate Potentiometer is the upper one.

2. This is a 30-turn potentiometer. The Crank Terminate Potentiometer must be set to 14 turns clockwise.
3. To ensure that the potentiometer is set at 0 turns: Rotate the potentiometer 30 turns counterclockwise. The potentiometer will not be damaged by turning it past its zero-point.
4. After setting the Crank Terminate Potentiometer at 0 turns, turn the potentiometer 14 turns clockwise.

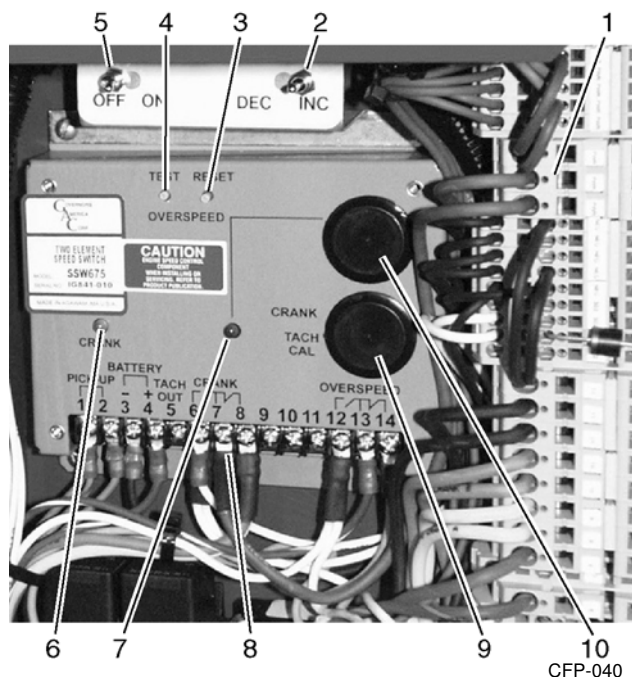

1. Spring Clamp Terminal Blocks
2. Speed Increase/Decrease Toggle Switch
3. RESET Button
4. TEST Button
5. Diagnostic ON/OFF Toggle Switch
6. CRANK Termination or RUN Signal Indicator LED (Factory Use Only)
7. Overspeed Indicator LED
8. Pre-wired Terminals
9. Crank Terminate Potentiometer Cover
10. Overspeed Potentiometer Cover

Figure 6-18 Engine Overspeed Control Module

-
5. Replace the cover. The Crank Terminate Potentiometer is now set at approximately 650 rpm.

6.4.8.2 Engine Speed Calibration

If the speed does not match the Engine RPM shown on the Factory Settings Plate, use the following method to set the engine speed using the INC/DEC Speed Switch on the engine speed controller panel.

1. Remove the cap screw from the operator's instrument face plate, allowing the face plate to gently drop down supported by the hinge.
2. Start the engine using the local start method.
3. Observe that the engine starts and accelerates to the speed set point listed on the Factory Settings Plate.
4. Monitor engine speed on the tachometer. Record the observed engine speed.

If the speed does not ramp up to the setting shown on the Factory Settings Plate, the engine operating speed set point must be calibrated.

5. Move the Engine Speed Toggle Switch to the required INC (increase) or DEC (decrease) pole position. Refer to [Figure 6-18](#).

NOTE: Each time the Speed INCREASE/DECREASE Toggle Switch is briefly moved to the minus (-) position, the idle speed is decreased by 10 RPM. When the switch is briefly moved to the plus (+) position, the idle speed is increased by 10 RPM. Holding the toggle switch in either the INC or DEC position ramps the engine speed in the selected direction.

- a. To increase the speed, move the double pole, return-to center, toggle switch to the INC position until the rated speed is reached. Refer to [Figure 6-18](#).
 - b. To decrease the speed, move the double pole, return-to center, toggle switch to the DEC position until the rated speed is reached.
6. Stop the engine.
 7. Start the engine.

8. Observe that the engine starts and accelerates to the rated speed set point.

9. The engine speed set point calibration is required for both the ECM A and ECM B sub-systems.
10. Repeat steps 2 through 8 while the ECM selector switch is set to ECM-B.
11. Close the panel and tighten the enclosure cap screw to secure the panel face.

IMPORTANT: *Never switch from ECM-A to ECM-B while the engine is running.*

6.4.8.3 Overspeed Set Point Adjustment

The Engine Overspeed Set Point was set by Cummins Fire Power during manufacturing and test procedures. It may be necessary to adjust the overspeed set point based on the actual fire pump application.

1. Open the engine instrument panel and remove the Overspeed Potentiometer Cover. Refer to [Figure 6-18](#).
2. Place the engine in the MANUAL position by switching the AUTO/MANUAL Mode Switch to the MANUAL position.

NOTE: *The Test Button reduces the actual overspeed set point by a value of 20%.*

3. Start the engine and adjust the engine speed to the system design pump speed. Refer to [Section 6.4.8.2 Engine Speed Calibration](#) for additional information.
4. Press and hold the test button. If the engine remains running, slowly turn the Over Speed Potentiometer counterclockwise until the engine stops. Remember to keep the test button depressed during this adjustment procedure. The speed switch is now set for the correct overspeed RPM.

NOTE: *Turning the potentiometer clockwise raises the set speed and counterclockwise lowers the set speed.*

5. Press the Reset button on the speed switch or front panel so the engine can be restarted.

IMPORTANT: *The final pump speed is typically set while the pump is flowing 150%.*

Alternate Overspeed Set Point Adjustment procedure (without the test button)

1. Remove the drive-shaft or stub-shaft coupling to prevent overspeeding the pump. Refer to appropriate driveline drawings in [Section 8 - Component Parts and Assemblies](#).
2. Open the engine instrument panel and remove the Overspeed Potentiometer Cover. Refer to [Figure 6-18](#).
3. Place the engine in MANUAL position by switching the AUTO/MANUAL Mode Switch to the MANUAL position.
4. Calculate the actual overspeed setting.
 - a. Determine required pump speed (example: 1760 RPM).
 - b. Calculate actual overspeed setting (example: $1760 \times 120\% = 2112$ RPM).
5. Start the engine and adjust the engine speed to the calculated overspeed. (2112 RPM in the example above). Refer to [Section 6.4.8.2 Engine Speed Calibration](#) for additional information.
6. If the engine remains running, slowly turn the Over Speed Potentiometer counterclockwise until the engine stops. The speed switch is now set for the correct overspeed RPM.

NOTE: Turning the potentiometer clockwise raises the set speed and counterclockwise lowers the set speed.

7. Press the Reset button on the speed switch or front panel so the engine can be restarted.
8. Readjust the engine speed to the proper pump speed (1760 RPM in the example above).
9. Reconnect the pump drive-shaft or stub-shaft coupling. Refer to appropriate driveline drawings in [Section 8 - Component Parts and Assemblies](#).

IMPORTANT: The final pump speed is typically set while the pump is flowing 150%.

6.4.9 Coolant Pump/Alternator Belt Inspection

For CFP5E/7E models, a single belt drives both the water pump and the alternator.

CAUTION


Belt damage can be caused by, incorrect tension, incorrect size or length, pulley misalignment, incorrect installation, severe operating environment, and oil or grease on the belt or pulley.

1. Place the AUTO/MANUAL Mode Switch in the MANUAL position.
2. Disconnect both batteries at their terminals. Remove (-) negative cable first. Install the (-) negative cable last.

CAUTION

Disconnect both batteries (negative cable first) before performing service on the Fire Pump Engine or on any of its controls.

3. Remove the belt guard bolts and the belt guard. Set aside for later installation. Refer to [Figure 6-19](#).

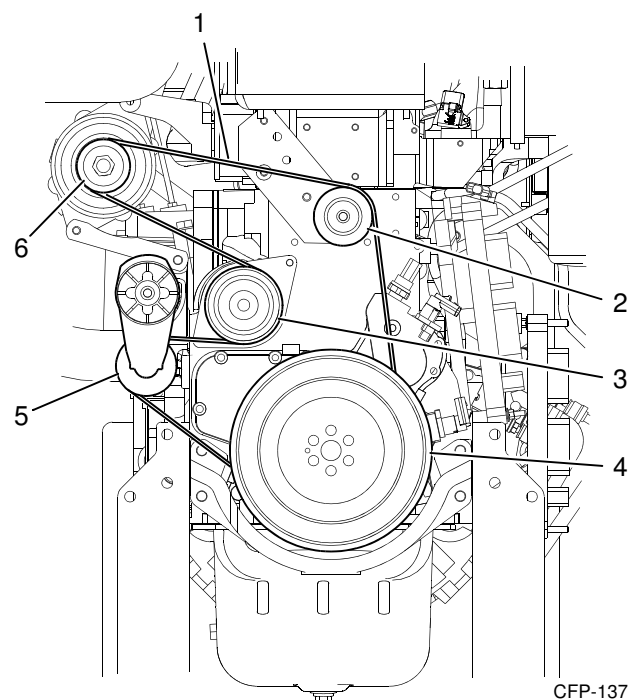

1. Drive Belt
2. Idler Pulley
3. Coolant Pump Pulley
4. Damper Pulley
5. Belt Tensioner
6. Alternator Pulley

Figure 6-19 Coolant Pump/Alternator Belt

4. Visually inspect the belt for frayed, worn, missing pieces or cracked belt surfaces. Check the belt for intersecting cracks. Refer to [Figure 6-19](#).

NOTE: *Transverse cracks (across the belt width) are acceptable. Longitudinal cracks (direction of belt length) that intersect with transverse cracks are not acceptable. Replace the belt if it is cracked, frayed or has pieces of material missing.*

5. If the belt condition is acceptable, check the belt tension.

NOTE: *Belts with glazed or shiny surfaces indicates belt slippage. Correctly installed and tensioned belts will show even pulley and belt wear.*

6.4.10 Coolant Pump/Alternator Belt Tension



CAUTION

Disconnect batteries (negative cable first) before performing service on the Fire Pump Engine or on any of its controls.

1. Check the drive belt tension. Refer to [Figure 6-19](#).
2. Use the Cummins belt tension gauge, Part No. 3822524, to accurately measure the drive belt tension.

NOTE: *For cogged drive belts, make sure the belt tension gauge is positioned so the center tensioning leg is positioned directly over a high point (hump) of a belt cog. Positioning the center leg elsewhere on a belt cog will result in incorrect measurement.*

- a. Measure the belt tension in the center span of the belt between the alternator and idler pulleys.
- b. Belt tension should be between 18 - 149 N-m (60-110 ft-lb).
3. The deflection method can also be used to measure drive belt tension.
 - a. Measure the belt tension in the center span of the belt between the alternator and idler pulleys.
 - b. Apply 110 N-m (25 ft-lb) of force on the belt.

- c. If belt deflection is more than one belt thickness per foot of pulley center-to-center distance, adjust the belt tension.

6.4.11 Heat Exchanger Pressure Test

NOTE: *This test is required if internal leakage in the heat exchanger is suspected. It may be performed prior to the removal from the engine.*

NOTE: *Use Teflon tape or other pipe sealant when installing the test setup in order to prevent leaks.*

1. Install a 1" NPT tubing adapter at the raw water outlet of the heat exchanger.
2. Install a pressure test setup with 700 kPa (100 psi) pressure gauge to the 3/4" tubing adapter raw water inlet on the heat exchanger.
3. Apply air pressure at 414 kPa (60 psig).
 - a. Isolate the pressure source and monitor the pressure gauge for 5 minutes.
 - b. There should be no change in pressure for the duration of the test.
4. After testing, release the pressure. Remove the tubing adapters, plug and the test equipment.
5. If leakage is detected, the heat exchanger must be replaced.


6.4.12 Turbocharger Inspection

1. Visually inspect the air intake filter and piping for dirt buildup, blockage, wear points, soft hoses, loose clamps, or punctures. Refer to [Figure 6-20](#).

Replace damaged air filter or hoses, and tighten loose clamps, as necessary, to prevent the air system from leaking.


2. Check that the filter service indicator has not indicated a filter blockage. Clean or replace blocked filters.
3. Check for corrosion under the clamps and hoses of the intake system piping. Corrosion can allow foreign particles and dirt to enter the intake system.

Disassemble and clean, as required.
4. Remove the air intake and the exhaust piping.

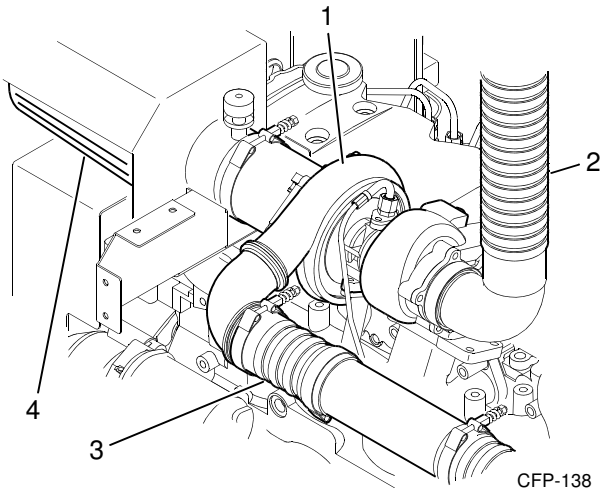

1. Turbocharger
2. Exhaust Flex Connection
3. CAC Piping
4. Intake Air Cleaner

Figure 6-20 Turbocharger Connections

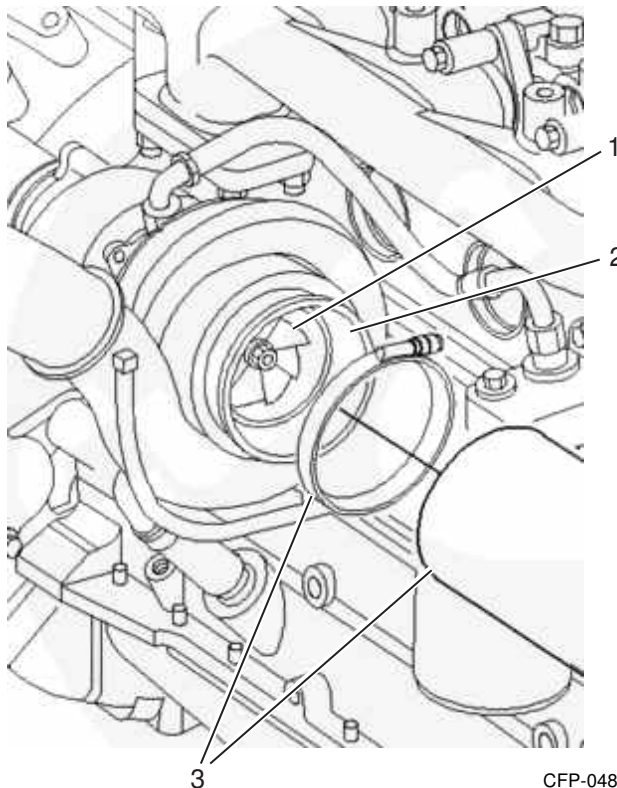

1. Turbocharger Compressor Wheel
2. Turbocharger Intake Housing
3. Air Intake Tube and Clamp

Figure 6-21 Turbocharger Turbine Wheel (typical)

5. Remove the exhaust pipe from the turbocharger.
6. Inspect the turbocharger compressor wheel for cracks in the housing or turbine blades, missing blades, mechanical binding, eccentric motion or excessive end-play. Refer to [Figure 6-21](#)

Replace the turbocharger if damage excessive end-play, binding, wear or eccentric motion is found. Contact a Cummins Authorized Repair Location for replacement.

IMPORTANT: *The turbocharger must be removed for replacement or rebuild, if the clearance is beyond the limits, the housing is cracked or the turbine wheel is damaged.*

7. Reinstall the air intake filter and the exhaust piping. Tighten the clamps. Torque loosened clamps to 8 N-m (72 in-lb).

6.5 Every 2 Years or 2000 Hours

All checks or inspections listed under daily or previous maintenance intervals must also be performed at this time, in addition to those listed under this maintenance interval.

6.5.1 Water Pump Inspection

1. Inspect the water pump for eccentric motion, mechanical binding, excessive end play, seal damage and grease or water leakage around the water pump shaft.
2. Replace with a new or rebuilt, pre-lubricated unit as necessary. Contact a Cummins Authorized Repair Location for replacement.


6.5.2 Drain and Flush Cooling System

The cooling system must be clean to work properly. If the system shows excessive mineral buildup, particulate matter, scale, oxidation or oil contamination, drain and flush the cooling system. If the coolant is excessively dirty or is mixed with oil, contact a Cummins Authorized Repair Facility.



WARNING

Do not remove the pressure cap from a hot engine. Shut down the engine and wait until the coolant temperature is below 50° C (120° F) before removing the pressure cap. Heated coolant spray or steam can cause severe personal injury.

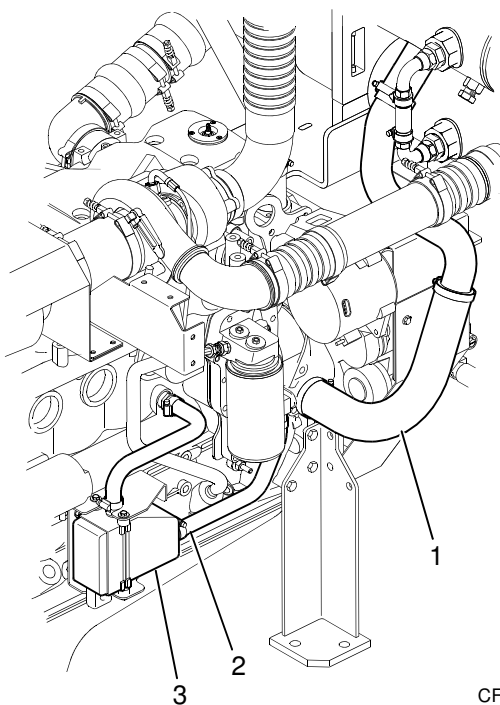

1. Lower Coolant Hose
2. Engine Heater Coolant Hose
3. Engine Coolant Heater

Figure 6-22 Engine Coolant Drain

1. Press down, unscrew and remove the coolant expansion tank pressure/fill cap. The cap must be removed to allow air to vent the cooling system during the draining process.
2. Unplug the engine heater power supply before draining the cooling system. Refer to [Figure 6-22](#).
3. Place a container that will hold at least 10 gallons of liquid, under the engine heater. Refer to [Figure 6-22](#).
4. Disconnect the engine heater coolant hose at the engine heater and allow the coolant to drain into the waste container.
5. Flush with clean fresh water or heavy-duty heat exchanger cleaner. Follow the manufacturer's directions on the product container.

NOTE: Some cooling system cleaners or commercial solvents require a soapy water rinse after use. Follow the directions on the cleaning solution or solvent.

6. If using a soapy water solution, flush again with clear water. Allow time for water to fully drain.
7. Reconnect the engine heater coolant hose.

CAUTION

Handling and disposing of used antifreeze can be subject to federal, state, and local laws and regulations. Use authorized waste disposal facilities, including civic amenity sites and garages providing authorized facilities for the receipt of used antifreeze. If in doubt, contact local authorities or the EPA for guidance as to proper handling of used antifreeze.

NOTE: During filling, air must be vented from the engine coolant passages. The air vents through the coolant filler port. The system has a design fill rate of 10 liters/minute (2.8 gal/min).

8. Fill the coolant tanks with low-silicate antifreeze that meets ASTM 4985 test (GM 6038 M spec.) criteria. Use a mixture of 50% water and 50% ethylene-glycol base or propylene-glycol antifreeze (or pre-mixed solution) to protect the engine to -37° C (-34° F) year-around.

NOTE: Cummins Inc. recommends using Fleetguard® ES COMPLEAT™ Ethylene-Glycol (EG) or Fleetguard® Propylene-Glycol (PG) Plus™ Antifreeze/Coolants. Both products are available in concentrated or pre-mixed formulations. Use a 50% concentration level (40% to 60% range) of ethylene-glycol or propylene-glycol in most climates. Contact your local Cummins Authorized Repair Location for additional information.

Ethylene-Glycol

Propylene-Glycol

40% = -23° C (-10° F)	40% = -21° C (-6° F)
50% = -37° C (-34° F)	50% = -33° C (-27° F)
60% = -54° C (-65° F)	60% = -54° C (-65° F)
68% = -71° C (-90° F)	68% = -63° C (-82° F)

CAUTION

Use soft or distilled water in the coolant mixture. Contaminants in hard water neutralize the corrosion inhibitor components. Water must not exceed 300-ppm hardness or contain more than 100 ppm of either chloride or sulfate.



CAUTION

Never use a sealing additive to stop leaks in the cooling system. This can result in cooling system blockage or restricted coolant flow, causing the engine to overheat.



CAUTION

The system must be filled properly to prevent air locks. During filling, air must be vented from the engine coolant passages.

9. Check the condition of the filler cap.
 - a. If the filler cap seal is worn, damaged, missing or the pressure spring is damaged or shows signs of sticking, replace the filler cap.
 - b. Install the expansion tank filler cap.
10. Operate the engine until it reaches a temperature of 82° C (180° F), and check for coolant leaks.
11. Ensure that the coolant level is visible in the sight gauge.

6.6 Every 4 Years or 5000 Hours

All maintenance checks and inspections listed in previous maintenance intervals must also be performed at this time.

Cummins recommends performing maintenance on valve lash settings. The recommended maintenance is beyond the scope of this manual.



CAUTION

Valve lash maintenance should be performed by a skilled technician. Improper maintenance can damage the engine or cause severe personal injury. Contact your local Cummins Authorized Repair Location before performing any extensive maintenance.

6.6.1 Coolant Thermostat Removal/Installation

The thermostat regulates the temperature of the engine coolant circulating through the engine cooling system.




CAUTION

Always use the correct thermostat, and never operate the engine without a thermostat installed. The engine can overheat if operated without a thermostat because the path of least resistance for the coolant is through the bypass to the pump inlet.

1. Remove the upper coolant hose clamps and the upper coolant hose at the thermostat housing.
2. Remove the (2) thermostat housing flange cap screws and the thermostat flange. Refer to [Figure 6-23](#).
3. Remove the thermostat and gasket from the housing.
4. Clean the housing flange faces of dirt buildup, oxidation and sludge.
5. Install the thermostat in the housing.

NOTE: EC 9045 Kit contains Cummins approved thermostat and thermostat seal.

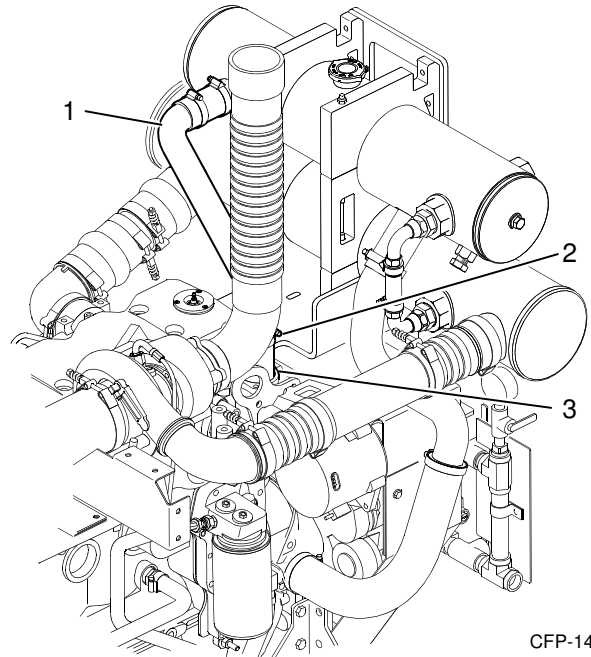

CFP-140

1. Upper Coolant Hose
2. Hose Clamp
3. Thermostat Housing

Figure 6-23 Thermostat Housing

6. Install a new thermostat seal on the thermostat housing flange surface.
7. Replace the thermostat flange and cap screws.


6.6.2 Coolant Pump/Alternator Belt Replacement

Replace the Coolant Pump/Alternator Belt if it is cracked, frayed or has pieces of material missing.

CAUTION

Disconnect both batteries (negative cable first) before performing service on the Fire Pump Engine or on any of its controls.

1. Remove the belt guard. Refer to [Figure 6-24](#).
2. Use a 3/8" drive ratchet or breaker bar to rotate the tensioner arm away from the belt and remove the belt.
3. Check the belt tensioner cap screw torque. The screw should be torqued to 43 N-m (32 ft-lb).

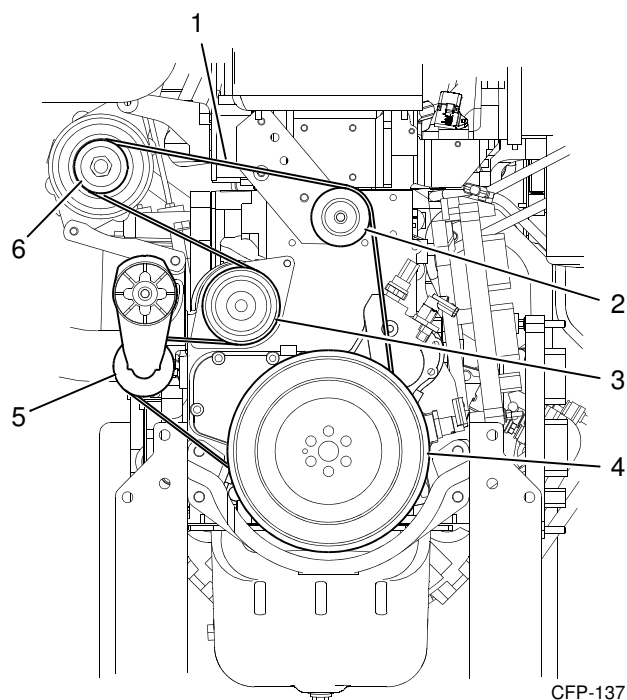

1. Drive Belt
2. Idler Pulley
3. Coolant Pump Pulley
4. Damper Pulley
5. Belt Tensioner
6. Alternator Pulley

Figure 6-24 Coolant Pump/Alternator Belt

4. Check the tensioner arm, pulley, and stops for cracks. If any cracks are noticed, the tensioner must be replaced.

5. Verify that the tensioner arm stop is not in contact with the spring casing stop.

If either stop is touching, the tensioner must be replaced.

6. Inspect the tensioner for evidence of the tensioner arm contacting the tensioner cap.

If there is evidence of the two areas making contact, the pivot tube bushing has failed and the tensioner must be replaced.

7. Check the tensioner bearing.

a. Rotate the tension pulley. The pulley should spin freely with no mechanical binding, eccentric motion or excessive end-play.

b. If the arm rotates with mechanical binding, eccentric movement or excessive end play, replace the tensioner.

8. Inspect the clearance between the tensioner spring case and the tensioner arm for uneven bearing wear.

If the clearance exceeds 3 mm (0.12 in) at any point, the tensioner must be replaced as a complete assembly. Contact a Cummins Authorized Repair Location for replacement.

NOTE: Experience has shown that tensioners generally will show a larger clearance gap near the lower portion of the spring case, resulting in the upper portion rubbing against the tensioner arm. Always replace the belt when a tensioner is replaced.

9. After checking the torque, use a 3/8" drive ratchet or breaker bar to rotate the tensioner slowly away from the area of belt contact.

10. Install the replacement drive belt.

CAUTION

To prevent pulley or belt damage, do not roll a belt over the pulley or pry it on with a tool. Move the tensioner arm away from the belt area before installing the drive belt.

-
11. Check the location of the drive belt on the belt tensioner pulley. The belt should be centered on, or centered close to the middle of, the pulley.



CAUTION

Unaligned belts, either too far forward or backward, can cause belt wear, belt roll-off failures, or increase uneven tensioner bushing wear.

12. Reinstall the belt guard.

6.6.3 Charge Air Cooler (CAC) Heat Exchanger

The charge air cooler heat exchanger should be removed and cleaned internally at least once every four years.

1. Place the AUTO/MANUAL Mode Switch in the MANUAL position.
2. Disconnect both batteries at their terminals. Remove (-) negative cable first. Install the (-) negative cable last.



CAUTION

Batteries must be disconnected before performing service on the Fire Pump Engine or on any of its controls. Wear safety glasses when disconnecting batteries!

3. Shut off the manual raw water and bypass water valves on the cooling loop water supply.
4. Drain the coolant system per the instructions in Section 6.5.2.
5. When the tanks are empty, disconnect the inlet and outlet air tubing from the charge air cooler heat exchanger. Refer to Figure 6-25.
6. Disconnect raw water inlet and outlet fittings from the charge air heat exchanger and the coolant heat exchanger/expansion tank.
7. Disconnect the coolant hoses from the coolant heat exchanger/expansion tank.
8. Remove the upper heat exchanger mounting brackets. Refer to Figure 6-25.
9. Remove the coolant heat exchanger/expansion tank.

10. Remove the middle heat exchanger mounting brackets. Refer to Figure 6-25.

11. Remove the charge air cooler heat exchanger.



WARNING

Cleaning chemicals may be caustic and cause skin irritation. Follow the instructions on cleaning containers for protective clothing. Wear protective clothing, eye wear, and rubber gloves when working with cleaning solutions. Dispose of solvents and cleaning solutions properly.

12. Flush the charge air cooler internally with cleaning solution in the opposite direction of normal air-flow.



CAUTION

Do not use caustic cleaners to clean the charge air cooler. Damage to the charge air cooler will result. Follow the directions provided by the cleaning solution manufacturer.

13. Shake the charge air cooler and lightly tap on the tank ends with a rubber mallet to dislodge trapped debris. Continue flushing until all debris or oil is removed.




CAUTION

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

14. After the charge air cooler has been thoroughly cleaned of all oil and debris with solvent, wash the charge air cooler internally with hot, soapy water to remove the remaining solvent.
15. Rinse thoroughly with clean water.
16. Blow compressed air into the charge air cooler in the opposite direction of normal air-flow until the charge air cooler is dry internally.
17. Depending on the condition of the heat exchanger, perform the Pressure Test outlined in this section if necessary.
18. Reassemble the coolant heat exchangers. Refer to Figure 6-25.

- a. Position the charge air cooler heat exchanger on the lower mounting brackets.
 - b. Reinstall all water supply and drain fittings. Use Teflon™ pipe tape to prevent leaks. Torque the hose clamp screws to 8 N-m (71 in-lb).
 - c. When the charge air heat exchanger hose clamps and cooling water lines are secure, install the middle mounting brackets and tighten the mounting bracket bolts.
 - d. Position the coolant heat exchanger/expansion tank on the middle mounting brackets and tighten the mounting bracket bolts.
 - e. Reinstall all water supply, coolant, and drain fittings. Use Teflon™ pipe tape to prevent leaks. Torque the hose clamp screws to 8 N-m (71 in-lb).
 - f. Install the upper mounting brackets and the heat exchanger front plate.
19. Open the cooling loop raw water supply manual valves and check for leaks.
 20. After completing all service work, start the engine and check for air leaks, loose clamps, and blowby.

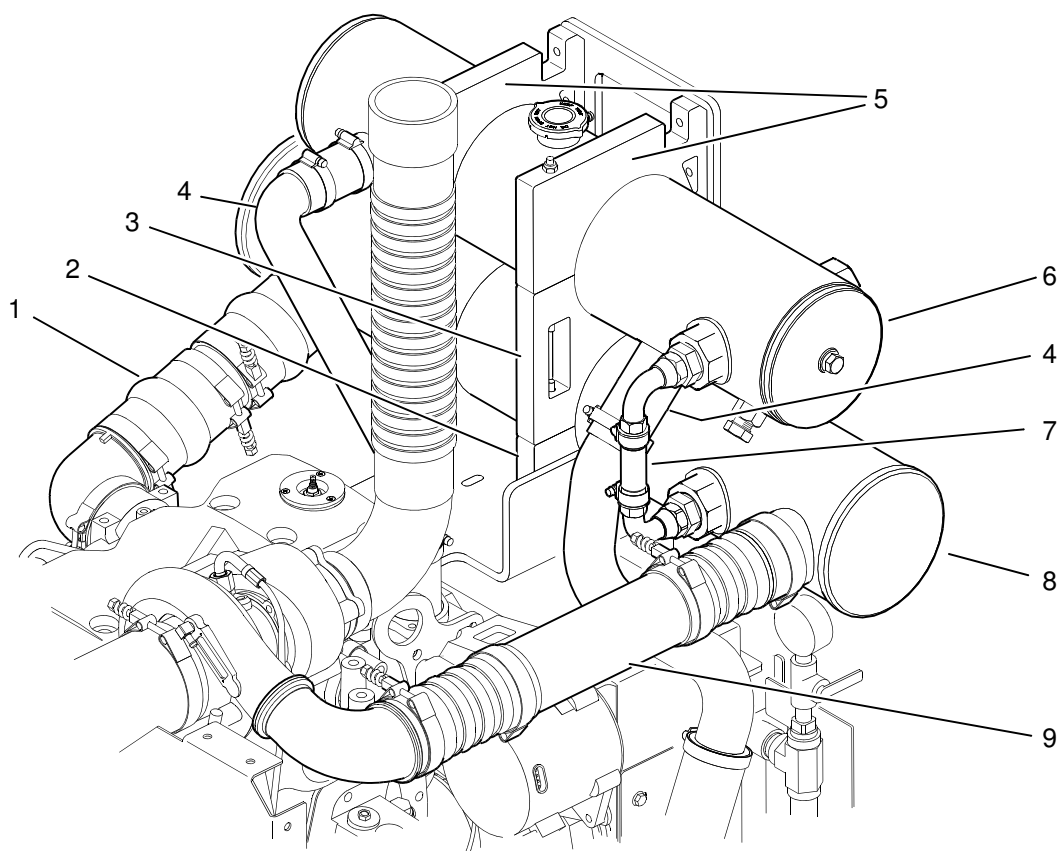

CFP-136

- | | |
|---|--|
| 1. Charge Air Tubing to Intake Manifold | 6. Coolant Heat Exchanger/Expansion Tank |
| 2. Lower Mounting Bracket (2) | 7. Raw Water Connecting Pipe |
| 3. Middle Mounting Bracket (2) | 8. Charge Air Cooler Heat Exchanger |
| 4. Coolant Hose Connections | 9. Charge Air Tubing from Turbocharger |
| 5. Upper Mounting Bracket (2) | |

Figure 6-25 Cooling Loop and Heat Exchangers



**Fire
Power**

Section 7 - Troubleshooting

7.1 Troubleshooting

The following information is intended as a guide to troubleshooting some common nontechnical equipment problems. Many problems can be resolved using corrective maintenance, adjustment or minor repair. Refer to the Vendor supplied literature, electrical schematics and mechanical prints for additional information.

For engine related issues, refer to Operation and Maintenance Manual, Industrial and Power Generation QSB Engines, Bulletin No. 4021531 or contact the Cummins Customer Assistance Center at 1-800-DIESELS (1-800-343-7357).

It is beyond the scope of this manual to cover all of the various problems that may affect engine performance.

WARNING

*The status checks should be performed **ONLY** by a qualified technician. Contact with exposed electrical components could cause extreme personal injury or death.*

WARNING

*Before equipment operation, **ALL** guards, covers and protective devices **MUST BE** in place and securely fastened. Serious personal injury could result from contact with exposed or moving components.*

CAUTION

***AVOID SERVICING** complex components such as: printed circuit boards, and, ECM's, not specifically authorized by Cummins Inc. Contact a Cummins Fire Power Customer Service Department toll free at 1-800-343-7357 before performing any extensive maintenance.*

CAUTION

Never climb or stand on the equipment frame, guards, or enclosures. Contact with exposed or moving components can cause personal injury or equipment damage.

Table of Contents

7.1 Fault Code Chart	7-3
----------------------------	-----

7.1 Troubleshooting Chart	7-4
---------------------------------	-----

Problem	Page
7.1.1 Alternator Overcharging with the Engine Running . . .	7-4
7.1.2 Neither Battery is Charging with the Engine Running.	7-4
7.1.3 Only One Battery is Charging with the Engine Running	7-5
7.1.4 Voltage Indications Differ	7-5
7.1.5 Coolant Contamination	7-6
7.1.6 Excessive Coolant Loss	7-7
7.1.7 Coolant Temperature Above Normal	7-8
7.1.8 Coolant Temperature Below Normal.	7-9
7.1.9 Raw Water Drain Steaming	7-10
7.1.10 Raw Water Solenoid Valve fails to Open	7-10
7.1.11 Auto Start failure - Does not Crank on BATT A or B.	7-11
7.1.12 Auto Start failure - Cranks but does not Start	7-11
7.1.13 Auto Start failure - Engine Starts but Crank Terminate Does Not Occur	7-12
7.1.14 Manual Start Failure from Solenoid Lever - Does not Crank on A or B	7-13
7.1.15 Manual Start Failure from Control Panel - Does not Crank on A or B	7-13
7.1.16 Engine Cranks Normally But Will Not Start (No Exhaust Smoke)	7-14
7.1.17 Engine Cranks Slowly But Does Not Start	7-15
7.1.18 Engine Stops During Operation	7-16
7.1.19 Engine Will Not Reach Rated Speed (RPM).	7-18
7.1.20 Engine Will Not Shut Off Remotely	7-18
7.1.21 Engine Will Not Shut Off Locally	7-19
7.1.22 Fuel Consumption is Excessive	7-19
7.1.23 Fuel or Engine Oil Leaking From Exhaust Manifold .	7-19
7.1.24 Engine Oil is Contaminated	7-20
7.1.25 Engine Oil Consumption is Excessive	7-20
7.1.26 Lubrication Oil in the Coolant	7-21
7.1.27 Engine Overspeed Trip	7-22
7.1.28 Tachometer Does not Indicate Engine Speed	7-22

CFP5E/7E Fault Code Chart

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
111 (Red)	629 12	Controller #1	Engine Control Module Critical internal failure - Bad intelligent Device or Component
115 (Red)	612 2	System Diagnostic Code # 2	Engine Speed/Position Sensor Circuit lost both of two signals from the magnetic pickup sensor - Data Erratic, Intermittent, or incorrect.
122 (Yellow)	102 3	Boost Pressure	Intake Manifold Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source.
123 (Yellow)	102 4	Boost Pressure	Intake Manifold Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
124 (Yellow)	102 16	Boost Pressure	Intake Manifold 1 Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
131 (Red)	91 3	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor Circuit - Voltage Above Normal, or Shorted to High Source
132 (Red)	91 4	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
133 (Red)	974 3	Remote Accelerator	Remote Accelerator Pedal or Level Position Sensor Circuit - Voltage Above Normal, or Shorted to High Source
134 (Red)	974 4	Remote Accelerator	Remote Accelerator Pedal or Level Position Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
135 (Yellow)	100 3	Engine Oil Pressure	Oil Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
141 (Yellow)	100 4	Engine Oil Pressure	Oil Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
143 (Yellow)	100 18	Engine Oil Pressure	Oil Pressure Low - Data Valid but Below Normal Operational Range - Moderately Severe Level
144 (Yellow)	110 3	Engine Coolant Temperature	Coolant Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
145 (Yellow)	110 4	Engine Coolant Temperature	Coolant Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
146 (Yellow)	110 16	Engine Coolant Temperature	Coolant Temperature High - Data Valid but Above Normal Operational Range - Moderately Severe Level
147 (Red)	91 1	Accelerator Pedal Position	Accelerator Pedal or Level Position Sensor Circuit - Abnormal Frequency, Pulse Width, or Period
148 (Red)	91 0	Accelerator Pedal Position	Accelerator Pedal or Level Position Sensor Circuit - Abnormal Frequency, Pulse Width, or Period
151 (Yellow)	110 0	Engine Coolant Temperature	Coolant Temperature Low - Data Valid but Above Normal Operational Range - Most Severe Level
153 (Yellow)	105 3	Intake Manifold #1 Temperature	Intake Manifold Air Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source
154 (Yellow)	105 4	Intake Manifold #1 Temperature	Intake Manifold Air Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
155 (Yellow)	105 0	Intake Manifold #1 Temperature	Intake Manifold Air Temperature High - Data Valid but Above Normal Operational Range - Most Severe Level
187 (Yellow)	3510 4	5 Volts DC Supply	Sensor Supply Voltage #2 Circuit - Voltage Below Normal, or Shorted to Low Source
193 (Yellow)	520199 3	Cruise Control	Cruise Control (Resistive) Signal Circuit - Voltage Above Normal, or Shorted to High Source
194 (Yellow)	520199 4	Cruise Control	Cruise Control (Resistive) Signal Circuit - Voltage Below Normal, or Shorted to Low Source

CFP5E/7E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
195 (Yellow)	111 3	Coolant Level	Coolant Level Sensor Circuit - Voltage Above Normal, or Shorted to High Source
196 (Yellow)	111 4	Coolant Level	Coolant Level Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
197 (Yellow)	111 18	Coolant Level	Coolant Level - Data Valid but Below Normal Operational Range - Moderately Severe Level
199 (Yellow)	1661 4	Engine Automatic Start Lamp	Engine Automatic Start Lamp Driver Circuit - Voltage Above Normal, or Shorted to High Source
211 (None)	1484 31	J1939 Error	Additional Auxiliary Diagnostic Codes logged - Condition Exists
212 (Yellow)	175 3	Oil Temperature	Engine Oil Temperature Sensor #1 Circuit - Voltage Above Normal, or Shorted to High Source
213 (Yellow)	175 4	Oil Temperature	Engine Oil Temperature Sensor #1 Circuit - Voltage Below Normal, or Shorted to Low Source
214 (Yellow)	175 0	Oil Temperature	Engine Oil Temperature - Data Valid but Above Normal Operational Range - Most Severe Level
221 (Yellow)	108 3	Barometric Pressure	Barometric Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
222 (Yellow)	108 4	Barometric Pressure	Barometric Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
227 (Yellow)	3510 3	5 Volts DC Supply	Sensor Supply Voltage #2 Circuit - Voltage Above Normal, or Shorted to High Source
231 (Yellow)	109 3	Coolant Pressure	Coolant Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
232 (Yellow)	109 4	Coolant Pressure	Coolant Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
233 (Yellow)	109 18	Coolant Pressure	Coolant Pressure - Data Valid but Below Normal Operational Range - Moderately Severe Level
234 (Red)	190 0	Engine Speed	Engine Speed High - Data Valid but Above Normal Operational Range - Most Severe Level
235 (Yellow)	111 1	Coolant Level	Coolant Level Low - Data Valid but Below Normal Operational Range - Most Severe Level
237 (Yellow)	644 2	External Speed Input	External Speed Input (Multiple Unit Synchronization) - Data Erratic, Intermittent, or Incorrect
238 (Yellow)	3511 4	System Diagnostic Code # 1	Sensor Supply Voltage #3 Circuit - Voltage Below Normal, or Shorted to Low Source
239 (Yellow)	3511 3	System Diagnostic Code # 2	Sensor Supply Voltage #3 Circuit - Voltage Above Normal, or Shorted to High Source
241 (Yellow)	84 2	Wheel-based Vehicle Speed	Vehicle Speed Sensor Circuit - Data Erratic, Intermittent, or Incorrect
242 (Yellow)	84 10	Wheel-based Vehicle Speed	Vehicle Speed Sensor Circuit tampering has been detected - Abnormal Rate of Change
244 (Yellow)	623 4	Red Stop Lamp	Red Stop Lamp Driver Circuit - Voltage Below Normal, or Shorted to Low Source
245 (Yellow)	647 4	Fan Clutch Output Device Driver	Fan Control Circuit - Voltage Below Normal, or Shorted to Low Source
249 (Yellow)	171 3	Ambient Air Temperature	Ambient Air Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source

CFP5E/7E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
256 (Yellow)	171 4	Ambient Air Temperature	Ambient Air Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
261 (Yellow)	174 16	Fuel Temperature	Engine Fuel Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
263 (Yellow)	174 3	Fuel Temperature	Engine Fuel Temperature Sensor #1 Circuit - Voltage Above Normal, or Shorted to High Source
265 (Yellow)	174 4	Fuel Temperature	Engine Fuel Temperature Sensor #1 Circuit - Voltage Below Normal, or Shorted to Low Source
268 (Yellow)	94 2	Fuel Delivery Pressure	Fuel Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
271 (Red)	1347 4	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve Circuit - Voltage Below Normal, or Shorted to Low Source
272 (Red)	1347 3	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve Circuit - Voltage Above Normal, or Shorted to High Source
281 (Red)	1347 7	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve #1 - Mechanical System Not Responding Properly or Out of Adjustment
284 (Red)	1043 4	Internal Sensor Voltage Supply	Engine Speed/Position Sensor (Crankshaft) Supply Voltage Circuit - Voltage Below Normal, or Shorted to Low Source
285 (Yellow)	639 9	SAE J1939 Datalink	SAE J1939 Multiplexing PGN Timeout Error - Abnormal Update Rate
286 (Yellow)	639 13	SAE J1939 Datalink	SAE J1939 Multiplexing Configuration Error - Out of Calibration
287 (Red)	91 19	Accelerator Pedal Position	SAE J1939 Multiplexing Accelerator Pedal or Level Sensor System Error - Received Network Data in Error
288 (Red)	974 19	Remote Accelerator	SAE J1939 Multiplexing Remote Accelerator Pedal or Level Data Error - Received Network Data in Error
292 (Red)	441 14	Auxiliary Temperature 1	Auxiliary Temperature Sensor Input #1 - Special Instructions
293 (Yellow)	441 3	OEM Temperature	Auxiliary Temperature Sensor Input #1 Circuit - Voltage Above Normal, or Shorted to High Source
294 (Yellow)	441 4	OEM Temperature	Auxiliary Temperature Sensor Input #1 Circuit - Voltage Below Normal, or Shorted to Low Source
295 (Yellow)	108 2	Barometric Pressure	Barometric Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
296 (Red)	1388 14	Auxiliary Pressure	Auxiliary Pressure Sensor Input #1 - Special Instructions
297 (Yellow)	1388 3	Auxiliary Pressure	Auxiliary Pressure Sensor Input #2 Circuit - Voltage Above Normal, or Shorted to High Source
298 (Yellow)	1388 4	Auxiliary Pressure	Auxiliary Pressure Sensor Input #2 Circuit - Voltage Below Normal, or Shorted to Low Source
319 Maint.	251 2	Real Time Clock Power	Real Time Clock Power Interrupt - Data Erratic, Intermittent, or Incorrect
322 (Red)	651 5	Injector Cylinder #1	Injector Solenoid Cylinder #1 Circuit - Current Below Normal, or Open Circuit
323 (Red)	655 5	Injector Cylinder #5	Injector Solenoid Cylinder #5 Circuit - Current Below Normal, or Open Circuit
324 (Red)	653 5	Injector Cylinder #3	Injector Solenoid Cylinder #3 Circuit - Current Below Normal, or Open Circuit

CFP5E/7E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
325 (Red)	656 5	Injector Cylinder #6	Injector Solenoid Cylinder #6 Circuit - Current Below Normal, or Open Circuit
331 (Red)	652 5	Injector Cylinder #2	Injector Solenoid Cylinder #2 Circuit - Current Below Normal, or Open Circuit
332 (Red)	654 5	Injector Cylinder #4	Injector Solenoid Cylinder #4 Circuit - Current Below Normal, or Open Circuit
334 (Yellow)	110 2	Engine Coolant Temperature	Coolant Temperature Sensor Circuit - Data Erratic, Intermittent, or Incorrect
338 (Yellow)	1267 3	Vehicle Accessories Relay Driver	Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Above Normal, or Shorted to High Source
339 (Yellow)	1267 4	Vehicle Accessories Relay Driver	Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Below Normal, or Shorted to Low Source
341 (Yellow)	630 2	Calibration Memory	Engine Control Module data lost - Data Erratic, Intermittent, or Incorrect
342 (Yellow)	630 13	Calibration Memory	Electronic Calibration Code Incompatibility - Out of Calibration
343 (Red)	629 12	Controller #1	Engine Control Module Warning internal hardware failure - Bad intelligent Device or Component
349 (Yellow)	191 16	Transmission Output Shaft Speed	Transmission Output Shaft Speed - Data Valid but Above Normal Operational Range - Moderately Severe Level
351 (Red)	627 12	Controller #1	Injector Power Supply - Bad Intelligent Device or Component
352 (Red)	3509 4	5 Volts DC Supply	Sensor Supply Voltage #1 Circuit - Voltage Below Normal, or Shorted to Low Source
386 (Yellow)	3509 3	5 Volts DC Supply	Sensor Supply Voltage #1 Circuit - Voltage Above Normal, or Shorted to High Source
415 (Yellow)	100 1	Engine Oil Pressure	Oil Pressure Low - Data Valid but Below Normal Operational Range - Most Severe Level
418 Maint.	97 15	Water in Fuel Indicator	Water in Fuel Indicator High - Data Valid but Above Normal Operational Range - Least Severe Level
422 (Yellow)	111 2	Coolant Level	Coolant Level - Data Erratic, Intermittent, or Incorrect
425 (Yellow)	175 2	Oil Temperature	Engine Oil Temperature - Data Erratic, Intermittent, or Incorrect
428 (Yellow)	97 3	Water in Fuel Indicator	Water in Fuel Sensor Circuit - Voltage Above Normal, or Shorted to High Source
429 (Yellow)	97 4	Water in Fuel Indicator	Water in Fuel Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
431 (Yellow)	558 2	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Data Erratic, Intermittent, or Incorrect
432 (Red)	558 13	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Our of Calibration
435 (Yellow)	100 2	Engine Oil Pressure	Oil Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
441 (Red)	168 18	Electrical Potential (Voltage)	Battery #1 Voltage Low - Data Valid but Below Normal Operational Range - Moderately Severe Level
442 (Red)	168 16	Electrical Potential (Voltage)	Battery #1 Voltage High - Data Valid but Above Normal Operational Range - Moderately Severe Level

CFP5E/7E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
449 (Red)	157 0	Injector Metering Rail #1 Pressure	Fuel Pressure High - Data Valid but Above Normal Operational Range - Moderately Severe Level
451 (Red)	157 3	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
452 (Red)	157 4	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
488 (Red)	105 16	Intake Manifold	Intake Manifold #1 Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
489 (Yellow)	191 18	Transmission Output Shaft Speed	Transmission Output Shaft Speed - Data Valid but Below Normal Operational Range - Moderately Severe Level
497 (Yellow)	1377 2	Switch Circuit	Multiple Unit Synchronization Switch Circuit - Data Erratic, Intermittent, or Incorrect
523 (Yellow)	611 2	System Diagnostic code #1	OEM Intermediate (PTO) Speed switch Validation - Data Erratic, Intermittent, or Incorrect
527 (Yellow)	702 3	Circuit - Voltage	Auxiliary Input/Output #2 Circuit - Voltage Above Normal, or Shorted to High Source
528 (Yellow)	93 2	Switch - Data	Auxiliary Alternate Torque Validation Switch - Data Erratic, Intermittent, or Incorrect
529 (Yellow)	703 3	Circuit - Voltage	Auxiliary Input/Output #3 Circuit - Voltage Above Normal, or Shorted to High Source
546 (Yellow)	94 3	Fuel Delivery Pressure	Fuel Delivery Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
547 (Yellow)	94 4	Fuel Delivery Pressure	Fuel Delivery Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
551 (Yellow)	558 4	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Voltage Below Normal, or Shorted to Low Source
553 (Yellow)	157 16	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure High - Data Valid but Above Normal Operational Range - Moderately Severe Level
554 (Red)	157 2	Injector Metering Rail #1 Pressure	Fuel Pressure Sensor Error - Data Erratic, Intermittent, or Incorrect
559 (Red)	157 18	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure High - Data Valid but Below Normal Operational Range - Moderately Severe Level
584 (Yellow)	677 3	Starter Solenoid Lockout Relay Driver Circuit	Starter Relay Circuit - Voltage Above Normal, or Shorted to High Source
585 (Yellow)	677 4	Starter Solenoid Lockout Relay Driver Circuit	Starter Relay Circuit - Voltage Below Normal, or Shorted to Low Source
595 (Yellow)	103 16	Turbocharger #1 Speed	Turbocharger #1 Speed High - Data Valid but Above Normal Operational Range - Moderately Severe Level
596 (Yellow)	167 16	Alternate Potential (voltage)	Electrical Charging System Voltage High - Data Valid but Above Normal Operational Range - Moderately Severe Level
597 (Yellow)	167 18	Alternate Potential (voltage)	Electrical Charging System Voltage High - Data Valid but Below Normal Operational Range - Moderately Severe Level
598 (Red)	167 1	Alternate Potential (voltage)	Electrical Charging System Voltage High - Data Valid but Below Normal Operational Range - Most Severe Level
599 (Red)	640 14	Engine External Protection Input	Auxiliary Commanded Dual Output Shutdown - Special Instructions
649 Maint.	1378 31	Engine Oil Change Interval	Change Lubricating Oil and Filter - Condition Exists
687 (Yellow)	103 18	Turbocharger #1 Speed	Turbocharger #1 Speed Low - Data Valid but Below Normal Operational Range - Moderately Severe Level

CFP5E/7E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
689 (Red)	190 2	Engine Speed	Primary Engine Speed Sensor Error - Data Erratic, Intermittent, or Incorrect
691 (Red)	1172 3	Turbocharger #1 Compressor Inlet Temp	Turbocharger #1 Compressor Inlet Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source
692 (Red)	1172 4	Turbocharger #1 Compressor Inlet Temp	Turbocharger #1 Compressor Inlet Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
697 (Yellow)	1136 3	Sensor Circuit - Voltage	ECM Internal Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source
698 (Yellow)	1136 4	Sensor Circuit - Voltage	ECM Internal Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
719 (Yellow)	22 3	Crankcase Pressure	Extended Crankcase Blow-by Pressure Circuit - Voltage Above Normal, or Shorted to High Source
729 (Yellow)	22 4	Crankcase Pressure	Extended Crankcase Blow-by Pressure Circuit - Voltage Below Normal, or Shorted to Low Source
731 (Red)	723 7	Engine Speed Sensor #2	Engine Speed/Position #2 mechanical misalignment between camshaft and crankshaft sensors - Mechanical System Not Responding Properly or Out of Adjustment
757 (Red)	2802 31	Electronic Control Module	Electronic Control Module data lost - Condition Exists
778 (Yellow)	723 2	Engine Speed Sensor #2	Engine Speed Sensor (Camshaft) Error - Data Erratic, Intermittent, or Incorrect
779 (Yellow)	703 11	Auxiliary Equipment Sensor Input	Warning Auxiliary Equipment Sensor Input #3 (OEM Switch) - Root Cause Not Known
951 (None)	166 2	Cylinder Power	Cylinder Power Imbalance Between Cylinders - Data Erratic, Intermittent, or Incorrect
1117 (None)	627 2	Power Supply	Power Lost With Ignition On - Data Erratic, Intermittent, or Incorrect
1139 (Red)	651 7	Injector Cylinder #1	Injector Cylinder #1 - Mechanical System Not Responding Properly or Out of Adjustment
1141 (Red)	652 7	Injector Cylinder #2	Injector Cylinder #2 - Mechanical System Not Responding Properly or Out of Adjustment
1142 (Red)	653 7	Injector Cylinder #3	Injector Cylinder #3 - Mechanical System Not Responding Properly or Out of Adjustment
1143 (Red)	654 7	Injector Cylinder #4	Injector Cylinder #4 - Mechanical System Not Responding Properly or Out of Adjustment
1144 (Red)	655 7	Injector Cylinder #5	Injector Cylinder #5 - Mechanical System Not Responding Properly or Out of Adjustment
1145 (Red)	656 7	Injector Cylinder #6	Injector Cylinder #6 - Mechanical System Not Responding Properly or Out of Adjustment
1239 (Yellow)	2623 3	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor #2 Circuit - Voltage Above Normal, or Shorted to High Source
1241 (Yellow)	2623 4	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor #2 Circuit - Voltage Below Normal, or Shorted to Low Source
1242 (Red)	91 2	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor #1 and #2 - Data Erratic, Intermittent, or Incorrect
1256 (Yellow)	1563 2	Control Module Identification Input State	Control Module Identification Input State Error - Data Erratic, Intermittent, or Incorrect
1257 (Red)	1563 2	Control Module Identification Input State	Control Module Identification Input State Error - Data Erratic, Intermittent, or Incorrect
1852 (Yellow)	97 16	Water in Fuel Indicator	Water in Fuel Indicator - Data Valid but Above Normal Operational Range - Moderately Severe Level

CFP5E/7E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
1911 (Yellow)	157 0	Injector Metering Rail	Injector Metering Rail #1 Pressure - Data Valid but Above Normal Operational Range - Most Severe Level
2111 (Yellow)	52 3	Coolant Temperature	Coolant Temperature #2 Sensor Circuit - Voltage Above Normal, or Shorted to High Source
2112 (Yellow)	52 4	Coolant Temperature	Coolant Temperature #2 Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
2113 (Yellow)	52 16	Coolant Temperature	Coolant Temperature #2 - Data Valid but Above Normal Operational Range - Moderately Severe Level
2114 (Red)	52 0	Coolant Temperature	Coolant Temperature #2 - Data Valid but Above Normal Operational Range - Most Severe Level
2115 (Yellow)	2981 3	Coolant Pressure	Coolant Pressure #2 Circuit - Voltage Above Normal, or Shorted to High Source
2116 (Yellow)	2981 4	Coolant Pressure	Coolant Pressure #2 Circuit - Voltage Below Normal, or Shorted to Low Source
2117 (Yellow)	2981 18	Coolant Pressure	Coolant Pressure #2 - Data Valid but Below Normal Operational Range - Moderately Severe Level
2182 (Yellow)	1072 3	Engine Brake Output #1	Engine Brake Actuator Driver #1 Circuit - Voltage Above Normal, or Shorted to High Source
2183 (Yellow)	1072 4	Engine Brake Output #1	Engine Brake Actuator Driver #1 Circuit - Voltage Below Normal, or Shorted to Low Source
2185 (Red)	3512 3	System Diagnostic code #1	Sensor Supply Voltage #4 Circuit - Voltage Above Normal, or Shorted to High Source
2186 (Red)	3512 4	System Diagnostic code #1	Sensor Supply Voltage #4 Circuit - Voltage Below Normal, or Shorted to Low Source
2195 (Red)	703 14	Auxiliary Equipment Sensor	Auxiliary Equipment Sensor Input #3 Engine Protection Critical - Special Instructions
2215 (Red)	94 18	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Below Normal Operational Range - Moderately Severe Level
2216 (Yellow)	94 1	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
2217 (Red)	630 31	Calibration Memory	ECM Program Memory (RAM) Corruption - Condition Exists
2249 (Red)	157 1	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure - Data Valid but Below Normal Operational Range - Most Severe Level
2261 Maint.	94 15	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Above Normal Operational Range - Least Severe Level
2262 Maint.	94 17	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Below Normal Operational Range - Least Severe Level
2263 (Yellow)	1800 16	Battery Temperature	Battery Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
2264 (Yellow)	1800 18	Battery Temperature	Battery Temperature - Data Valid but Below Normal Operational Range - Moderately Severe Level
2265 (Yellow)	1075 3	Electric Lift Pump for Engine Fuel	Fuel Priming Pump Control Signal Circuit - Voltage Above Normal, or Shorted to High Source
2266 (Yellow)	1075 4	Electric Lift Pump for Engine Fuel	Fuel Priming Pump Control Signal Circuit - Voltage Below Normal, or Shorted to Low Source
2292 (Yellow)	611 16	Fuel Inlet Meter Device	Fuel Inlet Meter Device - Data Valid but Above Normal Operational Range - Moderately Severe Level
2293 (Yellow)	611 18	Fuel Inlet Meter Device	Fuel Inlet Meter Device flow demand lower than expected - Data Valid but Below Normal Operational Range - Moderately Severe Level

CFP5E/7E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
2311 (Red)	633 31	Fuel Control Valve #1	Fueling Actuator #1 Circuit Error - Condition Exists
2321 (Red)	190 2	Engine Speed	Engine Speed / Position Sensor #1 - Data Erratic, Intermittent, or Incorrect
2322 (Red)	723 2	Engine Speed Sensor #2	Engine Speed / Position Sensor #2 - Data Erratic, Intermittent, or Incorrect
2345 (Yellow)	103 10	Turbocharger #1 Speed	Turbocharger speed invalid rate of change detected - Abnormal Rate of Change
2346 (Red)	2789 15	System Diagnostic Code #1	Turbocharger Turbine Inlet Temperature (Calculated) - Data Valid but Above Normal Operational Range - Least Severe Level
2347 (Red)	2790 15	System Diagnostic Code #1	Turbocharger Turbine Outlet Temperature (Calculated) - Data Valid but Above Normal Operational Range - Least Severe Level
2363 (Yellow)	1073 4	Engine Compression Brake Output #2	Engine Brake Actuator Circuit #2 - Voltage Below Normal, or Shorted to Low Source
2365 (Yellow)	1112 4	Engine Brake Output #3	Engine Brake Actuator Driver Output #3 Circuit - Voltage Below Normal, or Shorted to Low Source
2367 (Yellow)	1073 3	Engine Compression Brake Output #2	Engine Brake Actuator Circuit #2 - Voltage Above Normal, or Shorted to High Source
2368 (Yellow)	1112 3	Engine Brake Output #3	Engine Brake Actuator Driver Output #3 Circuit - Voltage Above Normal, or Shorted to High Source
2372 (Yellow)	95 16	Engine Dual Filter Differential Pressure	Fuel Filter Differential Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
2373 (Yellow)	1209 3	Exhaust Gas Pressure	Exhaust Gas Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
2374 (Yellow)	1209 4	Exhaust Gas Pressure	Exhaust Gas Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
2375 (Yellow)	412 3	Exhaust Gas Recirculation Temperature	Exhaust Gas Recirculation Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source
2376 (Yellow)	412 4	Exhaust Gas Recirculation Temperature	Exhaust Gas Recirculation Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source
2377 (Yellow)	647 3	Fan Clutch Output Device Driver	Fan Control Circuit - Voltage Above Normal, or Shorted to High Source
2425 (Yellow)	730 4	Intake Air Heater #2	Intake Air Heater #2 Circuit - Voltage Below Normal, or Shorted to Low Source
2426 (Yellow)	730 3	Intake Air Heater #2	Intake Air Heater #2 Circuit - Voltage Above Normal, or Shorted to High Source
2555 (Yellow)	729 3	Intake Air Heater Driver #1	Intake Air Heater #1 Circuit - Voltage Above Normal, or Shorted to High Source
2556 (Yellow)	729 4	Intake Air Heater Driver #1	Intake Air Heater #1 Circuit - Voltage Below Normal, or Shorted to Low Source
2557 (Yellow)	697 3	Auxiliary PWM Driver #1	Auxiliary PWM Driver #1 - Voltage Above Normal, or Shorted to High Source
2558 (Yellow)	697 4	Auxiliary PWM Driver #1	Auxiliary PWM Driver #1 - Voltage Below Normal, or Shorted to Low Source
2963 (Red)	110 15	Engine Coolant Temperature	Engine Coolant Temperature High - Data Valid but Above Normal Operational Range - Least Severe Level
2973 (Yellow)	102 2	Boost Pressure	Intake Manifold Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect

Troubleshooting Chart

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.1 Alternator Overcharging with the Engine Running NOTE: <i>If the batteries are overcharged while the engine is not running, troubleshoot the customer supplied battery charging system.</i>	<p>Batteries have failed.</p> <p>Voltage regulator malfunction.</p>	<p>Check the condition of the batteries. Replace any defective batteries.</p> <p>Test the alternator electrically. Contact an Authorized Cummins Repair Facility.</p> <p>Replace alternator as necessary.</p>
7.1.2 Neither Battery is Charging with the Engine Running NOTE: <i>If one or both batteries do not charge with the engine stopped, troubleshoot the customer supplied battery charging system.</i> NOTE: <i>If only one battery is maintaining charge, go to Only One Battery is Charging with the Engine Running.</i>	<p>Battery cables or connections are loose, broken, or corroded (excessive resistance).</p> <p>Alternator rotor is not rotating.</p> <p>Battery isolator input has faulted.</p> <p>Alternator excitation is lost.</p>	<p>Check the battery cables and connections. Ensure that all connections are free of corrosion and that no cables are broken.</p> <p>Test the alternator mechanically. If the alternator shaft does not spin freely because of a bad bearing, replace the alternator.</p> <p>If the alternator does not turn because of a bad drive belt, replace the drive belt. Refer to Section 6 - Maintenance.</p> <p>If the alternator does not charge because of poor drive belt tension, adjust belt tension. Refer to Section 6 - Maintenance.</p> <p>If the alternator pulley spins freely on the shaft because of a broken key, replace the alternator. Contact an Authorized Cummins Repair Facility.</p> <p>Test continuity from the alternator to the battery isolator input. Repair any open circuit.</p> <p>Test continuity through the battery isolator. If an internal open circuit exists, replace battery isolator.</p> <p>Test alternator electrically. Replace the alternator diode as necessary.</p> <p>Speed Failed - Fused relay</p> <p>Locate and repair the open circuit or short to ground in the alternator excitation wiring as necessary.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.5 Coolant Contamination	Coolant is rusty and has debris.	<p>Drain and flush the cooling system per the instructions in Section 6 - Maintenance.</p> <p>Refill with correct mixture of anti-freeze and water per the instructions in Section 6 - Maintenance.</p> <p>Drain and flush the cooling system per the instructions in Section 6 - Maintenance.</p>
	Coolant Heat Exchanger is leaking raw water into the coolant. Coolant volume increases and pressure is relieved when the unit is operating. Antifreeze concentration decreases.	<p>Drain and flush the cooling system per the instructions in Section 6 - Maintenance.</p> <p>Perform a pressure test of the raw water side of the heat exchanger. If the heat exchanger leaks, it should be replaced.</p> <p>Check and adjust raw water pressure regulator set points.</p> <p>Check and, if required, replace the zinc plug.</p> <p>Refill with correct mixture of anti-freeze and water per the instructions in Section 6 - Maintenance.</p>
	Coolant is inadvertently contaminated with unknown liquids.	<p>Drain and flush the cooling system. Refill with correct mixture of antifreeze and water per the instructions in Section 6 - Maintenance.</p> <p>Contact an Authorized Cummins Repair Facility.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.6 Excessive Coolant Loss	Adequate coolant was not added following previous maintenance activities.	Check the coolant level. Add coolant as required and check engine operation. If coolant loss persists, check for other problems.
	Inadvertent coolant leak is present.	Inspect the engine for coolant leaking from drain cocks or vents. Close the leaking drain or vent. Add coolant as required and check engine operation.
	Cooling system hose is leaking.	Check the condition of the hoses. Replace and/or tighten loose hose clamps. Replace any damaged hoses as necessary. Add coolant as required and check engine operation.
	Pressure cap is malfunctioning or has low-pressure rating.	Check that the pressure cap does not relieve coolant under normal operating conditions. Replace a leaking pressure cap, (Cummins Fire Power Part No. 11407). Add coolant as required and check engine operation.
	Mechanical coolant leak.	Inspect the engine for coolant leaking from manifold, expansion and pipe plugs, fittings, engine oil cooler, water pump seal, cylinder block, and other components that have coolant flow. Repair leaking components. Add coolant as required and check engine operation.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
<p>7.1.7 Coolant Temperature Above Normal</p> <p>NOTE: <i>The thermostat's normal operating temperature range is 82-95° C (180-203° F) The High Water Temperature lamp on the local control panel. The lamp only illuminates if the engine is running. If the lamp is illuminated or if temperature is otherwise excessive, the engine should be stopped as soon as practical and the problem corrected.</i></p>	<p>Engine is overheating.</p> <p>Raw water flow is improperly aligned.</p> <p>Raw water pressure regulator is improperly adjusted.</p> <p>NOTE: <i>Pressure should not exceed 414 kPa [60 psig].</i></p> <p>Raw water solenoid has failed.</p> <p>Raw water piping or heat exchanger is plugged.</p> <p>Coolant level is below specification.</p> <p>Cooling system hose is collapsed, restricted, or leaking.</p>	<p>Refer to the Coolant Temperature Above Normal in this section.</p> <p>Check that the optional raw water manifold is aligned for normal flow through the solenoid valve (preferred) or bypass flow around the solenoid valve (alternative). Align flow if required.</p> <p>Check the raw water pressure indication. If pressure is indicated but is low, adjust the regulator. If pressure is not indicated or is excessively low, go to raw water solenoid has failed.</p> <p>If pressure is excessively low when aligned for normal flow, open the bypass valves. When practical, troubleshoot the raw water solenoid valve. Refer to Raw Water Solenoid Valve Fails to Operate in this section. If the solenoid valve operates, replace the pressure regulator.</p> <p>If pressure is excessively low when aligned for bypass flow, open the normal valves.</p> <p>Check the raw water wye strainers (optional manifold) for blockage per the instructions in Section 6 - Maintenance. Clean the strainer if necessary.</p> <p>Check the raw water piping for blockage. Clean the piping if necessary.</p> <p>Remove any blockage. Check for flow through the heat exchanger. Replace the heat exchanger as necessary.</p> <p>Check the coolant level. If coolant level is excessively low, go to Excessive Coolant Loss in this section.</p> <p>Inspect the hoses. Replace any damaged hoses as necessary.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.7 Coolant Temperature Above normal (continued)	Coolant thermostat is malfunctioning.	Remove and test the coolant thermostat per the instructions in Section 6 - Maintenance . Replace the defective thermostat.
	Coolant pump is malfunctioning.	Remove and inspect the water pump. Replace the defective coolant pump. Contact an Authorized Cummins Repair Facility.
	Engine oil is contaminated with coolant or fuel.	Check the appearance of the engine oil. If the color and texture is abnormal, refer to the Engine Oil Contaminated in this section.
	Coolant mixture of antifreeze and water is not correct.	Verify the concentration of antifreeze in the coolant. Add antifreeze or water to correct the concentration.
	Engine oil level is above or below specification.	Check the oil level per the instructions in Section 6 - Maintenance .
	Coolant temperature sender is malfunctioning.	Replace the temperature sender as necessary.
	Coolant temperature gauge is malfunctioning.	Replace the temperature gauge as necessary.
7.1.8 Coolant Temperature Below Normal	Coolant temperature switch is malfunctioning.	Remove the temperature switch. Test the temperature switch. Repair or replace the switch, if necessary.
	The standard 120 VAC or optional 240 VAC power supply to the coolant heater is not connected.	Connect the power supply. Correct any electrical faults in the supply circuit.
	The heater's overload thermostat has operated.	Ensure that there is coolant in the heater. Allow time for the automatic overload reset to occur.
	Coolant temperature sender is malfunctioning.	Replace the temperature sender.
	Coolant temperature gauge is malfunctioning.	Replace the temperature gauge.
	Coolant is not free to circulate through the heater.	Ensure that the coolant hoses are clear. Repair or replace hoses as necessary.
	The coolant heater has failed electrically.	Replace the coolant heater.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.8 Coolant Temperature Below Normal (continued)	<p>Electronic fault codes are active.</p> <p>Coolant thermostat has failed open.</p> <p>Coolant temperature sender is malfunctioning.</p>	<p>Refer to the Vendor supplied literature or contact an Authorized Cummins Repair Facility for Fault Codes.</p> <p>Test operation of the thermostat. Replace the thermostat per instructions in Section 6 - Maintenance as necessary.</p> <p>Replace the temperature sender.</p>
7.1.9 Raw Water Drain Steaming NOTE: The raw water drain from the Coolant Heat Exchanger may steam if raw water flow is inadequate when the engine is running. It may also steam shortly after the engine is stopped. If coolant is leaking into the raw water drain piping, the steaming may last for some time while the engine cools. Antifreeze may also be observed in the raw water drain.	<p>Raw water flow did not start when the engine started.</p> <p>Engine coolant is leaking into the raw water piping in the coolant heat exchanger.</p> <p>Raw water flow not adequate.</p>	<p>Check engine coolant temperature. Go to, Coolant Temperature Above Normal in this section.</p> <p>Remove the coolant heat exchanger and perform the pressure test. Refer to Section 6 - Maintenance. If pressure is not maintained, replace the heat exchanger.</p> <p>Compare actual flow rate against required flow rate - adjust regulators to required flow.</p>
7.1.10 Raw Water Solenoid Valve fails to Operate NOTE: The raw water solenoid failure may fail to open or to close. The normally closed valve may fail to open when the engine starts. This fault will prevent raw water flow through the normal valves. Bypass flow should be aligned in this event. The valve may also fail to close because of mechanical blockage. In this event, the raw water flow from the heat exchanger does not stop when it should. Depending upon the fire protection system piping, the open solenoid valve may drain all water from the fire protection system piping that is higher than the engine's piping.	<p>Solenoid valve fails to close when the engine stops.</p> <p>Solenoid valve fails to energize.</p> <p>Solenoid fails to open mechanically.</p> <p>NOTE: Apply 12 VDC to standard operating systems or 24 VDC to optional operating systems.</p>	<p>Replace the solenoid valve. Clean the raw water strainer more frequently. Increase the frequency of operational testing.</p> <p>Check electrical continuity and insulation from ground to the solenoid. Repair any open or short circuits in the wiring.</p> <p>Apply temporary voltage to the solenoid. If the solenoid fails to operate, replace it. Contact an Authorized Cummins Repair Facility.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.11 Auto Start failure - Does not Crank on BATT A or B	The electrical connection from the fire protection system to terminal board has failed.	Test continuity and insulation from ground between the fire protection system and the engine control panel. Locate and repair any electrical fault in the field wiring or in the fire protection system panel.
	The electrical connection from terminal board to relay has failed.	Test continuity and insulation from ground between the terminal board and the relay. Locate and repair any electrical fault.
	Relay has failed.	Check de-energized continuity at relay. Replace relay if the circuit is open. Contact an Authorized Cummins Repair Facility.
	The Fire Protection System fails to produce either redundant start signal to the fire pump.	Locate and correct the common mode fault in the Fire Protection System.
7.1.12 Auto Start failure - Cranks but does not Start NOTE: <i>The fire pump engine will crank automatically when either solenoid A or solenoid B is selected at the fire protection system. However, the engine does not start. The engine will start locally. If local starting problems are identified, go to the applicable Manual Start Failure troubleshooting table.</i>	The overspeed switch has activated. The overspeed lamp is illuminated on the local control panel.	Press the RESET switch on the local control panel.
	Control power from the Fire Protection System is not available at local control panel TB-1.	Locate and correct the fault in the Fire Protection System or the field wiring to the local control panel as necessary.
	Circuit Breaker CB is open in the local control panel.	Check whether Circuit Breaker CB at the local control panel is open. If open, reset the circuit breaker. Locate and correct any electrical faults in the control panel. Press the RESET Switch on the local control panel.
	The AUTO/MANUAL Mode Switch fails to select AUTO mode.	Open Circuit Breaker CB at the local control panel and test switch operation electrically as necessary. Replace the switch or repair other electrical faults as necessary. When done, close Circuit Breaker CB at the local control panel.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.12 Auto Start failure - Cranks but does not Start (continued)	<p>The overspeed switch has failed.</p> <p>NOTE: <i>Check system basics</i></p> <ul style="list-style-type: none"> - <i>Battery voltage level</i> - <i>Fuel supply</i> - <i>Crank speed</i> <p><i>Reference base engine T/R manual.</i></p>	<p>Check power and grounding to the overspeed switch. Repair any electrical faults.</p> <p>Test and adjust the overspeed setting. Refer to Overspeed Set Point Adjustment and Testing in Section 6 - Maintenance. Replace switch as necessary.</p>
7.1.13 Auto Start failure - Engine Starts but Crank Terminate Does Not Occur	<p>The overspeed switch not correctly adjusted or has failed.</p> <p>Breaker has tripped. The raw water solenoid valve fails to open.</p> <p>The speed sensor has failed. The tachometer indicates zero RPM.</p> <p>An electrical fault is present in the Fire Protection System.</p> <p>An electrical fault is present between Control Panel and the Fire Protection System.</p>	<p>With the engine running, verify speed sensor input to the overspeed switch.</p> <p>If signal is not present, see Speed Sensor Has Failed. The tachometer also indicates zero speed.</p> <p>Adjust the overspeed switch crank terminate set point. Replace the overspeed switch as necessary.</p> <p>Open the raw water bypass valves. RESET breaker switch. Locate and repair any local electrical fault.</p> <p>Locate and repair any electrical fault in the speed sensor circuitry. Replace the speed sensor as necessary.</p> <p>Test continuity and insulation from ground between the fire protection system and the engine control panel. Locate and repair any electrical fault in the field wiring.</p> <p>Test continuity and insulation from ground between the fire protection system and the engine control panel. Locate and repair any electrical fault in the field wiring.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.14 Manual Start Failure from Solenoid Lever - Does not Crank on A or B NOTE: <i>The fire pump engine will not crank locally when either solenoid lever is actuated.</i>	<p>Crank Battery A and B switches failed to make contact.</p> <p>Both batteries dead.</p> <p>Solenoid A/B failed to operate.</p> <p>Starter motor has failed.</p> <p>An electrical fault is present in the power or ground circuit for the starter motor.</p> <p>Engine is seized.</p>	<p>Test electrical operation of Crank Batt A and B Switches. Replace the faulty switches as necessary.</p> <p>Charge or replace batteries.</p> <p>Test the electrical operation of the Solenoid A and Solenoid B. Replace the faulty solenoids as necessary.</p> <p>Replace the starter motor.</p> <p>Test continuity and insulation from ground between the battery splice, the ground connection, and the starter motor. Locate and repair any electrical fault.</p> <p>Bar the engine over to break the seizure. Contact an Authorized Cummins Repair Facility.</p>
7.1.15 Manual Start Failure from Control Panel - Does not Crank on A or B NOTE: <i>The fire pump engine will not crank locally from the control panel when either CRANK BATT A or CRANK BATT B is selected, however, it does start when a solenoid lever is actuated.</i>	<p>The AUTO/MANUAL Mode Switch contact fails to close.</p> <p>An electrical fault exists in the signal power circuit or the ground to the Relays.</p> <p>Breaker Switch has tripped. The raw water solenoid valve also fails to open.</p>	<p>Test the electrical operation of the AUTO/MANUAL Mode Switch. Replace the faulty switch as necessary.</p> <p>Test continuity and insulation from ground between the AUTO/MANUAL Mode Switch and the Relays. Check the relay connection to ground. Locate and repair any electrical fault.</p> <p>Open the raw water bypass valves. Locate and repair any local electrical fault. RESET the Breaker Switch.</p>
7.1.15 Manual Start Failure from Control Panel - Does not Crank on A or B (continued)	<p>An electrical fault exists in the signal power circuit or the ground to the overspeed switch's crank circuit.</p> <p>Overspeed switch crank circuit fails to reset with engine shut-down.</p>	<p>Test continuity and insulation from ground between breaker and the overspeed switch's crank circuit. Check the crank circuit output to the CRANK BATT Switches. Locate and repair any electrical fault.</p> <p>Test and adjust the crank setting as necessary. Refer to Overspeed Set Point Adjustment and Testing in Section 6 - Maintenance. Replace the overspeed switch as necessary.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.16 Engine Cranks Normally But Will Not Start (No Exhaust Smoke)	Electronic fault codes are active.	Refer to the Vendor supplied literature or contact an Authorized Cummins Repair Facility for Fault Codes.
	Electronic control module (ECM) is locked up.	Disconnect the battery cables for 30 seconds. Then, reconnect the battery cables, and start the engine.
	Battery voltage supply to the electronic control module (ECM) is low, interrupted, or open.	Check the battery connections, the fuses, and the battery supply circuit.
	No fuel in supply tank.	Check and replenish fuel supply. Check fittings and hose connections and hose conditions.
	Air is in the fuel system.	Check for air in the fuel system. Tighten or replace the fuel connections, fuel lines, fuel tank stand pipe and fuel filters as necessary. Vent air from the system.
	Fuel drain line is restricted.	Check the fuel drain lines for restriction. Clear or replace the fuel lines, check valves, or tank vents as necessary.
	Fuel filter is clogged.	Replace the fuel pre-filter/water separator. Refer to Change Fuel Filter in Section 6 - Maintenance . Replace the primary fuel filter. Refer to Change Fuel Filter in Section 6 - Maintenance .
	Fuel grade is not correct for the application or the fuel quality is poor.	Operate the engine from a tank of high-quality no. 2 diesel fuel.
	Fuel injection pump is malfunctioning. Pump timing incorrect.	Contact an Authorized Cummins Repair Facility.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.16 Engine Cranks Normally But Will Not Start (No Exhaust Smoke) (continued)	<p>Fuel tank is empty.</p> <p>Fuel pump overflow valve is malfunctioning.</p> <p>Fuel suction line is restricted.</p> <p>Fuel connections on the suction side of the fuel lift pump are loose.</p> <p>Fuel suction stand pipe in the fuel tank is broken.</p> <p>Fuel supply is not adequate.</p> <p>Fuel tank air breather is blocked.</p> <p>Fuel lift pump is malfunctioning.</p> <p>Injection pump drive shaft or drive shaft key is damaged.</p> <p>Fuel injectors are plugged.</p> <p>Moisture is in the wiring harness connectors.</p> <p>Starter motor rotation is not correct or not turning engine.</p>	<p>Fill the fuel supply tank.</p> <p>Check the overflow valve. Replace if necessary.</p> <p>Check the fuel suction line for restriction.</p> <p>Tighten all the fuel fittings and connections between the fuel tanks and fuel lift pump.</p> <p>Check and repair the stand pipe, if necessary.</p> <p>Locate and correct the restriction in the customer supplied fuel lines to the engine.</p> <p>Clean the fuel tank breather.</p> <p>Check the fuel lift pump for correct operation. Check the pump output pressure. Replace the fuel lift pump if necessary.</p> <p>Repair or replace the injection pump.</p> <p>Replace the fuel injectors.</p> <p>Dry the connectors with Cummins electronic cleaner, Part Number 3824510.</p> <p>Check the direction of crankshaft rotation. Replace the starter motor as necessary. Contact an Authorized Cummins Repair Facility.</p>
7.1.17 Engine Cranks Slowly But Does Not Start NOTE: <i>Typical engine cranking speed is 120 RPM. Engine cranking speed can be checked with a hand-held tachometer, stroboscope, or electronic service tool</i>	<p>The battery cable connections are loose, broken, or corroded creating excessive resistance.</p> <p>The battery is not properly charged or has failed.</p> <p>Engine oil level is too high.</p>	<p>Check the battery cables and connections. Ensure that connections are clean and tight.</p> <p>Recharge the battery. If the battery does not take the charge, replace it.</p> <p>Check the oil level per instructions in Section 6 - Maintenance. Drain any excess oil.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.17 Engine Cranks Slowly But Does Not Star (continued)	Engine oil is the wrong grade or type.	Check the grade and type of oil. Refer to Engine Oil Recommendations and Specifications in Section 6 - Maintenance .
	Engine temperature is too low.	If the wrong type or grade of oil is present, drain and replace it. Refer to Change Engine Oil and Filters in Section 6 - Maintenance . Troubleshoot per Coolant Temperature Below Normal (Engine Off) in this section.
	Starter motor is malfunctioning.	Replace the starter motor. Contact an Authorized Cummins Repair Facility.
7.1.18 Engine Stops During Operation	Normal automatic mode shut-down occurs when the fire protection systems removes the signal power feed to the local control panel.	No action required. This is a desirable outcome.
	The selected engine control module (ECM) has detected a serious fault condition. The ECM's STOP light is displayed.	For instructions on how to read active fault codes, refer to Diagnostic Fault Codes in the Vendor supplied literature or contact a Cummins Authorized Repair Facility.
	In the automatic mode, the signal power feed is lost from the fire protection system to the control panel.	Locate and correct the electrical fault in the fire protection system or the field wiring to the engine control panel.
	Circuit breaker on control panel tripped.	Locate and correct the electrical fault in engine control panel. RESET the tripped breaker.
	An overspeed trip has occurred. The overspeed trip lamp illuminated on the local control panel.	Remote indications may also be present. Overspeed switch failure has occurred. The trip indications may not be present. Go to Engine Overspeed Trip in this section.
	Power supply or grounding fault exists at the Electronic Control Module.	Locate and correct the electrical fault in the power supply or grounding for the ECM.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.18 Engine Stops During Operation (continued)	The selected ECM has failed.	Select the alternate ECM. Replace the failed ECM. Contact an Authorized Cummins Repair Facility.
	Fuel tank level is low.	Fill the fuel tank. Fill and bleed the fuel lines to the engine.
	Clogged fuel tank air breather hole.	Clean the fuel tank breather.
	Fuel piping to engine is clogged.	Clean and repair engine fuel piping.
	The fuel filter is clogged.	Replace the fuel filter. Refer to Change Fuel Filter in Section 6 - Maintenance .
	Air is trapped in the low pressure fuel lines at the engine.	Bleed the fuel lines. Refer to Air in Fuel in Section 6 - Maintenance .
	Fuel lift pump has failed	Check the fuel lift pump for correct operation. Check the pump output pressure. Replace the fuel lift pump if necessary. Contact an Authorized Cummins Repair Facility.
	Fuel injection pump has failed.	Replace the fuel injection pump. Contact an Authorized Cummins Repair Facility.
	Electronic fault codes are active.	Refer to the Vendor supplied literature or contact an Authorized Cummins Repair Facility.
	Programmable parameters or selected features are not correct.	Check the programmable parameters and the selected features with an electronic service tool. Set the parameters and features again if necessary. Refer to a Cummins Authorized Repair Facility.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.19 Engine Will Not Reach Rated Speed (RPM)	Tachometer is not calibrated. Compare the tachometer reading with a hand held tachometer or an electronic service tool reading.	If out of calibration, calibrate the tachometer as necessary at the CAL adjustment on the back of the gauge. Refer to the Vendor supplied literature for additional information. Tachometer is malfunctioning. Replace the tachometer. Contact an Authorized Cummins Repair Facility.
	Engine power output is low.	Refer to the Engine Acceleration or Response Poor in this section.
	Fuel filter requires replacement.	Refer to Change Fuel Filter per the instructions in Section 6 - Maintenance .
	Fuel grade not correct for the application, or fuel quality is poor.	Operate the engine with a good quality no. 2 diesel fuel.
	Fuel suction line is restricted.	Check the fuel suction line for restriction.
	Air-fuel tube leaking, waste gate diaphragm ruptured, or waste gate plumbing damaged.	Tighten the fittings, repair plumbing, replace waste gate diaphragm.
	Charge air cooler restricted.	Inspect the air cooler for internal and external restrictions. Replace the restricted cooler if necessary.
	Fuel supply is not adequate.	Locate and correct the restriction in the fuel lines to the engine.
	Stop circuit malfunction in the fire pump controller of field wiring.	In the AUTO mode, the fire pump engine stops upon loss of signal power from the fire pump controller. Check stop circuit in Fire Pump Controller.
7.1.20 Engine Will Not Shut Off Remotely	Stop circuit malfunction in the fire pump controller of field wiring.	Correct any faults. Check for short to voltage on the signal wiring from the fire pump controller to the engine control panel. Correct any faults. Check operation of the switch contacts of the AUTO/MANUAL switch at the engine control panel. Replace the switch if the switch contacts fail to operate properly.
	Electronic fault codes are active.	Refer to the Vendor supplied literature or contact a Cummins Authorized Repair Facility.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.20 Engine Will Not Shut Off Remotely (continued)	Engine running on fumes drawn into the air intake.	Identify and isolate the source of the combustible fumes. Contact an Authorized Cummins Repair Facility.
7.1.21 Engine Will Not Shut Off Locally	Inadvertent power source is present from the fire pump controller. Electronic fault codes are active. Engine running on fumes drawn into the air intake.	In the MANUAL Mode, the fire pump engine stops when the AUTO/MANUAL Switch is returned to the AUTO Mode. Check for inadvertent voltage on the wiring to terminal board at the engine control panel. Refer to the Vendor supplied literature or contact a Cummins Authorized Repair Facility. Identify and isolate the source of the combustible fumes.
7.1.22 Fuel Consumption is Excessive	Fuel is leaking. Poor-quality fuel is being used. Defective or clogged injection nozzle. Injection pump is adjusted incorrectly causing excessive injection. Air intake or exhaust leaks. Air intake system restriction is above specification.	Check the fuel lines, fuel connections, and fuel filters for leaks. Check the fuel lines to the supply tanks. Repair any leaks. Assure good-quality no. 2 diesel fuel is being used. Replace the defective or clogged injection nozzle. Adjust or replace the injection pump. Check for loose or damaged piping connections and missing pipe plugs. Check the turbo-charger and exhaust manifold mounting. Repair any leaks. Check the air intake system for restriction. Refer to Check Air Cleaner Service Indicator in Section 6 - Maintenance . Replace the air filter as necessary.
7.1.23 Fuel or Engine Oil Leaking From Exhaust Manifold	Intake air restriction is high.	Check the air intake system for restriction. Refer to Check Air Cleaner Service Indicator in Section 6 - Maintenance . Replace the air filter if required.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.23 Fuel or Engine Oil Leaking From Exhaust Manifold (continued)	Turbocharger drain line is restricted.	Remove the turbocharger drain line and check for restriction. If required, clean or replace the drain line.
	Turbocharger oil seal is leaking.	Check the turbocharger for oil seals and for leaks. Refer to the Turbocharger Leaks Engine Oil or Fuel symptom tree in this section.
7.1.24 Engine Oil is Contaminated	Bulk oil supply is contaminated.	Check the oil supply. Replace it is necessary. Drain the oil and replace with non-contaminated oil. Also, replace the oil filter. Refer to Change Engine Oil and Filters in Section 6 - Maintenance .
	Fuel is present in the engine oil.	Refer to the Fuel in Engine Oil in this section.
	Coolant is present in the engine oil.	Refer to the Coolant in Engine Oil symptom tree in this section.
	Metal is present in the engine oil.	Contact an Authorized Cummins Repair Facility.
7.1.25 Engine Oil Consumption is Excessive	Verify the oil consumption rate.	Check the amount of oil added versus the operating hours.
	Engine crankcase overfilled.	Remove excess oil and recalibrate dipstick.
	External engine leak is present.	Inspect the engine and its components for seal, gasket, tappet cover, oil cooler, or drain cocks leaks. Repair or correct any leaks.
	Crankcase ventilation system is plugged.	Check and clean the crank case breather and vent tube per the instructions in Section 6 - Maintenance .
	Turbocharger oil seal is leaking.	Check the turbocharger compressor and turbine seals. Contact an Authorized Cummins Repair Facility.
	Engine oil cooler is leaking.	Check for engine oil in the coolant. Refer to the Engine Oil in the Coolant in this section. Contact an Authorized Cummins Repair Facility.
	Engine oil does not meet specifications for operating conditions.	Change the oil and filters per the instructions in Section 6 - Maintenance .

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.25 Engine Oil Consumption is Excessive (continued)	Engine oil drain interval is excessive.	Verify the correct engine oil drain interval. Refer to Change Engine Oil and Filters in Section 6 - Maintenance .
	Piston, cylinder liner, or piston rings are worn or damaged.	Check for air intake system leaks. Contact an Authorized Cummins Repair Facility.
	Piston rings are not seated correctly (after an engine rebuild or piston installation).	Check blowby. If blowby is excessive, check the piston rings for correct seating. Contact an Authorized Cummins Repair Facility.
7.1.26 Engine Oil in the Coolant	Bulk coolant supply is contaminated.	Check the coolant expansion tank per the instructions in Section 6 - Maintenance . Drain the coolant and replace with non-contaminated coolant. Refer to Drain and Flush Cooling System in Section 6. Replace the coolant filter. Refer to Change Coolant Filter in Section 6 - Maintenance .
	Engine oil cooler is malfunctioning.	Check the oil cooler. Contact an Authorized Cummins Repair Facility.
	Cylinder head gasket damaged or leaking.	Contact an Authorized Cummins Repair Facility.
	Cylinder head is cracked or porous.	Remove intake manifold. Remove exhaust manifold. Check for evidence of coolant leak. If necessary, operate engine at idle. Pressure-test the cylinder head. Contact an Authorized Cummins Repair Facility.
	Cylinder block is cracked or porous.	Remove the oil pan. Pressure-test the cooling system to check for leaks. Contact an Authorized Cummins Repair Facility.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.27 Engine Overspeed Trip NOTE: <i>An engine overspeed trip occurs when the engine's speed exceeds the value specified on the Factory Setting Tag described in Section 2 - Description. The trip isolates the fuel supply to the engine and it stops immediately. The trip is indicated on the local control panel and inside the local control panel on the speed switch. Additionally, a trip output is supplied to the fire protection system for remote display.</i>	<p>Engine operated at too great a speed due to catastrophic load failure such as pipe break, pump mechanical failure, or loss of suction.</p> <p>Engine actually operated at too great a speed due to configuration error.</p> <p>Overspeed switch is set at too low a set point.</p> <p>Speed switch wiring failure has occurred.</p> <p>Speed switch failure has occurred.</p>	<p>Correct the cause of the load failure. Contact a Cummins Authorized Repair Facility.</p> <p>Check rated speed setting as specified on the Factory Setting Tag. Refer to Rated Speed Set Point Adjustment and Testing in Section 6 - Maintenance.</p> <p>Check overspeed speed setting as specified on the Factory Setting Tag. Refer to Overspeed Set Point Adjustment and Testing in Section 6 - Maintenance.</p> <p>Check continuity and insulation from ground for the signal power wiring and ground wiring to the speed switch. Replace defective components and repair electrical faults.</p> <p>If the speed switch fails to operate as per Overspeed Set Point Adjustment and Testing in Section 6 - Maintenance, replace the speed switch. Contact an Authorized Cummins Repair Facility.</p>
7.1.28 Tachometer Does not Indicate Engine Speed	<p>An electrical fault exists in the tachometer power and grounding circuits.</p> <p>An electrical fault exists in the speed sensor input circuit.</p>	<p>Check continuity and insulation from ground for the power wiring and ground wiring to the tachometer. Contact an Authorized Cummins Repair Facility. Replace defective components and repair electrical faults.</p> <p>This fault may also cause a failure in the crank terminate signal to the fire protection system. Check continuity and insulation from ground for the speed sensor circuit. Contact an Authorized Cummins Repair Facility. Replace defective components and repair electrical faults.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.28 Tachometer Does not Indicate Engine Speed (continued)	The speed sensor has failed.	With the engine running, check the signal from the speed sensor with an oscilloscope or pulse counter. Replace the speed sensor if it has failed. Contact an Authorized Cummins Repair Facility.
	The tachometer has failed.	Check the operation of the tachometer with a pulse generator. Replace the tachometer if it has failed. Contact an Authorized Cummins Repair Facility.



Section 8 - Component Parts and Assemblies

8.1 Part Ordering Information

Replacement parts for the Cummins Inc. equipment are manufactured to the same quality standards and specifications as the original equipment. Unapproved substitution may result in poor performance, reduced service life, lost production or unsafe operation.

Cummins Inc. relies on the best and most cost effective shipping methods, unless specific instructions or requirements are requested by the customer. When ordering parts please be prepared to provide the following information.

PART REQUESTS REQUIRE:

1. Model and serial number.
2. Part description by name or number
3. Quantity required.
4. Purchase order number.

NOTE: *A purchase order number is desirable, even if the part(s) are supplied on a Returned Goods Authorization (RGA) issue number. A purchase order number helps Cummins NPower Inc. and its customer track the parts and necessary credits.*

8.2 Routine Service and Parts

Personnel at Cummins Authorized Repair Locations can assist you with the correct operation and service of your engine. Cummins has a worldwide service network of more than 5,000 Distributors and Dealers who have been trained to provide sound advice, expert service, and complete parts support.

Check the telephone directory yellow pages or refer to the directory in this section for the nearest Cummins Authorized Repair Location.

8.3 Emergency Repairs and Technical Service

The Cummins Customer Assistance Center provides a 24-hour, toll free telephone number to aid in technical and emergency service when a Cummins Authorized Repair Location can not be reached or is unable to resolve an issue with a Cummins product.

If assistance is required, call Toll-Free: 1-800-DIESELS (1-800-343-7357) Includes all 50 states, Bermuda, Puerto Rico, Virgin Islands, and the Bahamas.

Outside of North America contact your Regional Office. Telephone numbers and addresses are listed in the International Directory.

Refer also to the Cummins Inc. web site at www.cummins.com

8.4 Recommended Spares Inventory

To minimize downtime and increase productivity, Cummins Inc. recommends maintaining a stock of spare parts critical to uninterrupted engine operation. Shipping costs can be lower using ground transportation rather than overnight or next day air freight. For this reason Cummins Inc. can provide a list of recommended spare parts. Contact the Cummins Authorized Repair Location for additional information.






Section 8.5 - Assembly Drawings

Description	Drawing No.	Sheet No	Revision Level
Drawing, Installation, FirePump, CFP5E	13255		C
Drawing, Installation, FirePump, CFP7E	13235		D
Options, Engine, FirePump, G-Drive, CFP5E	13211		A
Options, Engine, FirePump, G-Drive, CFP7E	13208		A
Assembly, Engine Mounting, CFP5E	13847		B
Assembly, Engine Mounting, CFP7E	12905		C
Assembly, Air Cleaner, CFP5E	13378		A
Assembly, Air Cleaner, CFP7E	14439		A
Assembly, Hose Connection, Air Intake CFP5E/7E	13303		A
Assembly, Air Transfer CFP5E	13306		-
Assembly, Air Transfer CFP7E	13241		-
Assembly, Heat Shield, CFP5E/7E	14397		-
Assembly, Mounting Heat Exchanger/CAC, CFP5E/7E	13246		C
Assembly, Coolant Heater, CFP5E	13851		A
Assembly, Coolant Heater, CFP7E	14187		C
Assembly, Operator Station, CFP5E/7E	13250		A
Assembly, Panel, Instrument, 12VDC	13236		-
Assembly, Panel, Instrument, 24VDC	13237		-
Assembly, Sensor Package, CFP5E/7E	9574-02		A
Assembly, Fuel System CFP5E	13313		C
Assembly, Fuel System CFP7E	14191		D
Assembly, Valve Cover CFP5E	13772		-
Assembly, Valve Cover CFP7E	13849		A
Misc. Piping, Cooling Loop, Raw Water, CFP5E	15301		-
Misc. Piping, Cooling Loop, Raw Water, CFP7E	14376		C
Assembly, Raw Water Cooling, Loop 3/4"	8682		D
Assembly, Secondary ECM CFP5E/7E	13309		A
Assembly, ECM Switch	10748	1-4	D
Assembly, Harness, CFP7E	13297		-
Harness, CFP7E	13298	1-2	-
Harness, CFP7E	13299	1-2	-
Harness, CFP7E	13300	1-2	-
Harness, CFP7E	13301	1-2	-
Assembly, Harness, CFP5E	14426		-
Harness, CFP5E	14427	1-2	-
Harness, CFP5E	14428	1-2	-
Harness, CFP5E	14429	1-2	-
Harness, CFP5E	14430	1-2	-
Harness, Proximity switch 12-24V	12865		A
Schematic, ECM Switch Mapping CFP7E	14445		-
Schematic, ECM Switch Mapping CFP5E	14446		-
Exhaust, 4" Bellows w/ Elbow	8550		D
Assembly, Drive Shaft & Guard	10165		A
Assembly, Stub-Shaft, SAE #3, 2.25" QSB, QSC, 4B, 6B, 6C	8619		B
Kit, Loose Wires, 4B, 6B, 6C, QSB	9767		D
General Layout, FirePump, CFP5E	14319		-
General Layout, FirePump, CFP7E	14244		-
Schematic, Control Panel	10423	1-6	E
Harness, Engine	8513	1-2	L

The most current revisions to these drawings and related documents are accessible at: <http://www.cumminsfirepower.com/products.html>.

Section 8.5 - Assembly Drawings

THIS PAGE INTENTIONALLY LEFT BLANK

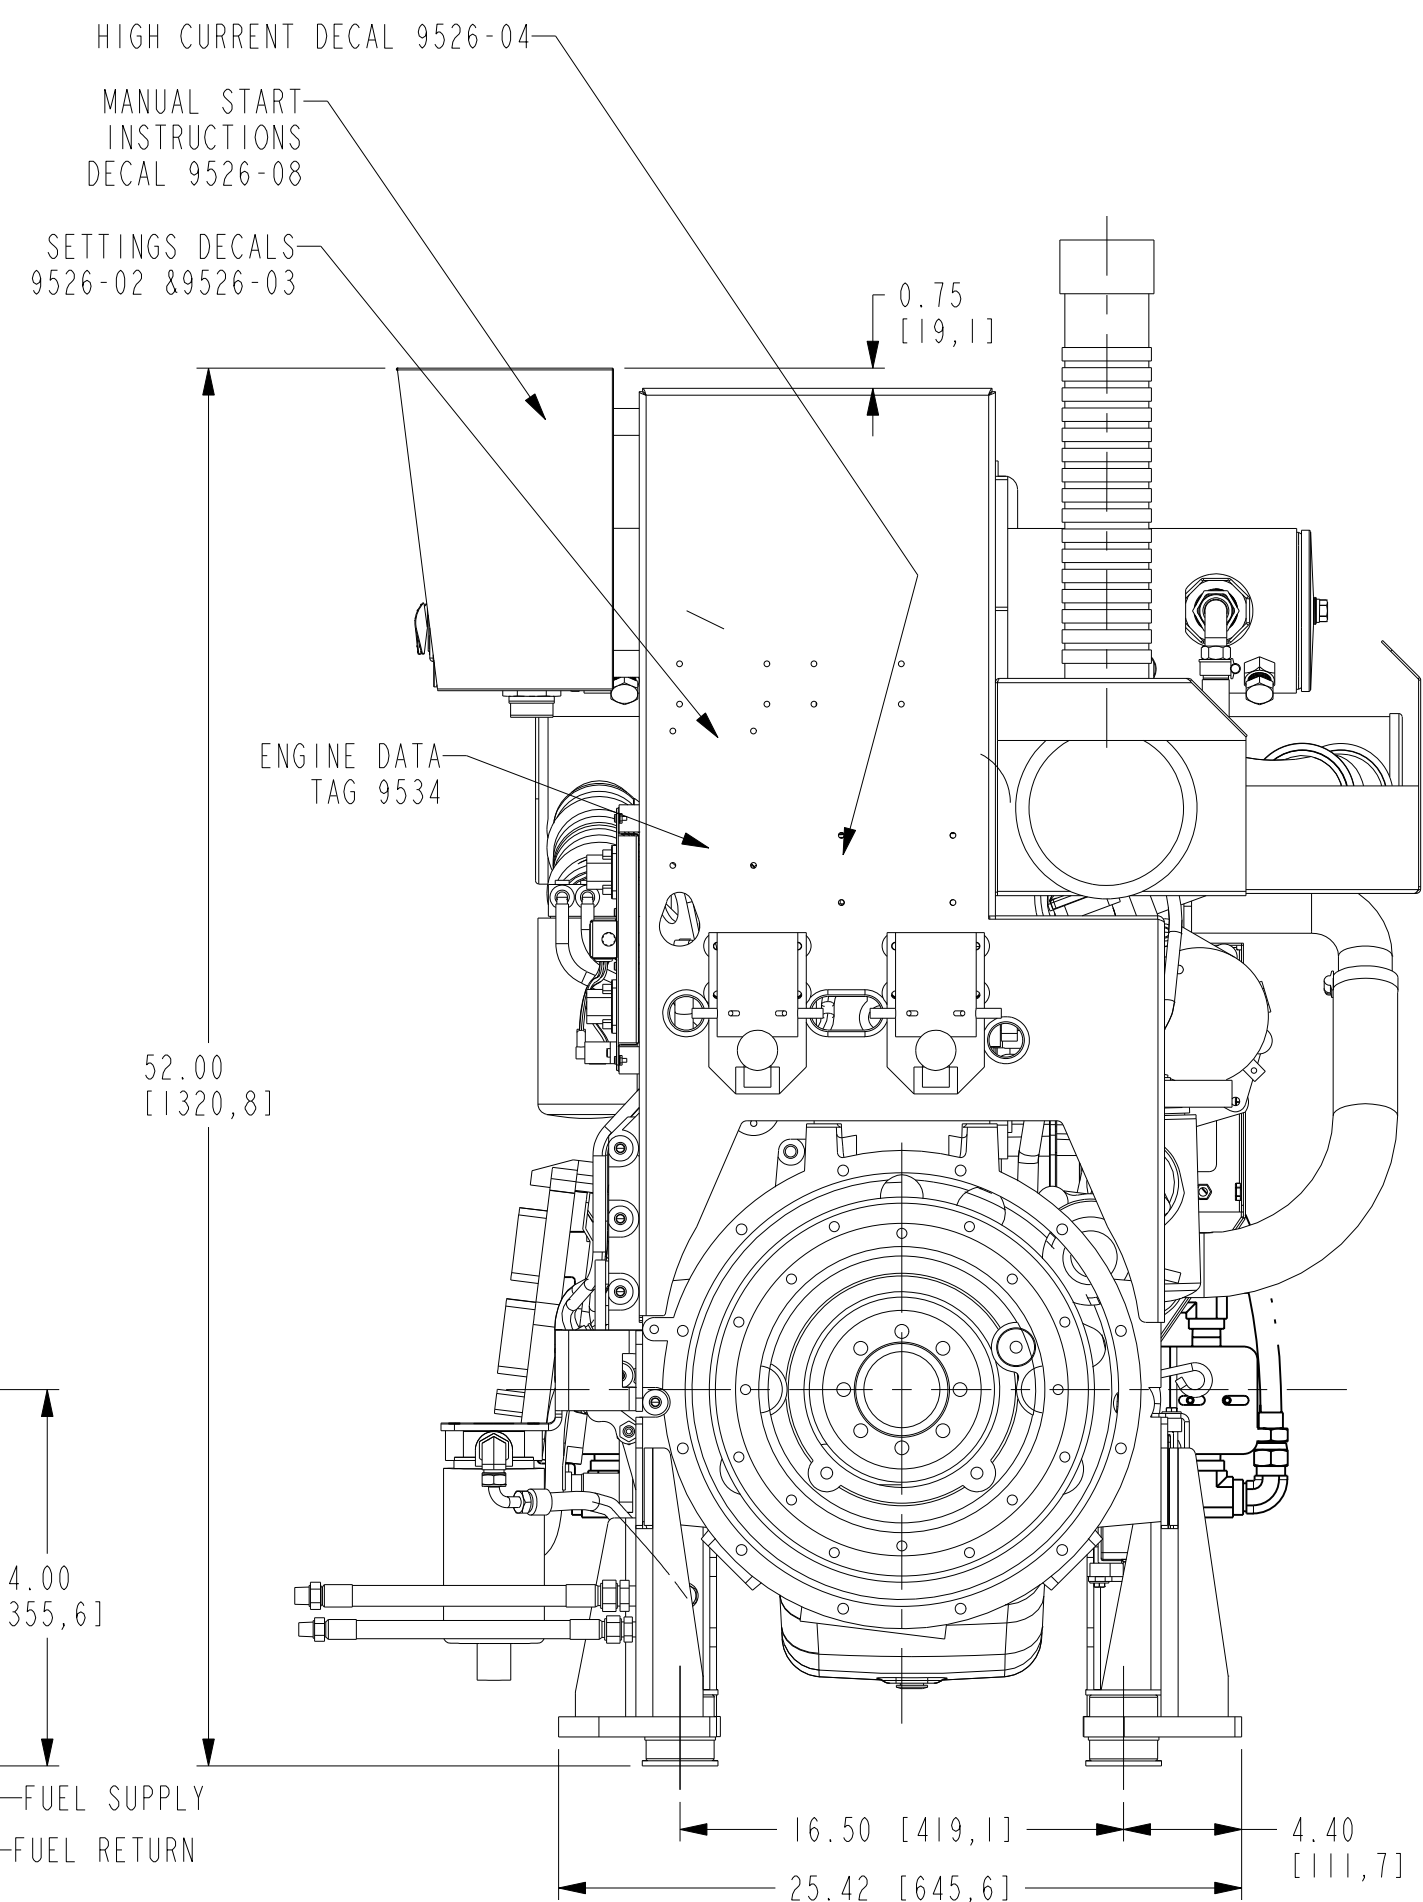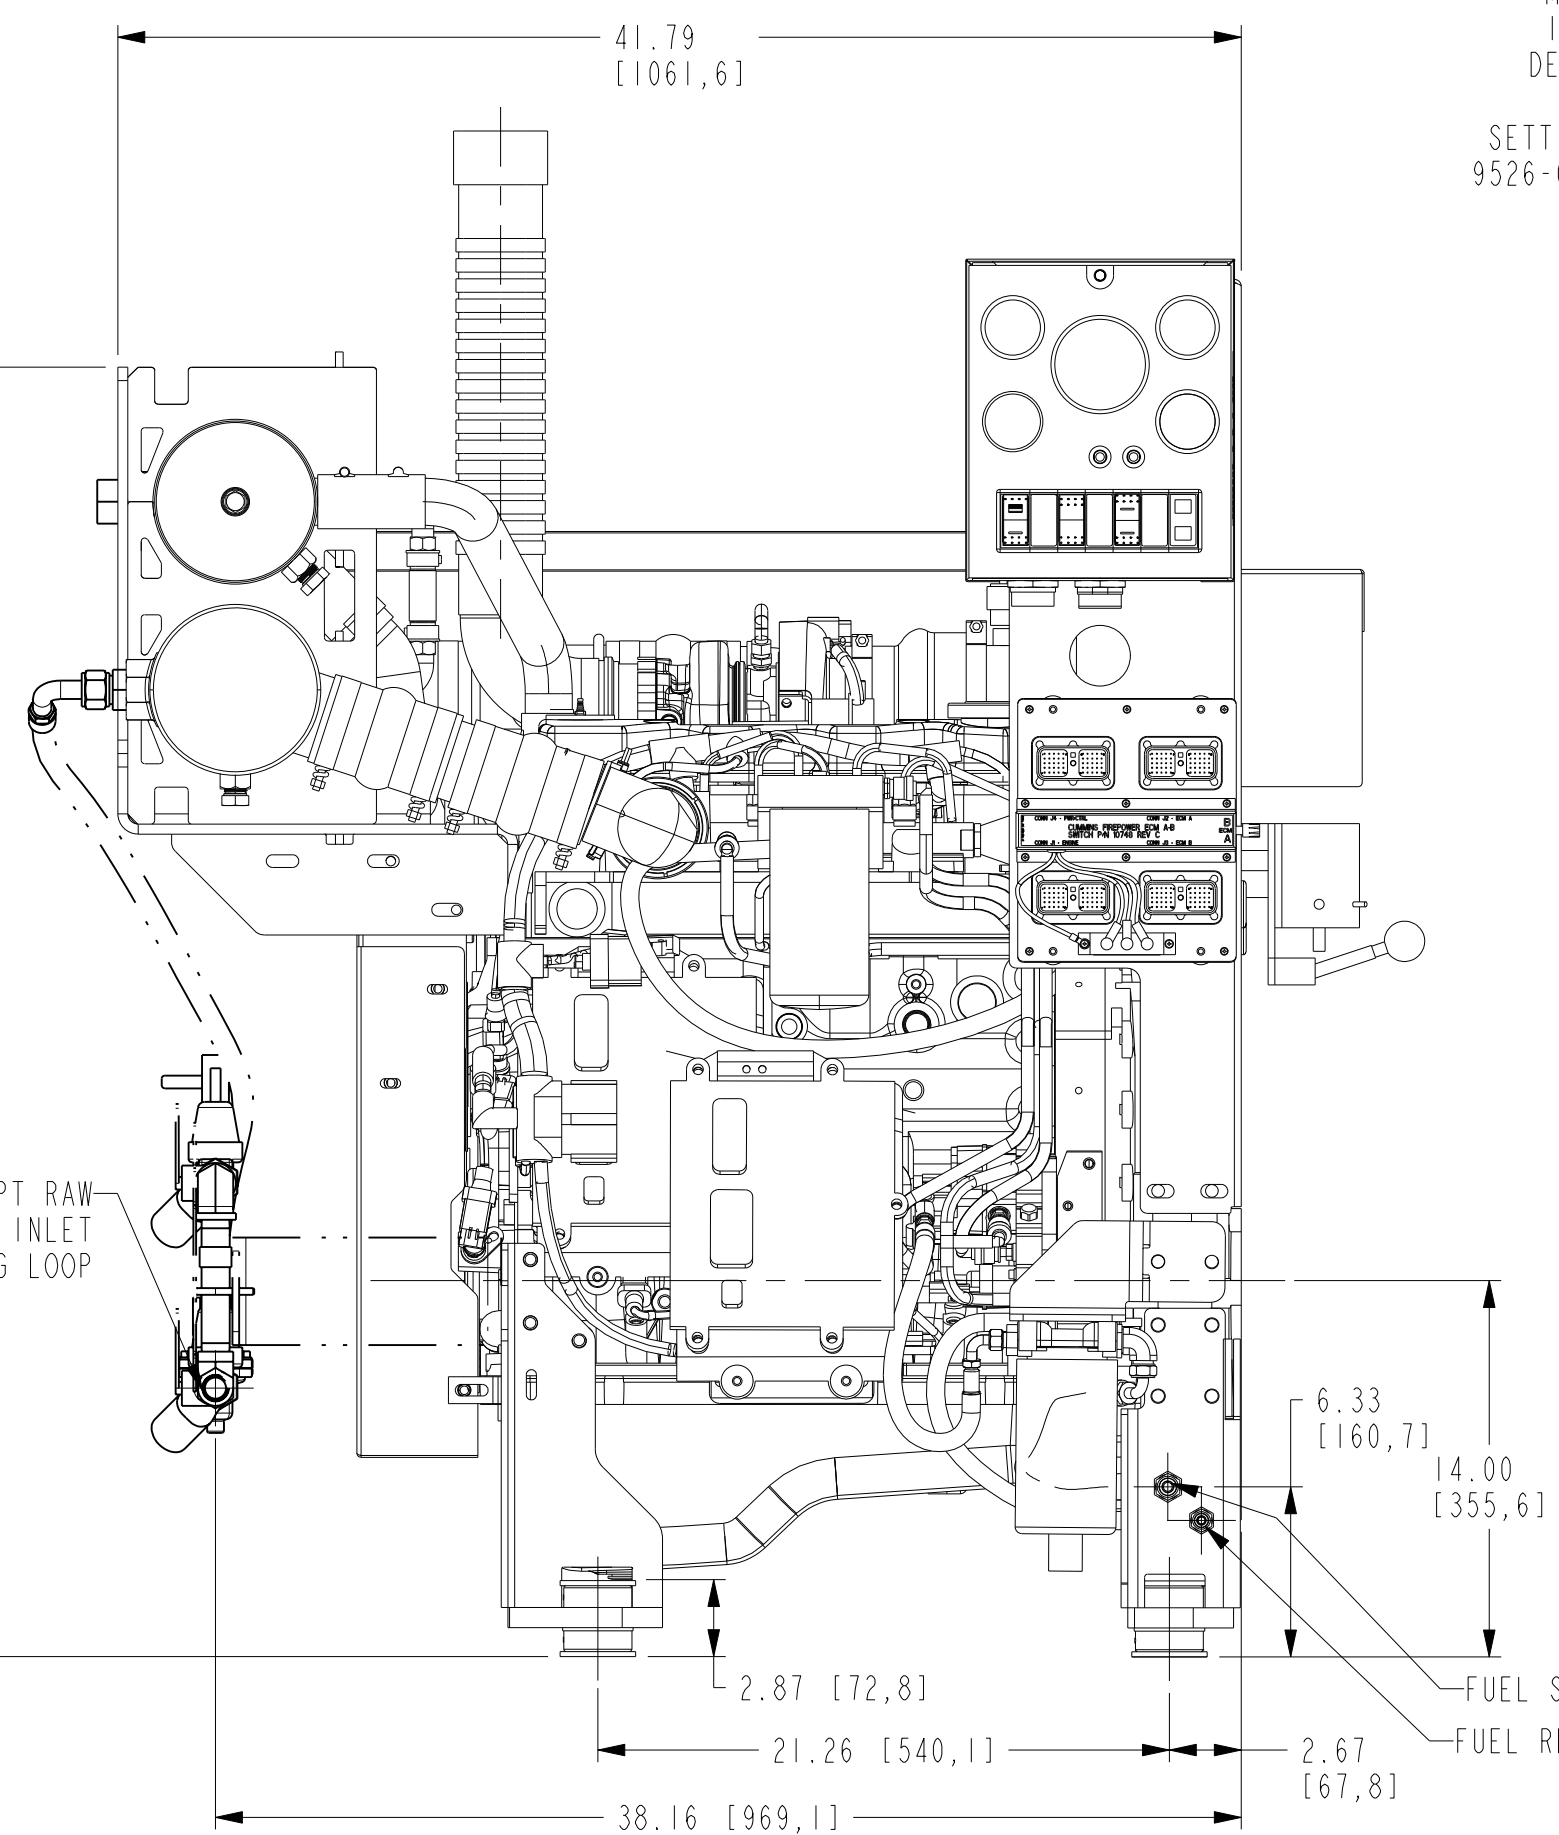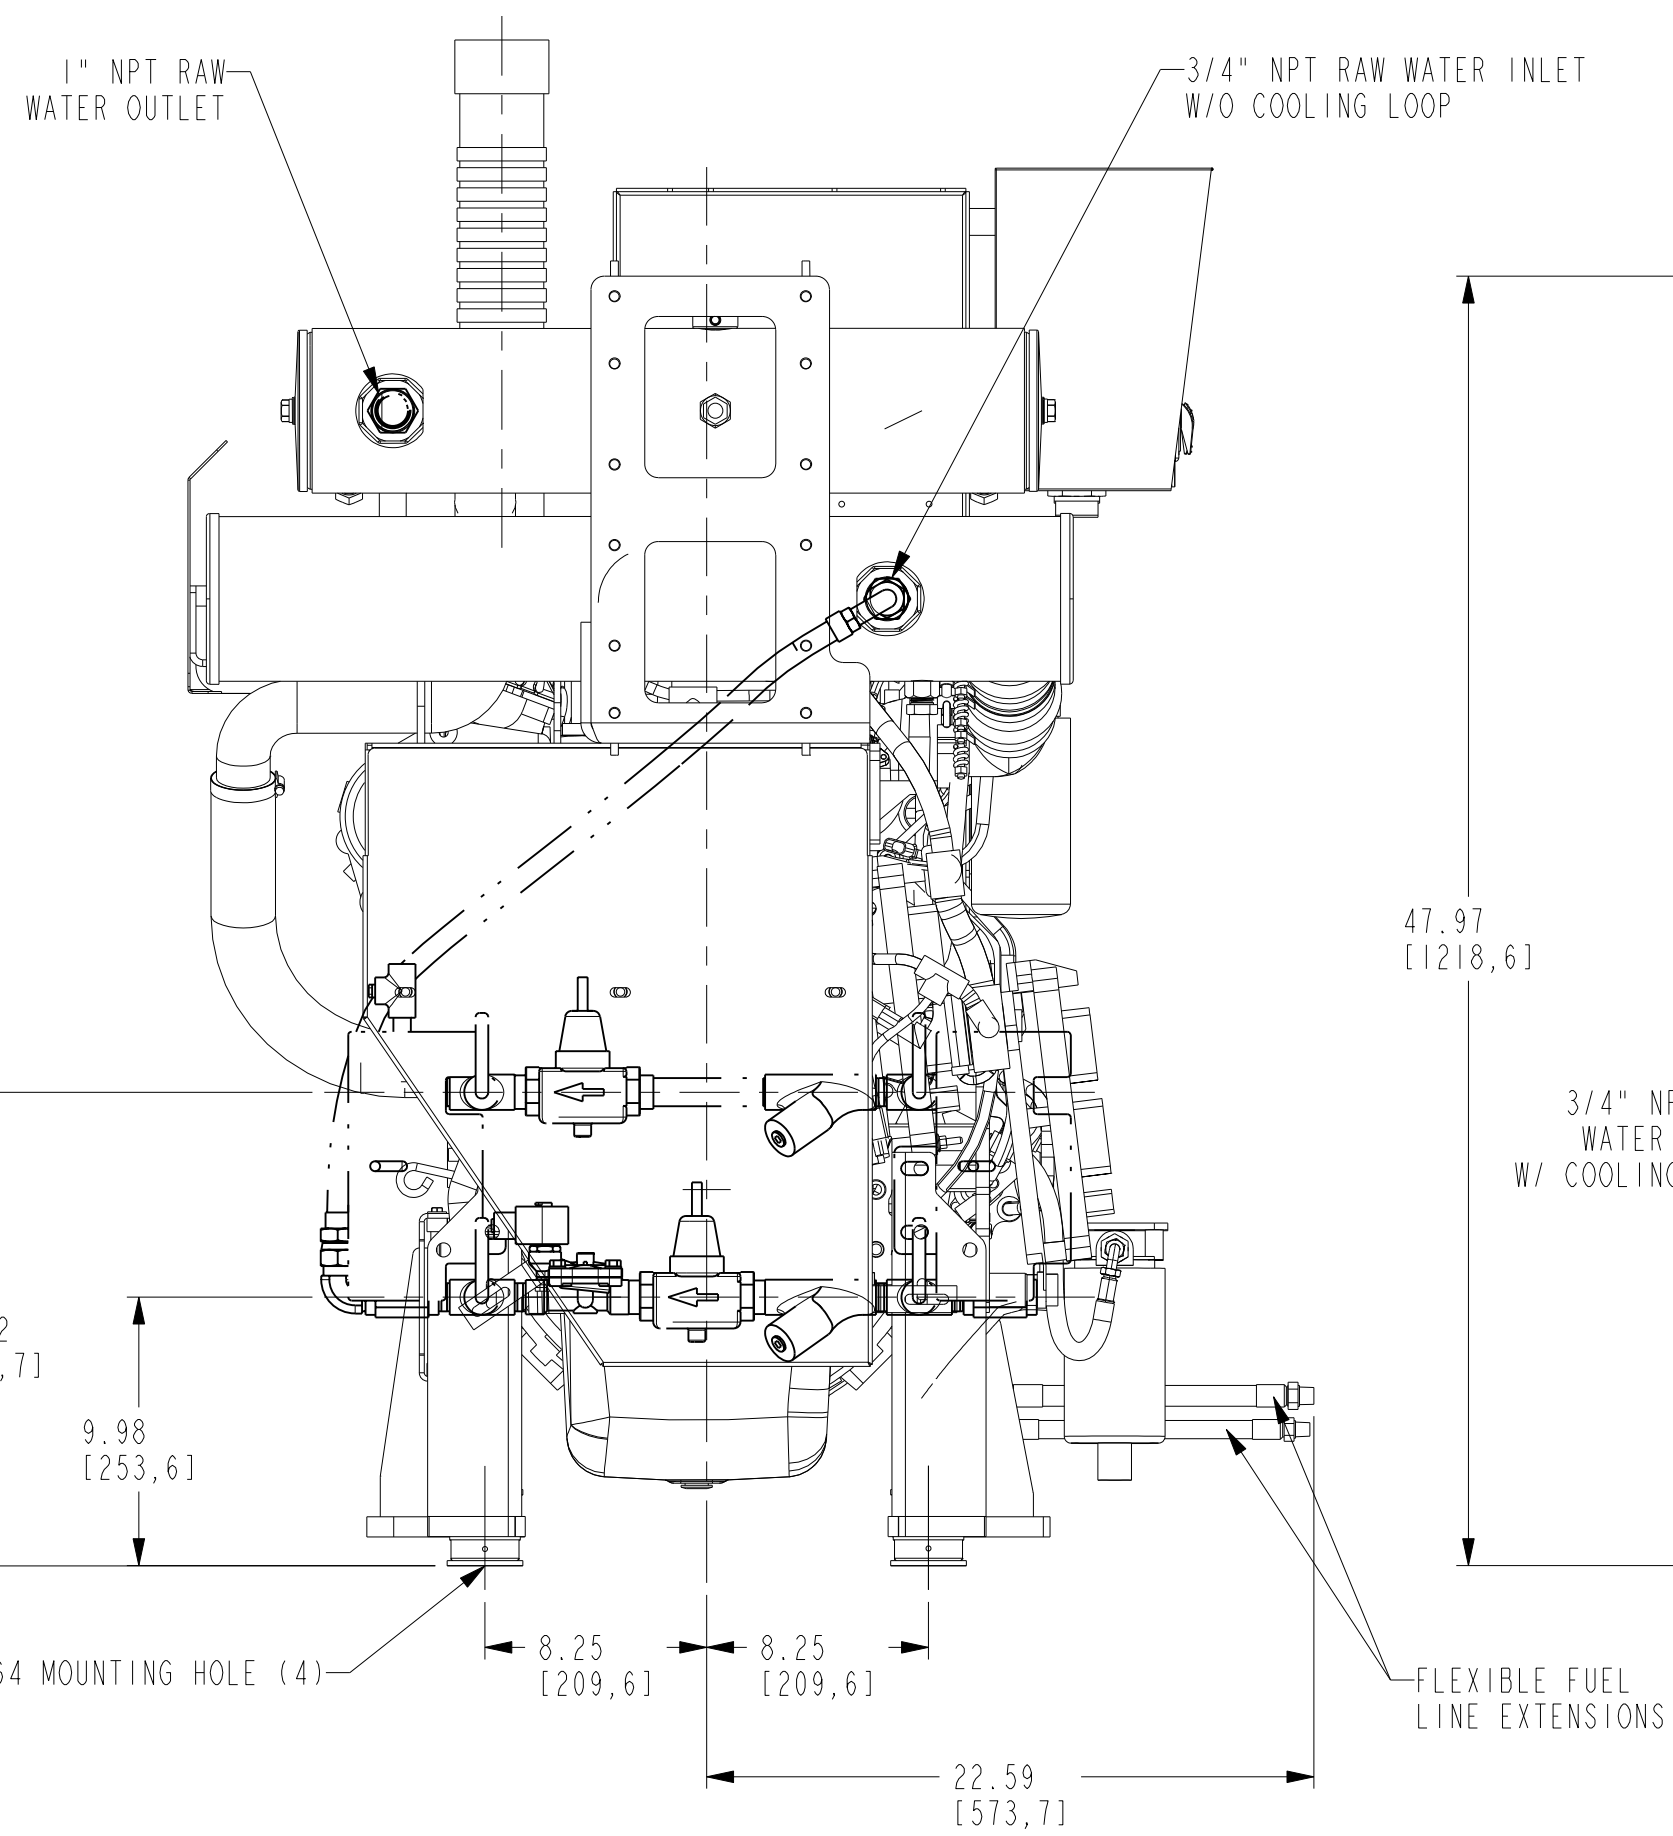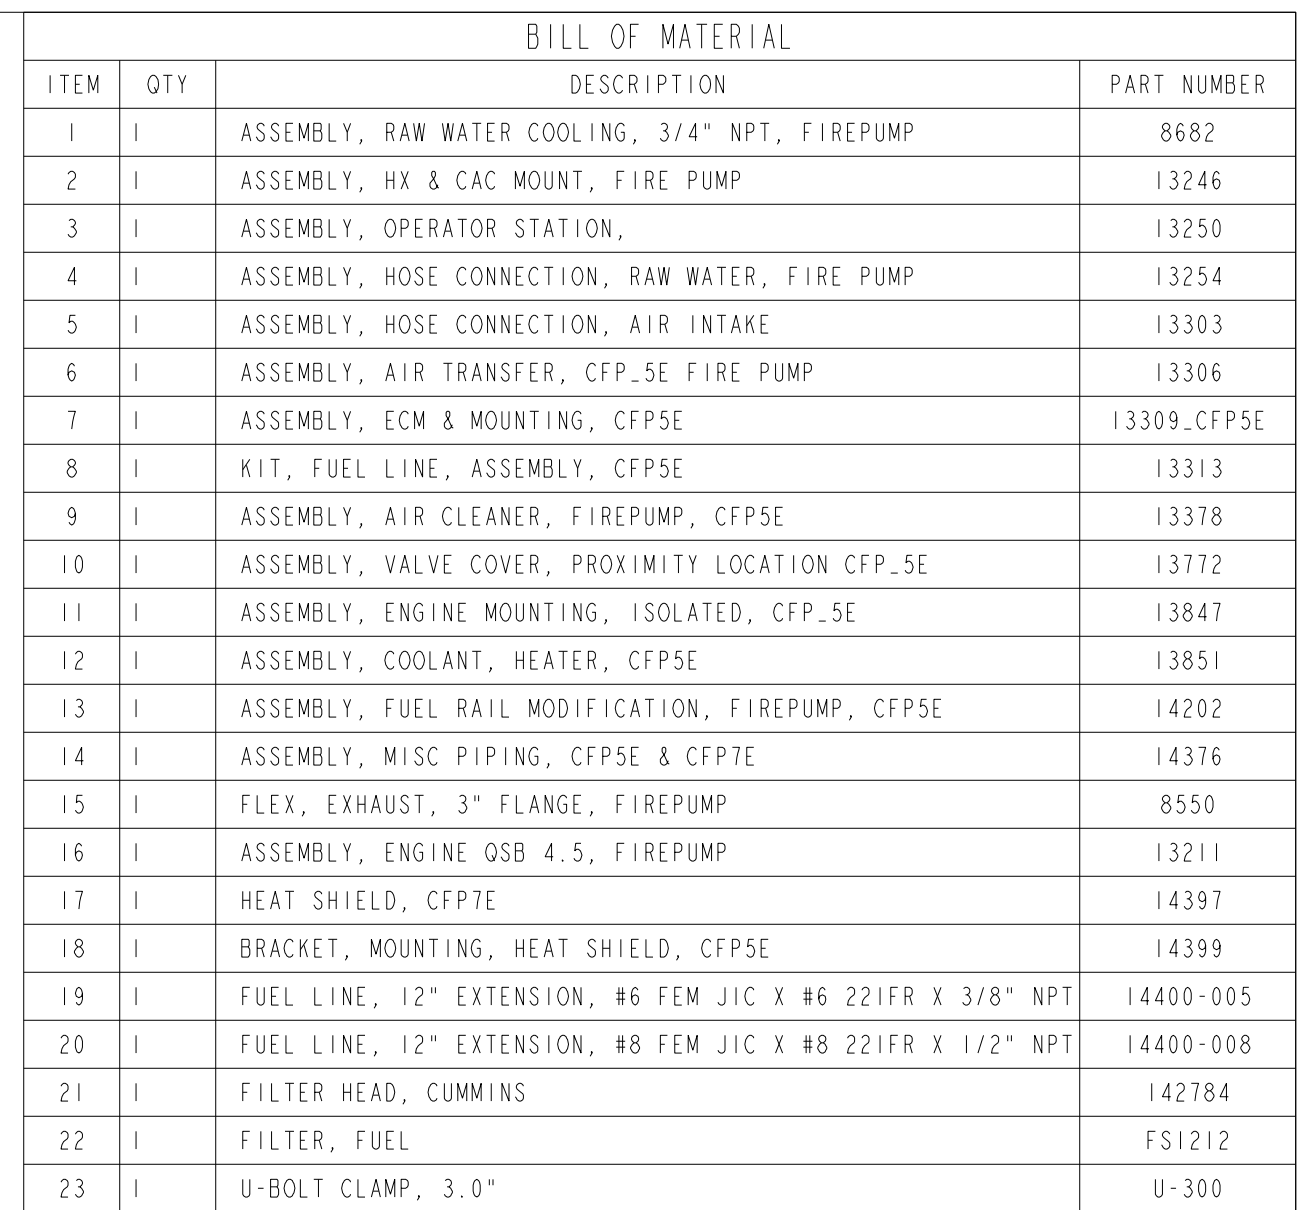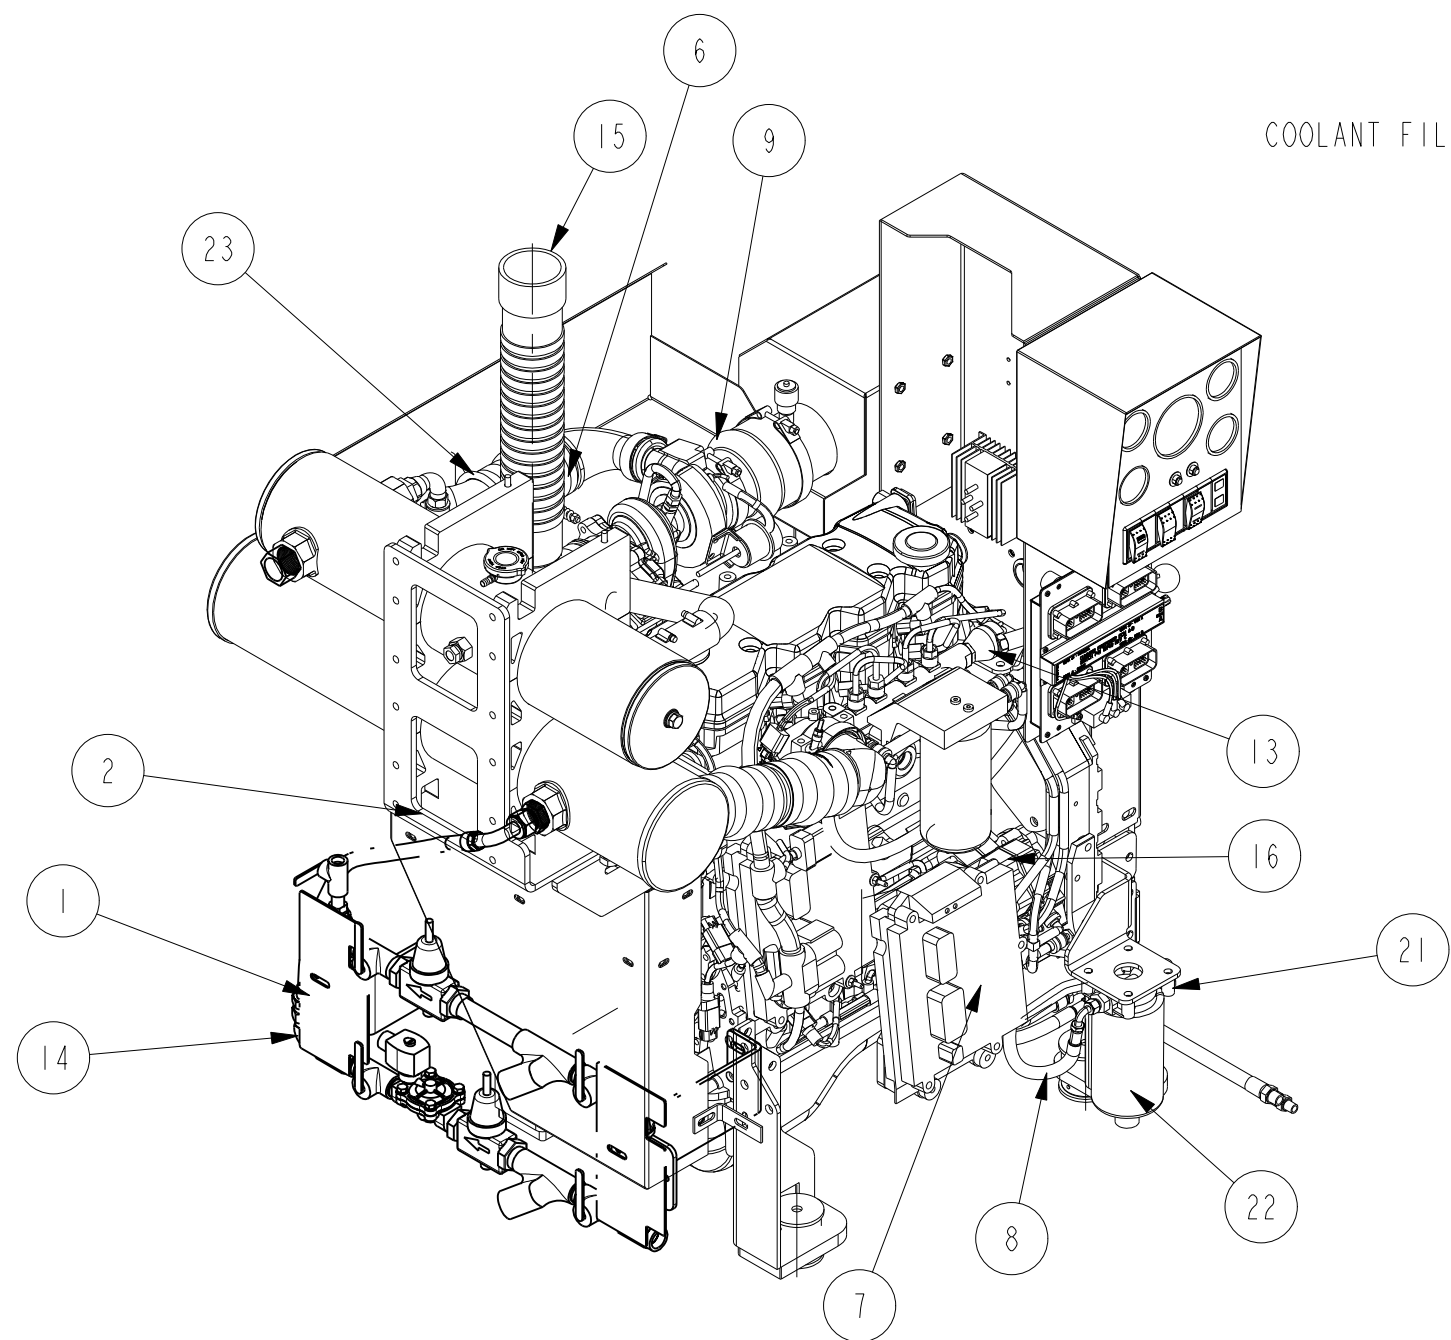


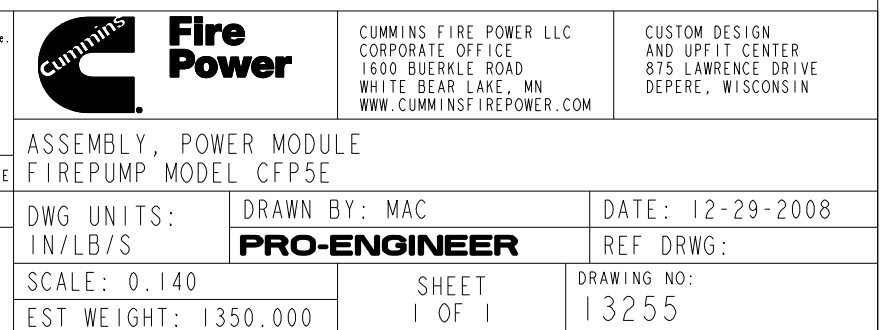
C	2009-092	REVISED AS BUILT	DAVE N	12MAR200
B	2009-010	REV PER ENGINE SUPPORT, REV PER FUEL ASSEMBLY, REV TITLE BLOCK	DAN	23JAN200
A	2008-555	13851 WAS 8556, 13976 WA 13225 OMIT PN: 13340, OMIT PN:13344, OMIT PN:13341, OMIT PN:10766 ADD PN:13772, ADD PN:13309, ADD PN: 13847, ADD PN:13854, ADD PN:13979 ADD PN:14202	MAC	12-29-200
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and releasing of the document or accepting the document, is not to disseminate or give the document or any copy thereof or the document in any form to any other person without the written consent of Cummins Firepower, if it will not use the document or any copy thereof or the document in any form to any other person without the written consent of Cummins Firepower. (3) not disclose to others either the document or the confidential or trade secret information therein, or any copy thereof, or any part thereof, or any third angle, or upon demand, return the document, all copies thereof, and all material contained therein. COPYRIGHT Cummins Fire Power LLC




UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ARE $\pm 1^\circ$





	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION		
	FINISH TOLERANCES IN $\pm .010$ IN $\pm .015$	FINISH TOLERANCES IN $\pm .25$ IN $\pm .38$
	FORM TOLERANCES IN $\pm .005$ IN $\pm .010$	FORM TOLERANCES IN $\pm .13$ IN $\pm .25$
	FORM TOLERANCES IN $\pm .005$ IN $\pm .010$	FORM TOLERANCES IN $\pm .13$ IN $\pm .25$
	FORM TOLERANCES IN $\pm .005$ IN $\pm .010$	FORM TOLERANCES IN $\pm .13$ IN $\pm .25$



**SHOWN WITH OPTIONAL COOLING LOOP

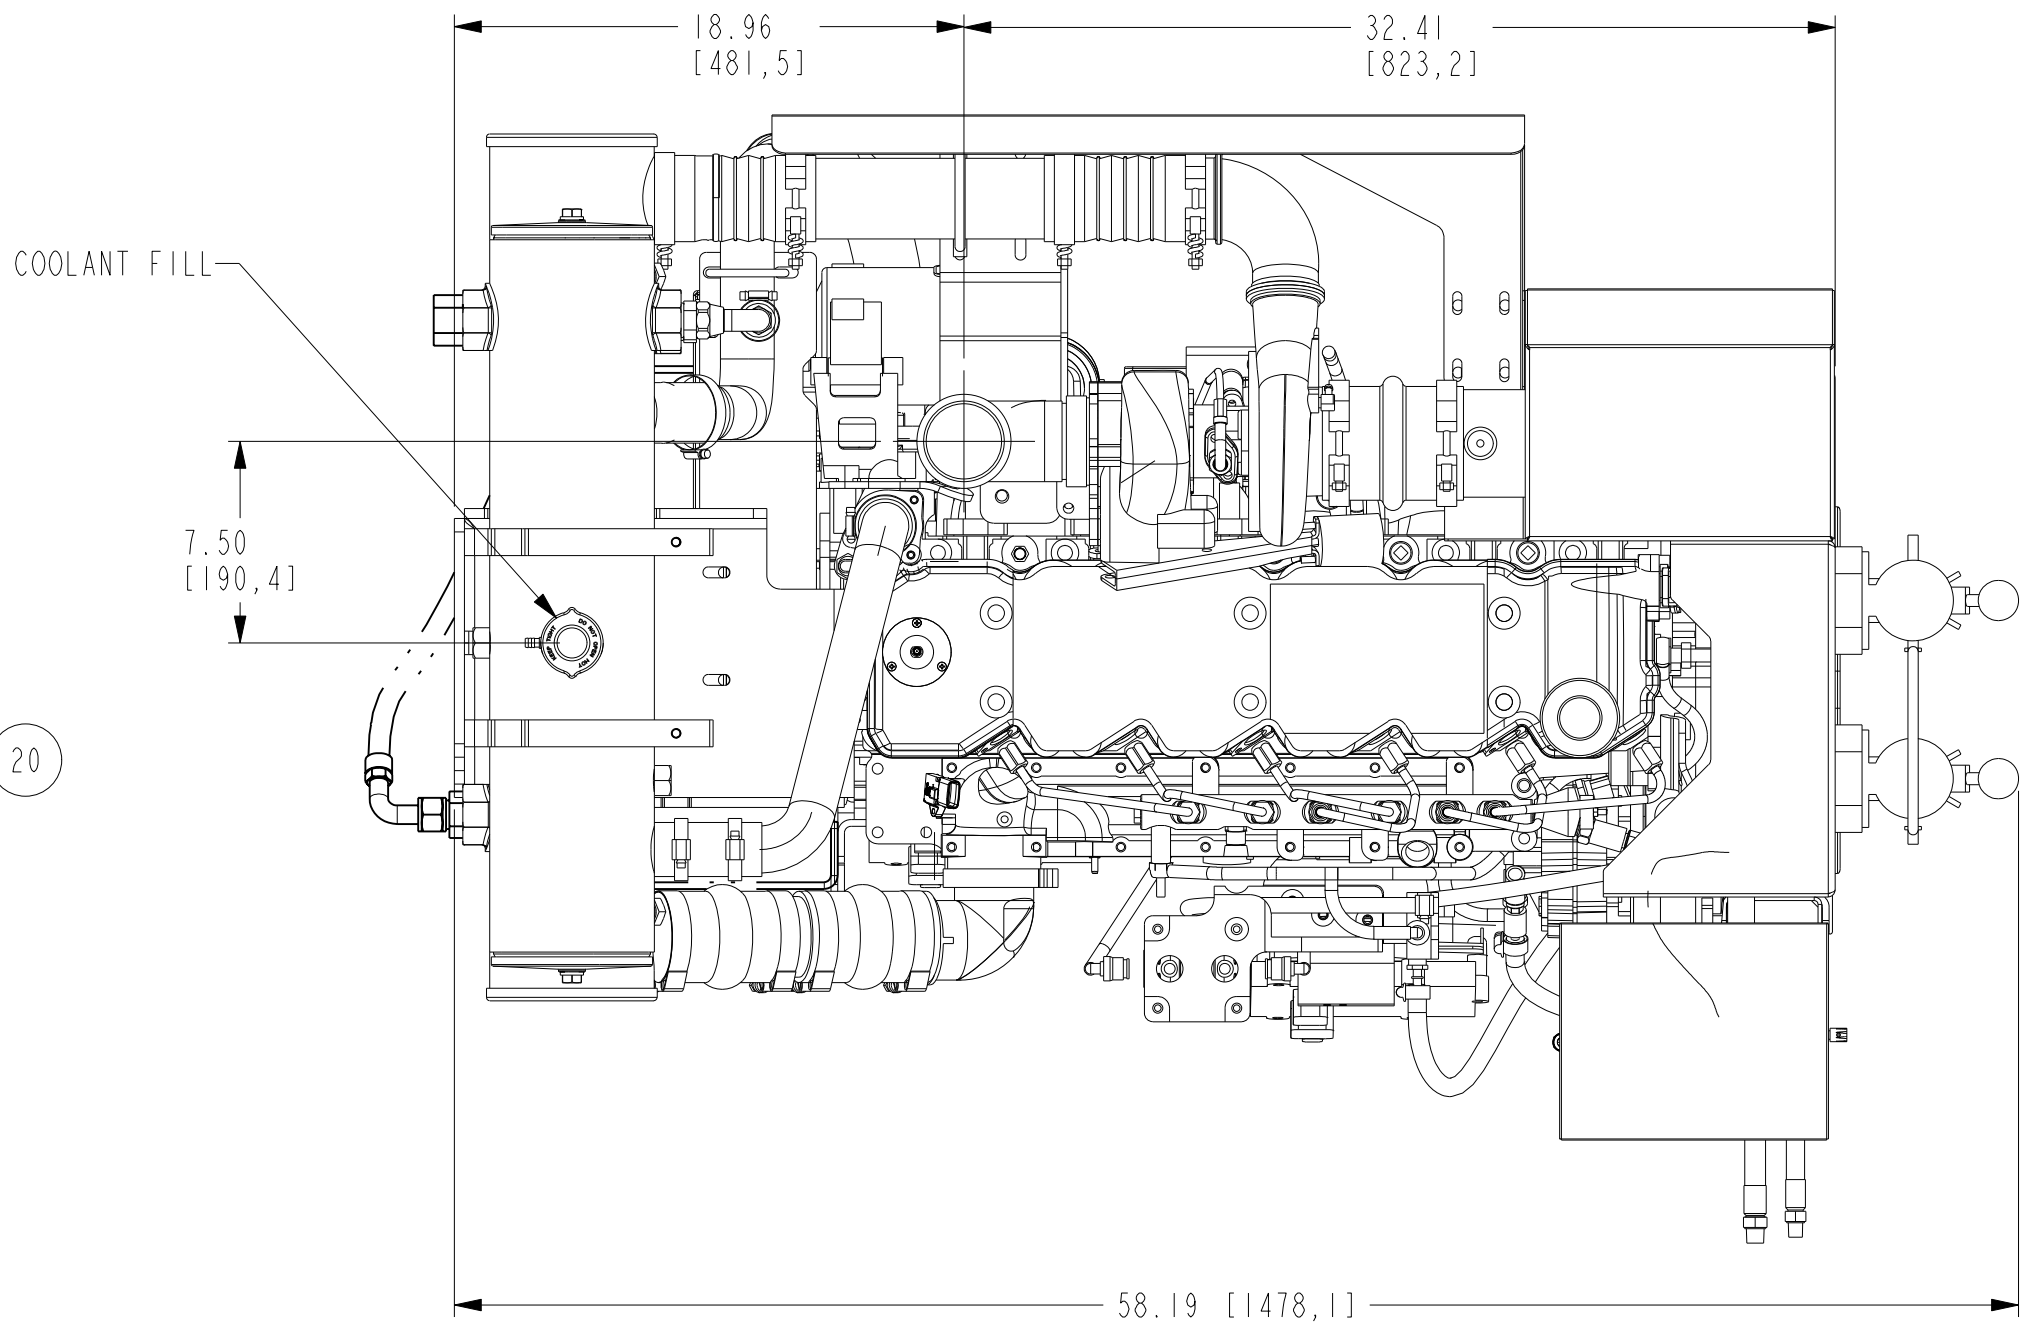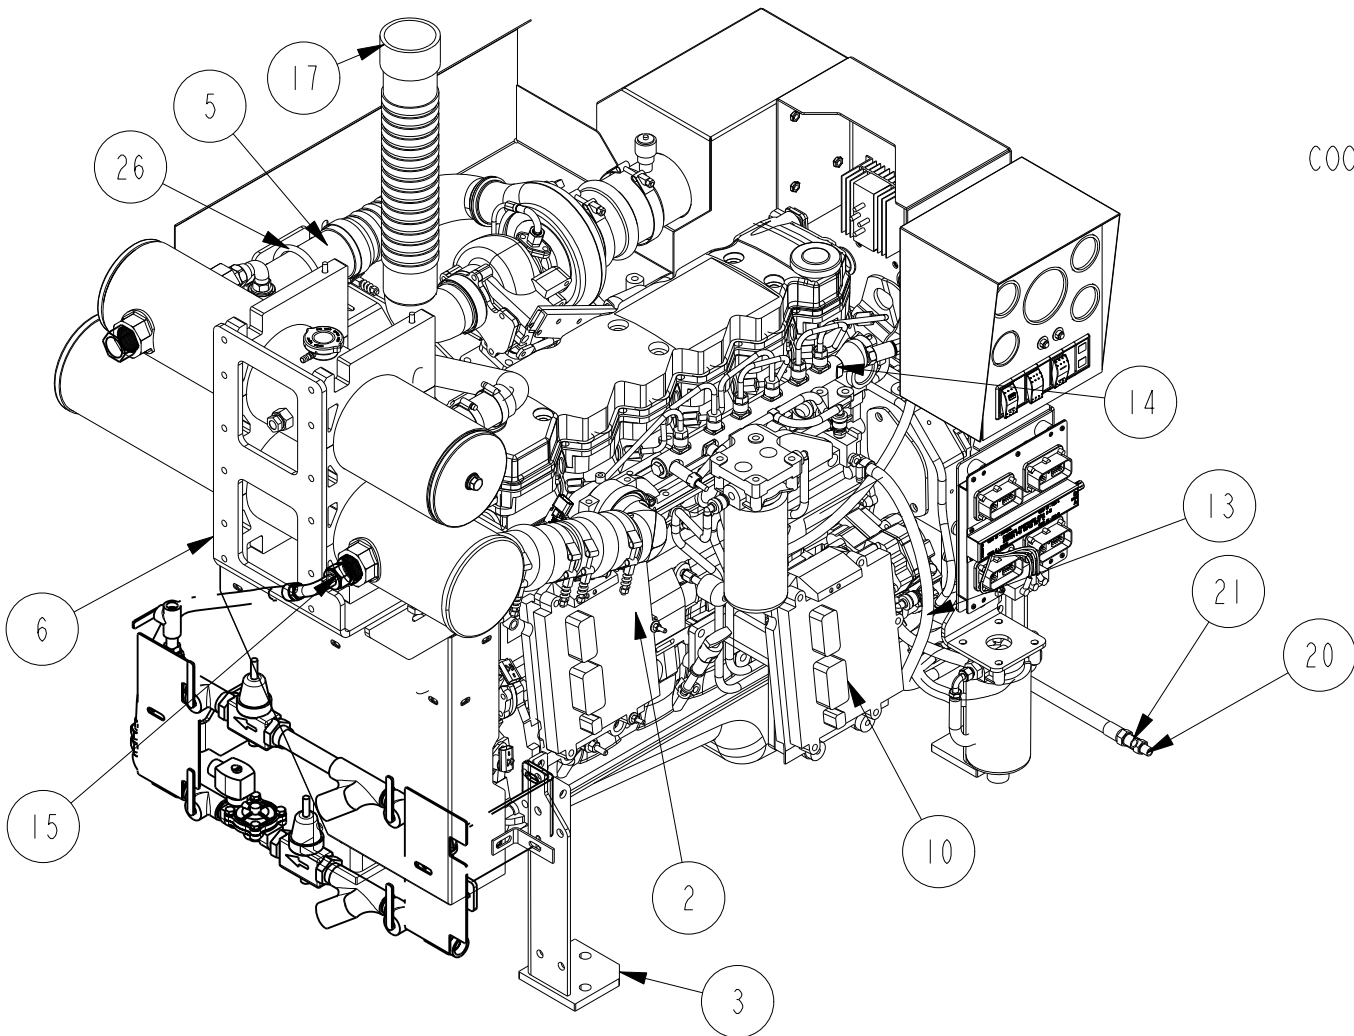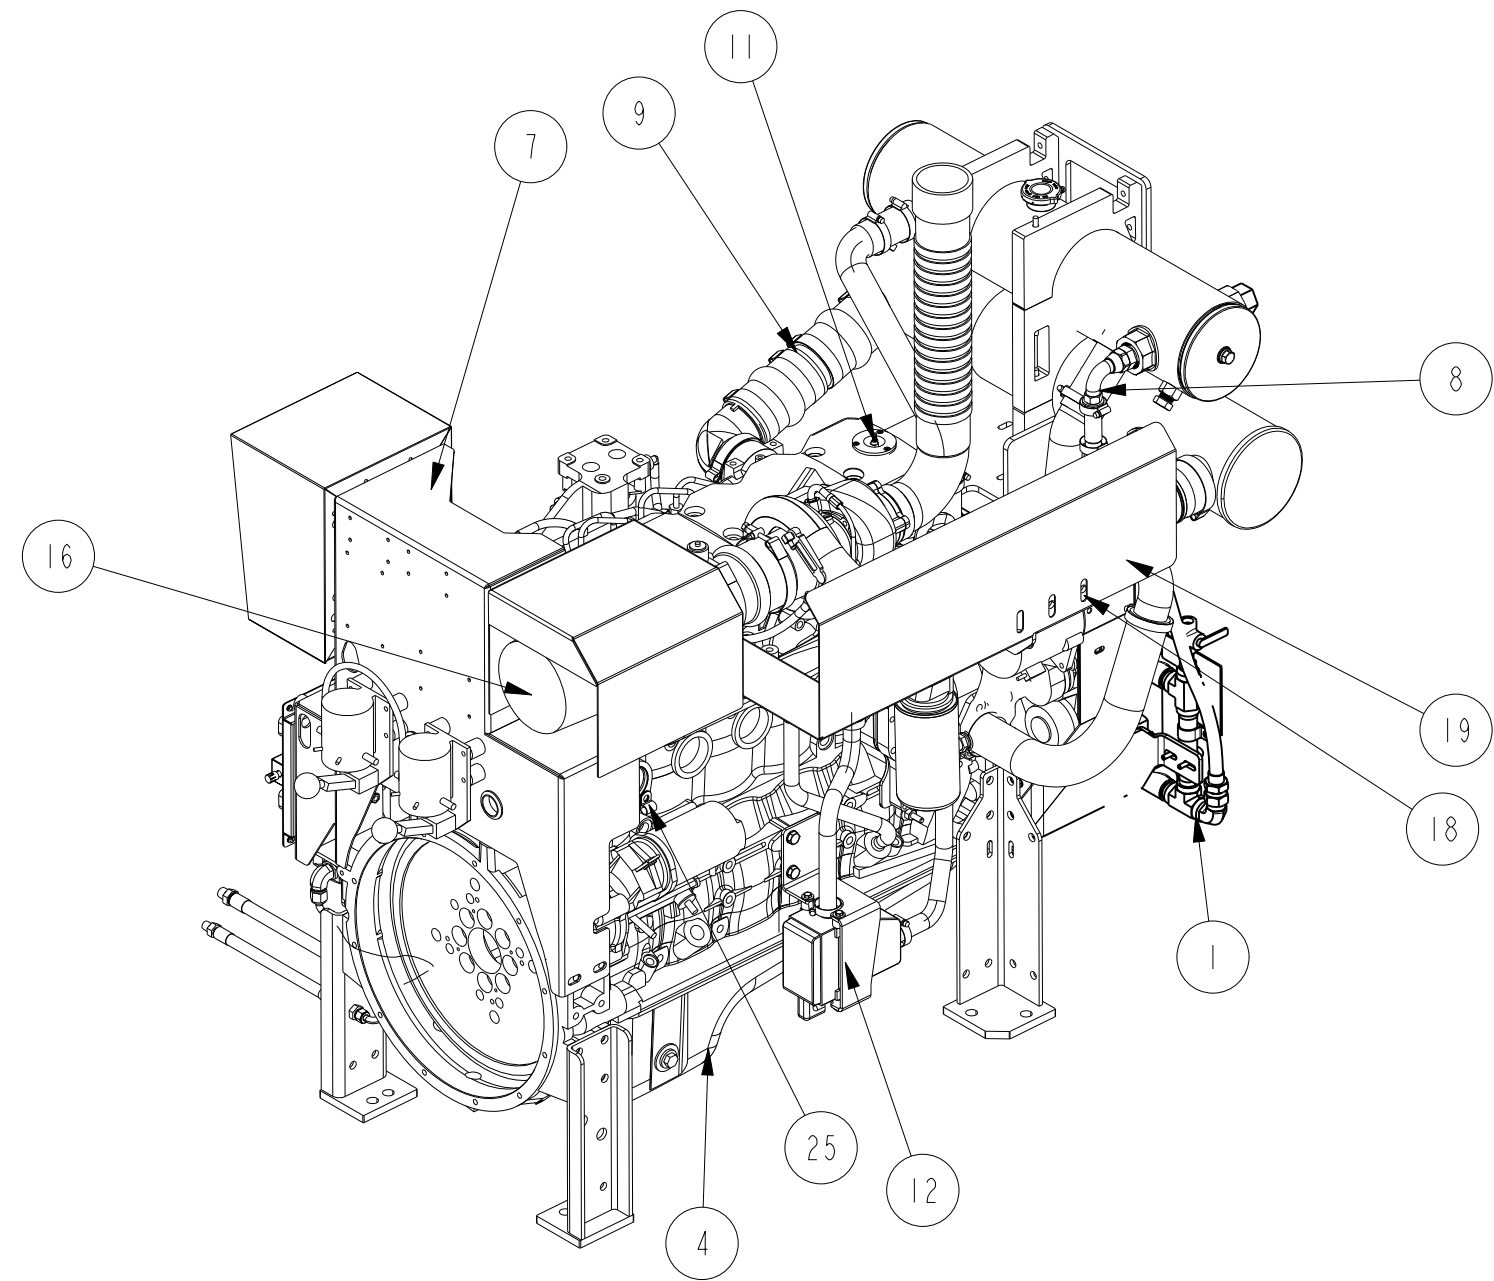


BILL OF MATERIAL		
ITEM	QTY	DESCRIPTION
1	1	ASSEMBLY, RAW WATER COOLING, 3/4" NPT, FIREPUMP
2	1	KIT, SENSORS & ADAPTERS, CFP7E
3	1	ASSEMBLY, ENGINE SUPPORT, CFP7E
4	1	ASSEMBLY, ENGINE, OSB6.7
5	1	ASSEMBLY, AIR TRANSFER, CFP.7E
6	1	ASSEMBLY, HX & CAC MOUNT, FIRE PUMP
7	1	ASSEMBLY, OPERATOR STATION,
8	1	ASSEMBLY, HOSE CONNECTION, RAW WATER, FIRE PUMP
9	1	ASSEMBLY, HOSE CONNECTION, AIR INTAKE
10	1	ASSEMBLY, ECM & MOUNTING, CFP7E
11	1	ASSEMBLY, VALVE COVER, PROXIMITY LOCATION CFP.7E
12	1	ASSEMBLY, COOLANT, HEATER, CFP.7E
13	1	KIT, FUEL SYSTEM PLUMBING, CFP7E
14	1	ASSEMBLY, FUEL RAIL MODIFICATION, FIREPUMP, CFP7E
15	1	ASSEMBLY, MISC PIPING, CFP5E & CFP7E
16	1	ASSEMBLY, AIR CLEANER, FIREPUMP, CFP7E
17	1	FLEX, EXHAUST, 3" FLANGE, FIREPUMP
18	1	BRACKET, MOUNTING, HEAT SHIELD, CFP7E
19	1	HEAT SHIELD, CFP7E
20	1	FUEL LINE, 12" EXTENSION, #6 FEM JIC X #6 221FR X 3/8" NPT
21	1	FUEL LINE, 12" EXTENSION, #8 FEM JIC X #8 221FR X 1/2" NPT
22	1	FILTER HEAD, CUMMINS
23	1	FITTING, QUICK DISCONNECT
24	1	FILTER, FUEL
25	1	CLAMP, P-STYLE, 0.50" W/ 0.50 HOLE, LTL-CCV1317
26	1	U-BOLT CLAMP, 3.0"

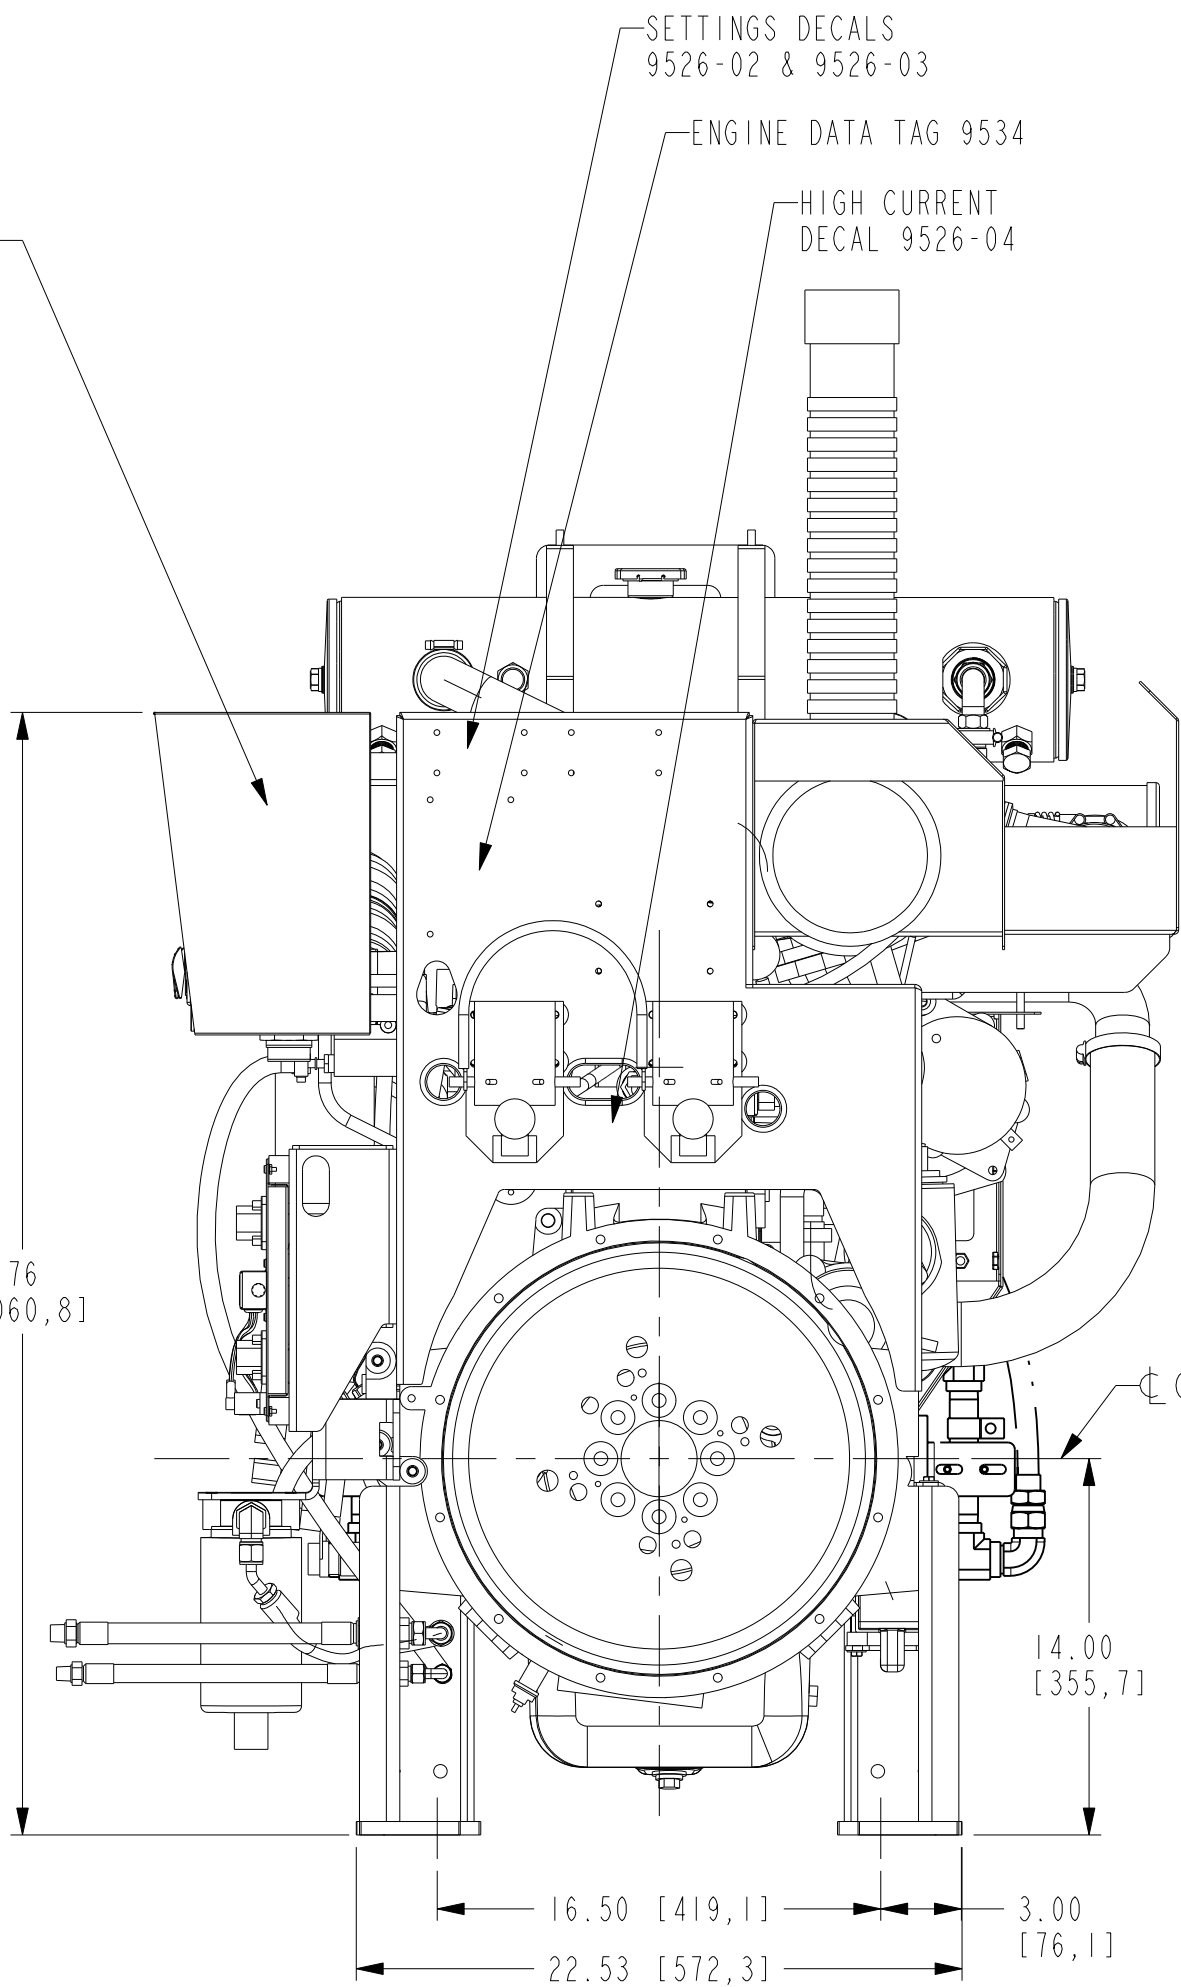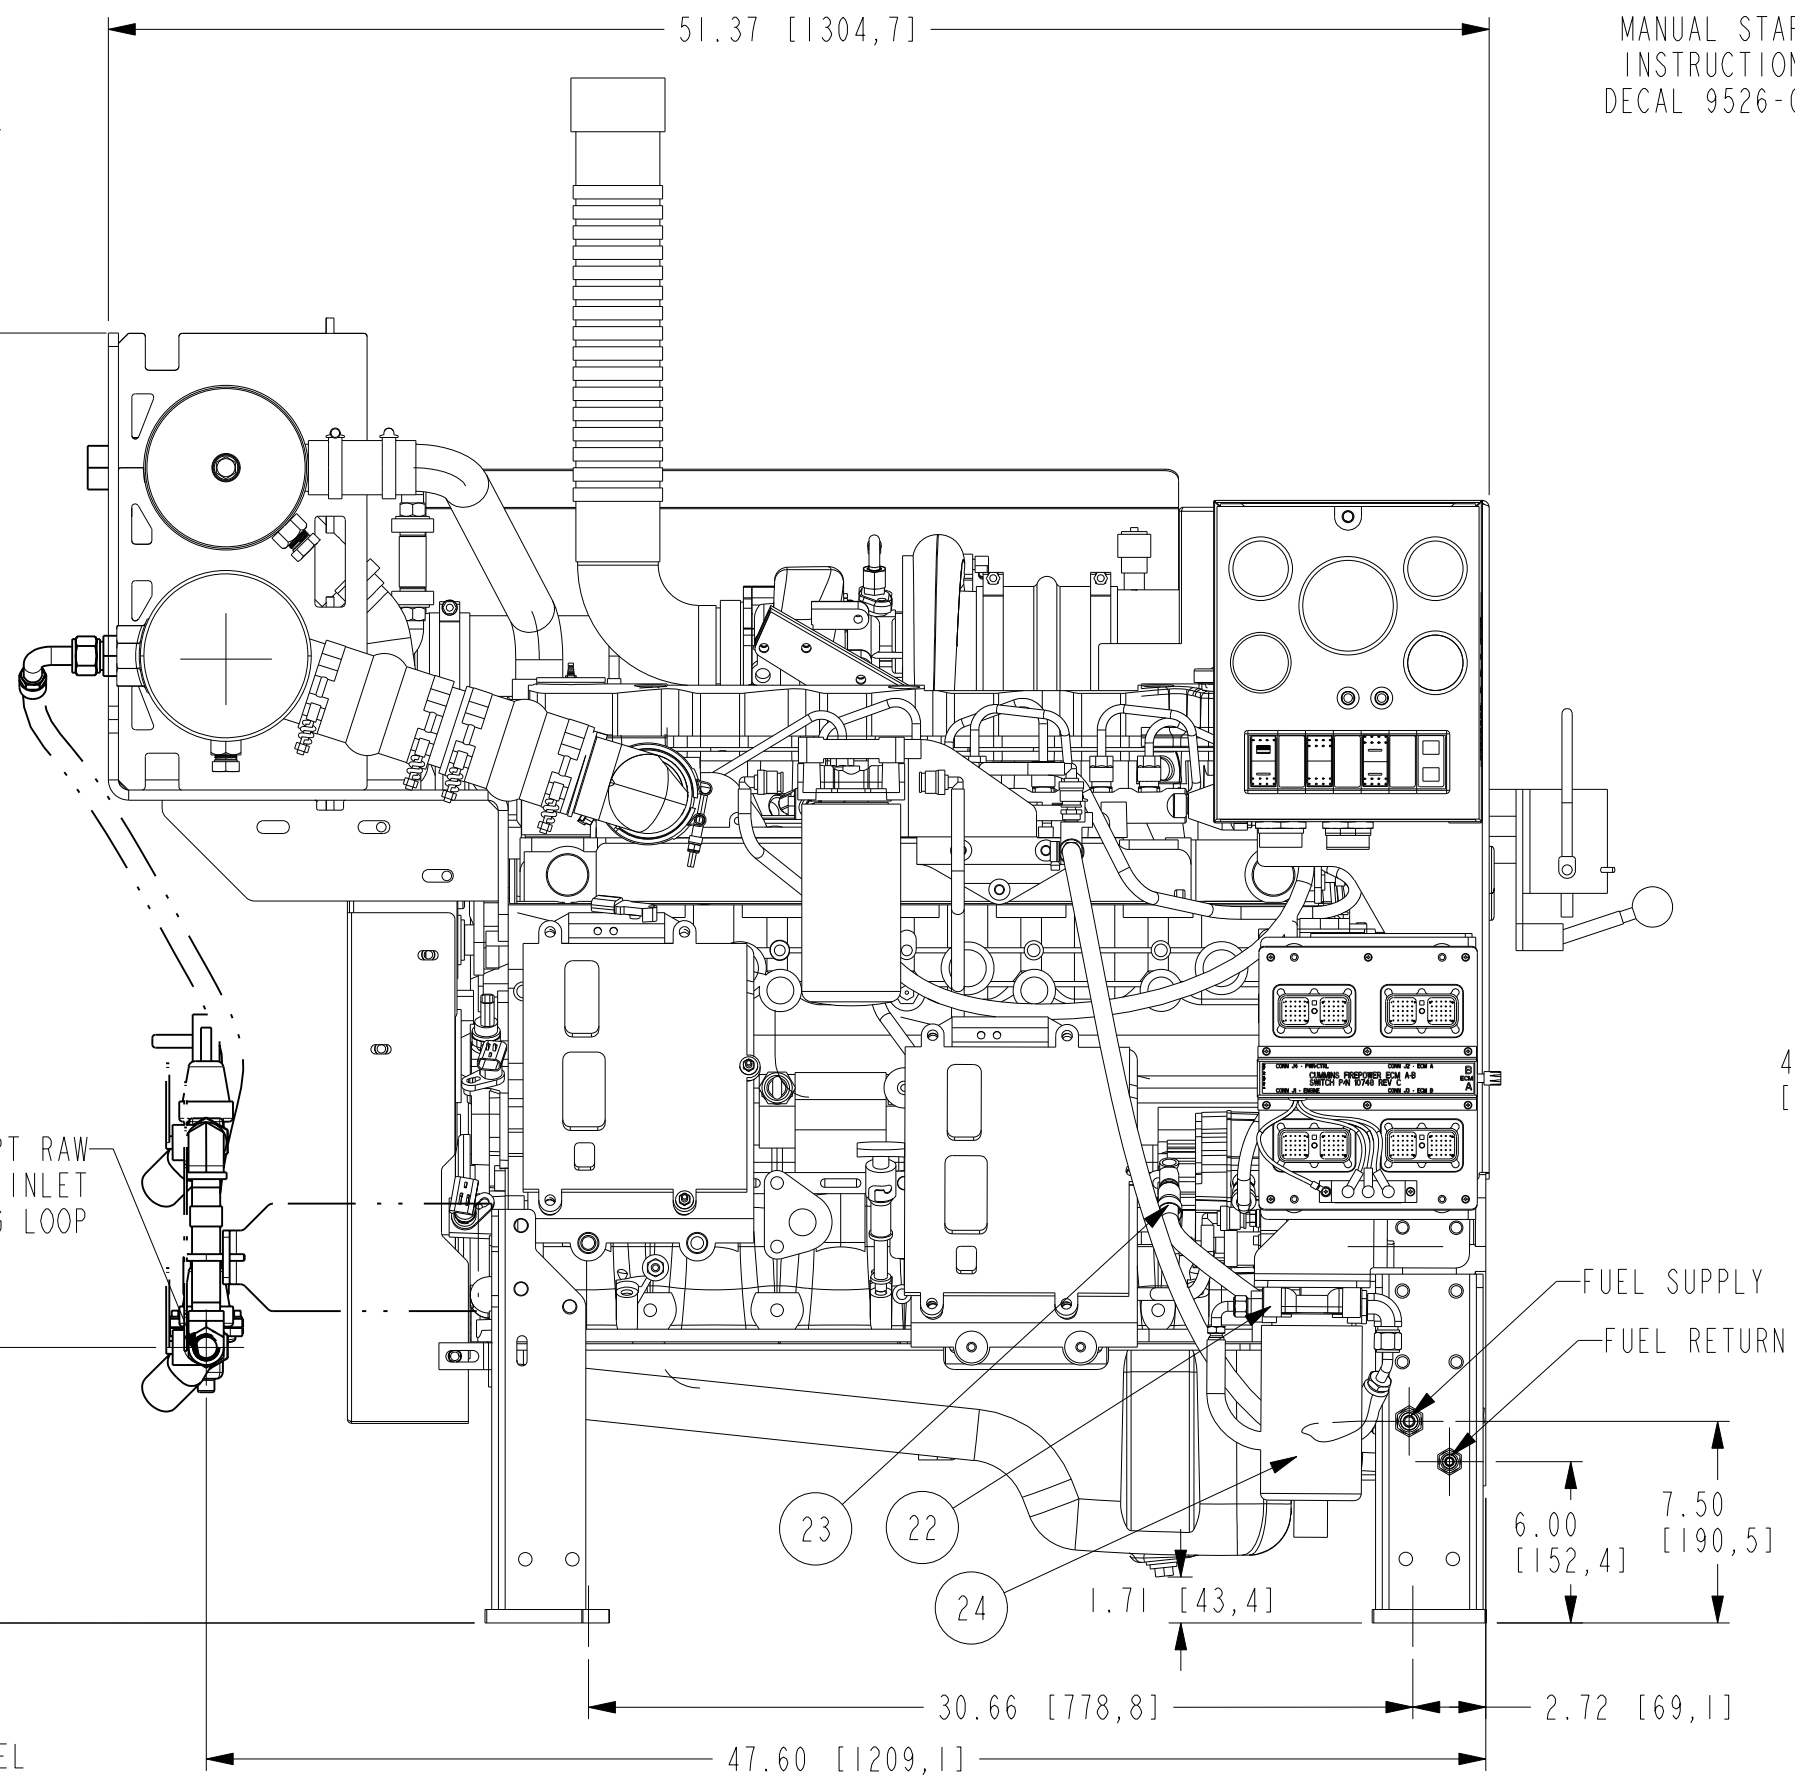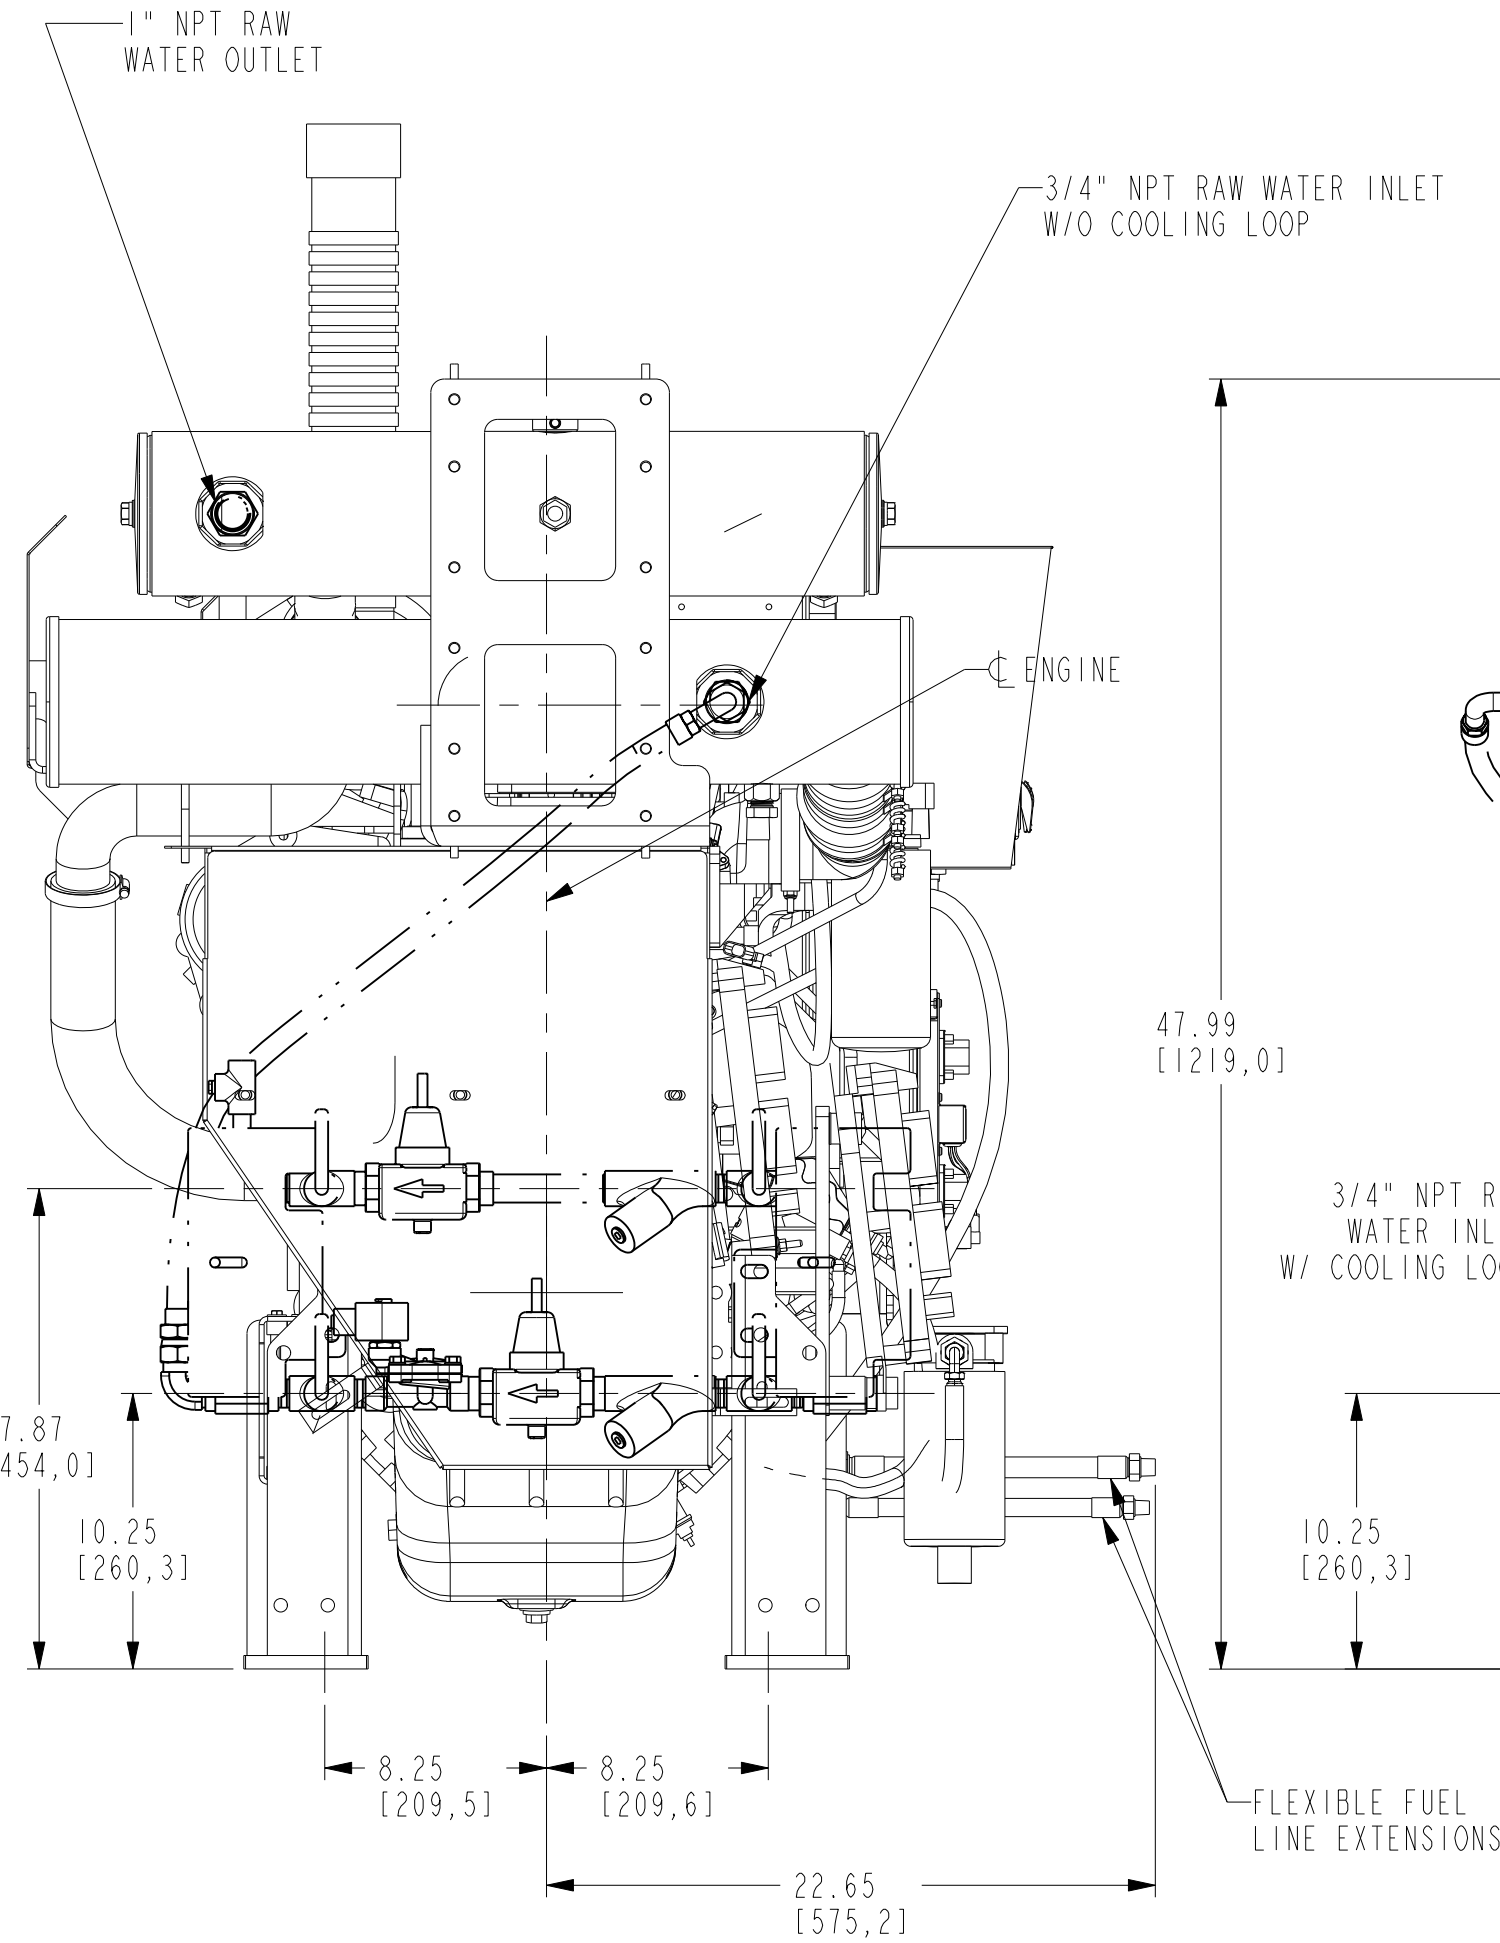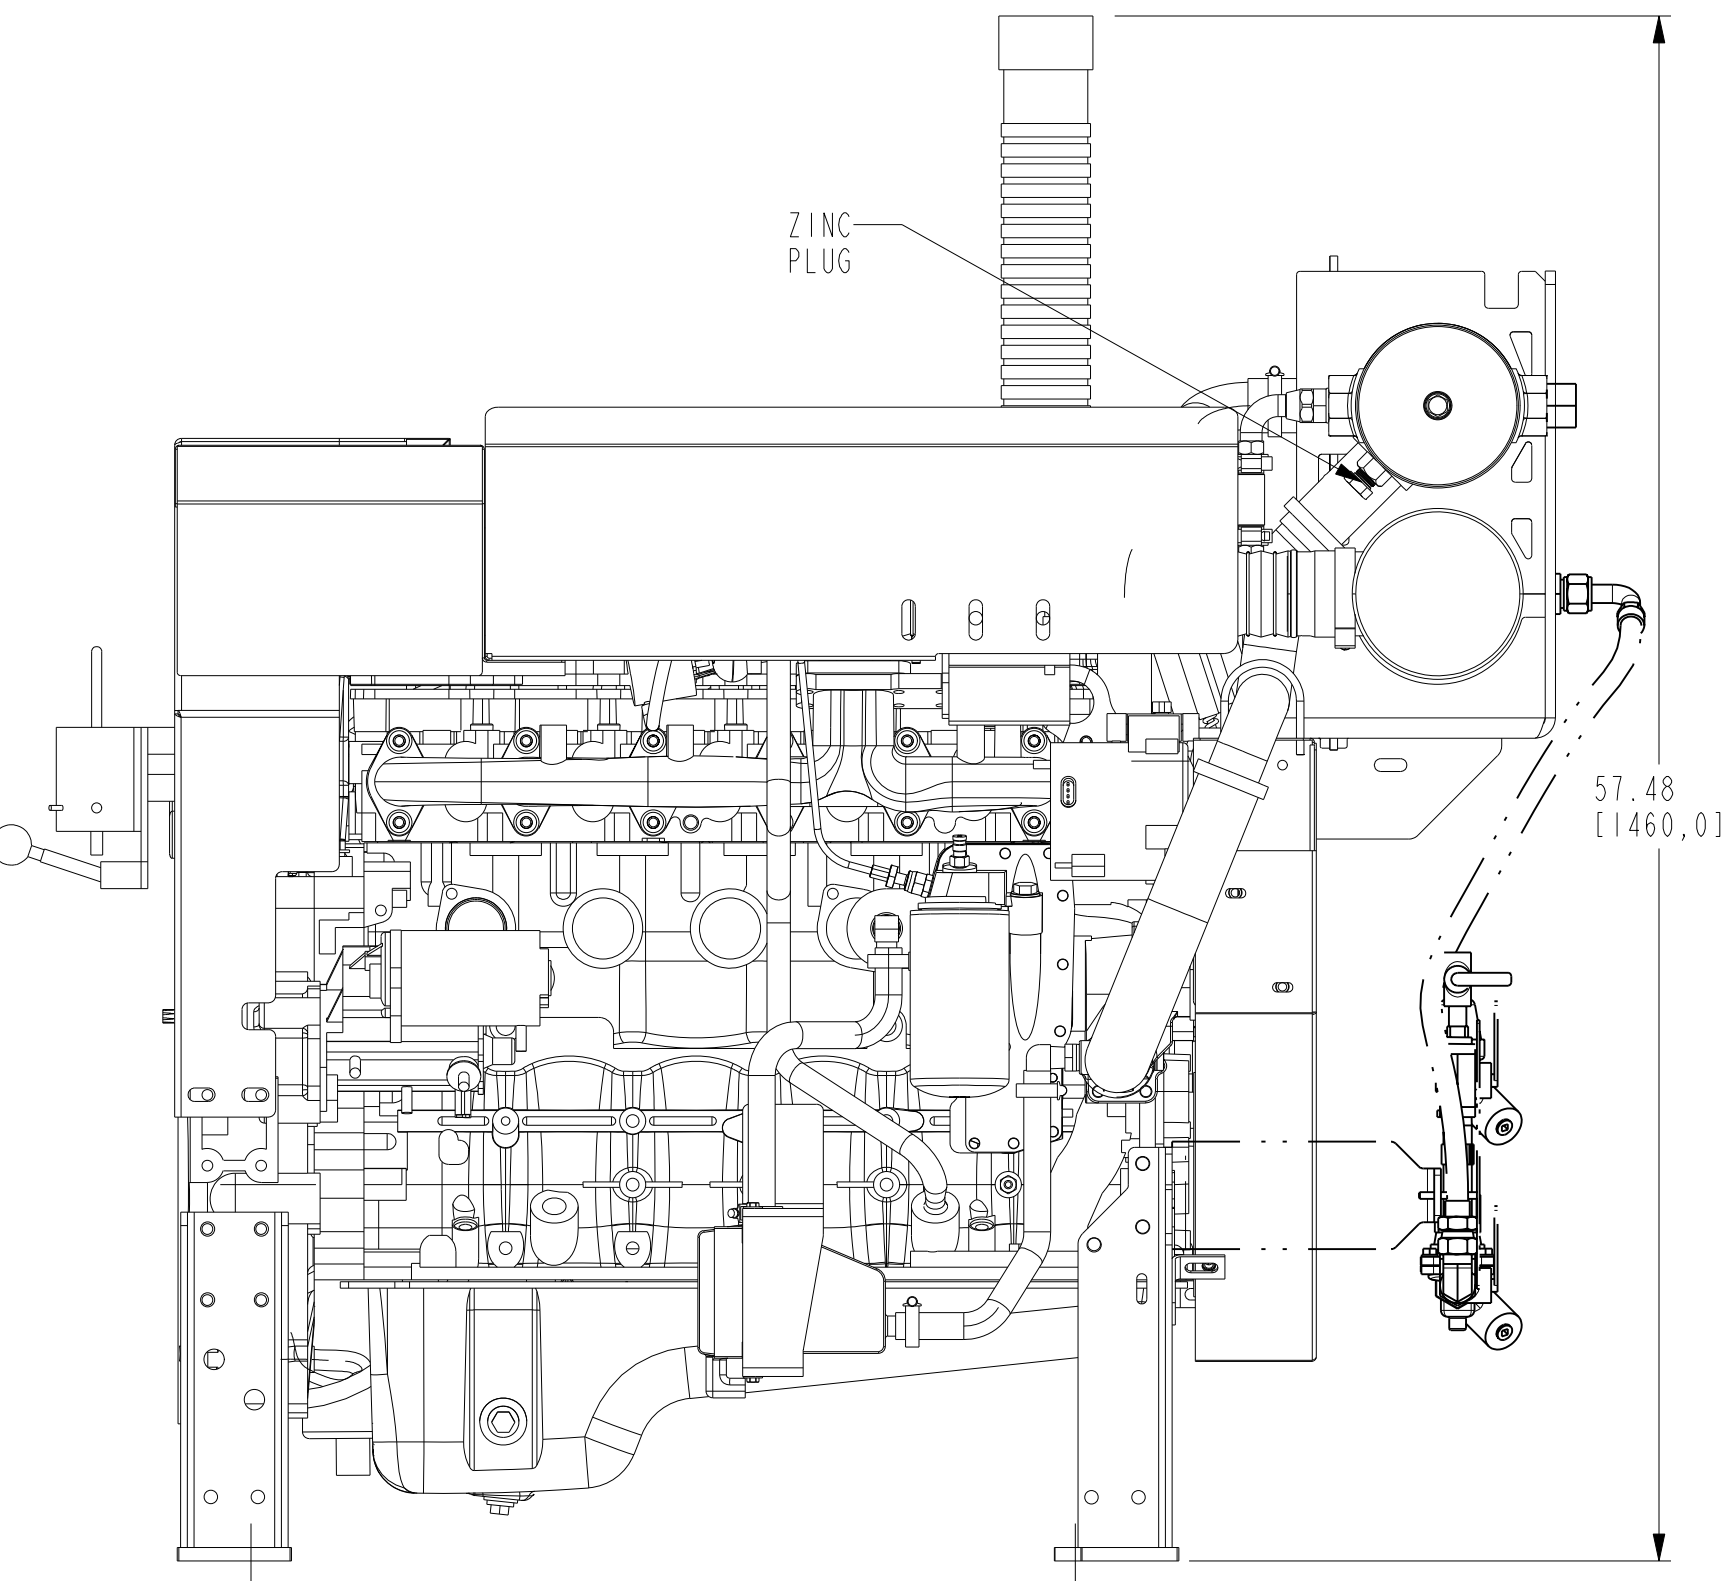

**SHOWN WITH OPTIONAL COOLING LOOP

D	2009-249	UPDATES PER ALPHA BUILD. REV PER OPERATORS STATION	DAN	11-JUN-09
C	2009-092	REVISED AS BUILT	DAN	11MAR2009
B	2009-010	REV PER ENGINE SUPPORT, REV PER FUEL ASSEMBLY	DAN	23JAN2009
A	ENF:2008-555	OMIT PA:12209, OMIT PA:13352, OMIT PA:13316, OMIT PA:13315, OMIT PA:13313, OMIT PA:13254, OMIT PA:13225, ADD PA:14397, ADD PA:13849, ADD PA:13972, ADD PA:13974, ADD PA:12945, ADD PA:13852, ADD PA:13235, ADD PA:13975, ADD PA:14143, ADD PA:14197	MAC	12-29-2008
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is being drawn to the customer's attention for their review. It is not to be used for any other purpose without the written consent of Cummins Fire Power LLC. If this document is used for any other purpose, the user assumes all liability for any and all damages, including but not limited to, direct, indirect, and consequential damages. Cummins Fire Power LLC does not warrant the accuracy or completeness of the information contained herein, and all users of this document are advised to verify the accuracy of the information contained herein. Cummins Fire Power LLC		Cummins Fire Power		CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BLUEPALE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND DRAFT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
ASSEMBLY, POWER MODULE CFP7E		DWG UNITS: IN/LB/S		DRAWN BY: MAC	DATE: 10-03-2008
ANGULAR DIMENSIONS ± 1°		MILITARY UNITS		PRO-ENGINEER	REF. DRWG:
THIRD ANGLE PROJECTION		SCALE: 0.140		SHEET 1 OF 1	DRAWING NO: 13235
EST WEIGHT: 1600.000					

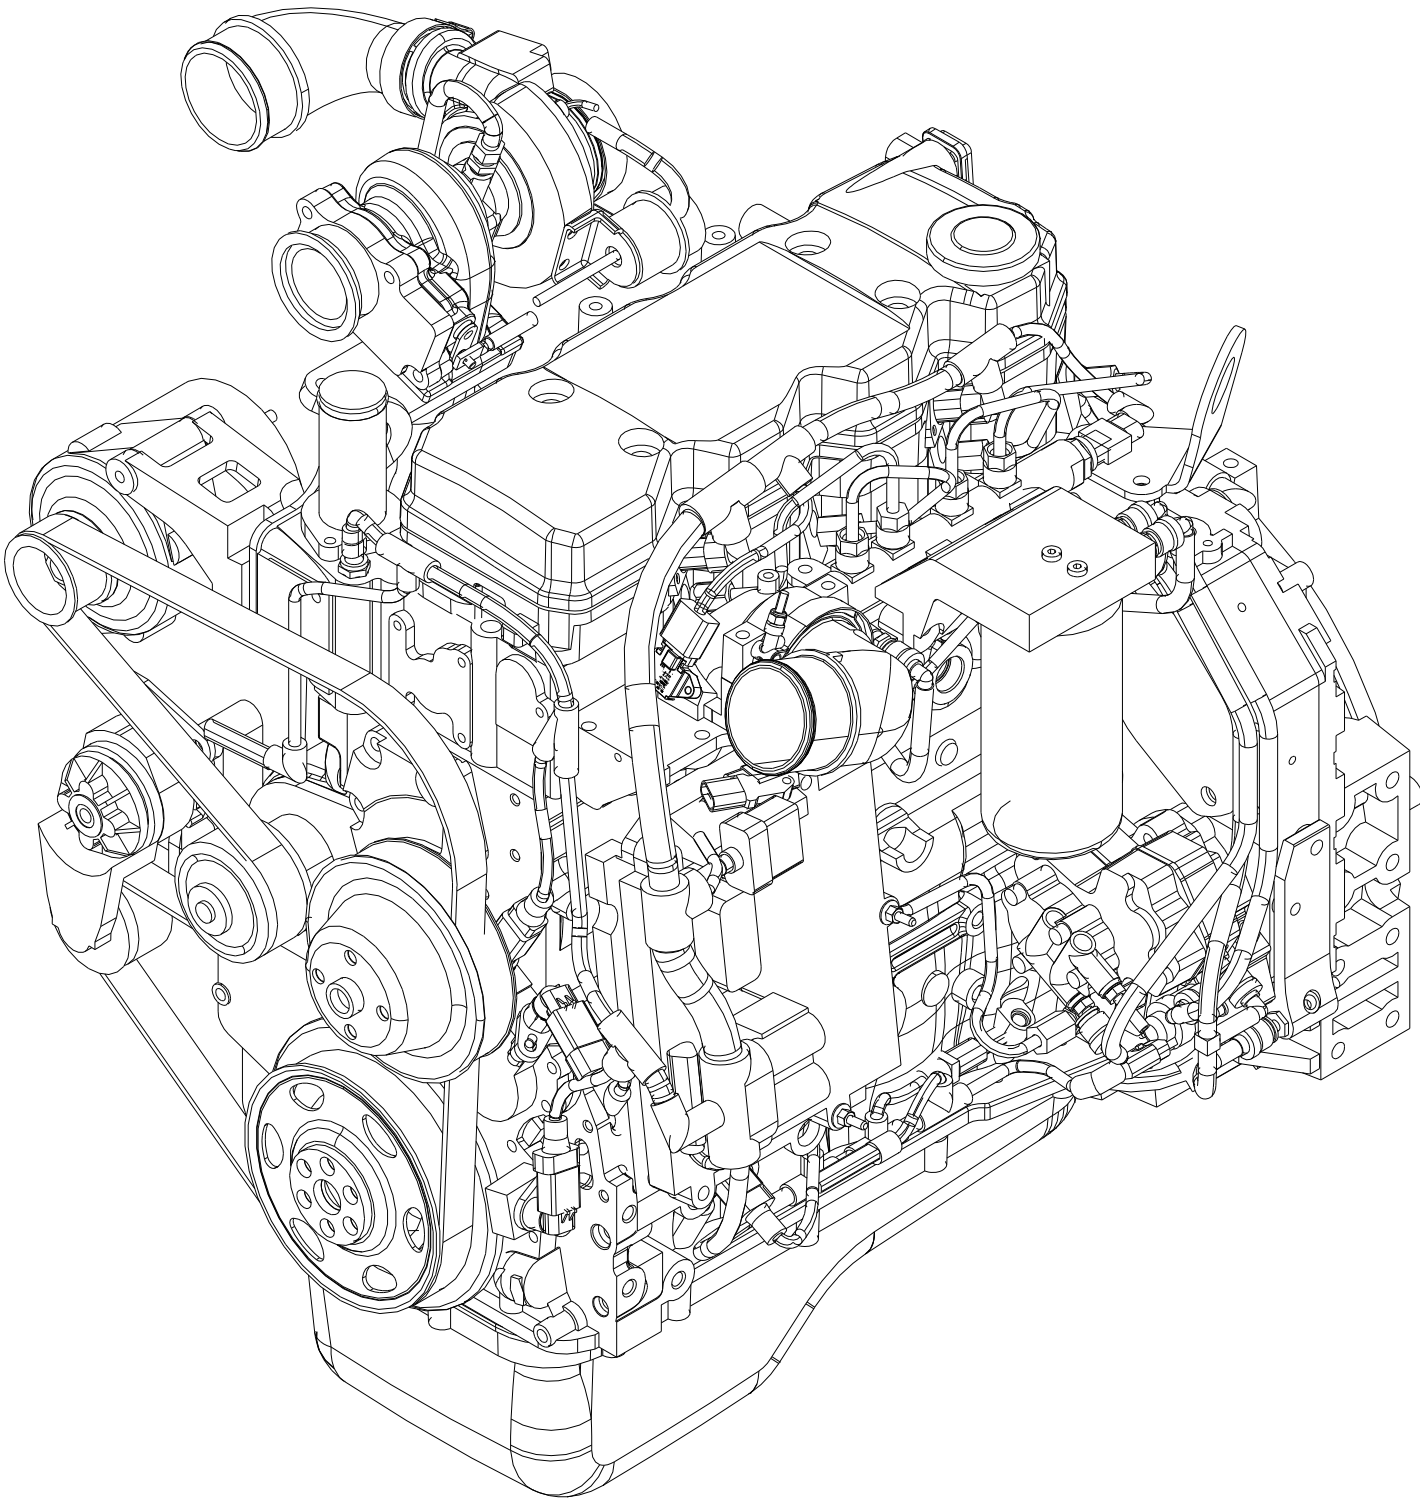


ENGINE ASSEMBLY
QSB 4.5 L
FIREPUMP CONFIGURATION
FIRE 45 QSB4.5 BASE ENGINE

AP 9510	APPROVAL AGENCY		LA 9110	ARRANGEMENT, LIFTING
BR 9191	BREATHER, CRANKCASE		LF 9136	FILTER, FULL FLOW OIL
CH 9093	AID, COOLANT HEATER STARTING		LG 9998	GAUGE, OIL LEVEL
DL 9253	LOCATION, FUEL DRAIN		LO 9015	OIL, LUBRICATING
DO 9969	SOFTWARE, CUSTOMER INTERFACE		OB 9169	ARRANGEMENT, OIL FILL
DR 9020	DRIVE, REAR GEAR TRAIN		OP 9454	PAN, OIL
EE 9242	ALTERNATOR	A	RP 9045	VENT, ENGINE COOLANT
EH 9472	MOUNTING, ALTERNATOR		SK 9003	ARRANGEMENT, SHIPPING
FA 9330	FAN DRIVE		SS 9591	PAINT
FF 9674	LOCATION, FUEL FILTER		ST 9383	MOTOR, STARTING
FH 9469	HOUSING, FLYWHEEL		SV 9001	VOLTAGE, ENGINE OPERATING
FI 9099	FITTING, FUEL INLET		TB91170	ARRANGEMENT, TURBO CHARGER
FR91601	RATING, FUEL		TK 9036	COOLER, TORQUE CONVERTER OIL
			VC 9310	ARRANGEMENT, VALVE COVER
FW 9829	FLYWHEEL	A	WI 9179	CONNECTION, WATER INLET
HC 9040	PLUMBING, CABIN HEATER		WO 9026	CONNECTION, WATER OUTLET
IC 9480	CONNECTION, AIR INTAKE		XS 9254	CONNECTION, EXHAUST OUTLET

A	2009-397	CHG "RP" & "WI" SPECS, DEL "FS"	S DUBICK	08/18/09
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, ENGINE
QSB 4.5

DWG UNITS: DRAWN BY: MAC
PRO-ENGINEER


SCALE: 0.200 SHEET 1 OF 1

EST WEIGHT: 0.000 DRAWING NO: 13211

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES .1X ± 0.010 .2XX ± 0.005 FORM TOLERANCES .1X ± 0.010 .2XX ± 0.015 FAB TOLERANCES .1X ± 0.000 .2XX ± 0.030	MACHINE TOLERANCES .1X ± 0.4 .2X ± 0.2 FORM TOLERANCES .1X ± 0.8 .2X ± 0.4 FAB TOLERANCES .1X ± 0.5 .2X ± 0.8

ENGINE ASSEMBLY
QSB 6.7L
FIREPUMP CONFIGURATION
FIRE 46 QSB6.7 BASE ENGINE

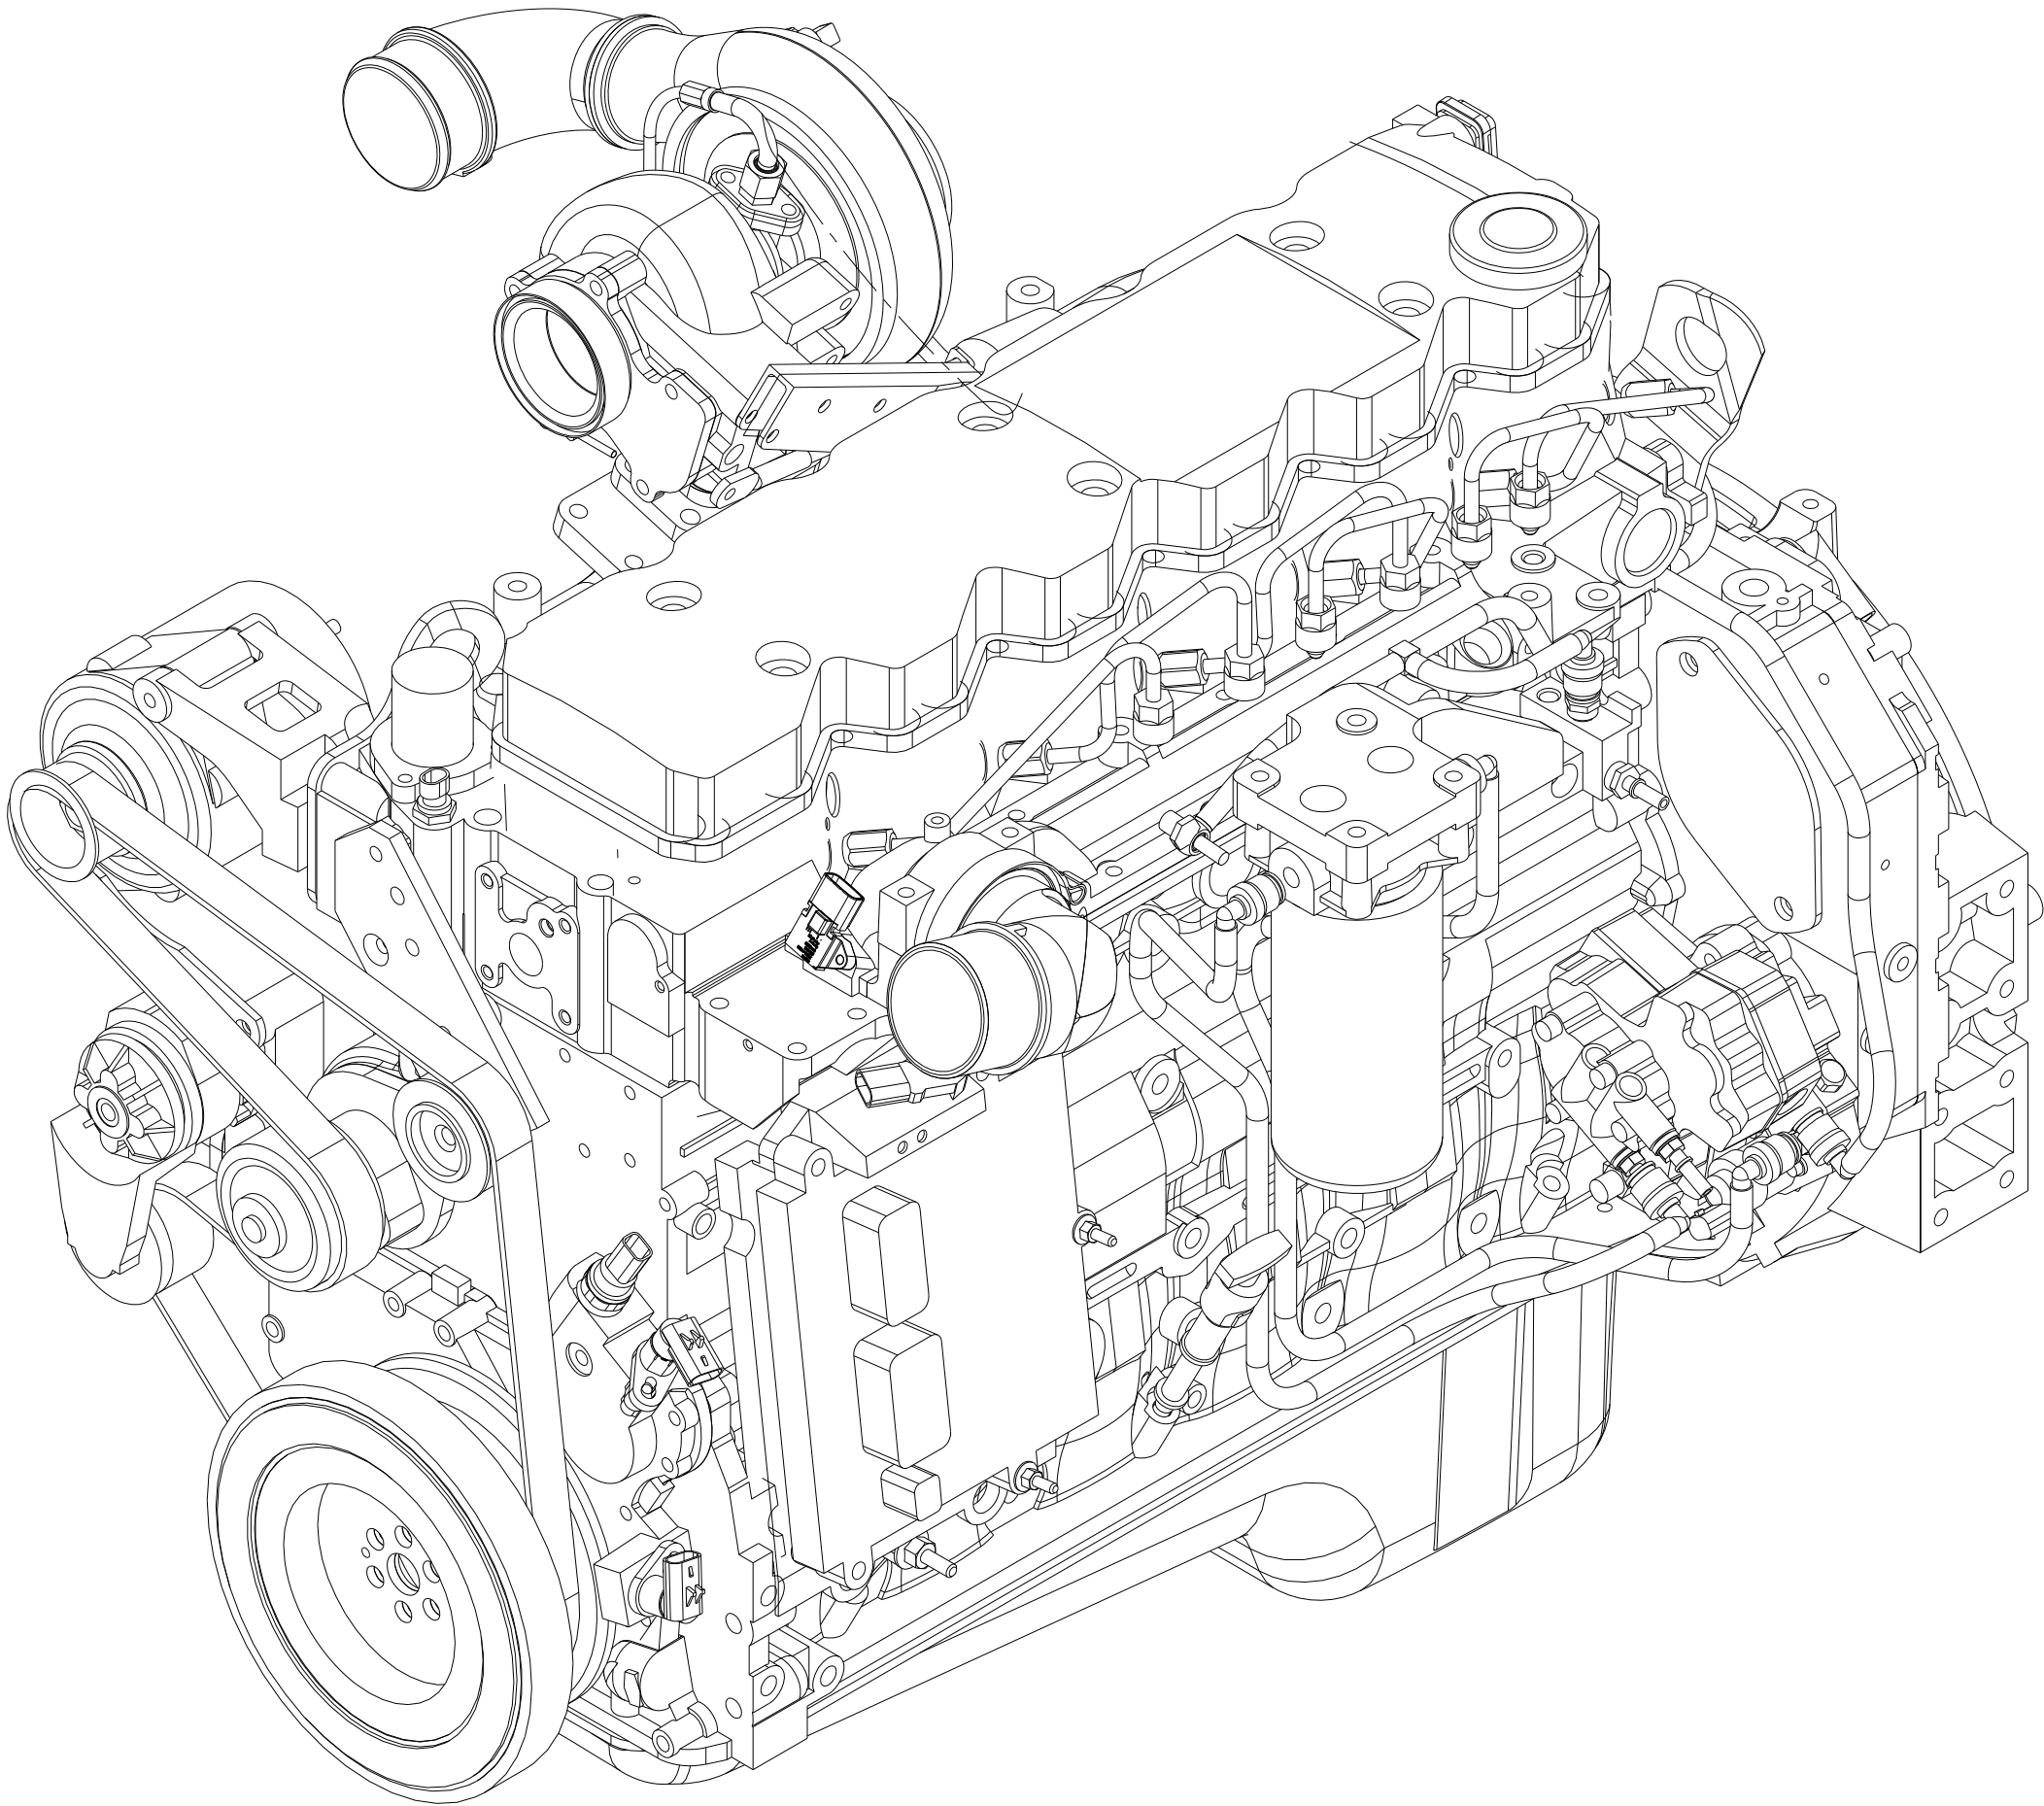

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	APPROVEL AGENCY, -	AP9510
2	1	BREATHER, CRANKCASE	BR9191
3	1	AID, COOLANT HEATER STARTING	CH9070
4	1	LOCATION, FUEL DRAIN, -	DL9197
5	1	SOFTWARE, CUSTOMER INTERFACE	DO9933
6	1	DRIVE, REAR GEAR TRAIN	DR9701
7	1	ALTERNATOR	EE9242
8	1	MOUNTING, ALTERNATOR	EH9472
9	1	DRIVE, FAN, -	FA9330
10	1	LOCATION, FUEL DRAIN	FF9541
11	1	HOUSING, FLYWHEEL	FH9469
12	1	RATING, FUEL, -	FR91422
13	1	FLYWHEEL	FW9829
14	1	PLUMBING, CABIN HEATER	HC9026
15	1	CONNECTION, AIR INTAKE	IC9480
16	1	CONNECTION, AIR TRANSFER	IT9039
17	1	ARRANGEMENT, LIFTING	LA9145
18	1	FILTER, FULL FLOW OIL	LF9136
19	1	GAUGE, OIL LEVEL	LG9992
20	1	OIL, LUBRICATING, -	LO9015
21	1	ARRANGEMENT, OIL FILL, -	OB9169
22	1	PAN, OIL	OP9316
A23	1	VENT, ENGINE COOLANT	RP9045
24	1	ARRANGEMENT, SHIPPING, -	SK9003
25	1	PAINT, -	SS9591
26	1	MOTOR, STARTING	ST9383
27	1	VOLTAGE, ENGINE OPERATING	SV9001
28	1	ARRANGEMENT, TURBOCHARGER	TB91125
29	1	COOLER, TORQUE CONVERTER OIL, -	TK9036
30	1	ARRANGEMENT, VALVE COVER	VC9305
A31	1	CONNECTION,WATER INLET	WI9179
32	1	CONNECTION, WATER OUTLET	WO9026
33	1	CONNECTION, EXHAUST OULET	XS9254

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins FirePower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUEKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPPIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, ENGINE
QSB6.7

DWG UNITS:
IN/LB/S

SCALE: 0.250

EST WEIGHT: _

DRAWN BY: MAC
PRO-ENGINEER

SHEET

1 OF 1


DATE: 01-23-2009

REF DRWG: _

DRAWING NO:

13208

REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE
A	2009-397	CHG "RP" & "WI" SPECS	S DUBICK	08/18/09




THIRD ANGLE PROJECTION

ANGULAR DIMENSIONS ± 1°
IMPERIAL UNITS
METRIC UNITS


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

MACHINE TOLERANCES
± .0005
± .0010
± .0015
± .0020
± .0025
± .0030
± .0035
± .0040
± .0045
± .0050
± .0055
± .0060
± .0065
± .0070
± .0075
± .0080
± .0085
± .0090
± .0095
± .0100

MACHINE TOLERANCES
± .0005
± .0010
± .0015
± .0020
± .0025
± .0030
± .0035
± .0040
± .0045
± .0050
± .0055
± .0060
± .0065
± .0070
± .0075
± .0080
± .0085
± .0090
± .0095
± .0100

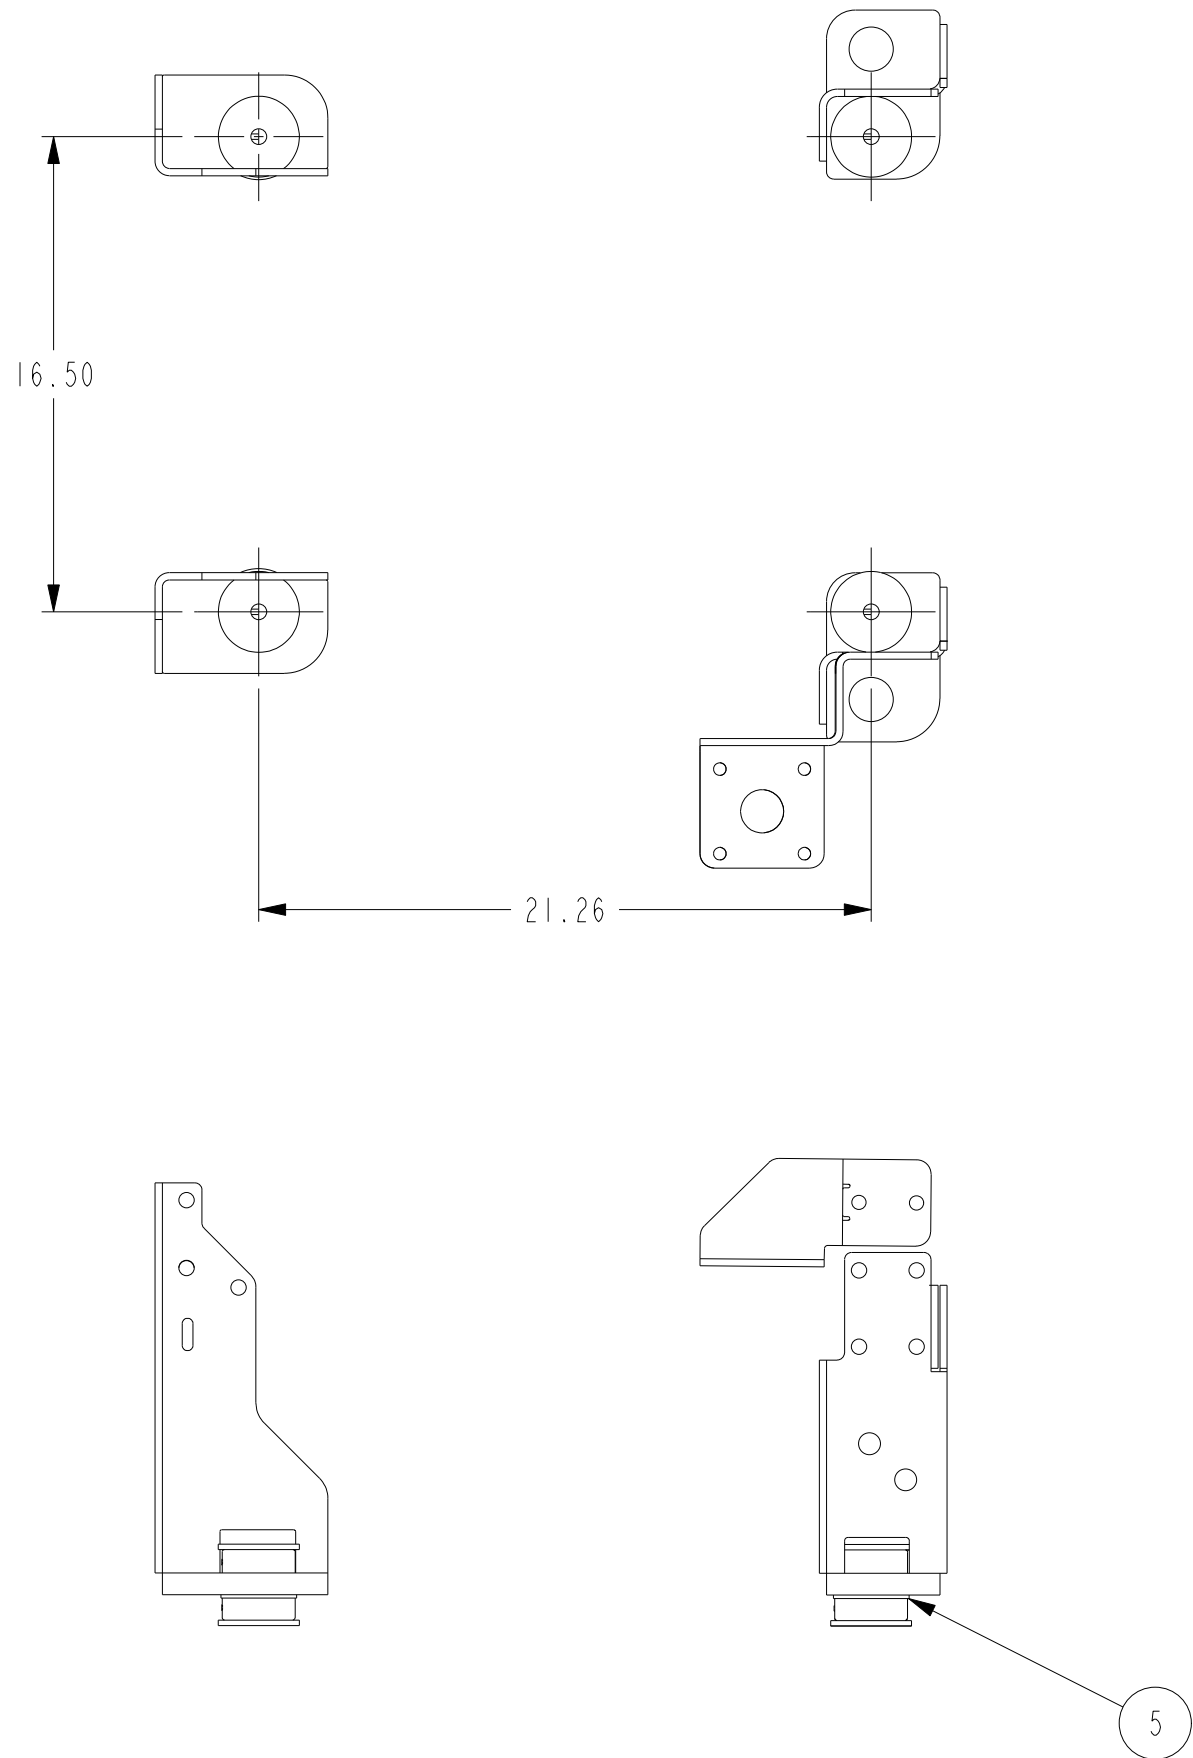

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	ASSEMBLY,LEG,ENGINE SUPPORT, REAR, CFP_5E W/ISOLATOR	13344
2	1	LEG, ENGINE SUPPORT, ISOLATED CFP5E, FRONT LH	14349
3	1	LEG, ENGINE SUPPORT, ISOLATED CFP5E, FRONT RH	14350
4	4	ISOLATOR, TECH PRODUCTS #60035, FIREPUMP	13340
5	4	LEG, SHIM, ISOLATED, FIREPUMP	14348
6	1	BRACKET, FUEL PREFILTER, MOUNTS TO FLYWHEEL HOUSING	14370

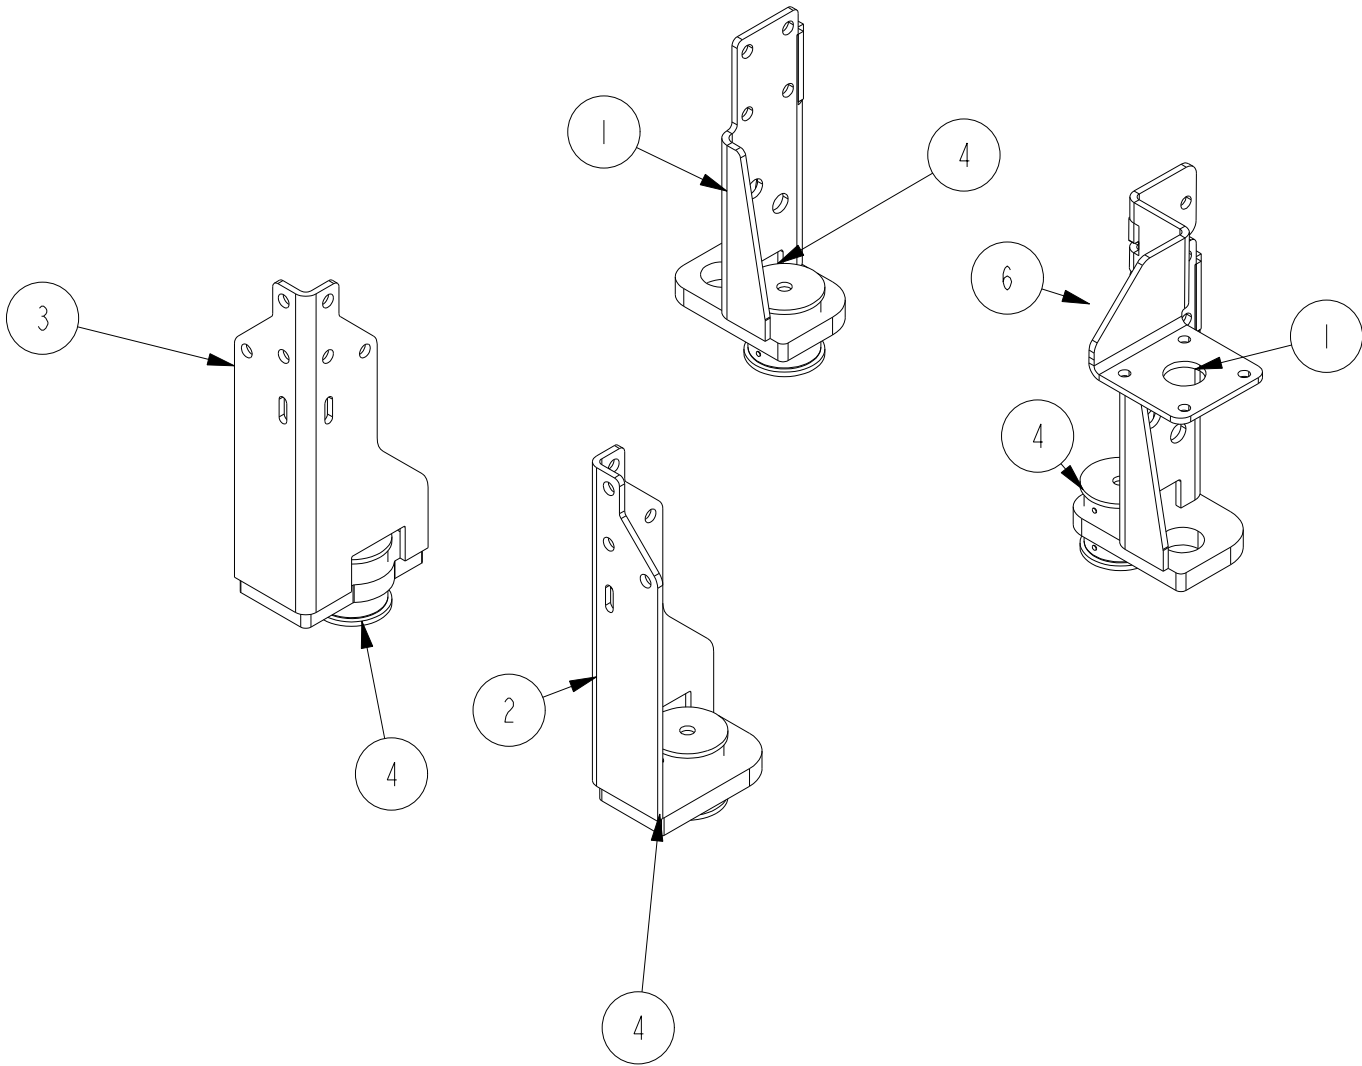

ITEM #5 LEG SHIM MUST ME INSTALLED ON EACH LEG

B	2009-092	REV PER COMPONENTS	DAVE N	12MAR2009
A	2009-010	REV PER COMPONENTS	DAVE N	20JAN2009
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN



UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES .XX ± 0.010 .XX ± 0.005	MACHINE TOLERANCES .XX ± 0.4 .XX ± 0.2
	FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
	FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8

DWG UNITS: IN/LB/S	DRAWN BY: MAC PRO-ENGINEER	DATE: 11-05-2008
SCALE: 0.150	SHEET 1 OF 1	DRAWING NO: 13847
EST WEIGHT: 64.732		

ASSEMBLY, ENGINE MOUNTING
ISOLATED, CFP_5E

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	LEG, ENGINE SUPPORT, REAR, CFP7E FIREPUMP	12909
2	2	ASSEMBLY, LEG SUPPORT ENGINE, FRONT, FIREPUMP, CFP_ 7E	13337
3	1	BRACKET, FUEL PREFILTER, MOUNTS TO FLYWHEEL HOUSING	14370

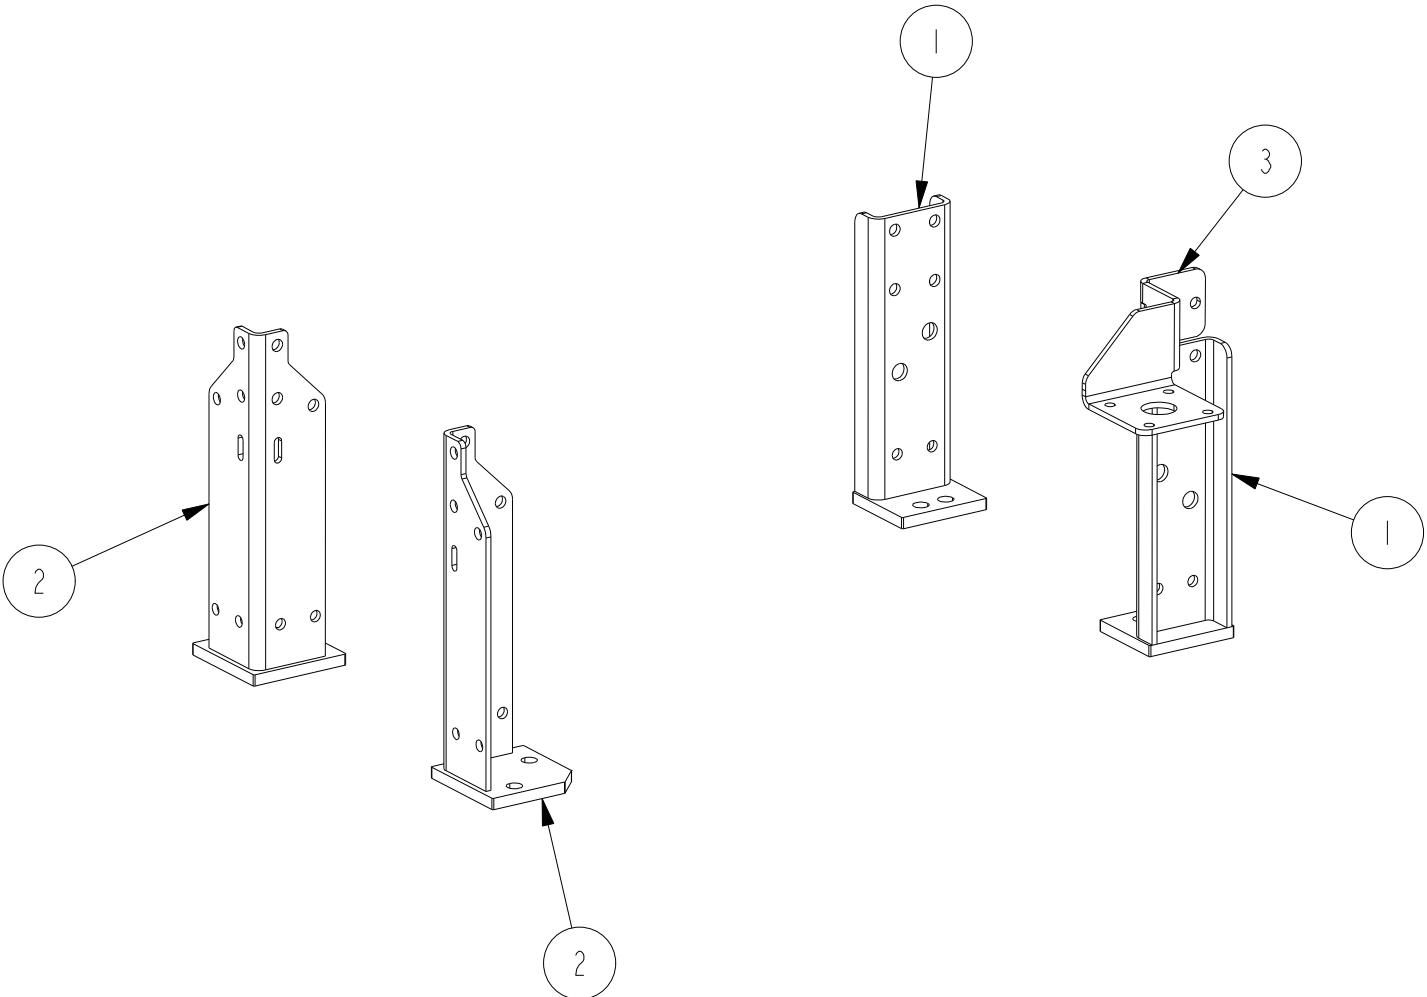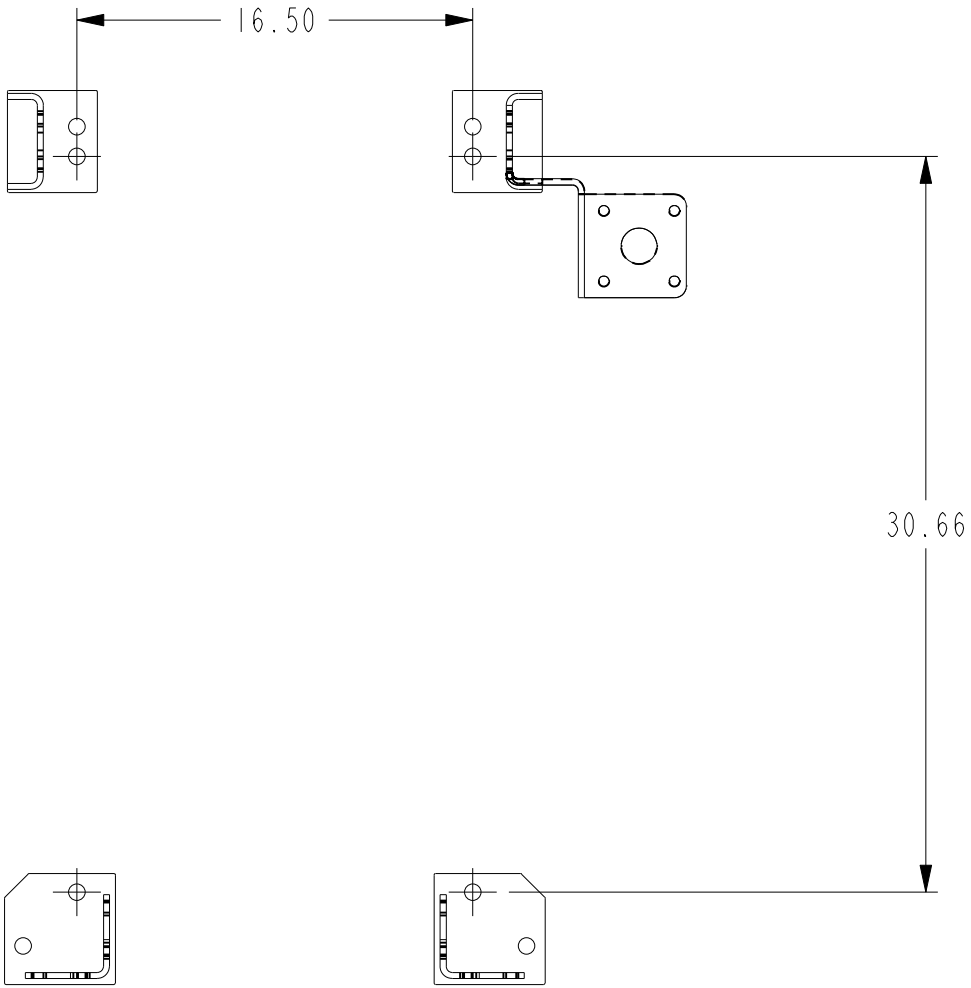


C	2009-092	REV PER COMPONENT UPDATES	DAVE N	11MAR2009
B	2009-010	REV REAR LEGS	DAVE N	14JAN2009
A	2008-547	REV PER LEG DESIGN	DAVE N	16DEC2008
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005 FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015 FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	MACHINE TOLERANCES .XX ± 0.4 .XX ± 0.2 FORM TOLERANCES .X ± 0.8 .XX ± 0.4 FAB TOLERANCES .X ± 1.6 .XX ± 0.8




CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM


CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, ENGINE SUPPORT, CFP7E

DWG UNITS: IN/LB/S	DRAWN BY: JOO K PRO-ENGINEER	DATE: 12MAY2008 REF DRWG: -
SCALE: 0.125 EST WEIGHT: 42238.628	SHEET 1 OF 1	DRAWING NO: DRAWING NO: 12905

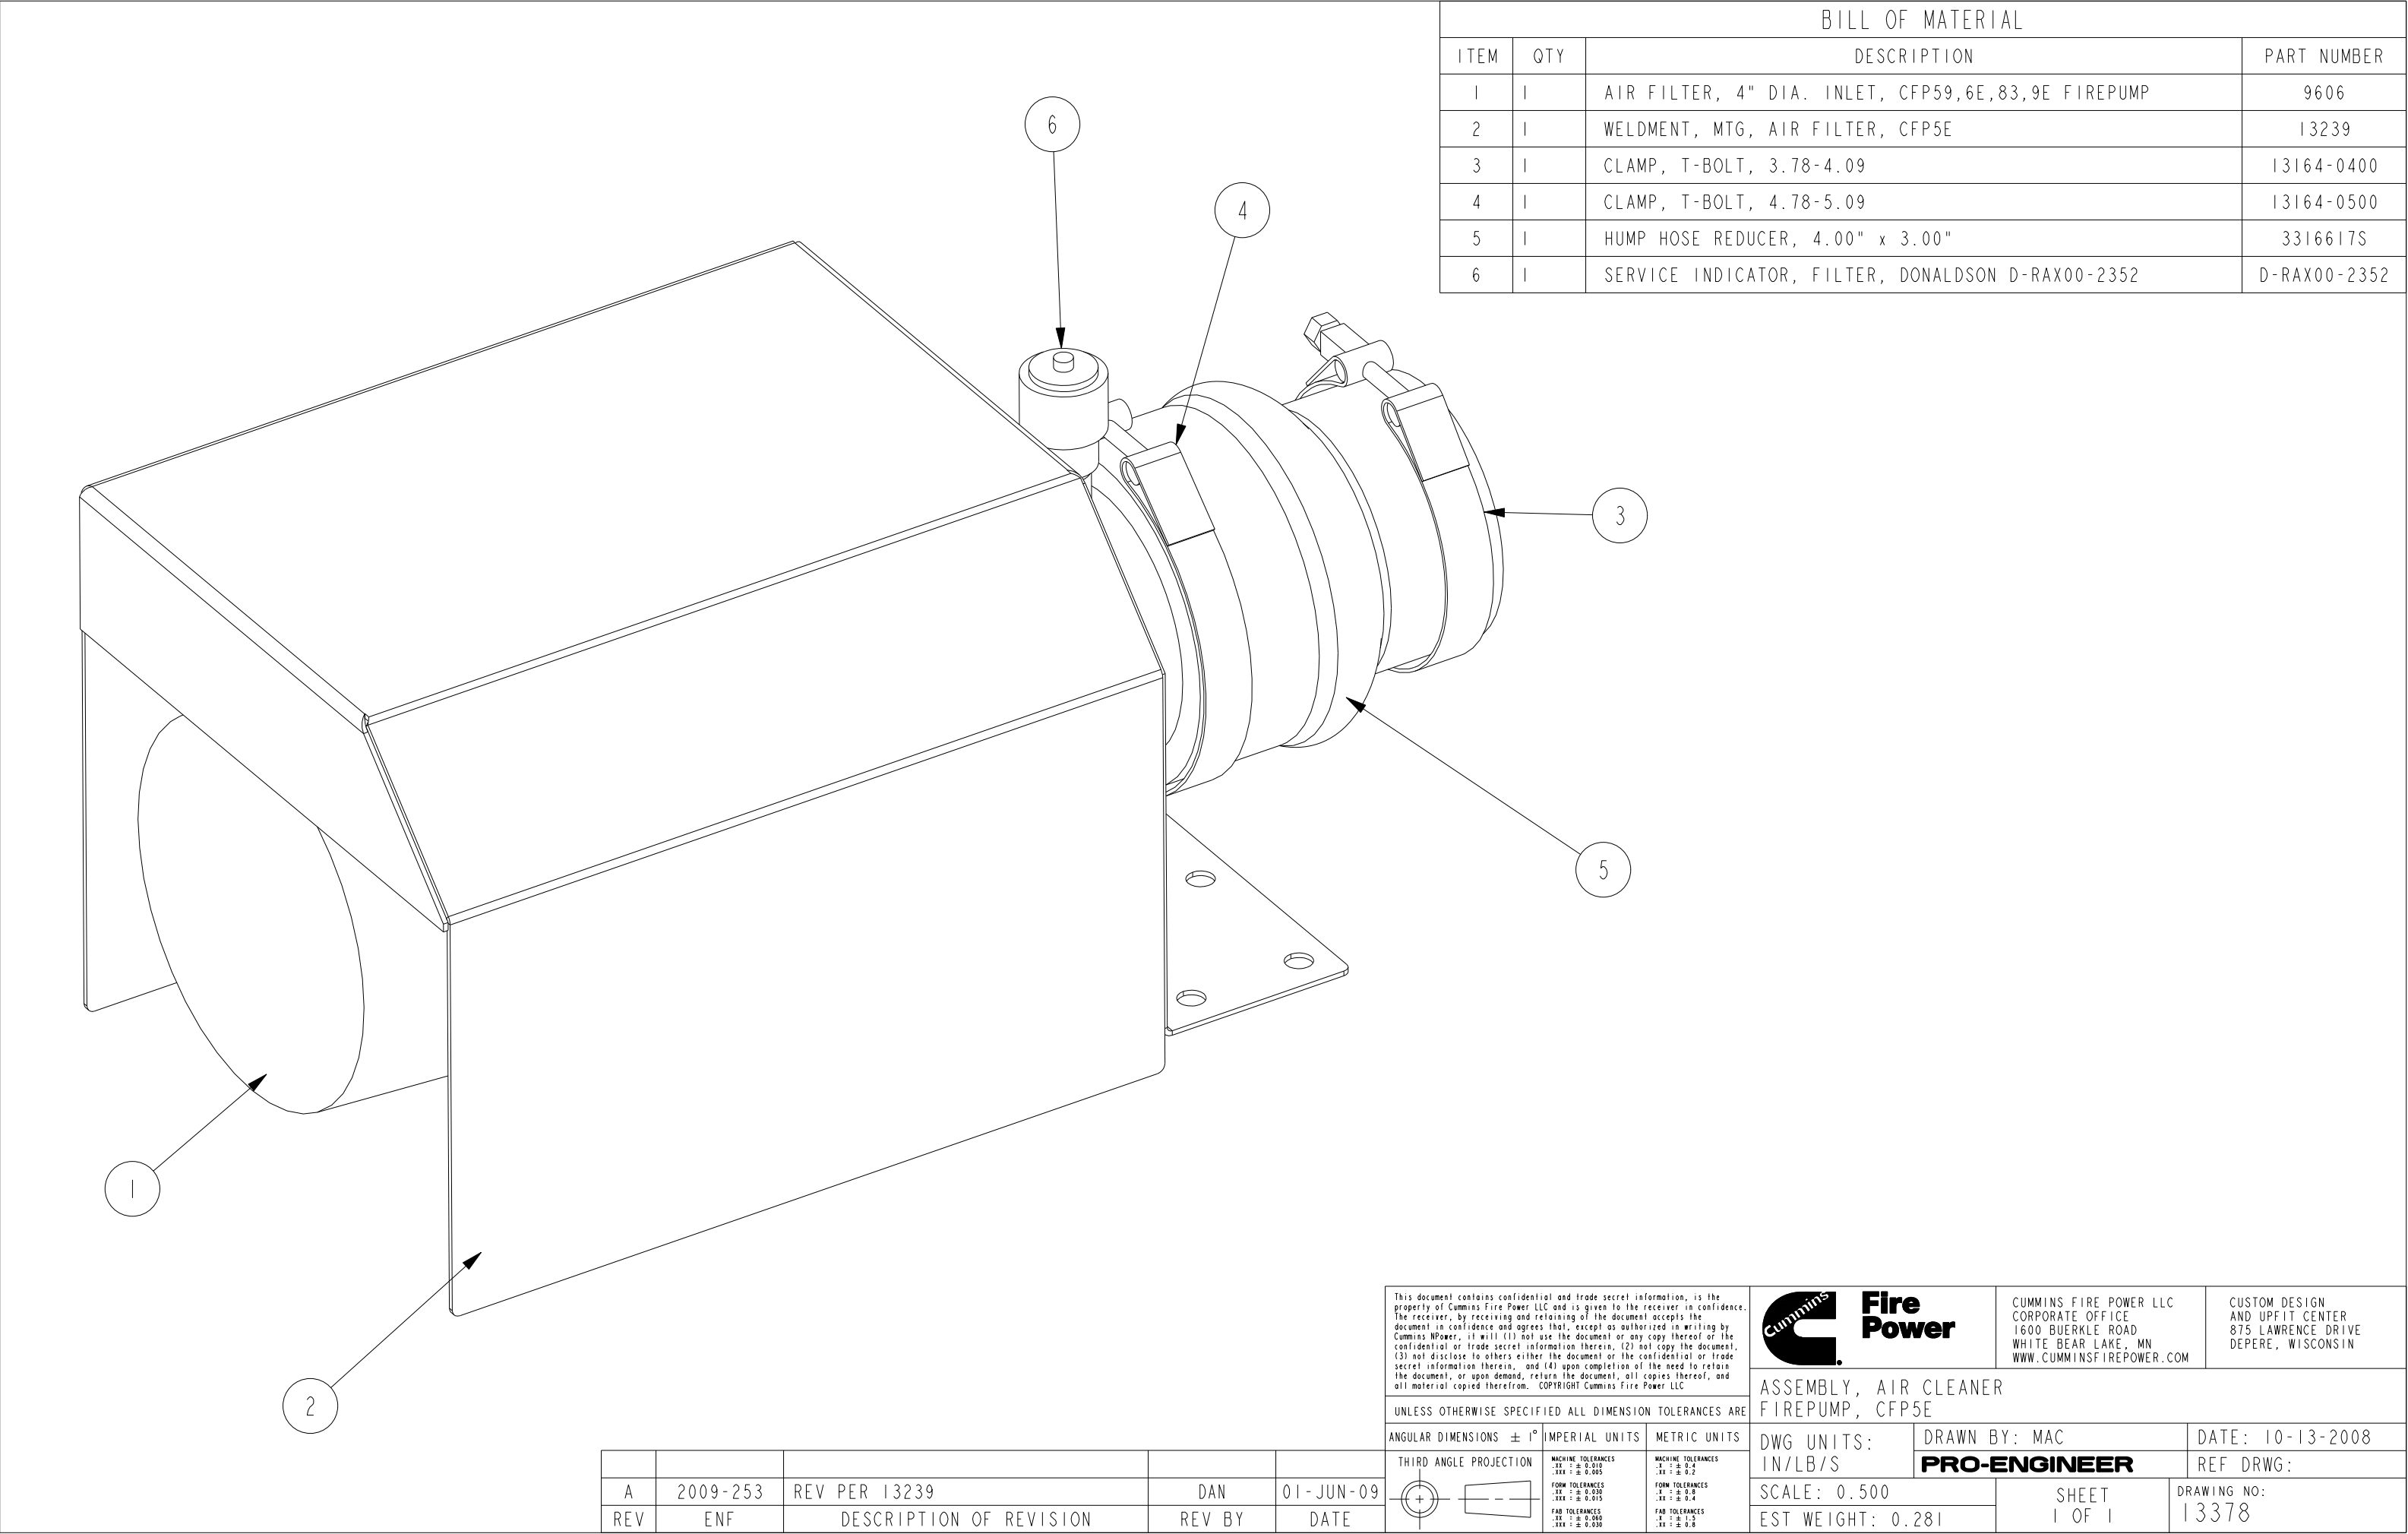


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	AIR FILTER, 4" DIA. INLET, CFP59,6E,83,9E FIREPUMP	9606
2	1	WELDMENT, MOUNTING, AIR FILTER, CFP7E	13233
3	2	CLAMP, T-BOLT, 4.28-4.59	13164-0450
4	1	COUPLING, RUBBER, 4", NELSON #89835K	89835K
5	1	SERVICE INDICATOR, FILTER, DONALDSON D-RAX00-2352	D-RAX00-2352

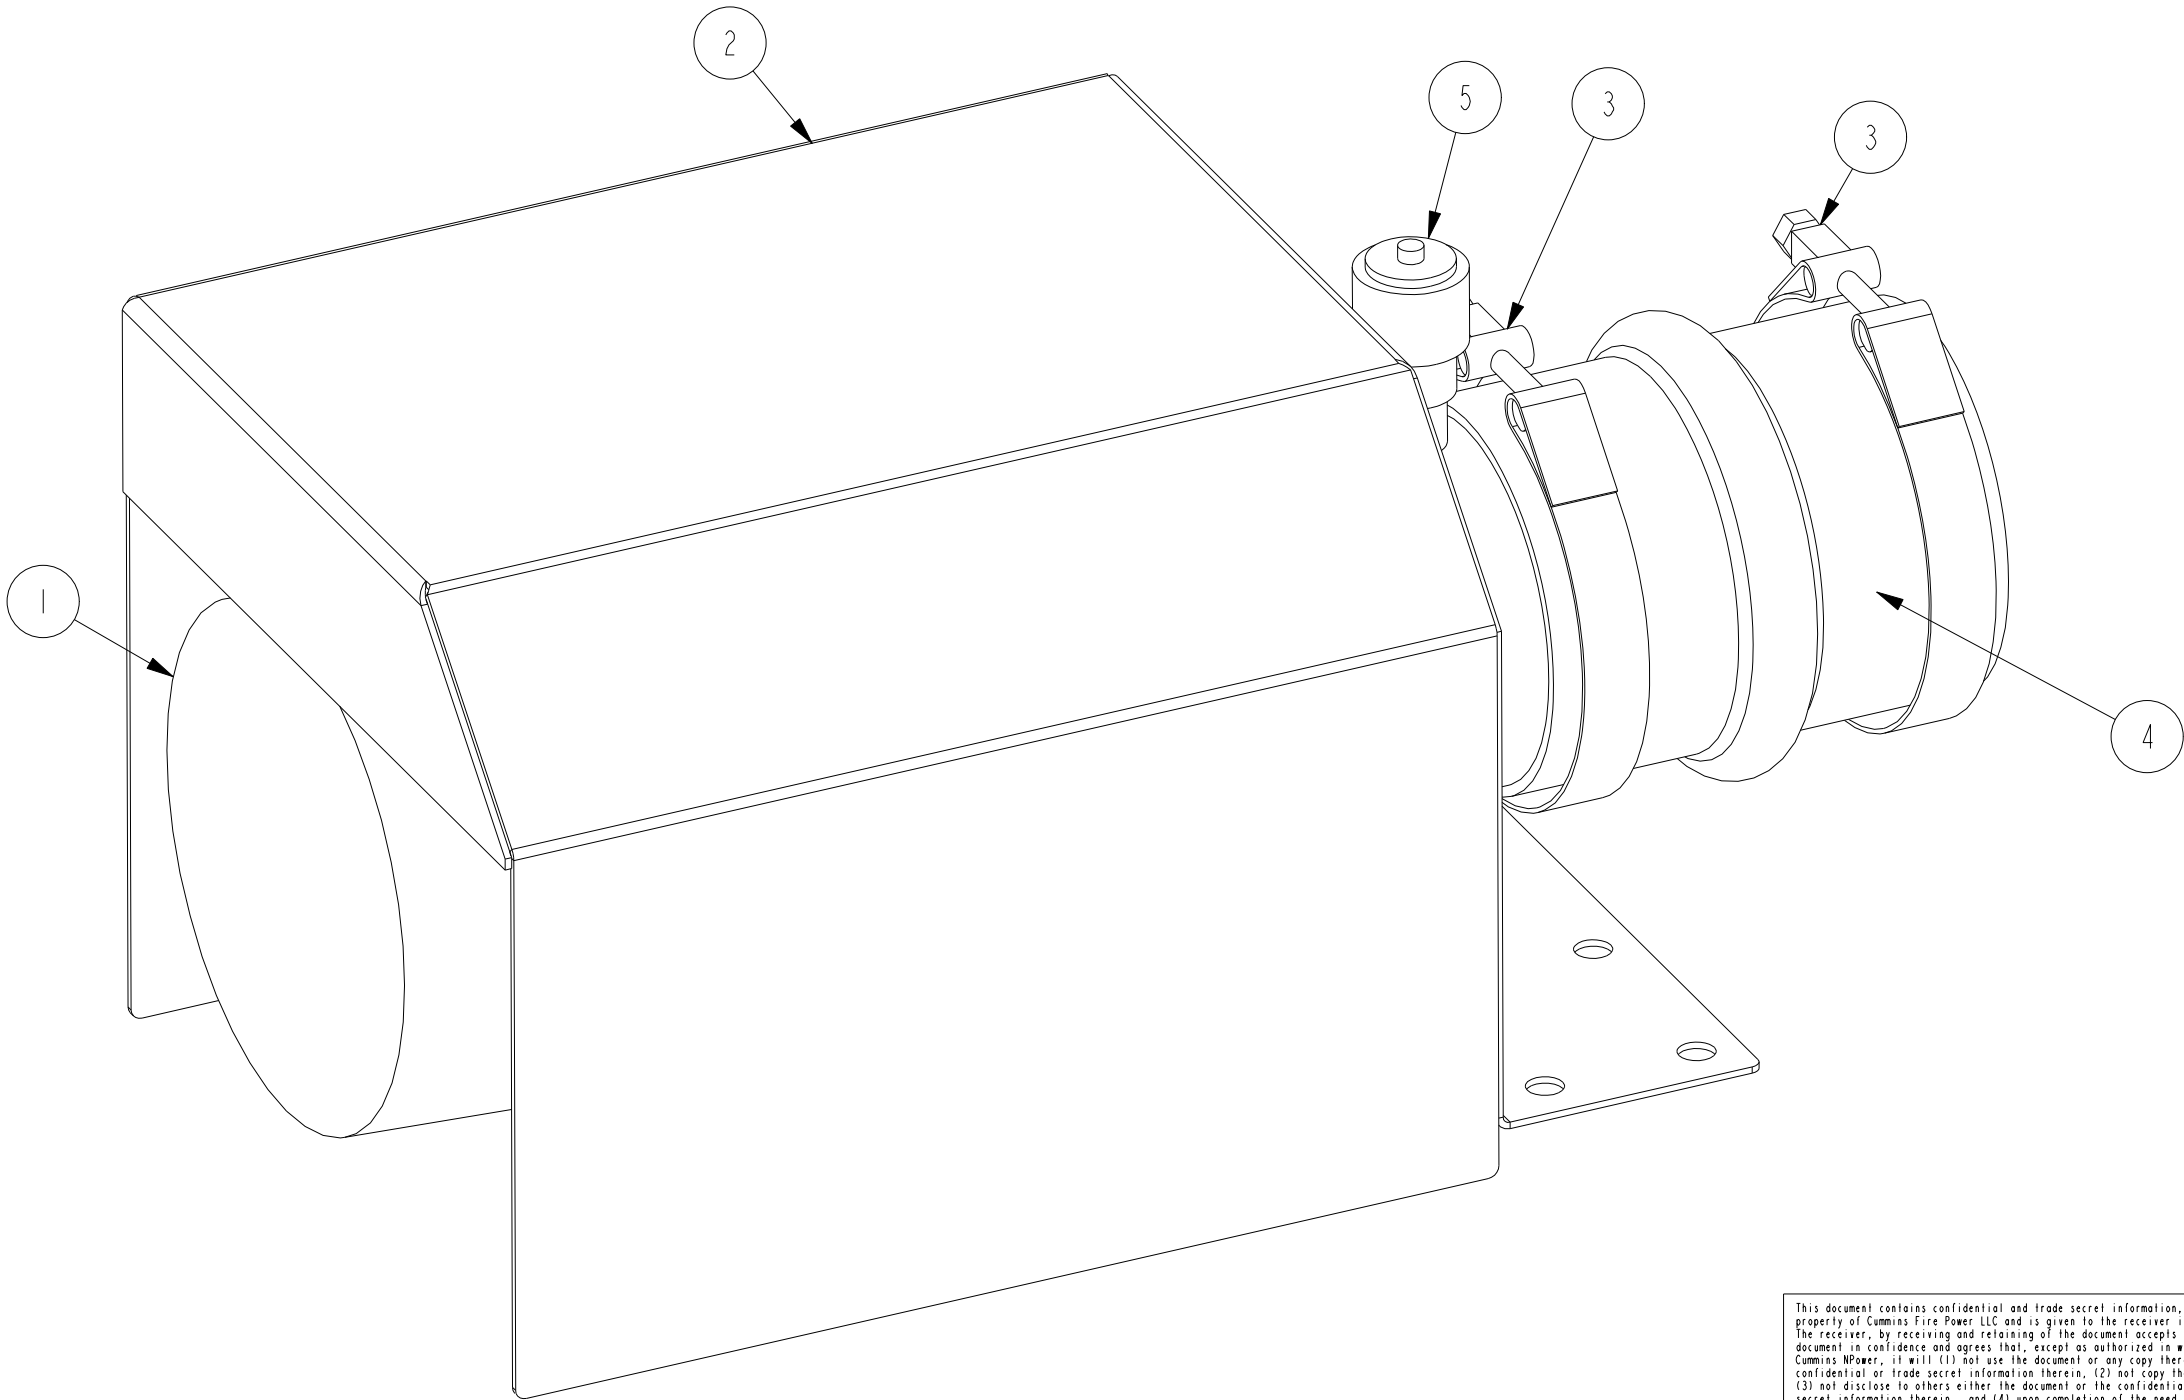

A	2009-253	REV PER 13233. 89835K WAS 14141_003, 13164-0450 WAS 12975-0425	DAN	01-JUN-09
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC




CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM


CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, AIR CLEANER
FIREPUMP, CFP7E

DWG UNITS: IN/LB/S	DRAWN BY: DAVE N PRO-ENGINEER	DATE: 22JAN2009 REF DRWG: -
SCALE: 0.500 EST WEIGHT: 42238.628	SHEET 1 OF 1	DRAWING NO: 14439

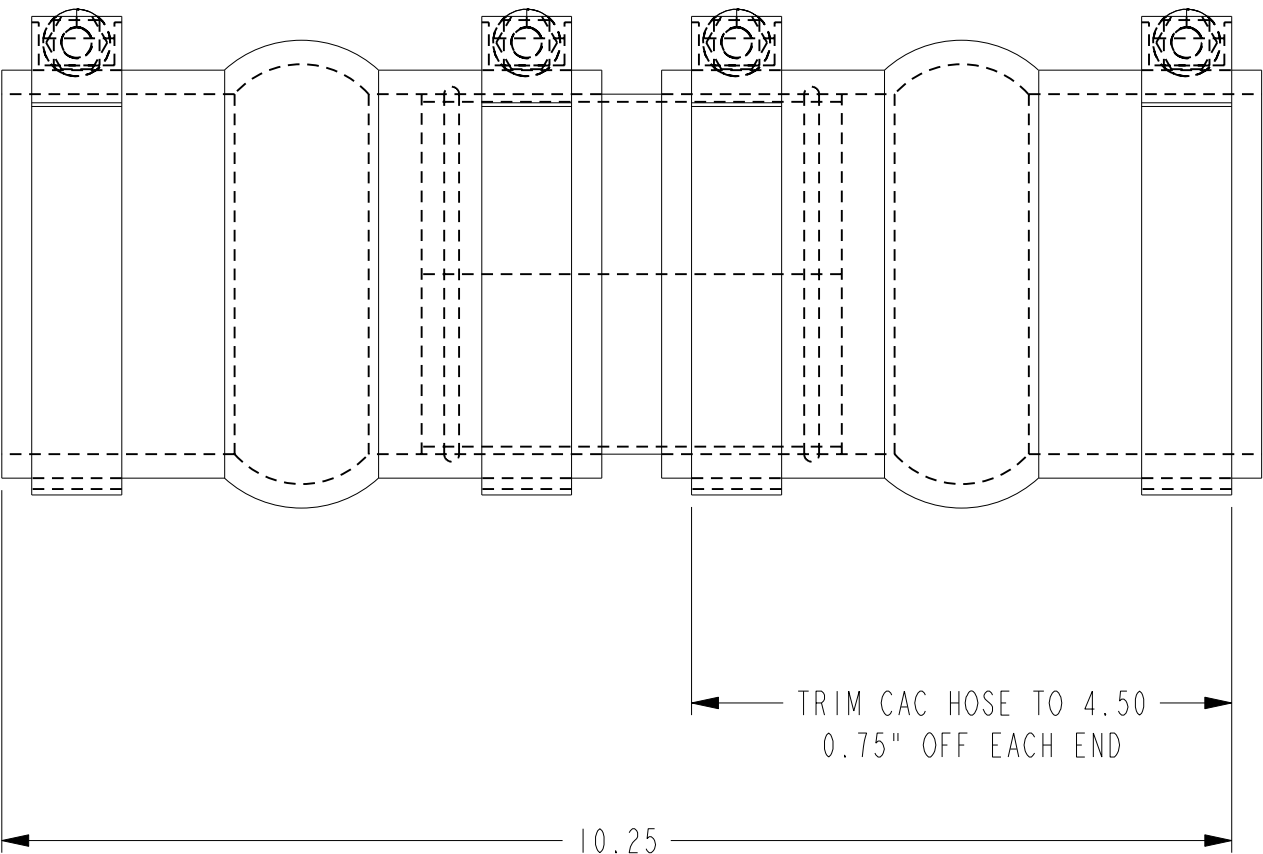

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	HOSE, HUMP CAC 3" I.D., 5IN LONG	13223
2	1	TUBE, CAC INTAKE CONNECTION, CFP5E / 7E	13348
3	4	CLAMP, SPRING LOADED T-BOLT, 3.28-3.58 CUMMINS #3926702	12975-0350

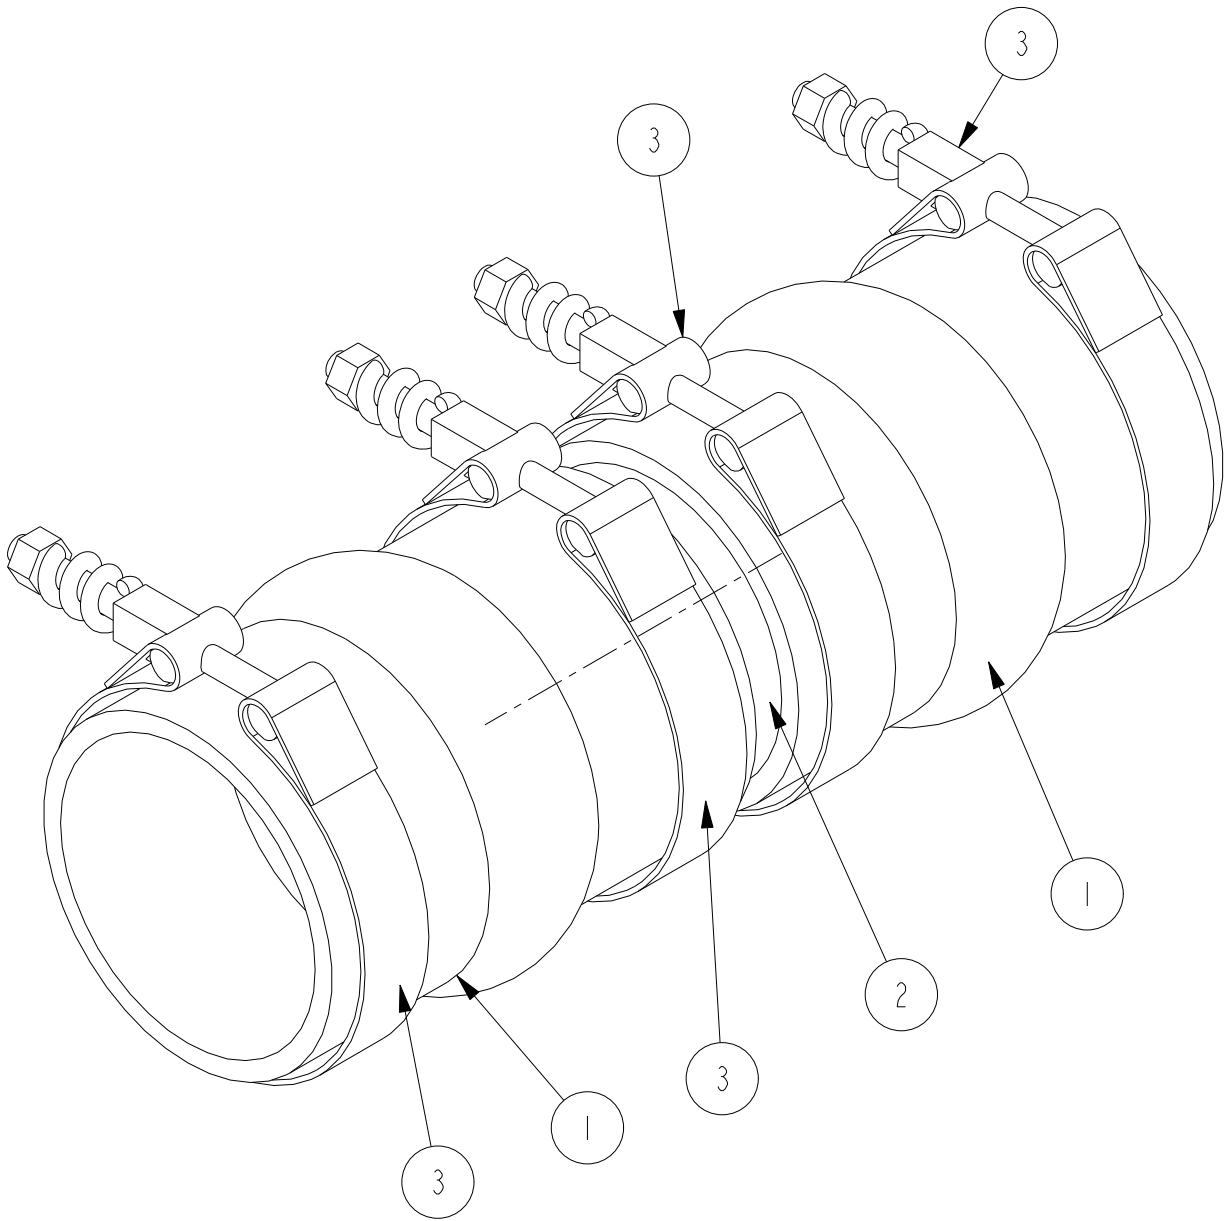

A	2009-249	REV PER TUBE LENGTH. CLAMP WAS 12975-325	DAN	12-JUN-09
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

Cummins Fire Power

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE




ANGULAR DIMENSIONS ± 1°

THIRD ANGLE PROJECTION

MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .XX ± 0.2 .XXX ± 0.4
FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .XX ± 0.8 .XXX ± 0.4
FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .XX ± 0.9 .XXX ± 0.8

ASSEMBLY, HOSE CONNECTION
AIR INTAKE

DWG UNITS: IN/LB/S	DRAWN BY: MAC PRO-ENGINEER	DATE: 09-09-2008
SCALE: 0.625	SHEET 1 OF 1	DRAWING NO: 13303
EST WEIGHT: 2.808		

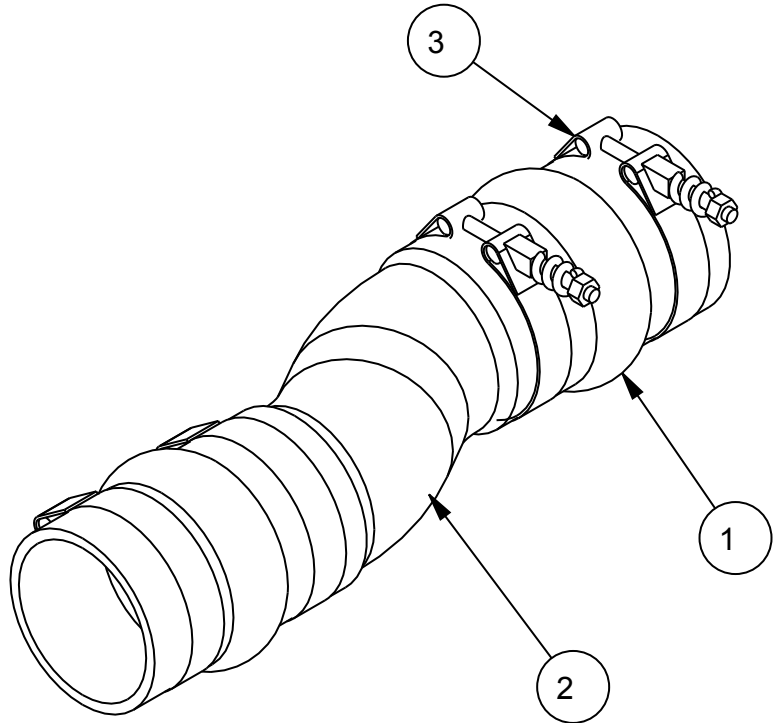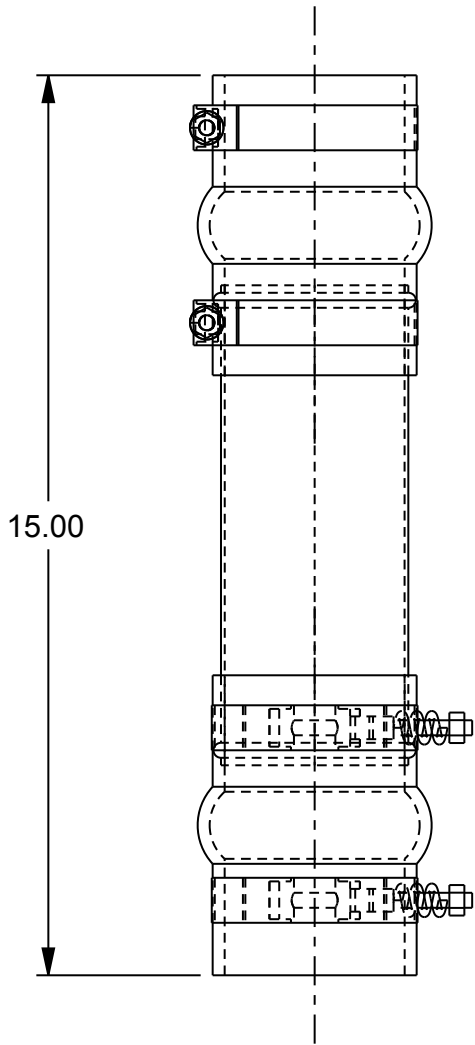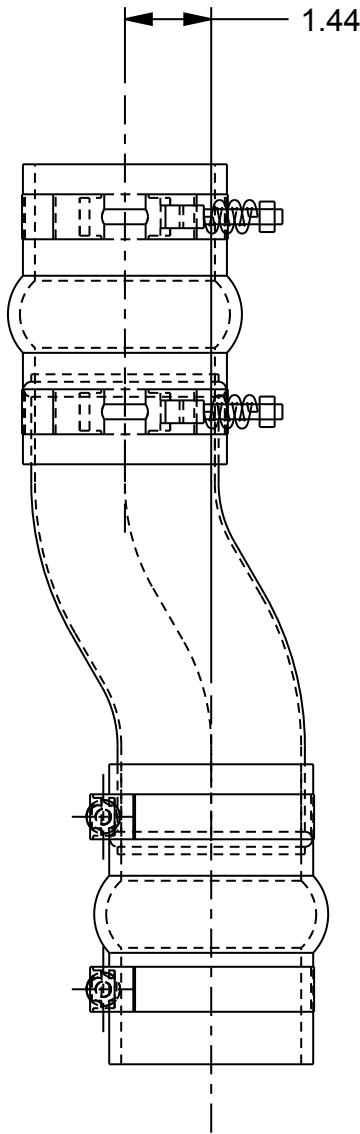

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	HOSE, HUMP CAC 3" I.D., 5IN LONG	13223
2	1	PIPE, HOSE CONNECTION, CAC CFP_5E	13319
3	4	CLAMP, SPRING LOADED T-BOLT, 3.03-3.33	12975-0325

This document contains confidential and trade secret information, is the property of Cummins NPower, LLC and is given to the receiver in confidence. The receiver, by receiving and retaining the document, accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins NPower, LLC

CUMMINS NPOWER, LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.NPOWER.CUMMINS.COM


NPOWER SYSTEMS
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE


ANGULAR DIMENSIONS ± °	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES XX ± 0.010 XXX ± 0.005	MACHINE TOLERANCES X ± 0.4 XX ± 0.2
	FORM TOLERANCES XX ± 0.020 XXX ± 0.015	FORM TOLERANCES X ± 0.8 XX ± 0.4
	FAB TOLERANCES XX ± 0.050 XXX ± 0.030	FAB TOLERANCES X ± 1.5 XX ± 0.8

TITLE 1: ASSEMBLY, AIR TRANSFER
TITLE 2: CFP_5E FIRE PUMP

DWG UNITS: IN/LB/S	DRAWN BY: MAC	DATE: 10-22-2008
EST WEIGHT: 42238.628	APPD BY: -	DATE: -
SCALE: 0.313	DO NOT SCALE	SHEET 1OF1
DRAWING NO: 13306	REV: -	

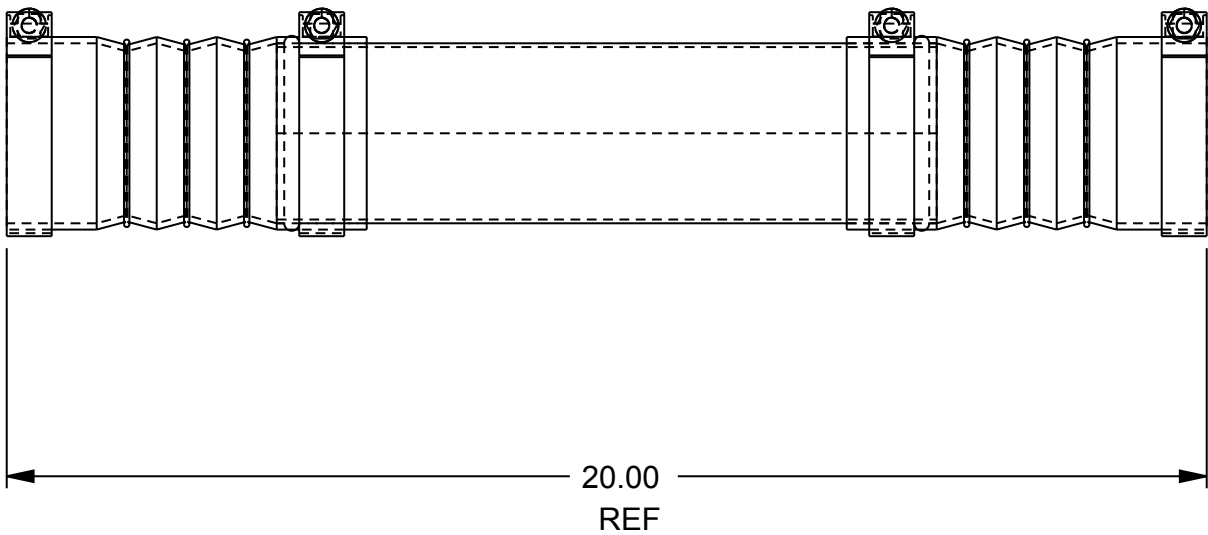

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	PIPE, AIR TRANSFER, CFP_7E	13308
2	4	CLAMP, SPRING LOADED T-BOLT, 3.03-3.33	12975-0325
3	2	HOSE, HUMP CAC 3" I.D., 6IN LONG, CONVOLUTED W/RES RING	13228

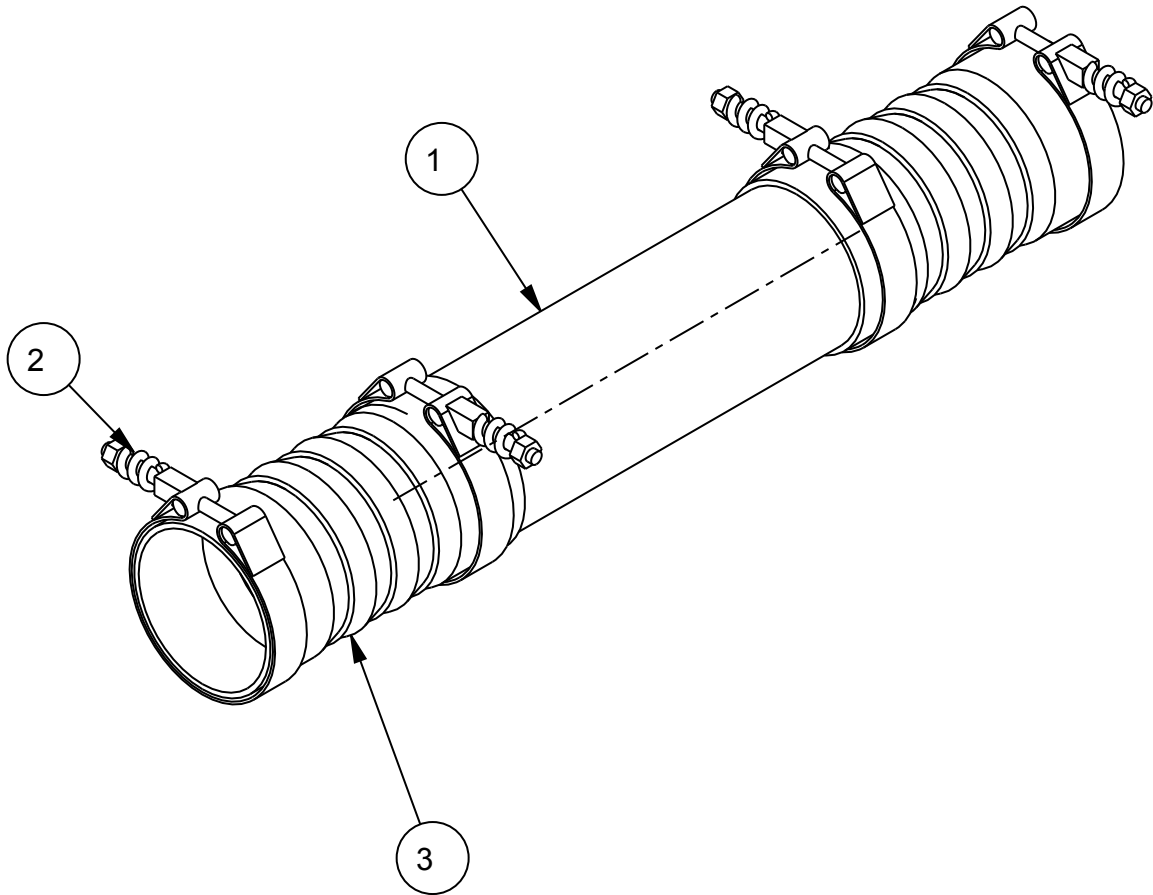

A			
REV	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins NPower, LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins NPower, LLC

CUMMINS NPOWER, LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± °	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES XX ± .010 XXX ± .005	MACHINE TOLERANCES X ± .04 XX ± .02
	FORM TOLERANCES XX ± .005 XXX ± .015	FORM TOLERANCES X ± .08 XX ± .04
	FAB TOLERANCES XX ± .003 XXX ± .003	FAB TOLERANCES X ± .15 XX ± .08




TITLE 1: ASSEMBLY, AIR TRANSFER

TITLE 2: CFP_7E

DWG UNITS: IN/LB/S	DRAWN BY: MAC		DATE: 09-23-2008	
EST WEIGHT: 6.076	APPD BY: -		DATE: -	
	SCALE: 0.313	DO NOT SCALE	SHEET 1OF1	DRAWING NO: 13241
				REV: P0

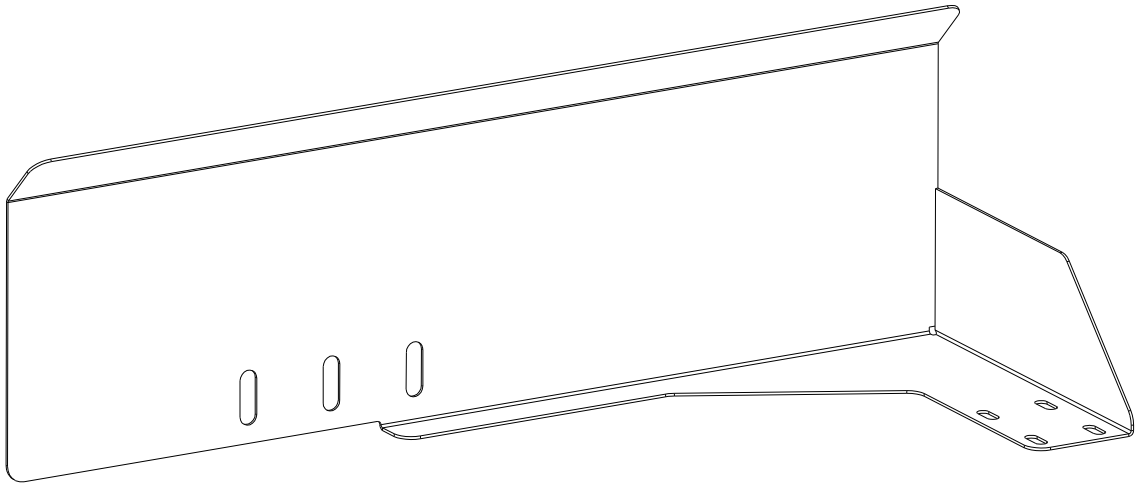


SCALE 0.200

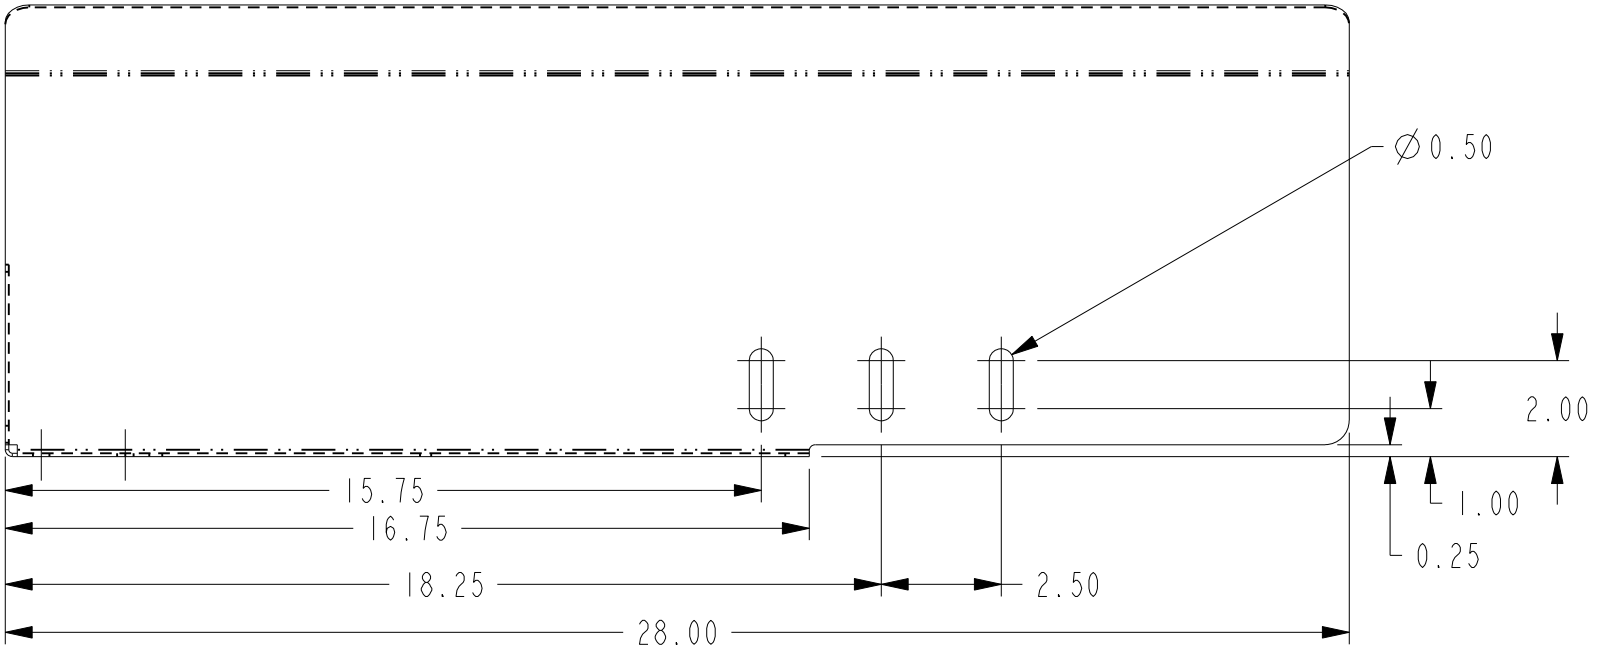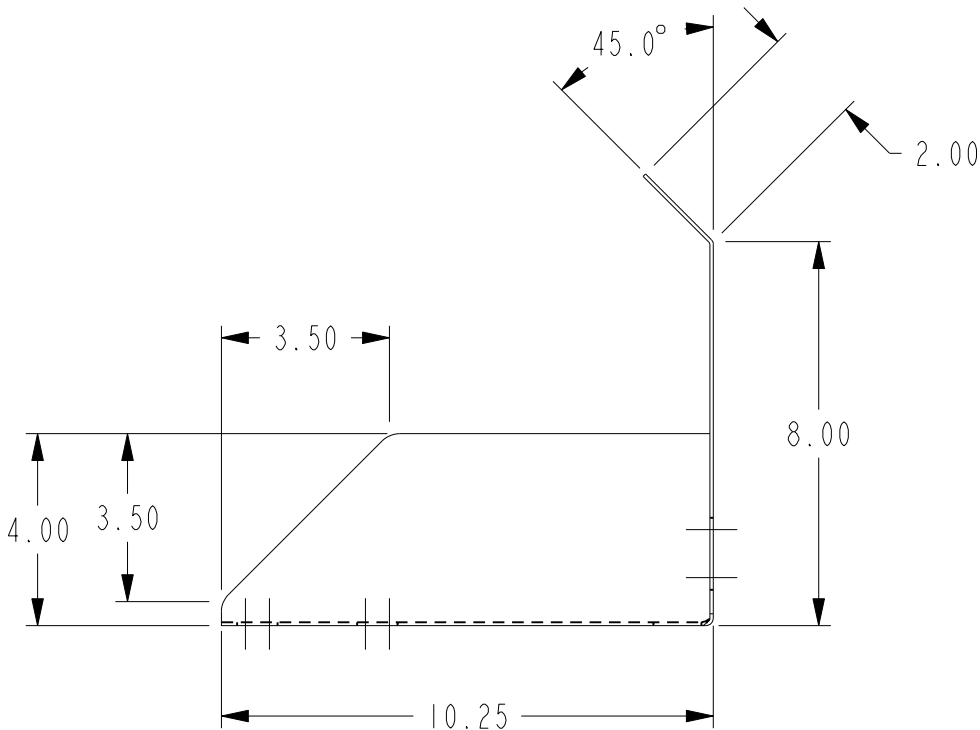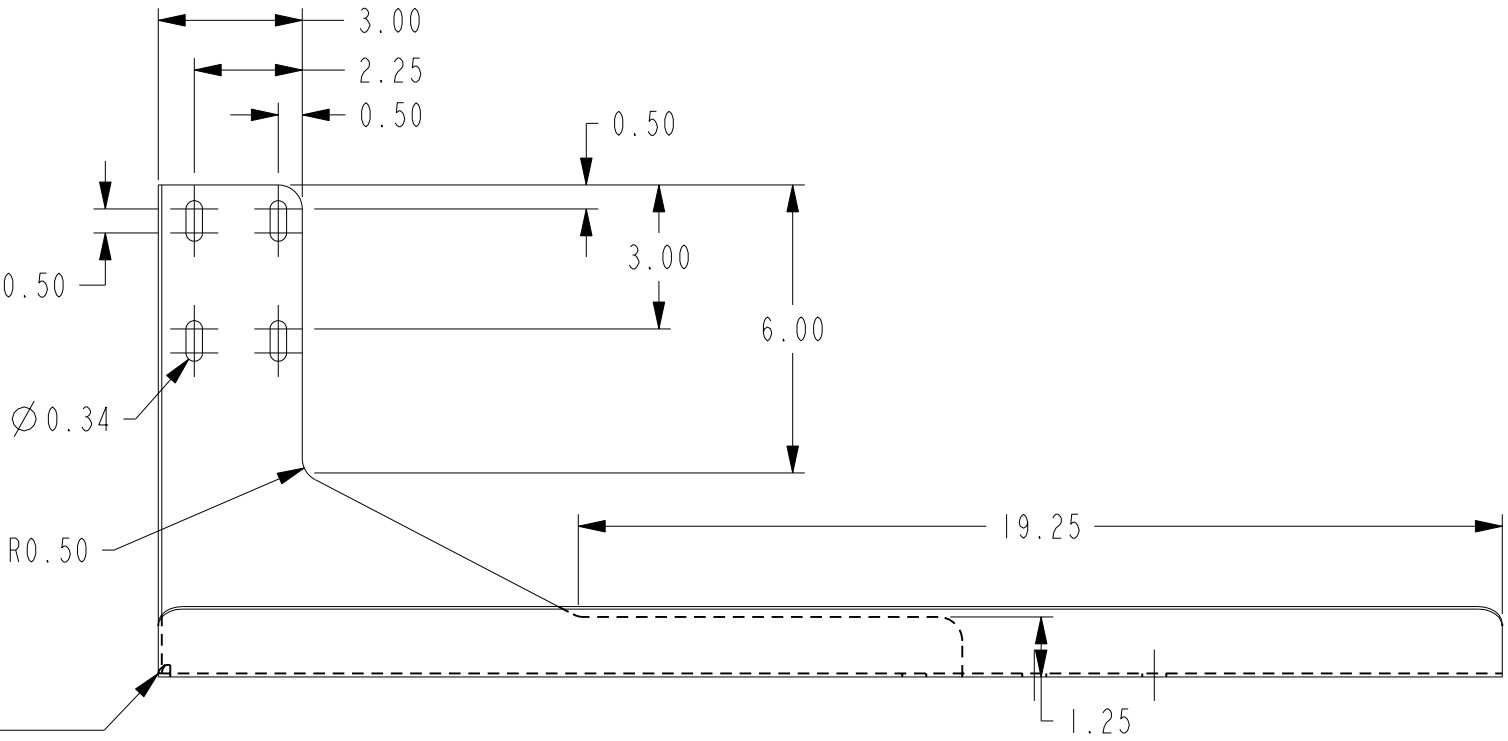

- NOTES:
- 1) MATERIAL: 14 GA. HRS
 - 2) ALL BENDS AT MINIMUM BEND RADIUS
 - 3) REMOVE ALL BURS AND SHARP EDGES
 - 4) FINISH CASE RED

REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

<small>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC</small>				CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM		CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN	
HEAT SHIELD, CFP7E							
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE		ANGULAR DIMENSIONS ± 1°		IMPERIAL UNITS		METRIC UNITS	
THIRD ANGLE PROJECTION				MACHINE TOLERANCES .XX ± 0.010 .XX ± 0.005 FORM TOLERANCES .XX ± 0.010 .XXX ± 0.015 FAB TOLERANCES .XX ± 0.000 .XXX ± 0.030		MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2 FORM TOLERANCES .X ± 0.8 .XX ± 0.4 FAB TOLERANCES .X ± 1.0 .XX ± 0.8	
DWG UNITS: IN/LB/S		DRAWN BY: DAVE N PRO-ENGINEER		DATE: 11MAR2009 REF DRWG: -		SHEET 1 OF 1	
SCALE: 0.250 EST WEIGHT: 0.000		DRAWING NO: 14397					

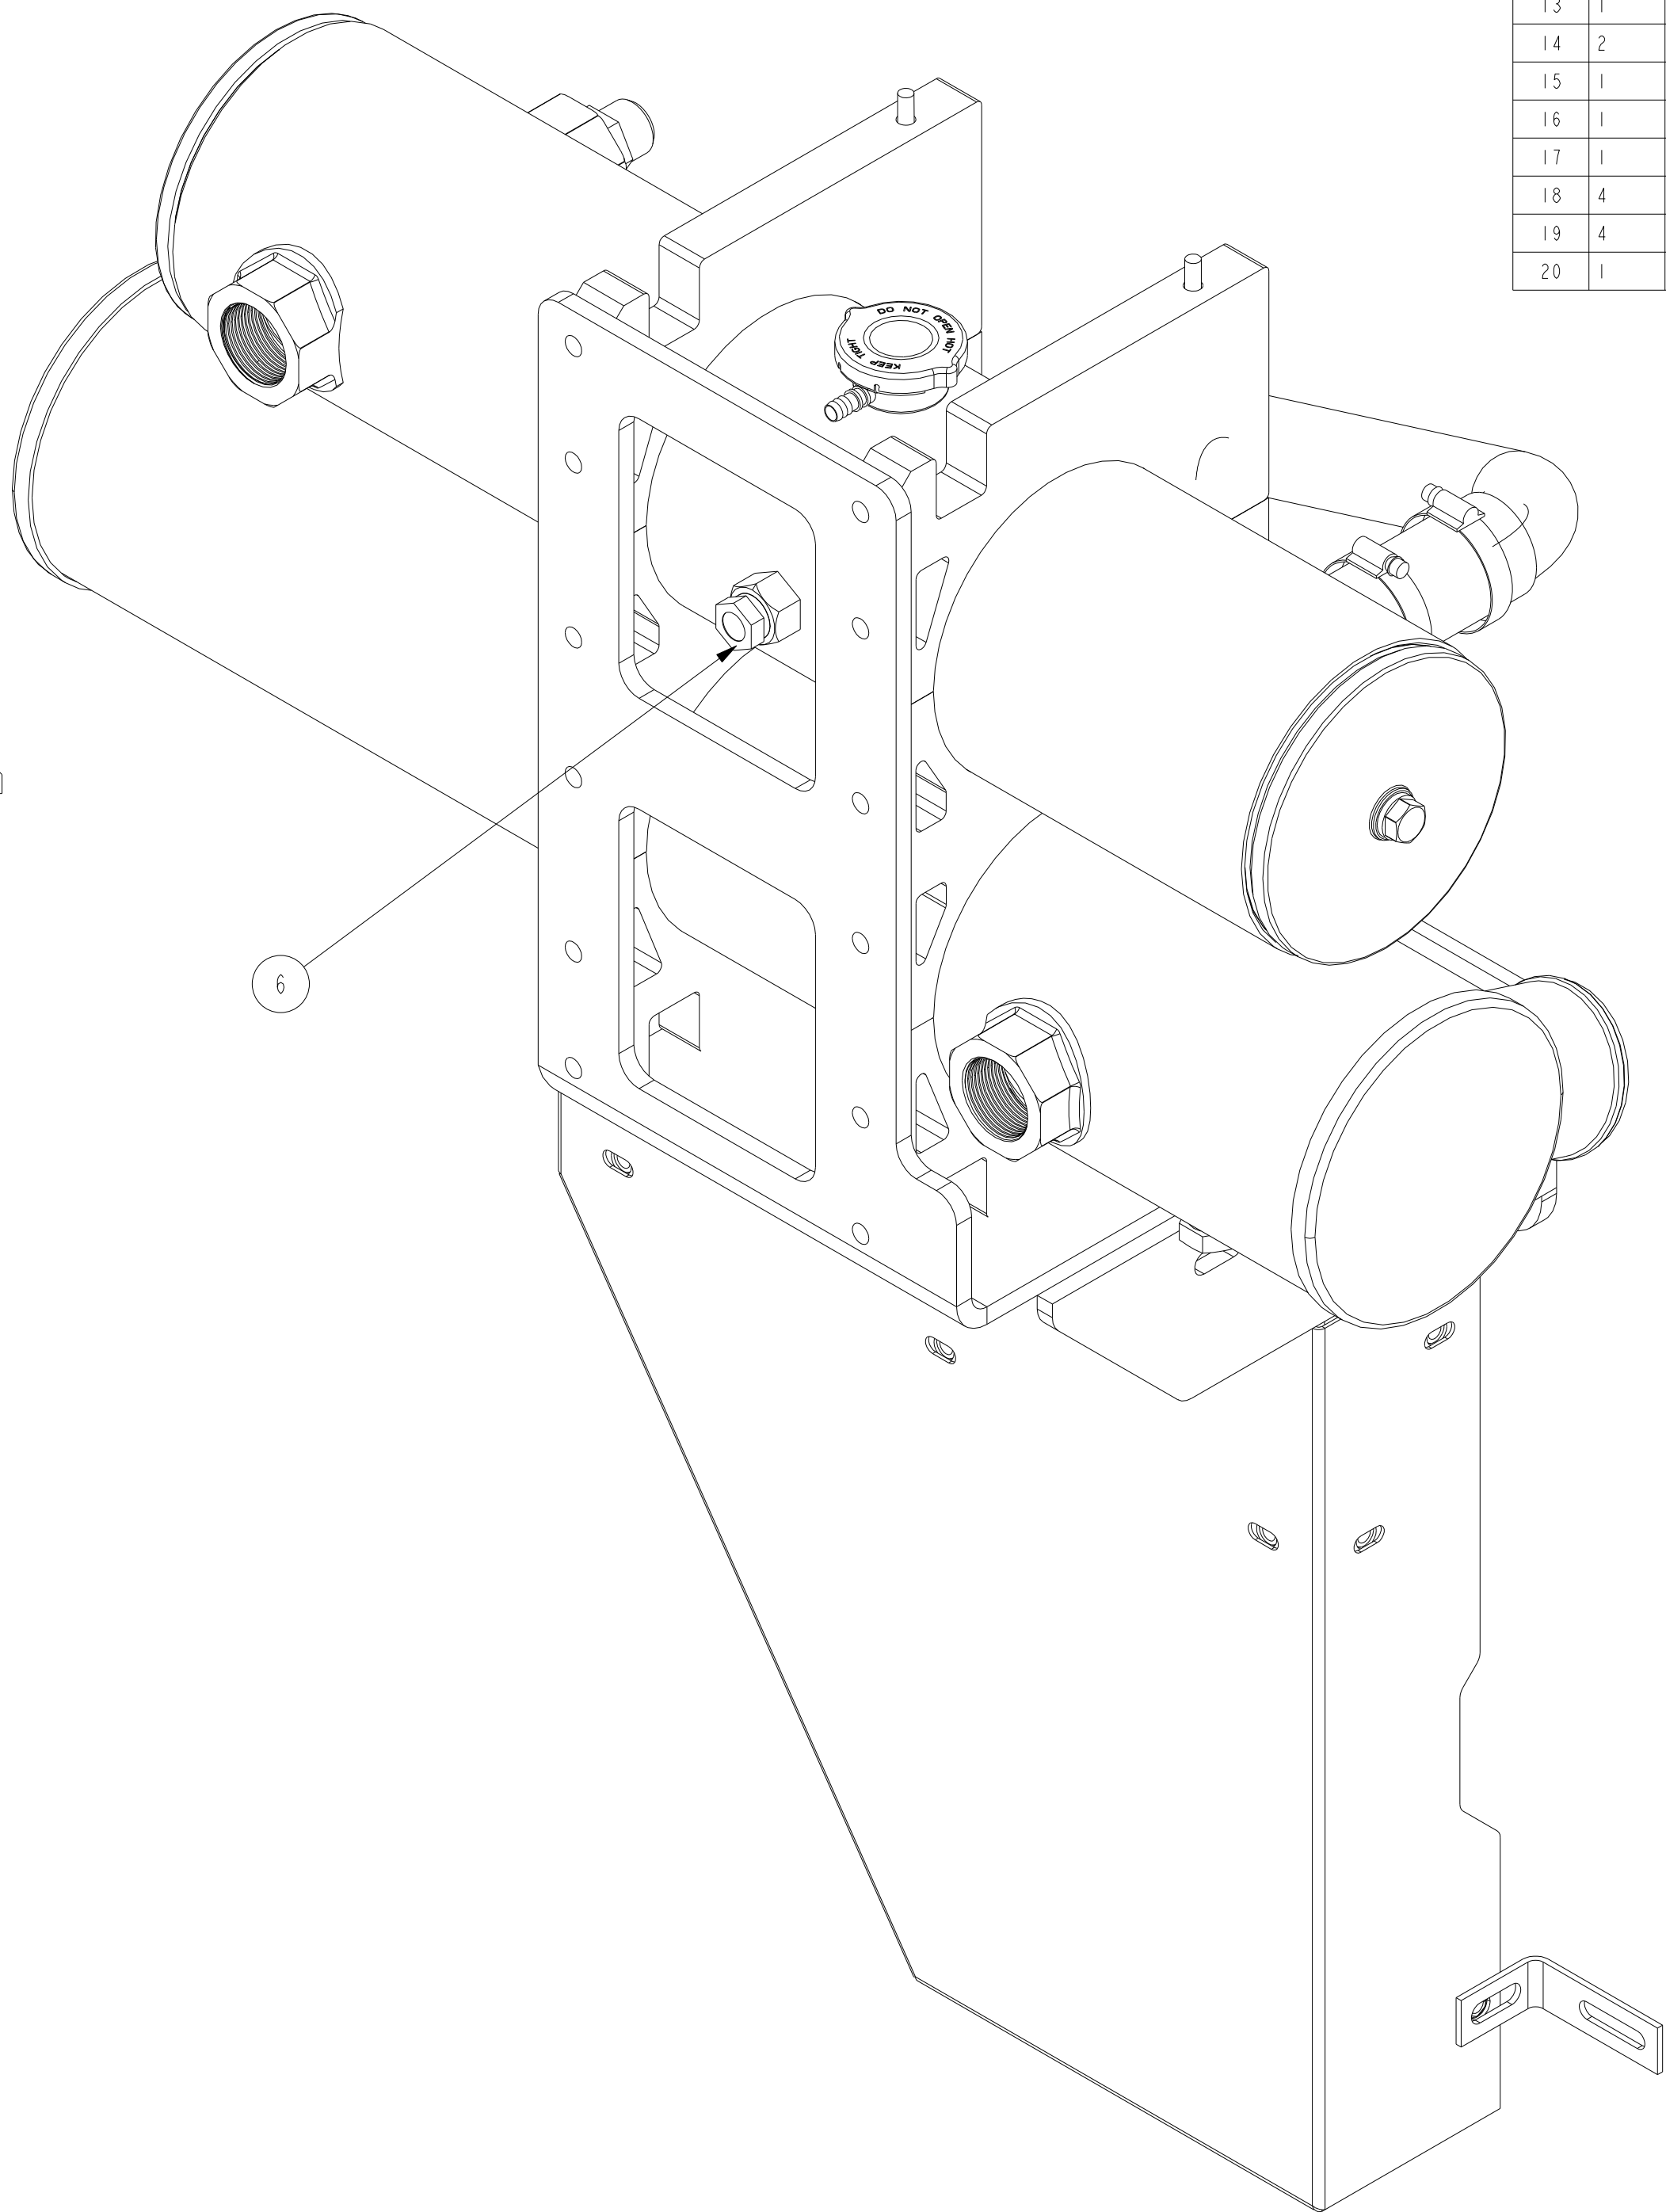

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	PIPE, WATER INLET, FIRE PUMP	13304
2	1	PIPE, WATER OUTLET, FIRE PUMP	13305
3	1	WELDMENT, BELT GUARD , UPPER PANEL, CFP5E & CFP7E	13381
4	2	BRACKET, MOUNTING, GUARD, FIREPUMP	8593
5	2	FTG, STR, -12 JIC X -12 ORB	12235-12-12
6	1	SIGHT GLASS, 1/2" NPT	12979
7	4	BRACKET, HEAT EX & CAC, MOUNT	13108
8	1	HEAT EXCHANGER, 6" DIAMETER, 2-PASS W/ INTEGRAL TOP TANK	13243
9	1	COOLER, CHARGE AIR, 6" DIAMETER, 1-PASS W/ WATER DRAIN	13244
10	1	BRACKET, HX & CAC, SUPT. FIRE PUMP	13245
11	4	ROD, THREADED, 5/16-18", 1-1/8" THRD LENGTH EA. END	13249
12	1	HOSE, 90 DEGREE SWEEP, 2" I.D.	13259
13	1	PANEL, BELT GUARD LOWER	13334
14	2	BRACKET, HEAT EX. & CAC MNT, CENTER SECTION	13384
15	1	HOSE, COOLANT, DAYCO G.L., STRGHT-77175GL, 1-3/4" I.D. x 4.00"	14129.001
16	1	HOSE, COOLANT, DAYCO G.L., STRGHT-77175GL, 1-3/4" I.D. x 5.00"	14129.002
17	1	HOSE, COOLANT, DAYCO G.L., STRGHT-77200GL, 2.00" I.D. x 5.00"	14131.002
18	4	CLAMP, WORM, 1.31 - 2.25	14990-28
19	4	CLAMP, WORM, 1.81 - 2.75	14990-36
20	1	U-BOLT, 2"	U200

C	2009-249	REV PER 13383. 12235-12-12 WAS 12235-16-12	DAN	10-JUN-09	ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS	DWG UNITS:	DRAWN BY: MAC	DATE: 09-30-2008
B	2009-092	ADDED BRACKETS, REV GUARDS	DAVE N	10MAR2009	THIRD ANGLE PROJECTION	IMPERIAL DIMENSIONS 1/16" 1/8" 1/4" 3/8" 1/2" 5/8" 3/4" 1" 1 1/4" 1 1/2" 1 3/4" 2" 2 1/4" 2 1/2" 2 3/4" 3" 3 1/4" 3 1/2" 3 3/4" 4" 4 1/4" 4 1/2" 4 3/4" 5" 5 1/4" 5 1/2" 5 3/4" 6" 6 1/4" 6 1/2" 6 3/4" 7" 7 1/4" 7 1/2" 7 3/4" 8" 8 1/4" 8 1/2" 8 3/4" 9" 9 1/4" 9 1/2" 9 3/4" 10" 10 1/4" 10 1/2" 10 3/4" 11" 11 1/4" 11 1/2" 11 3/4" 12" 12 1/4" 12 1/2" 12 3/4" 13" 13 1/4" 13 1/2" 13 3/4" 14" 14 1/4" 14 1/2" 14 3/4" 15" 15 1/4" 15 1/2" 15 3/4" 16" 16 1/4" 16 1/2" 16 3/4" 17" 17 1/4" 17 1/2" 17 3/4" 18" 18 1/4" 18 1/2" 18 3/4" 19" 19 1/4" 19 1/2" 19 3/4" 20" 20 1/4" 20 1/2" 20 3/4" 21" 21 1/4" 21 1/2" 21 3/4" 22" 22 1/4" 22 1/2" 22 3/4" 23" 23 1/4" 23 1/2" 23 3/4" 24" 24 1/4" 24 1/2" 24 3/4" 25" 25 1/4" 25 1/2" 25 3/4" 26" 26 1/4" 26 1/2" 26 3/4" 27" 27 1/4" 27 1/2" 27 3/4" 28" 28 1/4" 28 1/2" 28 3/4" 29" 29 1/4" 29 1/2" 29 3/4" 30" 30 1/4" 30 1/2" 30 3/4" 31" 31 1/4" 31 1/2" 31 3/4" 32" 32 1/4" 32 1/2" 32 3/4" 33" 33 1/4" 33 1/2" 33 3/4" 34" 34 1/4" 34 1/2" 34 3/4" 35" 35 1/4" 35 1/2" 35 3/4" 36" 36 1/4" 36 1/2" 36 3/4" 37" 37 1/4" 37 1/2" 37 3/4" 38" 38 1/4" 38 1/2" 38 3/4" 39" 39 1/4" 39 1/2" 39 3/4" 40" 40 1/4" 40 1/2" 40 3/4" 41" 41 1/4" 41 1/2" 41 3/4" 42" 42 1/4" 42 1/2" 42 3/4" 43" 43 1/4" 43 1/2" 43 3/4" 44" 44 1/4" 44 1/2" 44 3/4" 45" 45 1/4" 45 1/2" 45 3/4" 46" 46 1/4" 46 1/2" 46 3/4" 47" 47 1/4" 47 1/2" 47 3/4" 48" 48 1/4" 48 1/2" 48 3/4" 49" 49 1/4" 49 1/2" 49 3/4" 50" 50 1/4" 50 1/2" 50 3/4" 51" 51 1/4" 51 1/2" 51 3/4" 52" 52 1/4" 52 1/2" 52 3/4" 53" 53 1/4" 53 1/2" 53 3/4" 54" 54 1/4" 54 1/2" 54 3/4" 55" 55 1/4" 55 1/2" 55 3/4" 56" 56 1/4" 56 1/2" 56 3/4" 57" 57 1/4" 57 1/2" 57 3/4" 58" 58 1/4" 58 1/2" 58 3/4" 59" 59 1/4" 59 1/2" 59 3/4" 60" 60 1/4" 60 1/2" 60 3/4" 61" 61 1/4" 61 1/2" 61 3/4" 62" 62 1/4" 62 1/2" 62 3/4" 63" 63 1/4" 63 1/2" 63 3/4" 64" 64 1/4" 64 1/2" 64 3/4" 65" 65 1/4" 65 1/2" 65 3/4" 66" 66 1/4" 66 1/2" 66 3/4" 67" 67 1/4" 67 1/2" 67 3/4" 68" 68 1/4" 68 1/2" 68 3/4" 69" 69 1/4" 69 1/2" 69 3/4" 70" 70 1/4" 70 1/2" 70 3/4" 71" 71 1/4" 71 1/2" 71 3/4" 72" 72 1/4" 72 1/2" 72 3/4" 73" 73 1/4" 73 1/2" 73 3/4" 74" 74 1/4" 74 1/2" 74 3/4" 75" 75 1/4" 75 1/2" 75 3/4" 76" 76 1/4" 76 1/2" 76 3/4" 77" 77 1/4" 77 1/2" 77 3/4" 78" 78 1/4" 78 1/2" 78 3/4" 79" 79 1/4" 79 1/2" 79 3/4" 80" 80 1/4" 80 1/2" 80 3/4" 81" 81 1/4" 81 1/2" 81 3/4" 82" 82 1/4" 82 1/2" 82 3/4" 83" 83 1/4" 83 1/2" 83 3/4" 84" 84 1/4" 84 1/2" 84 3/4" 85" 85 1/4" 85 1/2" 85 3/4" 86" 86 1/4" 86 1/2" 86 3/4" 87" 87 1/4" 87 1/2" 87 3/4" 88" 88 1/4" 88 1/2" 88 3/4" 89" 89 1/4" 89 1/2" 89 3/4" 90" 90 1/4" 90 1/2" 90 3/4" 91" 91 1/4" 91 1/2" 91 3/4" 92" 92 1/4" 92 1/2" 92 3/4" 93" 93 1/4" 93 1/2" 93 3/4" 94" 94 1/4" 94 1/2" 94 3/4" 95" 95 1/4" 95 1/2" 95 3/4" 96" 96 1/4" 96 1/2" 96 3/4" 97" 97 1/4" 97 1/2" 97 3/4" 98" 98 1/4" 98 1/2" 98 3/4" 99" 99 1/4" 99 1/2" 99 3/4" 100" 100 1/4" 100 1/2" 100 3/4" 101" 101 1/4" 101 1/2" 101 3/4" 102" 102 1/4" 102 1/2" 102 3/4" 103" 103 1/4" 103 1/2" 103 3/4" 104" 104 1/4" 104 1/2" 104 3/4" 105" 105 1/4" 105 1/2" 105 3/4" 106" 106 1/4" 106 1/2" 106 3/4" 107" 107 1/4" 107 1/2" 107 3/4" 108" 108 1/4" 108 1/2" 108 3/4" 109" 109 1/4" 109 1/2" 109 3/4" 110" 110 1/4" 110 1/2" 110 3/4" 111" 111 1/4" 111 1/2" 111 3/4" 112" 112 1/4" 112 1/2" 112 3/4" 113" 113 1/4" 113 1/2" 113 3/4" 114" 114 1/4" 114 1/2" 114 3/4" 115" 115 1/4" 115 1/2" 115 3/4" 116" 116 1/4" 116 1/2" 116 3/4" 117" 117 1/4" 117 1/2" 117 3/4" 118" 118 1/4" 118 1/2" 118 3/4" 119" 119 1/4" 119 1/2" 119 3/4" 120" 120 1/4" 120 1/2" 120 3/4" 121" 121 1/4" 121 1/2" 121 3/4" 122" 122 1/4" 122 1/2" 122 3/4" 123" 123 1/4" 123 1/2" 123 3/4" 124" 124 1/4" 124 1/2" 124 3/4" 125" 125 1/4" 125 1/2" 125 3/4" 126" 126 1/4" 126 1/2" 126 3/4" 127" 127 1/4" 127 1/2" 127 3/4" 128" 128 1/4" 128 1/2" 128 3/4" 129" 129 1/4" 129 1/2" 129 3/4" 130" 130 1/4" 130 1/2" 130 3/4" 131" 131 1/4" 131 1/2" 131 3/4" 132" 132 1/4" 132 1/2" 132 3/4" 133" 133 1/4" 133 1/2" 133 3/4" 134" 134 1/4" 134 1/2" 134 3/4" 135" 135 1/4" 135 1/2" 135 3/4" 136" 136 1/4" 136 1/2" 136 3/4" 137" 137 1/4" 137 1/2" 137 3/4" 138" 138 1/4" 138 1/2" 138 3/4" 139" 139 1/4" 139 1/2" 139 3/4" 140" 140 1/4" 140 1/2" 140 3/4" 141" 141 1/4" 141 1/2" 141 3/4" 142" 142 1/4" 142 1/2" 142 3/4" 143" 143 1/4" 143 1/2" 143 3/4" 144" 144 1/4" 144 1/2" 144 3/4" 145" 145 1/4" 145 1/2" 145 3/4" 146" 146 1/4" 146 1/2" 146 3/4" 147" 147 1/4" 147 1/2" 147 3/4" 148" 148 1/4" 148 1/2" 148 3/4" 149" 149 1/4" 149 1/2" 149 3/4" 150" 150 1/4" 150 1/2" 150 3/4" 151" 151 1/4" 151 1/2" 151 3/4" 152" 152 1/4" 152 1/2" 152 3/4" 153" 153 1/4" 153 1/2" 153 3/4" 154" 154 1/4" 154 1/2" 154 3/4" 155" 155 1/4" 155 1/2" 155 3/4" 156" 156 1/4" 156 1/2" 156 3/4" 157" 157 1/4" 157 1/2" 157 3/4" 158" 158 1/4" 158 1/2" 158 3/4" 159" 159 1/4" 159 1/2" 159 3/4" 160" 160 1/4" 160 1/2" 160 3/4" 161" 161 1/4" 161 1/2" 161 3/4" 162" 162 1/4" 162 1/2" 162 3/4" 163" 163 1/4" 163 1/2" 163 3/4" 164" 164 1/4" 164 1/2" 164 3/4" 165" 165 1/4" 165 1/2" 165 3/4" 166" 166 1/4" 166 1/2" 166 3/4" 167" 167 1/4" 167 1/2" 167 3/4" 168" 168 1/4" 168 1/2" 168 3/4" 169" 169 1/4" 169 1/2" 169 3/4" 170" 170 1/4" 170 1/2" 170 3/4" 171" 171 1/4" 171 1/2" 171 3/4" 172" 172 1/4" 172 1/2" 172 3/4" 173" 173 1/4" 173 1/2" 173 3/4" 174" 174 1/4" 174 1/2" 174 3/4" 175" 175 1/4" 175 1/2" 175 3/4" 176" 176 1/4" 176 1/2" 176 3/4" 177" 177 1/4" 177 1/2" 177 3/4" 178" 178 1/4" 178 1/2" 178 3/4" 179" 179 1/4" 179 1/2" 179 3/4" 180" 180 1/4" 180 1/2" 180 3/4" 181" 181 1/4" 181 1/2" 181 3/4" 182" 182 1/4" 182 1/2" 182 3/4" 183" 183 1/4" 183 1/2" 183 3/4" 184" 184 1/4" 184 1/2" 184 3/4" 185" 185 1/4" 185 1/2" 185 3/4" 186" 186 1/4" 186 1/2" 186 3/4" 187" 187 1/4" 187 1/2" 187 3/4" 188" 188 1/4" 188 1/2" 188 3/4" 189" 189 1/4" 189 1/2" 189 3/4" 190" 190 1/4" 190 1/2" 190 3/4" 191" 191 1/4" 191 1/2" 191 3/4" 192" 192 1/4" 192 1/2" 192 3/4" 193" 193 1/4" 193 1/2" 193 3/4" 194" 194 1/4" 194 1/2" 194 3/4" 195" 195 1/4" 195 1/2" 195 3/4" 196" 196 1/4" 196 1/2" 196 3/4" 197" 197 1/4" 197 1/2" 197 3/4" 198" 198 1/4" 198 1/2" 198 3/4" 199" 199 1/4" 199 1/2" 199 3/4" 200" 200 1/4" 200 1/2" 200 3/4" 201" 201 1/4" 201 1/2" 201 3/4" 202" 202 1/4" 202 1/2" 202 3/4" 203" 203 1/4" 203 1/2" 203 3/4" 204" 204 1/4" 204 1/2" 204 3/4" 205" 205 1/4" 205 1/2" 205 3/4" 206" 206 1/4" 206 1/2" 206 3/4" 207" 207 1/4" 207 1/2" 207 3/4" 208" 208 1/4" 208 1/2" 208 3/4" 209" 209 1/4" 209 1/2" 209 3/4" 210" 210 1/4" 210 1/2" 210 3/4" 211" 211 1/4" 211 1/2" 211 3/4" 212" 212 1/4" 212 1/2" 212 3/4" 213" 213 1/4" 213 1/2" 213 3/4" 214" 214 1/4" 214 1/2" 214 3/4" 215" 215 1/4" 215 1/2" 215 3/4" 216" 216 1/4" 216 1/2" 216 3/4" 217" 217 1/4" 217 1/2" 217 3/4" 218" 218 1/4" 218 1/2" 218 3/4" 219" 219 1/4" 219 1/2" 219 3/4" 220" 220 1/4" 220 1/2" 220 3/4" 221" 221 1/4" 221 1/2" 221 3/4" 222" 222 1/4" 222 1/2" 222 3/4" 223" 223 1/4" 223 1/2" 223 3/4" 224" 224 1/4" 224 1/2" 224 3/4" 225" 225 1/4" 225 1/2" 225 3/4" 226" 226 1/4" 226 1/2" 226 3/4" 227" 227 1/4" 227 1/2" 227 3/4" 228" 228 1/4" 228 1/2" 228 3/4" 229" 229 1/4" 229 1/2" 229 3/4" 230" 230 1/4" 230 1/2" 230 3/4" 231" 231 1/4" 231 1/2" 231 3/4" 232" 232 1/4" 232 1/2" 232 3/4" 233" 233 1/4" 233 1/2" 233 3/4" 234" 234 1/4" 234 1/2" 234 3/4" 235" 235 1/4" 235 1/2" 235 3/4" 236" 236 1/4" 236 1/2" 236 3/4" 237" 237 1/4" 237 1/2" 237 3/4" 238" 238 1/4" 238 1/2" 238 3/4" 239" 239 1/4" 239 1/2" 239 3/4" 240" 240 1/4" 240 1/2" 240 3/4" 241" 241 1/4" 241 1/2" 241 3/4" 242" 242 1/4" 242 1/2" 242 3/4" 243" 243 1/4" 243 1/2" 243 3/4" 244" 244 1/4" 244 1/2" 244 3/4" 245" 245 1/4" 245 1/2" 245 3/4" 246" 246 1/4" 246 1/2" 246 3/4" 247" 247 1/4" 247 1/2" 247 3/4" 248" 248 1/4" 248 1/2" 248 3/4" 249" 249 1/4" 249 1/2" 249 3/4" 250" 250 1/4" 250 1/2" 250 3/4" 251" 251 1/4" 251 1/2" 251 3/4" 252" 252 1/4" 252 1/2" 252 3/4" 253" 253 1/4" 253 1/2" 253 3/4" 254" 254 1/4" 254 1/2" 254 3/4" 255" 255 1/4" 255 1/2" 255 3/4" 256" 256 1/4" 256 1/2" 256 3/4" 257" 257 1/4" 257 1/2" 257 3/4" 258" 258 1/4" 258 1/2" 258 3/4" 259" 259 1/4" 259 1/2" 259 3/4" 260" 260 1/4" 260 1/2" 260 3/4" 261" 261 1/4" 261 1/2" 261 3/4" 262" 262 1/4" 262 1/2" 262 3/4" 263" 263 1/4" 263 1/2" 263 3/4" 264" 264 1/4" 264 1/2" 264 3/4" 265" 265 1/4" 265 1/2" 265 3/4" 266" 266 1/4" 266 1/2" 266 3/4" 267" 267 1/4" 267 1/2" 267 3/4" 268" 268 1/4" 268 1/2" 268 3/4" 269" 269 1/4" 269 1/2" 269 3/4" 270" 270 1/4" 270 1/2" 270 3/4" 271" 271 1/4" 271 1/2" 271 3/4" 272" 272 1/4" 272 1/2" 272 3/4" 273" 273 1/4" 273 1/2" 273 3/4" 274" 274 1/4" 274 1/2" 274 3/4" 275" 275 1/4" 275 1/2" 275 3/4" 276" 276 1/4" 276 1/2" 276 3/4" 277" 277 1/4" 277 1/2" 277 3/4" 278" 278 1/4" 278 1/2" 278 3/4" 279" 279 1/4" 279 1/2" 279 3/4" 280" 280 1/4" 280 1/2" 280 3/4" 281" 281 1/4" 281 1/2" 281 3/4" 282" 282 1/4" 282 1/2" 282 3/4" 283" 283 1/4" 283 1/2" 283 3/4" 284" 284 1/4" 284 1/2" 284 3/4" 285" 285 1/4" 285 1/2" 285 3/4" 286" 286 1/4" 286 1/2" 286 3/4" 287" 287 1/4" 287 1/2" 287 3/4" 288" 288 1/4" 288 1/2" 288 3/4" 289" 289 1/4" 289 1/2" 289 3/4" 290" 290 1/4" 290 1/2" 290 3/4" 291" 291 1/4" 291 1/2" 291 3/4" 292" 292 1/4" 292 1/2" 292 3/4" 293" 293 1/4" 293 1/2" 293 3/4" 294" 294 1/4" 294 1/2" 294 3/4" 295" 295 1/4" 295 1/2" 295 3/4" 296" 296 1/4" 296 1/2" 296 3/4" 297" 297 1/4" 297 1/2" 297 3/4" 298" 298 1/4" 298 1/2" 298 3/4" 299" 299 1/4" 299 1/2" 299 3/4" 300" 300 1/4" 300 1/2" 300 3/4" 301" 301 1/4" 301 1/2" 301 3/4" 302" 302 1/4" 302 1/2" 302 3/4" 303" 303 1/4" 303 1/2" 303 3/4" 304" 304 1/4" 304 1/2" 304 3/4" 305" 305 1/4" 305 1/2" 305 3/4" 306" 306 1/4" 306 1/2" 306 3/4" 307" 307 1/4" 307 1/2" 307 3/4" 308" 308 1/4" 308 1/2" 308 3/4" 309" 309 1/4" 309 1/2" 309 3/4" 310" 310 1/4" 310 1/2" 310 3/4" 311" 311 1/4" 311 1/2" 311 3/4" 312" 312 1/4" 312 1/2" 312 3/4" 313" 313 1/4" 313 1/2" 313 3/4" 314" 314 1/4" 314 1/2" 314 3/4" 315" 315 1/4" 315 1/2" 315 3/4" 316" 316 1/4" 316 1/2" 316 3/4" 317" 317 1/4" 317 1/2" 317 3/4" 318" 318 1/4" 318 1/2" 318 3/4" 319" 319 1/4" 319 1/2" 319 3/4" 320" 320 1/4" 320 1/2" 320 3/4" 321" 321 1/4" 321 1/2" 321 3/4" 322" 322 1/4" 322 1/2" 322 3/4" 323" 323 1/4" 323 1/2" 323 3/4" 324" 324 1/4" 324 1/2" 324 3/4" 325" 325 1/4" 325 1/2" 325 3/4" 326" 326 1/4" 326 1/2" 326 3/4" 327" 327 1/4" 327 1/2" 327 3/4" 328" 328 1/4" 328 1/2" 328 3/4" 329" 329 1/4" 329 1/2" 329 3/4" 330" 330 1/4" 330 1/2" 330 3/4" 331" 331 1/4" 331 1/2" 331 3/4" 332" 332 1/4" 332 1/2" 332 3/4" 333" 333 1/4" 333 1/2" 333 3/4" 334" 334 1/4" 334 1/2" 334 3/4" 335" 335 1/4" 335 1/2" 335 3/4" 336" 336 1/4" 336 1/2" 336 3/4" 337" 337 1/4" 337 1/2" 337 3/4" 338" 338 1/4" 338 1/2" 338 3/4" 339" 339 1/4" 339 1/2" 339 3/4" 340" 340 1/4" 340 1/2" 340 3/4" 341" 341 1/4" 341 1/2" 341 3/4" 342" 342 1/4" 342 1/2" 342 3/4" 343" 343 1/4" 343 1/2" 343 3/4" 344" 344 1/4" 344 1/2" 344 3/4" 345" 345 1/4" 345 1/2" 345 3/4" 346" 346 1/4" 346 1/2" 346 3/4" 347" 347 1/4" 347 1/2" 347 3/4" 348" 348 1/4" 348 1/2" 348 3/4" 349" 349 1/4" 349 1/2" 349 3/4" 350" 350 1/4" 350 1/2" 350 3/4" 351" 351 1/4" 351 1/2" 351 3/4" 352" 352 1/4" 352 1/2" 352 3/4" 353" 353 1/4" 353 1/2" 353 3/4" 354" 354 1/4" 354 1/2" 354 3/4" 355" 355 1/4" 355 1/2" 355 3/4" 356" 356 1/4" 356 1/2" 356 3/4" 357" 357 1/4" 357 1/2" 357 3/4" 358" 358 1/4" 358 1/2" 358 3/4" 359" 359 1/4" 359 1/2" 359 3/4" 360" 360 1/4" 360 1/2" 360 3/4" 361" 361 1/4" 361 1/2" 361 3/4" 362" 362 1/4" 362 1/2" 362 3/4" 363" 363 1/4" 363 1/2" 363 3/4" 364" 364 1/4" 364 1/2" 364 3/4" 365" 365 1/4" 365 1/2" 365 3/4" 366" 366 1/4" 366 1/2" 366 3/4" 367" 367 1/4" 367 1/2" 367 3/4" 368" 368 1/4" 368 1/2" 368 3/4" 369" 369 1/4" 369 1/2" 369 3/4" 370" 370 1/4" 370 1/2" 370 3/4" 371" 371 1/4" 371 1/2" 371 3/4" 372" 372 1/4" 372 1/2" 372 3/4" 373" 373 1/4" 373 1/2" 373 3/4" 374" 374 1/4" 374 1/2" 374 3/4" 375" 375 1/4" 375 1/2" 375 3/4" 376" 376 1/4" 376 1/2" 376 3/4" 377" 377 1/4" 377 1/2" 377 3/4" 378" 378 1/4" 378 1/2" 378 3/4" 379" 379 1/4" 379 1/2" 379 3/4" 380" 380 1/4" 380 1/2" 380 3/4" 381" 381 1/4" 381 1/2" 381 3/4" 382" 382 1/4" 382 1/2" 382 3/4" 383" 383 1/4" 383 1/2" 383 3/4" 384" 384 1/4" 384 1/2" 384 3/4" 385" 385 1/4" 385 1/2" 385 3/4" 386" 386 1/4" 386 1/2" 386 3/4" 387" 387 1/4" 387 1/2" 387 3/4" 388" 388 1/4" 388 1/2" 388 3/4" 389" 389 1/4" 389 1/2" 389 3/4" 390" 390 1/4" 390 1/2" 390 3/4" 391" 391 1/4" 391 1/2" 391 3/4" 392" 392 1/4" 392 1/2" 392 3/4" 393" 393 1/4"				

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof as the confidential or trade secret information thereof, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information thereof, (4) not make any copy of the document, (5) not use the document, or again amend, rephrase the document, all copy thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, HX & CAC MOUNT
FIRE PUMP

DWG UNITS: IN/LBS	DRAWN BY: MAC PRO-ENGINEER
----------------------	--------------------------------------


SCALE: 0.375
EST WEIGHT: 133.852

AC

SHEET
1 OF 1


DATE: 09-30-200
REF. DRWG:

DRAWING NO	13246
------------	-------

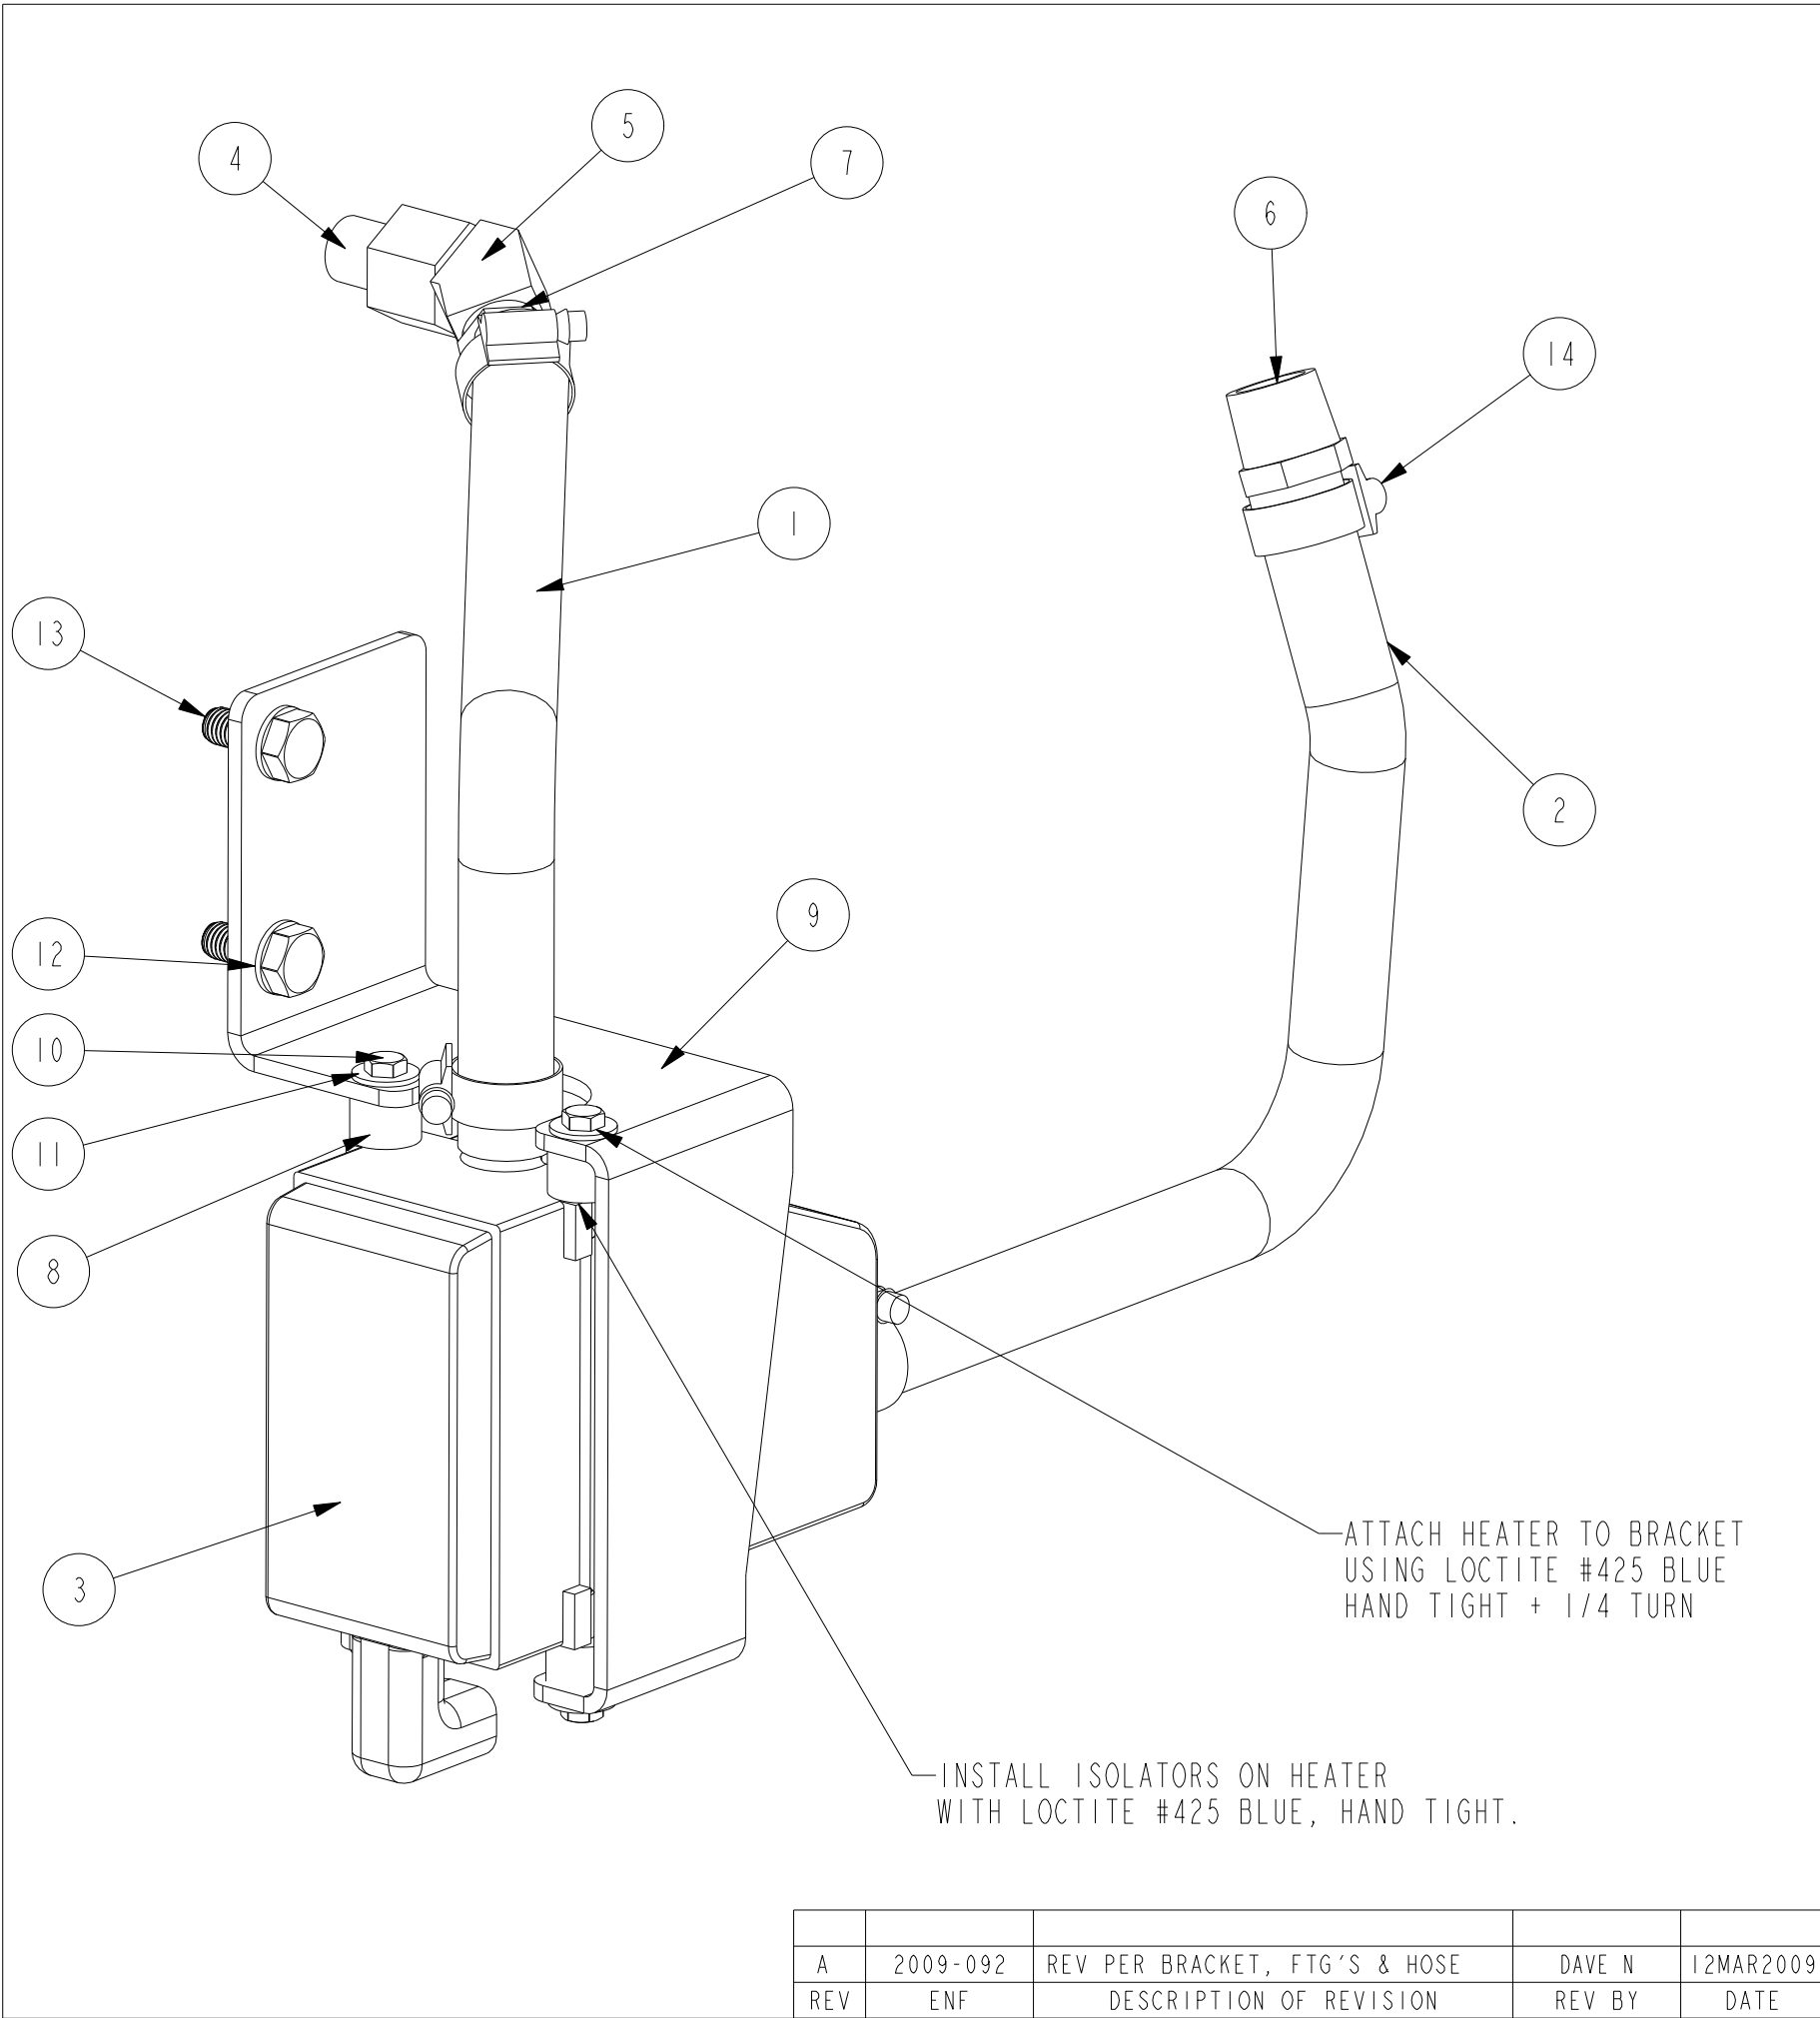

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, HEATER, DAYCO G.L., 80242GL, 3/4" I.D. x 10"	14194-003
2	1	HOSE, HEATER, DAYCO G.L., 80242GL, 3/4" I.D. x 14"	14194-004
3	1	CIRCULATION HEATER, P&T #3315032, 1500W , 120V , 176° F	9598
4	1	FTG, STR, M18-1.5 ORB X -8 FMNPT	12181-M18-8
5	1	ELB, 45 DEG, -8 NPT X -8 FMNPT	12532-8-8
6	1	FTG, STR, -.75 BEADx-.75 NPT	12545-12-12
7	1	FTG, STR, -.75 BEADx-.50 NPT	12545-12-8
8	4	ISOLATOR, STUD MOUNT, 1/4-20, TECH PRODUCTS #51201	13102
9	1	BRACKET, MTG, COOLANT HEATER, ISOLATED	14388
10	4	BOLT,HD M6-100X16, CLASS 10.9	67500
11	4	WASHER,FLAT, M6, CLASS 10.9, -	67551
12	2	WASHER, FLAT, M6, CLASS 10.9, -	67553
13	2	BOLT,HD, M10-1.50X25, CLASS 10.9	68801
14	4	CLAMP, ADJ, 1.00" NOM, .812 - 1.500	92216


This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC




CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, COOLANT
HEATER, CFP5E

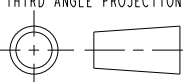UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE		
ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
	MACHINE TOLERANCES	MACHINE TOLERANCES
	.XX ± 0.010	.X ± 0.4
	.XXX ± 0.005	.XX ± 0.2
	FORM TOLERANCES	FORM TOLERANCES
	.XX ± 0.030	.X ± 0.8
	.XXX ± 0.015	.XX ± 0.4
	FAB TOLERANCES	FAB TOLERANCES
	.XX ± 0.060	.X ± 1.5
	.XXX ± 0.030	.XX ± 0.8

DWG UNITS: IN/LB/S		DRAWN BY: MAC PRO-ENGINEER		DATE: 12/08/2008	
SCALE: 0.500		SHEET 1 OF 1		DRAWING NO: 13851	
EST WEIGHT: 69.938					

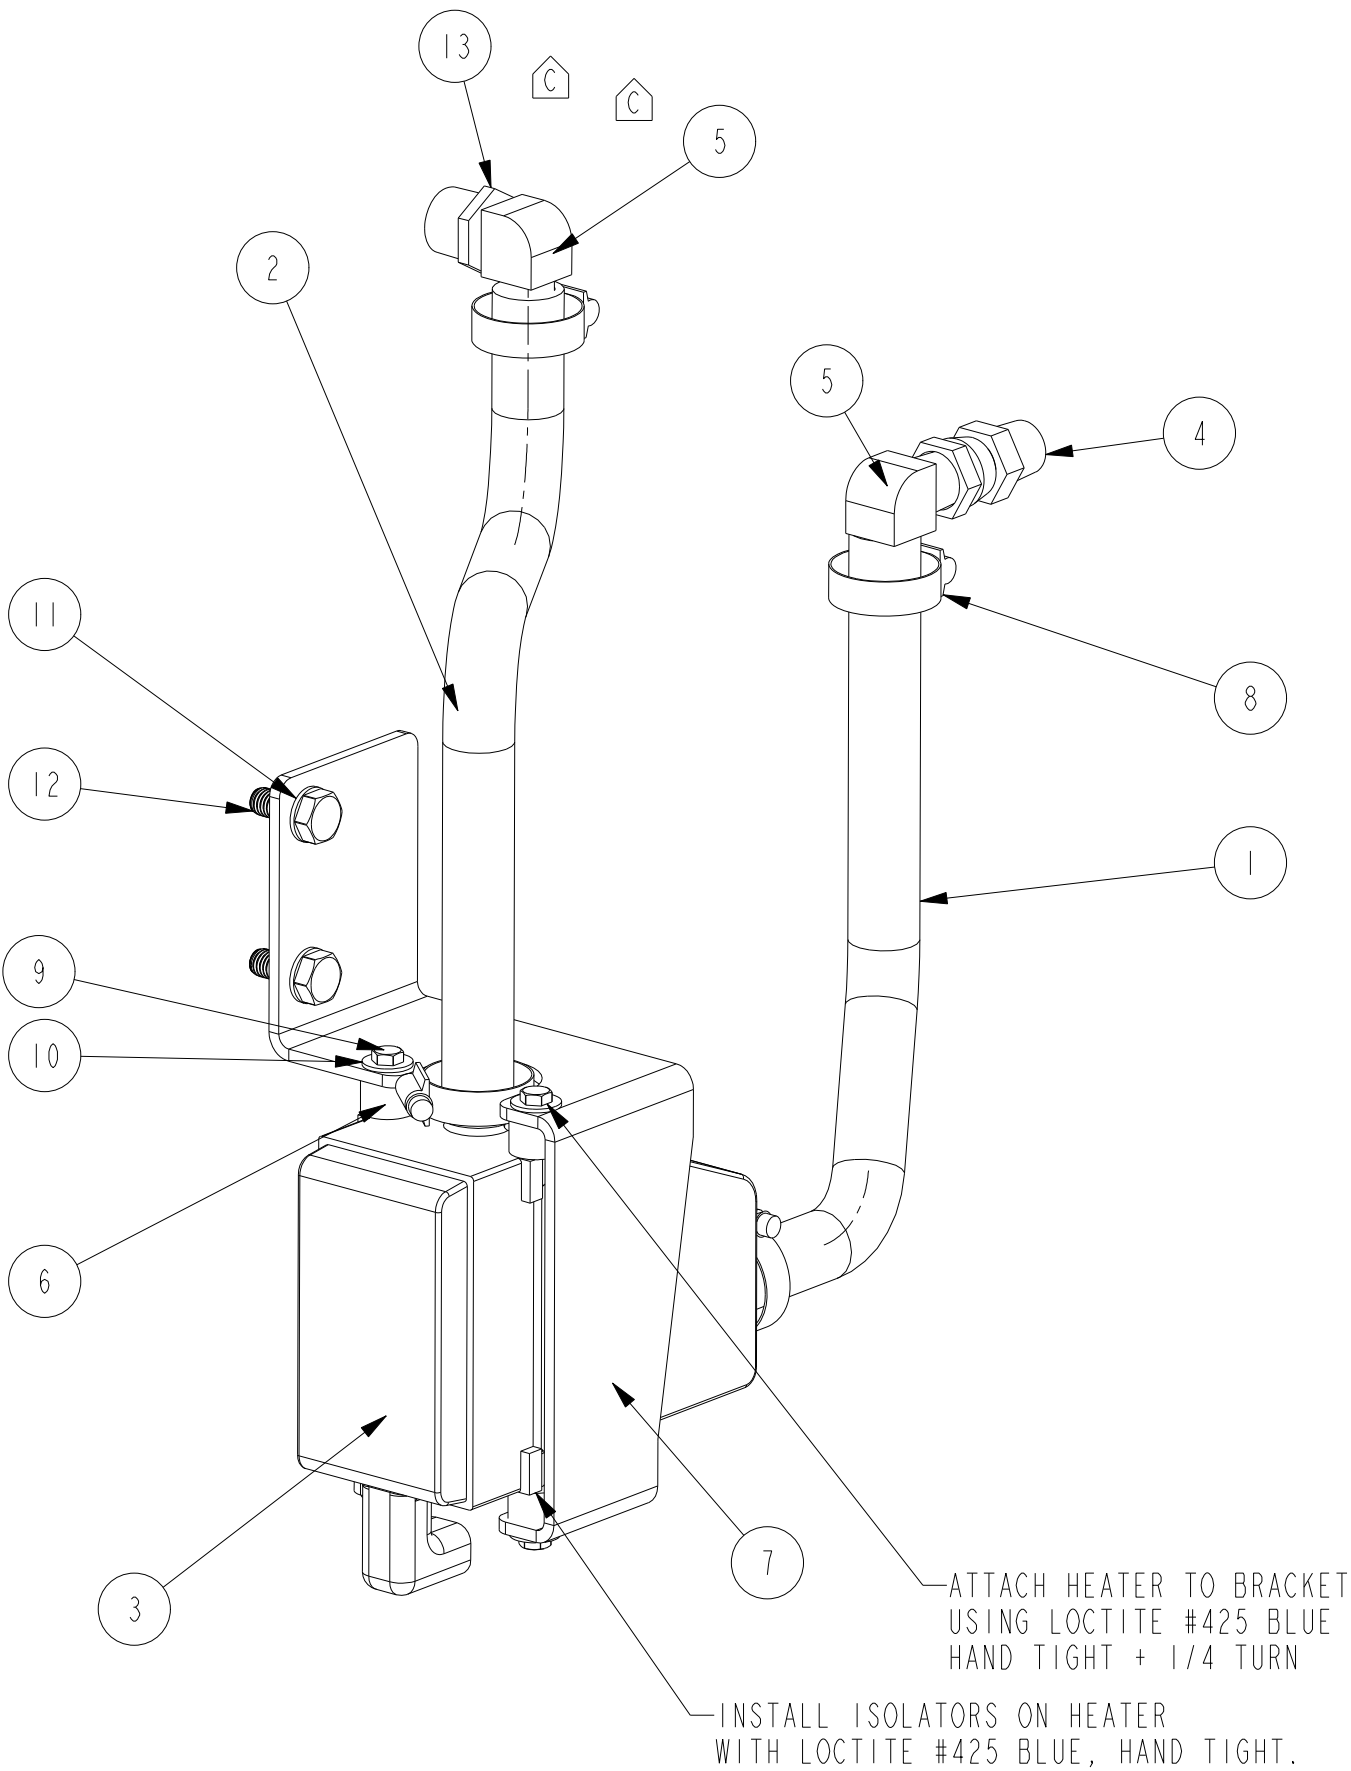

B A
C A

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, HEATER, DAYCO G.L., 80242GL, 3/4" I.D. x 12"	14194-001
2	1	HOSE, COOLANT HEATING, INLET, 3/4" I.D. x 13"	14194-002
3	1	CIRCULATION HEATER, P&T #3315032, 1500W , 120V , 176° F	9598
4	1	FTG, STR, -8 NPT X -8 FNPT SW	12149-8-8
5	2	ELB, 90 DEG, -12 BEAD X -8 NPT	12547-12-8
6	4	ISOLATOR, STUD MOUNT, 1/4-20, TECH PRODUCTS #51201	13102
7	1	BRACKET, MTG, COOLANT HEATER, ISOLATED	14388
8	4	CLAMP, WORM, 1.00 - 1.50	14990-16
9	4	BOLT,HD M6-100X16, CLASS 10.9	67500
10	4	WASHER,FLAT, M6, CLASS 10.9, -	67551
11	2	WASHER, FLAT, M6, CLASS 10.9, -	67553
12	2	BOLT,HD, M10-1.50X25, CLASS 10.9	68801
13	1	BUSHING, 1/2" x 3/4" NPT	LTL-SRB3412

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES .XX ± 0.010 .XX ± 0.005 FORM TOLERANCES .XX ± 0.010 .XX ± 0.015 FAB TOLERANCES .XX ± 0.010 .XX ± 0.030	MACHINE TOLERANCES .XX ± 0.4 .XX ± 0.2 FORM TOLERANCES .XX ± 0.8 .XX ± 0.4 FAB TOLERANCES .XX ± 0.8 .XX ± 0.8



ASSEMBLY, COOLANT HEATER, CFP_7E		
DWG UNITS: IN/LB/S	DRAWN BY: MAC PRO-ENGINEER	DATE: 12/08/2008 REF DRWG:
SCALE: 0.375 EST WEIGHT: 70.679	SHEET 1 OF 1	DRAWING NO: 14187

C	2009-249	REPLACED ELBO. ADDED ADAPTER.	DAN	11-JUN-09
B	2009-237	FTG WAS 12149-012	MJD	21-MAY-09
A	2009-092	REV PER BRACKET, FTG'S & HOSE	DAVE N	05MAR2009
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE






SCALE 0.120

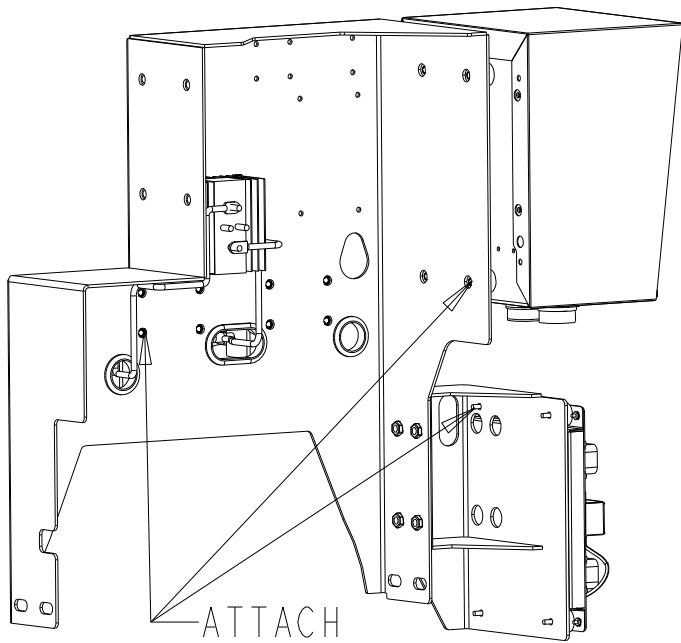

ATTACH CONTACTOR AND PANEL ASSYS WITH LOCTITE #425 BLUE ON FASTNERS, HAND TIGHT +1/4 TURN

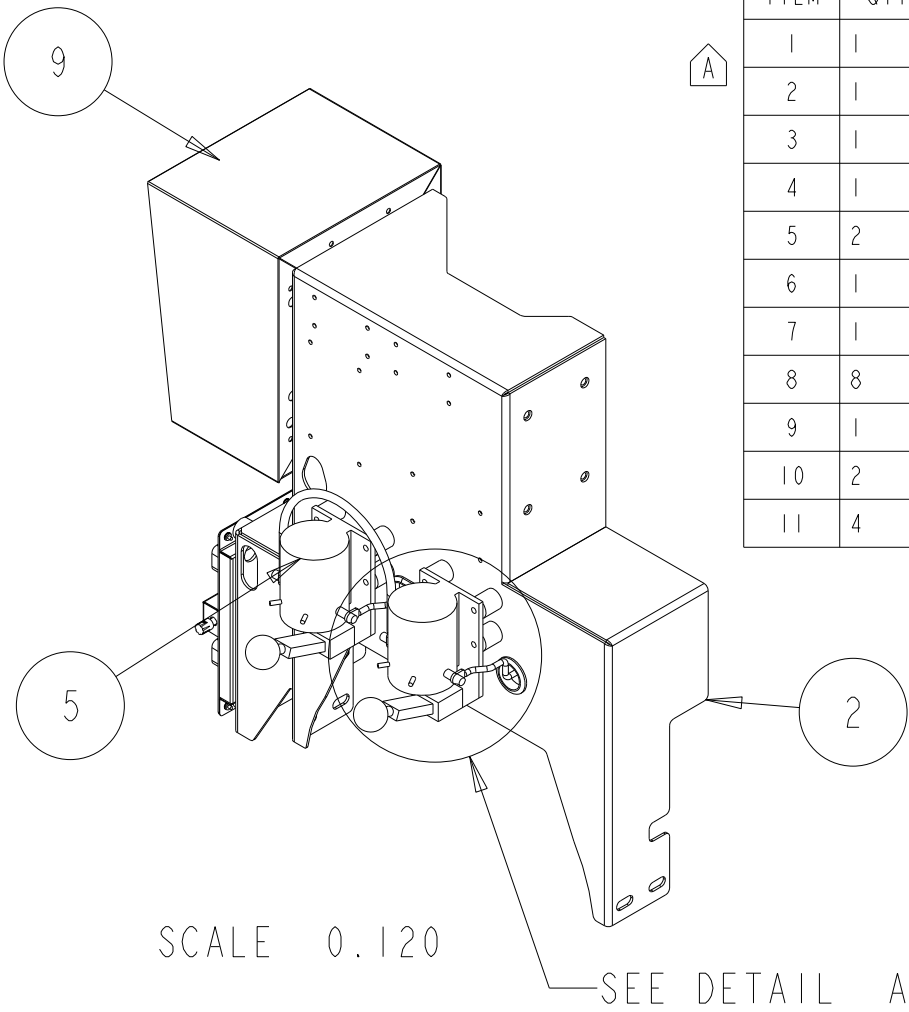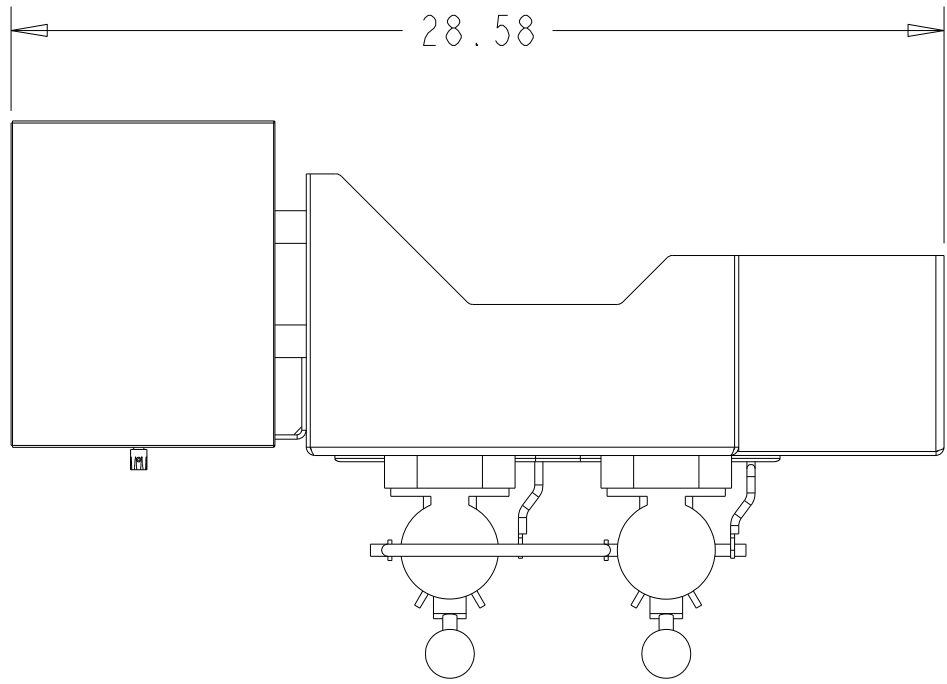

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	KIT, BATTERY CONTACTOR WIRING	9767
2	1	ASSEMBLY, OPERATOR PANEL, WELDMT, FIRE PUMP	13251
3	1	BRACKET, ECM A-B SWITCH	15110
4	1	GROMMETT	508-1057
5	2	CONTACTOR, MANUAL OVERRIDE, FIREPUMP	8824
6	1	BATTERY ISOLATOR, FIRE PUMP	8838
7	1	ASSEMBLY, ECM SWITCH, A-B	10748
8	8	ISOLATOR, PLATE MOUNT, 5/16-18x1x1 NEOPRENE, TECH PRODUCTS #51272	13011
9	1	ASSEMBLY, CONTROL PANEL, FIRE PUMP	13236
10	2	GROMMETT, 1.50 DIA HOLE	19447
11	4	ISOLATOR, #10 TAP & STUD, #AG-3904930	51156PS

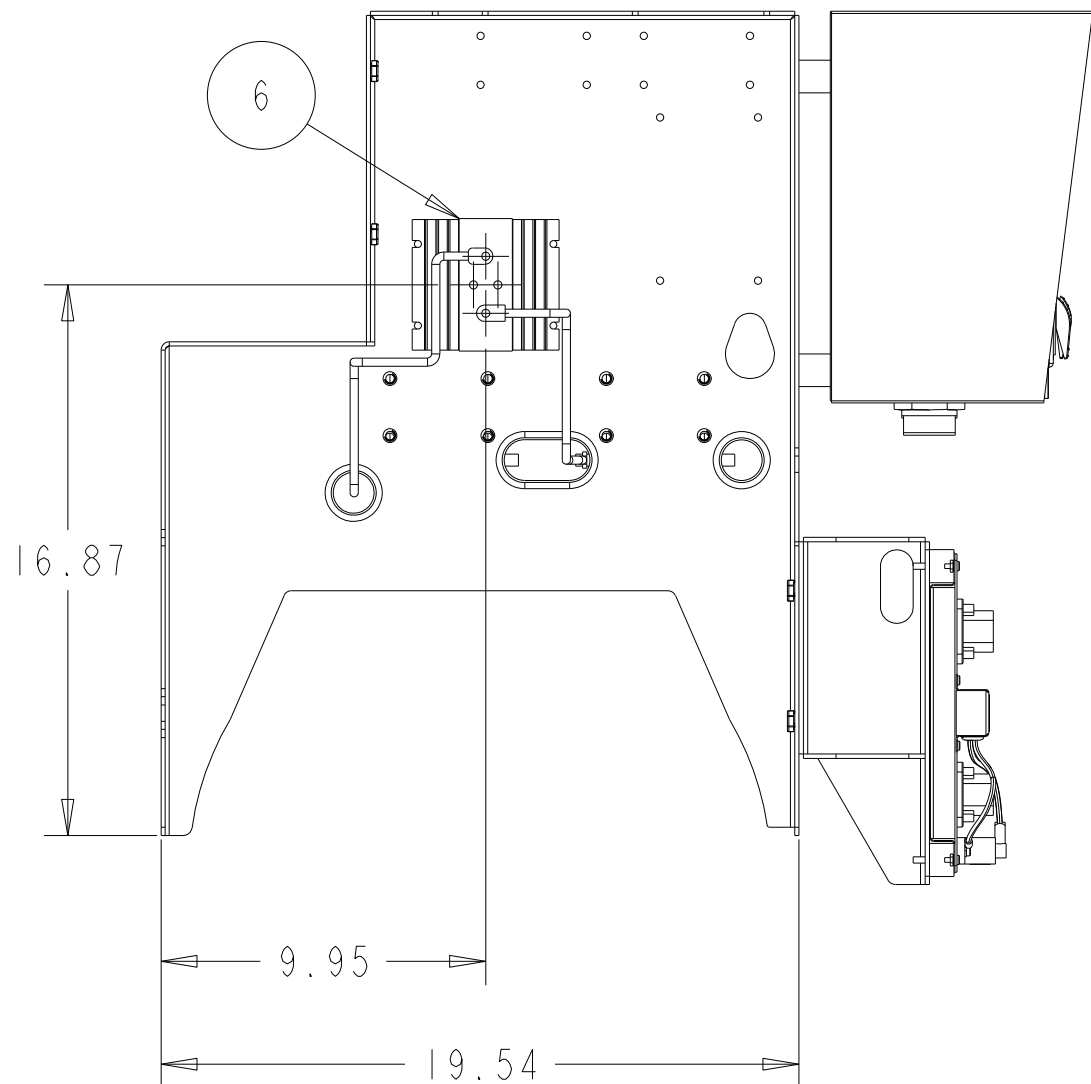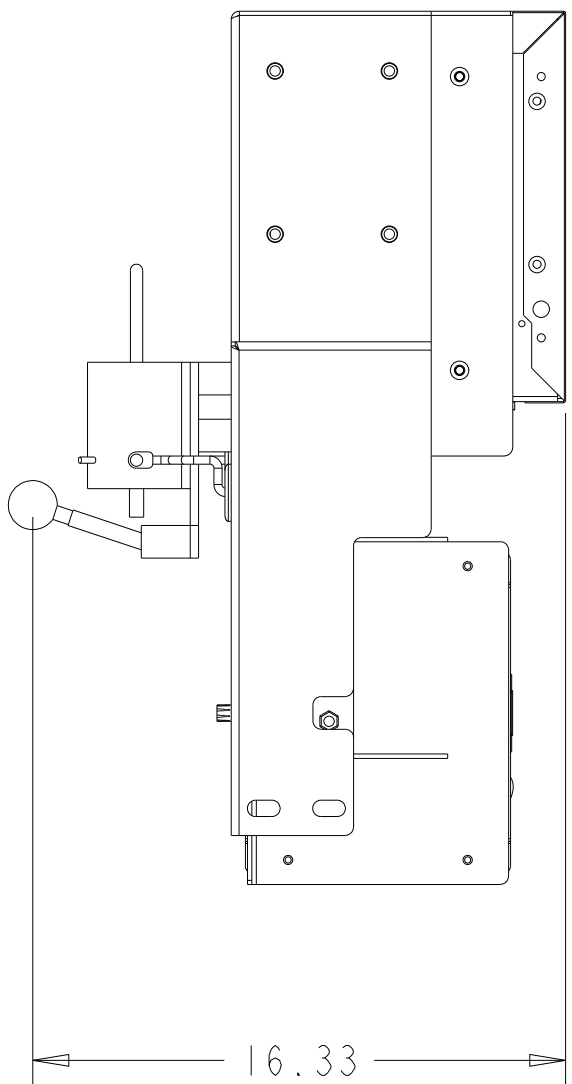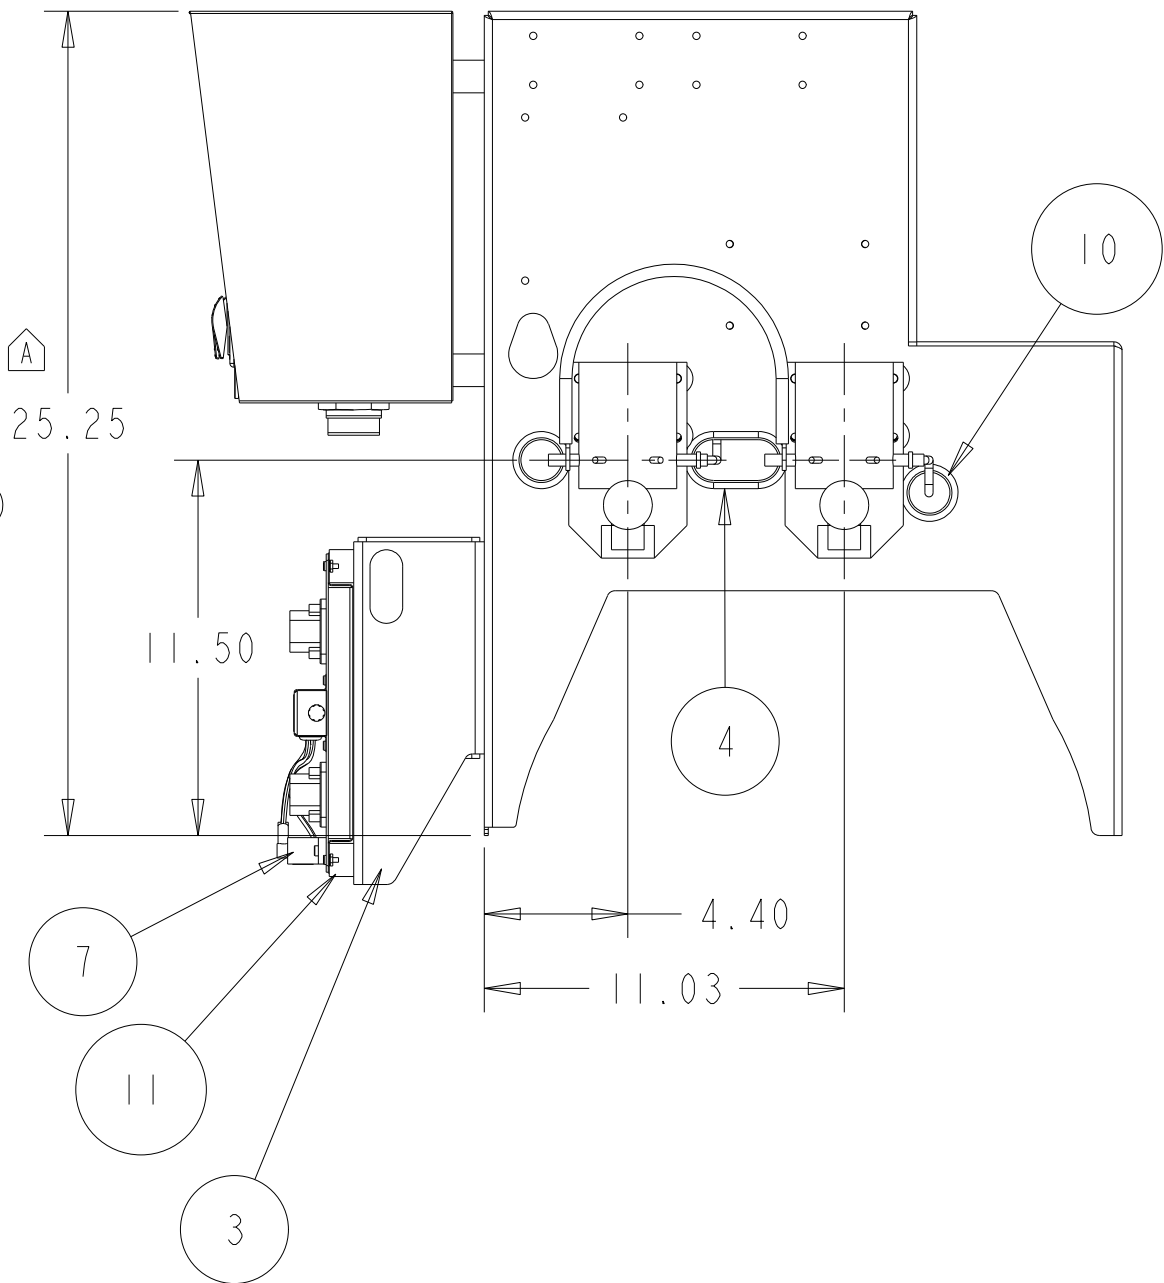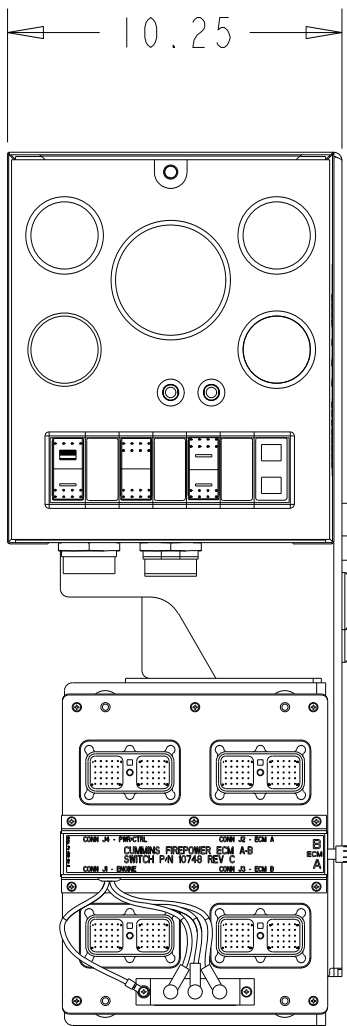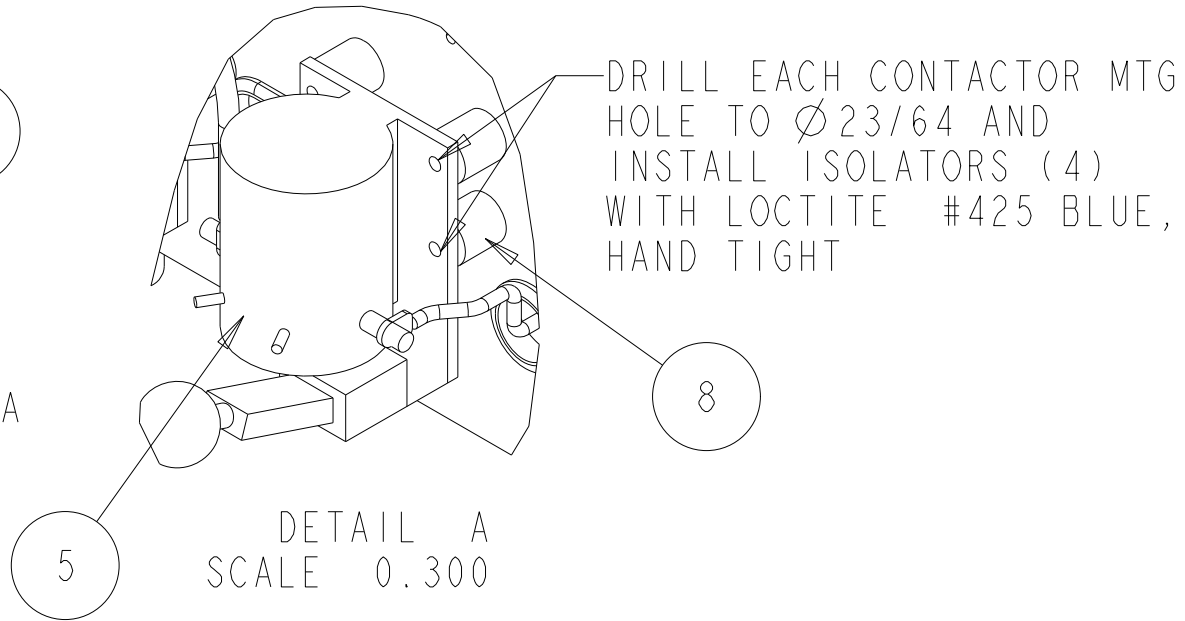

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and referring to the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUEKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPGIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, OPERATOR STATION

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1° IMPERIAL UNITS METRIC UNITS

THIRD ANGLE PROJECTION

MACHINE TOLERANCES
FAB TOLERANCES

DWG UNITS:
IN/LB/S

DRAWN BY: MAC
PRO-ENGINEER

DATE: 09-30-2008

SCALE: 0.170

EST WEIGHT: 54.239


SHEET

1 OF 1

REF DRWG:

13250

A	2009-249	25.25 WAS 34.75. ADDED BRACKET	DAN	10-JUN-09
A	2009-249	ADDED DRILL NOTE. ADDED WIRE KIT.	DAN	10-JUN-09
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

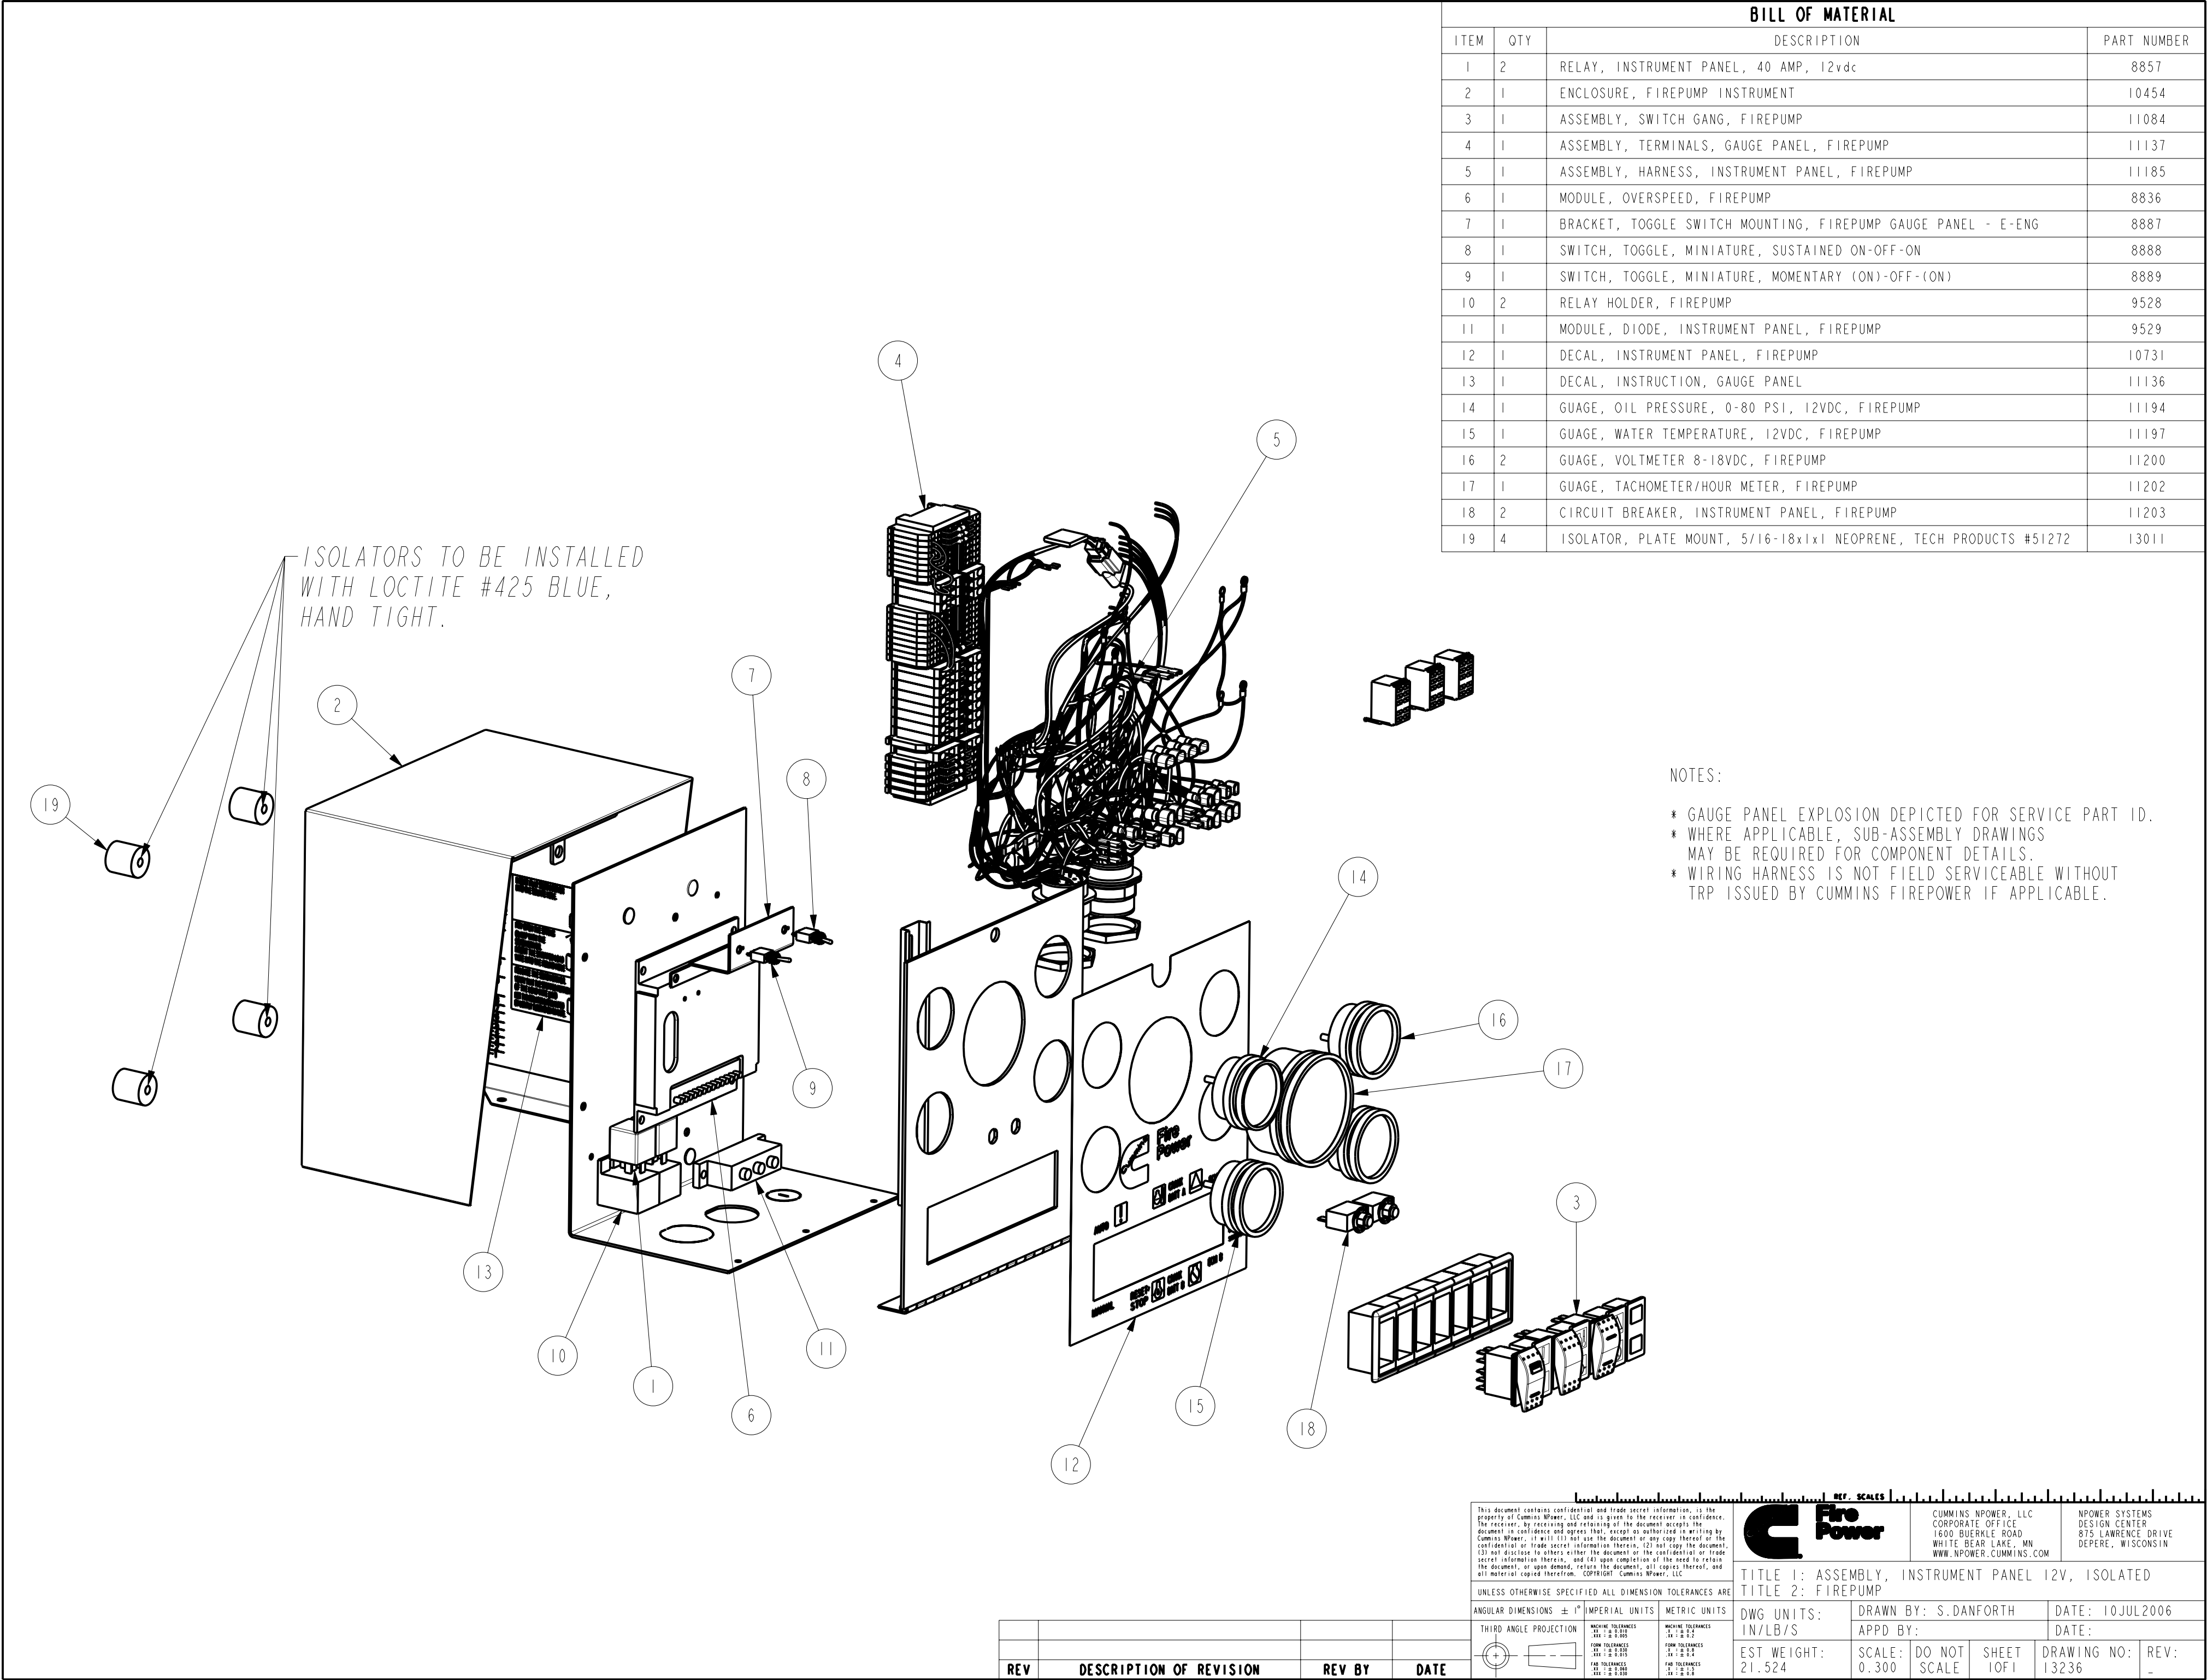

ISOLATORS TO BE INSTALLED
WITH LOCTITE #425 BLUE,
HAND TIGHT.

BILL OF MATERIAL

ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	RELAY, INSTRUMENT PANEL, 40 AMP, 12vdc	8857
2	1	ENCLOSURE, FIREPUMP INSTRUMENT	10454
3	1	ASSEMBLY, SWITCH GANG, FIREPUMP	11084
4	1	ASSEMBLY, TERMINALS, GAUGE PANEL, FIREPUMP	11137
5	1	ASSEMBLY, HARNESS, INSTRUMENT PANEL, FIREPUMP	11185
6	1	MODULE, OVERSPEED, FIREPUMP	8836
7	1	BRACKET, TOGGLE SWITCH MOUNTING, FIREPUMP GAUGE PANEL - E-ENG	8887
8	1	SWITCH, TOGGLE, MINIATURE, SUSTAINED ON-OFF-ON	8888
9	1	SWITCH, TOGGLE, MINIATURE, MOMENTARY (ON)-OFF-(ON)	8889
10	2	RELAY HOLDER, FIREPUMP	9528
11	1	MODULE, DIODE, INSTRUMENT PANEL, FIREPUMP	9529
12	1	DECAL, INSTRUMENT PANEL, FIREPUMP	10731
13	1	DECAL, INSTRUCTION, GAUGE PANEL	11136
14	1	GUAGE, OIL PRESSURE, 0-80 PSI, 12VDC, FIREPUMP	11194
15	1	GUAGE, WATER TEMPERATURE, 12VDC, FIREPUMP	11197
16	2	GUAGE, VOLTMETER 8-18VDC, FIREPUMP	11200
17	1	GUAGE, TACHOMETER/HOUR METER, FIREPUMP	11202
18	2	CIRCUIT BREAKER, INSTRUMENT PANEL, FIREPUMP	11203
19	4	ISOLATOR, PLATE MOUNT, 5/16-18x1x1 NEOPRENE, TECH PRODUCTS #51272	13011


NOTES:

- * GAUGE PANEL EXPLOSION DEPICTED FOR SERVICE PART ID.
- * WHERE APPLICABLE, SUB-ASSEMBLY DRAWINGS MAY BE REQUIRED FOR COMPONENT DETAILS.
- * WIRING HARNESS IS NOT FIELD SERVICEABLE WITHOUT TRP ISSUED BY CUMMINS FIREPOWER IF APPLICABLE.

This document contains confidential and trade secret information, is the property of Cummins NPower, LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins NPower, LLC

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS	± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION			
MACHINE TOLERANCES	XX : ± 0.005		
FORM TOLERANCES	XX : ± 0.005		
FAB TOLERANCES	XX : ± 0.005		




CUMMINS NPOWER, LLC
CORPORATE OFFICE
1600 BUEKLE ROAD
WHITE BEAR LAKE, MN
WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

TITLE 1: ASSEMBLY, INSTRUMENT PANEL 12V, ISOLATED
TITLE 2: FIREPUMP

DWG UNITS: IN/LB/S	DRAWN BY: S.DANFORTH	DATE: 10JUL2006
EST WEIGHT: 21.524	APPD BY:	DATE:
SCALE: 0.300	DO NOT SCALE	SHEET 10F1
		DRAWING NO: 13236
		REV: -

REV	DESCRIPTION OF REVISION	REV BY	DATE

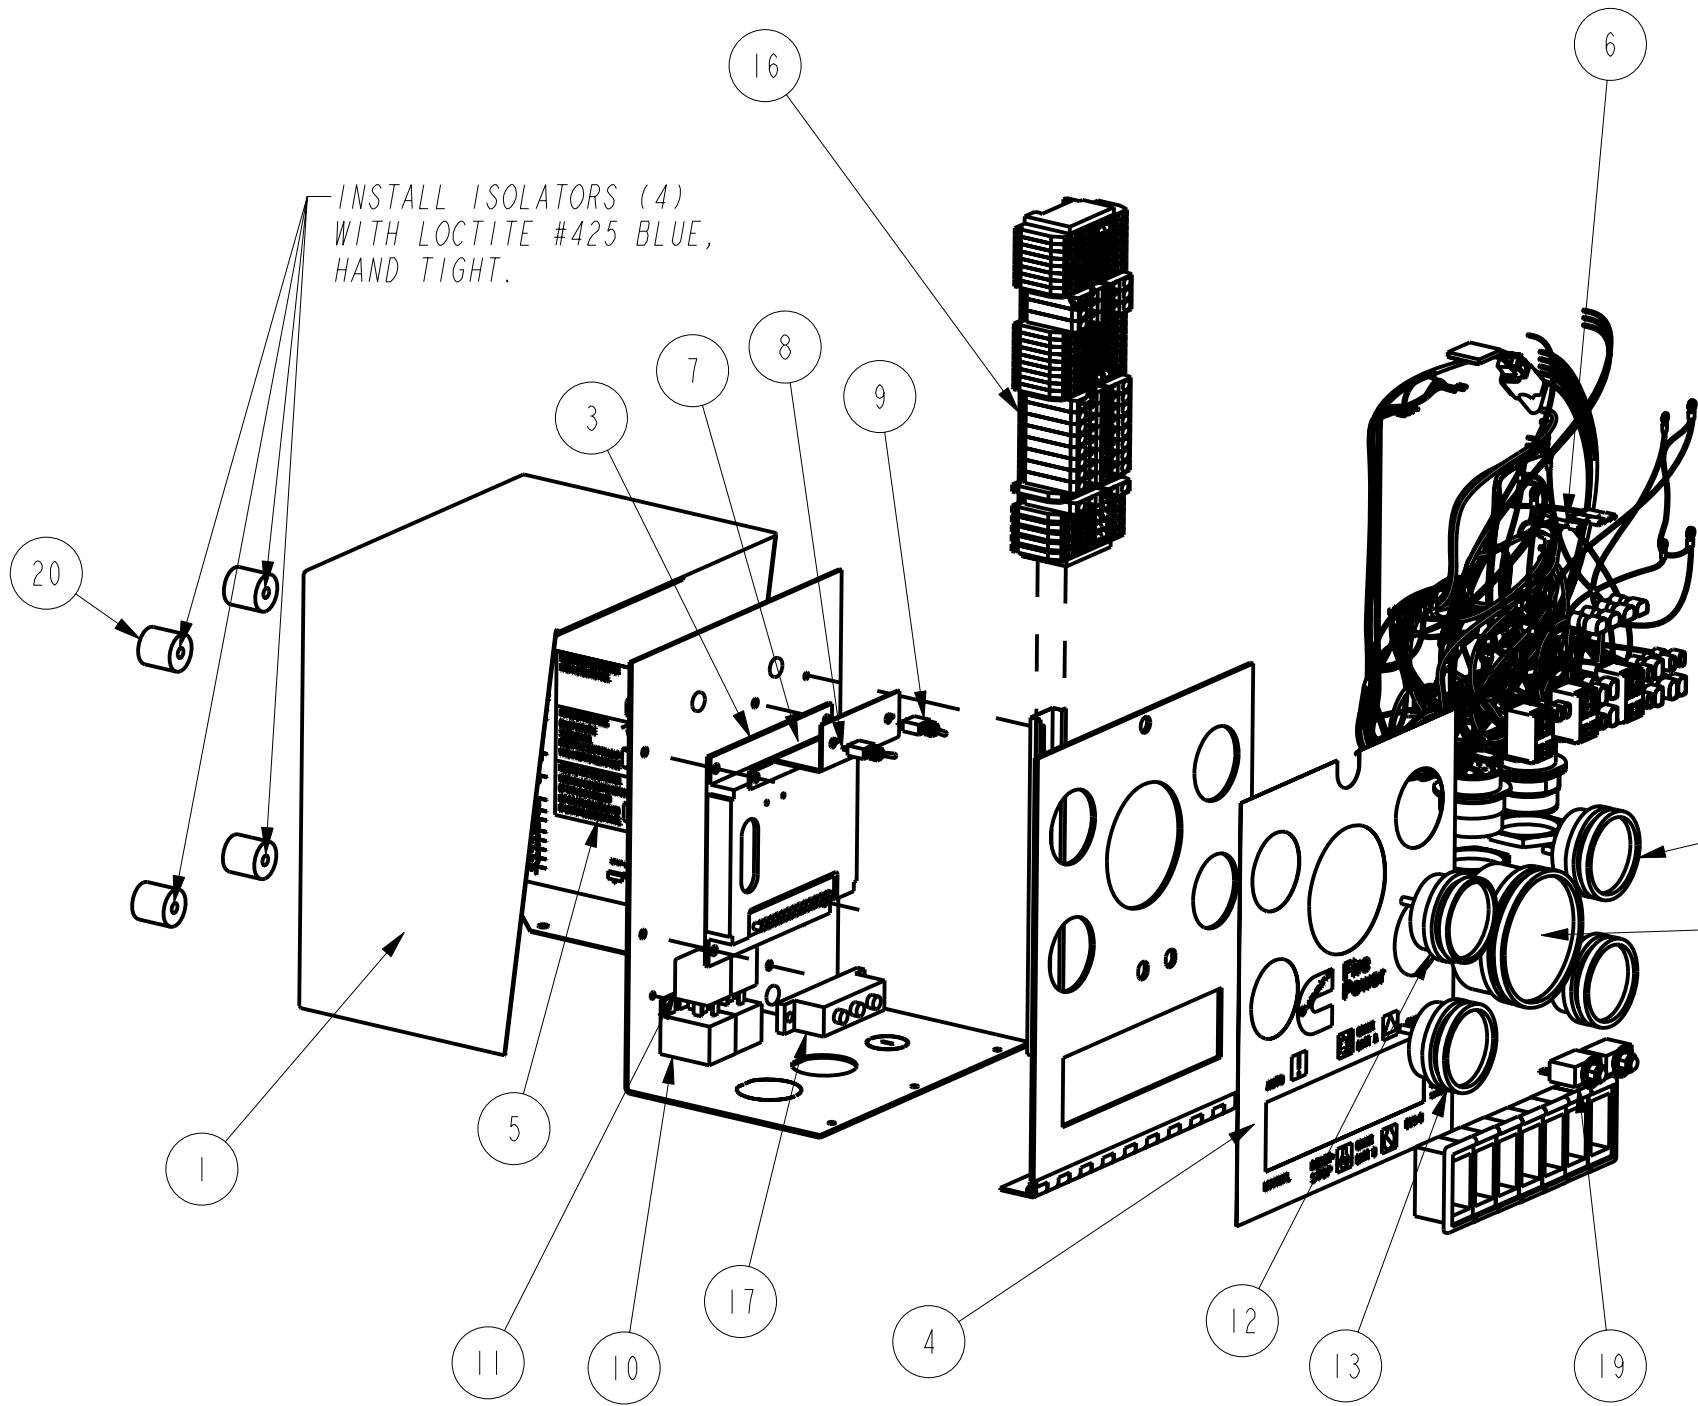

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ENCLOSURE, FIREPUMP INSTRUMENT	10454
2	1	ASSEMBLY, SWITCH GANG 24VDC, FIREPUMP	11085
3	1	MODULE, OVERSPEED, FIREPUMP	8836
4	1	DECAL, INSTRUMENT PANEL, FIREPUMP	10731
5	1	DECAL, INSTRUCTION, GAUGE PANEL	11136
6	1	ASSEMBLY, HARNESS, INSTRUMENT PANEL, FIREPUMP	11185
7	1	BRACKET, TOGGLE SWITCH MOUNTING, FIREPUMP GAUGE PANEL - E-ENG	8887
8	1	SWITCH, TOGGLE, MINIATURE, MOMENTARY (ON)-OFF-(ON)	8889
9	1	SWITCH, TOGGLE, MINIATURE, SUSTAINED ON-OFF-ON	8888
10	2	RELAY HOLDER, FIREPUMP	9528
11	2	RELAY, INSTRUMENT PANEL, 40 AMP, 12vdc	8857
12	1	GUAGE, OIL PRESSURE, 0-80 PSI, 24VDC, FIREPUMP	11195
13	1	GUAGE, WATER TEMPERATURE, 24VDC, FIREPUMP	11198
14	2	GUAGE, VOLTMETER 16-32VDC, FIREPUMP	11201
15	1	GUAGE, TACHOMETER/HOUR METER, FIREPUMP	11202
16	1	ASSEMBLY, TERMINALS, GAUGE PANEL, FIREPUMP	11137
17	1	MODULE, DIODE, INSTRUMENT PANEL, FIREPUMP	9529
19	2	CIRCUIT BREAKER, INSTRUMENT PANEL, FIREPUMP	11203
20	4	ISOLATOR, PLATE MOUNT, 5/16-18x1x1 NEOPRENE, TECH PRODUCTS #51272	13011

NOTES:
GAUGE PANEL EXPLOSION DEPICTED FOR SERVICE PART IDENTIFICATION. WHERE APPLICABLE, SUB-ASSEMBLY DRAWINGS MAY BE REQUIRED FOR COMPONENT DETAIL(S). WIRING HARNESS IS NOT FIELD SERVICEABLE WITHOUT TRP ISSUED BY CUMMINS FIREPOWER IF APPLICABLE.

This document contains confidential and trade secret information, is the property of Cummins NPower, LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins NPower, LLC

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES XX ± 0.010 XXX ± 0.005	MACHINE TOLERANCES X ± 0.4 XX ± 0.2
	FORM TOLERANCES XX ± 0.030 XXX ± 0.015	FORM TOLERANCES X ± 0.8 XX ± 0.4
	FAB TOLERANCES XX ± 0.060 XXX ± 0.030	FAB TOLERANCES X ± 1.5 XX ± 0.8


CUMMINS NPOWER, LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN


TITLE 1: ASSEMBLY, INSTRUMENT PANEL 24V, ISOLATED
TITLE 2: FIREPUMP

DWG UNITS: IN/LB/S	DRAWN BY: S DUBICK	DATE: 08/06/08
EST WEIGHT: 20.096	SCALE: 0.200	DO NOT SCALE
SHEET 10FI	DRAWING NO: 13237	REV: -


REV	DESCRIPTION OF REVISION	REV BY	DATE

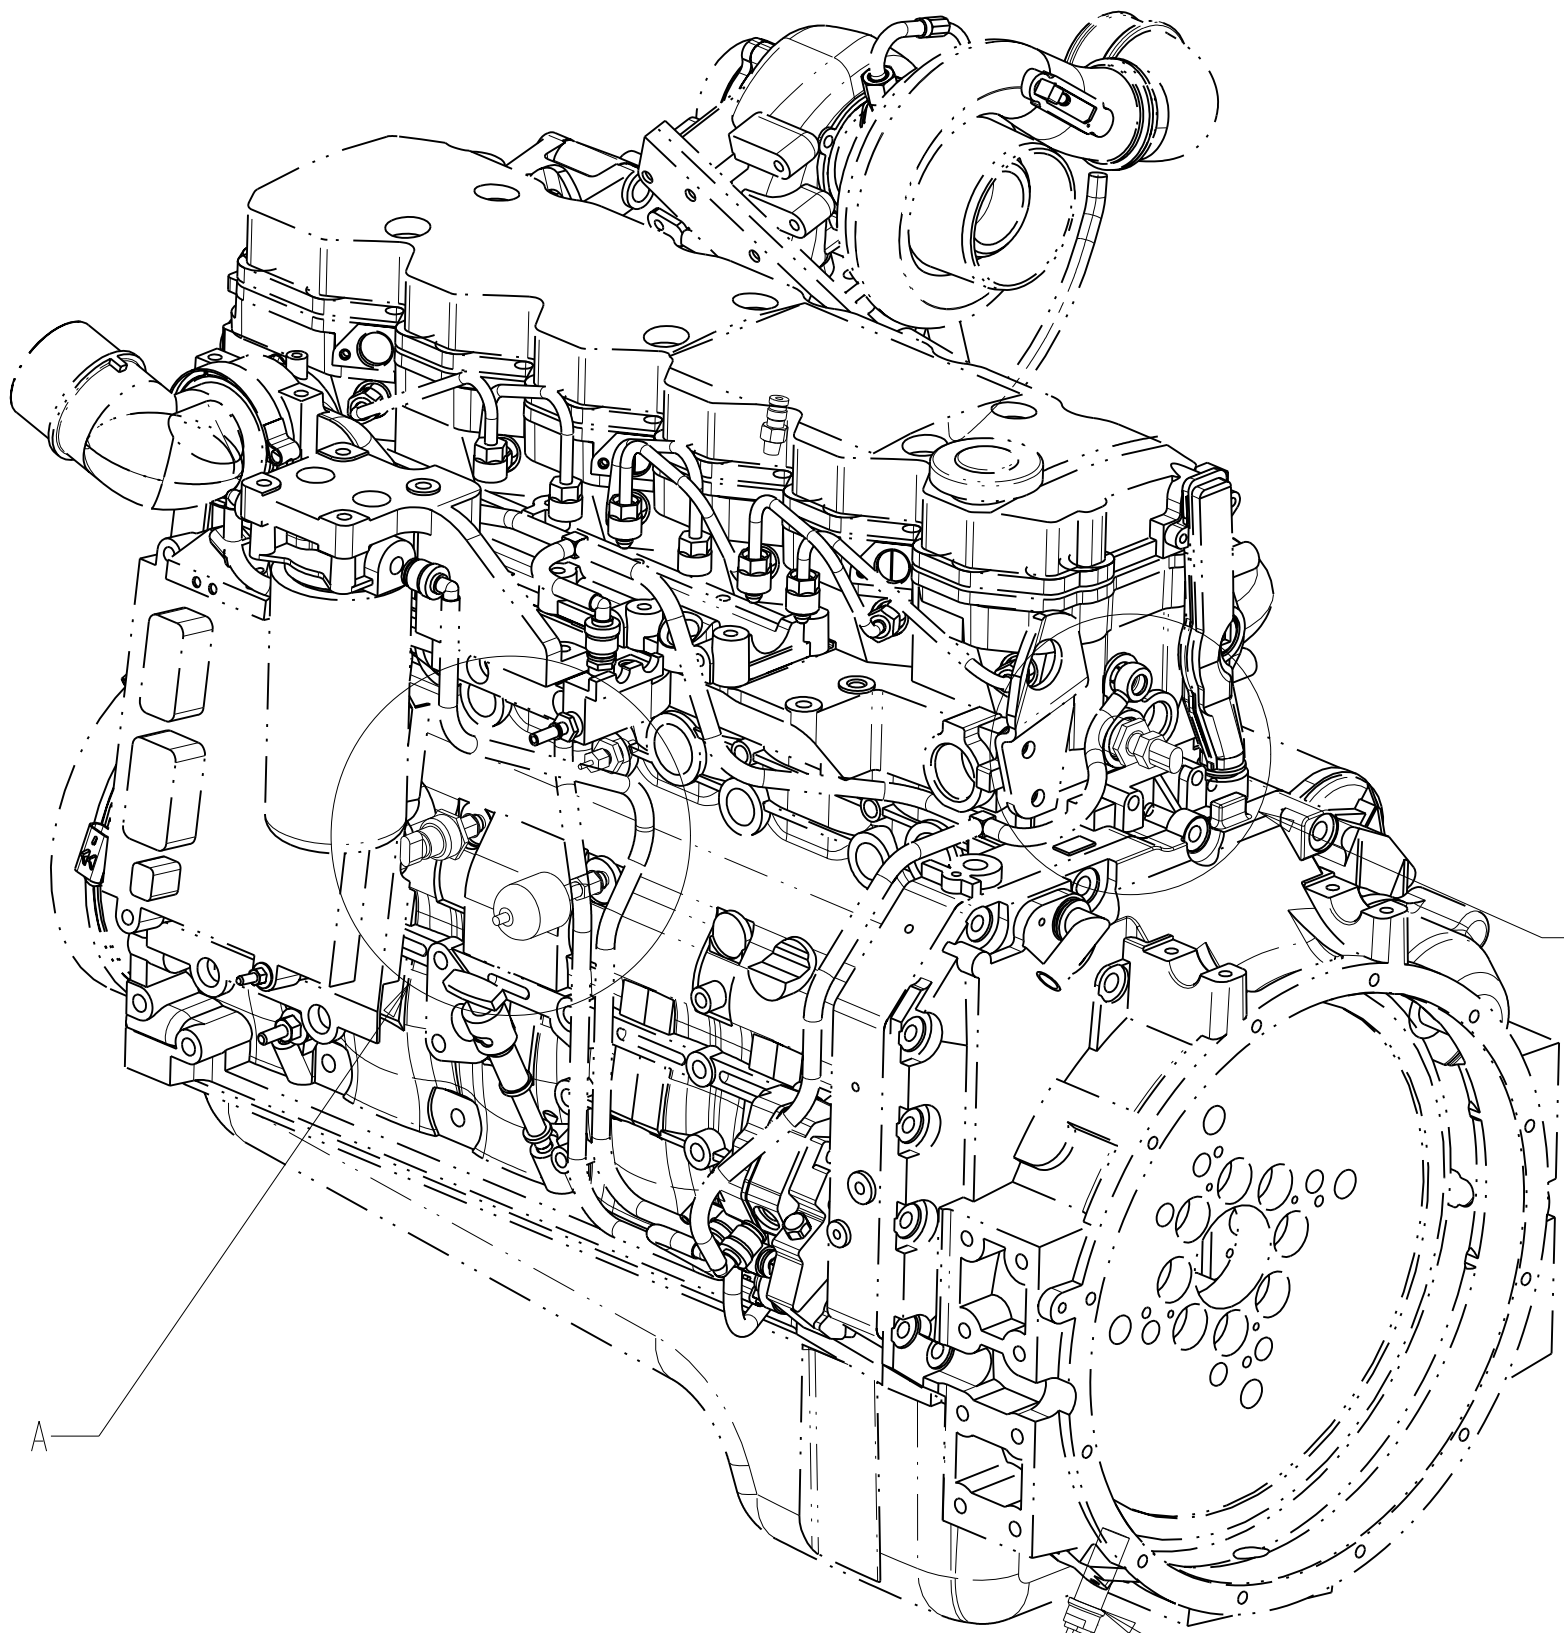

SEE DETAIL A

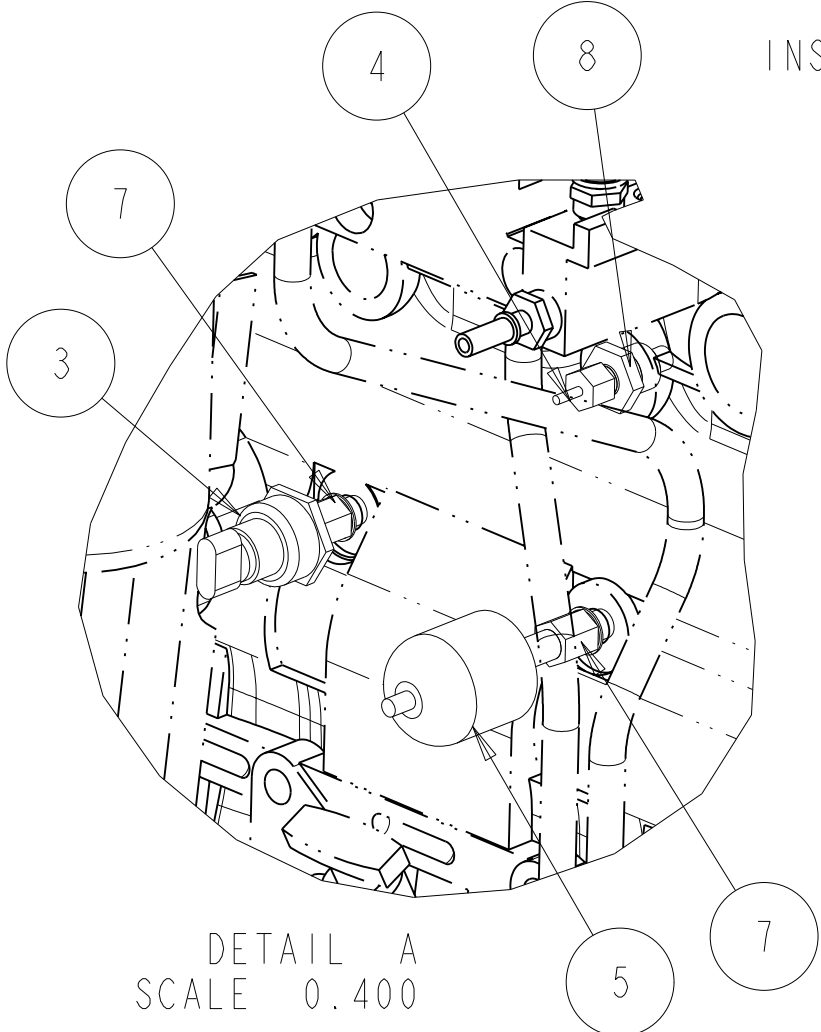


DETAIL A
SCALE 0.400

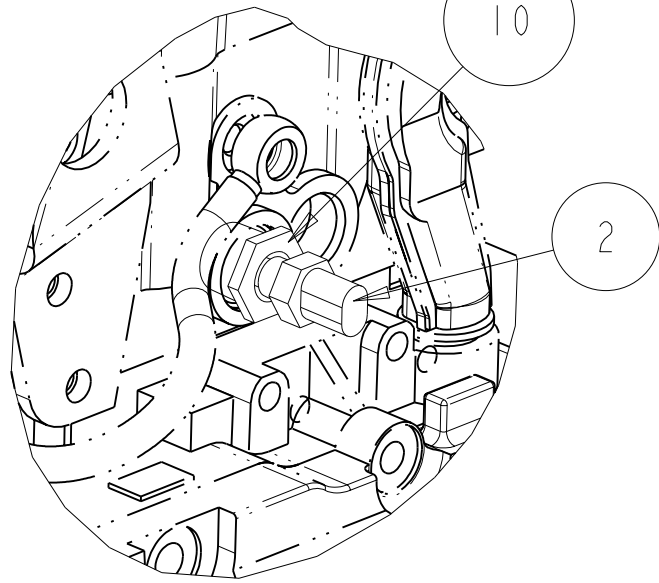

DETAIL B
SCALE 0.400

SEE DETAIL B

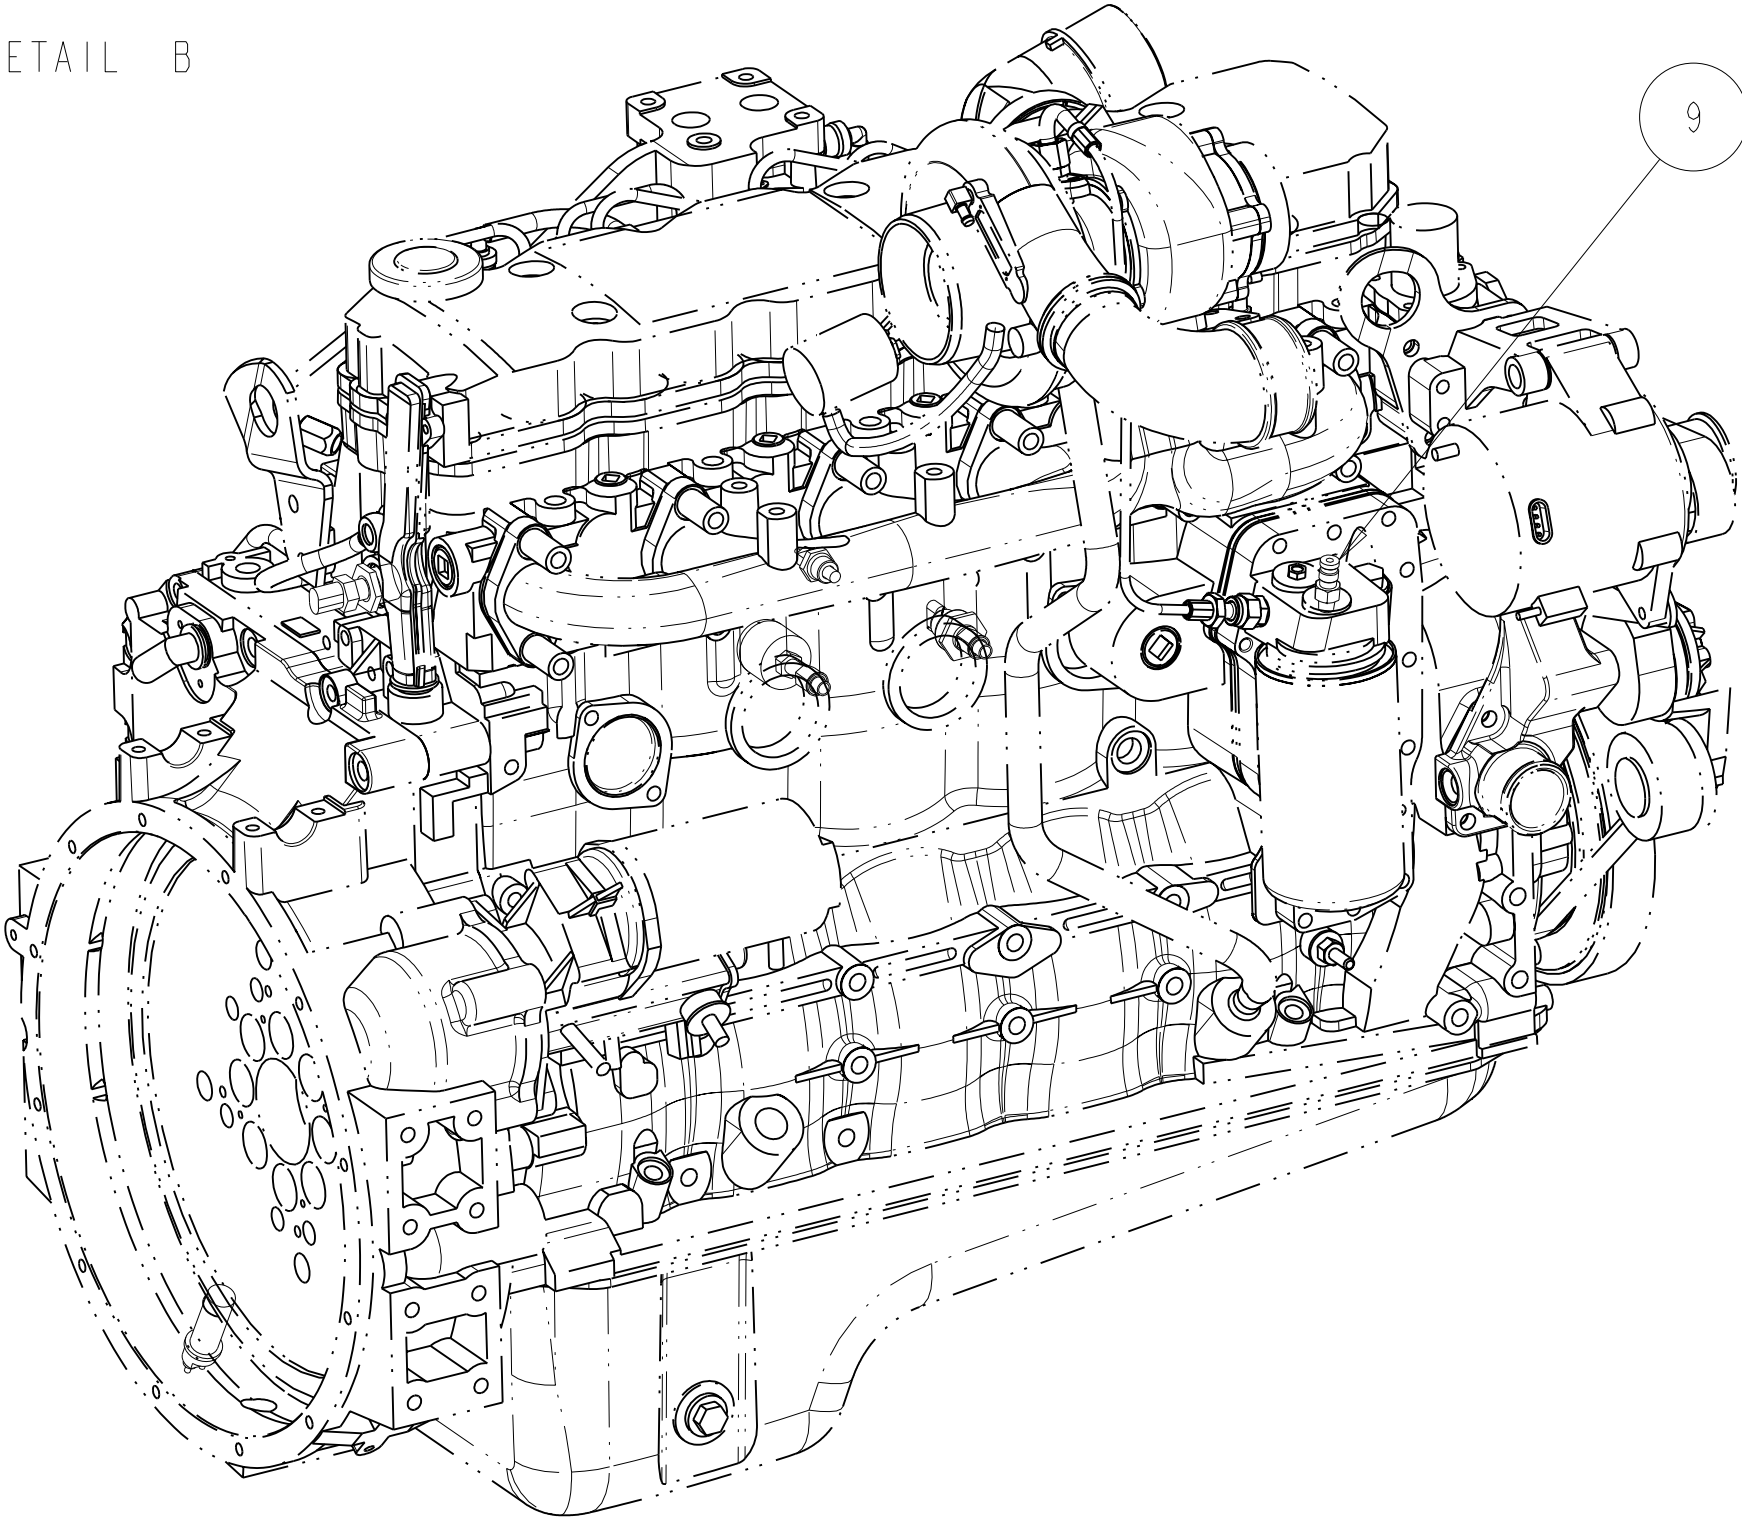

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY, ENGINE, QSB6.7	13208
2	1	SWITCH, WATER TEMP, 200F SETTING, #3408632	8860
3	1	SWITCH, OIL PRESSURE, 16 PSI, #3408607	8861
4	1	SENDER, WATER TEMPERATURE, DATCON #02022-00	8862
5	1	SENDER, OIL PRESURE, DATCON #02504-00	8863
6	1	SENSOR, MAG PICK UP, #5MT2005	9569
7	2	FTG, STR, M10 ORR X -2 FNPT	12181-M10-2
8	1	ADAPTER, SENSOR, M16 O-RING, TAPPED 1/8 NPT	14356
9	1	CONNECTOR, QUICK DISCONNECT	3377244
10	1	BUSHING, 1/2" x 3/4" NPT	LTL-SRB3412

INSTALL IN FLYWHEEL HOUSING
SET AT 1/2 TURN OUT FROM
CONTACT WITH FLYWHEEL

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. ©COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUEKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPGIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE
ANGULAR DIMENSIONS ± 1° IMPERIAL UNITS METRIC UNITS

THIRD ANGLE PROJECTION	MACHINE TOLERANCES FRACTIONAL DECIMALS FAB TOLERANCES	MACHINE TOLERANCES FRACTIONAL DECIMALS FAB TOLERANCES
	±.0005 ±.0010 ±.0015 ±.0020	±.0005 ±.0010 ±.0015 ±.0020

KIT, SENSORS & ADAPTERS
CFP7E

DWG UNITS:
IN/LB/S

SCALE: 0.200
EST WEIGHT: 1.128

DRAWN BY: DAVE N
PRO-ENGINEER



SHEET
1 OF 1

DATE: 09MAR2009

REF DRWG:

9574-02

A	2009-249	RELOCATED SENSORS. REV PER ADAPTERS	DAN	10-JUN-09
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

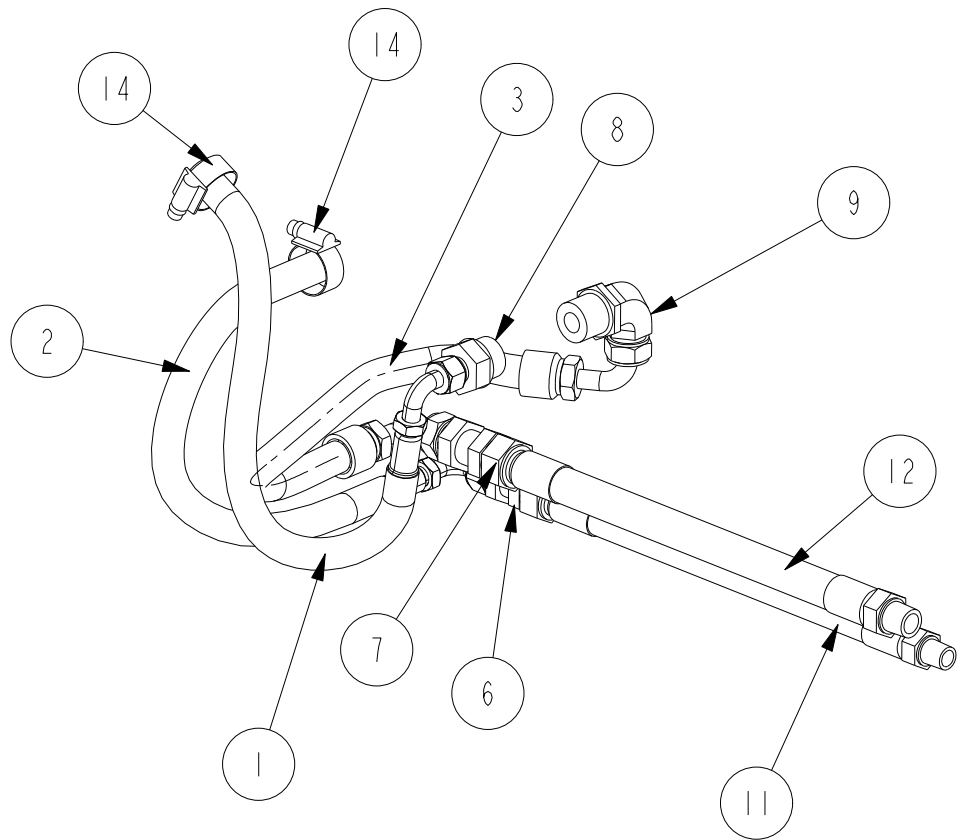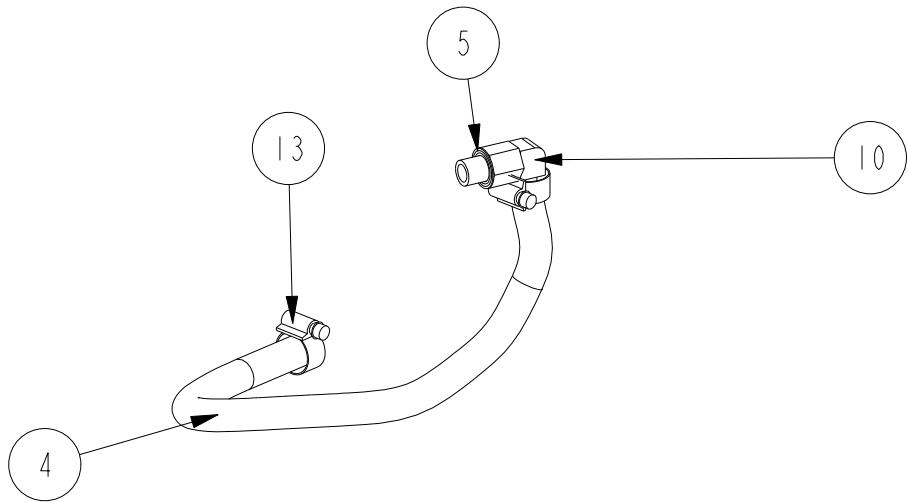

B

B

B

B

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY, HOSE, FUEL LINE, INLET PLUMBING CFP_5E	13770
2	1	ASSEMBLY, HOSE, FUEL LINE, OUTLET PLUMBING CFP_5E	13771
3	1	ASSEMBLY, HOSE, FUEL LINE, PRE-FILTER PLUMBING, CFP5E	14374
4	1	HOSE, FUEL LINE, 22IFR-5 X 20" LG, NO ENDS	14398
5	1	FTG, STR, M14 ORR X -4 FNPT	12181-M14-4
6	1	FTG, BLKHD, -6 JIC	12227-6
7	1	FTG, BLKHD, -8 JIC	12227-8
8	1	FTG, STR, -6 JIC X -10 ORB	12235-6-10
9	1	ELB, 90 DEG, -8 JIC X -10 ORB	12268-8-10
10	1	ELB, 90 DEG, -6 BARB X -4 NPT	12546-6-4
11	1	FUEL LINE, 12" EXTENSION, #6 FEM JIC X #6 22IFR X 3/8" NPT	14400-005
12	1	FUEL LINE, 12" EXTENSION, #8 FEM JIC X #8 22IFR X 1/2" NPT	14400-008
13	2	CLAMP, WORM, .63 - .88	14990-06
14	2	CLAMP, WORM, .75 - 1.06	14990-10

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC




CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE				KIT, FUEL LINE ASSEMBLY, CFP5E		
ANGULAR DIMENSIONS ± 1°		IMPERIAL UNITS	METRIC UNITS	DWG UNITS:	DRAWN BY: MAC	DATE: 10-24-2008
THIRD ANGLE PROJECTION		MACHINE TOLERANCES .XX ± 0.010 .XXY ± 0.005	MACHINE TOLERANCES .XX ± 0.2	IN/LB/S	PRO-ENGINEER	REF DRWG:
		FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4	SCALE: 0.250	SHEET 1 OF 1	DRAWING NO: 13313
		FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8	EST WEIGHT: 453.615		

C	2009-313	ADDED FLEX EXTENSIONS 14400-005 & 008	DAN	20-JUL-09
B	2009-092	REV PER FILTER. ADDED HOSE	DAVE N	12MAR2009
A	2009-010	ADDED PRE-FILTER	DAVE N	20JAN2009
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

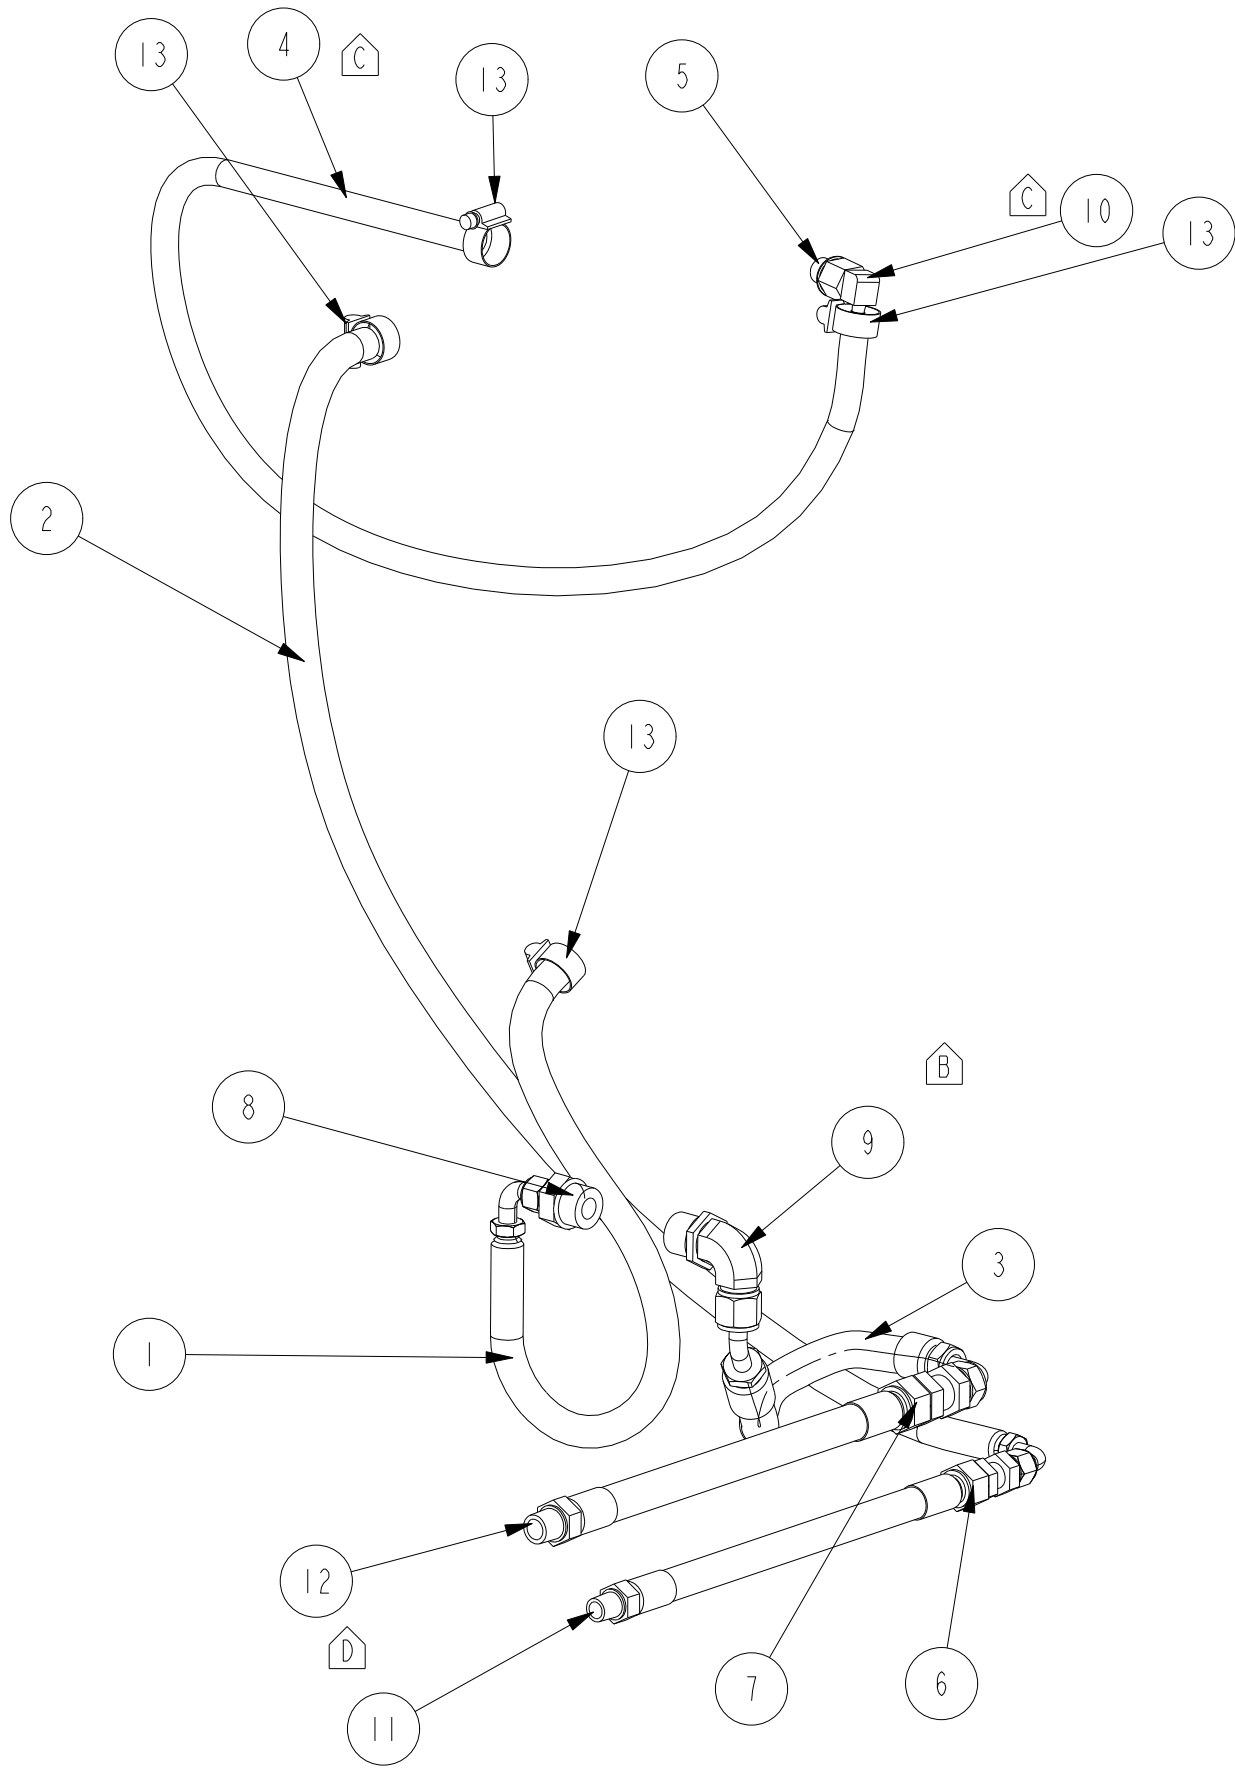

C B
C D

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY, HOSE, FUEL LINE, INLET PLUMBING CFP7E	14192
2	1	ASSEMBLY, HOSE, FUEL LINE, OUTLET PLUMBING CFP7E	14196
3	1	ASSEMBLY, HOSE, FUEL LINE, PRE-FILTER PLUMBING, CFP7E	14380
4	1	FUEL LINE, 221FR-5 X 31" LG, NO ENDS	14395
5	1	FTG, STR, MI4 ORR X -4 FNPT	12181-MI4-4
6	1	FTG, BLKHD, -6 JIC	12227-6
7	1	FTG, BLKHD, -8 JIC	12227-8
8	1	FTG, STR, -6 JIC X -10 ORB	12235-6-10
9	1	ELB, 90 DEG, -8 JIC X -10 ORB	12268-8-10
10	1	ELB, 90 DEG, -4 BARB X -4 NPT	12546-4-4
11	1	FUEL LINE, 12" EXTENSION, #6 FEM JIC X #6 221FR X 3/8" NPT	14400-005
12	1	FUEL LINE, 12" EXTENSION, #8 FEM JIC X #8 221FR X 1/2" NPT	14400-008
13	4	CLAMP, WORM, .63 - .88	14990-06

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



Fire Power




CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

D	2009-313	ADDED FLEX EXTENSIONS 14400-005 & 008	DAN	20-JUL-09
C	2009-249	#5 HOSE WAS #6. 12546-4-4 WAS -6-4	DAN	11-JUN-09
B	2009-092	ADDED HOSE. REV FITTING	DAN	11MAR2009
A	2009-010	ADDED PRE-FILTER	DAN	20JAN2009
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE		
ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION 	MACHINE TOLERANCES .XX ± 0.010 .XX ± 0.005	MACHINE TOLERANCES .XX ± 0.4 .XX ± 0.2
	FORM TOLERANCES .XX ± 0.030 .XX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
	FAB TOLERANCES .XX ± 0.060 .XX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8

KIT, FUEL SYSTEM PLUMBING CFP7E			
DWG UNITS: IN/LB/S		DRAWN BY: MAC PRO-ENGINEER	DATE: 10-24-2008 REF DRWG:
SCALE: 0.250		SHEET 1 OF 1	DRAWING NO: 14191
EST WEIGHT: 12.433			

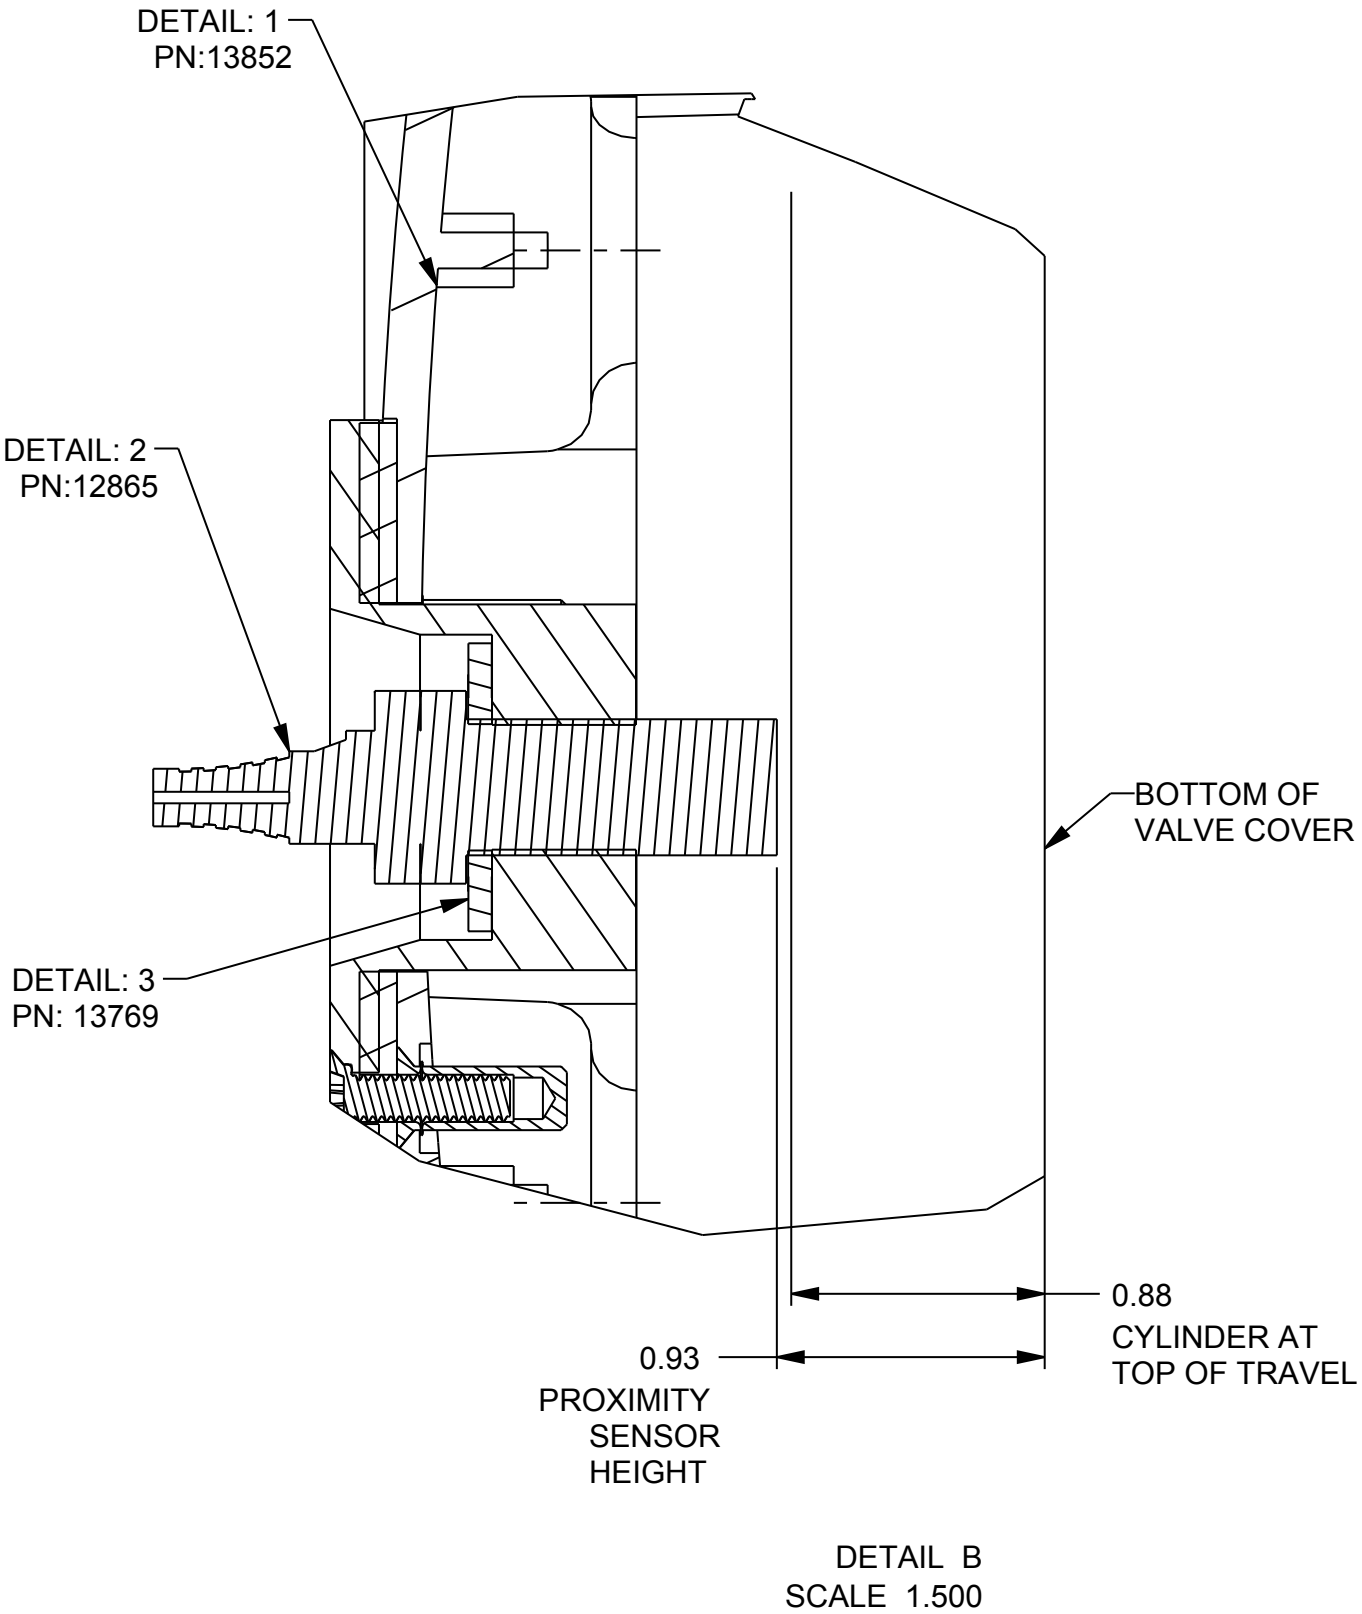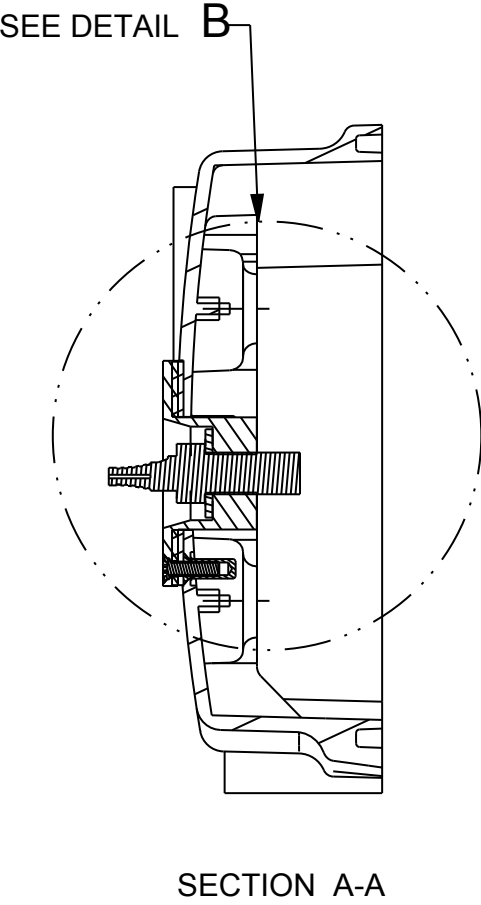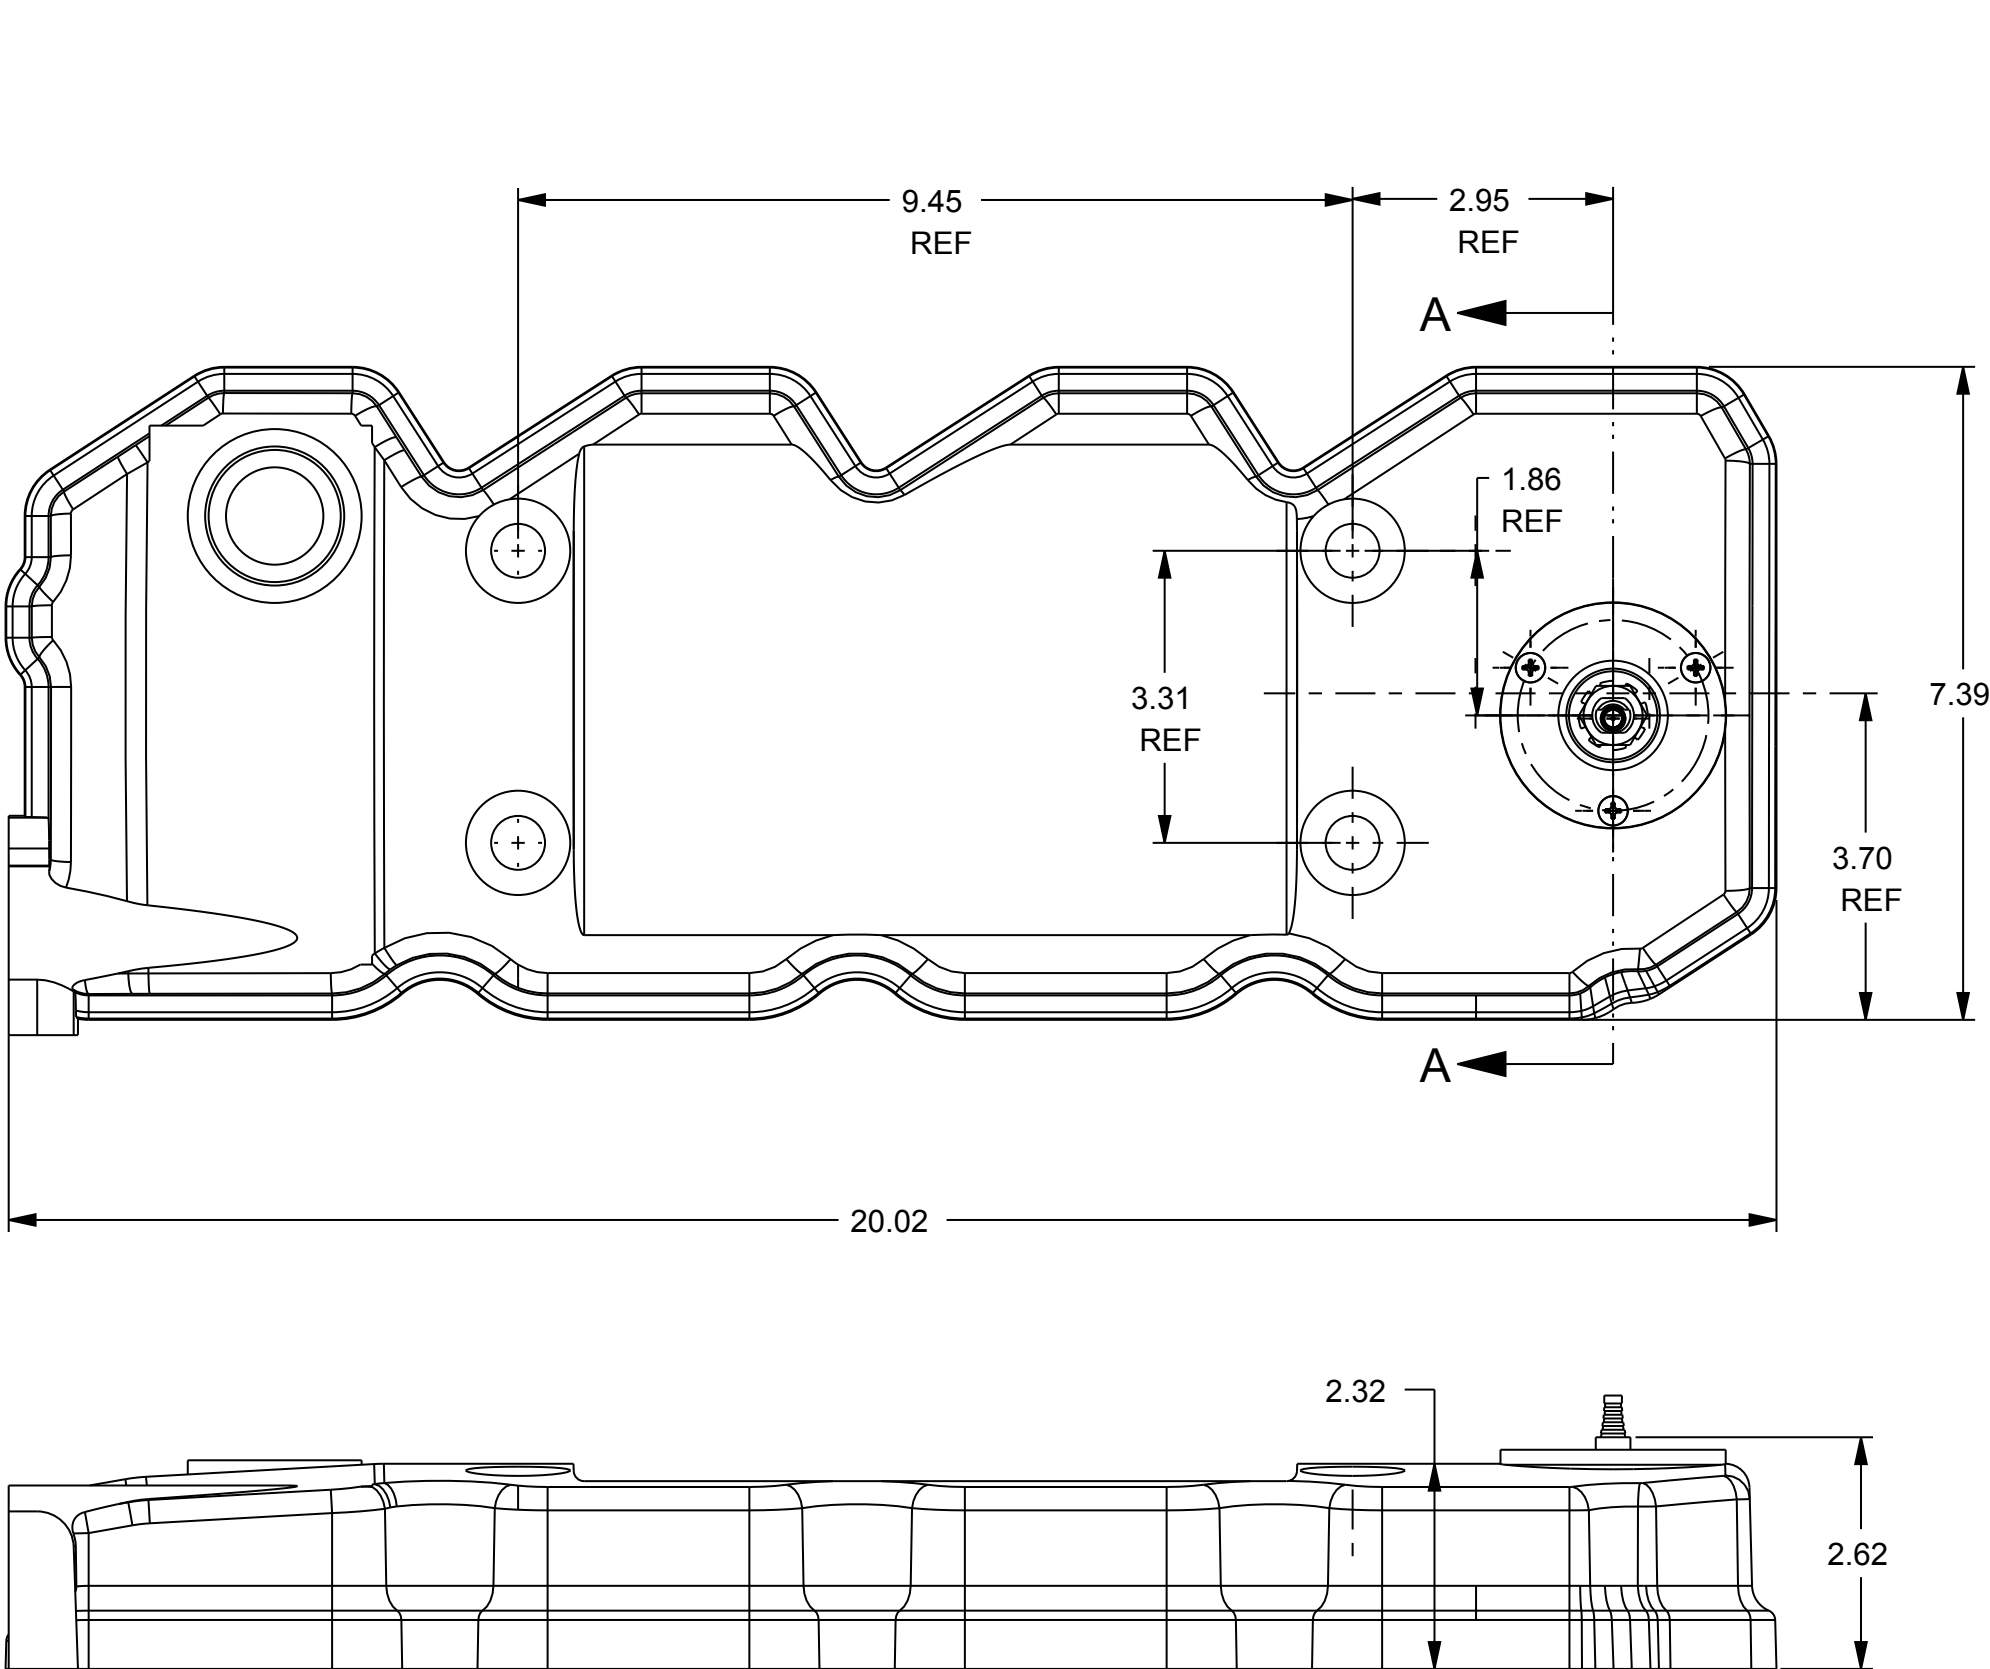

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY, MODIFIED VALVE COVER, CFP_5E	13852
2	1	SWITCH, PROXIMITY, 2M CABLE, 12-24V	12865
3	1	WASHER, PRESSURE SEALING WASHER, -	13769

REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE
A				

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied herefrom. COPYRIGHT Cummins Fire Power LLC.



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, VALVE COVER
PROXIMITY LOCATION CFP_5E

DWG UNITS: IN/LB/S

DRAWN BY: MAC
PRO-ENGINEER




DATE: 12-16-2008

REF DRWG: _

SCALE: 0.460
EST WEIGHT: 25572.168


SHEET
1 OF 1

DRAWING NO: 13772

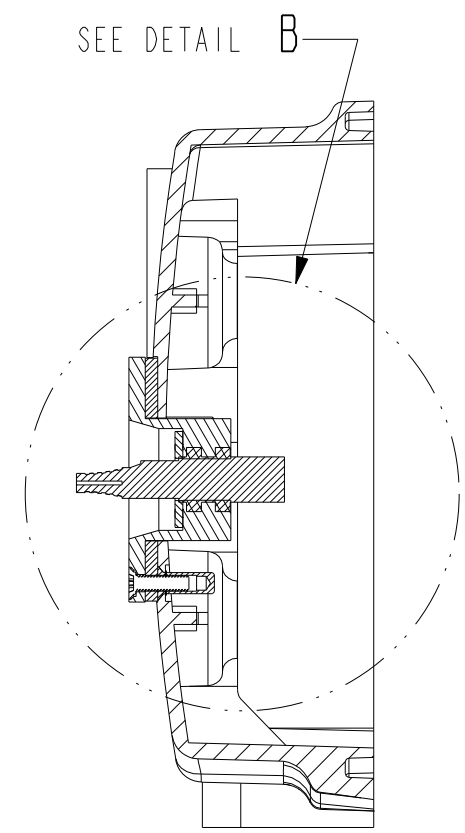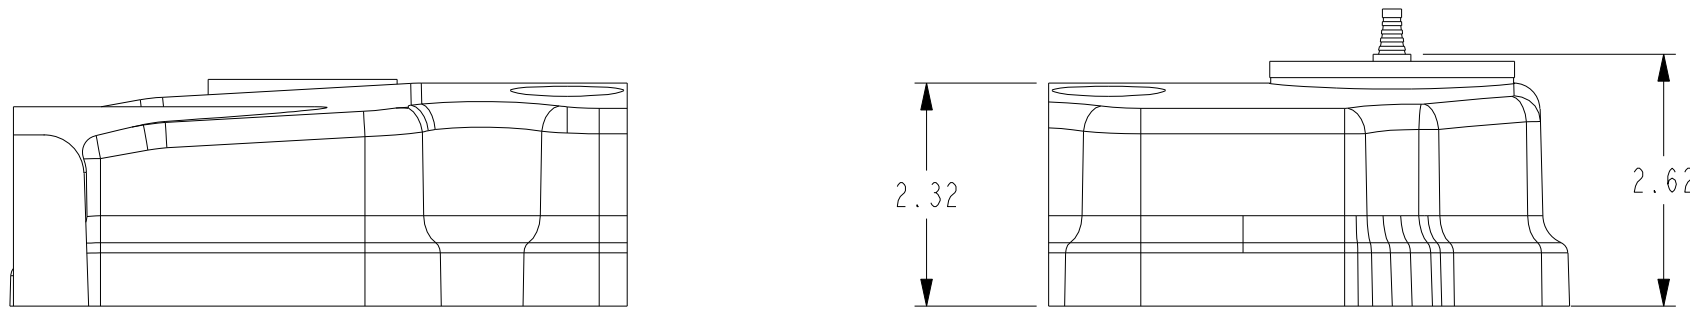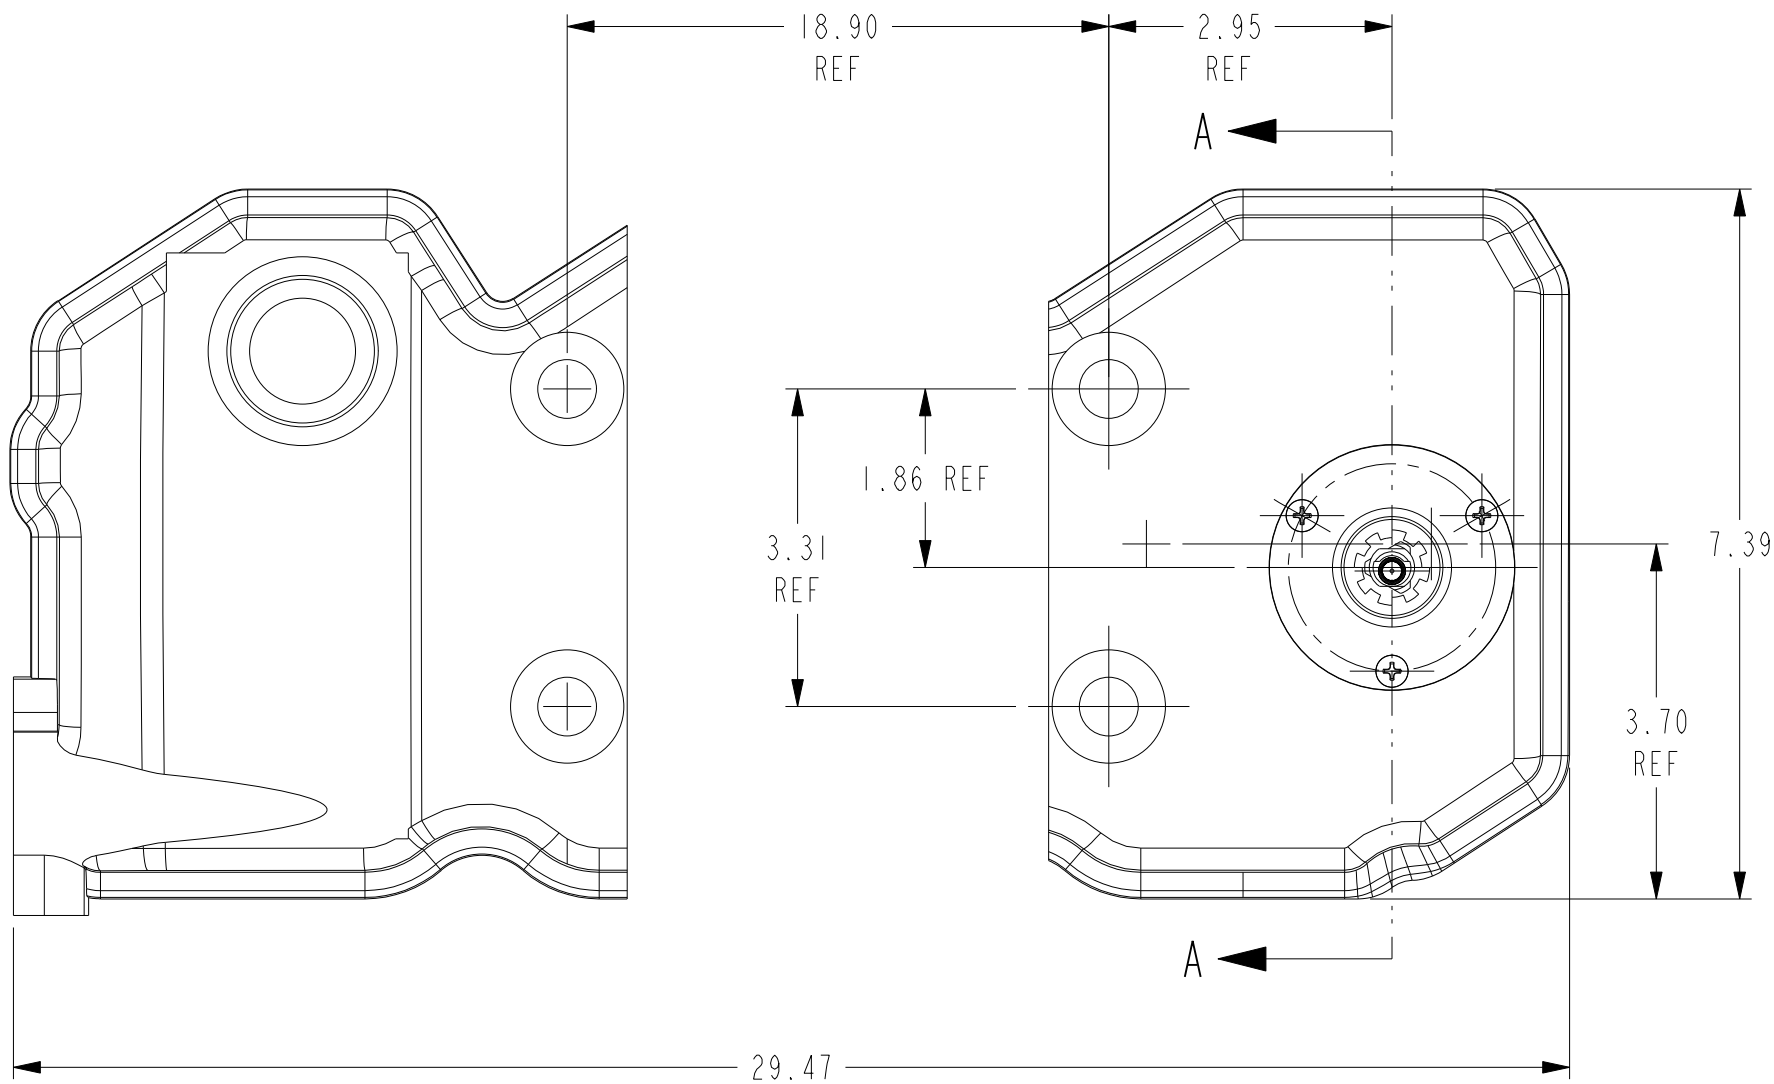


SECTION A-A

CUT SOCKET REQUIRED FOR INSTALLATION

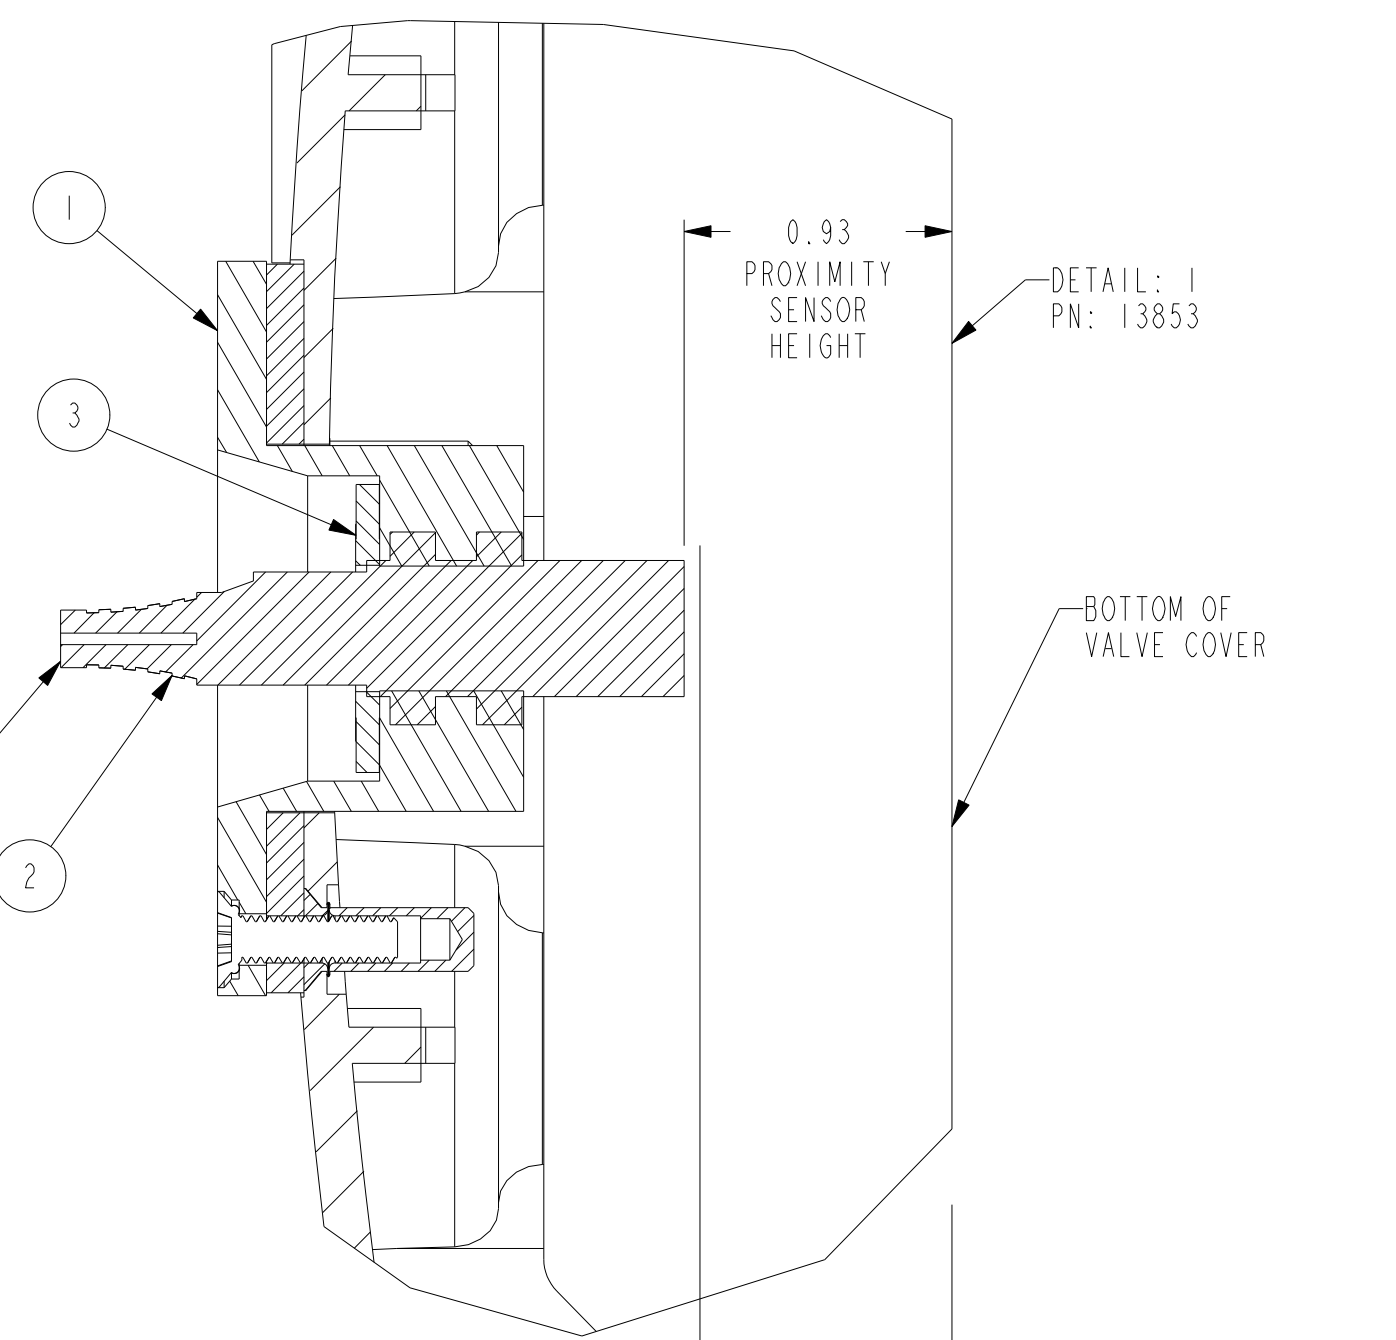


***SET SENSOR WITH FIXTURE 13826

DETAIL B
SCALE 1.500

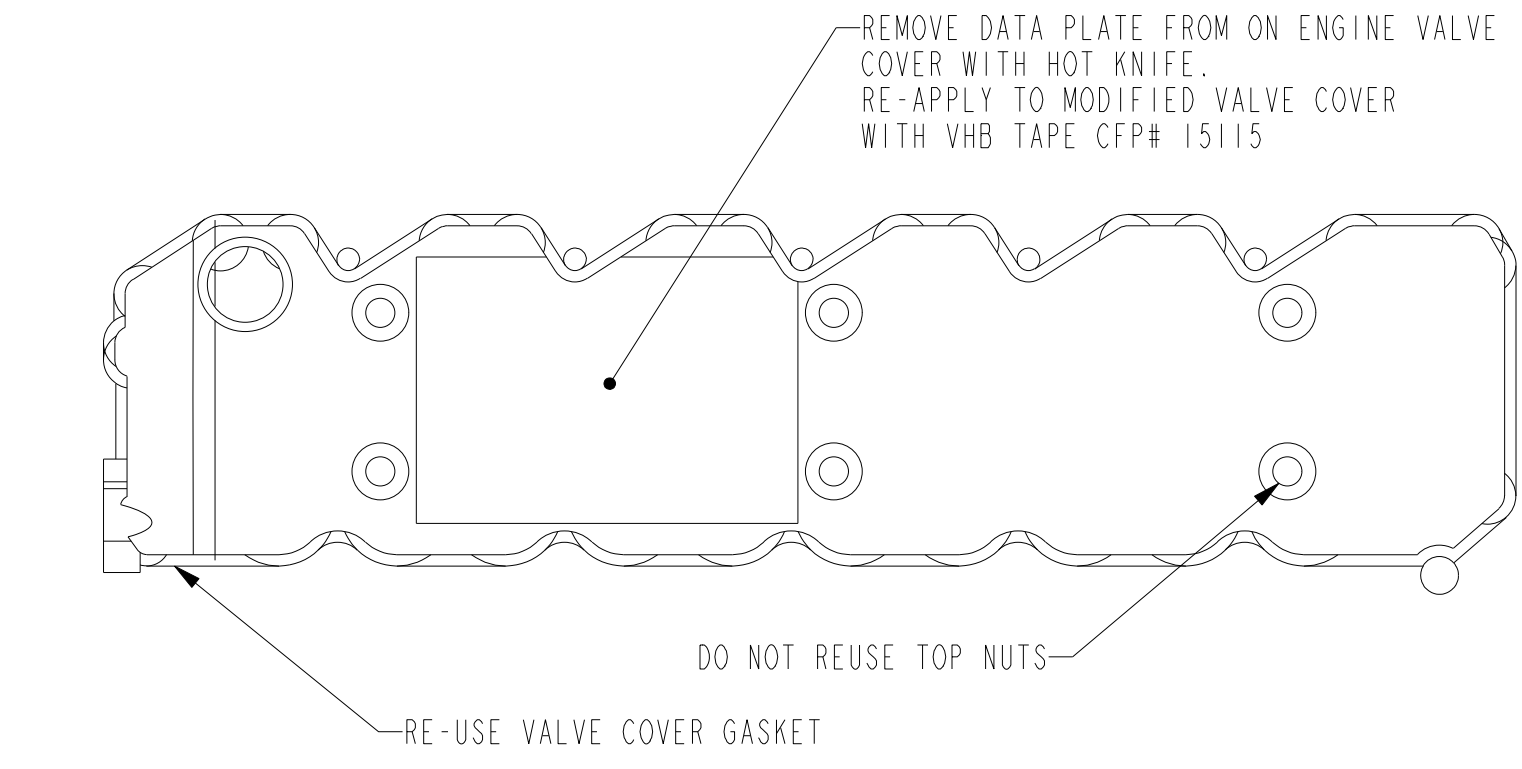

TIE OFF SENSOR WIRE TO RELIEVE STRESS ON CONNECTION


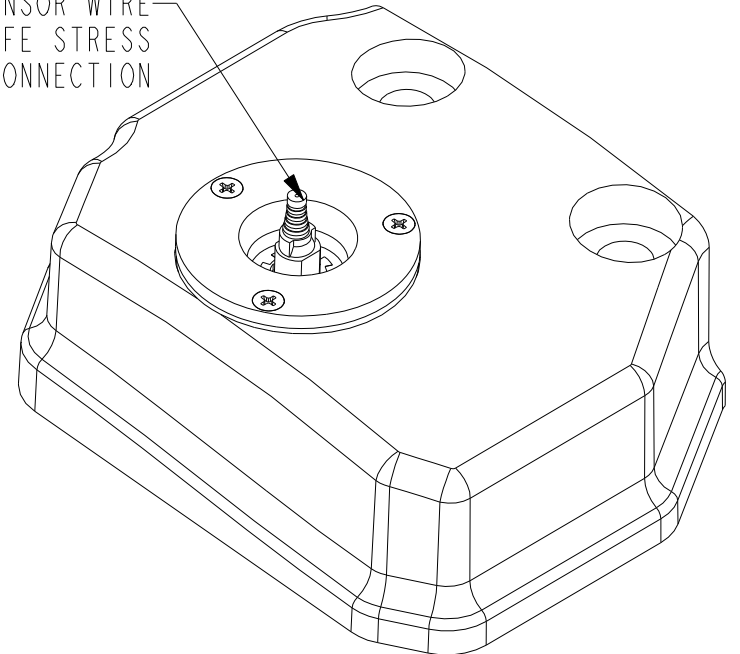


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY, MODIFIED VALVE COVER - CFP_7E, _	13853
2	1	SWITCH, PROXIMITY, 2M CABLE, 12-24V	12865
3	1	WASHER, PRESSURE SEALING WASHER, -	13769

<small>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC</small>			CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUEKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPGIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE				
ANGULAR DIMENSIONS ± 1° IMPERIAL UNITS METRIC UNITS				
THIRD ANGLE PROJECTION		MACHINE TOLERANCES FRACTIONAL ± .005 DECIMAL ± .005 FAB TOLERANCES ± .010	MACHINE TOLERANCES FRACTIONAL ± .005 DECIMAL ± .005 FAB TOLERANCES ± .010	
DWG UNITS: IN/LB/S		DRAWN BY: MAC		DATE: 12-16-2008
SCALE: 0.500		SHEET 1 OF 1		REF DRWG: 13849
EST WEIGHT: 16.160				

A	2009-249	ADDED NOTES AND FIXTURE PART NUMBER	DAN	11-JUN-09
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, WATER, 12 JIC BOTH ENDS X 32", FIREPUMP, CFP7E	11148-08
2	1	HOSE, ISOLATED COOLING LOOP	15299
3	1	FTG, STR, -12 JIC X -16 ORB	12235-12-16
4	1	FTG, STR, -12 JIC X -12 FMNPT	12240-12-12
5	2	ELB, 90 DEG, -12 JIC X -12 NPT	12270-12-12
6	1	BRACKET, PIPE SUPPORT, ISOLATED FIRE PUMP	15300
7	1	NIPPLE, BLK, 3/4x6	71550
8	2	U-BOLT, FITS 1" PIPE	3201T13

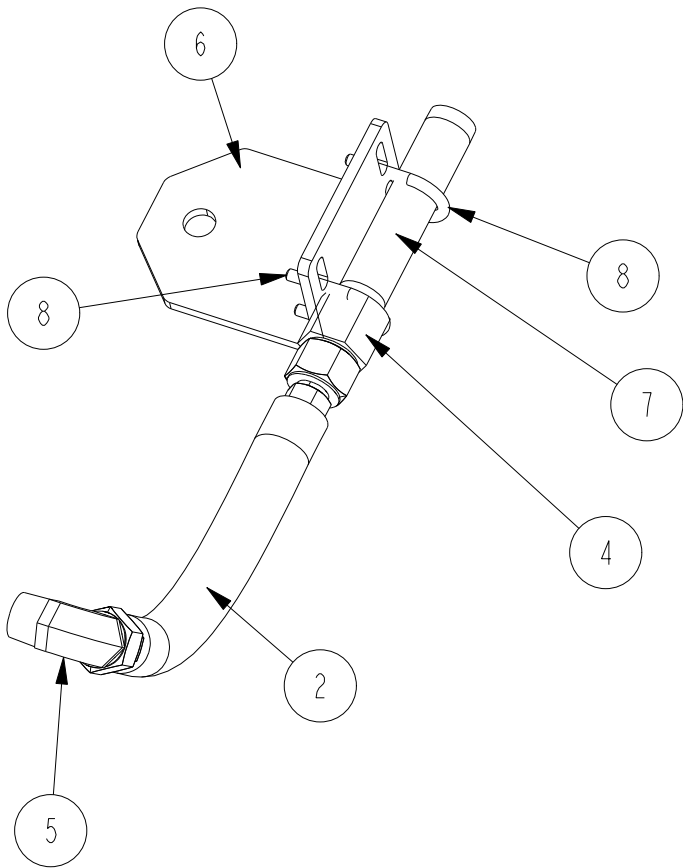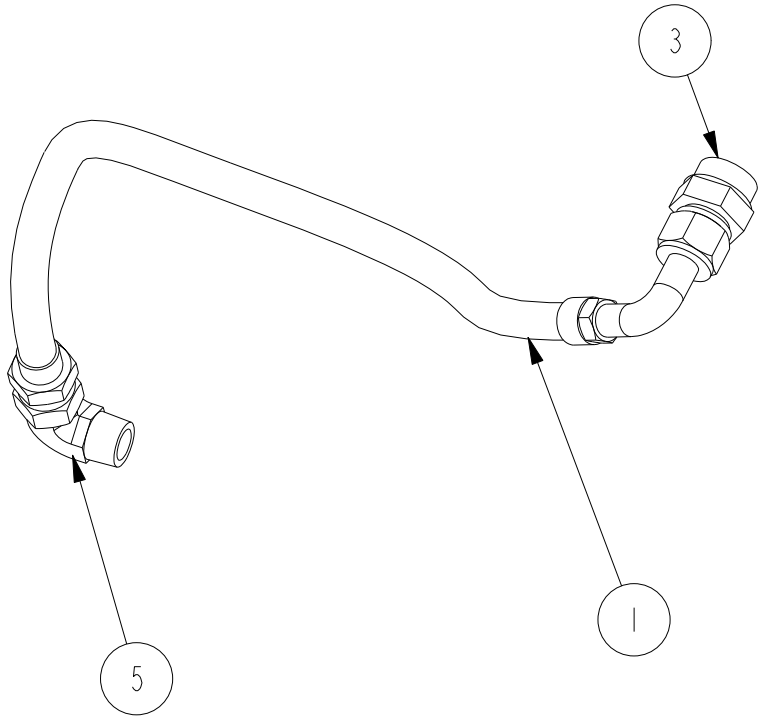

REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

Cummins Fire Power


CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, MISC PIPING, CFP5E

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE	ANGULAR DIMENSIONS ± 1°	
	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .XX ± 0.4 .XX ± 0.2
	FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
	FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8

DWG UNITS: IN/LB/S	DRAWN BY: DAN PRO-ENGINEER	DATE: 20-JUL-09 REF DRWG: -
SCALE: 0.250	SHEET 1 OF 1	DRAWING NO: 15301
EST WEIGHT: 42238.628		

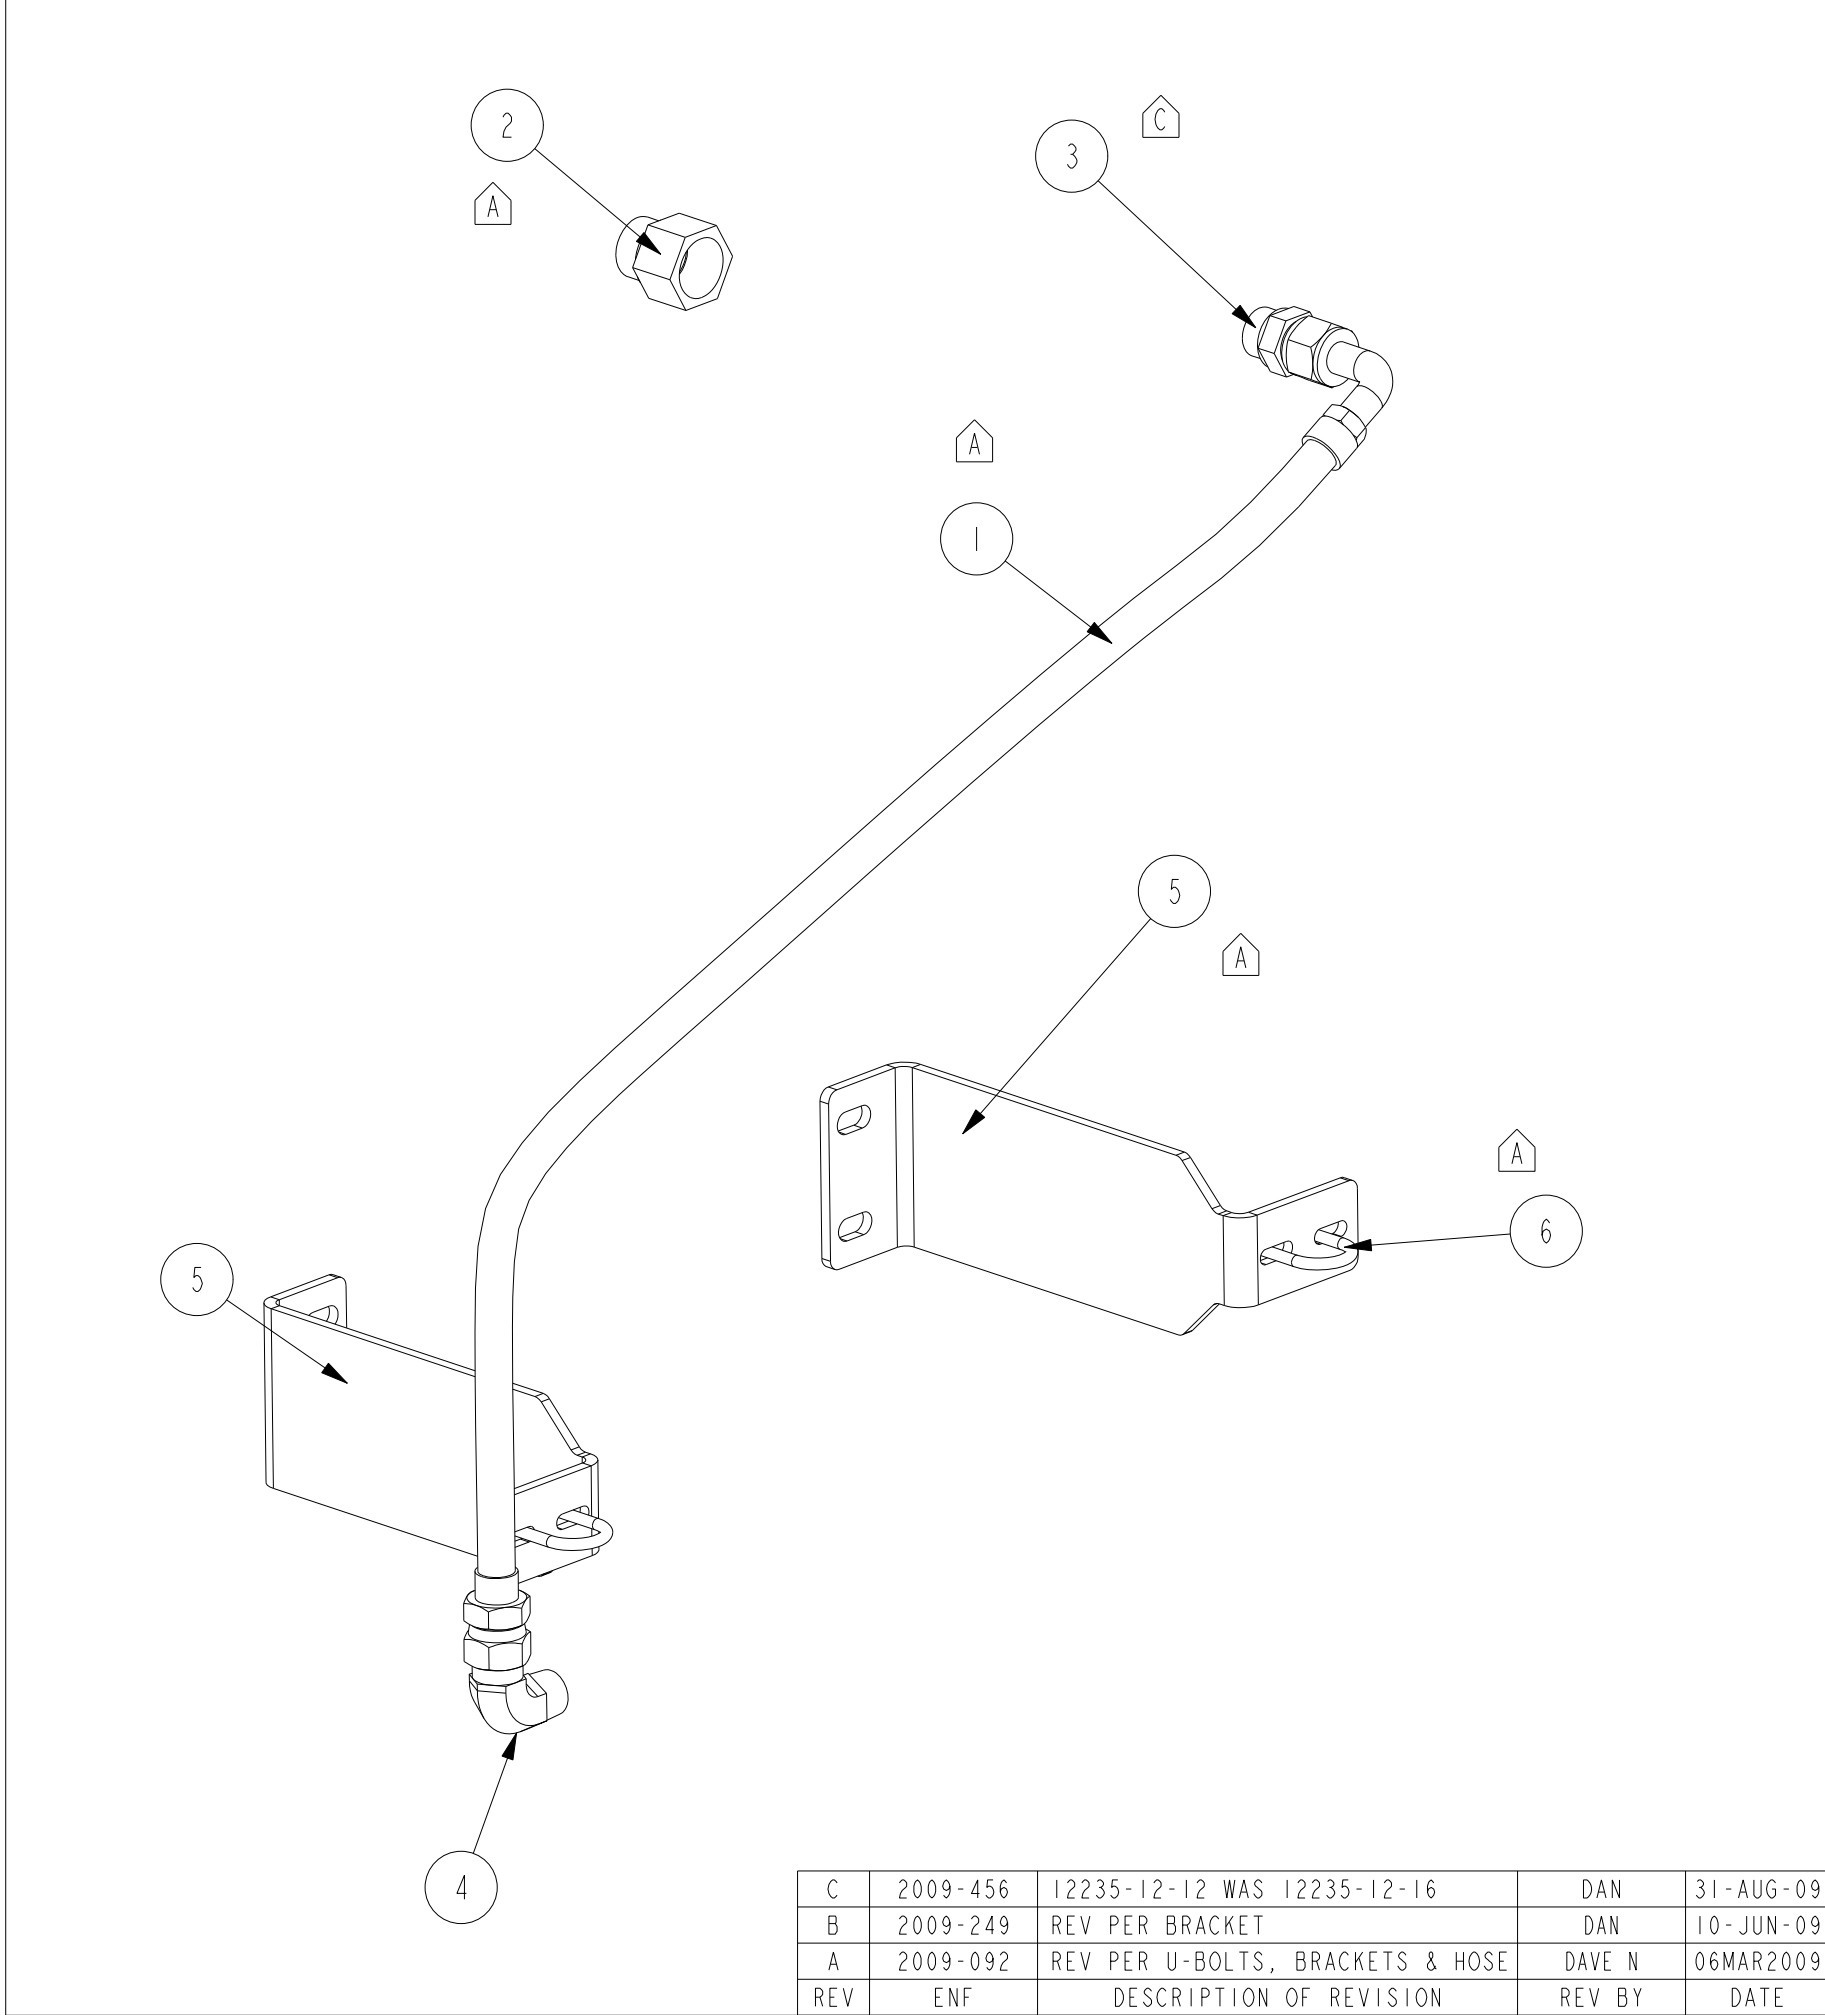

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, WATER, 12 JIC BOTH ENDS X 32", FIREPUMP, CFP7E	11148-08
2	1	FTG, STR, -16 ORB X -16 FMNPT	12171-16-16
3	1	FTG, STR, -12 JIC X -12 ORB	12235-12-12
4	1	ELB, 90 DEG, -12 JIC X -12 NPT	12270-12-12
5	2	BRACKET, MOUNTING, COOLING LOOP, 10" STAND OFF	14394
6	2	U-BOLT, FITS 1" PIPE	3201T13

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2
	FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
	FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8


DWG UNITS: IN/LB/S	DRAWN BY: DAVE N PRO-ENGINEER	DATE: 23JAN2009 REF DRWG: -
SCALE: 0.250	SHEET 1 OF 1	DRAWING NO: DRAWING NO: 14376
EST WEIGHT: 6.832		

8682-01 FOR VERTICLE TURBINE PUMP:
REMOVE VALVE ITEM #7 AND REPLACE WITH
ITEM #6 - 6" LONG NIPPLE

8682-02 FOR 24 VOLT OPERATION:
REMOVE VALVE ITEM #7 AND REPLACE WITH
ASCO #8210G3-24vdc

BILL OF MATERIAL

ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	REGULATOR, 3/4" NPT, 400 PSI MAX, 25 TO 75 PSI OUT	8890
2	2	STRAINER, 3/4" NPT W/ PLUG	8891
3	1	GUAGE, PRESSURE, 1/4" NPT, 0-100 PSI RANGE	8892
4	2	TAG, COOLANT LOOP LABEL, VERTICAL MTG	10965
5	1	BUSHING, REDUCING, 3/4" NPT X 1/4" NPT	71494
6	3	NIPPLE, BLK, 3/4x6	71550
7	1	VALVE, ELEC ACT, BRASS, 3/4" NPT, 12vdc, 150 PSI MAX	8210G3-12VDC
8	1	VALVE, BALL, 1/4" NPT	FA60204-1
9	4	VALVE, BALL, 3/4" NPT	FA60406
10	1	NIPPLE, BLK, 1/4 X CLOSE	LTL-CPN14
11	10	NIPPLE, BLK, 3/4x1-1/2	LTL-CPN34
12	1	ELBOW, BLK, 3/4" NPT, 90 DEG.	LTL-E3490
13	2	CLAMP, 1"	LTL-SCPVI6627
14	2	PLUG, 1/2 NPT, -	LTL-SCSPI2
15	3	TEE, BLK, 3/4" NPT	LTL-ST34

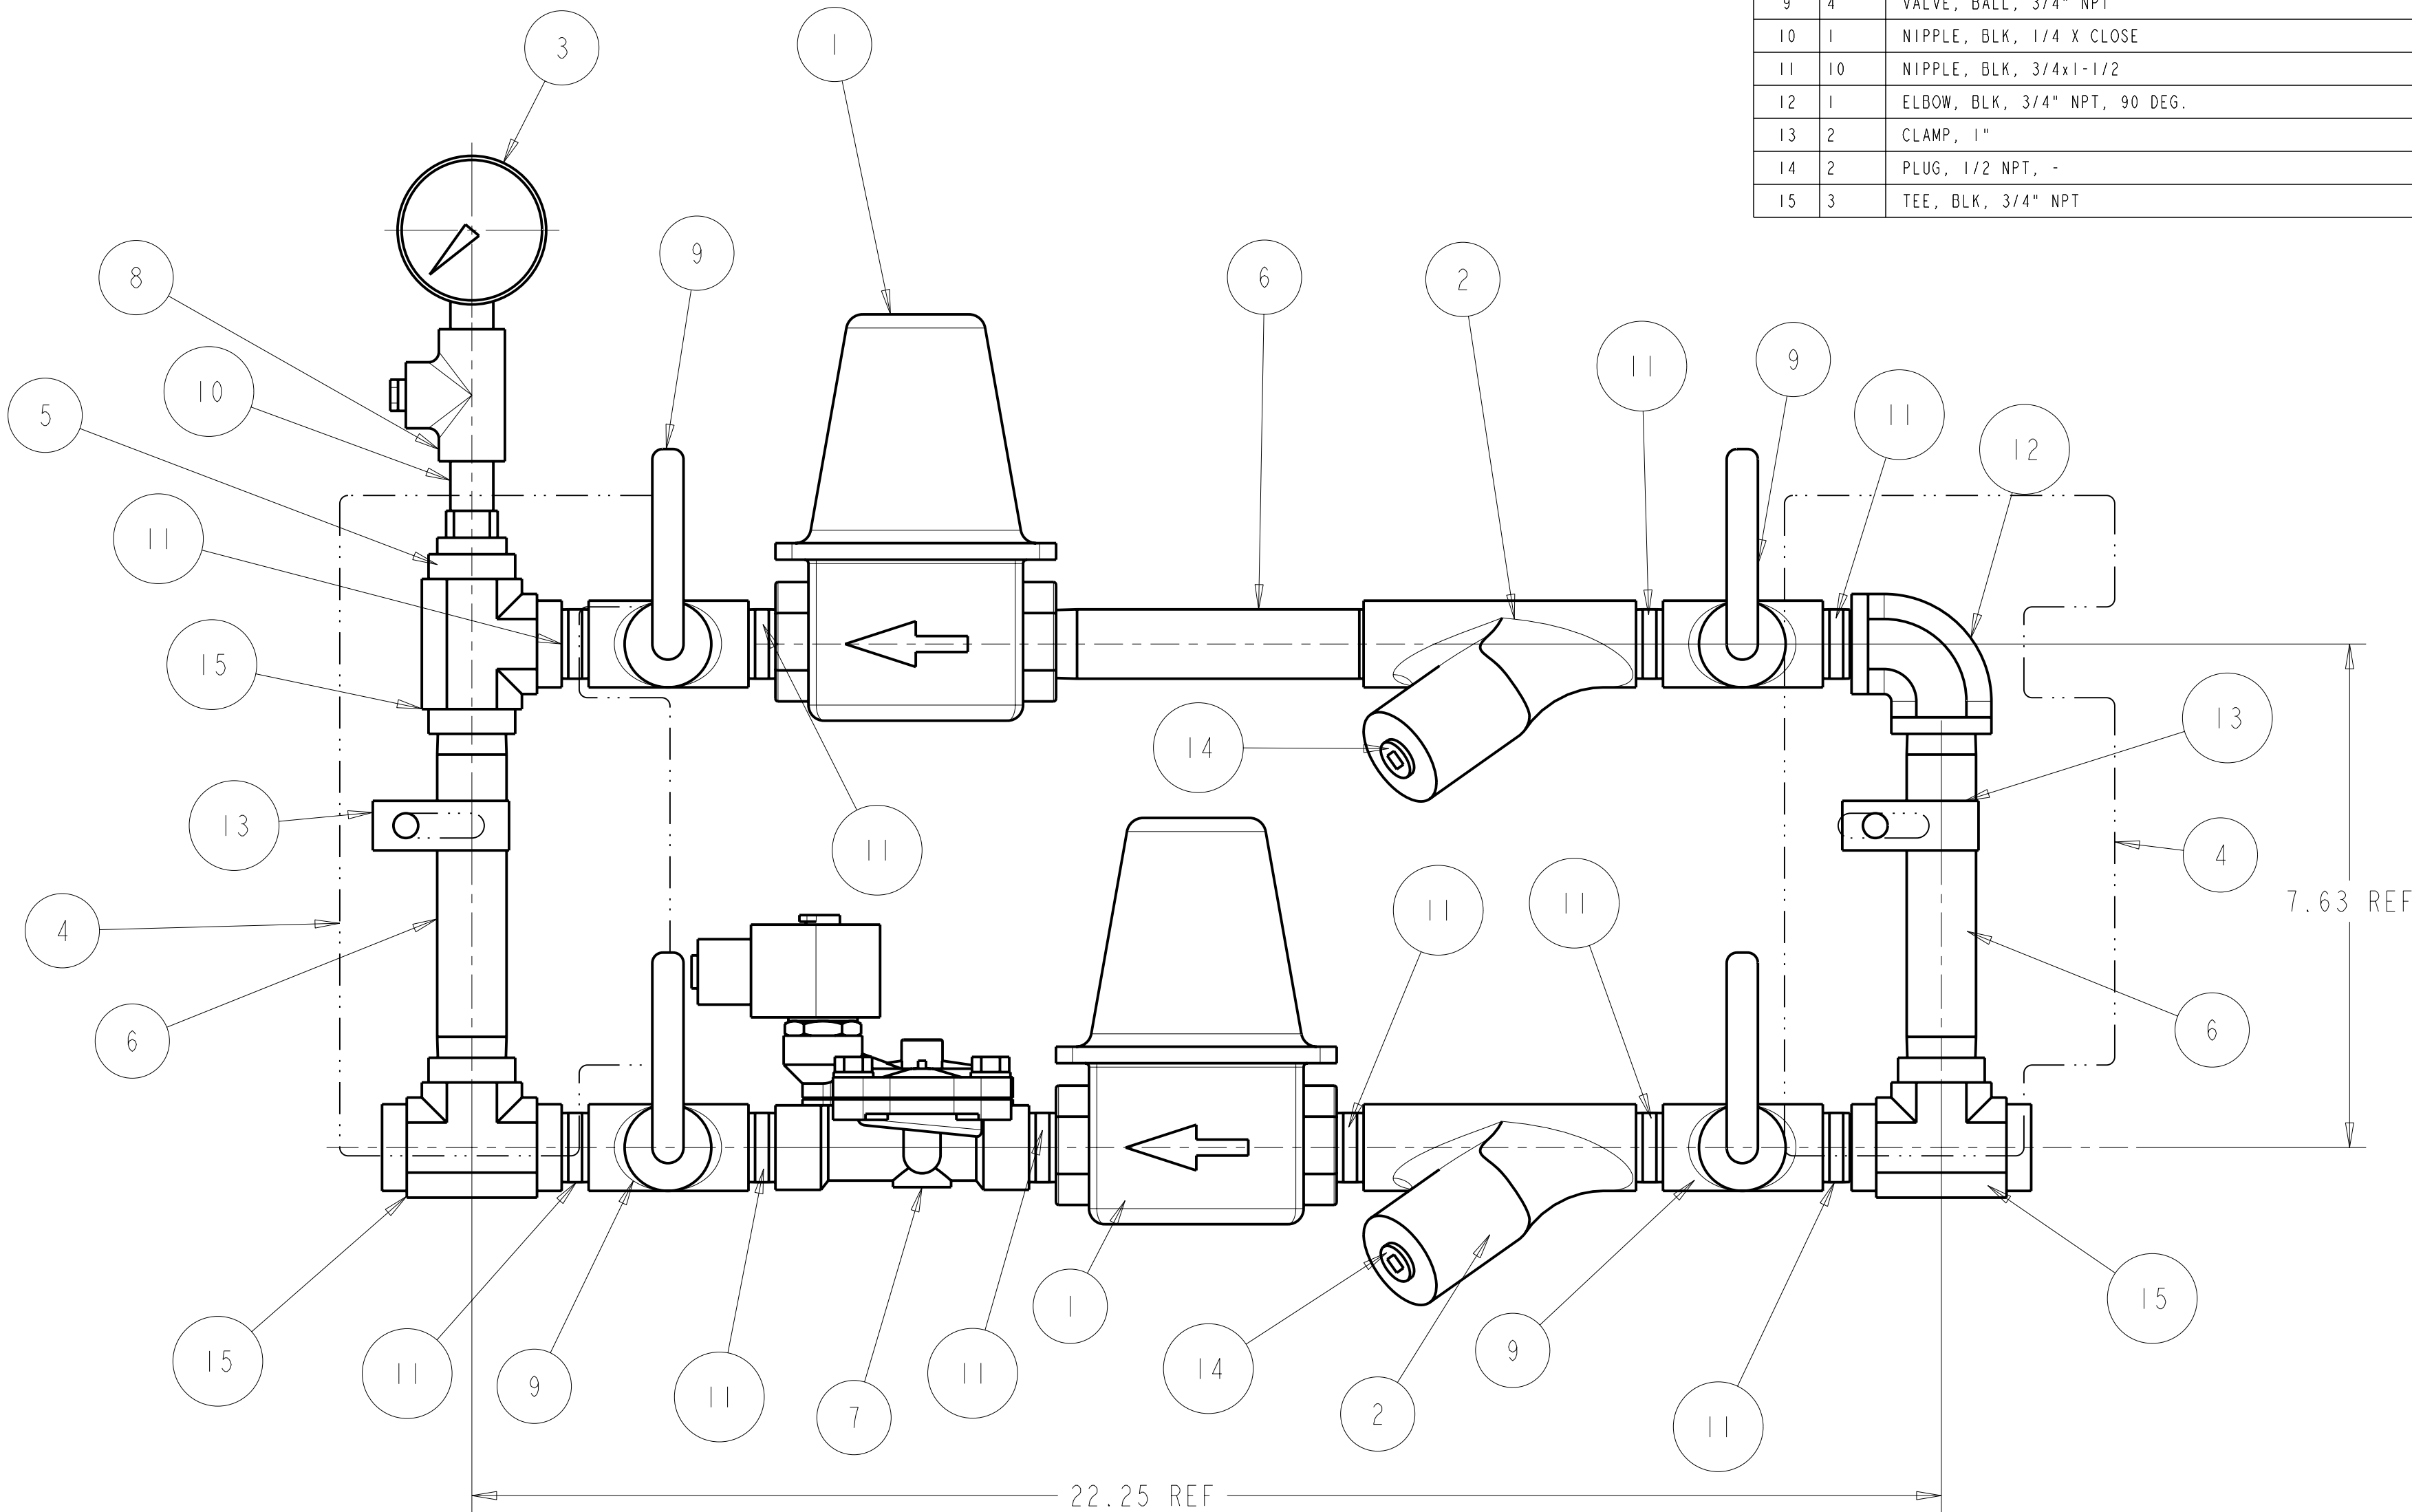


VALVES SHOWN CLOSED - NOT IN OPERATING POSITION


D	REV PER PART NUMBERS	DAVE N	19SEP06
REV	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins NPower, LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document, accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins NPower, LLC			
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE			
ANGULAR DIMENSIONS	± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION		MACHINE TOLERANCES FRA : ± 0.005 DEC : ± 0.005 FAB TOLERANCES FRA : ± 0.005 DEC : ± 0.005	MACHINE TOLERANCES FRA : ± 0.2 DEC : ± 0.2 FAB TOLERANCES FRA : ± 0.2 DEC : ± 0.2

TITLE 1: ASSEMBLY, RAW WATER COOLING, 3/4" NPT		TITLE 2: FIREPUMP	
DWG UNITS: IN/LB/S	DRAWN BY: DAVE N	DATE: 12JUN2004	
EST WEIGHT: 45.900	SCALE: 0.500	DO NOT SCALE	SHEET 10F1
DRAWING NO: 8682		REV: D	

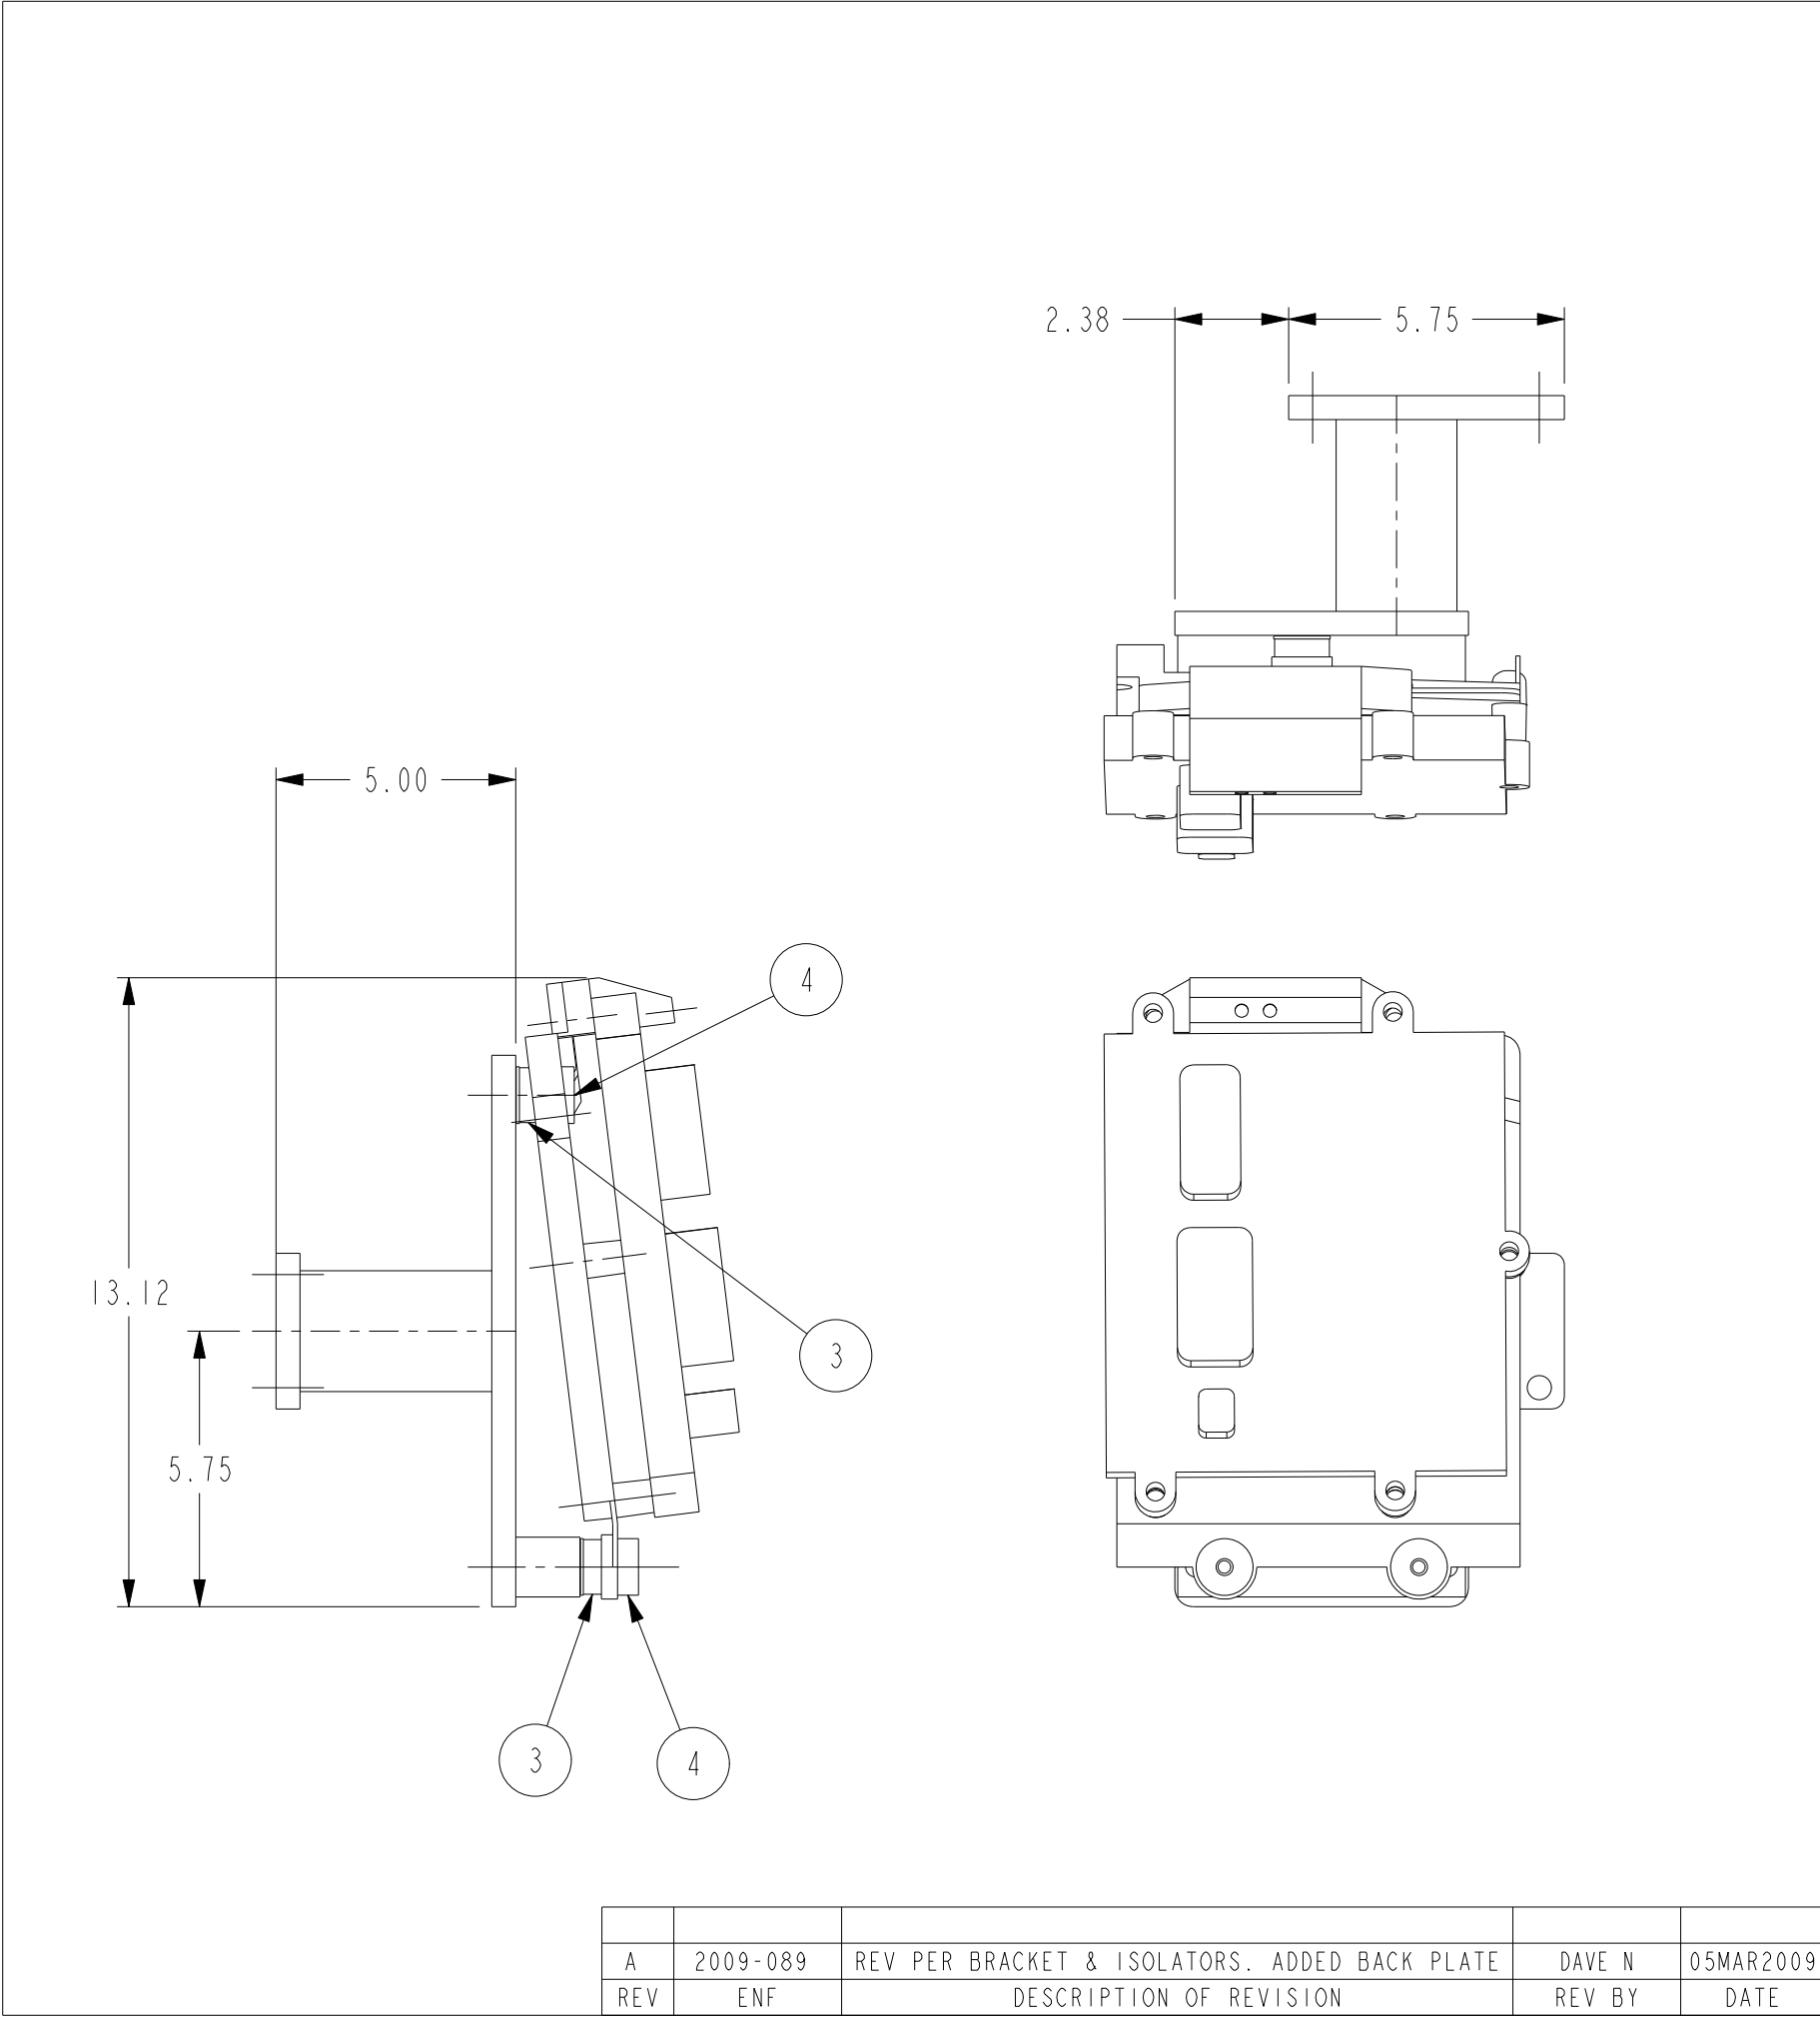

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	BRACKET, ECM MOUNTING, CFP5E & CFP7E	13310
2	1	STAND OFF, ECM, 103mm BOLT PATTERN	14392
3	3	ISOLATOR, VIBRATION, CUMMINS NO 3955219	3955219
4	3	ISOLTATOR, VIBRATION, CUMMINS NO. 3955220	3955220
5	1	ECM MODULE, CUMMINS, #4921776	12726
6	1	BRACKET, ETR CNT MODULE	4936170

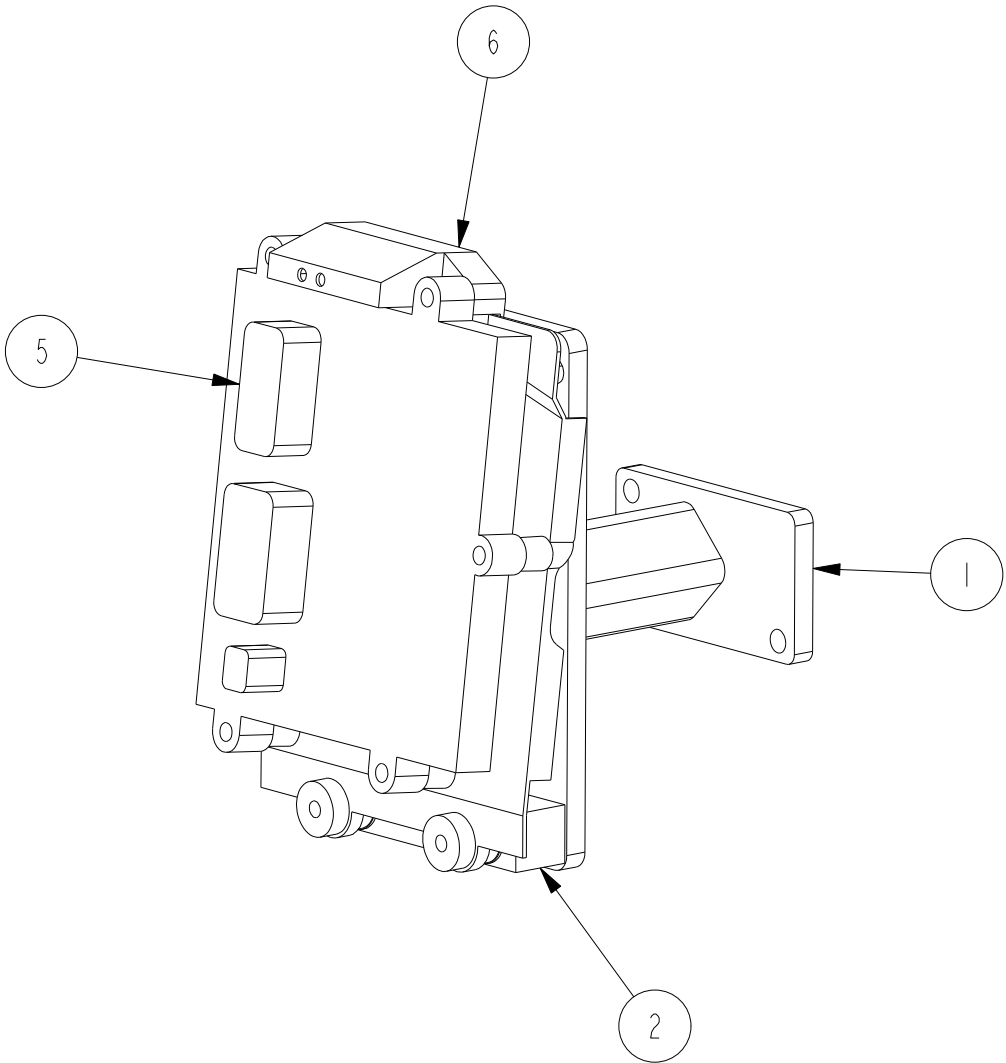

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC





CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, SECONDARY ECM
FIRE PUMP, CFP5E & CFP7E

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE	ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS	DWG UNITS: IN/LB/S	DRAWN BY: MAC PRO-ENGINEER	DATE: 12-09-2008 REF DRWG:
THIRD ANGLE PROJECTION	MACHINE TOLERANCES .XX ± 0.010 .XX ± 0.005 FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015 FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	MACHINE TOLERANCES .X ± 0.4 .X ± 0.2 FORM TOLERANCES .X ± 0.8 .X ± 0.4 FAB TOLERANCES .X ± 1.5 .X ± 0.8		SCALE: 0.250 EST WEIGHT: 12.950	SHEET 1 OF 1	DRAWING NO: 13309

DESIGN INTELLECTUAL PROPERTY BY CUMMINS NPOWER, LLC
ALL PRODUCTION RUNS WILL REQUEST LATEST DOCUMENTATION
SEE SHEET 2 FOR WAVE-SOLDER ASSEMBLY
SEE SHEET 3 FOR HAND-SOLDER OF LEADS
SEE SHEET 4 FOR COVER ASSEMBLY

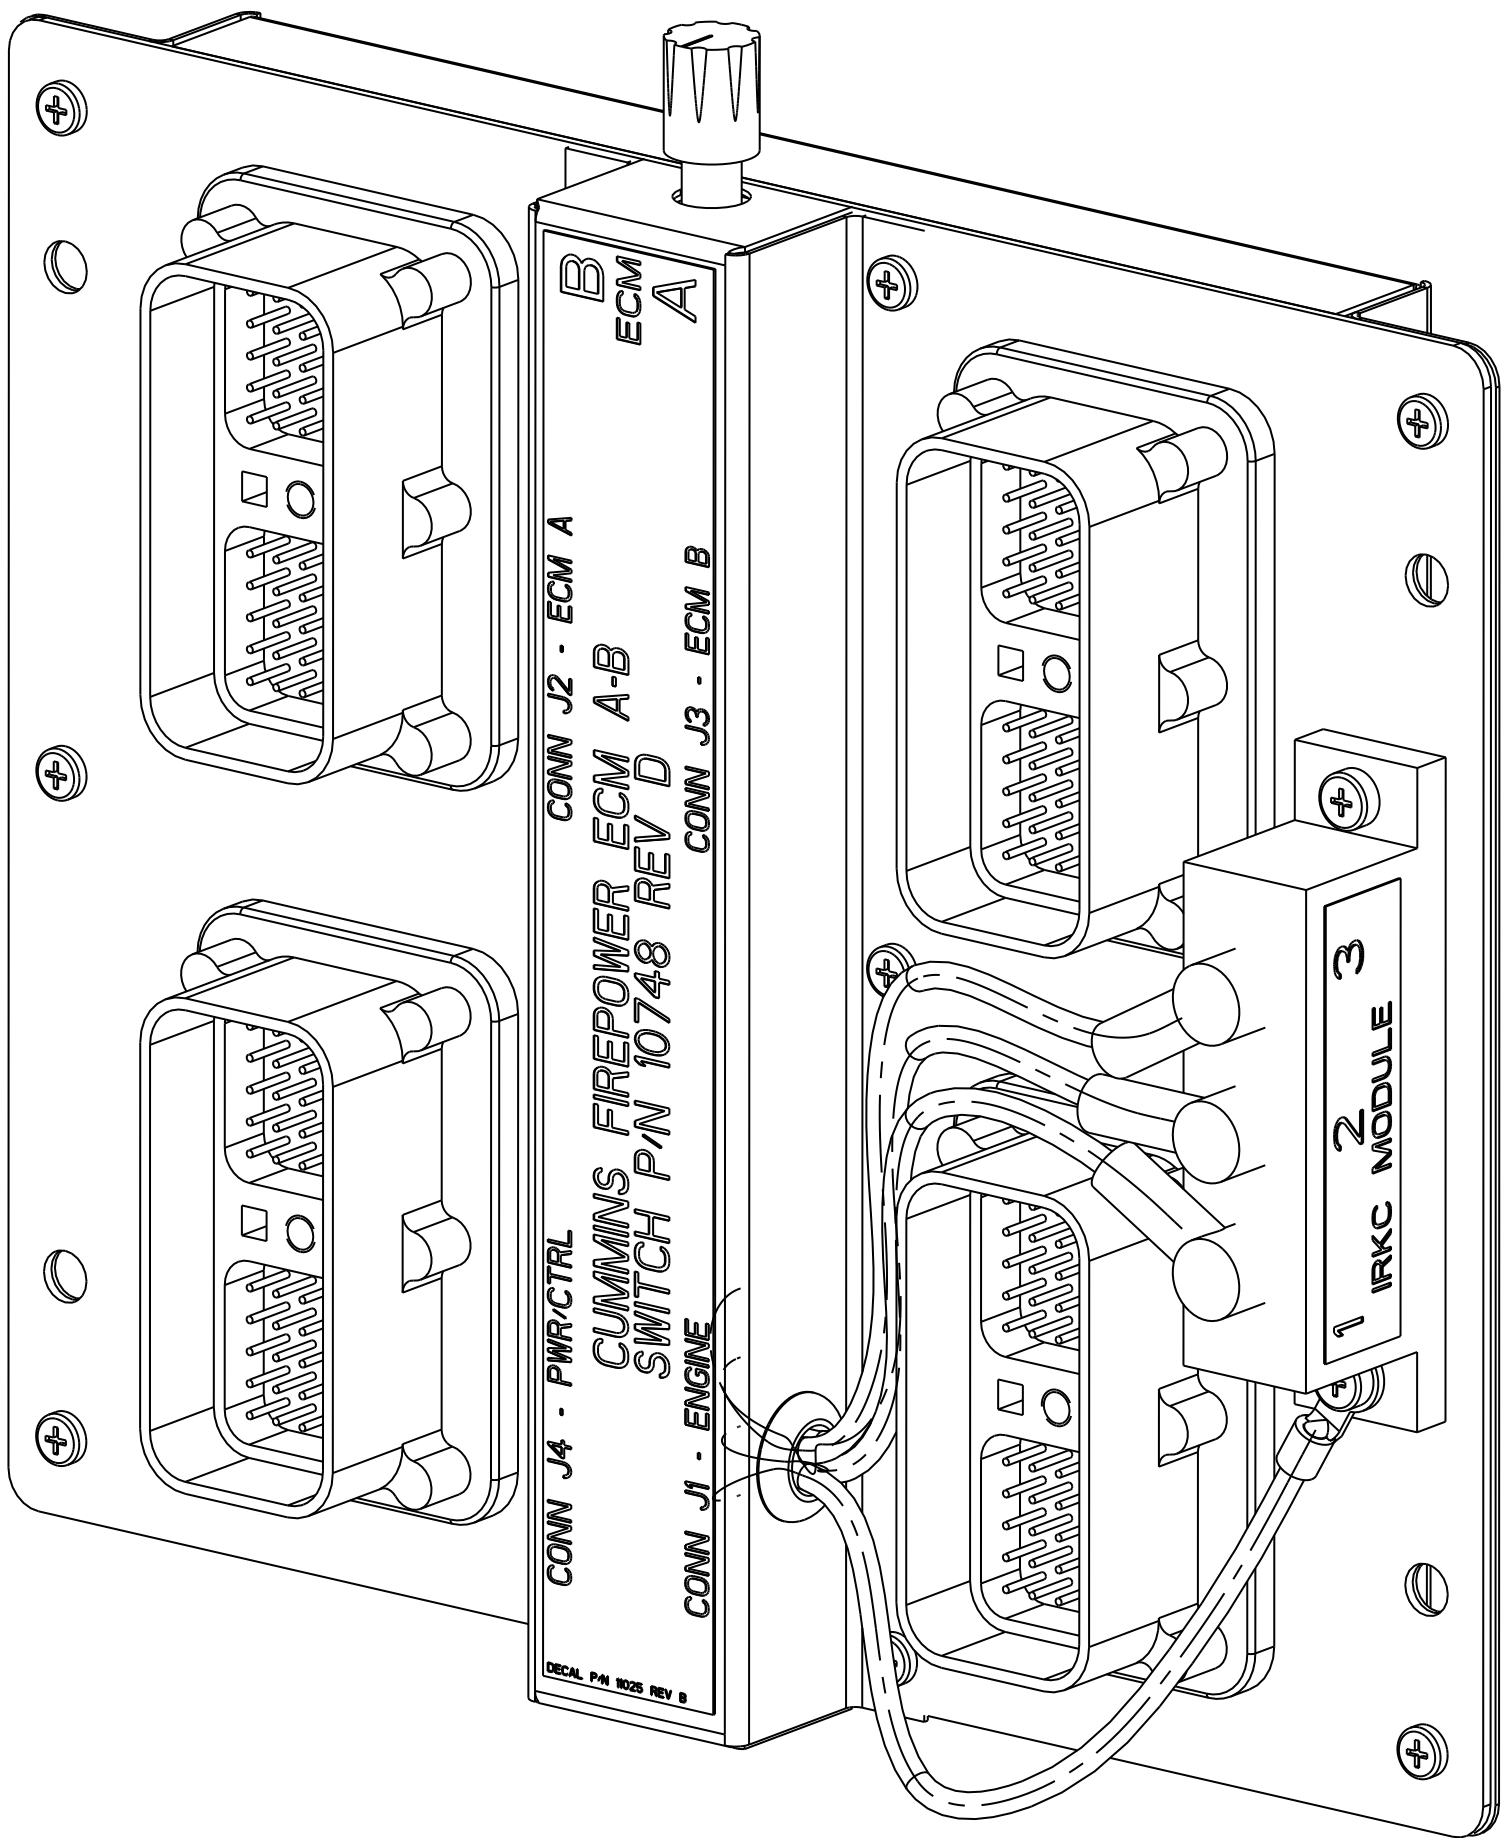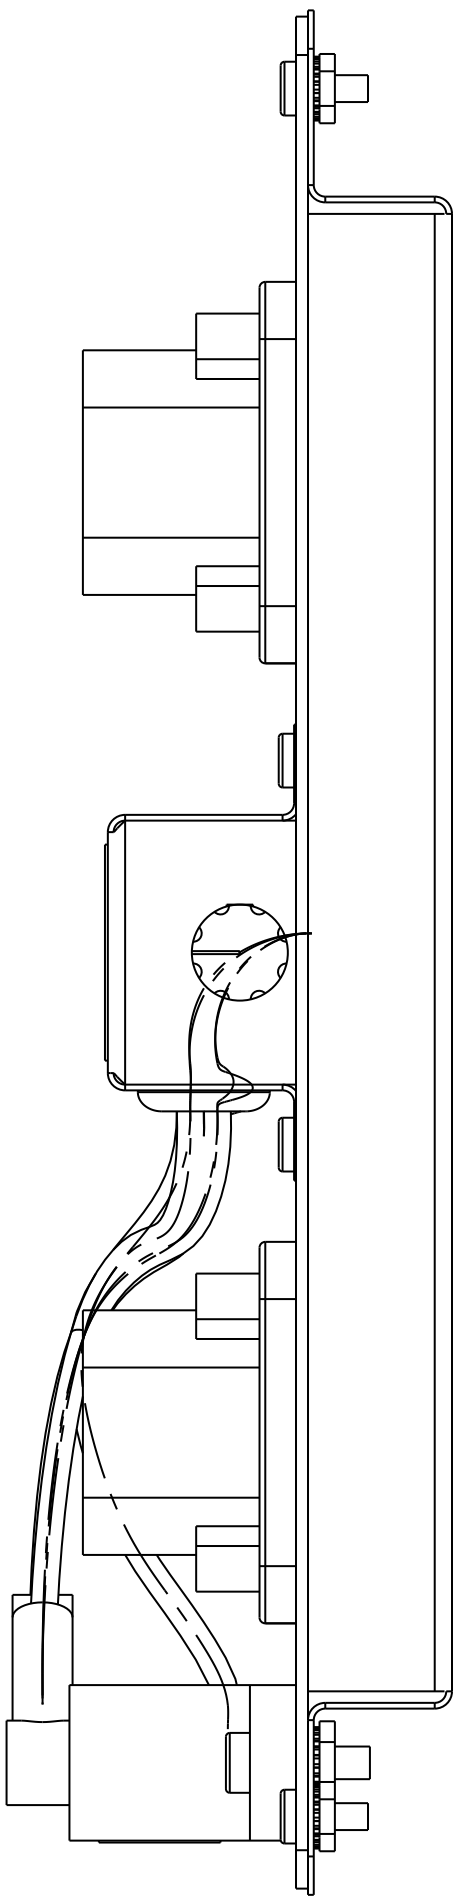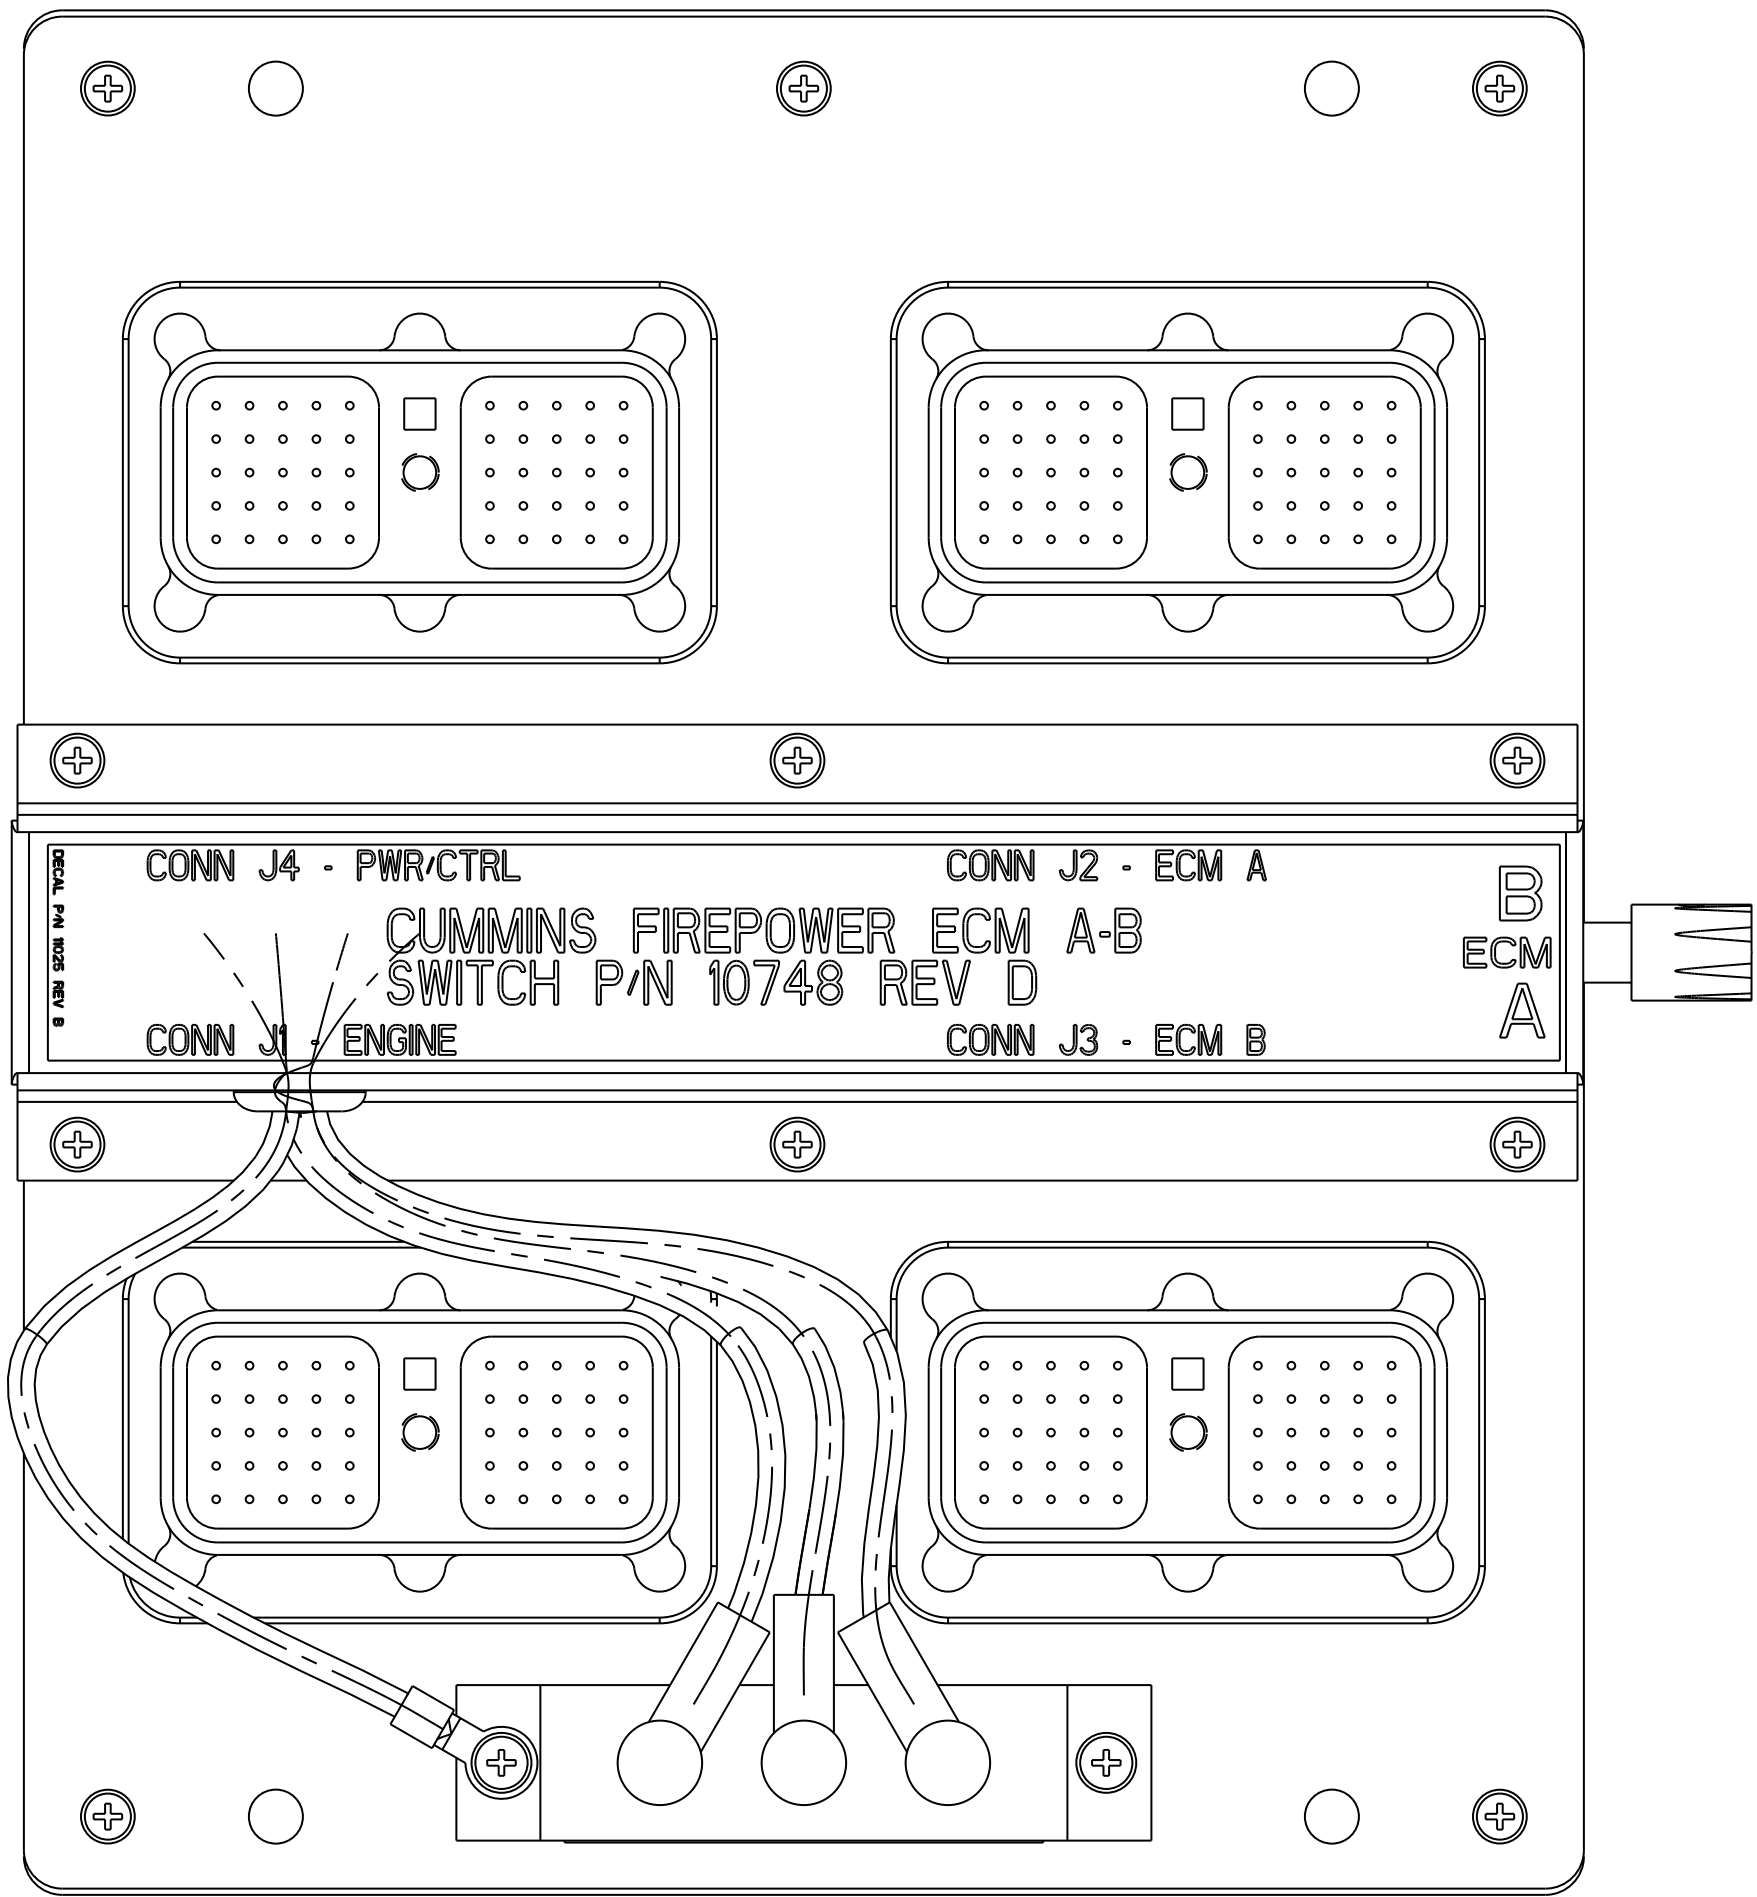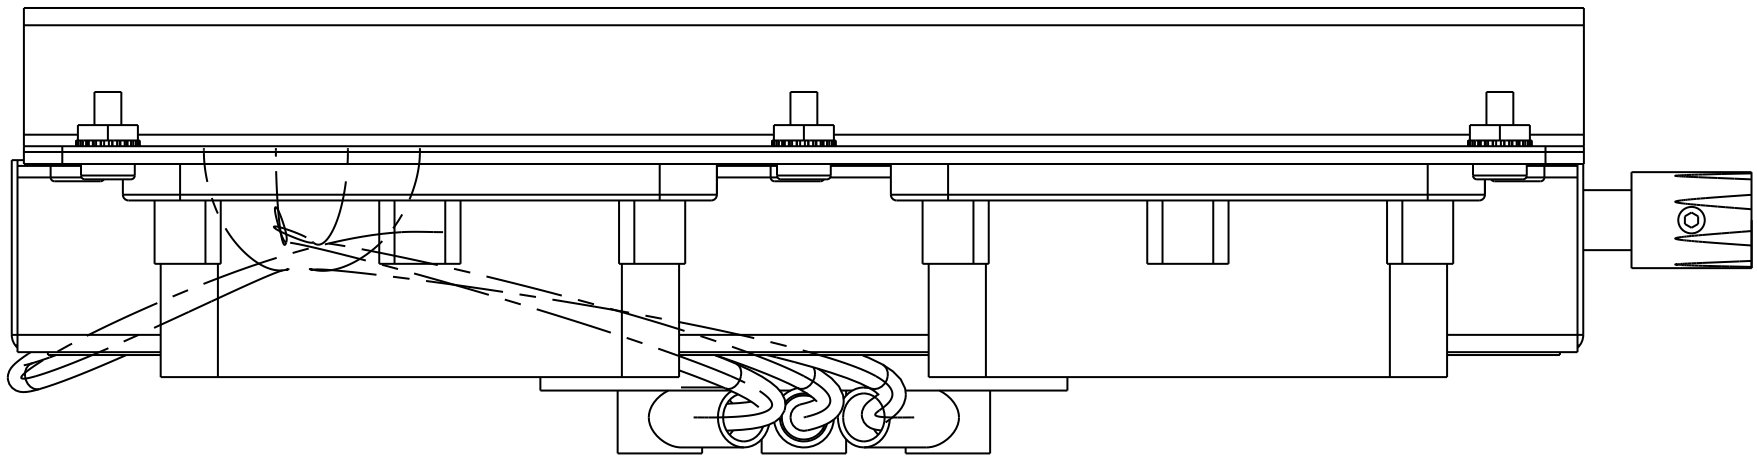

SCALE 1.000

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	PC BOARD	10749
2	1	INSULATING MEMBRANE, ECM SWITCH	10750
3	1	MOUNTING PLATE, ALUMINUM	10751
4	1	SWITCH, 78 POLE	10754
6	1	BACKING PLATE, ALUMINUM	10752
7	1	SWITCH COVER, ALUMINUM	10753
8	1	GROMMET, , MCMASTER CARR P/N 9307K21 OR EQUIV	9307K21
9	1	MODULE, DIODE, INSTRUMENT PANEL, FIREPUMP	9529
10	1	LEAD 10 AWG, COPPER, GXL INSULATION, RED COLOR	10748_L1
11	1	LEAD 10 AWG, COPPER, GXL INSULATION, BLACK COLOR	10748_L2
12	1	LEAD 10 AWG, COPPER, GXL INSULATION, BLACK COLOR	10748_L3
13	1	LEAD, 10 AWG, COPPER, GXL INSULATION, GREEN COLOR	10748_L4
14	11	NUT, HEX, NO 8-32 W/ RETENTION, WASHER	NUT-RETAINING_NO-8-32
15	2	NUT, HEX, NO 10-32 W/ RETENTION, WASHER	NUT-RETAINING_NO-10-32
16	11	SCREW, NO 8-32 X 3/8, MACHINE SCREW	SCREW_MACHINE_NO-8-32_X_38
17	2	SCREW, NO 10-32 X 5/8, MACHINE SCREW	SCREW_MACHINE_NO-10-32_X_625
18	24	SCREW, SELF-TAPPING, #6 MACHINE SCREW	SCREW_SELF-TAP_NO-6_X_38
19	1	DECAL, ECM A-B SWITCH, -	11025
21	3	BOOT, INSULATING, -.025" ENTRY, RED	11052
22	1	CONNECTOR, 50 PIN	DRC20-50P-01
23	1	CONNECTOR, 50 PIN	DRC20-50P-02
24	1	CONNECTOR, 50 PIN	DRC20-50P-03
25	1	CONNECTOR, 50 PIN	DRC20-50P-04
26	1	KNOB, 0.50 DIA, 0.25 BORE, MCMASTER #6094K71 OR EQUAL	13626

C

C

C

C

D

This document contains confidential and trade secret information. It is the property of Cummins NPower, LLC and is given to the recipient on condition. The recipient, by receiving and retaining of the document accepts the document is confidential and agrees to keep it confidential in writing by Cummins NPower, LLC. It is not to be used, copied, or any other way to be disclosed or made known to others. If not copy the document, please inform the sender, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT: Cummins NPower, LLC



CUMMINS NPOWER, LLC
CORPORATE OFFICE
1600 SUSKILAC ROAD
WHITE BEAR LAKE, MN
WWW.NPOWER.CUMMINS.COM

NPOWER SYSTEMS
DESIGN CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

REV	DESCRIPTION OF REVISION	REV BY	DATE
D	REV PER KNOB, ADDED COATING NOTE	DAVE N	30SEP2006
C	REVISED PER ECN 2006-192	S.DANFORTH	22SEP2006
B	RELEASE FOR PRODUCTION	S.DANFORTH	12JUL2006
A	PROTOTYPE DRAWING	DAVE N.	

ANGULAR DIMENSIONS IN	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	1:1, 2:1, 3:1, 4:1, 5:1, 6:1, 8:1, 10:1, 12:1, 15:1, 20:1, 25:1, 30:1, 40:1, 50:1, 60:1, 70:1, 80:1, 90:1, 100:1, 120:1, 150:1, 200:1, 250:1, 300:1, 400:1, 500:1, 600:1, 800:1, 1000:1	1:1, 2:1, 3:1, 4:1, 5:1, 6:1, 8:1, 10:1, 12:1, 15:1, 20:1, 25:1, 30:1, 40:1, 50:1, 60:1, 70:1, 80:1, 90:1, 100:1, 120:1, 150:1, 200:1, 250:1, 300:1, 400:1, 500:1, 600:1, 800:1, 1000:1

TITLE 1: ASSEMBLY, ECM SWITCH			
TITLE 2:			
DWG UNITS: IN/LB/S	DRAWN BY: SCOTT D	DATE: 21FEB2006	
EST WEIGHT: 6.709	SCALE: 1.000	DO NOT SCALE	SHEET 10F4
DRAWING NO: 10748		REV: D	

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	PC BOARD	10749
2	1	INSULATING MEMBRANE, ECM SWITCH	10750
3	1	MOUNTING PLATE, ALUMNUM	10751
4	1	SWITCH, 78 POLE	10754
6	24	SCREW, SELF-TAPPING, #6 MACHINE SCREW	SCREW_SELF-TAP_NO-6_X_38
7	1	KNOB, 0.50 DIA, 0.25 BORE, MCMASTER #6094K71 OR EQUAL	13626
22	1	CONNECTOR, 50 PIN	DRC20-50P-01
23	1	CONNECTOR, 50 PIN	DRC20-50P-02
24	1	CONNECTOR, 50 PIN	DRC20-50P-03
25	1	CONNECTOR, 50 PIN	DRC20-50P-04

Technical drawing of a 19-inch rack-mountable device, showing front, side, and rear views with callouts for dimensions and features.

Front View (Left): Shows the front panel with four large rectangular ports (two on the left, two on the right) and a central horizontal slot. Callouts include 25 (top left port), 23 (top right port), 22 (bottom left port), and 24 (bottom right port).

Side View (Middle): Shows the side profile of the device. Callouts include 3 (top edge), 6 (bottom edge), 2 (top port), 1 (bottom port), and 4 (central slot).

Rear View (Right): Shows the rear panel with a grid of holes. Callouts include (14) HOLES TO BE KEPT CLEAR OF CONFORMAL COATING and (24) SCREW HOLES TO BE KEPT CLEAR OF CONFORMAL COATING.

SCALE 1.000


<p>This document contains confidential and trade secret information in the property of Cummins IPower, LLC and is given to the recipient in confidence and for the sole purpose of the recipient's use in connection with the document in confidence and agrees that, except as authorized in writing by Cummins IPower, LLC, it shall not disclose the document or its contents to any third party, nor shall it make any copy of the document or its contents for confidential or trade secret information therein. (2) not copy the document, nor (3) disclose the document or its contents to any third party, nor shall it make any copy of the document or its contents for confidential or trade secret information therein, and (4) upon completion of the use to return the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT © Cummins IPower, LLC.</p>		<p>CUMMINS IPOWER, LLC CORPORATE OFFICE 1600 BUEHLER ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM</p>	<p>NPOWER SYSTEMS DESIGN CENTER 875 DEWILDE DRIVE DRAFT, WISCONSIN</p>
<p>TITLE 1: ASSEMBLY, ECM SWITCH</p>			

[illegible]

- 1) 13298 HARNESS, WIRE, SENSOR AND ACTUATOR
- 2) 13299 HARNESS, WIRE, ECM A
- 3) 13300 HARNESS, WIRE, ECM B
- 4) 13301 HARNESS, WIRE, OEM

[illegible]

TAGS	QTY	SUB	CATALOG	MFG	DESC
C12	1	1	1-928-403-968	BOSCH	CONNECTOR, 3 POSITION, BLACK, CODE 11
		3	1-928-300-599	BOSCH	SEAL, BLUE
		3	1-928-488-062	BOSCH	TERMINAL, SOCKET, GOLD
C1	1	1	DRC26-505-01	DEUTSCH	50 PIN, ECM CONNECTOR
		1	0528-001-5005	DEUTSCH	BACKSHELL, 90 DEGREE
		29	0462-201-3031	DEUTSCH	TERMINAL, SOCKET
		21	114017	DEUTSCH	PLUG, SEALING
C5	1	1	DT04-4P	DEUTSCH	CONNECTOR, 4 POSITION
		3	0460-202-18141	DEUTSCH	TERMINAL, PIN NICKEL, 16-18AWG
		1	W4P	DEUTSCH	WEDGE
		1	114017	DEUTSCH	PLUG, SEALING
C13	1	1	1-928-403-874	BOSCH	CONNECTOR, 2 POSITION, BLACK, CODE 1
		2	1-928-300-599	BOSCH	SEAL, BLUE
		2	1-928-488-062	BOSCH	TERMINAL, SOCKET, GOLD
C7, C9, C11	3	1	DTP06-4S-C015	DEUTSCH	CONNECTOR, 4 POSITION, PLUG
		4	0462-203-12141	DEUTSCH	TERMINAL, SOCKET, 12-14AWG
		1	WFP-4S	DEUTSCH	WEDGE, ORANGE
C2	1	1	54200212	FRAMATOME	CONNECTOR, 2 POS., KEY A, GREEN
		1	J8-1811-29-RWC	FRAMATOME	TERMINAL, SOCKET, TIN
		1	56038308	FRAMATOME	PLUG, CAVITY
		1	3681835	ELL-TRON	BOOT
C8	1	1	56038150	FRAMATOME	CONNECTOR, 3 POSITION, KEY B
		3	JTP-1811-084U-RWC	FRAMATOME	TERMINAL, SOCKET, GOLD
		1	3681835	ELL-TRON	BOOT
C6	1	1	56038152	FRAMATOME	CONNECTOR, 3 POSITION, KEY D
		3	JTP-1811-084U-RWC	FRAMATOME	TERMINAL, SOCKET, GOLD
		1	3681835	ELL-TRON	BOOT
C4	1	1	56038152	FRAMATOME	CONNECTOR, 3 POSITION, KEY D
		3	JTP-1811-084U-RWC	FRAMATOME	TERMINAL, SOCKET, GOLD
		1	3681835	FRAMATOME	BOOT
C3	1	1	12162194	PACKARD	CONNECTOR, 2 POSITION, METRI-PACK
		2	12124075	PACKARD	TERMINAL, SOCKET
		1	3656057	ELL-TRON	BOOT
C10	1	1	6099-0144	SUMITOMO	CONNECTOR, 4 POSITION, GRAY
		4	1410-0098	SUMITOMO	TERMINAL, GOLD, 18AWG
		4	7165-0063	SUMITOMO	SEAL, LIGHT BLUE, 18 AWG
		1	6920-0081	SUMITOMO	WEDGE, 4 POSITION, ORANGE
		1	3656095	ELL-TRON	BOOT
W1	1	1	30703	WAYTEK	TERMINAL, RING, #10, INSULATED
W2	1	1	30706	WAYTEK	TERMINAL, RING, 3/8", INSULATED

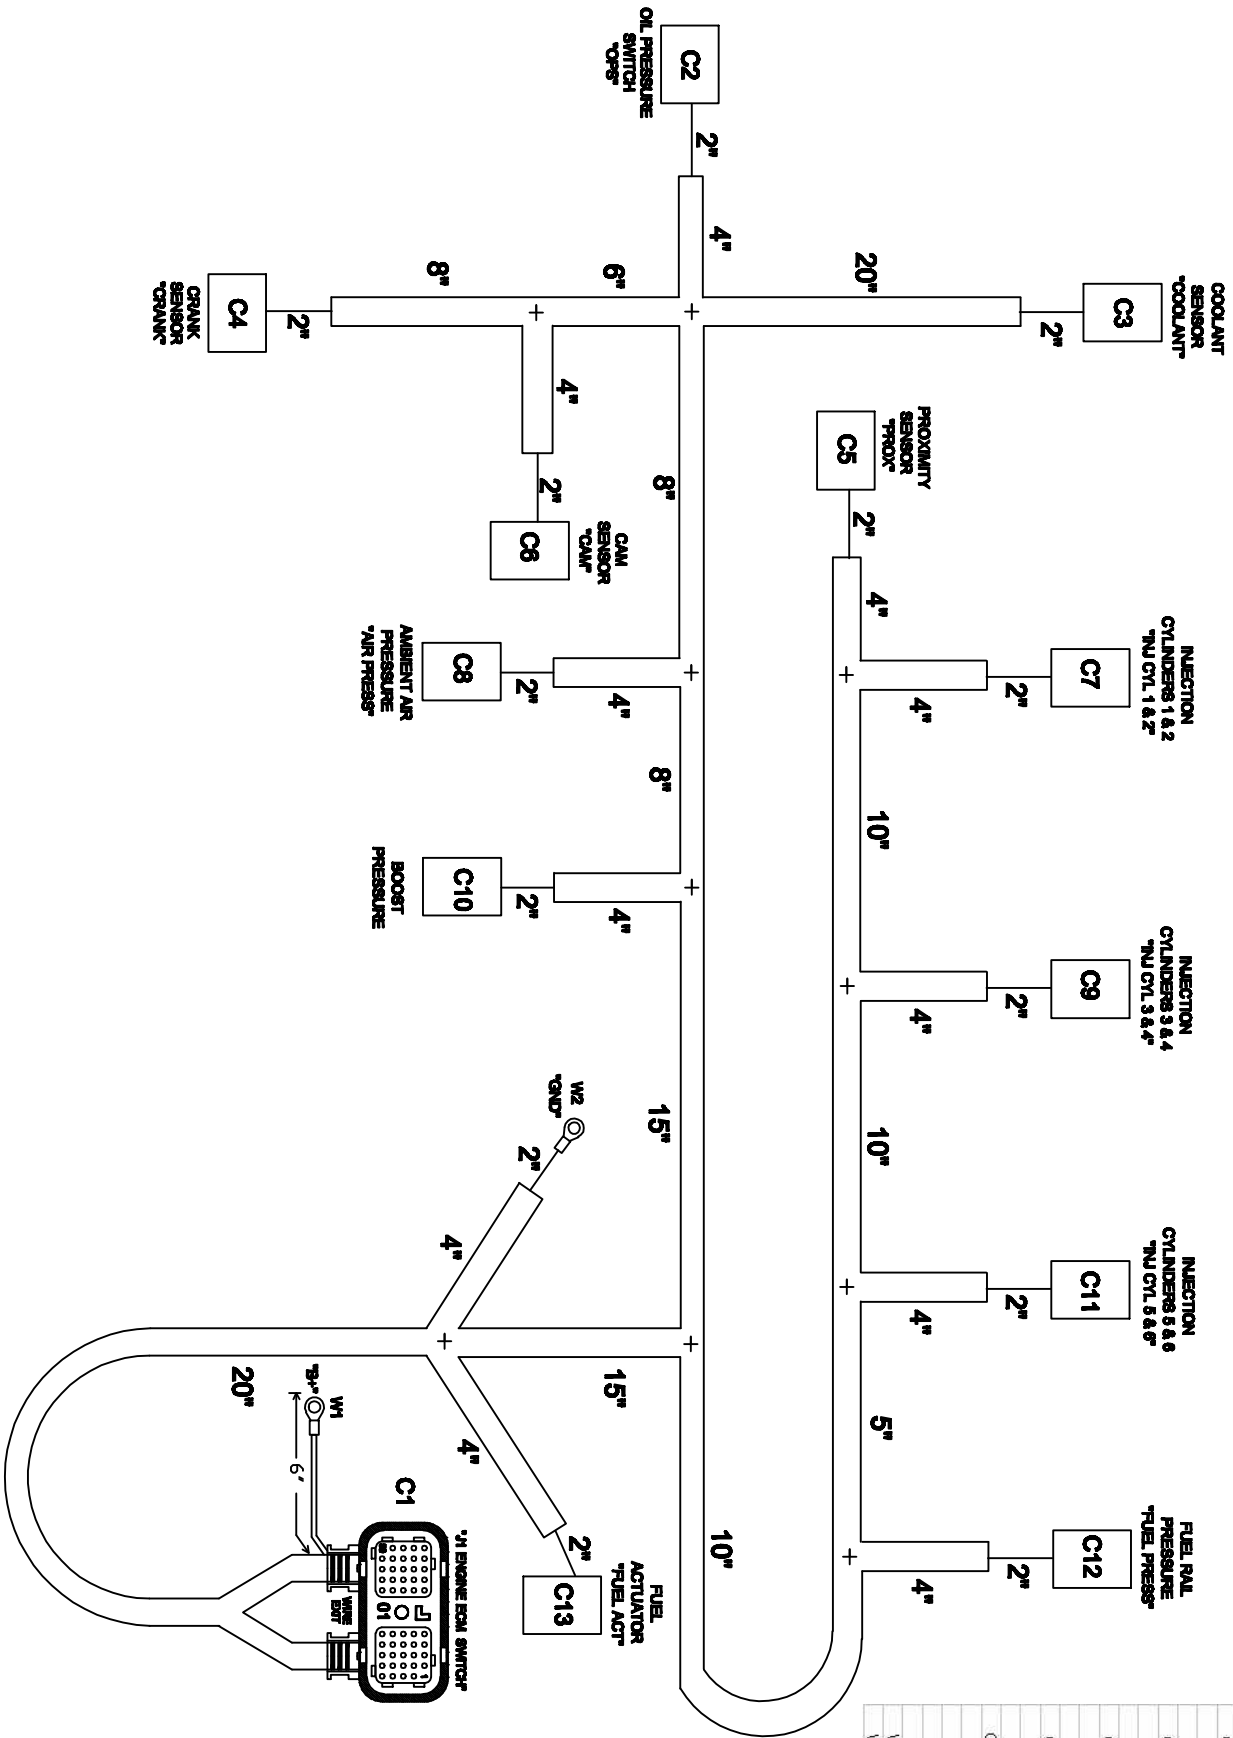

NOTE: Loom with black nylon braid w/ red tracers; 28 mil minimum.
Prominently label all connectors as "Indicated".

<small> This document contains confidential and trade secret information. It is the property of Cummins Power, LLC and is loaned to the recipient for information only. It is not to be distributed outside the recipient's organization. The recipient is authorized to use this information for the purpose of the project only. The recipient is not to be used for any other purpose. The recipient is to keep this information confidential and to return it to Cummins Power, LLC upon completion of the project. The recipient is to destroy this information upon completion of the project. The recipient is to keep this information confidential and to return it to Cummins Power, LLC upon completion of the project. The recipient is to destroy this information upon completion of the project. </small>		Cummins Power, LLC CORPORATE OFFICE 1600 BURNIE ROAD WHITE BEAR LAKE, MN WWW.CUMMINS.COM		ARCATA SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPT. WISCONSIN	
HARNESSES, WIRE, SENSOR AND ACTUATOR QSB6.7 FIRE PUMP		DWG UNITS: DWG UNITS:		DATE: DATE: 23 JULY 2008	
ANGULAR DIMENSIONS ± 1° THIRD ANGLE PROJECTION		SCALE: SCALE:		SHEET SHEET 10F2	
EST WEIGHT: EST WEIGHT:		SCALE: SCALE 10F2		DRAWING NO: DRAWING NO:	
APPD BY: APPD BY:		SCALE: SCALE		REV: REV:	


CIRCUIT #	FROM	PIN1	TO	PIN2	WIRECOLOR	WIRESIZE	WIRE TYPE	TERM 1	TERM 2	STAMP	TWISTED PAIRS
1	J2	47	J12	27	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CRANK SIG	TWIST
2	J2	49	J12	48	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CRANK RET	
3	J2	34	J12	16	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	SENSOR SUPPLY 3	
4	J2	35	J12	26	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CAM SIG	
5	J2	36	J12	25	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	FUEL PRESS SIG	TWIST
6	J2	37	J12	14	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	WIF SIG	
7	J2	38	J12	44	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	IMT PRESS SIG	
8	J2	39	J12	37	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	SENSOR SUPPLY 2	
9	J2	40	J12	23	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	IMT TEMP SIG	TWIST
10	J2	26	J12	47	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	SENSOR RET 2	
11	J2	27	J12	13	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	OIL PRESS SIG	
12	J2	28	J12	3	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	AMBIENT SIG	
13	J2	29	J12	15	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	COOLANT SIG	TWIST
14	J2	31	J12	33	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	SENSOR SUPPLY 1	
15	J2	15	J12	38	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	SENSOR RET 1	
16	J2	18	J12	17	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	OIL PRESS SW	
17	J2	20	J12	2	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	FUEL ACT SIG	TWIST
18	J2	19	J12	32	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	FUEL ACT RET	
19	J2	42	J12	1	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	LIFT PUMP SUPPLY	
20	J2	44	J12	11	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	LIFT PUMP RET	
21	J2	50	J12	45	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #1 OUT +	TWIST
22	J2	30	J12	53	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #1 OUT -	
23	J2	10	J12	54	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #2 OUT +	
24	J2	1	J12	51	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #2 OUT -	
25	J2	21	J12	55	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #3 OUT +	TWIST
26	J2	41	J12	52	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #3 OUT -	
27	J2	48	J12	56	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #4 OUT +	
28	J2	43	J12	58	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #4 OUT -	
29	J2	46	J12	46	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #5 OUT +	TWIST
30	J2	6	J12	60	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #5 OUT -	
31	J2	3	J12	57	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #6 OUT +	
32	J2	45	J12	59	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	CYL #6 OUT -	
33	J2	12	J11	12	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	PROX SIG	TWIST
34	J2	5	J11	43	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	STOP LAMP	
35	J2	25	J11	44	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	WARNING LAMP	
36	J2	14	J11	2	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	DIAG SW	
37	J2	4	J11	39	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	KEY SWITCH	TWIST
38	J2	24	SPL A	>	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	ECM RET	
38A	J11	4	SPL A	<	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	ISC 1 SW	
38B	J11	34	SPL A	<	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	ISC 1 FET	
39	J2	22	J11	25	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	DECREMENT SW	USE RAYCHEM 2019D0309 FOR J1939
40	J2	23	J11	24	WHITE	18 AWG	GXL	0462-201-2031	0462-201-2031	INCREMENT SW	
41	J10	A	J11	46	WHITE	18 AWG	J1939	0460-202-1631	0462-201-2031	YELLOW	
42	J10	B	J11	47	WHITE	18 AWG	J1939	0460-202-1631	0462-201-2031	GREEN	
43	J10	C	J11	37	WHITE	18 AWG	J1939	0460-202-1631	0462-201-2031	SHIELD	

REV	DESCRIPTION OF REVISION	BY	DATE
-----	-------------------------	----	------

[illegible]

- 1) 14427 HARNESS, WIRE, SENSOR AND ACTUATOR
- 2) 14428 HARNESS, WIRE, ECM A
- 3) 14429 HARNESS, WIRE, ECM B
- 4) 14430 HARNESS, WIRE, OEM

[illegible]

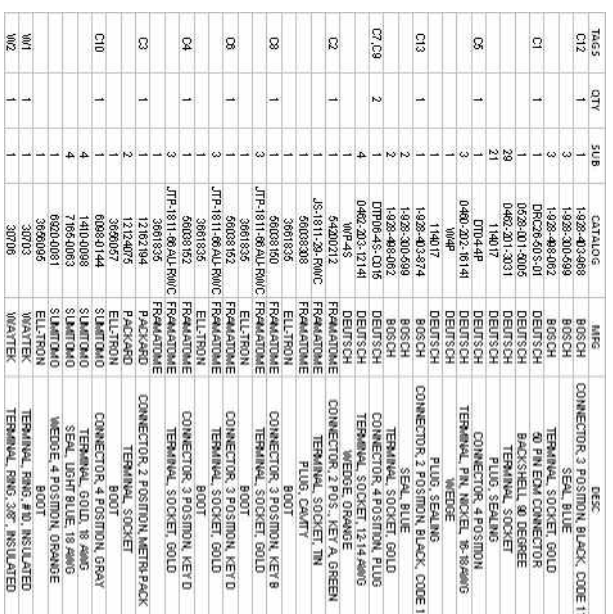


REV	DESCRIPTION OF REVISION	BY	DATE
-----	-------------------------	----	------

<p>THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF THE U.S. GOVERNMENT AND IS LOANED TO YOUR AGENCY/ORGANIZATION. IT IS TO BE USED FOR OFFICIAL BUSINESS ONLY AND IS NOT TO BE DISTRIBUTED OUTSIDE YOUR AGENCY/ORGANIZATION. IT IS TO BE RETURNED TO THE U.S. GOVERNMENT UPON REQUEST. IT IS TO BE DESTROYED 10 YEARS AFTER THE DATE OF ACQUISITION. IT IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT PERMISSION IN WRITING FROM THE U.S. GOVERNMENT. IT IS TO BE KEPT IN A SAFE PLACE AND NOT TO BE LOANED TO ANY OTHER AGENCY/ORGANIZATION. IT IS TO BE RETURNED TO THE U.S. GOVERNMENT UPON REQUEST. IT IS TO BE DESTROYED 10 YEARS AFTER THE DATE OF ACQUISITION. IT IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT PERMISSION IN WRITING FROM THE U.S. GOVERNMENT.</p>		<p>CHAMBER: REVERSED, LIT OPERATING PRESSURE: 100 PSI WIRE: 24 GAUGE, 100 FT</p>		<p>MECHAN SYSTEM OPERATING PRESSURE: 100 PSI LEAKAGE: MODERATE</p>	
<p>Fire Power</p>		<p>HARNESS, WIRE, SENSOR AND ACTUATOR</p>		<p>CS84.5 FIRE PUMP</p>	
<p>DWG. UNITS:</p>		<p>DESKIN: BT-KKAK</p>		<p>DATE: 21 JAN 2009</p>	
<p>APP. BY:</p>		<p>SCALE:</p>		<p>REV:</p>	
<p>EST. WEIGHT:</p>		<p>SCALE:</p>		<p>REV:</p>	
<p>DO NOT SHEET</p>		<p>DRAWING NO.:</p>		<p>REV:</p>	
<p>SCALE</p>		<p>10/2</p>		<p>14427</p>	
<p>THIRD ANGLE PROJECTION</p>		<p>1/8" = 1"</p>		<p>1/4" = 1"</p>	
<p>1/8" = 1"</p>		<p>1/4" = 1"</p>		<p>1/2" = 1"</p>	
<p>1/4" = 1"</p>		<p>1/2" = 1"</p>		<p>3/4" = 1"</p>	
<p>3/4" = 1"</p>		<p>1" = 1"</p>		<p>1 1/4" = 1"</p>	
<p>1 1/4" = 1"</p>		<p>1 1/2" = 1"</p>		<p>1 3/4" = 1"</p>	
<p>1 3/4" = 1"</p>		<p>2" = 1"</p>		<p>2 1/4" = 1"</p>	
<p>2 1/4" = 1"</p>		<p>2 1/2" = 1"</p>		<p>2 3/4" = 1"</p>	
<p>2 3/4" = 1"</p>		<p>3" = 1"</p>		<p>3 1/4" = 1"</p>	
<p>3 1/4" = 1"</p>		<p>3 1/2" = 1"</p>		<p>3 3/4" = 1"</p>	
<p>3 3/4" = 1"</p>		<p>4" = 1"</p>		<p>4 1/4" = 1"</p>	
<p>4 1/4" = 1"</p>		<p>4 1/2" = 1"</p>		<p>4 3/4" = 1"</p>	
<p>4 3/4" = 1"</p>		<p>5" = 1"</p>		<p>5 1/4" = 1"</p>	
<p>5 1/4" = 1"</p>		<p>5 1/2" = 1"</p>		<p>5 3/4" = 1"</p>	
<p>5 3/4" = 1"</p>		<p>6" = 1"</p>		<p>6 1/4" = 1"</p>	
<p>6 1/4" = 1"</p>		<p>6 1/2" = 1"</p>		<p>6 3/4" = 1"</p>	
<p>6 3/4" = 1"</p>		<p>7" = 1"</p>		<p>7 1/4" = 1"</p>	
<p>7 1/4" = 1"</p>		<p>7 1/2" = 1"</p>		<p>7 3/4" = 1"</p>	
<p>7 3/4" = 1"</p>		<p>8" = 1"</p>		<p>8 1/4" = 1"</p>	
<p>8 1/4" = 1"</p>		<p>8 1/2" = 1"</p>		<p>8 3/4" = 1"</p>	
<p>8 3/4" = 1"</p>		<p>9" = 1"</p>		<p>9 1/4" = 1"</p>	
<p>9 1/4" = 1"</p>		<p>9 1/2" = 1"</p>		<p>9 3/4" = 1"</p>	
<p>9 3/4" = 1"</p>		<p>10" = 1"</p>		<p>10 1/4" = 1"</p>	
<p>10 1/4" = 1"</p>		<p>10 1/2" = 1"</p>		<p>10 3/4" = 1"</p>	
<p>10 3/4" = 1"</p>		<p>11" = 1"</p>		<p>11 1/4" = 1"</p>	
<p>11 1/4" = 1"</p>		<p>11 1/2" = 1"</p>		<p>11 3/4" = 1"</p>	
<p>11 3/4" = 1"</p>		<p>12" = 1"</p>		<p>12 1/4" = 1"</p>	
<p>12 1/4" = 1"</p>		<p>12 1/2" = 1"</p>		<p>12 3/4" = 1"</p>	
<p>12 3/4" = 1"</p>		<p>13" = 1"</p>		<p>13 1/4" = 1"</p>	
<p>13 1/4" = 1"</p>		<p>13 1/2" = 1"</p>		<p>13 3/4" = 1"</p>	
<p>13 3/4" = 1"</p>		<p>14" = 1"</p>		<p>14 1/4" = 1"</p>	
<p>14 1/4" = 1"</p>		<p>14 1/2" = 1"</p>		<p>14 3/4" = 1"</p>	
<p>14 3/4" = 1"</p>		<p>15" = 1"</p>		<p>15 1/4" = 1"</p>	
<p>15 1/4" = 1"</p>		<p>15 1/2" = 1"</p>		<p>15 3/4" = 1"</p>	
<p>15 3/4" = 1"</p>		<p>16" = 1"</p>		<p>16 1/4" = 1"</p>	
<p>16 1/4" = 1"</p>		<p>16 1/2" = 1"</p>		<p>16 3/4" = 1"</p>	
<p>16 3/4" = 1"</p>		<p>17" = 1"</p>		<p>17 1/4" = 1"</p>	
<p>17 1/4" = 1"</p>		<p>17 1/2" = 1"</p>		<p>17 3/4" = 1"</p>	
<p>17 3/4" = 1"</p>		<p>18" = 1"</p>		<p>18 1/4" = 1"</p>	
<p>18 1/4" = 1"</p>		<p>18 1/2" = 1"</p>		<p>18 3/4" = 1"</p>	
<p>18 3/4" = 1"</p>		<p>19" = 1"</p>		<p>19 1/4" = 1"</p>	
<p>19 1/4" = 1"</p>		<p>19 1/2" = 1"</p>		<p>19 3/4" = 1"</p>	
<p>19 3/4" = 1"</p>		<p>20" = 1"</p>		<p>20 1/4" = 1"</p>	
<p>20 1/4" = 1"</p>		<p>20 1/2" = 1"</p>		<p>20 3/4" = 1"</p>	
<p>20 3/4" = 1"</p>		<p>21" = 1"</p>		<p>21 1/4" = 1"</p>	
<p>21 1/4" = 1"</p>		<p>21 1/2" = 1"</p>		<p>21 3/4" = 1"</p>	
<p>21 3/4" = 1"</p>		<p>22" = 1"</p>		<p>22 1/4" = 1"</p>	
<p>22 1/4" = 1"</p>		<p>22 1/2" = 1"</p>		<p>22 3/4" = 1"</p>	
<p>22 3/4" = 1"</p>		<p>23" = 1"</p>		<p>23 1/4" = 1"</p>	
<p>23 1/4" = 1"</p>		<p>23 1/2" = 1"</p>		<p>23 3/4" = 1"</p>	
<p>23 3/4" = 1"</p>		<p>24" = 1"</p>		<p>24 1/4" = 1"</p>	
<p>24 1/4" = 1"</p>		<p>24 1/2" = 1"</p>		<p>24 3/4" = 1"</p>	
<p>24 3/4" = 1"</p>		<p>25" = 1"</p>		<p>25 1/4" = 1"</p>	
<p>25 1/4" = 1"</p>		<p>25 1/2" = 1"</p>		<p>25 3/4" = 1"</p>	
<p>25 3/4" = 1"</p>		<p>26" = 1"</p>		<p>26 1/4" = 1"</p>	
<p>26 1/4" = 1"</p>		<p>26 1/2" = 1"</p>		<p>26 3/4" = 1"</p>	
<p>26 3/4" = 1"</p>		<p>27" = 1"</p>		<p>27 1/4" = 1"</p>	
<p>27 1/4" = 1"</p>		<p>27 1/2" = 1"</p>		<p>27 3/4" = 1"</p>	
<p>27 3/4" = 1"</p>		<p>28" = 1"</p>		<p>28 1/4" = 1"</p>	
<p>28 1/4" = 1"</p>		<p>28 1/2" = 1"</p>		<p>28 3/4" = 1"</p>	
<p>28 3/4" = 1"</p>		<p>29" = 1"</p>		<p>29 1/4" = 1"</p>	
<p>29 1/4" = 1"</p>		<p>29 1/2" = 1"</p>		<p>29 3/4" = 1"</p>	
<p>29 3/4" = 1"</p>		<p>30" = 1"</p>		<p>30 1/4" = 1"</p>	
<p>30 1/4" = 1"</p>		<p>30 1/2" = 1"</p>		<p>30 3/4" = 1"</p>	
<p>30 3/4" = 1"</p>		<p>31" = 1"</p>		<p>31 1/4" = 1"</p>	
<p>31 1/4" = 1"</p>		<p>31 1/2" = 1"</p>		<p>31 3/4" = 1"</p>	
<p>31 3/4" = 1"</p>		<p>32" = 1"</p>		<p>32 1/4" = 1"</p>	
<p>32 1/4" = 1"</p>		<p>32 1/2" = 1"</p>		<p>32 3/4" = 1"</p>	
<p>32 3/4" = 1"</p>		<p>33" = 1"</p>		<p>33 1/4" = 1"</p>	
<p>33 1/4" = 1"</p>		<p>33 1/2" = 1"</p>		<p>33 3/4" = 1"</p>	
<p>33 3/4" = 1"</p>		<p>34" = 1"</p>		<p>34 1/4" = 1"</p>	
<p>34 1/4" = 1"</p>		<p>34 1/2" = 1"</p>		<p>34 3/4" = 1"</p>	
<p>34 3/4" = 1"</p>		<p>35" = 1"</p>		<p>35 1/4" = 1"</p>	
<p>35 1/4" = 1"</p>		<p>35 1/2" = 1"</p>		<p>35 3/4" = 1"</p>	
<p>35 3/4" = 1"</p>		<p>36" = 1"</p>		<p>36 1/4" = 1"</p>	
<p>36 1/4" = 1"</p>		<p>36 1/2" = 1"</p>		<p>36 3/4" = 1"</p>	
<p>36 3/4" = 1"</p>		<p>37" = 1"</p>		<p>37 1/4" = 1"</p>	
<p>37 1/4" = 1"</p>		<p>37 1/2" = 1"</p>		<p>37 3/4" = 1"</p>	
<p>37 3/4" = 1"</p>		<p>38" = 1"</p>		<p>38 1/4" = 1"</p>	
<p>38 1/4" = 1"</p>		<p>38 1/2" = 1"</p>		<p>38 3/4" = 1"</p>	
<p>38 3/4" = 1"</p>		<p>39" = 1"</p>		<p>39 1/4" = 1"</p>	
<p>39 1/4" = 1"</p>		<p>39 1/2" = 1"</p>		<p>39 3/4" = 1"</p>	
<p>39 3/4" = 1"</p>		<p>40" = 1"</p>		<p>40 1/4" = 1"</p>	
<p>40 1/4" = 1"</p>		<p>40 1/2" = 1"</p>		<p>40 3/4" = 1"</p>	
<p>40 3/4" = 1"</p>		<p>41" = 1"</p>		<p>41 1/4" = 1"</p>	
<p>41 1/4" = 1"</p>		<p>41 1/2" = 1"</p>		<p>41 3/4" = 1"</p>	
<p>41 3/4" = 1"</p>		<p>42" = 1"</p>		<p>42 1/4" = 1"</p>	
<p>42 1/4" = 1"</p>		<p>42 1/2" = 1"</p>		<p>42 3/4" = 1"</p>	
<p>42 3/4" = 1"</p>		<p>43" = 1"</p>		<p>43 1/4" = 1"</p>	
<p>43 1/4" = 1"</p>		<p>43 1/2" = 1"</p>		<p>43 3/4" = 1"</p>	
<p>43 3/4" = 1"</p>		<p>44" = 1"</p>		<p>44 1/4" = 1"</p>	
<p>44 1/4" = 1"</p>		<p>44 1/2" = 1"</p>		<p>44 3/4" = 1"</p>	
<p>44 3/4" = 1"</p>		<p>45" = 1"</p>		<p>45 1/4" = 1"</p>	
<p>45 1/4" = 1"</p>		<p>45 1/2" = 1"</p>		<p>45 3/4" = 1"</p>	
<p>45 3/4" = 1"</p>		<p>46" = 1"</p>		<p>46 1/4" = 1"</p>	
<p>46 1/4" = 1"</p>		<p>46 1/2" = 1"</p>		<p>46 3/4" = 1"</p>	
<p>46 3/4" = 1"</p>		<p>47" = 1"</p>		<p>47 1/4" = 1"</p>	
<p>47 1/4" = 1"</p>		<p>47 1/2" = 1"</p>		<p>47 3/4" = 1"</p>	
<p>47 3/4" = 1"</p>		<p>48" = 1"</p>		<p>48 1/4" = 1"</p>	
<p>48 1/4" = 1"</p>		<p>48 1/2" = 1"</p>		<p>48 3/4" = 1"</p>	
<p>48 3/4" = 1"</p>		<p>49" = 1"</p>		<p>49 1/4" = 1"</p>	
<p>49 1/4" = 1"</p>		<p>49 1/2" = 1"</p>		<p>49 3/4" = 1"</p>	
<p>49 3/4" = 1"</p>		<p>50" = 1"</p>		<p>50 1/4" = 1"</p>	
<p>50 1/4" = 1"</p>		<p>50 1/2" = 1"</p>		<p>50 3/4" = 1"</p>	
<p>50 3/4" = 1"</p>		<p>51" = 1"</p>		<p>51 1/4" = 1"</p>	
<p>51 1/4" = 1"</p>		<p>51 1/2" = 1"</p>		<p>51 3/4" = 1"</p>	
<p>51 3/4" = 1"</p>		<p>52" = 1"</p>		<p>52 1/4" = 1"</p>	
<p>52 1/4" = 1"</p>		<p>52 1/2" = 1"</p>		<p>52 3/4" = 1"</p>	
<p>52 3/4" = 1"</p>		<p>53" = 1"</p>		<p>53 1/4" = 1"</p>	
<p>53 1/4" = 1"</p>		<p>53 1/2" = 1"</p>		<p>53 3/4" = 1"</p>	
<p>53 3/4" = 1"</p>		<p>54" = 1"</p>		<p>54 1/4" = 1"</p>	
<p>54 1/4" = 1"</p>		<p>54 1/2" = 1"</p>		<p>54 3/4" = 1"</p>	
<p>54 3/4" = 1"</p>		<p>55" = 1"</p>		<p>55 1/4" = 1"</p>	
<p>55 1/4" = 1"</p>		<p>55 1/2" = 1"</p>		<p>55 3/4" = 1"</p>	
<p>55 3/4" = 1"</p>		<p>56" = 1"</p>		<p>56 1/4" = 1"</p>	
<p>56 1/4" = 1"</p>		<p>56 1/2" = 1"</p>		<p>56 3/4" = 1"</p>	
<p>56 3/4" = 1"</p>		<p>57" = 1"</p>		<p>57 1/4" = 1"</p>	
<p>57 1/4" = 1"</p>		<p>57 1/2" = 1"</p>		<p>57 3/4" = 1"</p>	
<p>57 3/4" = 1"</p>		<p>58" = 1"</p>		<p>58 1/4" = 1"</p>	
<p>58 1/4" = 1"</p>		<p>58 1/2" = 1"</p>		<p>58 3/4" = 1"</p>	
<p>58 3/4" = 1"</p>		<p>59" = 1"</p>		<p>59 1/4" = 1"</p>	
<p>59 1/4" = 1"</p>		<p>59 1/2" = 1"</p>		<p>59 3/4" = 1"</p>	
<p>59 3/4" = 1"</p>		<p>60" = 1"</p>		<p>60 1/4" = 1"</p>	
<p>60 1/4" = 1"</p>		<p>60 1/2" = 1"</p>		<p>60 3/4" = 1"</p>	
<p>60 3/4" = 1"</p>		<p>61" = 1"</p>		<p>61 1/4" = 1"</p>	
<p>61 1/4" = 1"</p>		<p>61 1/2" = 1"</p>		<p>61 3/4" = 1"</p>	
<p>61 3/4" = 1"</p>		<p>62" = 1"</p>		<p>62 1/4" = 1"</p>	
<p>62 1/4" = 1"</p>		<p>62 1/2" = 1"</p>		<p>62 3/4" = 1"</p>	
<p>62 3/4" = 1"</p>		<p>63" = 1"</p>		<p>63 1/4" = 1"</p>	
<p>63 1/4" = 1"</p>		<p>63 1/2" = 1"</p>		<p>63 3/4" = 1"</p>	
<p>63 3/4" = 1"</p>		<p>64" = 1"</p>		<p>64 1/4" = 1"</p>	
<p>64 1/4" = 1"</p>		<p>64 1/2" = 1"</p>		<p>64 3/4" = 1"</p>	
<p>64 3/4" = 1"</p>		<p>65" = 1"</p>		<p>65 1/4" = 1"</p>	
<p>65 1/4" = 1"</p>		<p>65 1/2" = 1"</p>		<p>65 3/4" = 1"</p>	
<p>65 3/4" = 1"</p>		<p>66" = 1"</p>		<p>66 1/4" = 1"</p>	
<p>66 1/4" = 1"</p>		<p>66 1/2" = 1"</p>		<p>66 3/4" = 1"</p>	
<p>66 3/4" = 1"</p>		<p>67" = 1"</p>		<p>67 1/4" = 1"</p>	
<p>67 1/4" = 1"</p>		<p>67 1/2" = 1"</p>		<p>67 3/4" = 1"</p>	
<p>67 3/4" = 1"</p>		<p>68" = 1"</p>		<p>68 1/4" = 1"</p>	
<p>68 1/4" = 1"</p>		<p>68 1/2" = 1"</p>		<p>68 3/4" = 1"</p>	
<p>68 3/4" = 1"</p>		<p>69" = 1"</p>		<p>69 1/4" = 1"</p>	
<p>69 1/4" = 1"</p>		<p>69 1/2" = 1"</p>		<p>69 3/4" = 1"</p>	
<p>69 3/4" = 1"</p>		<p>70" = 1"</p>		<p>70 1/4" = 1"</p>	
<p>70 1/4" = 1"</p>		<p>70 1/2" = 1"</p>		<p>70 3/4" = 1"</p>	
<p>70 3/4" = 1"</p>		<p>71" = 1"</p>		<p>71 1/4" = 1"</p>	
<p>71 1/4" = 1"</p>		<p>71 1/2" = 1"</p>		<p>71 3/4" = 1"</p>	
<p>71 3/4" = 1"</p>		<p>72" = 1"</p>		<p>72 1/4" = 1"</p>	
<p>72 1/4" = 1"</p>		<p>72 1/2" = 1"</p>		<p>72 3/4" = 1"</p>	
<p>72 3/4" = 1"</p>		<p>73" = 1"</p>		<p>73 1/4" = 1"</p>	
<p>73 1/4" = 1"</p>		<p>73 1/2" = 1"</p>		<p>73 3/4" = 1"</p>	
<p>73 3/4" = 1"</p>		<p>74" = 1"</p>		<p>74 1/4" = 1"</p>	
<p>74 1/4" = 1"</p>		<p>74 1/2" = 1"</p>		<p>74 3/4" = 1"</p>	
<p>74 3/4" = 1"</p>		<p>75" = 1"</p>		<p>75 1/4" = 1"</p>	
<p>75 1/4" = 1"</p>		<p>75 1/2" = 1"</p>		<p>75 3/4" = 1"</p>	
<p>75 3/4" = 1"</p>		<p>76" = 1"</p>		<p>76 1/4" = 1"</p>	
<p>76 1/4" = 1"</p>		<p>76 1/2" = 1"</p>		<p>76 3/4" = 1"</p>	
<p>76 3/4" = 1"</p>		<p>77" = 1"</p>		<p>77 1/4" = 1"</p>	
<p>77 1/4" = 1"</p>		<p>77 1/2" = 1"</p>		<p>77 3/4" = 1"</p>	
<p>77 3/4" = 1"</p>		<p>78" = 1"</p>		<p>78 1/4" = 1"</p>	
<p>78 1/4" = 1"</p>		<p>78 1/2" = 1"</p>		<p>78 3/4" = 1"</p>	
<p>78 3/4" = 1"</p>		<p>79" = 1"</p>		<p>79 1/4" = 1"</p>	
<p>79 1/4" = 1"</p>		<p>79 1/2" = 1"</p>		<p>79 3/4" = 1"</p>	
<p>79 3/4" = 1"</p>		<p>80" = 1"</p>		<p>80 1/4" = 1"</p>	
<p>80 1/4" = 1"</p>		<p>80 1/2" = 1"</p>		<p>80 3/4" = 1"</p>	
<p>80 3/4" = 1"</p>		<p>81" = 1"</p>		<p>81 1/4" = 1"</p>	
<p>81 1/4" = 1"</p>		<p>81 1/2" = 1"</p>		<p>81 3/4" = 1"</p>	
<p>81 3/4" = 1"</p>		<p>82" = 1"</p>		<p>82 1/4" = 1"</p>	
<p>82 1/4" = 1"</p>		<p>82 1/2" = 1"</p>		<p>82 3/4" = 1"</p>	
<p>82 3/4" = 1"</p>		<p>83" = 1"</p>		<p>83 1/4" = 1"</p>	
<p>83 1/4" = 1"</p>		<p>83 1/2" = 1"</p>		<p>83 3/4" = 1"</p>	
<p>83 3/4" = 1"</p>		<p>84" = 1"</p>		<p>84 1/4" = 1"</p>	
<p>84 1/4" = 1"</p>		<p>84 1/2" = 1"</p>		<p>84 3/4" = 1"</p>	
<p>84 3/4" = 1"</p>		<p>85" = 1"</p>		<p>85 1/4" = 1"</p>	
<p>85 1/4" = 1"</p>		<p>85 1/2" = 1"</p>			

NOTE: Loom with black nylon braid w/ red tracers; 28 mil minimum.
Prominently label all connectors as "Indicated".

CIRCUIT #	FROM	PIN1	TO	PIN2	WIRECOLOR	WIRESIZE	WIRE TYPE	TERM 1	TERM 2	STAMP	TWISTED PAIRS
3	C1	1	C7	3	WHITE	18 AWG	GXL	0462-201-2031	0462-203-12141	CYL #1 OUT +	TWIST
4	C1	3	C7	4	WHITE	18 AWG	GXL	0462-201-2031	0462-203-12141	CYL #1 OUT -	TWIST
5	C1	46	C7	2	WHITE	18 AWG	GXL	0462-201-2031	0462-203-12141	CYL #2 OUT +	TWIST
6	C1	50	C7	1	WHITE	18 AWG	GXL	0462-201-2031	0462-203-12141	CYL #2 OUT -	TWIST
7	C1	39	C13	1	WHITE	18 AWG	GXL	0462-201-2031	1-928-498-062	FUEL ACT RET	TWIST
8	C1	40	C13	2	WHITE	18 AWG	GXL	0462-201-2031	1-928-498-062	FUEL ACT OUT	TWIST
9	C1	15	C8	3	WHITE	18 AWG	GXL	0462-201-2031	JTP-1811-66AU-RWC	CAM SIG	TWIST w/ CIRCUITS 30C & 31C
10	C1	28	C3	B	WHITE	18 AWG	GXL	0462-201-2031	12124075	COOLANT SIG	
11	C1	7	C4	3	WHITE	18 AWG	GXL	0462-201-2031	JTP-1811-66AU-RWC	CRANK SIG	
12	C1	9	C4	2	WHITE	18 AWG	GXL	0462-201-2031	JTP-1811-66AU-RWC	CRANK RET	TWIST
13	C1	14	C4	1	WHITE	18 AWG	GXL	0462-201-2031	JTP-1811-66AU-RWC	CRANK SUPPLY	
14	C1	41	C9	3	WHITE	18 AWG	GXL	0462-201-2031	0462-203-12141	CYL #3 OUT +	TWIST
15	C1	43	C9	4	WHITE	18 AWG	GXL	0462-201-2031	0462-203-12141	CYL #3 OUT -	
16	C1	8	C9	2	WHITE	18 AWG	GXL	0462-201-2031	0462-203-12141	CYL #4 OUT +	TWIST
17	C1	10	C9	1	WHITE	18 AWG	GXL	0462-201-2031	0462-203-12141	CYL #4 OUT -	
18	C1	28	C8	3	WHITE	18 AWG	GXL	0462-201-2031	JTP-1811-66AU-RWC	AMBIENT SIG	
19	C1	18	C10	1	WHITE	18 AWG	GXL	0462-201-2031	1410-0098	BOOST SIG	
20	C1	20	C10	3	WHITE	18 AWG	GXL	0462-201-2031	1410-0098	IMT SIG	
21	C1	38	C2	1	WHITE	18 AWG	GXL	0462-201-2031	JTP-1811-66AU-RWC	OIL PRESS SIG	
22	W1		C5	3	WHITE	18 AWG	GXL	30703	0460-202-16141	PROX SUPPLY	TWIST
23	C1	12	C5	2	WHITE	18 AWG	GXL	0462-201-2031	0460-202-16141	PROX SIG	
24	W2		C5	1	WHITE	18 AWG	GXL	30706	0460-202-16141	PROX RET	
25	C1	16	C12	2	WHITE	18 AWG	GXL	0462-201-2031	1-928-498-062	FUEL PRESS SIG	
26	C1	19	SPL A	>	WHITE	18 AWG	GXL	0462-201-2031		SENSOR SUPPLY 2	
26A	C10	2	SPL A	<	WHITE	18 AWG	GXL	1410-0098		BOOST SUPPLY	
26B	C12	3	SPL A	<	WHITE	18 AWG	GXL	1-928-498-062		FUEL PRESS SUPPLY	
26C	C6	1	SPL A	<	WHITE	18 AWG	GXL	JTP-1811-66AU-RWC		CAM SUPPLY	TWIST w/ CIRCUITS 9 & 31C
27	C1	26	SPL B	>	WHITE	18 AWG	GXL	0462-201-2031		SENSOR RET 2	
27A	C10	4	SPL B	<	WHITE	18 AWG	GXL	1410-0098		BOOST RET	
27B	C12	1	SPL B	<	WHITE	18 AWG	GXL	1-928-498-062		FUEL PRESS RET	
27C	C6	2	SPL B	<	WHITE	18 AWG	GXL	JTP-1811-66AU-RWC		CAM RET	TWIST w/ CIRCUITS 30C & 9
28	C1	31	SPL C	>	WHITE	18 AWG	GXL	0462-201-2031		SENSOR SUPPLY 1	
28A	C8	1	SPL C	<	WHITE	18 AWG	GXL	JTP-1811-66AU-RWC		AMBIENT SUPPLY	
29	C1	35	SPL D	>	WHITE	18 AWG	GXL	0462-201-2031		SENSOR RET 1	
29A	C8	2	SPL D	<	WHITE	18 AWG	GXL	JTP-1811-66AU-RWC		AMBIENT RET	
29B	C3	A	SPL D	<	WHITE	18 AWG	GXL	12124075		COOLANT RET	

REV DESCRIPTION OF REVISION BY DATE



Fire Power

CRANKING SYSTEMS, LLC
1000 INDUSTRIAL BLVD
WILMINGTON, DE 19804
WWW.FIREPOWERDE.COM

DESIGN CENTER
DESIGN CENTER
DESIGN CENTER

DATE: 21 JAN 2009

DRAWN BY: KKK

DATE: 21 JAN 2009

APPD BY:

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009

DATE:

DO NOT SCALE

SHEET 14427

DRAWING NO. REV:

EST WEIGHT: SCALE

SCALE 2072

14427

DATE: 21 JAN 2009


DATE:

DO NOT SCALE

SHEET 14427



DRAWING NO. REV

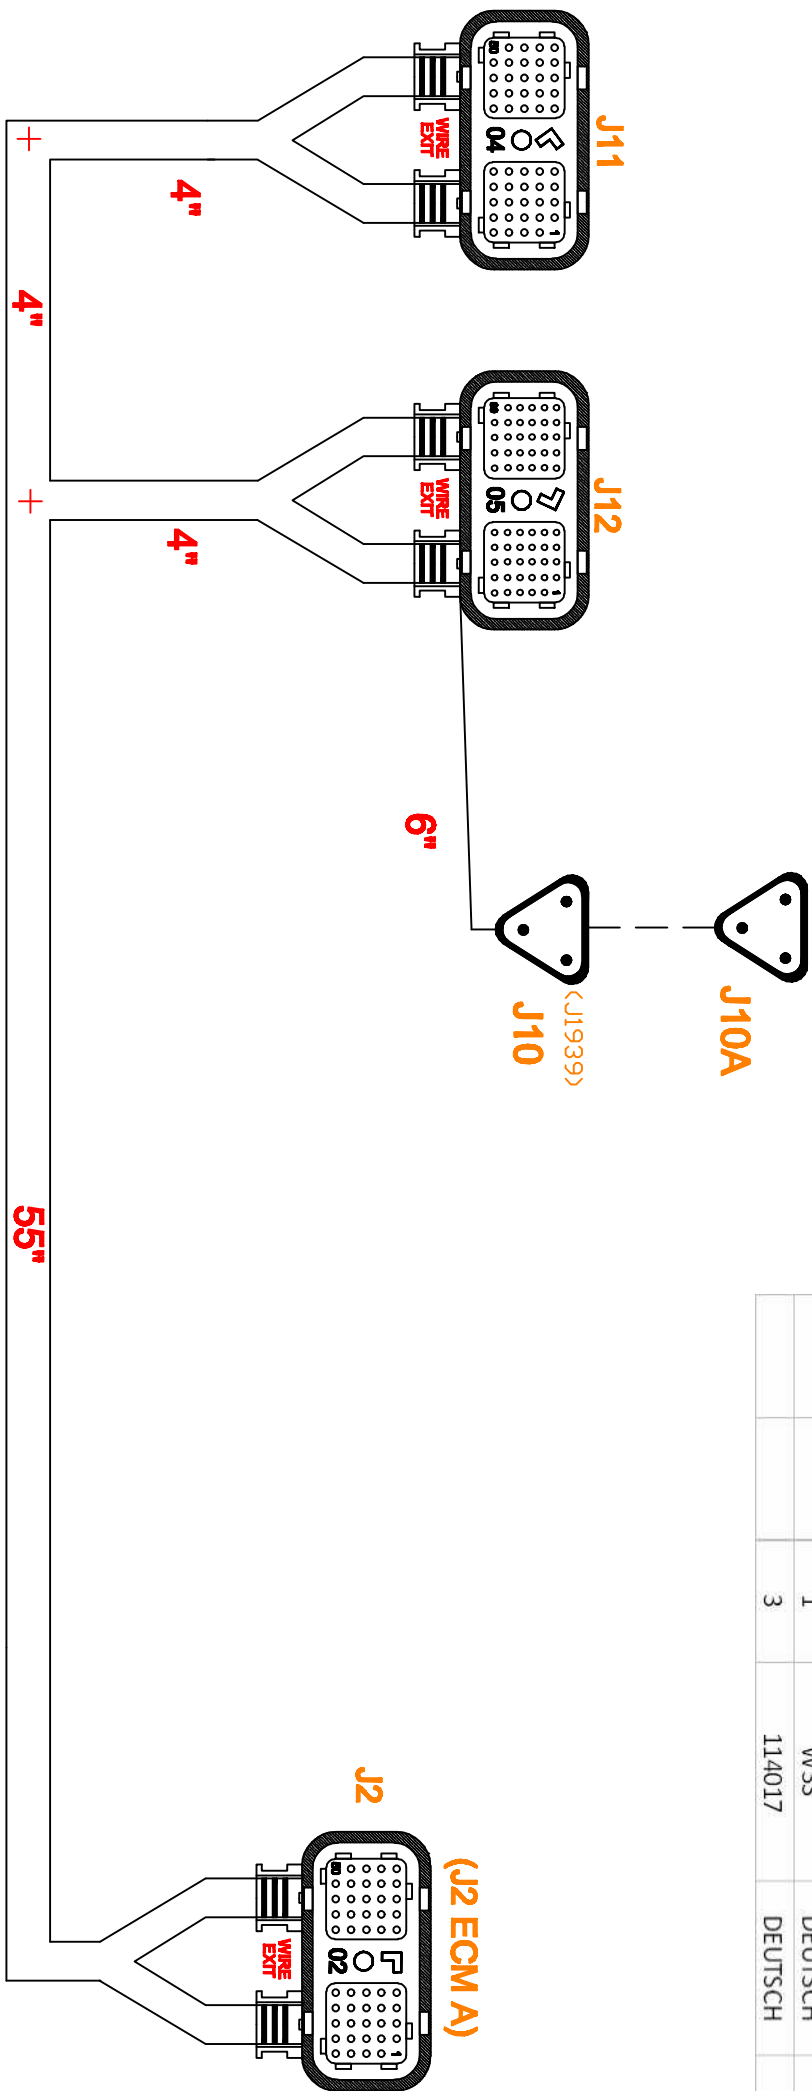TAGS	QTY	SUB	CATALOG	MFG	DESC
J12	1	1	DRC26-50S-02	DEUTSCH	CONNECTOR, 50 POSITION, ECM
		1	0528-001-5005	DEUTSCH	BACKSHELL, 90 DEGREE
		40	0462-201-3031	DEUTSCH	TERMINAL, SOCKET
		10	114017	DEUTSCH	PLUG, SEALING
J11	1	1	DRC26-50S-04	DEUTSCH	CONNECTOR, 50 POSITION, ECM
		1	0528-001-5005	DEUTSCH	BACKSHELL, 90 DEGREE
		12	0462-201-3031	DEUTSCH	TERMINAL, SOCKET
		38	114017	DEUTSCH	PLUG, SEALING
J12	1	1	DRC26-60S-05	DEUTSCH	CONNECTOR, 60 POSITION, ECM
		1	0528-002-6005	DEUTSCH	BACKSHELL
		32	0462-201-3031	DEUTSCH	TERMINAL, SOCKET
		28	114017	DEUTSCH	PLUG, SEALING
J10	1	1	DT04-3P	DEUTSCH	CONNECTOR, J1939
		1	W3P	DEUTSCH	WEDGE
		3	0460-202-1631	DEUTSCH	TERMINAL, PIN, GOLD
J10A	1	1	DT06-3S	DEUTSCH	CONNECTOR, 3 POSITION, J1939
		1	W3S	DEUTSCH	WEDGE
		3	114017	DEUTSCH	PLUG, SEALING




NOTE: Loom with black nylon braid w/ red tracers; 28 mil minimum...
Prominently label all connectors as "indicated".

[illegible]

 THIRD ANGLE PROJECTION		 Fire Power		CLAIMING OFFICE, LLC CORPORATE OFFICE 10000 W. 10TH AVE. WEST BEAR LAKE, UT 84053 WWW.BEARLAKE.CLAIMING.COM		INCHER SYSTEMS DESIGN CENTER 9000 E. 10TH AVE. DEERFIELD, WISCONSIN	
This drawing is unclassified and contains neither recommendations nor conclusions of the National Institute of Standards and Technology. It has been prepared by the contractor under contract to the National Institute of Standards and Technology. It is made available for copying and reproduction at no charge. It is the property of the National Institute of Standards and Technology and is loaned to your organization. It and its contents are not to be distributed outside your organization.				HARNESSE, WIRE, ECM A QSR4.5 FIRE PUMP			
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:		DIMENSIONAL DIMENSIONS ± .1		DIMENSIONAL DIMENSIONS ± .1		DATE: 21 JAN 2009	
INCHES DIMENSIONS ± .1		METRIC DIMENSIONS ± .1		DWG UNITS:		DRAWN BY: KAK	
EST WEIGHT:		SCALE:		DO NOT SCALE		SHEET 10F2	
SCALE:		10F2		DRAWING NO: 14428		REV:	

TAGS	QTY	SUB	CATALOG	MFG	DESC
J3	1	1	DRC26-50S-03	DEUTSCH	CONNECTOR, 50 POSITION, ECM
		1	0528-001-5005	DEUTSCH	BACKSHELL, 90 DEGREE
		42	0462-201-3031	DEUTSCH	TERMINAL, SOCKET
		8	114017	DEUTSCH	PLUG, SEALING
J16	1	1	DRC26-50S-04	DEUTSCH	CONNECTOR, 50 POSITION, ECM
		1	0528-001-5005	DEUTSCH	BACKSHELL, 90 DEGREE
		14	0462-201-3031	DEUTSCH	TERMINAL, SOCKET
		36	114017	DEUTSCH	PLUG, SEALING
J17	1	1	DRC26-60S-05	DEUTSCH	CONNECTOR, 60 POSITION, ECM
		1	0528-002-6005	DEUTSCH	BACKSHELL
		32	0462-201-3031	DEUTSCH	TERMINAL, SOCKET
		28	114017	DEUTSCH	PLUG, SEALING
J15	1	1	DT04-3P	DEUTSCH	CONNECTOR, J1939
		1	W3P	DEUTSCH	WEDGE
		3	0460-202-1631	DEUTSCH	TERMINAL, PIN, GOLD
J15A	1	1	DT06-3S	DEUTSCH	CONNECTOR, 3 POSITION, J1939
		1	W3S	DEUTSCH	WEDGE
		3	114017	DEUTSCH	PLUG, SEALING

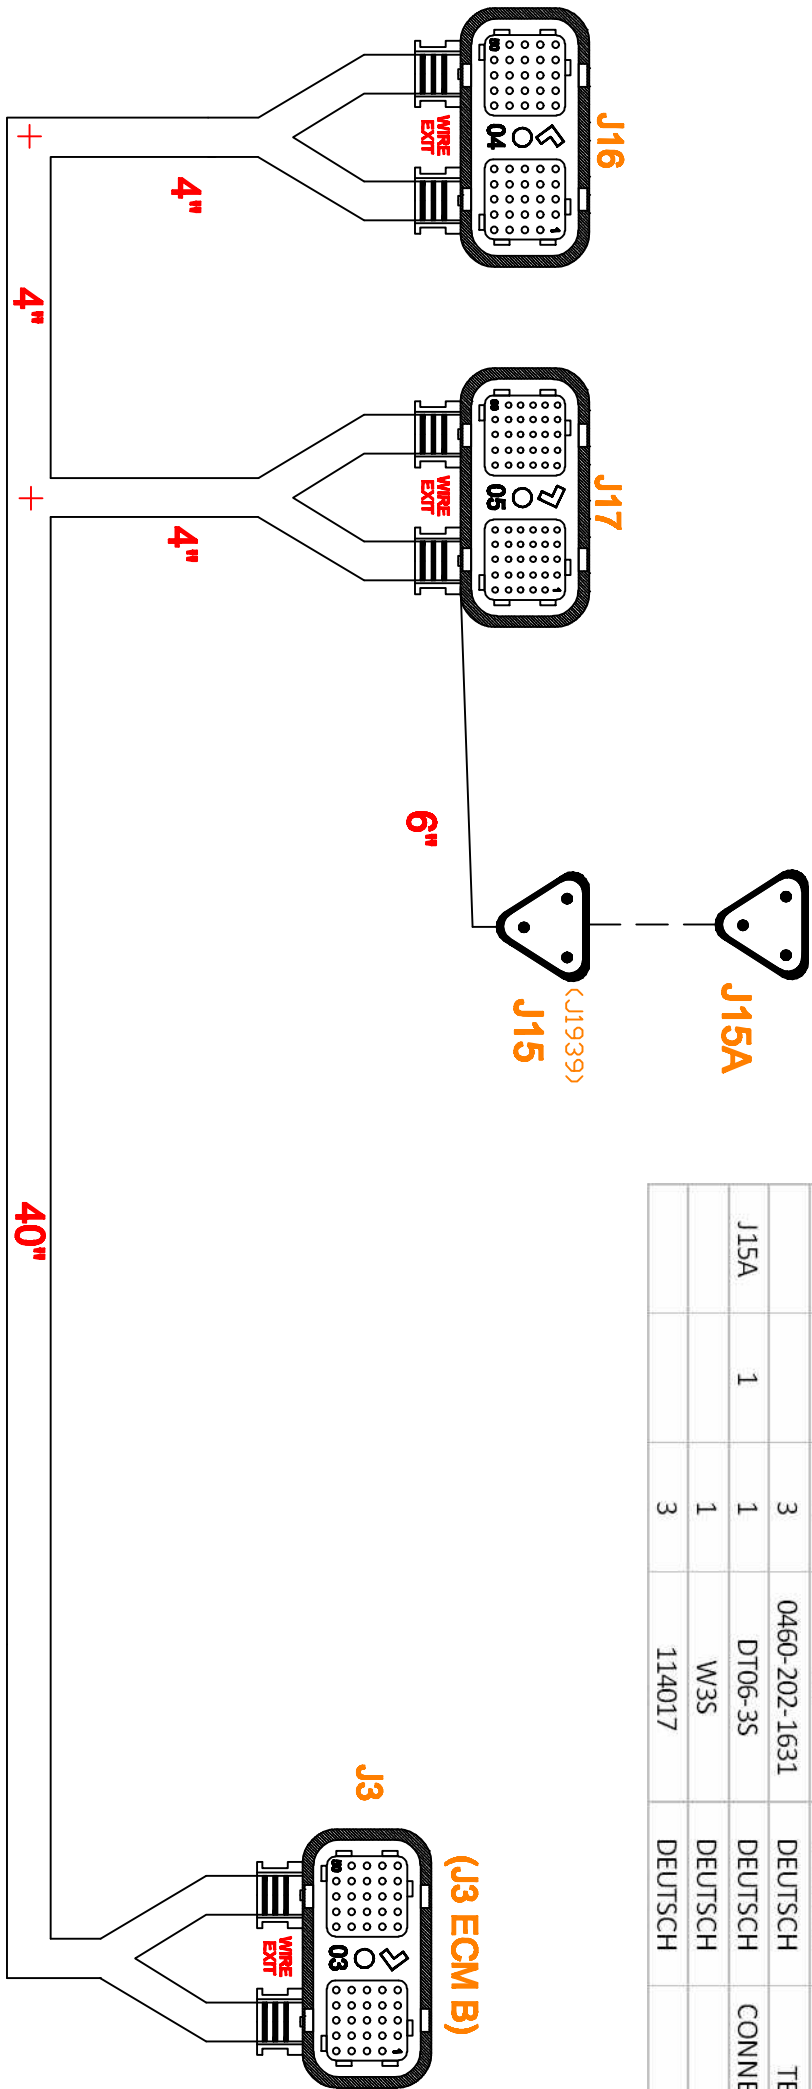

NOTE: Loom with black nylon braid w/ red tracers; 28 mil minimum.
Prominently label all connectors as "indicated".

REV	DESCRIPTION OF REVISION	BY	DATE
-----	-------------------------	----	------

[illegible]


CIRCUIT #	FROM	PIN1	TO	PIN2	WIRECOLOR	WIRESIZE	WIRE TYPE	TERM 1	TERM 2	STAMP
1	J4	1	J5	A	WHITE	18 AV/G	GXL	0462-201-3031	0462-201-16141	STOP LAMP
2	J4	2	J5	C	WHITE	18 AV/G	GXL	0462-201-3031	0462-201-16141	WARNING LAMP
3	J4	3	J5	K	WHITE	18 AV/G	GXL	0462-201-3031	0462-201-16141	DIAG SW
4	J4	4	J5	X	WHITE	18 AV/G	GXL	0462-201-3031	0462-201-16141	KEY SW
5	J4	5	J5	S	WHITE	18 AV/G	GXL	0462-201-3031	0462-201-16141	ECM RET
6	J4	6	J5	P	WHITE	18 AV/G	GXL	0462-201-3031	0462-201-16141	DECREMENT SW
7	J4	7	J5	M	WHITE	18 AV/G	GXL	0462-201-3031	0462-201-16141	INCREMENT SW
8	J4	8	J5	F	WHITE	18 AV/G	GXL	0462-201-3031	0462-201-16141	ECM A
9	J4	9	J5	H	WHITE	18 AV/G	GXL	0462-201-3031	0462-201-16141	ECM B
10	W2			>	ORANGE	10 AV/G	GXL	32705		BAT A+
10A	J4	11	SPL A	<	ORANGE	20 AV/G	GXL	0462-201-3031		BAT A+
10B	J4	12	SPL A	<	ORANGE	20 AV/G	GXL	0462-201-3031		BAT A+
10C	J4	13	SPL A	<	ORANGE	20 AV/G	GXL	0462-201-3031		BAT A+
10D	J4	14	SPL A	<	ORANGE	20 AV/G	GXL	0462-201-3031		BAT A+
10E	J4	15	SPL A	<	ORANGE	20 AV/G	GXL	0462-201-3031		BAT A+
10F	J4	16	SPL A	<	ORANGE	20 AV/G	GXL	0462-201-3031		BAT A+
10G	J4	17	SPL A	<	ORANGE	20 AV/G	GXL	0462-201-3031		BAT A+
10H	J4	18	SPL A	<	ORANGE	20 AV/G	GXL	0462-201-3031		BAT A+
10J	J4	19	SPL A	<	ORANGE	20 AV/G	GXL	0462-201-3031		BAT A+
10K	J4	20	SPL A	<	ORANGE	20 AV/G	GXL	0462-201-3031		BAT A+
11	W3			>	YELLOW	10 AV/G	GXL	32705		BAT B+
11A	J4	21	SPL B	<	YELLOW	20 AV/G	GXL	0462-201-3031		BAT B+
11B	J4	22	SPL B	<	YELLOW	20 AV/G	GXL	0462-201-3031		BAT B+
11C	J4	23	SPL B	<	YELLOW	20 AV/G	GXL	0462-201-3031		BAT B+
11D	J4	24	SPL B	<	YELLOW	20 AV/G	GXL	0462-201-3031		BAT B+
11E	J4	25	SPL B	<	YELLOW	20 AV/G	GXL	0462-201-3031		BAT B+
11F	J4	26	SPL B	<	YELLOW	20 AV/G	GXL	0462-201-3031		BAT B+
11G	J4	27	SPL B	<	YELLOW	20 AV/G	GXL	0462-201-3031		BAT B+
11H	J4	28	SPL B	<	YELLOW	20 AV/G	GXL	0462-201-3031		BAT B+
11J	J4	29	SPL B	<	YELLOW	20 AV/G	GXL	0462-201-3031		BAT B+
11K	J4	30	SPL B	<	YELLOW	20 AV/G	GXL	0462-201-3031		BAT B+
12	J9	3	SPL C	>	RED	12 AV/G	GXL	1062-12-0166		BAT +
12A	J9	4	SPL C	>	RED	12 AV/G	GXL	1062-12-0166		BAT +
12B	J14	3	SPL C	>	RED	12 AV/G	GXL	1062-12-0166		BAT +
12C	J14	4	SPL C	>	RED	12 AV/G	GXL	1062-12-0166		BAT +
12D	J4	31	SPL C	<	RED	20 AV/G	GXL	0462-201-3031		BAT +
12E	J4	32	SPL C	<	RED	20 AV/G	GXL	0462-201-3031		BAT +
12F	J4	33	SPL C	<	RED	20 AV/G	GXL	0462-201-3031		BAT +
12G	J4	34	SPL C	<	RED	20 AV/G	GXL	0462-201-3031		BAT +
12H	J4	35	SPL C	<	RED	20 AV/G	GXL	0462-201-3031		BAT +
12J	J4	36	SPL C	<	RED	20 AV/G	GXL	0462-201-3031		BAT +
12K	J4	37	SPL C	<	RED	20 AV/G	GXL	0462-201-3031		BAT +
12L	J4	38	SPL C	<	RED	20 AV/G	GXL	0462-201-3031		BAT +
12M	J4	39	SPL C	<	RED	20 AV/G	GXL	0462-201-3031		BAT +
12N	J4	40	SPL C	<	RED	20 AV/G	GXL	0462-201-3031		BAT +
12P	J8	A	SPL C	>	RED	16 AV/G	GXL	12124587		ECM A +
12Q	J13	A	SPL C	>	RED	16 AV/G	GXL	12124587		ECM B +
13	W1			>	GREEN	10 AV/G	GXL	32706		GND
13A	J9	1	SPL D	>	GREEN	12 AV/G	GXL	1062-12-0166		GND
13B	J9	2	SPL D	>	GREEN	12 AV/G	GXL	1062-12-0166		GND
13C	J14	1	SPL D	>	GREEN	12 AV/G	GXL	1062-12-0166		GND
13D	J14	2	SPL D	>	GREEN	12 AV/G	GXL	1062-12-0166		GND
13E	J4	41	SPL D	<	GREEN	20 AV/G	GXL	0462-201-3031		GND
13F	J4	42	SPL D	<	GREEN	20 AV/G	GXL	0462-201-3031		GND
13G	J4	43	SPL D	<	GREEN	20 AV/G	GXL	0462-201-3031		GND
13H	J4	44	SPL D	<	GREEN	20 AV/G	GXL	0462-201-3031		GND
13J	J4	45	SPL D	<	GREEN	20 AV/G	GXL	0462-201-3031		GND
13K	J4	46	SPL D	<	GREEN	20 AV/G	GXL	0462-201-3031		GND
13L	J4	47	SPL D	<	GREEN	20 AV/G	GXL	0462-201-3031		GND
13M	J4	48	SPL D	<	GREEN	20 AV/G	GXL	0462-201-3031		GND
13N	J4	49	SPL D	<	GREEN	20 AV/G	GXL	0462-201-3031		GND
13P	J4	50	SPL D	<	GREEN	20 AV/G	GXL	0462-201-3031		GND
13Q	J8	B	SPL D	>	GREEN	16 AV/G	GXL	12124587		ECM A GND
13R	J13	B	SPL D	>	GREEN	16 AV/G	GXL	12124587		ECM B GND

REV	DESCRIPTION OF REVISION	BY	DATE
-----	-------------------------	----	------

[illegible]

[illegible]

ITEM	QTY	DESCRIPTION	MATERIAL
01	A/R	3" MALE NPT	
02	A/R	3" I.D. CUFF	
03	A/R	3" (7" OD) 125# ANSI FLANGE	
04	A/R	4" (9" OD) 125# ANSI FLANGE	
05	A/R	5" (10" OD) 125# ANSI FLANGE	
06	A/R	6" (11" OD) 125# ANSI FLANGE	

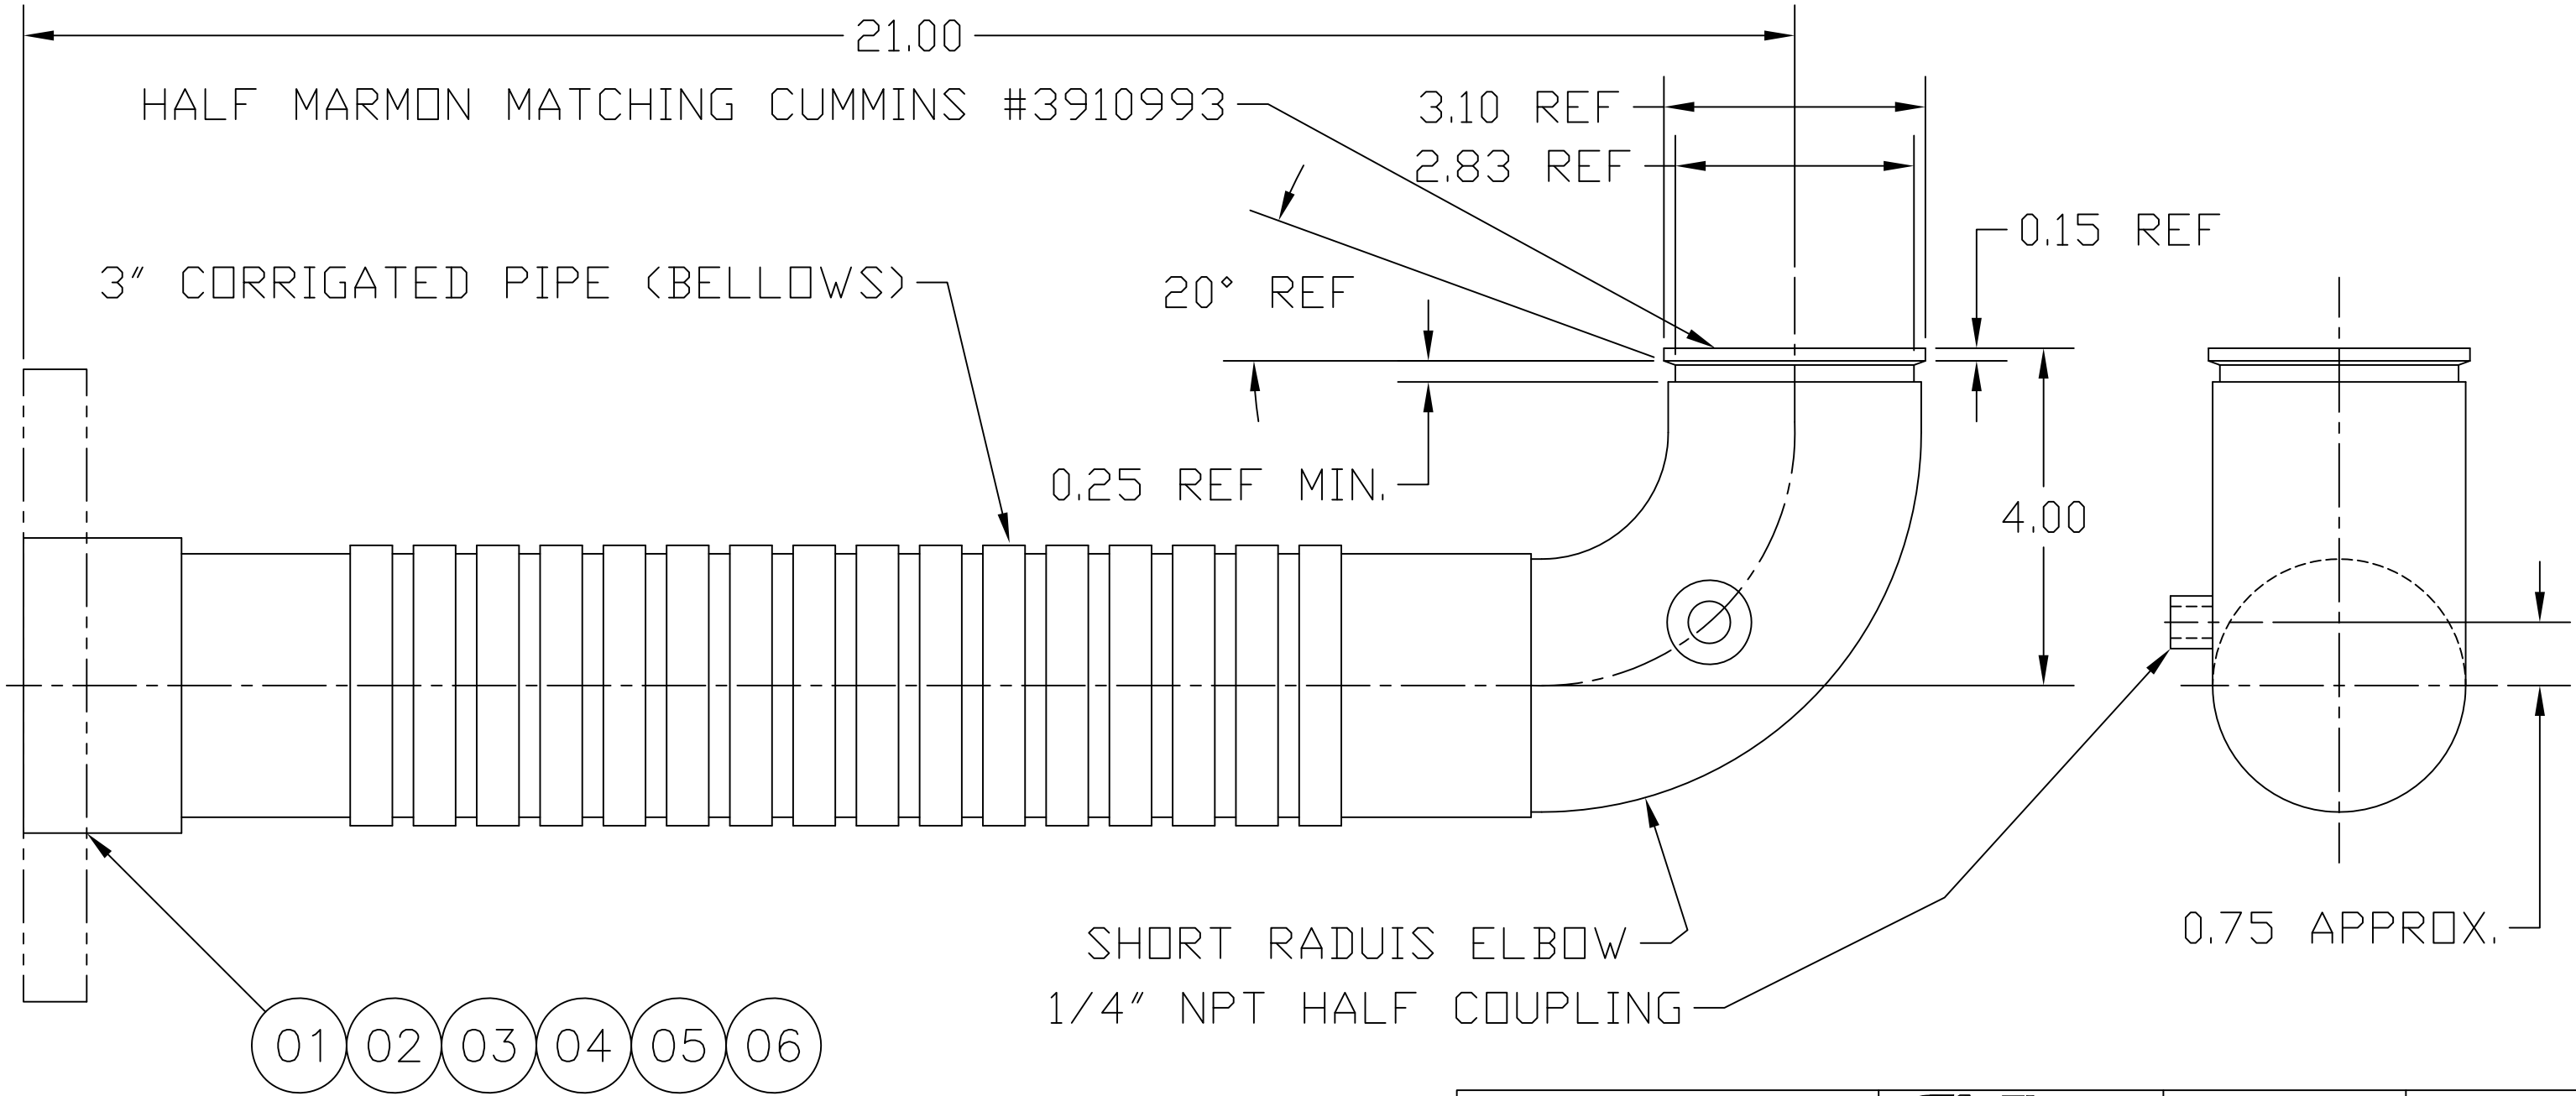

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:

ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES XX = ± 0.010 XXX = ± 0.005	MACHINE TOLERANCES X = ± 0.2 XX = ± 0.1
	FORM TOLERANCES XX = ± 0.030 XXX = ± 0.015	FORM TOLERANCES X = ± 0.8 XX = ± 0.4
	FAB TOLERANCES XX = ± 0.020 XXX = ± 0.010	FAB TOLERANCES X = ± 1.0 XX = ± 0.5

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM


CUSTOM DESIGN AND
UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

EXHAUST, 90°, HALF MARMON TABULATED
3" TURBO OUTLET


DWG UNITS: INCH/LB/S	DRAWN BY: DAVE N AUTO CAD	DATE: 09MAR2004 REF DRWG:
SCALE: 1/2	SHEET 10F1	DRAWING NO: 8550
EST WEIGHT:		

D	2009-050	ADDED -04 & -05 & -06	DAN	11-NOV-09
REV	ENF	DESCRIPTION OF REVISION	BY	DATE


ITEM	QTY	DESCRIPTION	MATERIAL
01	1	U-JOINT ADAPT, SAE#3, HAYES #127513-02	8615
02	1	DRIVE SHAFT, 1480	8613
03	1	COMPANION FLANGE, SEE WO FOR BORE	8608-__
04	1	ASSEMBLY, TELESOPING GUARD, CFP59	9494

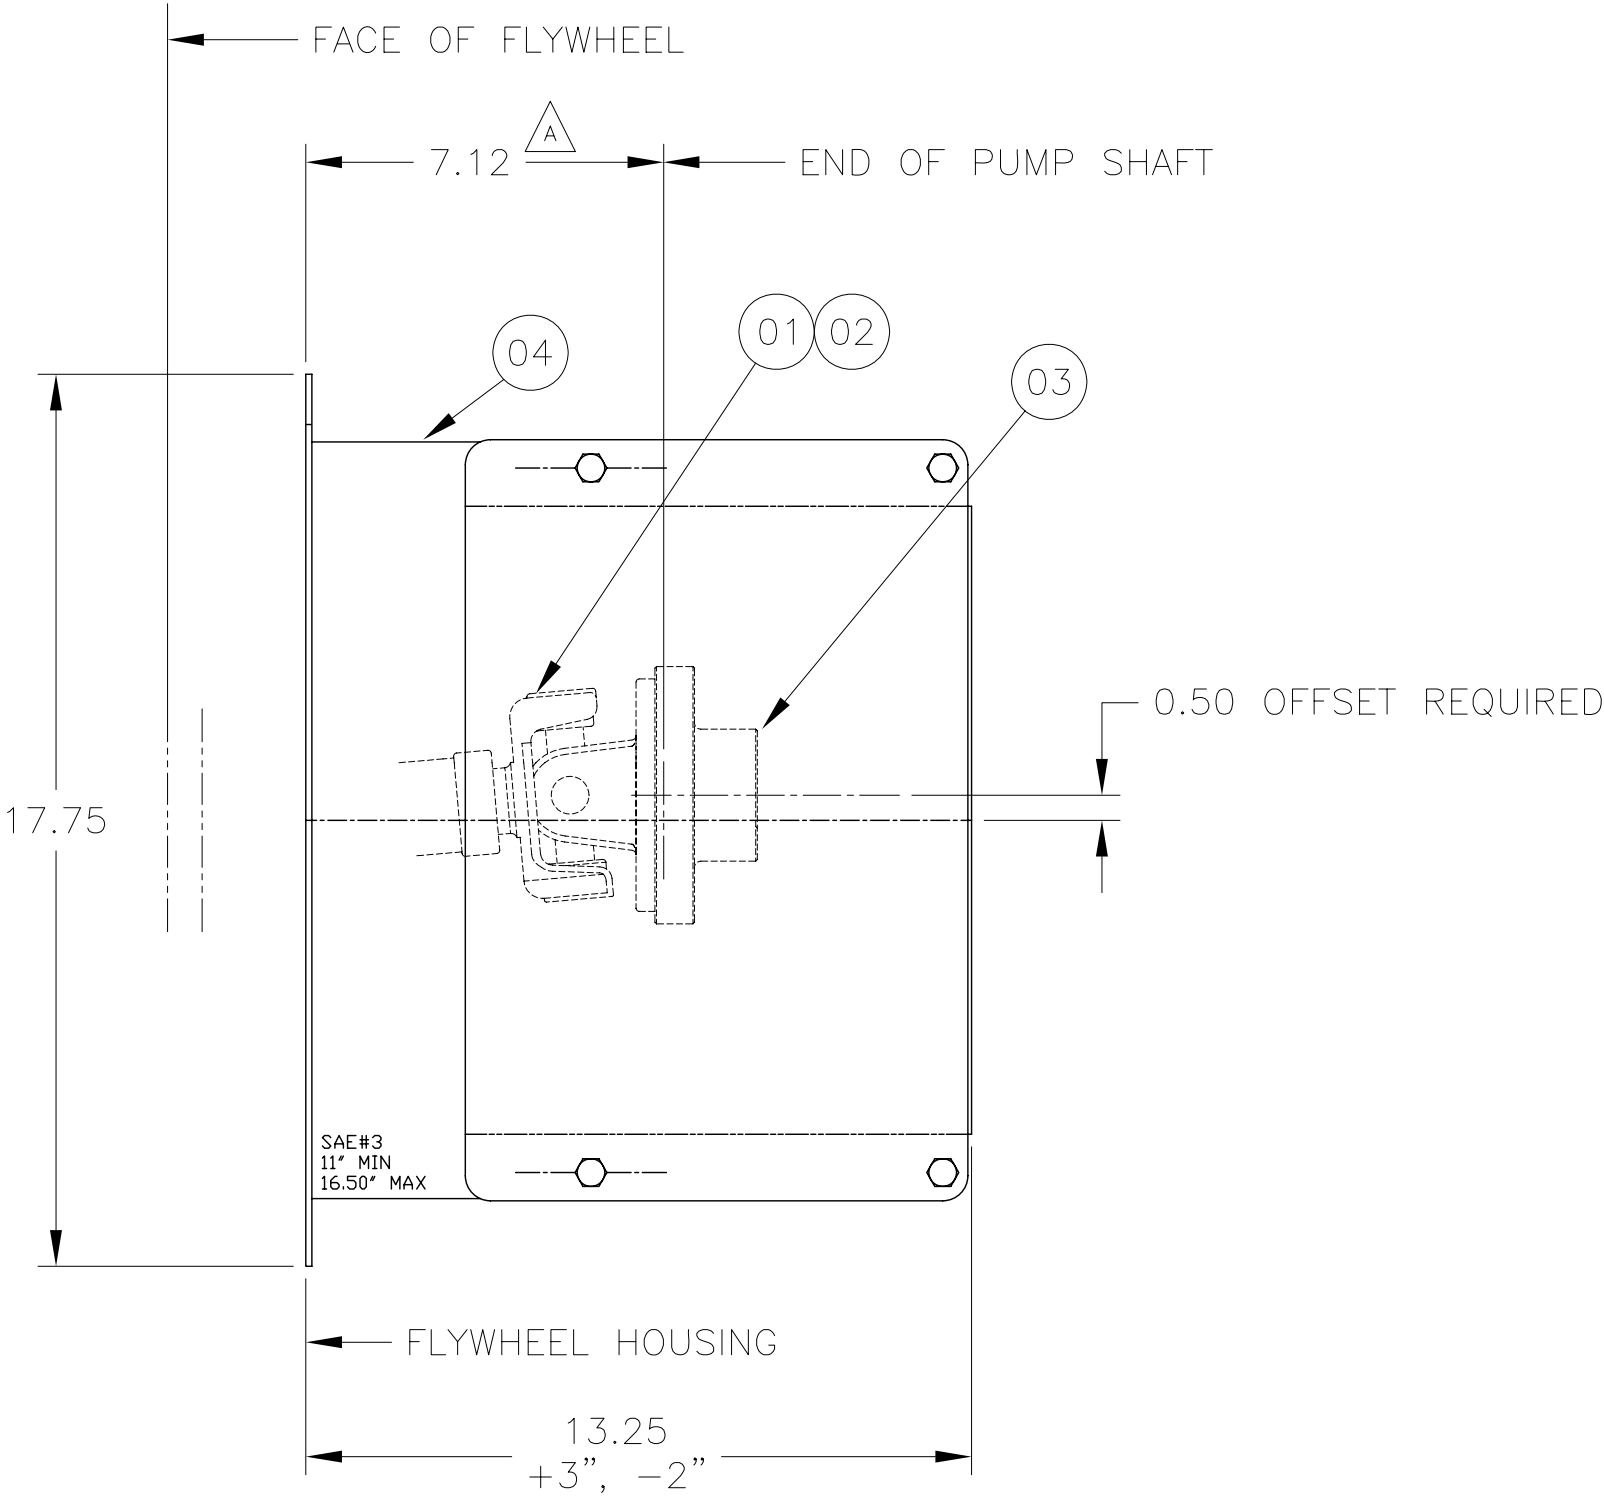


A	7.12 WAS 7.25 PER 1480 MEAN LG OF 9.00"	JDT	10MAY07
REV	DESCRIPTION OF REVISION	BY	DATE


ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC			CUMMINS NPOWER CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM	CUMMINS FIRE POWER DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN WWW.CUMMINSFIREPOWER.COM
UNLESS OTHERWISE NOTED - ALL DIMENSIONS ARE IN INCHES - APPLY MACHINE TOLERANCES .X = ± 0.06 .XX = ± 0.010 .XXX = ± 0.001 - APPLY WELDED TOLERANCES .X = ± 0.25 .XX = ± 0.12 .XXX = ± 0.06		DWG SCALE: 1/4	DRAWN BY: DAVE N	DATE: 20JUN2005
		PLOT SCALE:	APPD BY:	DATE:
		DESCRIPTION ASSEMBLY, DRIVE SHAFT W/ GUARD		
		REFERENCE: CFP59-83, 1480 DRIVE SHAFT		DRAWING NUMBER: 10165A

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	GUARD, STUB SHAFT, SAE #3 FLYWHEEL, FIREPUMP	8611
2	1	STUB SHAFT, SAE #3 FLYWHEEL, HAYES #, FIREPUMP	9624
3	4	SCREW, CAP, HEX HEAD, M10 x 20	HHCS_M10_20
4	4	SCREW, CAP, HEX HEAD, M10 x 50	HHCS_M16_50

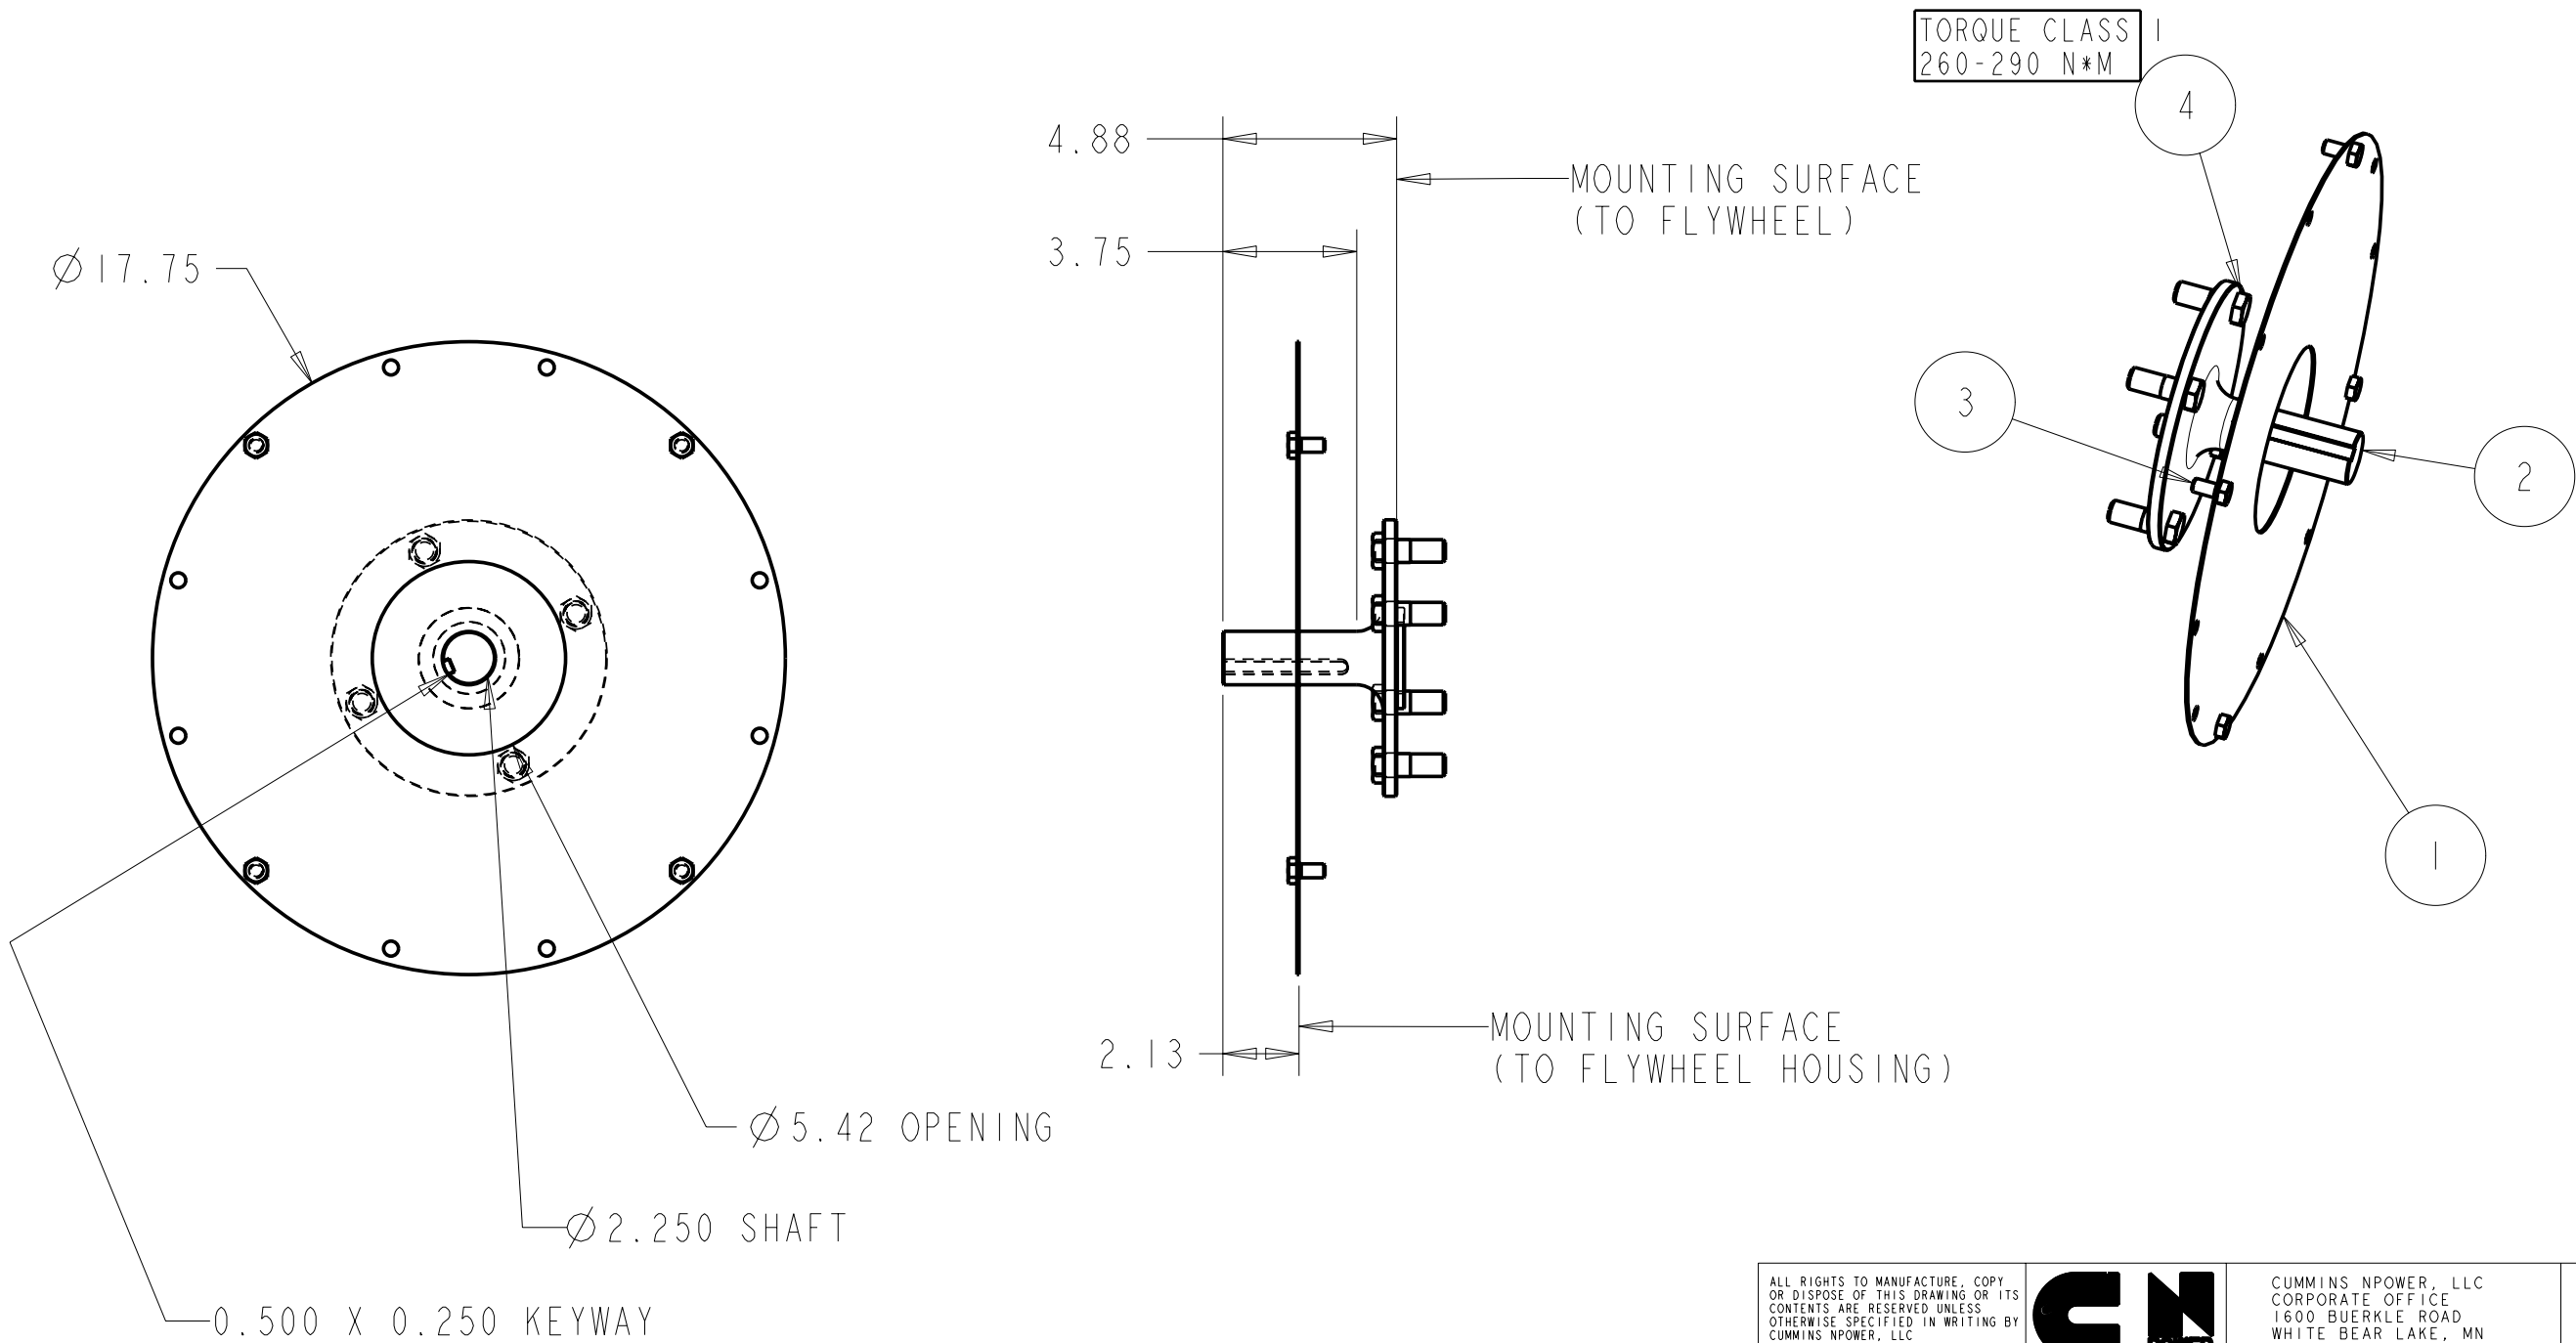



B	GUARD WAS 9553	DAVE N	20JAN05
A	ADDED HARDWARE	DAVE N	21OCT04
REV	DESCRIPTION OF REVISION	REV BY	DATE

ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS NPOWER, LLC				CUMMINS NPOWER, LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.NPOWER.CUMMINS.COM			NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN								
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± 1°				TITLE 1: ASSEMBLY, STUB SHAFT, 2.25" DIA TITLE 2: FIREPUMP											
IMPERIAL UNITS		METRIC UNITS		DWG UNITS: IN/LB/S		DRAWN BY: DAVE N APPD BY: -		DATE: 15OCT2004 DATE: -							
MACHINE TOLERANCES .X : ± 0.06 .XX : ± 0.010 .XXX : ± 0.001 WELD TOLERANCES .X : ± 0.25 .XX : ± 0.12 .XXX : ± 0.06		MACHINE TOLERANCES X : ± 1.5 X.X : ± 0.5 X.XX : ± 0.05 WELDED TOLERANCES X : ± 5 X.X : ± 3 X.XX : ± 1.50		EST WEIGHT: 42238.628		SCALE: 0.200		DO NOT SCALE		SHEET 10FI		DRAWING NO: 8619		REV: B	

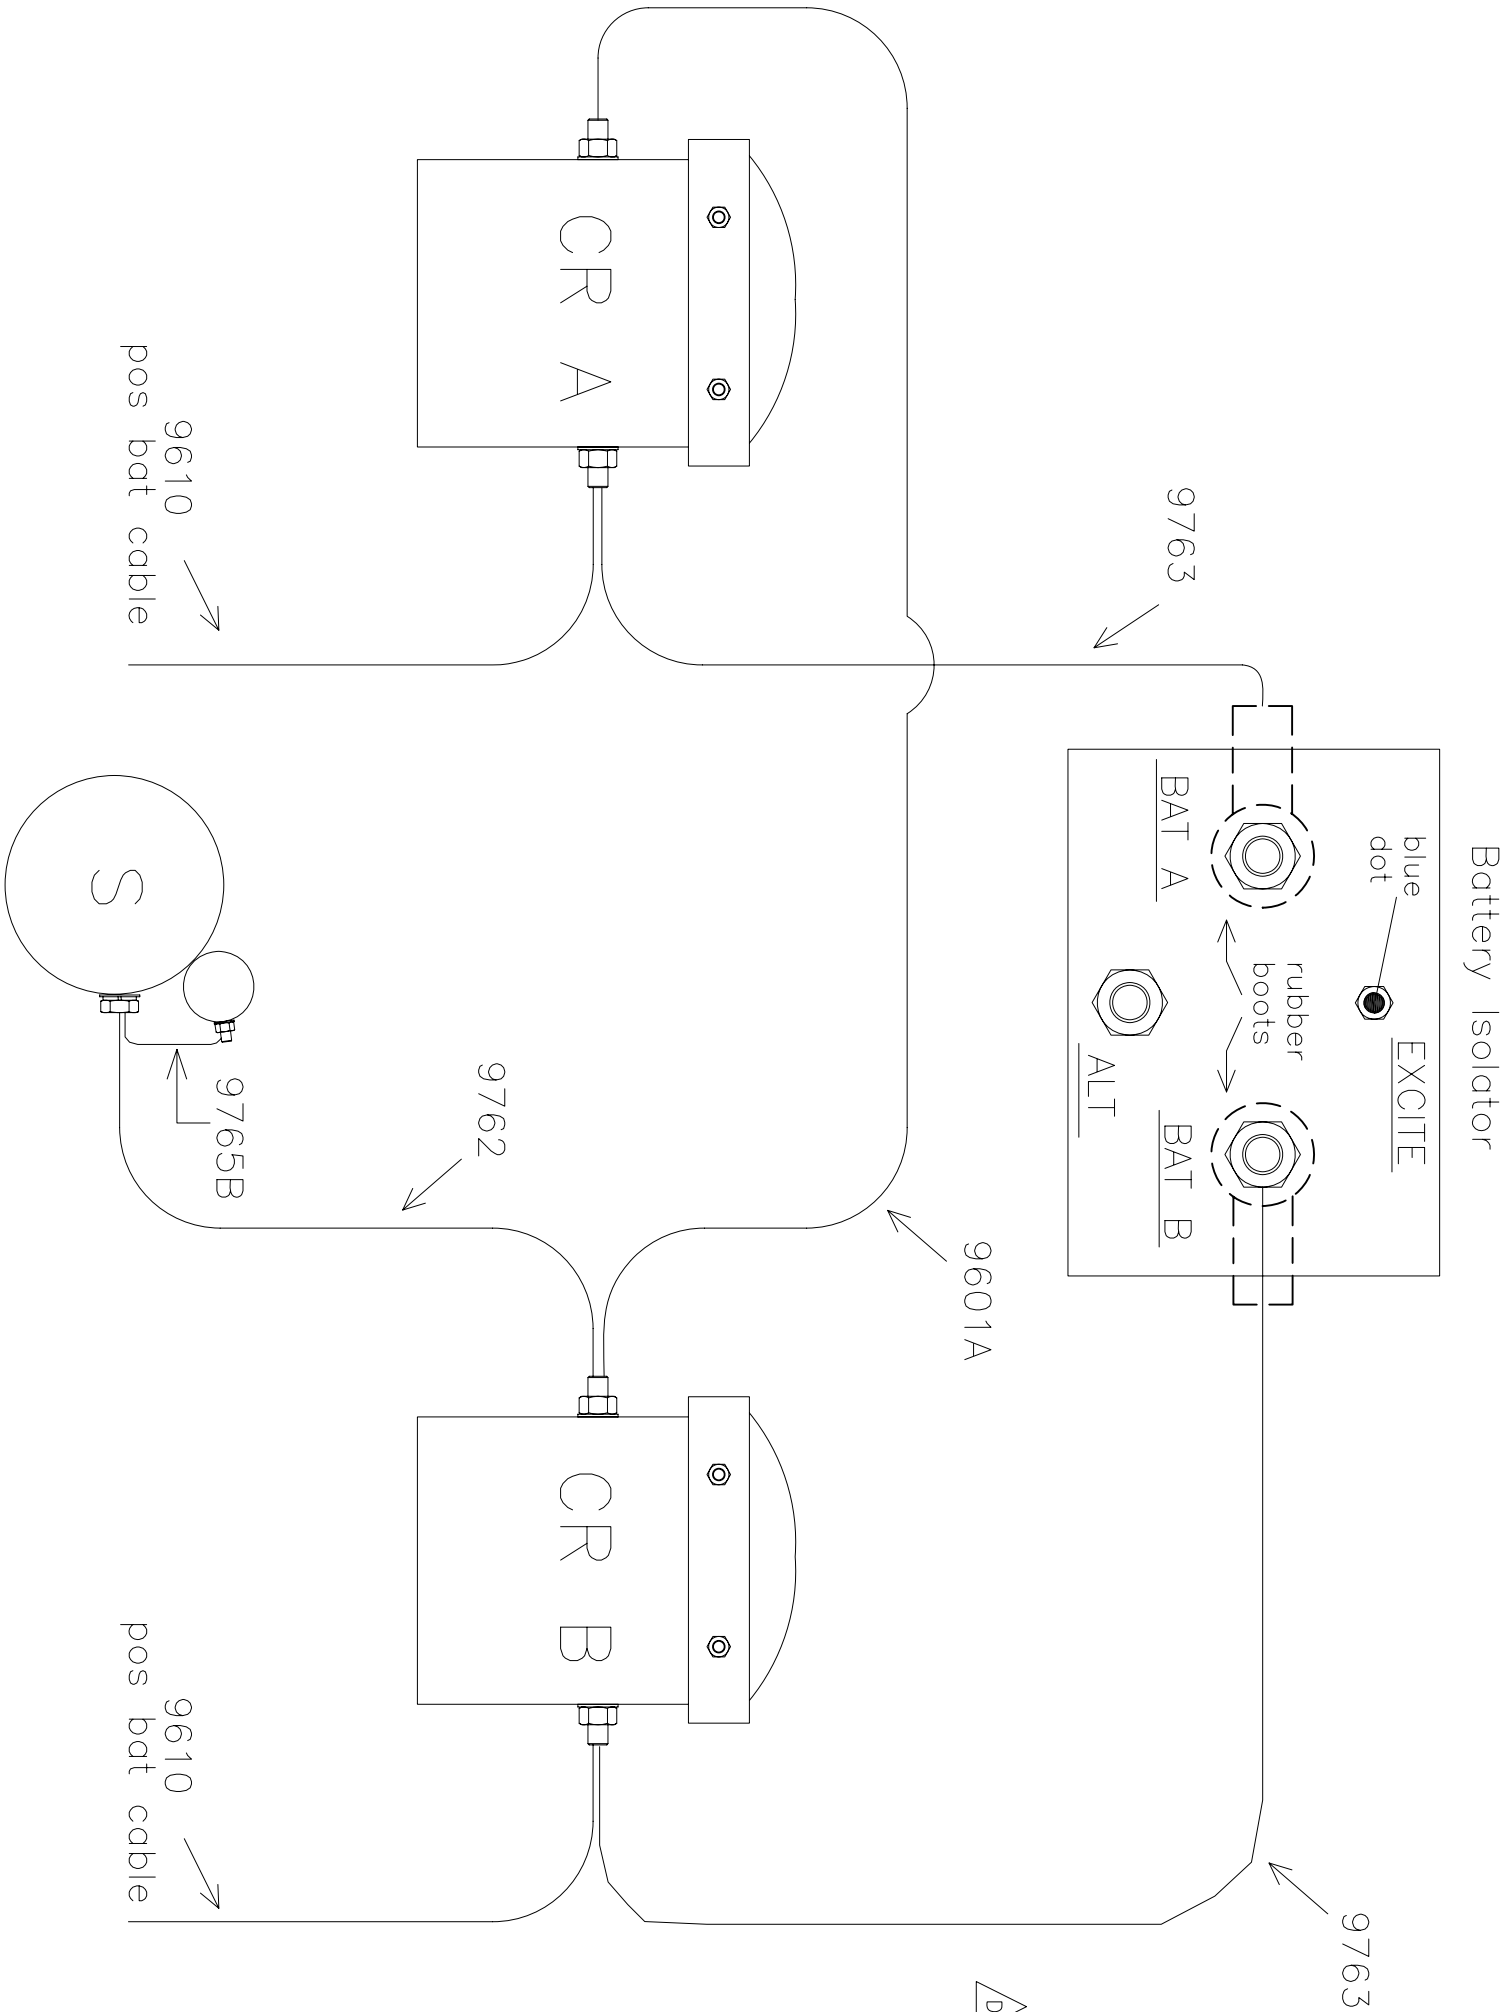


<u>P/N</u>	<u>DESCRIPTION</u>	<u>QTY</u>
9601A	Cable, Battery Contactor Jumper	1
9762A	Cable, Contactor to Starter	1
9763B	Cable, Isolator to Battery	2
9764	Wire, FSO Connector	1
9765B	Wire, Starter Solenoid Jumper	1
9609	Battery Cable Kit (optional)	1

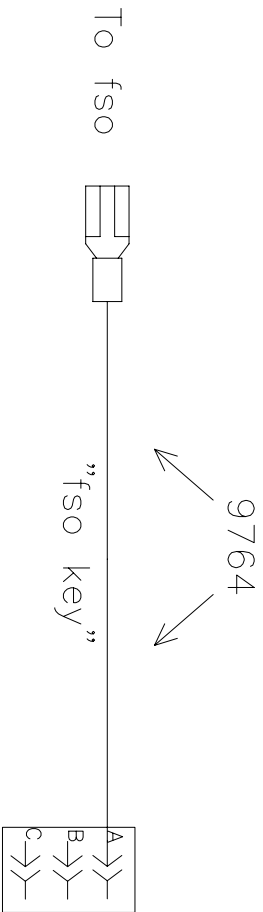





				ALL RIGHTS TO MANUFACTURE, COPY OR DISPOSE OF THIS DRAWING OR ITS CONTENTS ARE RESERVED UNLESS OTHERWISE SPECIFIED IN WRITING BY CUMMINS INPOWER, LLC		 <div>CUMMINS INPOWER CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.INPOWER.CUMMINS.COM</div>		NPOWER SYSTEMS DESIGN CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN	
D	CHANGED P/N 9763 TO REV B	RJS	6 NOV 06	UNLESS OTHERWISE NOTED		DWG SCALE:	DRAWN BY: RJS		DATE: 6 DEC 2004
C	CHANGED P/N 9765 TO REV B	RJS	25 JULY 06	ALL DIMENSIONS ARE IN INCHES		PLOT SCALE:	APPD BY:		DATE:
B	P/N 9601 CHG'D TO REV A	RJS	30 NOV 05	APPLY MACHINE TOLERANCES		DESCRIPTION			
A2	MOVED THE CR A-TO-CR B JUMPER	JRJS	2 JULY 05	X = ± 0.06		KIT, LOOSE WIRES			
				XX = ± 0.010					
A1	ADDED REV # TO THE P/N'S	RJS	17 JUNE 05	XXX = ± 0.001					
				APPLY WELDED TOLERANCES		REFERENCE:			
A	ADDED WIRING DIAGRAM	RJS	5 JAN 05	X = ± 0.25		4B, 6B, 6C, QSB, & QSC		DRAWING NUMBER:	
				XX = ± 0.12				9767_D	
REV	DESCRIPTION OF REVISION	BY	DATE	.XXX = ± 0.06					

(neg bat cable: 9611)

(not shown)

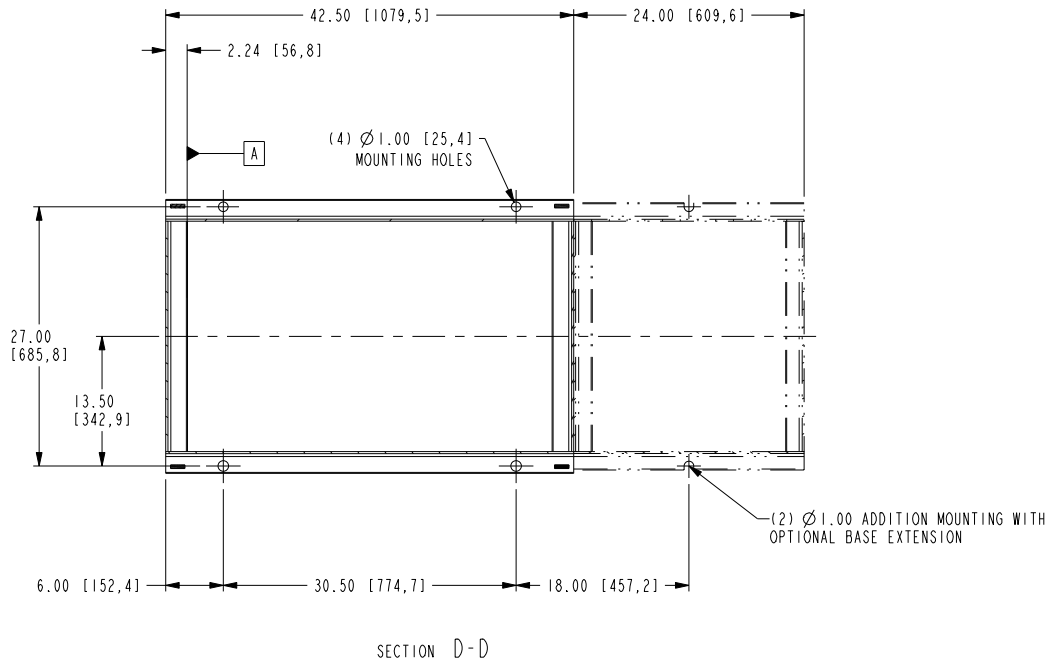

LEGEND AND DATUM IDENTIFIER	
SHEET #1	INSTALLATION DRAWING
SHEET #2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET #3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET #4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	UJOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT
ESTIMATED WEIGHT	VERTICAL PUMP BASE = 155 LBS (71 KG)
ESTIMATED WEIGHT	BASE EXTENSION = 92 LBS (42 KG)

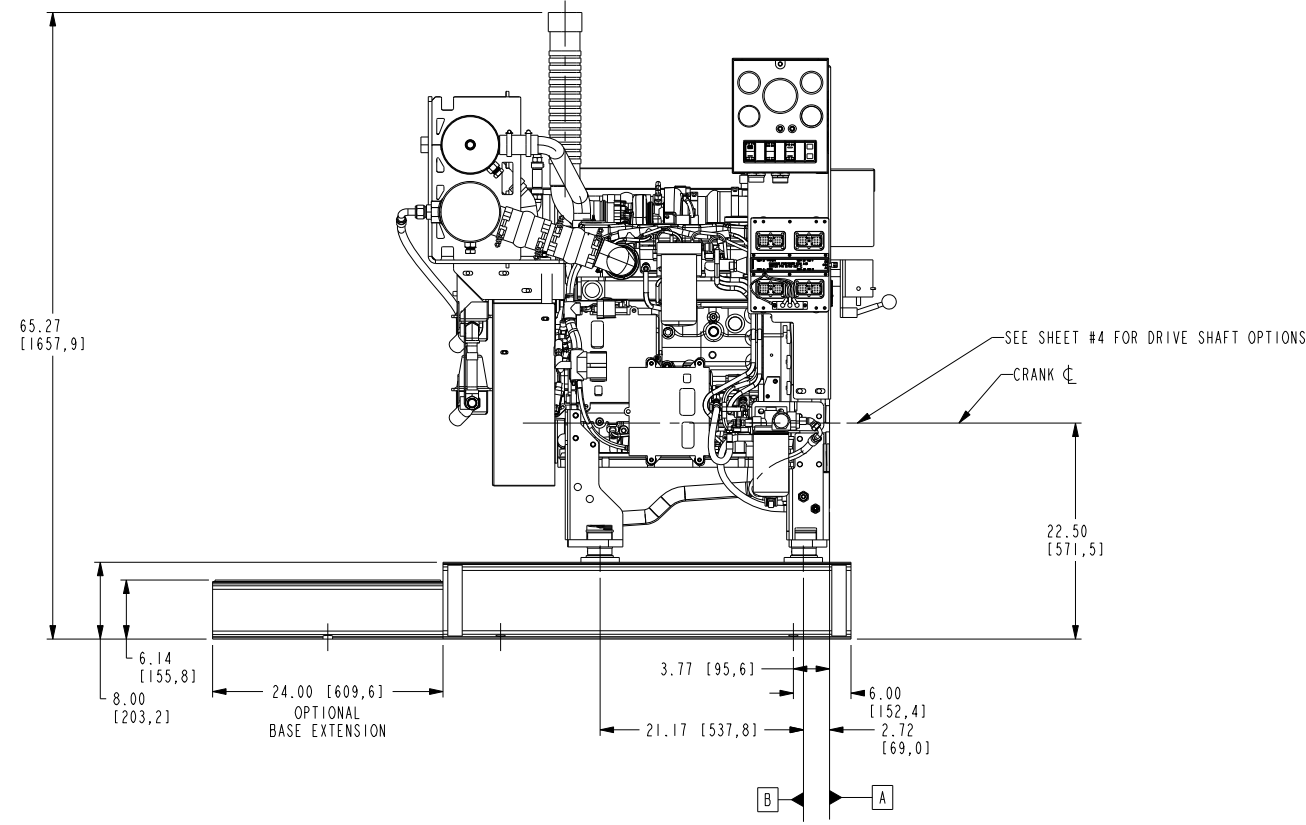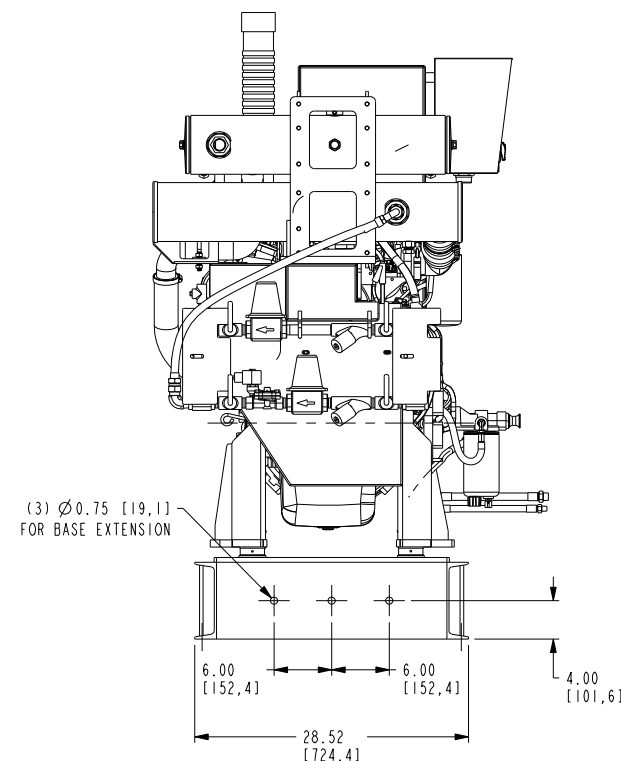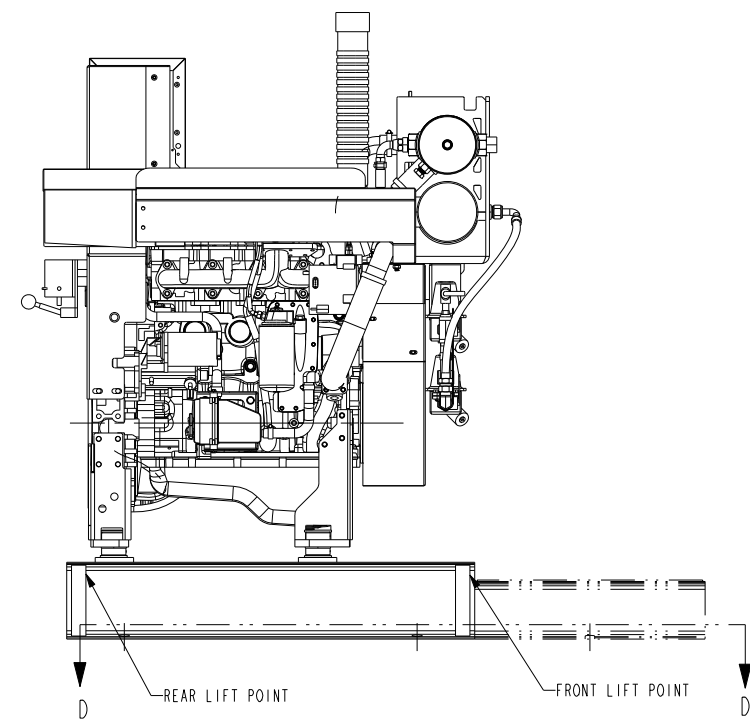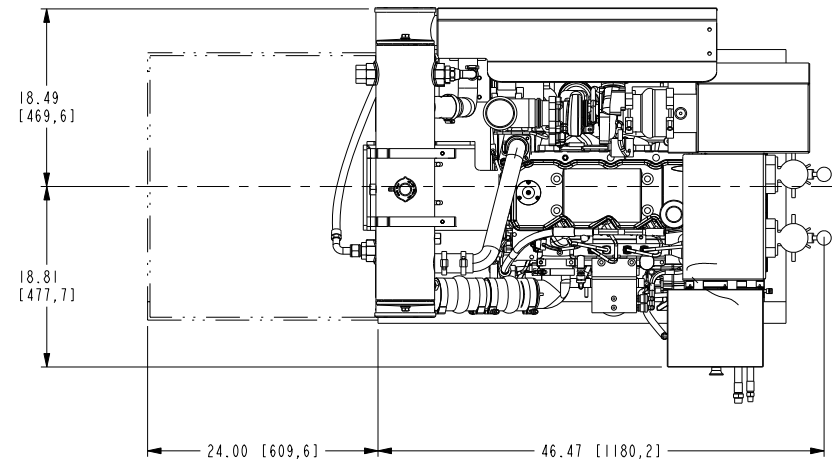

- NOTES:
1. TORSIONAL ANALYSIS REQUIRED FOR VERTICAL TURBINE INSTALLATION
 2. REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
 3. DO NOT SCALE DRAWING.
 4. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.
 5. REFERENCE SHEET #1 FOR BASE FIREPUMP INTERFACE

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE: ANGULAR DIMENSIONS ± 1° THIRD ANGLE PROJECTION						DWG UNITS: 1N/LB/S SCALE: 0.125 EST WEIGHT: 0.000		DRAWN BY: DAVE N PRO-ENGINEER SHEET 3 OF 4		DATE: 22JAN2009 REF DRWG: - DRAWING NO: 14319	
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE							

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 RUEALE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM


CUSTOM DESIGN
AND UPGIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

GENERAL ARRANGEMENT, INSTALLATION DRAWING
CFP5E-F10/F20/F30/F40/F50






CFP7E CONNECTION INFORMATION	
SAE #3	FLYWHEEL HOUSING
1/2" NPT	FUEL INLET
3/8" NPT	FUEL OUTLET
3/4" NPT	RAW WATER INLET
1" NPT	RAW WATER DISCHARGE
120 / 240 VAC	COOLANT HEATER (1500WATTS)
3" DIA NPT, CUFF, OR FLANGE	EXHAUST CONNECTION
ESTIMATED WEIGHT (NO OPTIONS)	1600 LBS (726 KG)

- NOTES:
1. ALL PLUMBING MUST BE SUPPORTED AND/OR ISOLATED SO THAT NO WEIGHT OR STRESS IS APPLIED TO ANY ENGINE COMPONENT.
 2. REFER TO ENGINE DATA SHEET FOR CUSTOMER CONNECTION RECOMMENDATIONS.
 3. DO NOT SCALE DRAWING.
 4. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.

LEGEND AND DATUM IDENTIFIER	
SHEET #1	INSTALLATION DRAWING
SHEET #2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET #3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET #4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	UJOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

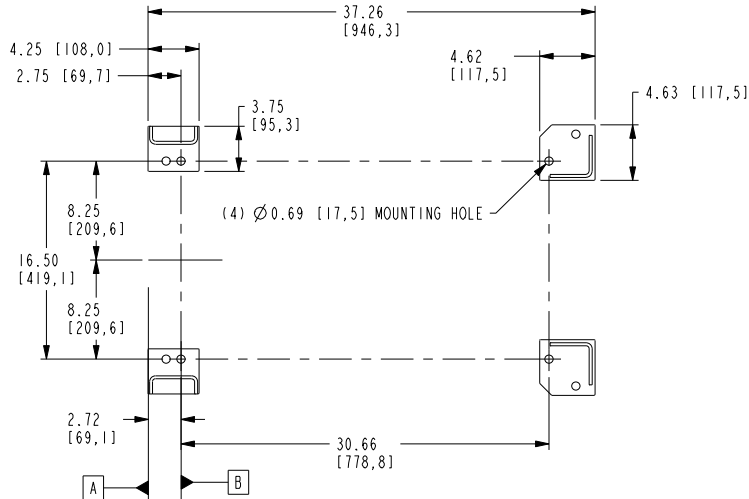

FOOT PRINT
SECTION B-B

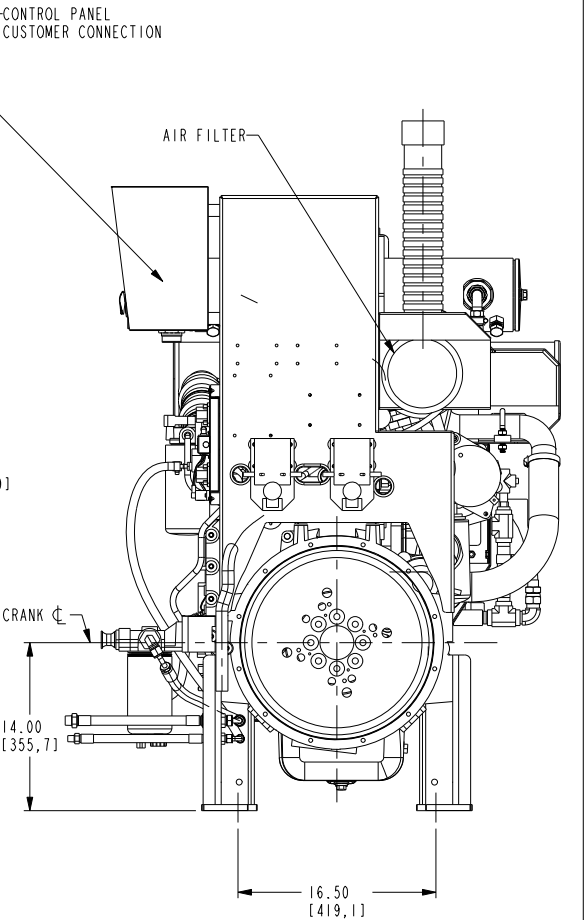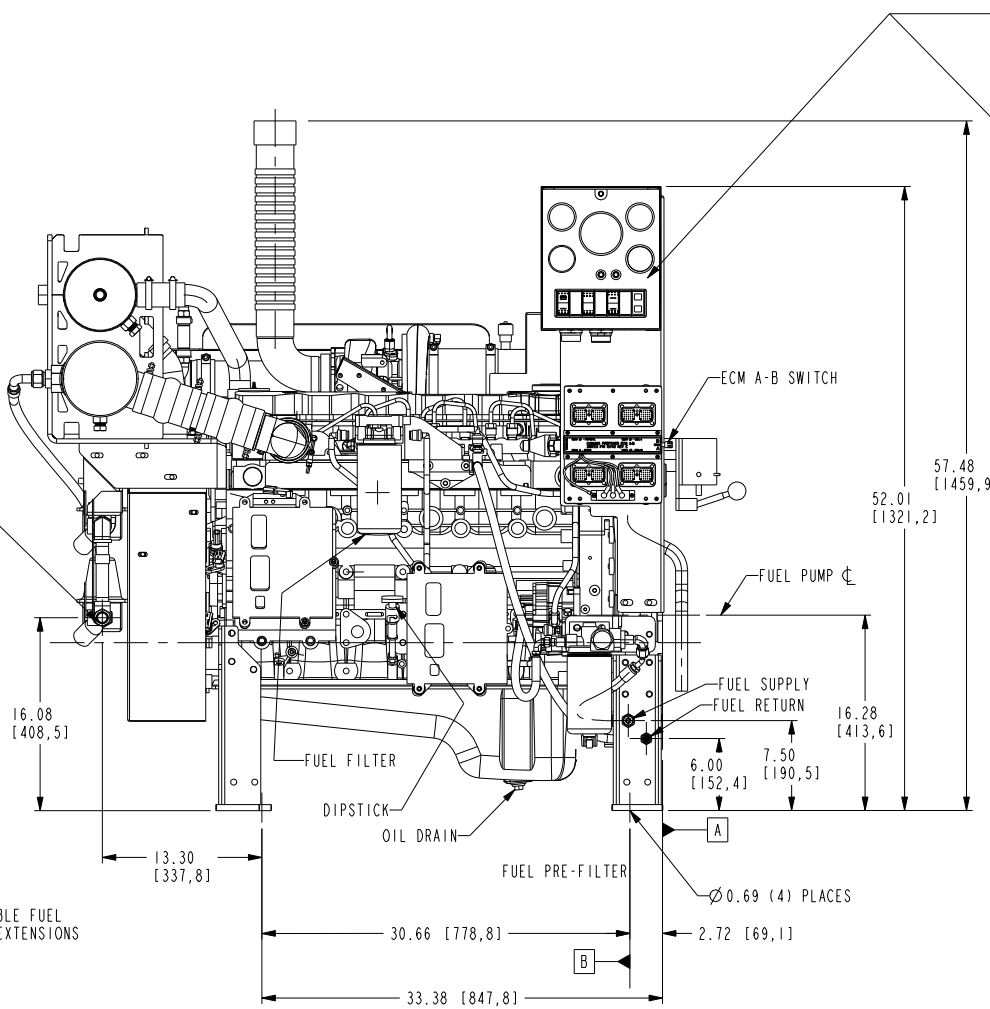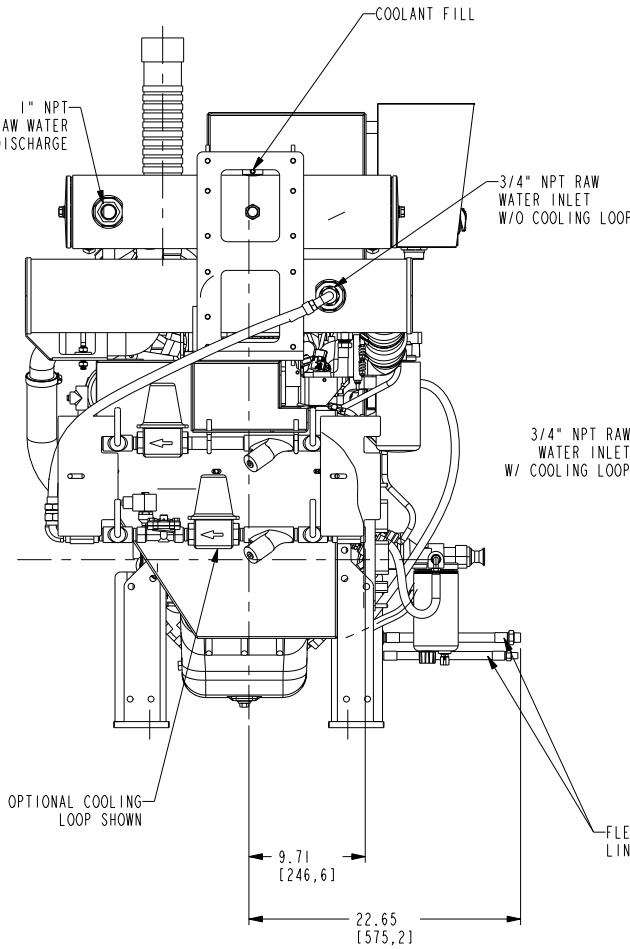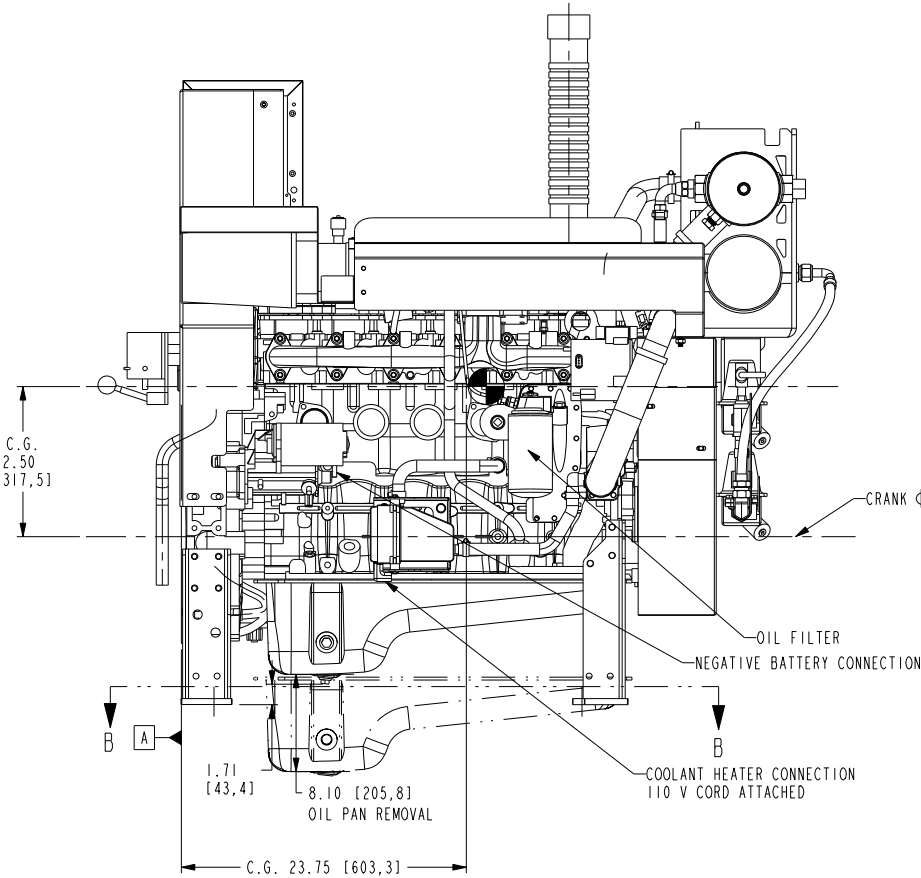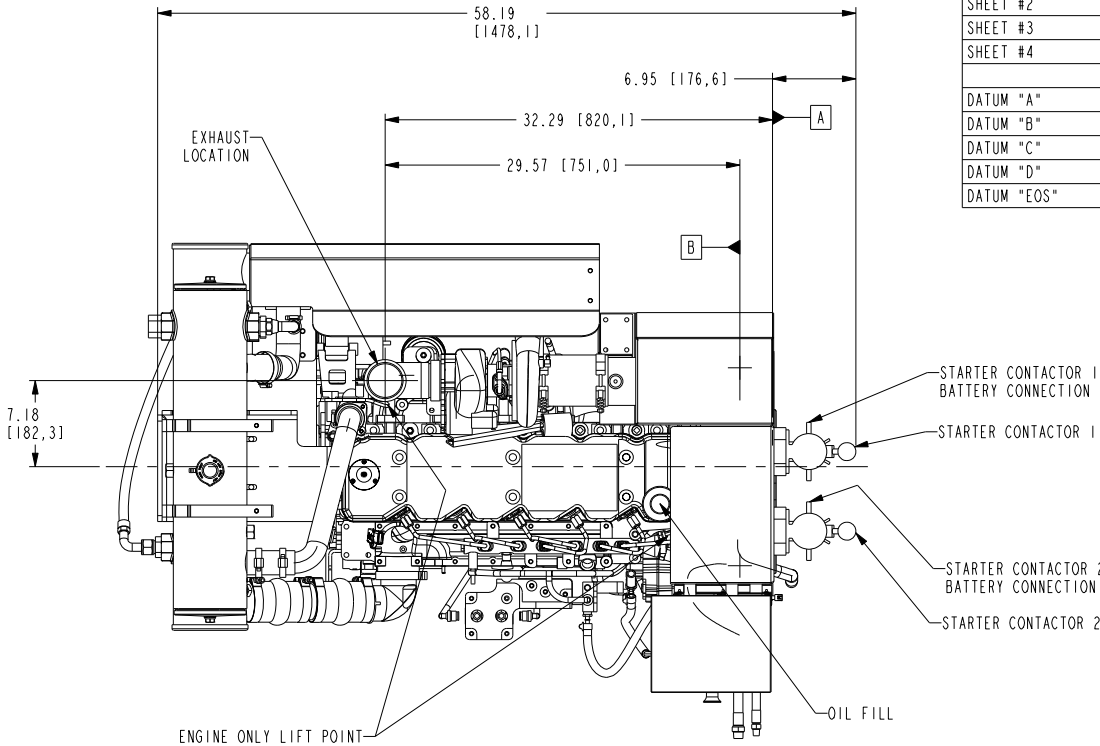


This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC, and is to be used only for the purposes intended. It is to be kept confidential and not disclosed to third parties without the written consent of Cummins Fire Power LLC. If you are not an authorized user, you are not to use this document. If you are an authorized user, you are to use this document in accordance with the terms and conditions of the license agreement. If you are not an authorized user, you are to delete this document from your system and not to use it. If you are an authorized user, you are to use this document in accordance with the terms and conditions of the license agreement. If you are not an authorized user, you are to delete this document from your system and not to use it.

Cummins Fire Power
CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 RUEALE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

GENERAL ARRANGEMENT, INSTALLATION DRAWING
CFP7E-F10/F20/F30/F40/F50/F60
DWG UNITS: IN/LB/S
SCALE: 0.125
EST WEIGHT: 0.000
DRAWN BY: DAVE N
PRO-ENGINEER
SHEET 1 OF 4
DATE: 07JAN2009
REF DRWG: -
DRAWING NO: 14244

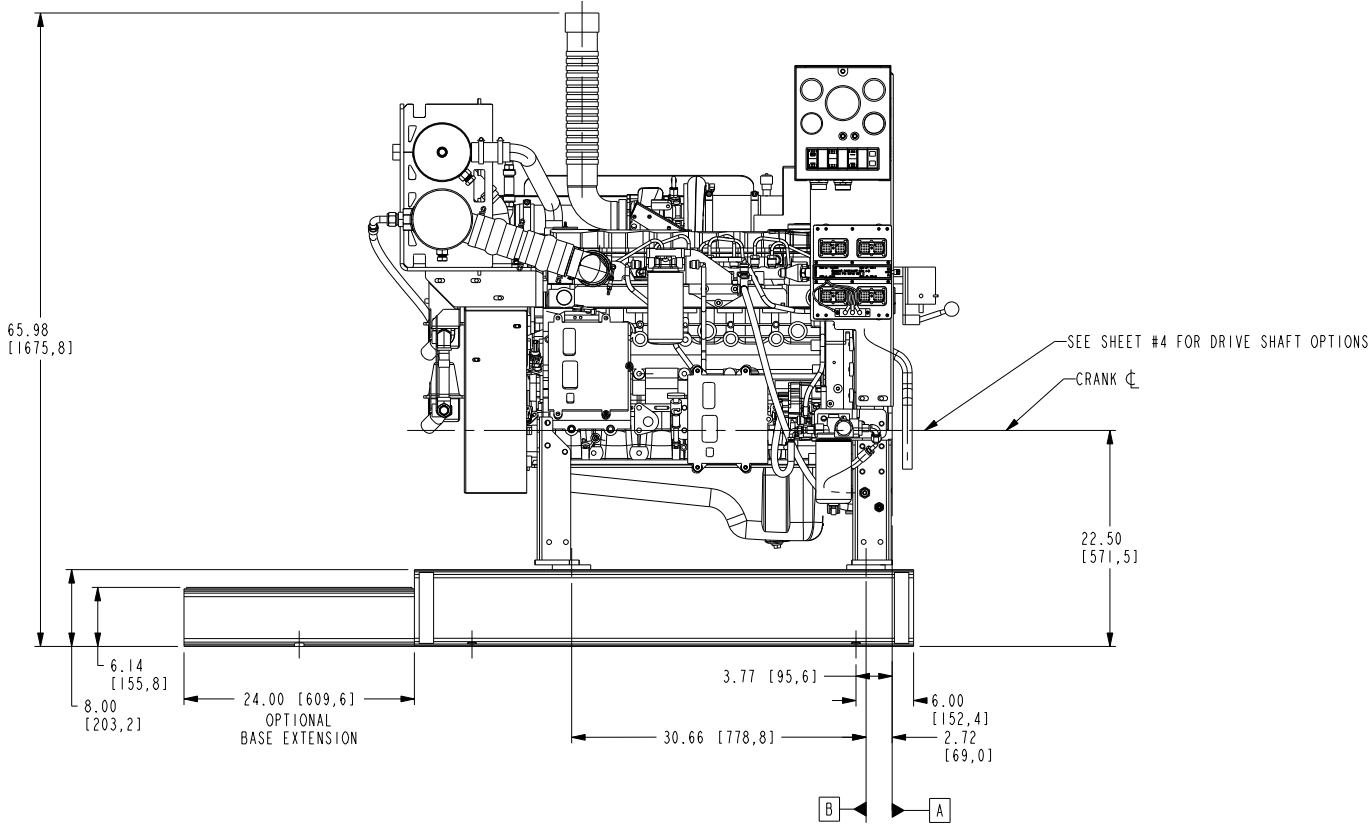

REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE






LEGEND AND DATUM IDENTIFIER	
SHEET #1	INSTALLATION DRAWING
SHEET #2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET #3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET #4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	UJOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT
ESTIMATED WEIGHT	VERTICAL PUMP BASE - 246 LBS (112 KG)
ESTIMATED WEIGHT	BASE EXTENSION - 92 LBS (42 KG)

NOTES:


1. TORSIONAL ANALYSIS REQUIRED FOR VERTICAL TURBINE INSTALLATION
2. REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
3. DO NOT SCALE DRAWING.
4. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.
5. REFERENCE SHEET #1 FOR BASE FIREPUMP INTERFACE

					 THIRD ANGLE PROJECTION		 North Arrow TRUE NORTH MAG. NORTH GRID NORTH MAG. NORTH GRID NORTH		IN/LB/FS PRO-ENGINEER		REF DRWG: -	
REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE			SCALE: 0.125 NET WEIGHT: 0.000		SHEET 3 OF 4		DRAWING NO: 14244	


<p>The document contains confidential and trade secret information, is the property of Cummins Fire Power LLC, and is not to be distributed outside the company. It is to be used for design, engineering, manufacturing and related activities only. It is not to be used for any other purpose. It is to be stored in the Cummins Fire Power LLC database and is to be controlled by Cummins Power. It is not to be used for any other purpose. It is to be stored in the Cummins Fire Power LLC database and is to be controlled by Cummins Power. It is not to be used for any other purpose. It is to be stored in the Cummins Fire Power LLC database and is to be controlled by Cummins Power.</p>		<p>CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 SOUTH DRIVE WHITE RIVER, IN 46783 WWW.CUMMINSFIREPOWER.COM</p>	<p>CUSTOM DESIGN AND OFFICE CENTER 1600 SOUTH DRIVE DEPERE, WISCONSIN</p>
<p>GENERAL ARRANGEMENT, INSTALLATION DRAWING CPPTFE-F10/F20/F30/F40/F50/F60</p>			
<p>ANGULAR DIMENSIONS ± TYPICAL</p> 	<p>IMPERIAL UNITS INCHES FEET</p>	<p>METRIC UNITS MILLIMETERS METERS</p>	<p>DATE: 07JAN2009 REF: DRWG: - DRAWING NO: 14244</p>

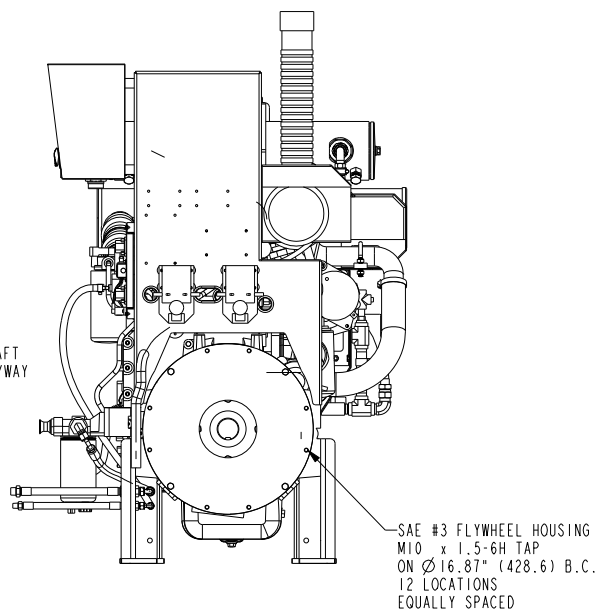


STUB SHAFT OPTION

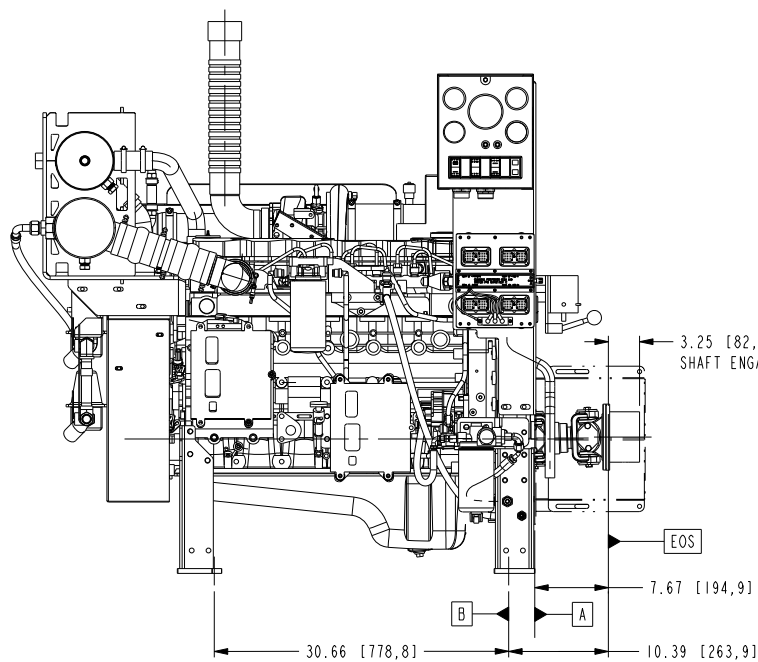


UL LISTED 1610
SHORT COUPLED SHAFT

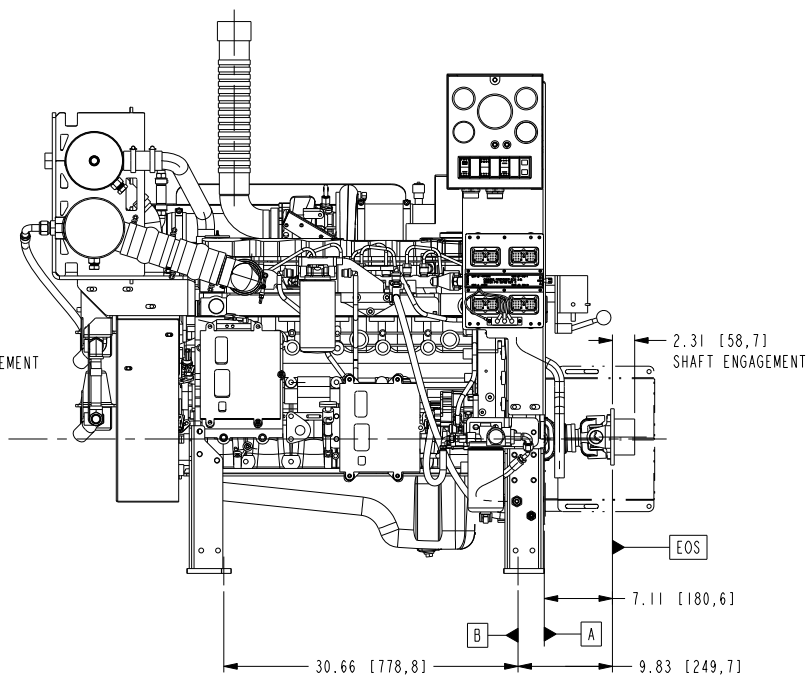


NON-LISTED 1480
SHORT COUPLED SHAFT

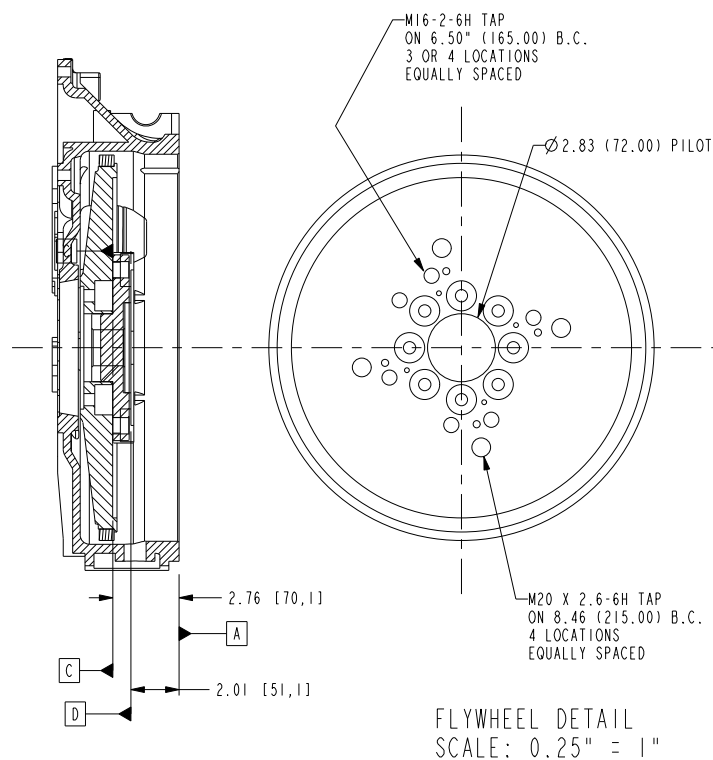


FLYWHEEL DETAIL
SCALE: 0.25" = 1"

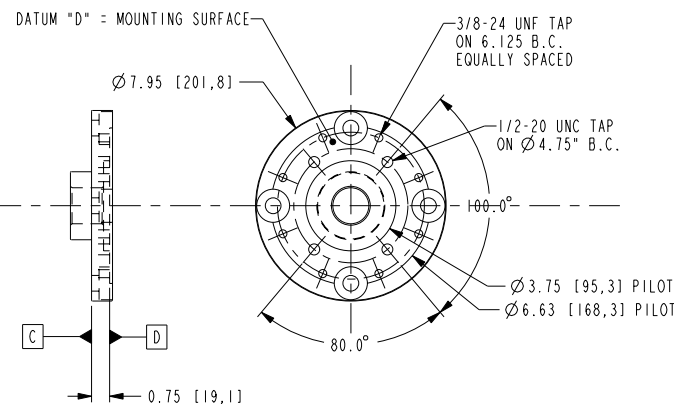

UJOINT ADAPTER DETAIL
SCALE: 0.25" = 1"

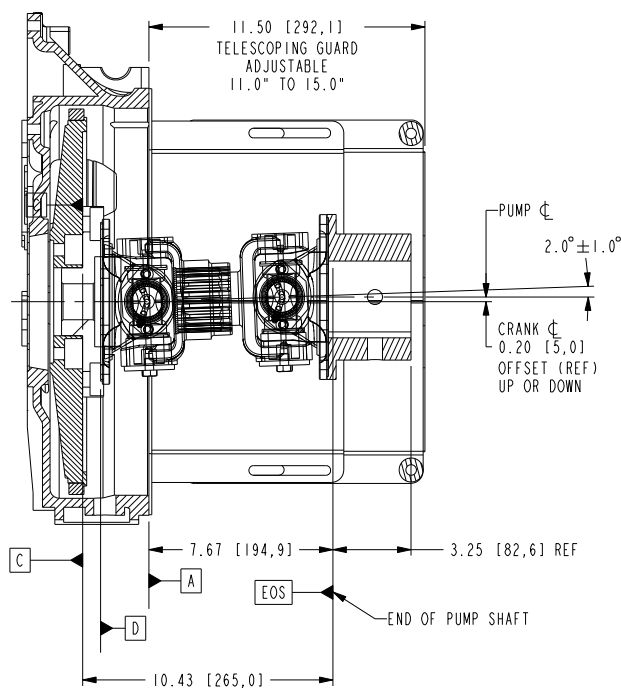

UL LISTED 1610
SHORT COUPLED SHAFT
SCALE: 0.25" = 1"
EST WEIGHT = 94 LBS (43 KG)

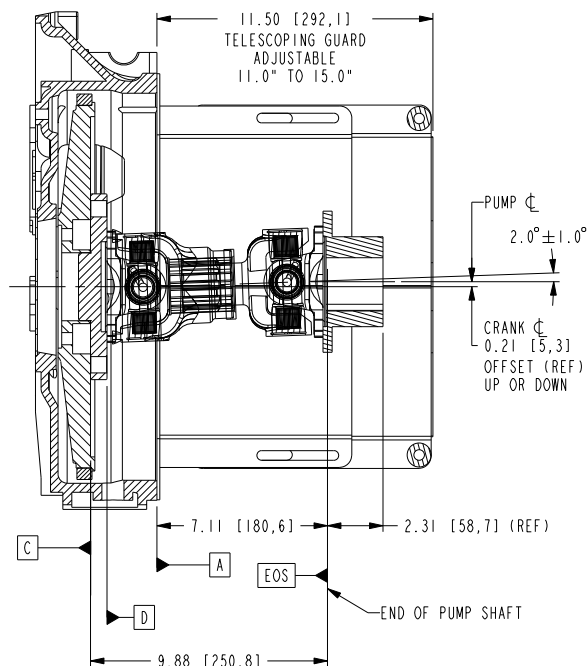


NON-LISTED 1480
SHORT COUPLED SHAFT
SCALE: 0.25" = 1"
EST WEIGHT = 69 LBS (32 KG)


LEGEND AND DATUM IDENTIFIER	
SHEET #1	INSTALLATION DRAWING
SHEET #2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET #3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET #4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	UJOINT ADAPTER MOUNTING SURFACE
DATUM "EQS"	END OF PUMP SHAFT

NOTES:





1. TORSIONAL ANALYSIS REQUIRED FOR VERTICAL TURBINE INSTALLATION
2. REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
3. DO NOT SCALE DRAWING.
4. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.
5. REFERENCE SHEET #1 FOR BASE FIREPUMP INTERFACE

REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE

<p>By using information contained on Trade Approval Application, the Contractor hereby certifies that the information is true and correct. By acceptance and installation of the equipment, the Contractor agrees to accept the responsibility for the accuracy and reliability of the equipment against the manufacturer's specifications. The Contractor agrees to accept the responsibility for the accuracy and reliability of the equipment against the manufacturer's specifications. The Contractor agrees to accept the responsibility for the accuracy and reliability of the equipment against the manufacturer's specifications.</p>		<p>COMMINS FIRE POWER LLC CORPORATE OFFICE 1500 N. LAURENCE BLVD WHITE BEAR LAKE, MN WWW.COMMINSFIREPOWER.COM</p>
<p>GENERAL ARRANGEMENT, INSTALLATION DRAWING CFPTE-F10/F20/F30/F40/F50/F60</p>		
<p>UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:</p>	<p>DWG UNITS: DRAWN BY: DAVE N IN./LB./S. PRO-ENGINEER SCALE: 0.125 SHEET EST WEIGHT: 0.000 4 OF 4</p>	
<p>ANGULAR DIMENSIONS ±</p>	<p>DATE: 07JAN2009 REF. DRWG: -</p>	
<p>ARC/ARC ANGLE PROJECTION</p>	<p>DRAWING NO: 14244</p>	

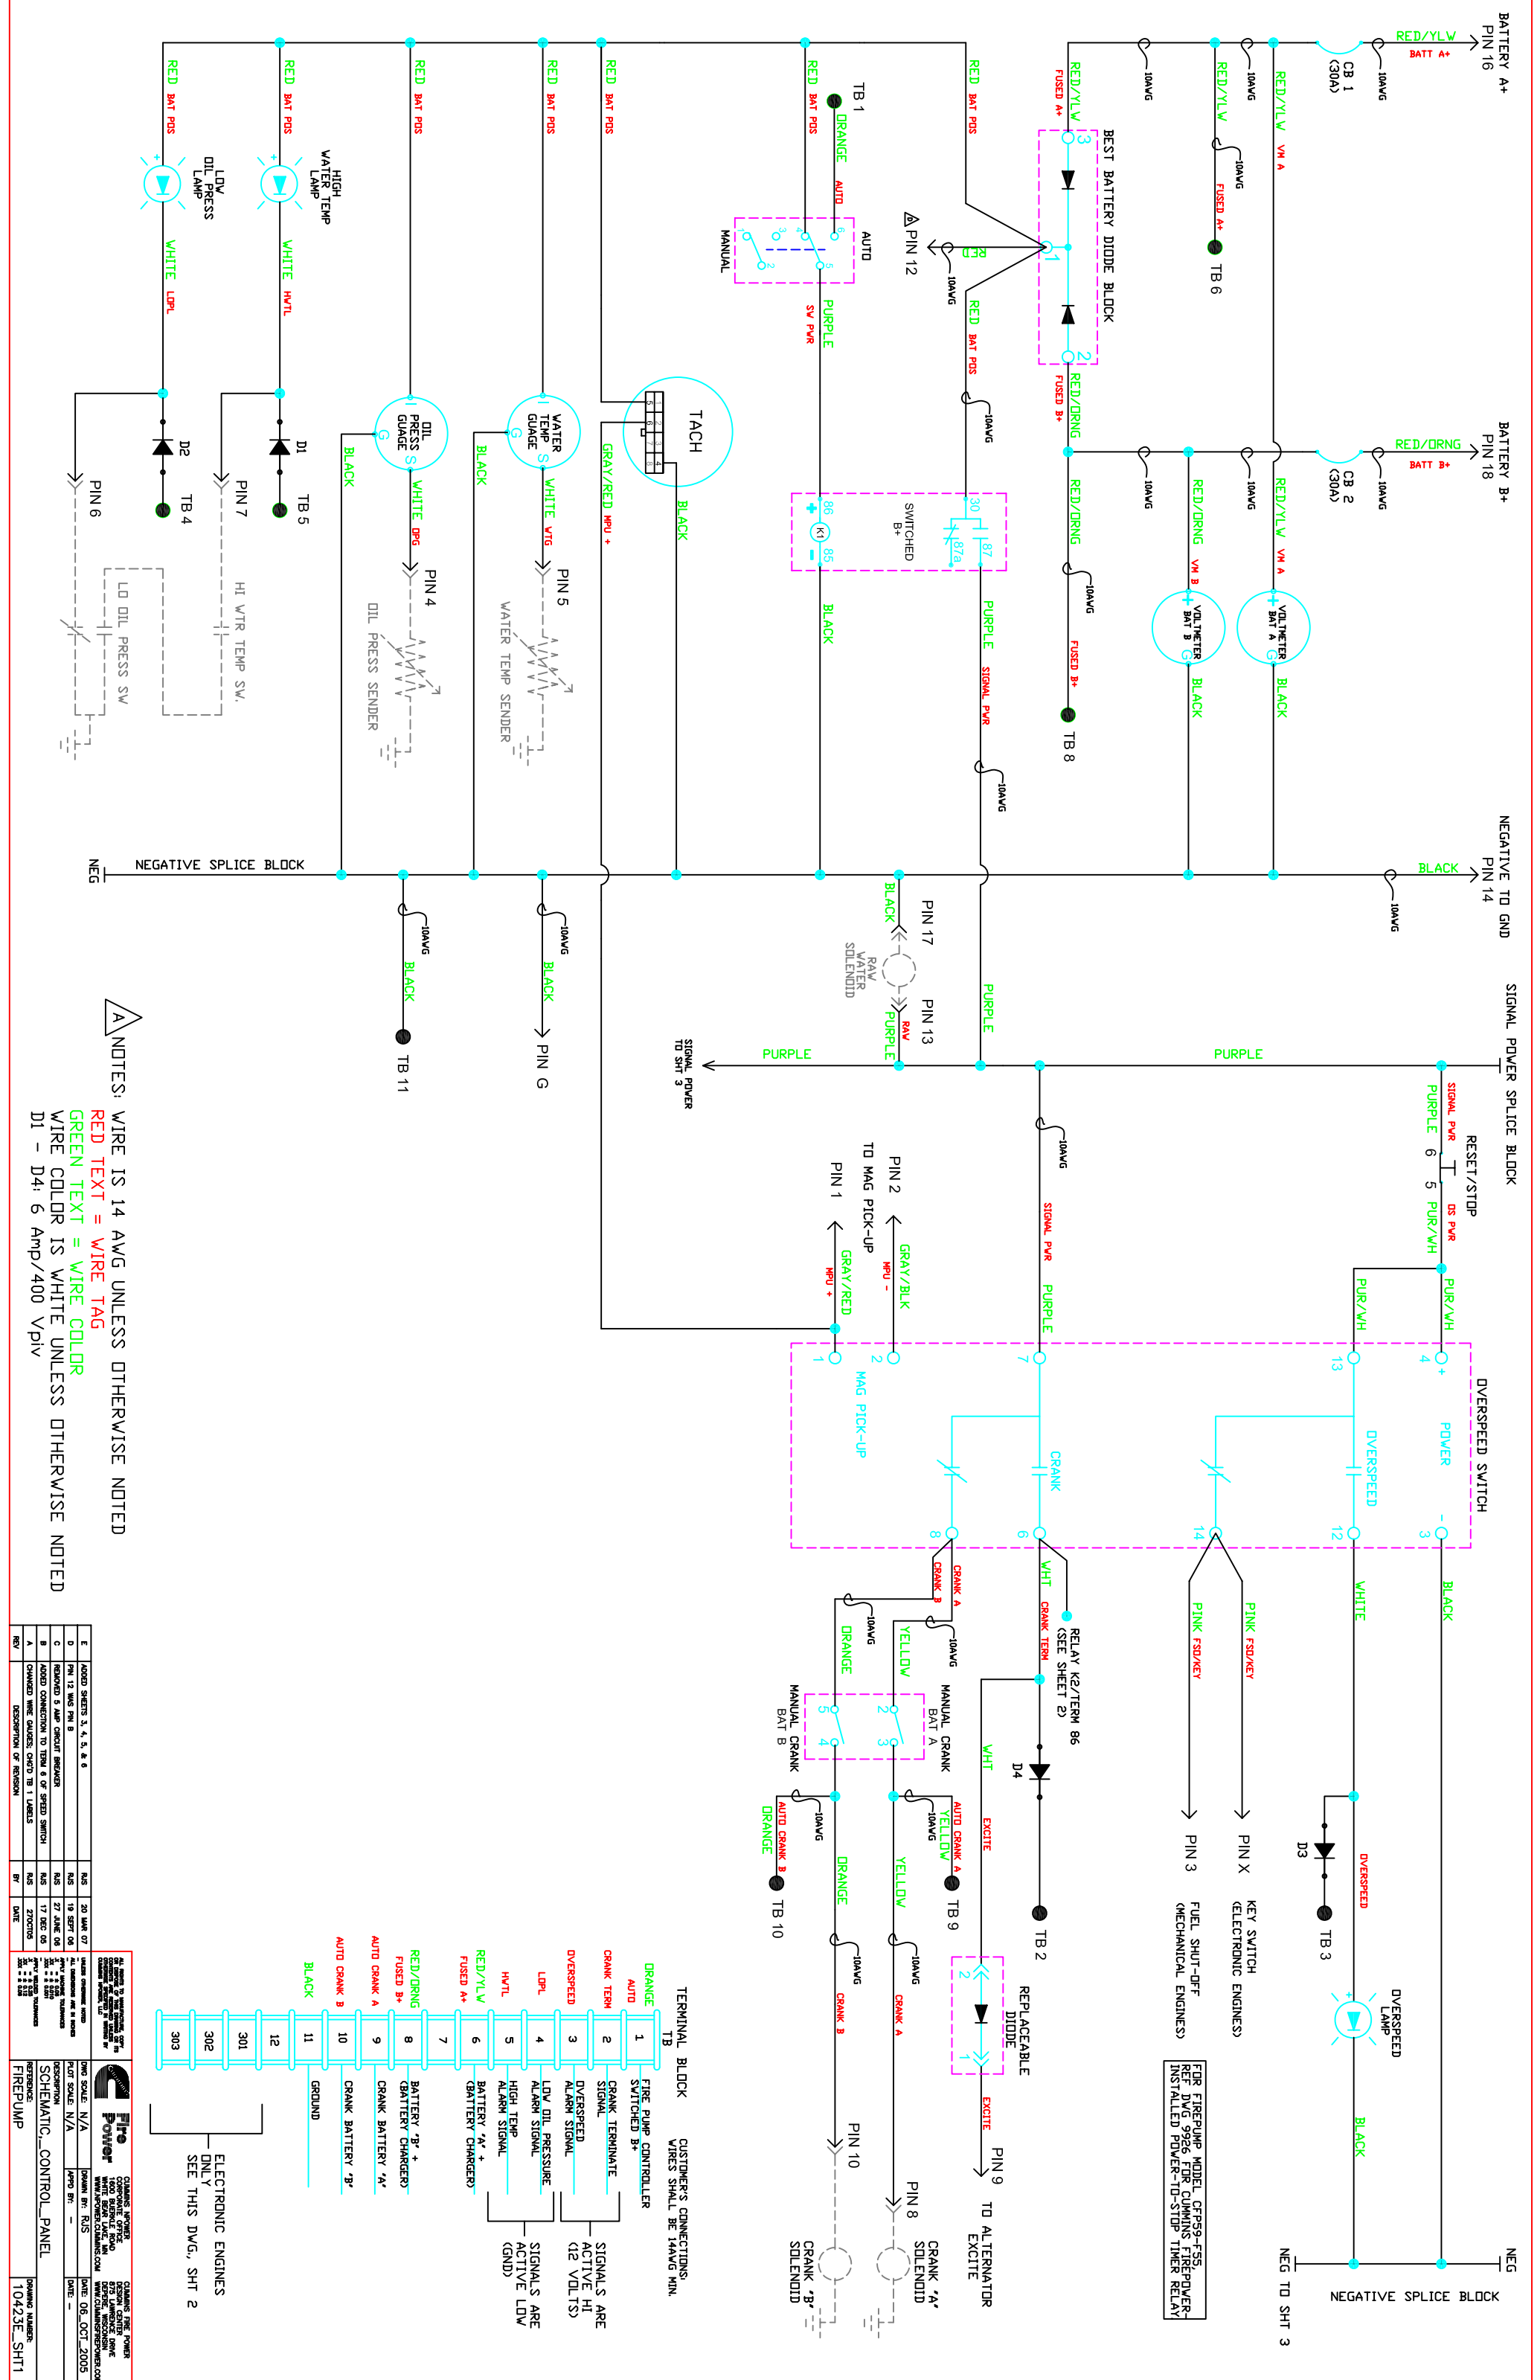

ADDITIONAL CIRCUITS FOR ELECTRONIC ENGINES

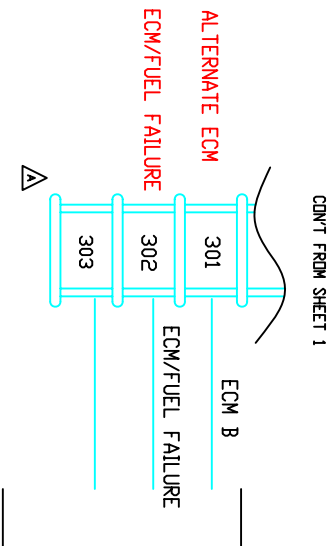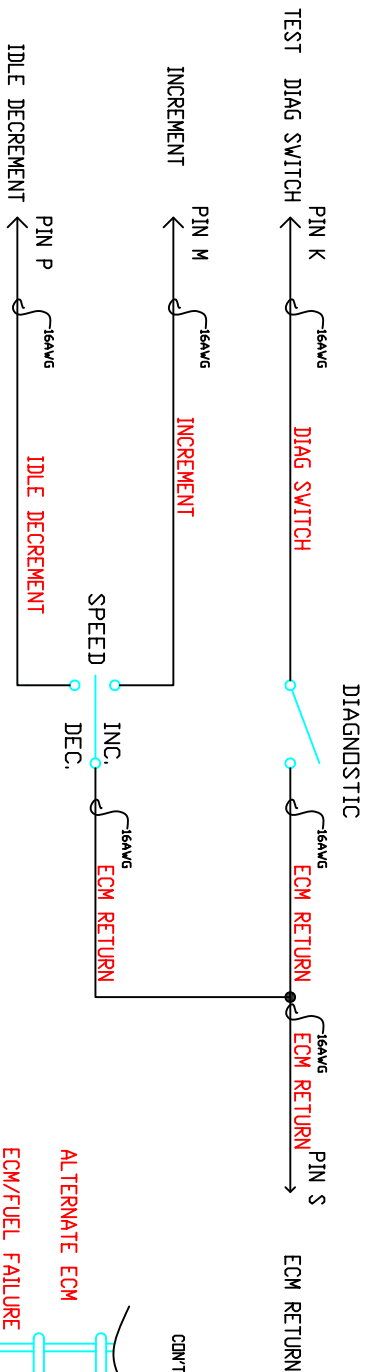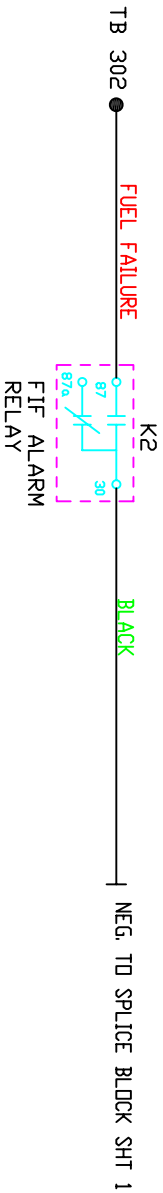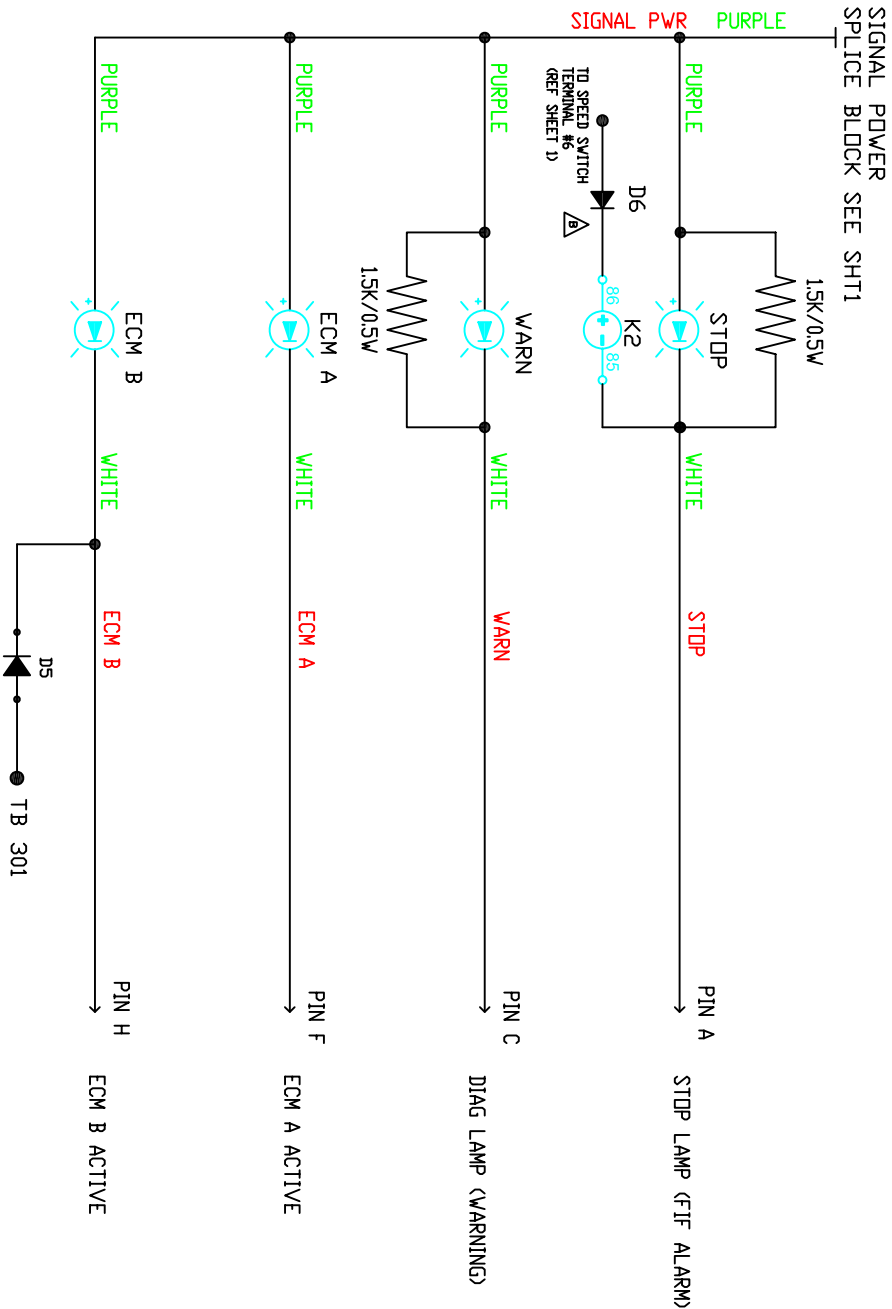


LEGEND:
K2 ECM/FUEL FAIL RELAY
R RESISTOR

NOTES: WIRE IS 14AWG UNLESS OTHERWISE NOTED
RED TEXT = WIRE TAG
GREEN TEXT = WIRE COLOR
WIRE COLOR IS WHITE UNLESS OTHERWISE NOTED
RESISTOR VALUE = 1.5kohms, 1/2W
MINIMUM DIODE RATING: 6A/400V


E	ADDED SHEETS 3, 4, 5, & 6	RJS	20 MAY 07	ALL WORK IS THE PROPERTY OF THE FIREPOWER COMPANY. ALL RIGHTS ARE RESERVED. NO PART OF THIS DRAWING IS TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF FIREPOWER COMPANY.	CLAIMING FIRE POWER DESIGN CENTER 104235E WHITE BEAR LAKE, UT 84138 WWW.FIREPOWER.COM
D	SEE SHT 1 FOR REV CHANGE	RJS	19 SEPT 06		DESIGN CENTER 104235E WHITE BEAR LAKE, UT 84138 WWW.FIREPOWER.COM
C	REVIEW	RJS	3 MAY 06	REV WORKING DRAWING	DATE: 06.01.2005
B	CHGD WIRING OF K2	RJS	17 DEC 05	3.1 - 2.5 INCH 2.6 - 2.5 INCH 2.7 - 2.5 INCH 2.8 - 2.5 INCH	
A	REV PAGE 1 REV NOTES	RJS	27 OCT 05		
REV	DESCRIPTION OF REVISION	BY	DATE		

ALL RIGHTS RESERVED. COPY RIGHT © 2005 BY WHITE BEAR LAKE, UT 84138	CLAIMING FIRE POWER DESIGN CENTER 104235E WHITE BEAR LAKE, UT 84138 WWW.FIREPOWER.COM
DATE: 06.01.2005	DATE: 06.01.2005
DESIGNER: RJS	DATE: 06.01.2005
DRW SCALE: N/A	PLOT SCALE: N/A
DESCRIPTION: SCHEMATIC: CONTROL_PANEL	REFERENCE: FIREPUMP
DRAWING NUMBER: 104235E_SHT2	

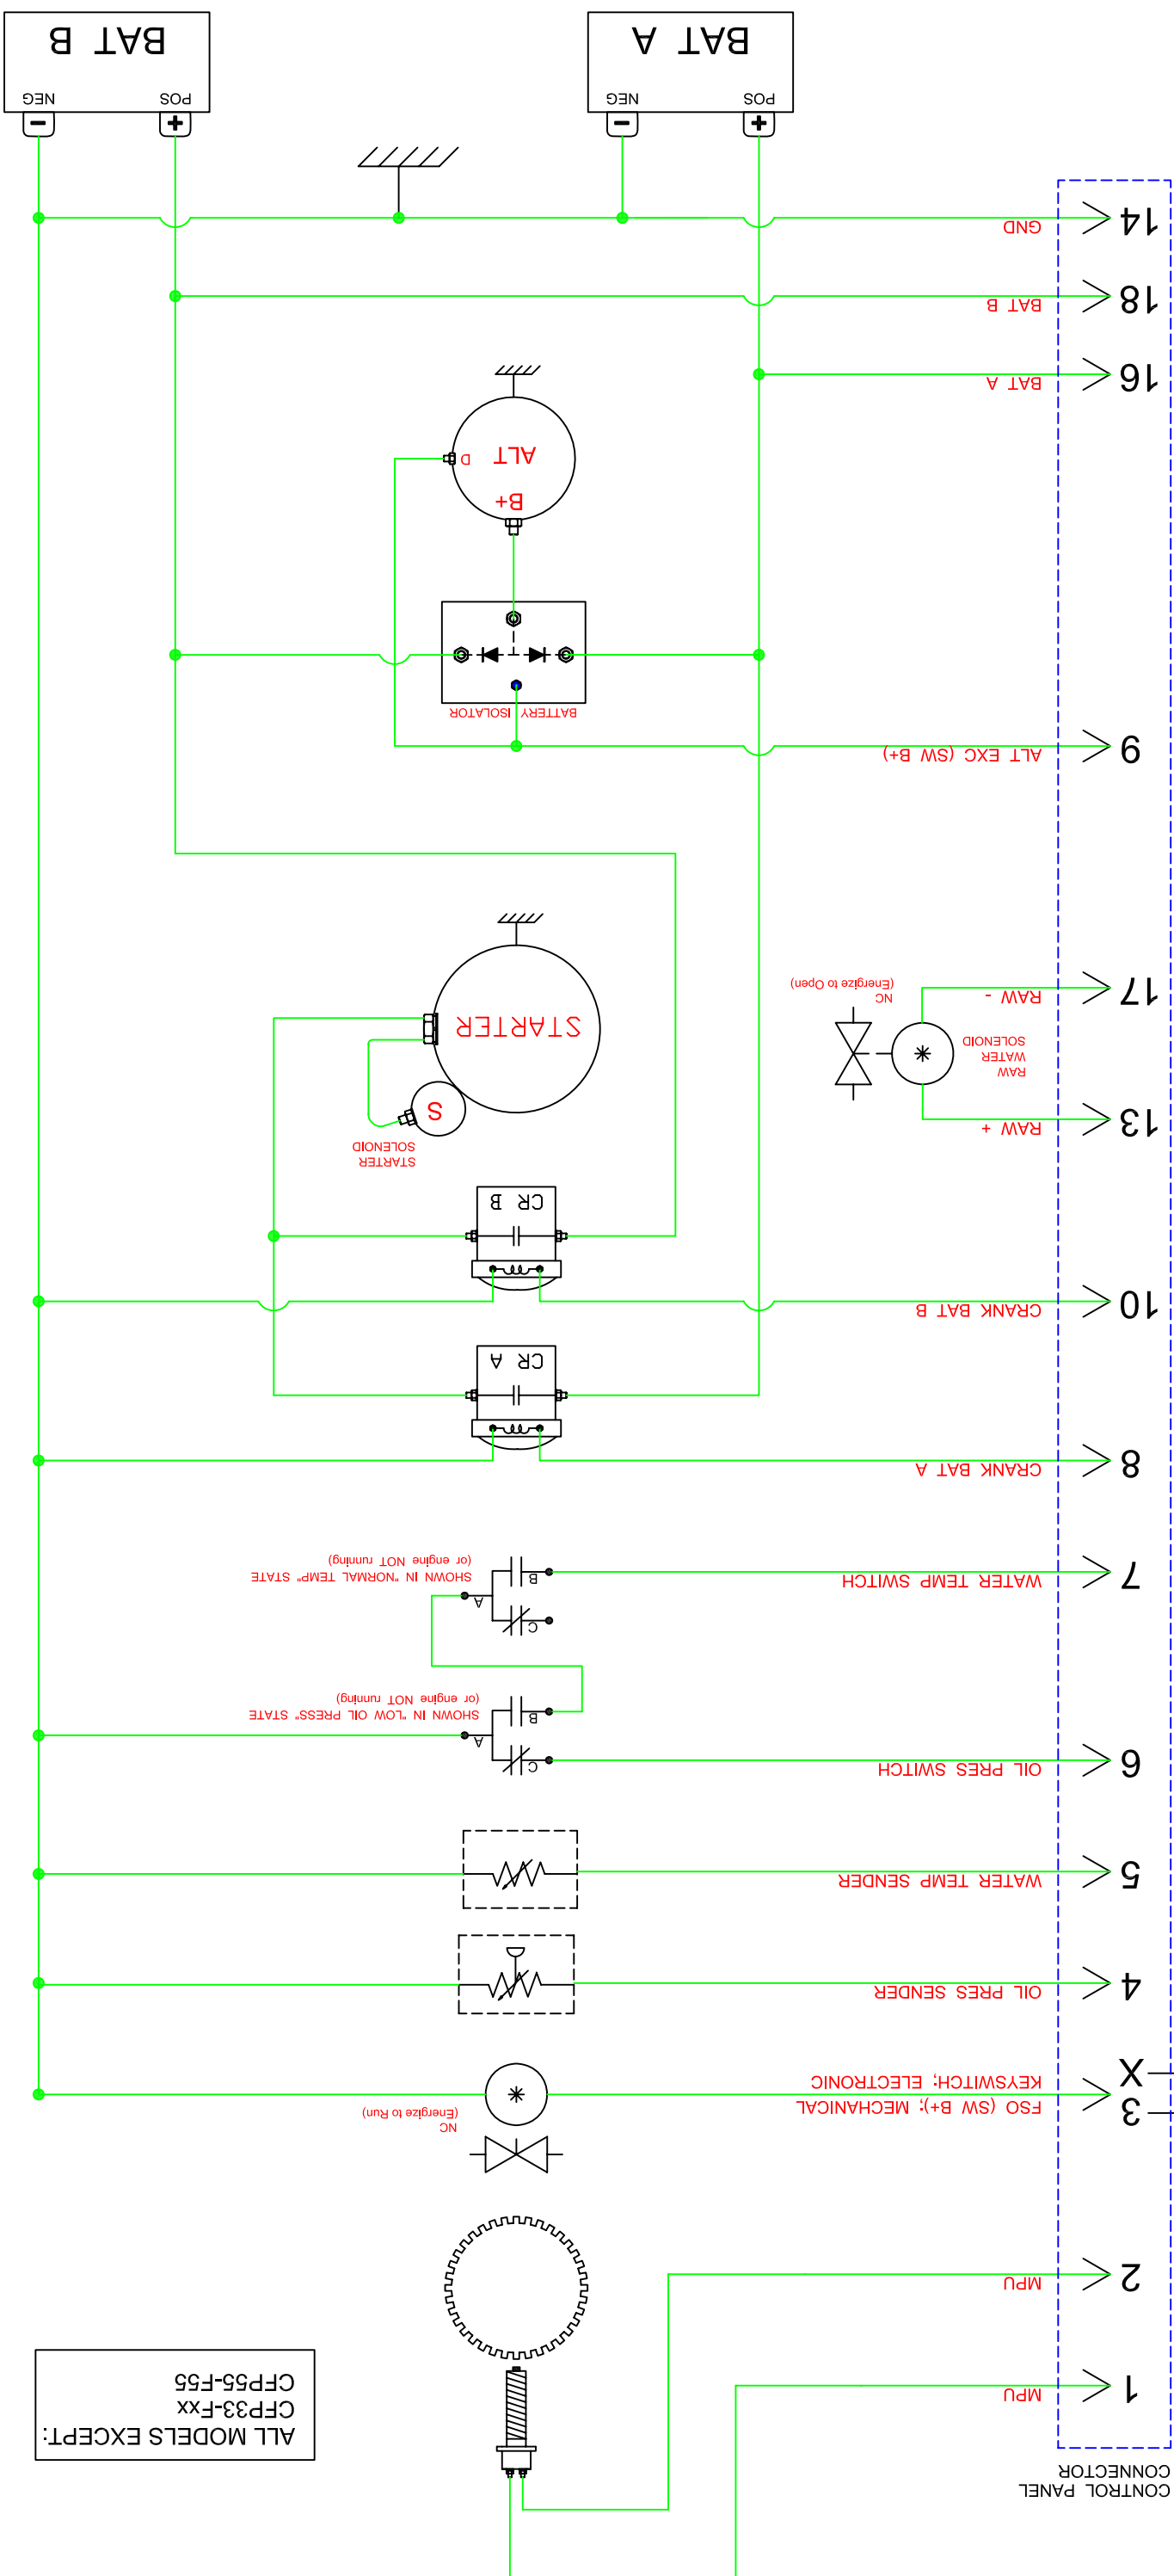


E	ARMED SHEETS 3, 4, 5, & 6	R/S	20 MAY 07	STATUS: UNKNOWN INFO	DWG SCALE: N/A	DRAWN BY: R/S	DATE: 06_OCT_2005
D	SEE SHF 1 FOR REQ CHANGE	R/S	19 SEPT 06	STATUS: REQ IN WORK	PLOT SCALE: N/A	APPD BY: -	DATE: -
C	REVISION	R/S	3 JULY 06	1 = 1/8" DIA 2 = 1/4" DIA 3 = 3/8" DIA 4 = 1/2" DIA 5 = 5/8" DIA 6 = 3/4" DIA 7 = 1" DIA	ENGINE		
B	CHD WINN OF R2	R/S	17 DEC 05	REV: 10000 TOLERANCE	ENGINE_SCHEMA		
A	REQ PAGE 1 REQ NOTES	R/S	27 OCT 06	REV: 10000 TOLERANCE			
REV	DESCRIPTION OF REVISION	BY	DATE	300 = 3/8" DIA 400 = 1/2" DIA 500 = 5/8" DIA 600 = 3/4" DIA 700 = 1" DIA	REFERENCE	DRAWING NUMBER:	10423E_SH73
						FIREPUMP	

<p>ALL PARTS TO SPECIFICATION OF NATIONAL FIRE PROTECTION ASSOCIATION (NFPA) 10A AND 10B, 10C, 10D, 10E, 10F, 10G, 10H, 10I, 10J, 10K, 10L, 10M, 10N, 10O, 10P, 10Q, 10R, 10S, 10T, 10U, 10V, 10W, 10X, 10Y, 10Z, 10AA, 10AB, 10AC, 10AD, 10AE, 10AF, 10AG, 10AH, 10AI, 10AJ, 10AK, 10AL, 10AM, 10AN, 10AO, 10AP, 10AQ, 10AR, 10AS, 10AT, 10AU, 10AV, 10AW, 10AX, 10AY, 10AZ, 10BA, 10BB, 10BC, 10BD, 10BE, 10BF, 10BG, 10BH, 10BI, 10BJ, 10BK, 10BL, 10BM, 10BN, 10BO, 10BP, 10BQ, 10BR, 10BS, 10BT, 10BU, 10BV, 10BW, 10BX, 10BY, 10BZ, 10CA, 10CB, 10CC, 10CD, 10CE, 10CF, 10CG, 10CH, 10CI, 10CJ, 10CK, 10CL, 10CM, 10CN, 10CO, 10CP, 10CQ, 10CR, 10CS, 10CT, 10CU, 10CV, 10CW, 10CX, 10CY, 10CZ, 10DA, 10DB, 10DC, 10DD, 10DE, 10DF, 10DG, 10DH, 10DI, 10DJ, 10DK, 10DL, 10DM, 10DN, 10DO, 10DP, 10DQ, 10DR, 10DS, 10DT, 10DU, 10DV, 10DW, 10DX, 10DY, 10DZ, 10EA, 10EB, 10EC, 10ED, 10EE, 10EF, 10EG, 10EH, 10EI, 10EJ, 10EK, 10EL, 10EM, 10EN, 10EO, 10EP, 10EQ, 10ER, 10ES, 10ET, 10EU, 10EV, 10EW, 10EX, 10EY, 10EZ, 10FA, 10FB, 10FC, 10FD, 10FE, 10FF, 10FG, 10FH, 10FI, 10FJ, 10FK, 10FL, 10FM, 10FN, 10FO, 10FP, 10FQ, 10FR, 10FS, 10FT, 10FU, 10FV, 10FW, 10FX, 10FY, 10FZ, 10GA, 10GB, 10GC, 10GD, 10GE, 10GF, 10GG, 10GH, 10GI, 10GJ, 10GK, 10GL, 10GM, 10GN, 10GO, 10GP, 10GQ, 10GR, 10GS, 10GT, 10GU, 10GV, 10GW, 10GX, 10GY, 10GZ, 10HA, 10HB, 10HC, 10HD, 10HE, 10HF, 10HG, 10HH, 10HI, 10HJ, 10HK, 10HL, 10HM, 10HN, 10HO, 10HP, 10HQ, 10HR, 10HS, 10HT, 10HU, 10HV, 10HW, 10HX, 10HY, 10HZ, 10IA, 10IB, 10IC, 10ID, 10IE, 10IF, 10IG, 10IH, 10II, 10IJ, 10IK, 10IL, 10IM, 10IN, 10IO, 10IP, 10IQ, 10IR, 10IS, 10IT, 10IU, 10IV, 10IW, 10IX, 10IY, 10IZ, 10JA, 10JB, 10JC, 10JD, 10JE, 10JF, 10JG, 10JH, 10JI, 10JJ, 10JK, 10JL, 10JM, 10JN, 10JO, 10JP, 10JQ, 10JR, 10JS, 10JT, 10JU, 10JV, 10JW, 10JX, 10JY, 10JZ, 10KA, 10KB, 10KC, 10KD, 10KE, 10KF, 10KG, 10KH, 10KI, 10KJ, 10KK, 10KL, 10KM, 10KN, 10KO, 10KP, 10KQ, 10KR, 10KS, 10KT, 10KU, 10KV, 10KW, 10KX, 10KY, 10KZ, 10LA, 10LB, 10LC, 10LD, 10LE, 10LF, 10LG, 10LH, 10LI, 10LJ, 10LK, 10LL, 10LM, 10LN, 10LO, 10LP, 10LQ, 10LR, 10LS, 10LT, 10LU, 10LV, 10LW, 10LX, 10LY, 10LZ, 10MA, 10MB, 10MC, 10MD, 10ME, 10MF, 10MG, 10MH, 10MI, 10MJ, 10MK, 10ML, 10MN, 10MO, 10MP, 10MQ, 10MR, 10MS, 10MT, 10MU, 10MV, 10MW, 10MX, 10MY, 10MZ, 10NA, 10NB, 10NC, 10ND, 10NE, 10NF, 10NG, 10NH, 10NI, 10NJ, 10NK, 10NL, 10NM, 10NO, 10NP, 10NQ, 10NR, 10NS, 10NT, 10NU, 10NV, 10NW, 10NX, 10NY, 10NZ, 10OA, 10OB, 10OC, 10OD, 10OE, 10OF, 10OG, 10OH, 10OI, 10OJ, 10OK, 10OL, 10OM, 10ON, 10OO, 10OP, 10OQ, 10OR, 10OS, 10OT, 10OU, 10OV, 10OW, 10OX, 10OY, 10OZ, 10PA, 10PB, 10PC, 10PD, 10PE, 10PF, 10PG, 10PH, 10PI, 10PJ, 10PK, 10PL, 10PM, 10PN, 10PO, 10PP, 10PQ, 10PR, 10PS, 10PT, 10PU, 10PV, 10PW, 10PX, 10PY, 10PZ, 10QA, 10QB, 10QC, 10QD, 10QE, 10QF, 10QG, 10QH, 10QI, 10QJ, 10QK, 10QL, 10QM, 10QN, 10QO, 10QP, 10QQ, 10QR, 10QS, 10QT, 10QU, 10QV, 10QW, 10QX, 10QY, 10QZ, 10RA, 10RB, 10RC, 10RD, 10RE, 10RF, 10RG, 10RH, 10RI, 10RJ, 10RK, 10RL, 10RM, 10RN, 10RO, 10RP, 10RQ, 10RR, 10RS, 10RT, 10RU, 10RV, 10RW, 10RX, 10RY, 10RZ, 10SA, 10SB, 10SC, 10SD, 10SE, 10SF, 10SG, 10SH, 10SI, 10SJ, 10SK, 10SL, 10SM, 10SN, 10SO, 10SP, 10SQ, 10SR, 10SS, 10ST, 10SU, 10SV, 10SW, 10SX, 10SY, 10SZ, 10TA, 10TB, 10TC, 10TD, 10TE, 10TF, 10TG, 10TH, 10TI, 10TJ, 10TK, 10TL, 10TM, 10TN, 10TO, 10TP, 10TQ, 10TR, 10TS, 10TT, 10TU, 10TV, 10TW, 10TX, 10TY, 10TZ, 10UA, 10UB, 10UC, 10UD, 10UE, 10UF, 10UG, 10UH, 10UI, 10UJ, 10UK, 10UL, 10UM, 10UN, 10UO, 10UP, 10UQ, 10UR, 10US, 10UT, 10UU, 10UV, 10UW, 10UX, 10UY, 10UZ, 10VA, 10VB, 10VC, 10VD, 10VE, 10VF, 10VG, 10VH, 10VI, 10VJ, 10VK, 10VL, 10VM, 10VN, 10VO, 10VP, 10VQ, 10VR, 10VS, 10VT, 10VU, 10VV, 10VW, 10VX, 10VY, 10VZ, 10WA, 10WB, 10WC, 10WD, 10WE, 10WF, 10WG, 10WH, 10WI, 10WJ, 10WK, 10WL, 10WM, 10WN, 10WO, 10WP, 10WQ, 10WR, 10WS, 10WT, 10WU, 10WV, 10WW, 10WX, 10WY, 10WZ, 10XA, 10XB, 10XC, 10XD, 10XE, 10XF, 10XG, 10XH, 10XI, 10XJ, 10XK, 10XL, 10XM, 10XN, 10XO, 10XP, 10XQ, 10XR, 10XS, 10XT, 10XU, 10XV, 10XW, 10XZ, 10YA, 10YB, 10YC, 10YD, 10YE, 10YF, 10YG, 10YH, 10YI, 10YJ, 10YK, 10YL, 10YM, 10YN, 10YO, 10YP, 10YQ, 10YR, 10YS, 10YT, 10YU, 10YV, 10YW, 10YZ, 10ZA, 10ZB, 10ZC, 10ZD, 10ZE, 10ZF, 10ZG, 10ZH, 10ZI, 10ZJ, 10ZK, 10ZL, 10ZM, 10ZN, 10ZO, 10ZP, 10ZQ, 10ZR, 10ZS, 10ZT, 10ZU, 10ZV, 10ZW, 10ZX, 10ZY, 10ZZ, 10AAA, 10AAB, 10AAC, 10AAD, 10AAE, 10AAF, 10AAG, 10AAH, 10AAI, 10AAJ, 10AAK, 10AAL, 10AAM, 10AAN, 10AAO, 10AAP, 10AAQ, 10AAR, 10AAS, 10AAT, 10AAU, 10AAV, 10AAW, 10AAX, 10AAZ, 10AAB, 10AAC, 10AAD, 10AAE, 10AAF, 10AAG, 10AAH, 10AAI, 10AAJ, 10AAK, 10AAL, 10AAM, 10AAN, 10AAO, 10AAP, 10AAQ, 10AAR, 10AAS, 10AAT, 10AAU, 10AAV, 10AAW, 10AAX, 10AAZ, 10AAB, 10AAC, 10AAD, 10AAE, 10AAF, 1</p>	
---	--

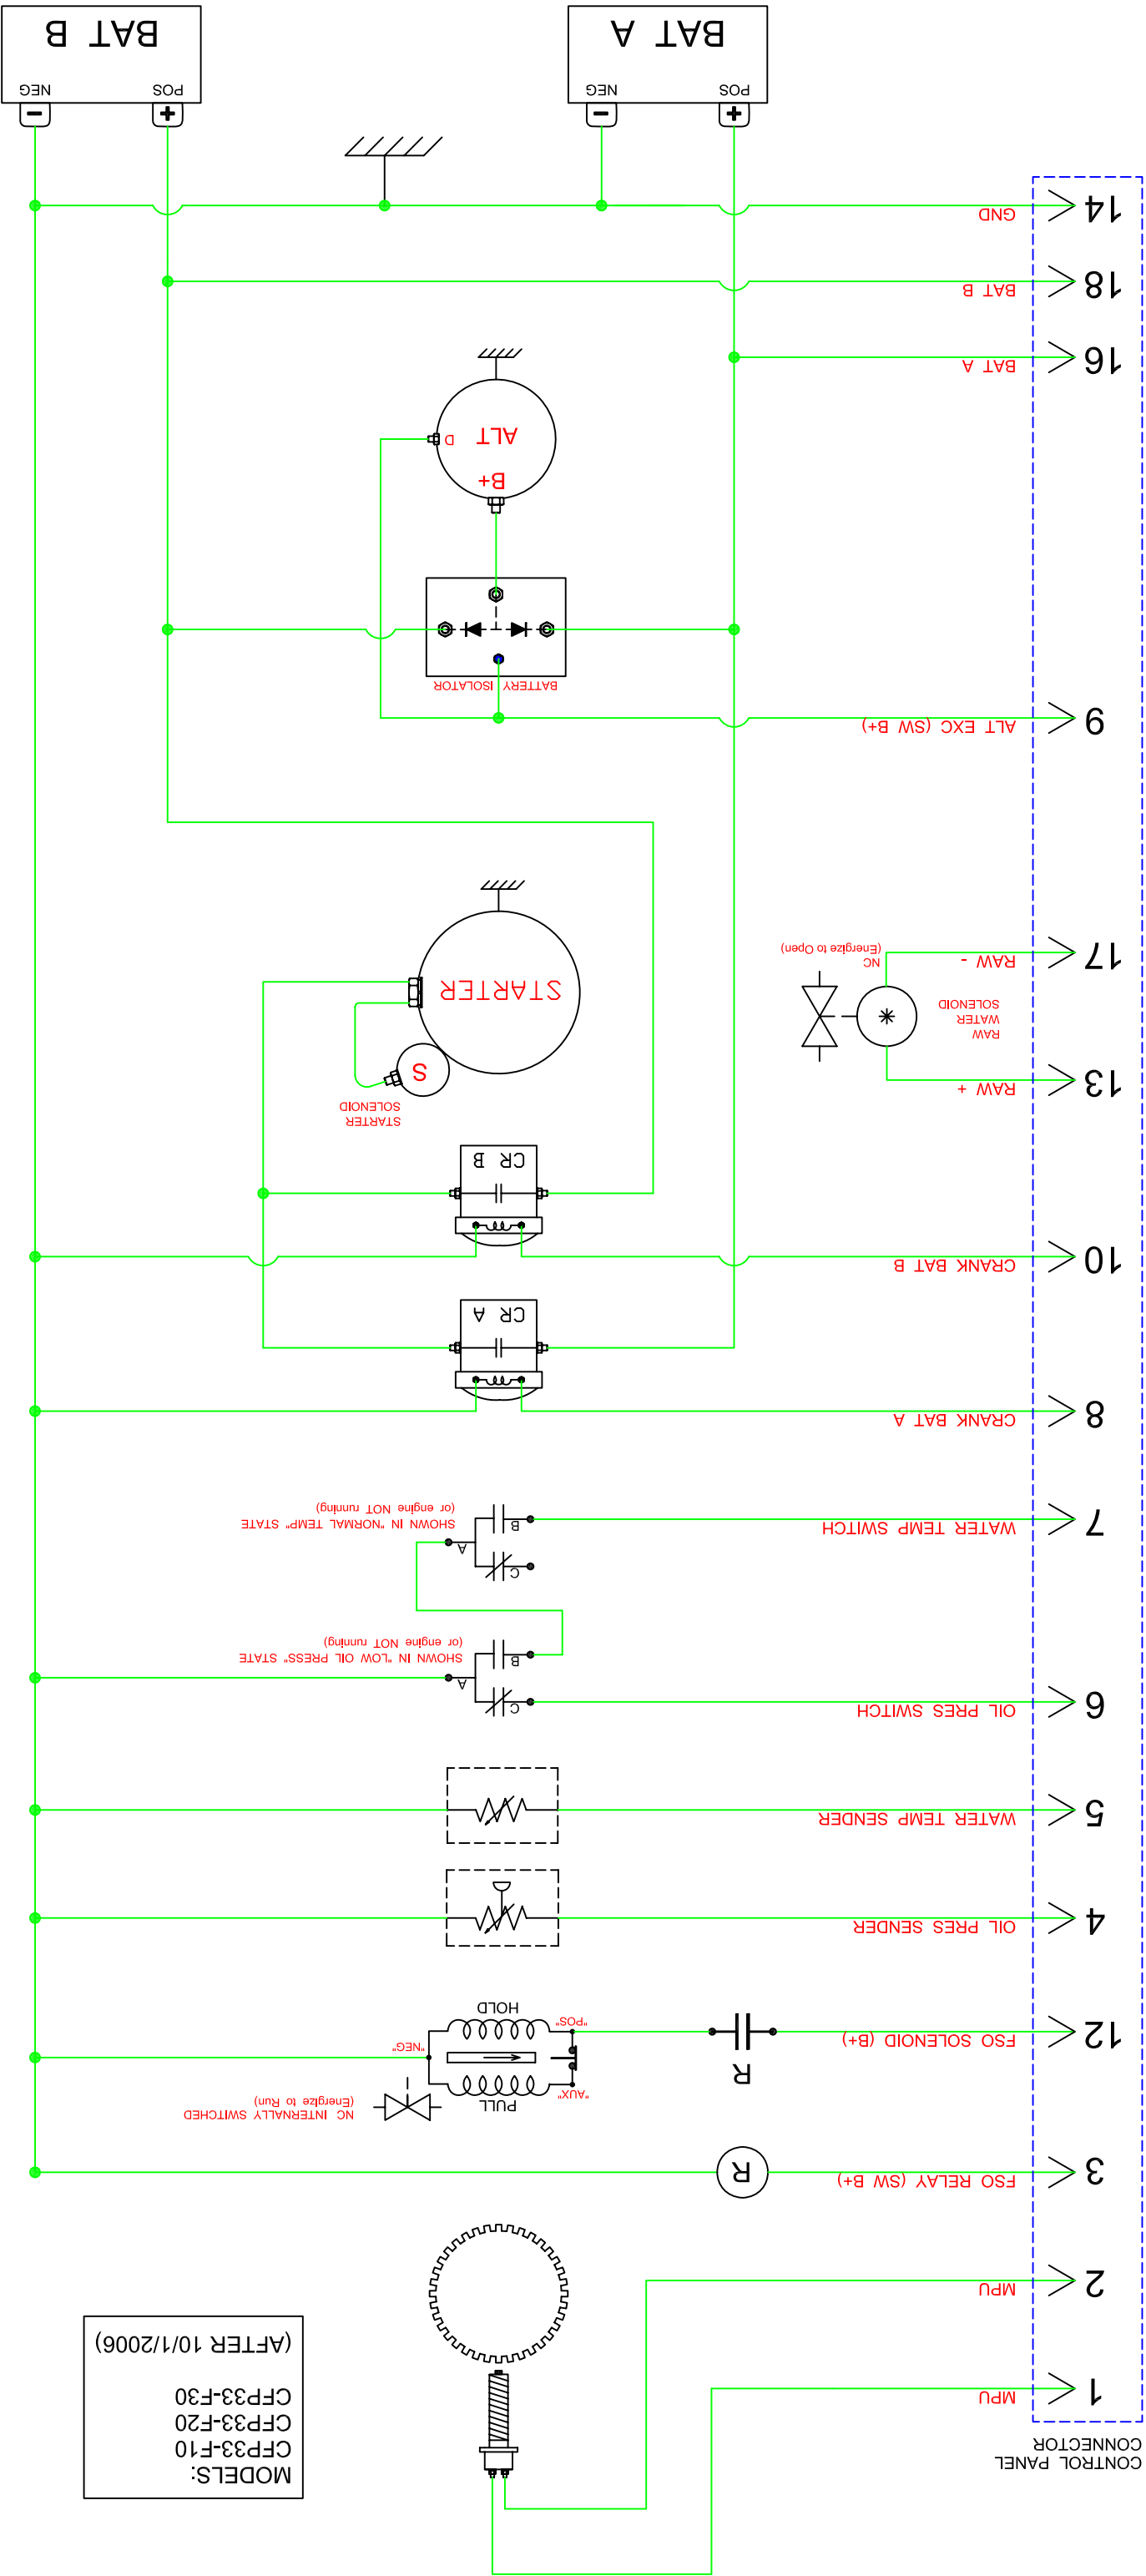

MODELS:
CFP33-F10
CFP33-F20
CFP33-F30
(AFTER 10/1/2006)

Fire Power		Fire Power	
CLAIMING FIRE POWER		CLAIMING FIRE POWER	
1000 POWER OF TWO		1000 POWER OF TWO	
WHITE BEAR LAKE, ILL. 60191		WHITE BEAR LAKE, ILL. 60191	
WWW.FIREPOWER.COM		WWW.FIREPOWER.COM	
DRAWING NO. 104235C-SHT4		DRAWING NO. 104235C-SHT4	
DATE: 06.01.2005		DATE: 06.01.2005	
REV. 1		REV. 1	
REV. 2		REV. 2	
REV. 3		REV. 3	
REV. 4		REV. 4	
REV. 5		REV. 5	
REV. 6		REV. 6	
REV. 7		REV. 7	
REV. 8		REV. 8	
REV. 9		REV. 9	
REV. 10		REV. 10	
REV. 11		REV. 11	
REV. 12		REV. 12	
REV. 13		REV. 13	
REV. 14		REV. 14	
REV. 15		REV. 15	
REV. 16		REV. 16	
REV. 17		REV. 17	
REV. 18		REV. 18	
REV. 19		REV. 19	
REV. 20		REV. 20	
REV. 21		REV. 21	
REV. 22		REV. 22	
REV. 23		REV. 23	
REV. 24		REV. 24	
REV. 25		REV. 25	
REV. 26		REV. 26	
REV. 27		REV. 27	
REV. 28		REV. 28	
REV. 29		REV. 29	
REV. 30		REV. 30	
REV. 31		REV. 31	
REV. 32		REV. 32	
REV. 33		REV. 33	
REV. 34		REV. 34	
REV. 35		REV. 35	
REV. 36		REV. 36	
REV. 37		REV. 37	
REV. 38		REV. 38	
REV. 39		REV. 39	
REV. 40		REV. 40	
REV. 41		REV. 41	
REV. 42		REV. 42	
REV. 43		REV. 43	
REV. 44		REV. 44	
REV. 45		REV. 45	
REV. 46		REV. 46	
REV. 47		REV. 47	
REV. 48		REV. 48	
REV. 49		REV. 49	
REV. 50		REV. 50	
REV. 51		REV. 51	
REV. 52		REV. 52	
REV. 53		REV. 53	
REV. 54		REV. 54	
REV. 55		REV. 55	
REV. 56		REV. 56	
REV. 57		REV. 57	
REV. 58		REV. 58	
REV. 59		REV. 59	
REV. 60		REV. 60	
REV. 61		REV. 61	
REV. 62		REV. 62	
REV. 63		REV. 63	
REV. 64		REV. 64	
REV. 65		REV. 65	
REV. 66		REV. 66	
REV. 67		REV. 67	
REV. 68		REV. 68	
REV. 69		REV. 69	
REV. 70		REV. 70	
REV. 71		REV. 71	
REV. 72		REV. 72	
REV. 73		REV. 73	
REV. 74		REV. 74	
REV. 75		REV. 75	
REV. 76		REV. 76	
REV. 77		REV. 77	
REV. 78		REV. 78	
REV. 79		REV. 79	
REV. 80		REV. 80	
REV. 81		REV. 81	
REV. 82		REV. 82	
REV. 83		REV. 83	
REV. 84		REV. 84	
REV. 85		REV. 85	
REV. 86		REV. 86	
REV. 87		REV. 87	
REV. 88		REV. 88	
REV. 89		REV. 89	
REV. 90		REV. 90	
REV. 91		REV. 91	
REV. 92		REV. 92	
REV. 93		REV. 93	
REV. 94		REV. 94	
REV. 95		REV. 95	
REV. 96		REV. 96	
REV. 97		REV. 97	
REV. 98		REV. 98	
REV. 99		REV. 99	
REV. 100		REV. 100	

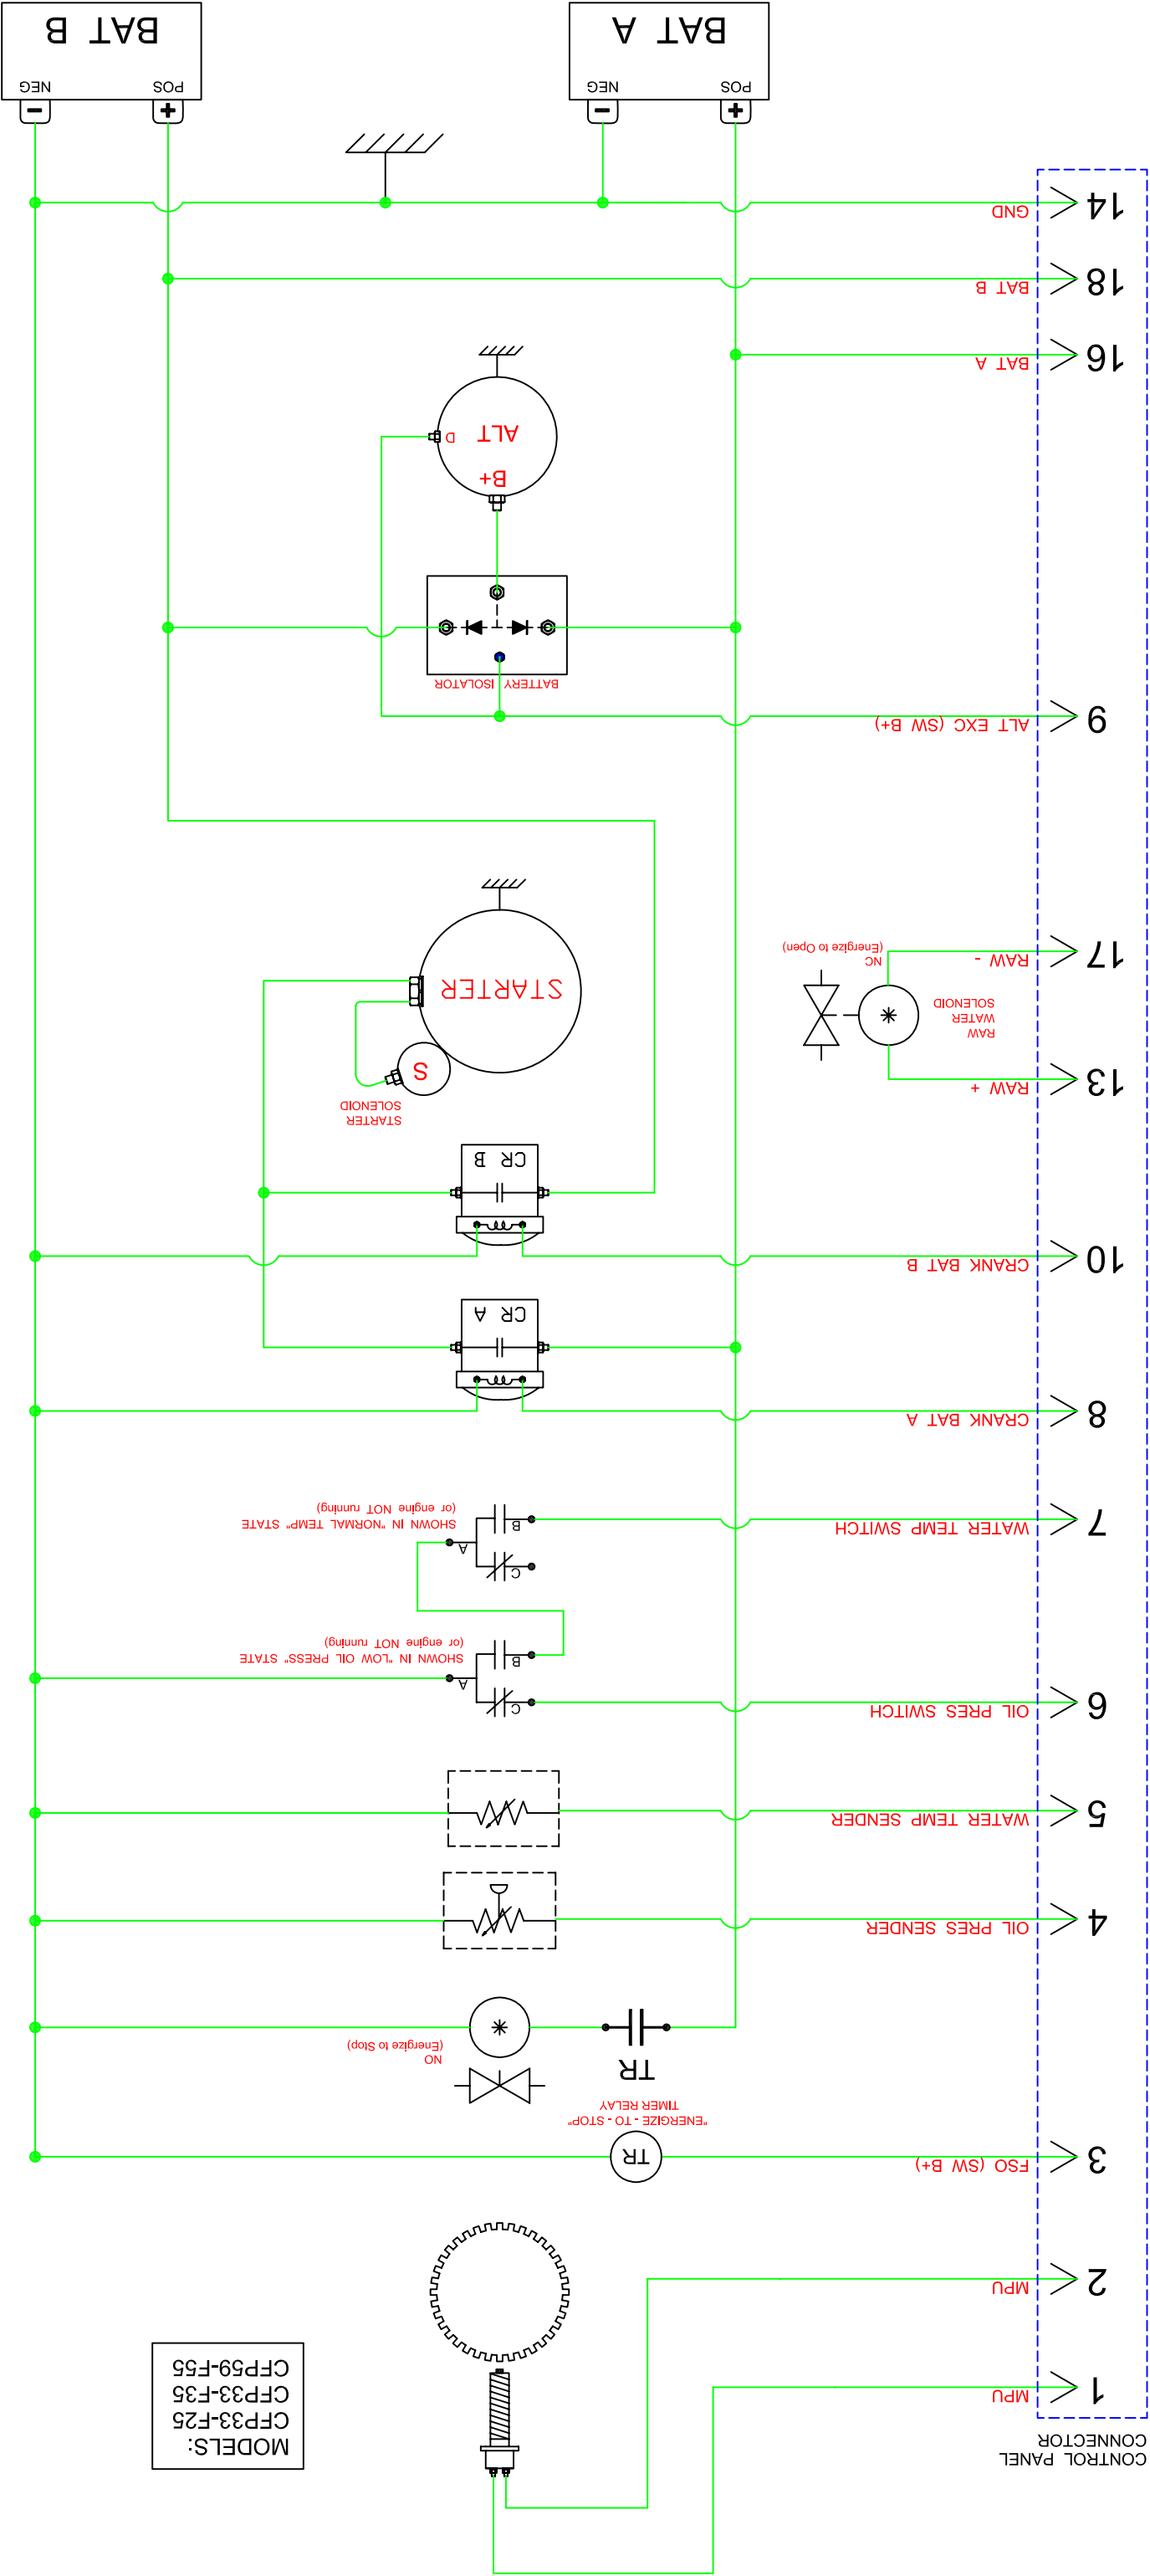

MODELS:
CFP59-F55
CFP33-F35
CFP33-F25

E		ISSUED SHEETS 3, 4, 5, & 6	R/S	20 MAY 07
D		SEE SHF 1 FOR REV CHANGE	R/S	19 SEP 06
C		REVIEW	R/S	3 JULY 06
B		CHGD WIRING OF X2	R/S	17 DEC 05
A		REV PAGE 1 REV NOTES	R/S	27 OCT 05
REV		DESCRIPTION OF REVISION	BY	DATE

Fire Power
CLAIMING FIRE POWER
1000 ROUTE OF 72
WHITE BEAR LAKE, UT 84138
WWW.FIREPOWER.COM


DESIGN CENTER
1000 ROUTE OF 72
WHITE BEAR LAKE, UT 84138
WWW.FIREPOWER.COM

DATE: 06_OCT_2005

ENGINE SCHEMATIC

REFERENCE: FIREPUMP

DRAWING NUMBER: 10423E_SHT5

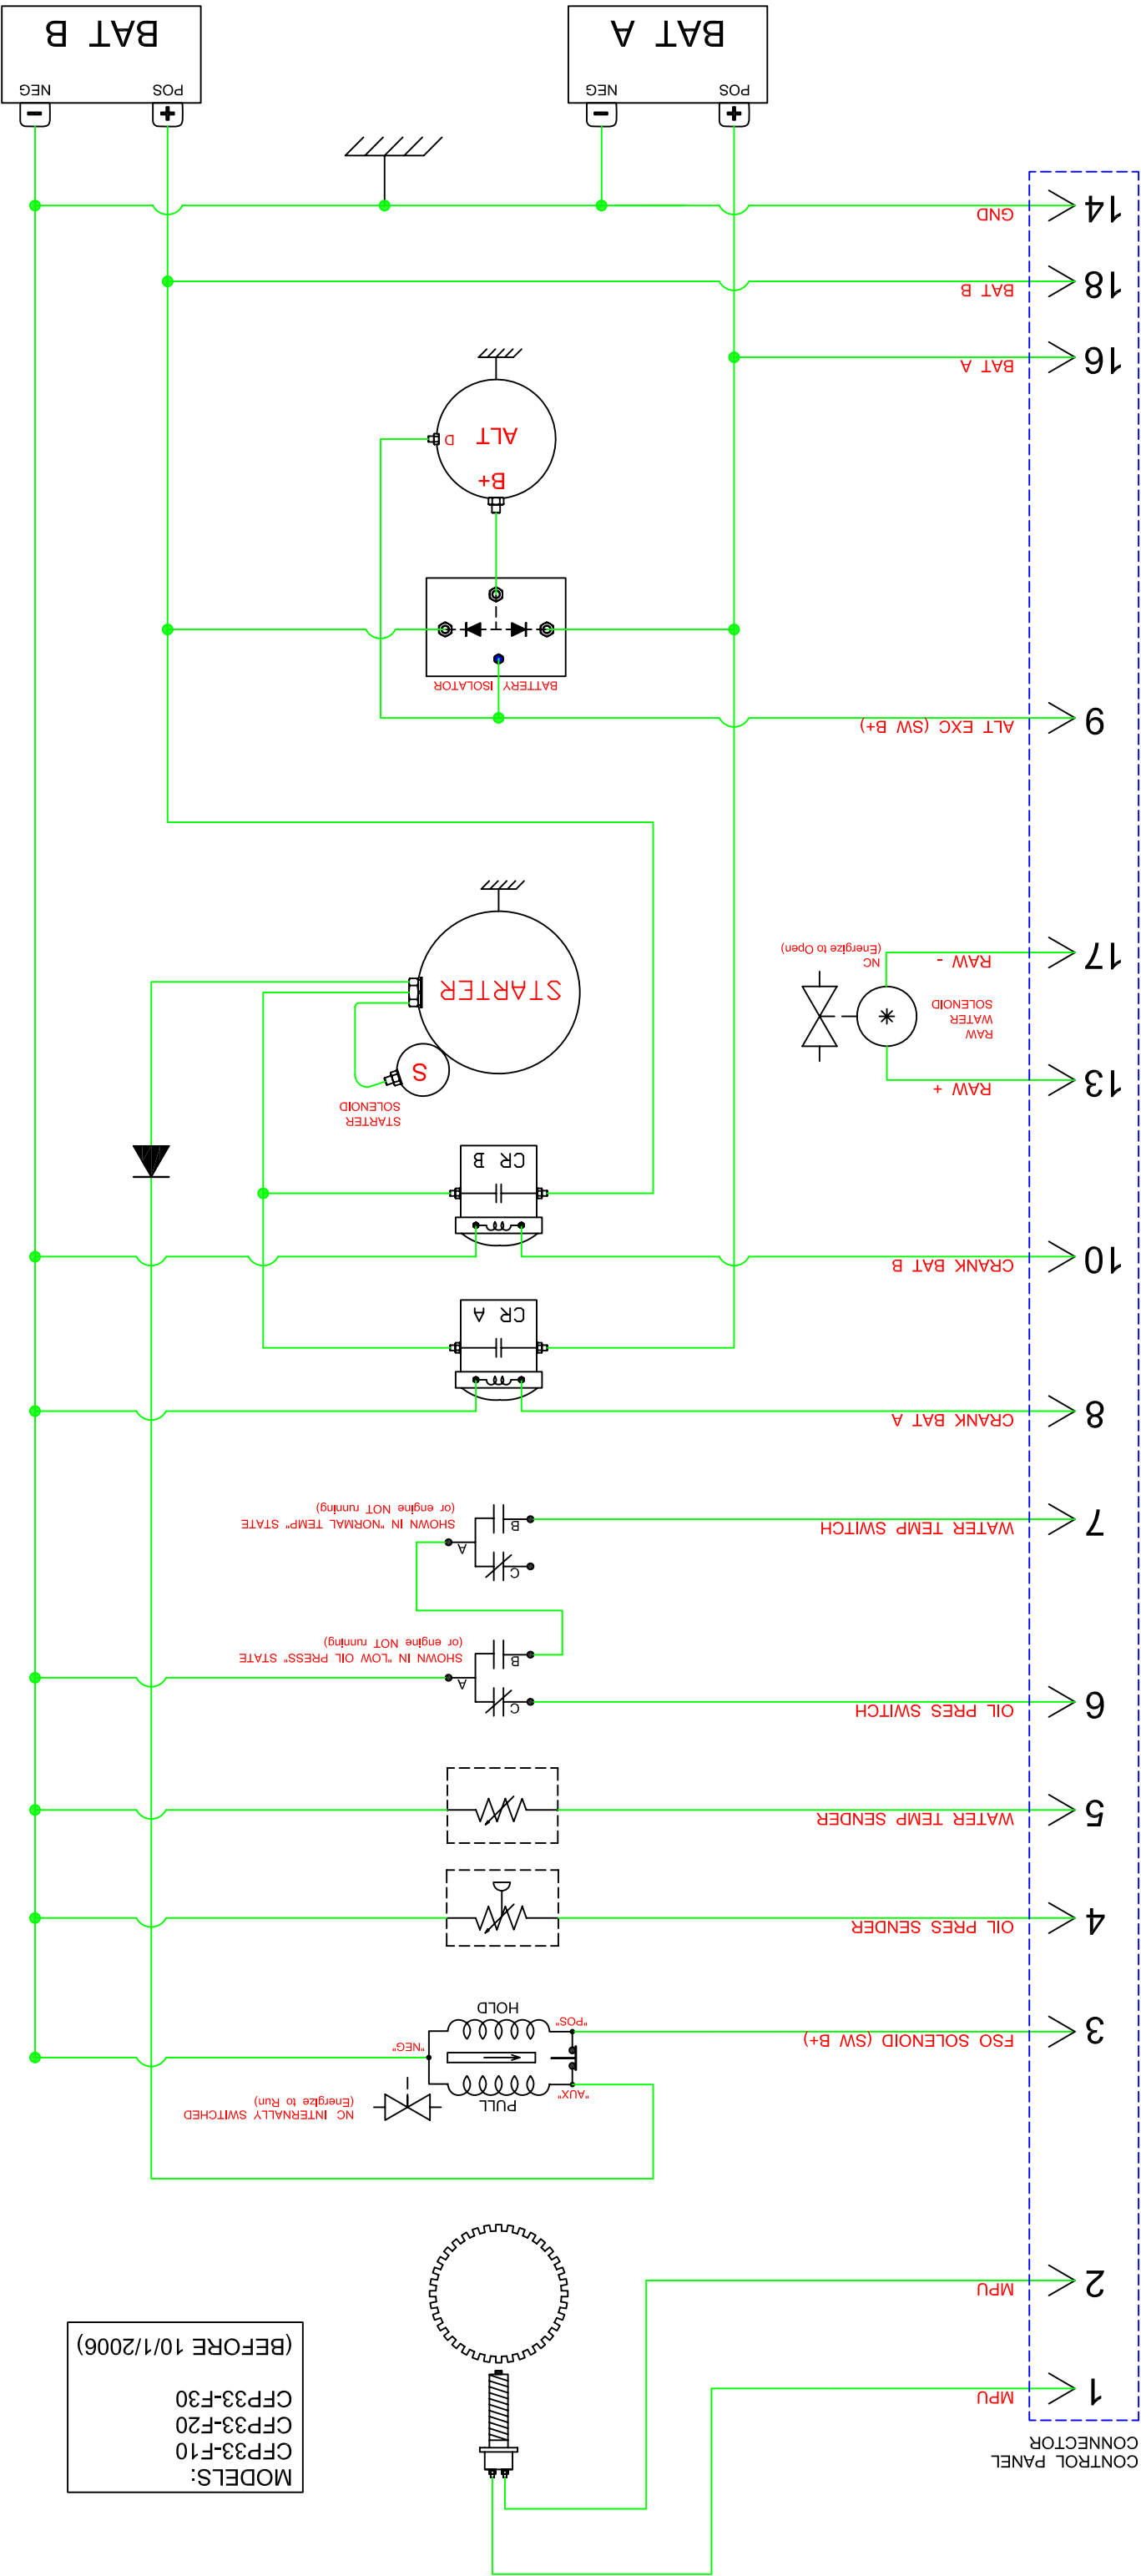

MODELS:
CFP33-F10
CFP33-F20
CFP33-F30
(BEFORE 10/1/2006)

CLAIMING FIRE POWER DESIGN CENTER 1000 ROUTE 107 WHITE BEAR LAKE, ID 83881 WWW.FIREPOWER.COM		CLAIMING FIRE POWER DESIGN CENTER 1000 ROUTE 107 WHITE BEAR LAKE, ID 83881 WWW.FIREPOWER.COM	
DATE: 06.01.2005	DATE: 06.01.2005	DATE: 06.01.2005	DATE: 06.01.2005
DESIGNER: N/A	DESIGNER: N/A	DESIGNER: N/A	DESIGNER: N/A
ENGINE: SCHEMATIC	ENGINE: SCHEMATIC	ENGINE: SCHEMATIC	ENGINE: SCHEMATIC
REFERENCE: FIREPUMP	REFERENCE: FIREPUMP	REFERENCE: FIREPUMP	REFERENCE: FIREPUMP

REV	DESCRIPTION OF REVISION	BY	DATE
-----	-------------------------	----	------



**Fire
Power**

Index

A

Air Filter 6-4, 6-18
 Service Indicator 6-4, 6-10, 6-18
Air Intake System 2-4, 7-28
Alarm
 High Coolant Temperature 4-1
 High Coolant Temperature Input 3-8
 Low Oil Pressure Input 3-8
 Overspeed 3-8
Alternator 7-11
 Belt Tensioner 6-22
 Drive Belt 3-3, 6-17, 6-22, 7-11
 Drive Belt Tension 6-18
 Pulley 7-11
 Rotor 7-11
Annual Maintenance 6-10
Antifreeze, *see Coolant*
AUTO/MANUAL Mode 3-12, 4-2, 5-1
 Power Source 3-8
 Switch 3-12, 4-2, 5-1, 5-2, 5-3, 7-18, 7-20
 Switch Locking Button 3-12, 5-2, 5-3

B

Batteries 3-6, 7-11
 Auxiliary Battery Starting 3-6
 Cable Kit 3-6
 Cables 6-8, 6-10, 7-22
 Cell Specific Gravity 3-6
 Charge 7-12
 Cold Cranking Amps 3-5
 Condition 6-8
 Continuity 6-8
 Electrolyte 3-6, 6-8
 Hydrometer 6-8
 Installation 3-6
 Isolator 7-11
 Selection 3-5
 Specific Gravity 6-8
 Voltmeters 4-2
Bill of Lading 3-1

C

Charge Air Cooler System 3-9
Charge Air Cooler/Heat Exchanger 2-4, 2-5, 6-4
 Cleaning 6-23
 Cleaning Solution 6-23
 Restriction 7-25
Circuit Breaker 4-2, 6-11, 7-12, 7-18
Claim Filing Procedure 3-1
Combustible Fumes 7-26
Combustion Air 2-4
Coolant
 Check 6-9, 6-10
 Drain and Flush 6-19
 Drain at hose 6-20
 Expansion Tank Pressure/Fill Cap 7-14
 Filter 7-28
 Heat Exchanger 3-4, 6-4, 7-13
 Heat Exchanger Pressure Test 6-18
 Heater 3-9, 6-9, 7-16
 High Temperature Alarm 3-8, 4-1
 High Temperature Set Point 4-1
 High Temperature Warning Lamp 4-1
 Hoses 3-8
 Leaks 7-14
 Level 7-14
 Maximum Temperature 2-8
 Mixture 2-8
 Refractometer 6-10
 Temperature 7-15
 Temperature Gauge 4-1, 7-16
 Temperature Sender 7-16, 7-17
 Thermostat 7-16
Coolant Pump 7-16
 Belt Tensioner 6-22
 Drive Belt 6-17, 6-22, 7-11
 Drive Belt Tension 6-18
 Inspection 6-19
 Troubleshooting 7-16
Cooling System
 Inspection 6-4
Corrosion 6-4
CRANK BATT A/B Switch 3-13, 4-3, 5-2
CRANK Signal 5-1

Index

CRANK TERMINATE

- Input 3-8
- Potentiometer 6-15
- Set Point 5-4, 6-15
- Signal 5-1, 7-29

- Crankcase Breather 6-7
- Cranking Systems Analyzer 3-6
- Crankshaft Rotation 7-22
- Customer Supplied Wiring 3-6

D

- Damage During Shipping 3-1
- Diesel Fuel
 - Recommendations 3-4
 - Specifications 3-3
- Dipstick 3-10
- Drive Shaft
 - Grease Fittings 3-3, 6-15
 - Lubrication 6-14
- Drive Shaft Universal Joint 3-3

E

ECM

- A/B Indicator Lights 4-4
- A/B Selector Switch 5-2
- Code 4-4
- Dataplate 4-4
- Date Code (DC) 4-4
- Fault Code Lights 4-4, 5-4
- Part Number (PN) 4-4
- Serial Number (SN) 4-4

Electrical

- Connections 6-10
- Continuity 3-8, 7-17
- Fault 7-23

Electronic Control Module, *see* ECM

- Electronic Fuel System 2-9
- Emergency Manual Mode Electrical Start 5-3
- Emission Levels 2-1

Engine

- Coolant Temperature 6-4
- Crankshaft Center Line 3-2
- Cylinder Head Pressure Test 7-28
- Heater 6-9
- Heater Power Supply 6-20
- Low Oil Pressure Alarm 3-8
- Mounting Bolts 6-11
- Noise 6-9
- Oil 6-12, 6-13, 7-16
- Oil Capacity 6-13
- Oil Dipstick 3-10
- Oil Filter Change 6-12

Engine (continued)

- Oil Filter Gasket 6-13
- Oil Level 3-10, 6-5, 7-16, 7-22
- Oil Pan Drain Plug 6-12
- Oil Pressure 3-13, 6-4, 6-9
- Oil Pressure Gauge 4-1
- Oil Recommendations 3-10
- Oil System 2-9, 3-10, 6-5
- Operating Speed 5-3
- Operating Speed (RPM) 2-4
- Operating Temperature 3-13
- Operation Report 6-1
- Overspeed 4-6
- Overspeed Set Point 4-2
- Protection Fault 4-6
- Serial Number (ESN) 4-4
- Shutdown Lamp 4-4
- Start Test 3-11
- Warning Lamp 4-4
- Equipment Placement and Assembly 3-1
- Exhaust System 2-10, 6-7
 - Flex Pipe 6-7
 - Manifold 6-7, 7-26
 - Piping 3-2
- Expansion Tank Pressure/Fill Cap 3-9

F

- Factory Mutual Approval 2-1
- Fault Code
 - Chart 7-3
 - Indicator Lights 4-4, 5-4
- Fire Pump Controller 3-8
 - Control Power Connection 3-8
 - Wiring 3-8
- Fluid Levels 6-4
- Fuel
 - Control System 4-4
 - Injection Pump 3-3, 7-26
 - Lift Pump 3-3
 - Line Pressure 6-6
 - Recommendations 3-4
 - Return Connection 3-3
 - Supply Connection 2-9, 3-3
 - Supply Line 6-6
 - Supply Valves (optional) 6-14
 - System 2-9, 7-21
 - System Inspection 6-6
 - Tank 3-3
 - Tank Breather 7-24

Fuel Filter	7-21	O	
Change	6-14	Odors	6-4
Mounting Head	6-14	Oil Filter	
Pre-Filter/Water Separator	3-3	Change	6-12
Primary	3-3	Gasket	6-13
Fuel Pre-Filter/Water Separator	3-3, 6-6, 7-21	Oil, <i>see Engine Oil</i>	
Change	6-14	Open Circuit	7-11
Mounting Head	6-14	Operating Speed (RPM)	2-4
Fuel Pump		Operating Temperature	3-13
Inspection	6-12	Operation Report	6-1
Solenoid Valve	2-3	Operator Control Panel	2-3, 3-12, 5-1, 5-2
Fuel Supply Connection	3-3	Operator's Control Panel	3-12
Fuel Tank	3-3	Overspeed	
G		Module	2-3
Guards, Covers and Protective Devices	1-1	RESET/STOP Switch	4-3
H		Set Point	5-3, 6-16
High Coolant Temperature Alarm	3-8, 4-1	Switch	2-3, 3-8, 4-5
Hose Clamps	6-5	Warning Light	4-2
Hoses	7-15	Overspeed Alarm	3-8
Hour Meter	4-1	P	
I		Piston Ring Blowby	7-28
Inductive Charging	3-6	Power Supply	7-16
Insite™ Service Tool	4-4	Pre-Filter, Fuel	3-3
Instrument Panel, <i>see Operator Control Panel</i>		Pressure/Fill Cap	3-9
Intake Manifold	7-28	Primary Fuel Filter, <i>see Fuel Filter</i>	
Integrated Acceptance Testing	5-5	Programmable Parameters	7-24
Isolated Acceptance Testing	5-5	R	
L		Raw Water	
Lifting Hooks	3-1	Bypass Valves	7-20
Loose Wire Kit	3-6	Cooling System	2-5
Low Oil Pressure Alarm	3-8	Flow	3-13
Lubricating Oil, <i>see Engine Oil</i>		Flow Control Valves	4-5
M		Minimum Flow	3-13
Maintenance	5-2	Piping	3-1, 3-4, 3-8, 6-4, 7-15
MANUAL Local Start	5-5	Pressure Regulator	7-13
MANUAL Mode	7-26	Sediment	6-7
Manual Mode	4-2	Solenoid Valve	7-17
Manual Override Contactor A/B Levers	3-13	Supply	3-4
MANUAL START Position	3-13	Wye Strainer	6-7, 7-15
N		Recommended Spare Parts	8-1
National Fire Protection Association (NFPA)	3-1	Refractometer	6-10
		RESET Button	4-2, 4-3
		Returned Goods Authorization (RGA)	8-1
		Run Test	6-9

Index

S

Safety	
Awareness	1-1
Precautions	1-1
Servo Drives	7-1
Shipping Manifest	3-1
Signal and Control Installation	3-7
Site Preparation	3-1
Speed INCREASE/DECREASE Toggle Switch	6-16
DEC Position	6-16
INC Position	6-16
Speed Sensor	7-19, 7-30
Starter Motor	2-3, 7-23
Start-Up Inspection (SUI) Checklist	5-5
STOP/RESET Switch	5-3

T

Tachometer	4-1, 7-19
Calibration	7-25
Temperature Gauge	7-16
Temperature Sender	7-16
Terminal Panels	6-10
Testing	5-2
Thermostat	6-21, 7-16, 7-17
Troubleshooting Chart	7-11
Turbocharger	7-26
Compressor Wheel	3-10, 6-19
Inspection	6-18

V

Valve Lash Settings	6-21
Voltage Regulator	7-11
Voltmeters	3-8, 6-11

W

Warning Lamps	6-11
High Coolant Temperature	4-1, 4-3, 4-6
Low Coolant Level	4-6
Low Coolant Temperature	4-6
Low Oil Level	4-6
Low Oil Pressure	4-1, 4-3, 4-6
Water Pump <i>see Coolant Pump</i>	
Water Separator/Pre-Filter, Fuel	3-3
Wire Damage	7-12
Wiring Harness	6-10

Z

Zinc Plug	7-13
-----------------	------