

CFP9E SERIES



Fire
Power

Operation & Maintenance Manual Fire Pump Drive Engines

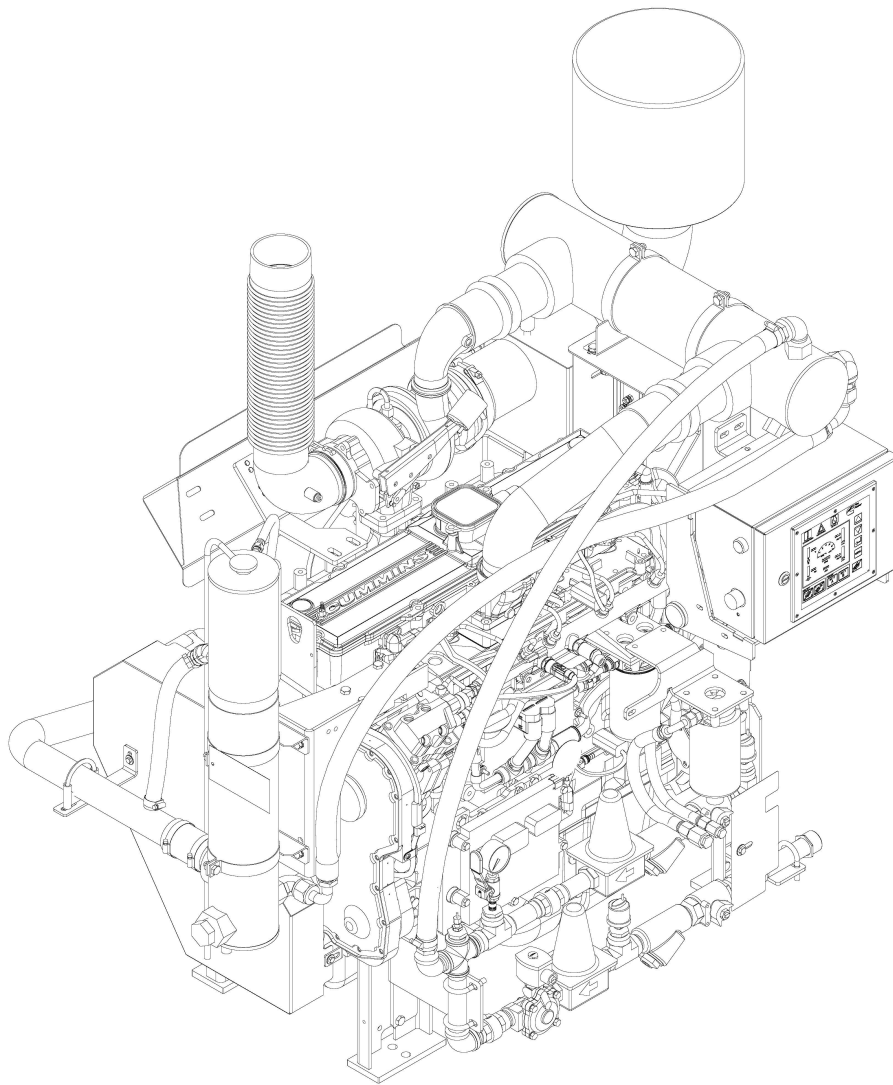




Table of Contents

Section 1 - Safety

1.1 Introduction	1-1
1.2 Advisory and Cautionary Statements	1-1
1.3 Safety Precautions	1-1

Section 2 - Description

2.1 Introduction	2-1
2.2 Fire Pump Engines	2-1
2.3 Engine Digital Control Panel	2-1
2.3.1 Overspeed Function Feature	2-1
2.3.2 Operating Speed	2-1
2.4 Fire Pump Controller	2-1
2.5 Air Intake System	2-4
2.6 Cooling Water System	2-4
2.7 Fuel Supply and Drain Location	2-5
2.8 Fuel System	2-7
2.9 Engine Oil System	2-7
2.10 Exhaust System	2-7

Section 3 - Installation

3.1 Receiving and Handling Information	3-1
3.2 Site Preparation	3-1
3.2.1 Drive Shaft Installation	3-1
3.3 Fuel Supply Installation	3-2
3.3.1 Fuel System Preparation	3-2
3.3.2 Fuel Recommendations	3-3
3.4 Cooling Water Supply Installation	3-3
3.5 Battery Requirements	3-3
3.5.1 Battery Installation	3-4
3.6 Signal and Control Installation	3-5
3.7 Coolant System Preparation	3-6
3.8 Charge Air Cooler System	3-7
3.9 Lubricating Oil System Preparation	3-7
3.10 Pre-Start Inspections	3-7
3.11 Engine Monitoring	3-8

Section 4 - Controls

4.1 Engine Digital Control Panel	4-1
4.1.1 Warning Lamp	4-1
4.1.2 Fault Indicator Lamp	4-1
4.1.3 Scroll Buttons	4-1
4.1.4 Enter Button	4-1
4.1.5 Menu Button	4-1
4.1.6 Overspeed RESET/STOP Switch	4-1
4.1.7 Battery A and B Voltmeters	4-1
4.1.8 Tachometer and Hour Meter	4-1

Table of Contents

4.1.9 ECM A/B Indicator Lamps - Applicable on Electronic Engines	4-2
4.1.10 Crank Battery A or B Buttons	4-2
4.1.11 AUTO/MANUAL Mode	4-2
4.1.12 Coolant Temperature Gauge	4-2
4.1.13 Engine Oil Pressure Gauge	4-2
4.1.14 Engine Overspeed Warning Lamp	4-2
4.1.15 ECM Fault Code Lamps - Applicable on Electronic Engines	4-2
4.1.16 Engine Stop Button	4-2
4.1.17 Engine Communications Port	4-2
4.1.18 Contractor Access Port	4-3
4.1.19 Engine ECM Power Supply	4-3
4.1.20 Engine Harness Connection	4-3
4.2 Electronic Control Module (ECM) - Applicable on Electronic Engines	4-3
4.3 Engine Protection System - Applicable on Electronic Engines	4-3
4.4 Cooling Water Flow Control Valves	4-3

Section 5 - Operation

5.1 Start-up Procedures	5-1
5.2 Remote Starting Procedure	5-1
5.3 Local Starting Procedure	5-1
5.4 Emergency Starting Procedure	5-1
5.5 Engine Digital Control Panel Screens and Adjustments	5-2
5.5.1 Main Menu	5-2
5.5.2 Engine Set-up Screen	5-2
5.5.3 Overspeed Test Screen	5-2
5.5.4 RPM INC/DEC Screen	5-3
5.5.5 Parameter Units Screen	5-3
5.5.6 Display Settings Screen	5-3
5.5.7 Analog Values Screen	5-3
5.6 Active Fault Codes - Applicable on Electronic Engines	5-4
5.7 Field Acceptance Testing	5-4

Section 6 - Maintenance

6.1 Introduction	6-1
6.2 Engine Operation Report	6-1
6.3 Weekly Maintenance	6-4
6.3.1 General Walk Around Inspection	6-4
6.3.2 Air Cleaner Filter and Piping	6-4
6.3.3 Cooling System	6-4
6.3.4 Engine Oil System	6-5
6.3.5 Fuel System Inspections	6-6
6.3.6 Engine Exhaust System	6-6
6.3.7 Electrical Supply and Controls	6-6
6.3.8 Crankcase Ventilation Hose	6-6
6.3.9 Clean Cooling Water Strainers	6-6
6.3.10 Check Battery Condition	6-7
6.3.11 Engine Test Run	6-8
6.3.12 Engine Coolant Heater	6-8
6.4 Annual Maintenance	6-8
6.4.1 Electrical Components	6-8
6.4.2 Turbocharger Mounting Nuts	6-8
6.4.3 Engine Mounting Bolts	6-9
6.4.4 Inspect Fuel Pumps and Filters	6-9

Table of Contents

6.4.5 Engine Oil and Oil Filter Change	6-9
6.4.6 Change Fuel Filters	6-11
6.4.7 Output Shaft Lubrication	6-11
6.4.8 Engine Operation Checks	6-12
6.4.8.1 Crank Termination Set Point	6-12
6.4.8.2 Engine Speed Calibration	6-12
6.4.9 Coolant Pump/Alternator Belt Inspection	6-12
6.4.10 Coolant Pump/Alternator Belt Tension	6-13
6.4.11 Heat Exchanger Pressure Test	6-13
6.4.12 Turbocharger Inspection	6-13
6.5 Every 2 Years or 2000 Hours	6-14
6.5.1 Coolant Pump Inspection	6-14
6.5.2 Drain and Flush Cooling System	6-14
6.6 Every 4 Years or 5000 Hours	6-16
6.6.1 Coolant Thermostat Removal/Installation	6-16
6.6.2 Coolant Pump/Alternator Belt Replacement	6-17
6.6.3 Charge Air Cooler (CAC) Heat Exchanger	6-18

Section 7 - Troubleshooting

7.1 Troubleshooting	7-1
Troubleshooting Chart	7-3
7.1.1 Alternator Overcharging with the Engine Running	7-3
7.1.2 Neither Battery is Charging with the Engine Running	7-3
7.1.3 Only One Battery is Charging with the Engine Running	7-3
7.1.4 Voltage Indications Differ	7-4
7.1.5 Coolant Contamination	7-4
7.1.6 Excessive Coolant Loss	7-5
7.1.7 Coolant Temperature Above Normal	7-6
7.1.8 Coolant Temperature Below Normal when Engine is not Running	7-7
7.1.9 Cooling Water Drain Steaming	7-7
7.1.10 Cooling Water Solenoid Valve Fails to Operate (Applicable to Horizontal Pump Installations)	7-8
7.1.11 Auto Start Failure - Does not Crank on Battery A or B	7-8
7.1.12 Auto Start Failure - Cranks but does not Start	7-9
7.1.13 Auto Start Failure - Engine Starts but Continues to Crank	7-9
7.1.14 Manual Start Failure from Contactor Lever - Does not Crank on A or B	7-9
7.1.15 Manual Start Failure from Control Panel - Does not Crank on A or B	7-10
7.1.16 Engine Cranks Normally but will not Start (No Exhaust Smoke)	7-10
7.1.17 Engine Cranks Slowly but does not Start	7-11
7.1.18 Engine Stops During Operation	7-12
7.1.19 Engine will not Reach Rated Speed (RPM)	7-13
7.1.20 Engine will not Shut Off Remotely	7-13
7.1.21 Engine will not Shut Off Locally	7-14
7.1.22 Fuel Consumption is Excessive	7-14
7.1.23 Fuel or Engine Oil Leaking From Exhaust Manifold	7-15
7.1.24 Engine Oil is Contaminated	7-15
7.1.25 Engine Oil Consumption is Excessive	7-15
7.1.26 Lubrication Oil in the Coolant	7-16
CFP9E Fault Code Chart	7-17

Section 8 - Component Parts and Assemblies

8.1 Part Ordering Information	8-1
8.2 Routine Service and Parts	8-1
8.3 Emergency Repairs and Technical Service	8-1

Table of Contents

8.4 Recommended Spares Inventory 8-1

8.5 Parts and Drawing Sections Included: 8-1

CFP9E Engine Data Sheet 8-2

Torque Table 8-5



**Fire
Power**

This manual contains proprietary information to equipment produced by Cummins Fire Power or Cummins Inc. and is being supplied solely for the purpose of operating, maintaining, and servicing the fire pump engine purchased from Cummins Fire Power.

© Copyright 2015, Cummins Inc.



**Fire
Power**

Cummins Fire Power Limited Warranty

Fire Pump Package

This limited warranty applies to all Cummins Fire Power (hereinafter referred to as "Cummins Fire Power" branded fire pump driver and associated accessories (hereinafter referred to as "Product"). This warranty covers any failures of the Product, under normal use and service, which result from a defect in material or factory workmanship.

Warranty Period:

The warranty start date for stationary Product is the date of initial start up, demonstration or 18 months after factory ship date, whichever is sooner.

Base Warranty Duration (whichever occurs first): 2 years/2000 hours.

Cummins Fire Power Responsibilities:

In the event of a failure of the Product during the warranty period due to defects in material or workmanship, Cummins Fire Power will only be responsible for the following costs:

- All parts and labor required to repair the Product.
- Reasonable travel expenses to and from the Product site location.
- Maintenance items that are contaminated or damaged by a warrantable failure.

Owner Responsibilities:

The owner will be responsible for the following:

- Notifying Cummins Fire Power distributor or dealer within 30 days of the discovery of failure.
- Installing, operating, commissioning and maintaining the Product in accordance with Cummins Fire Power's published policies and guidelines.
- Providing evidence for date of commissioning.
- Providing sufficient access to and reasonable ability to remove the Product from the installation in the event of a warrantable failure.

In addition, the owner will be responsible for:

- Incremental costs and expenses associated with Product removal and reinstallation resulting from difficult or non-standard installations.
- Costs associated with Fire Watch Protection during Product being repaired.
- Costs associated with labor overtime and premium shipping requested by the owner.
- All downtime expenses, fines, all applicable taxes, and other losses resulting from a warrantable failure.

Limitations:

This limited warranty does not cover Product failures resulting from:

- Inappropriate use relative to designated power rating or application guidelines.
- Normal wear and tear, negligence, accidents or misuse.
- Improper and/or unauthorized installation.
- Lack of maintenance or unauthorized repair.
- Noncompliance with any Cummins Fire Power published guideline or policy.
- Use of improper or contaminated fuels, coolants or lubricants.
- Improper storage before and after commissioning.
- Owner's delay in making Product available after notification of potential Product problem.
- Replacement parts and accessories not authorized by Cummins Fire Power.
- Owner or operator abuse or neglect such as: operation without adequate coolant or lubricants; over-fueling; over-speeding; lack of maintenance to lubricating, cooling or air intake systems; late servicing and maintenance; improper storage, starting, warm-up, run-in or shutdown practices, or for progressive damage resulting from a defective warning device.
- Damage to parts, fixtures, housings, attachments and accessory items that are not part of the fire pump package.



**Fire
Power**

Limitations (cont.):

This limited warranty does not apply to:

- Costs of maintenance, adjustments, installation, commissioning or start-up.
- Starting batteries and enclosures.
- Components added to the Product after shipment from Cummins Fire Power.
- Block heaters are warranted for 1 year from date in service

Please contact your local Cummins NPower Distributor for clarification concerning these limitations.

Extended Warranty

Cummins Inc offers several levels of Extended Warranty Coverage (**Base Engine Only**). Please contact your local Cummins Distributor for details.

Cummins Fire Power Right to Failed Components:

Failed components claimed under warranty remain the property of Cummins Fire Power. Cummins Fire Power has the right to reclaim any failed component that has been replaced under warranty.

THE WARRANTIES SET FORTH HEREIN ARE THE SOLE WARRANTIES MADE BY CUMMINS FIRE POWER IN REGARD TO THE PRODUCT. CUMMINS FIRE POWER MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT IS CUMMINS FIRE POWER LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This limited warranty shall be enforced to the maximum extent permitted by applicable law. This limited warranty gives the owner specific rights that may vary from state to state or from jurisdiction to jurisdiction.



Section 1 - Safety

1.1 Introduction

Cummin's Fire Power Manuals and Engine Manuals should be considered part of the equipment. Keep the manuals with the equipment. If the equipment is traded or sold, give the manuals to the new owner.

All personnel responsible for the operation and maintenance of the equipment should read and thoroughly understand this manual.

1.2 Advisory and Cautionary Statements

Advisory and Cautionary Statements are used throughout this manual to call attention to special information, correct operating procedures, and safety precautions.

NOTE: *A general advisory statement relating to equipment operation and maintenance procedures.*

IMPORTANT: *A specific advisory statement intended to prevent damage to the equipment or associated components.*

Cautionary Statements consist of two levels:



WARNING

Indicates the presence of a hazard which CAN cause severe personal injury.



CAUTION

Indicates the presence of a hazard which CAN cause personal injury or equipment damage.

1.3 Safety Precautions

Warning: Read and understand all of the safety precautions and warnings before performing any repair. This manual contains the general safety precautions that must be followed to provide personal safety. When they apply, special safety precautions are included with operating procedures.

Warning: Before manual operation, perform a walk around inspection and alert all area personnel that the equipment will be starting.

Warning: Do not operate faulty or damaged equipment. Ensure that all hoses, pipe connections, clamps, and guards are in place and securely fastened. Electrical components should be kept in good working condition and repaired immediately by qualified personnel.

Warning: After performing maintenance, remove all tools and foreign materials, reinstall and securely fasten ALL guards, covers, and protective devices.

Warning: Exposed in-running belt nips can cause severe personal injury or dismemberment. Ensure that guards are in place and securely fastened before operation.

Warning: Rotating drive shafts can lacerate, dismember, or cause strangulation. Keep hands, body parts, long hair, or loose-fitting clothing clear at all times.

Warning: Never attempt to manually clean a machine while it is operating or in standby mode.

Warning: Never open ports on tanks or piping while the engine is operating. Contact with pressurized agents can cause severe personal injury.

Warning: Relieve all pressure in the air, oil, and cooling systems before any lines, fittings, or related items are removed or disconnected.

Caution: Engine fuel is flammable when in contact with electrical spark or flame sources. Remove all sources of spark or flame from the work area.

Caution: Always use the same fastener part number (or equivalent) when replacing fasteners.

Caution: Some state and federal agencies in the USA have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Dispose of waste oil in accordance with applicable requirements.



Section 2 - Description

2.1 Introduction

This manual contains information for the correct operation and maintenance of a Cummins Fire Pump Engine. Read and follow all safety instructions. Refer to the General Safety Instructions in [Section 1 - Safety](#).

This manual covers installation, operation, and maintenance of specific engine models. Most illustrations are representations that are common between both models. Where differences occur, refer to [Section 8 - Component Parts and Assemblies](#) for model specific information.

Keep this manual with the equipment. If the equipment is traded or sold, give the manual to the new owner.

Cummins Fire Power, Cummins NPower, and Cummins Inc. reserve the right to make changes at any time without obligation. If any differences are found between an engine and the information in this manual, contact the local Cummins Authorized Repair Location.

The latest technology and the highest quality components were used to produce this engine. When replacement parts are needed, we recommend using only genuine Cummins or ReCon® exchange parts.

2.2 Fire Pump Engines

Cummins complete line of fire pump engines have been approved as packaged units (engine and all accessories) by Factory Mutual Approvals and listed by Underwriter's Laboratories, Inc. and Underwriter's Laboratories of Canada.

No deviations are permitted without prior written approval. These engines are to be used only for fire protection applications.

Emission Control Information:

In the U.S. this engine may be used only in stationary emergency applications in accordance with requirements of 40 CFR Part 60 and is excluded from the requirements of 40 CFR Parts 89 and 1039. Installing or using this engine in any other application may be a violation of U.S. Federal law subject to civil penalty.

NOTE: Refer to the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#) for emission levels.

NOTE: This engine is certified to operate on diesel fuel.



WARNING

Injury may result and warranty is voided if fuel rate, RPM, or altitudes exceed published maximum values for this model and application.

2.3 Engine Digital Control Panel

The engine digital control panel is mounted on the left side of the engine at the flywheel end. Refer to [Section 4 - Controls](#) for additional information.

The engine digital control panel contains controls for starting, monitoring engine performance, and controlling fire pump engine operation.

2.3.1 Overspeed Function Feature

Each engine is equipped with an electronic overspeed control which activates the fuel pump solenoid valve and ECM ignition to shut off the engine when the RPM exceeds a preset limit. The overspeed control senses engine speed during the start cycle and stops the starting motor cranking cycle.


2.3.2 Operating Speed

All Cummins fire pump engines are shipped from the factory adjusted to the requested operating speed (RPM). Final operating speed adjustment must be made during the in-service inspection to obtain the required operating speed specified by the pump manufacturer.

2.4 Fire Pump Controller

The fire pump controller is not supplied by Cummins Fire Power or Cummins Inc. The fire pump controller starts the engine automatically when a remote fire demand signal is initiated and automatically shuts down the engine when the fire demand signal is discontinued.


The engine may be started locally in the manual mode and shut down using the engine digital control panel stop button.

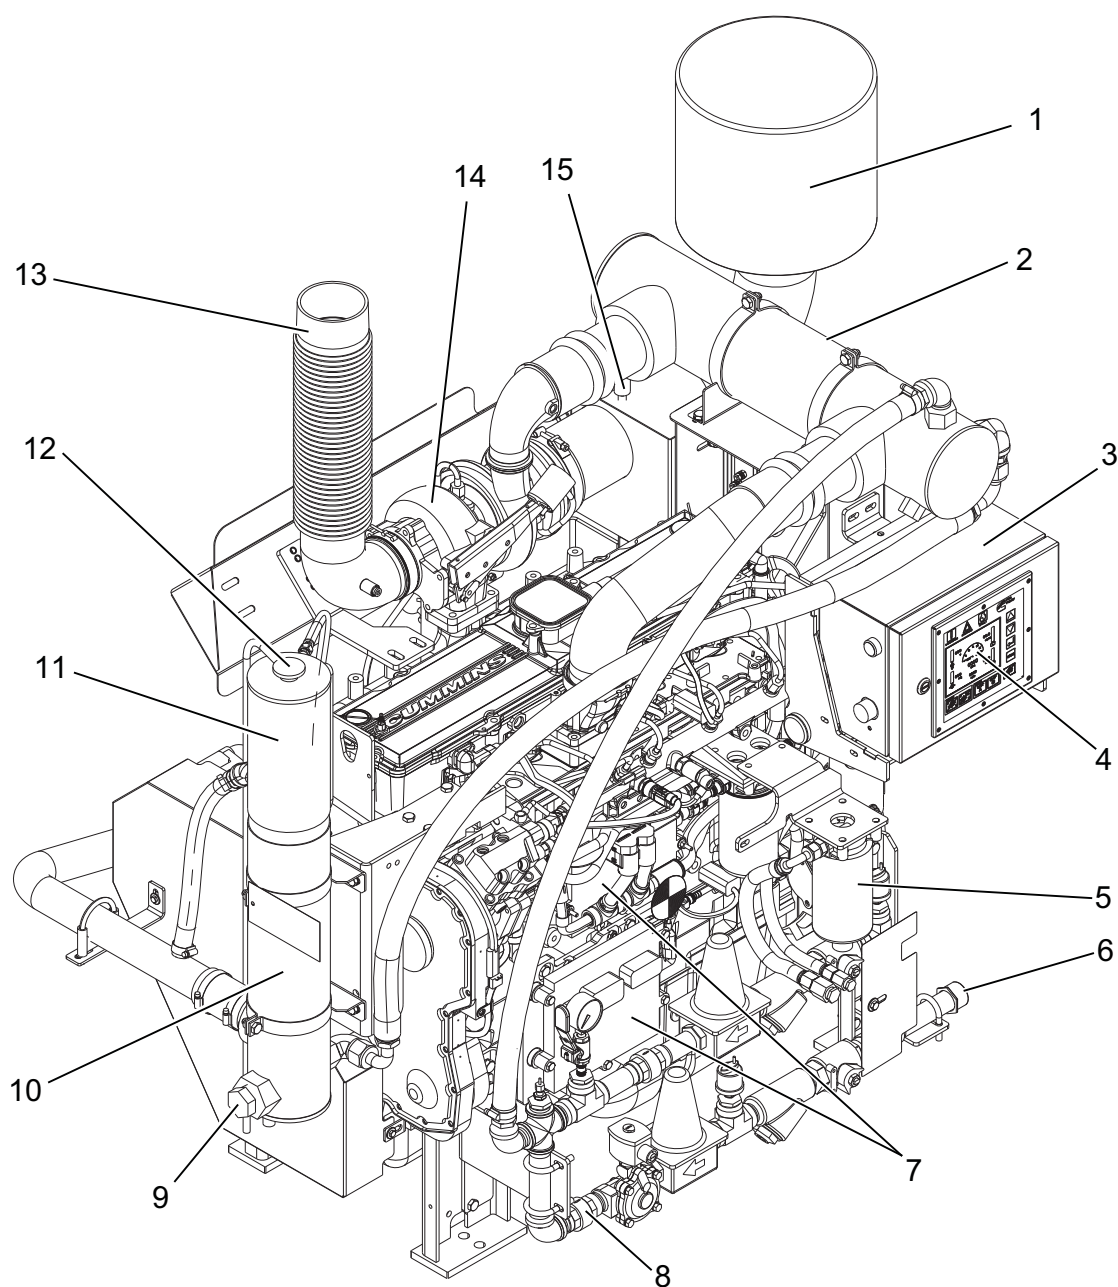

CFP-003-1

- | | |
|---|---|
| 1. Air Cleaner Assembly | 9. Heat Exchanger Cooling Water Discharge |
| 2. Charge Air Cooler (CAC) Heat Exchanger | 10. Coolant Heat Exchanger |
| 3. Terminal Box | 11. Coolant Expansion Tank |
| 4. Engine Digital Control Panel | 12. Coolant Pressure/Fill Cap |
| 5. Fuel Filter or Filter/Separator | 13. Exhaust Flex Connection |
| 6. Cooling Water Inlet | 14. Turbocharger |
| 7. Electronic Control Modules (ECMs) | 15. Air Cleaner Service Indicator |
| 8. Cooling Loop Manifold Piping | |


Figure 2-1 Engine Components - Engine Digital Control Panel (EDCP) Side (CFP9E shown)

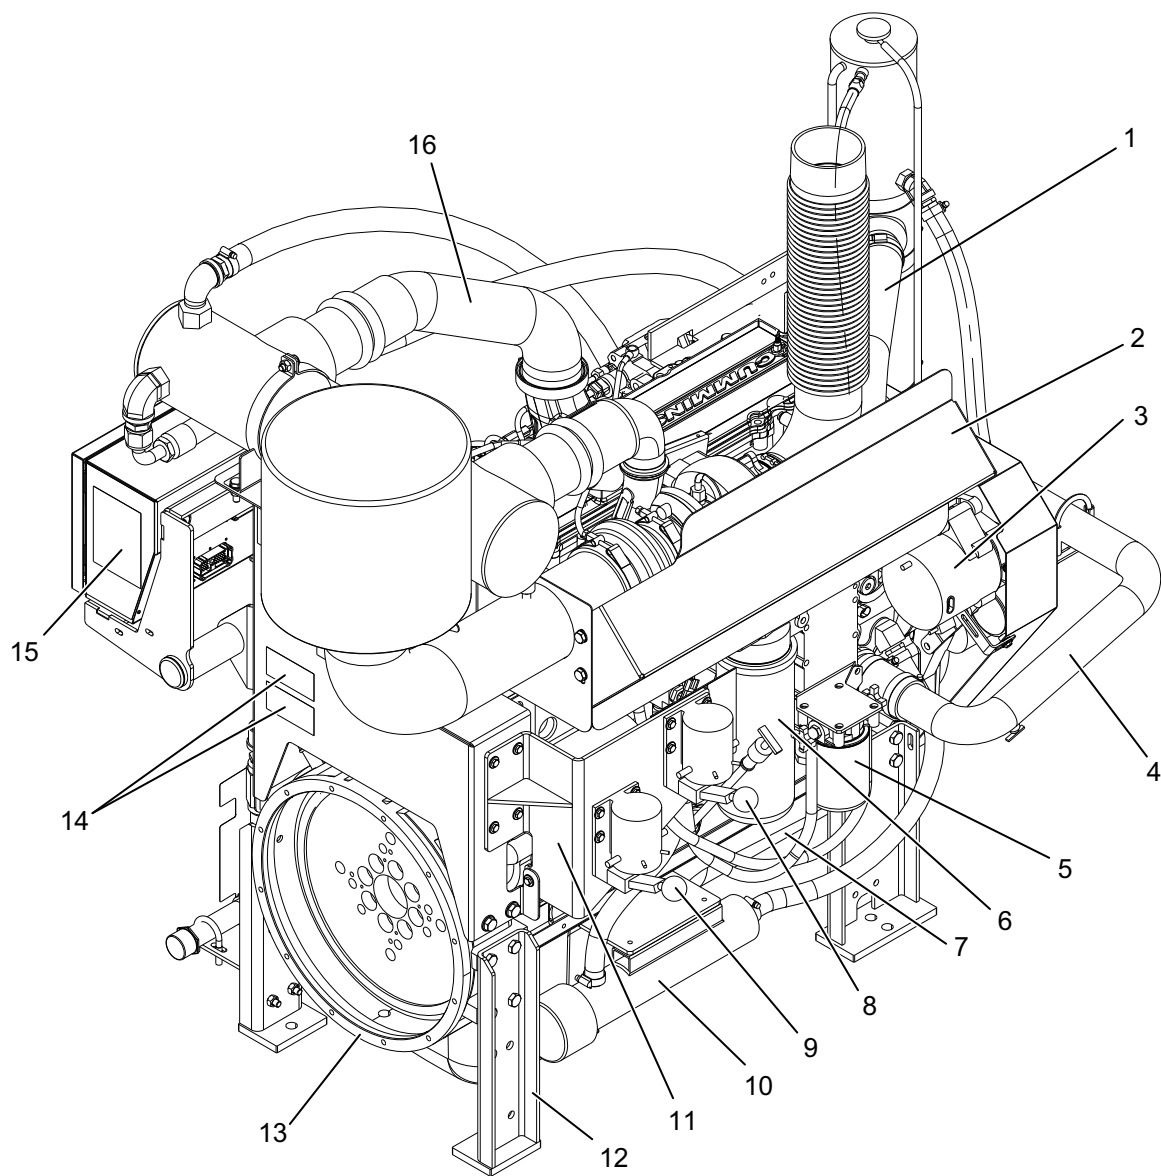

CFP-004-1

- | | |
|--------------------------------|------------------------------------|
| 1. Upper Coolant Hose/Tube | 9. Battery Starter Contactor A |
| 2. Manifold Heat Shield | 10. Engine Coolant Heater |
| 3. Alternator | 11. Starter Motor |
| 4. Lower Coolant Hose/Tube | 12. Engine Supports |
| 5. Coolant Filter | 13. Flywheel Housing |
| 6. Engine Oil Filter | 14. Engine Speed Setting Plates |
| 7. Oil Pan and Drain | 15. Manual Start Instruction Decal |
| 8. Battery Starter Contactor B | 16. Charge Air Cooler Hose |

Figure 2-2 Engine Components - Turbocharger Side (CFP9E shown)

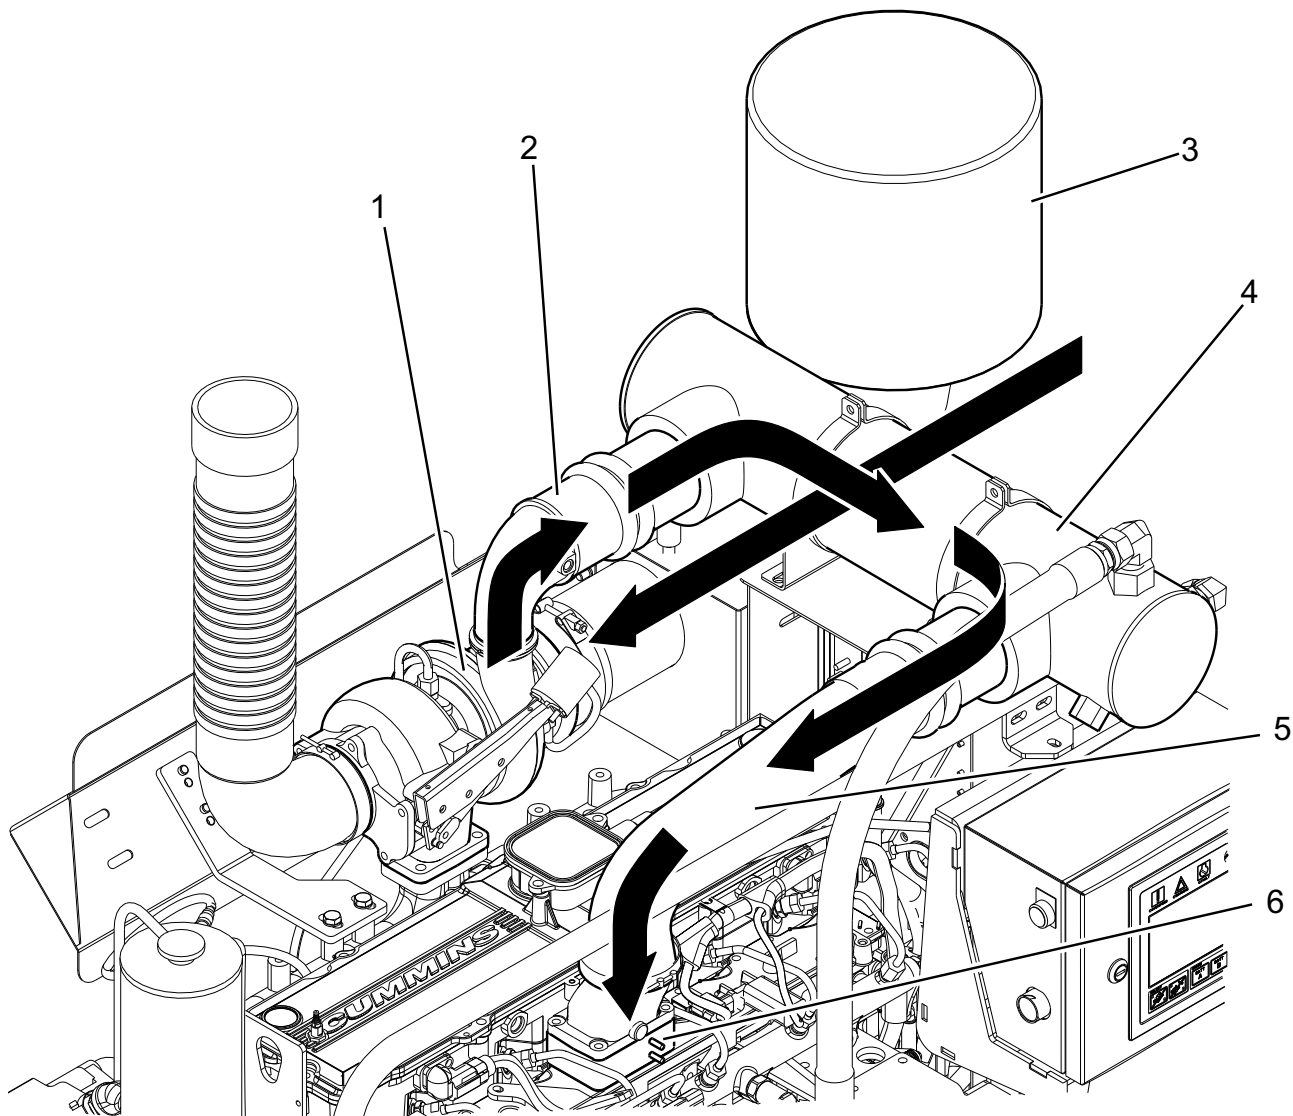

CFP-006-1

- | | |
|----------------------------------|---|
| 1. Turbocharger | 4. Charge Air Cooler (CAC) Heat Exchanger |
| 2. Air Hose to Charge Air Cooler | 5. Charge Air Cooler Hose |
| 3. Air Cleaner Assembly | 6. Combustion Air Intake Manifold |

Figure 2-3 Engine Air Intake and Charge Air Cooling Flow Diagram (typical)

2.5 Air Intake System

The air intake system supplies combustion air to the fire pump engine cylinders. The air filter prevents particulate matter from entering the air intake. Combustion air drawn into the system by the turbocharger is directed through the Charge Air Cooler (CAC) heat exchanger for cooling before entering the intake manifold where the charge air is mixed with fuel. Refer to [Figure 2-3](#).

2.6 Cooling Water System

The fire pump cooling water supply provides cooling water for the engine heat exchanger system. A water-to-air Charge Air Cooler (CAC) heat exchanger, reduces the combustion air temperature at the intake manifold. A low charge air temperature (requirement of 60° C (140° F), with 25° C (77° F) ambient) meets emission levels, while improving engine performance and efficiency.

Water entering the cooling system through the cooling water inlet first circulates through the charge air cooler heat exchanger, cooling the compressed air from the turbocharger outlet ducting. The cooled combustion air exits the CAC outlet duct to the engine air intake manifold. Refer to [Figure 2-5](#).

NOTE: *The cooling water supply must be immediately available when the engine is started.*

The cooling water from the CAC heat exchanger then passes through the engine coolant heat exchanger. The cooling water exits the coolant heat exchanger through a discharge connection.

IMPORTANT: *Cooling water piping will be supplied by Cummins Fire Power as shown in the Assembly Diagram, Cooling Water Piping in [Section 8 - Component Parts and Assemblies](#). Refer to National Fire Protection Association NFPA 20 for US installation requirements.*

1. When the cooling water piping is installed, adjust both pressure regulator set points of the cooling water manifold before operating the pump.
2. The upper line is the bypass line. The bypass line outlet valve should be closed.
3. The lower line with the solenoid valve is the normal inlet line. The pressure gauge isolation valve must be open. The normal water inlet line valve should be open.

IMPORTANT: *Monitor the oil pressure and coolant temperature gauges frequently. Refer to Lubricating Oil System Specifications or Cooling System Specifications in the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#) for recommended operating pressures and temperatures. Shut off the engine if any pressure or temperature does not meet the specifications.*


Maximum engine coolant temperature should not exceed the temperature listed on the Engine Data Sheet found in [Section 8 - Component Parts and Assemblies](#). The coolant expansion pressure/fill cap must meet the minimum pressure of 10 kPa (15 psi).



CAUTION

Continuous operation with low coolant temperature (below 70° C [158° F]) or high coolant temperature (above 107° C [225° F]) can damage the engine. Verify cooling water pressure and flow.

The engine coolant system contains a mixture of at least 50% antifreeze and 50% water. The coolant level should be maintained so it is visible in the coolant level sight gauge.

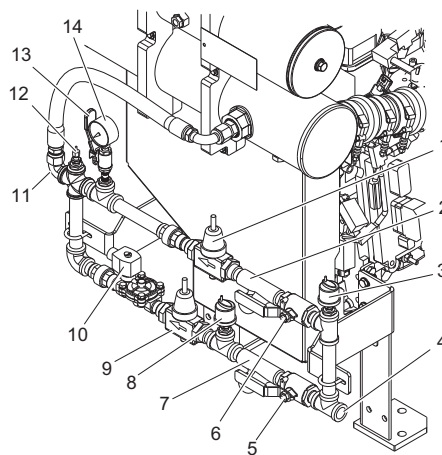


CFP-101

1. Bypass Water Pressure Regulator
2. Bypass Water Strainer
3. Pre Strainer Pressure Sensor
4. Cooling Water Inlet
5. Normal Water Inlet Valve
6. Bypass Water Inlet Valve
7. Normal Water Strainer
8. Post Strainer Pressure Sensor
9. Normal Water Pressure Regulator
10. Normal Water Solenoid Valve
11. Outlet to Heat Exchanger
12. Temperature Sensor
13. Pressure Gauge Isolation Valve
14. Water Supply Pressure Gauge

Figure 2-4 Cooling Water Manifold (typical)

2.7 Fuel Supply and Drain Location


The fuel supply and return connections are centrally located on the engine digital control panel side. Refer to [Figure 2-1](#). Refer to the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#) for the maximum allowable fuel tank supply locations above the fuel pump.

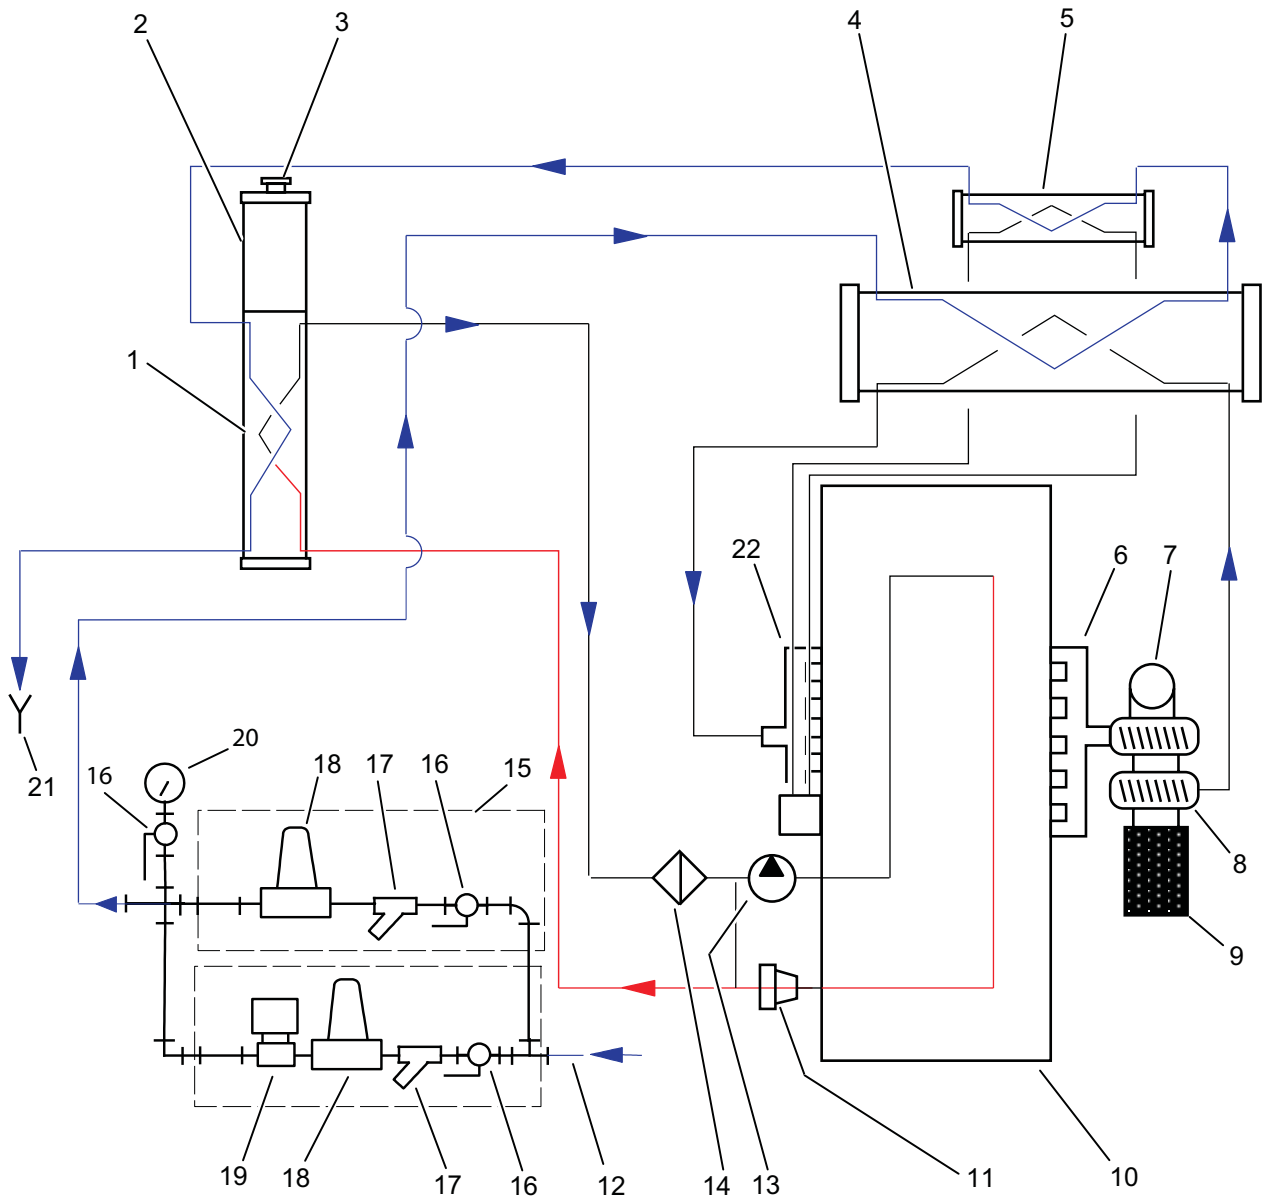

CFP-007

- | | |
|---|--------------------------------------|
| 1. Coolant Heat Exchanger | 12. Cooling Water Inlet Pipe |
| 2. Coolant Expansion Tank | 13. Coolant Pump |
| 3. Coolant Pressure/fill Cap | 14. Coolant Filter |
| 4. Charge Air Cooler | 15. Bypass Piping |
| 5. Fuel Cooling Heat Exchanger (optional) | 16. Manual Shut-off Valve |
| 6. Exhaust Manifold | 17. Cooling Water Strainer |
| 7. Exhaust Flex Connection | 18. Cooling Water Pressure Regulator |
| 8. Turbocharger | 19. Cooling Water Solenoid Valve |
| 9. Air Filter | 20. Cooling Water Pressure Gauge |
| 10. Engine Block | 21. Cooling Water Drain Line |
| 11. Thermostat | 22. Combustion Air Intake Manifold |

Figure 2-5 Engine Cooling System Flow Diagram (typical)

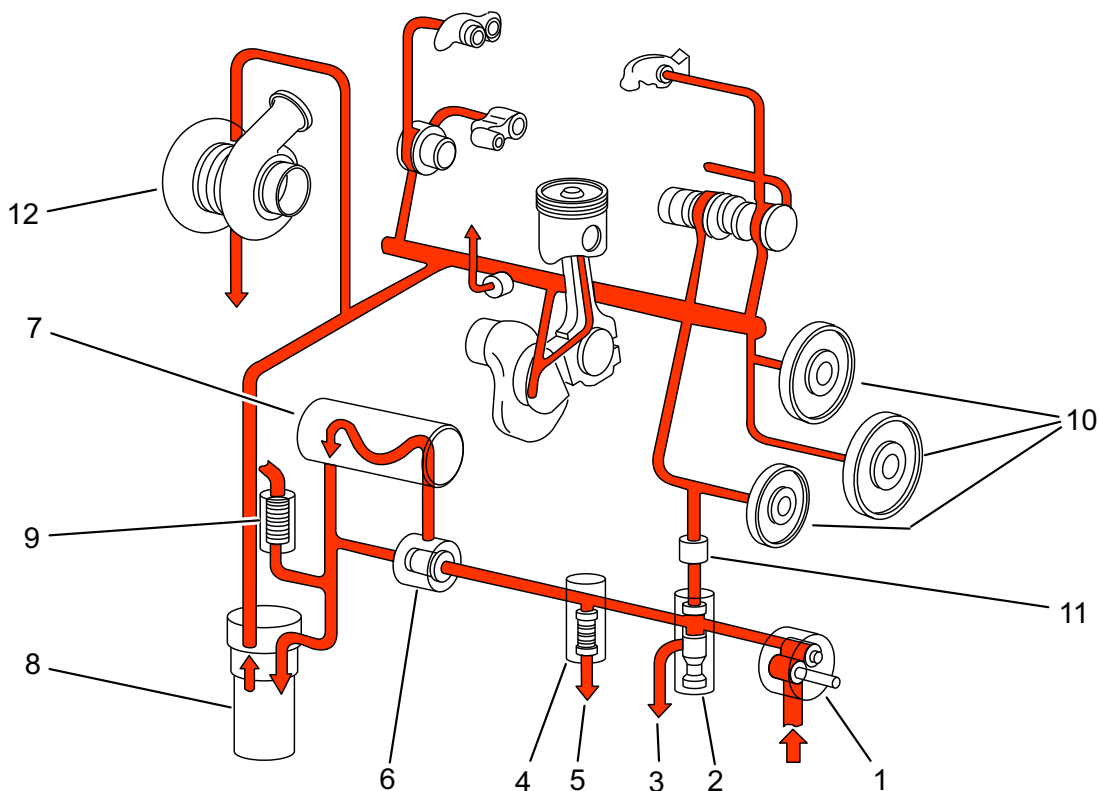

;FP-010

- | | |
|-------------------------------|---------------------------|
| 1. Oil Pump | 7. Oil Cooler |
| 2. Pressure Regulator Valve | 8. Combination Oil Filter |
| 3. Oil Return to Pan | 9. Filter Bypass Gears |
| 4. High Pressure Relief Valve | 10. Idler Gears |
| 5. Oil Return to Pan | 11. Viscosity Sensor |
| 6. Oil Thermostat | 12. Turbocharger |

Figure 2-6 Engine Lubricating Oil System Flow Diagram (typical)

2.8 Fuel System

The fire pump engine is equipped with an electronic fuel system to provide fuel metering and timing. The system is controlled by the Engine Control Module (ECM) for fueling and timing based on temperature, altitude, pressure, and throttle position. Refer to [Figure 2-1](#).

2.9 Engine Oil System


The engine oil system lubricates moving internal engine parts (pistons, piston arms, valves, cam shafts, drive shafts, and bearings). The oil pump circulates oil from the oil pan, through the oil filter, and into engine areas where friction may develop. Refer to Section D of the Cummins Engine Operation and Maintenance Manual for additional information. Refer to [Figure 2-6](#).

Typically, engine oil has been added during manufacture and testing procedures, however, shipping restrictions can affect whether the oil is maintained in the engine or drained for shipment.

Check the oil level at the dipstick. Add oil as necessary to bring the oil level to the H (high) mark on the dipstick. Refer to [Figure 3-6](#).


2.10 Exhaust System

The exhaust system removes engine exhaust from the cylinders after the combustion process. The exhaust discharges from the exhaust manifold, passes through (drives) the turbocharger, and exits through the exhaust flex-pipe. Refer to [Figure 2-7](#) and [Figure 2-8](#).

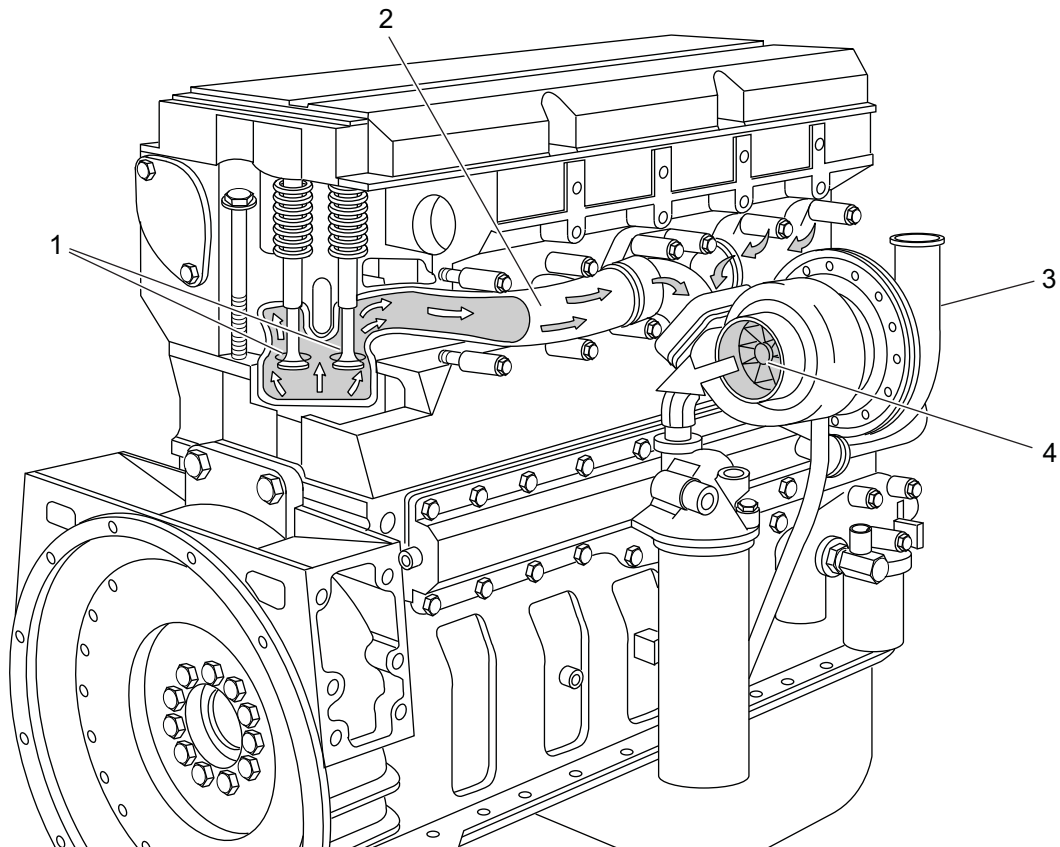

- | | |
|----------------------------|--|
| 1. Exhaust Valve Ports | 3. Combustion Air to Charge Air Cooler |
| 2. Engine Exhaust Manifold | 4. Turbocharger Turbine |

Figure 2-7 Exhaust System Flow Diagram (typical)

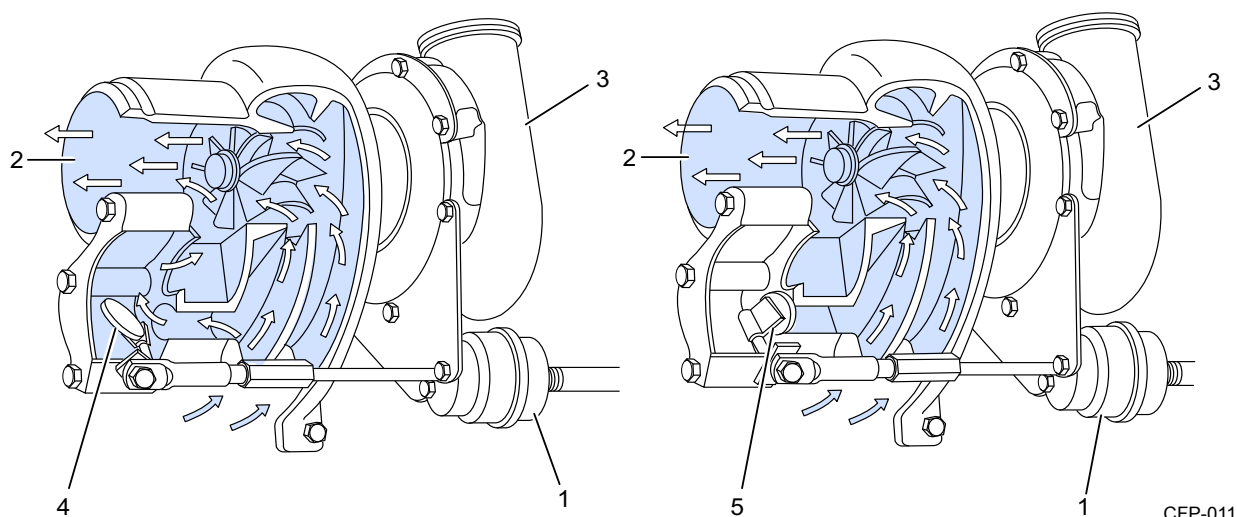

- | | |
|--|---------------------|
| 1. Wastegate Actuator Cylinder | 4. Wastegate OPEN |
| 2. Exhaust Flow to Flex Pipe | 5. Wastegate CLOSED |
| 3. Combustion Air to Charge Air Cooler | |

Figure 2-8 Turbocharger Exhaust Flow Diagram (typical)

CFP-011



Section 3 - Installation

3.1 Receiving and Handling Information

Cummins Fire Power Pump Engines are pre-assembled and tested before shipment. Parts not shipped attached to the engine are sometimes shipped individually. The equipment was thoroughly inspected and prepared for shipping before it was turned over to the carrier.

1. Carefully remove the components from the shipping container. Remove crating, shipping tape, braces, and tie-downs.
2. Inspect the equipment for damage that may have occurred in shipping.
3. Check each item carefully against the shipping manifest or bill of lading.

3.2 Site Preparation

This section provides instructions for the initial installation, adjustment, and testing of the Cummins Fire Pump Engine. Appropriate portions of this section should be used when returning the engine to operation after overhaul or major maintenance.

The site should be clean and relatively level. Clear the proposed equipment area of overhanging obstructions and obstacles protruding from the floor.

Cooling water piping should be installed by trained technicians familiar with local, state, and federal codes and regulations, per the equipment layouts supplied by Cummins Fire Power or Cummins Inc.

Refer to the general fire pump and engine layout drawings for installation dimensions supplied with this manual.

Refer to National Fire Protection Association NFPA 20 for US installation and applicable local code requirements and NFPA 25 for inspection, testing, and maintenance requirements.

1. Lay out a designated center line on the site floor. Find the center line of the engine drive shaft. Lay out a center line on the cross frame members.
2. If the engine is assembled with the drive line, pump, and mounting base, use the lifting points provided on the mounting base or lift the entire skid using an approved fork lift.




CAUTION

Ensure that the lifting device is capable of safely lifting the weight of the engine or the combined weight of the assembled pump base, drive line, and pump. Refer to the bill of lading for combined shipping weights.

3. Position the engine as required for the interface with the fire pump, water piping, fuel piping, exhaust, and air system connections.

3.2.1 Drive Shaft Installation

1. Position the engine center line to align the engine drive shaft with the fire pump drive. Ensure that the engine and pump are correctly aligned.
 - a. Ensure engine position is centered on frame side to side within $\pm .76$ mm (.03 in) by measuring outside of frame side to engine support leg mounting pad. (Compare the two front engine supports and two back engine supports).
 - b. Align engine center line to pump center line within $\pm .76$ mm (.03 in). Refer to [Figure 3-1](#).
 - c. The pump center line to the engine crankshaft center line (in vertical plane) is to be $2^{\circ} \pm 1^{\circ}$.
 - d. Drive shaft mounting flanges must be parallel.

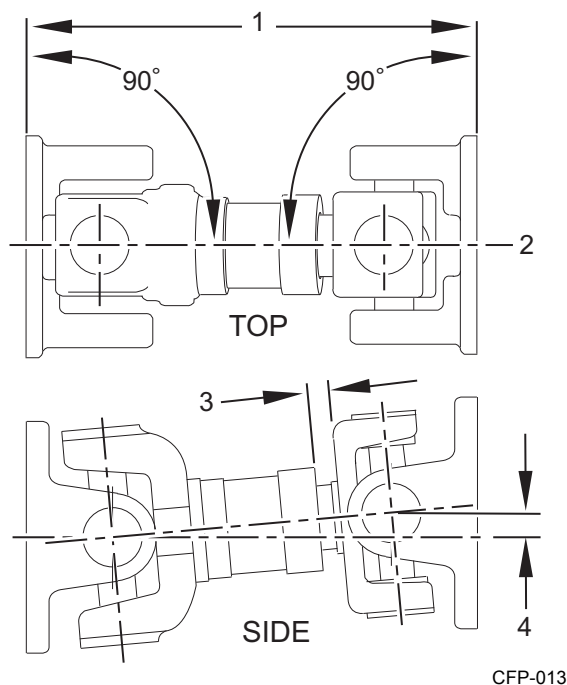

1. Planes Must Be Parallel
2. Align Both Mounting Center lines to $\pm .76$ mm (.03 in)
3. Distance to Equal Half of Total Travel
4. $2^\circ \pm 1^\circ$


Figure 3-1 Drive Shaft Alignment

2. Lubricate the grease fittings on the drive shaft universal joint. Refer to [Figure 3-2](#).
 - a. Wipe the grease fittings and grease gun nozzle with a clean cloth.
 - b. Add grease to the drive shaft universal joint grease fittings.
 - c. Wipe excess grease from the grease fittings.

NOTE: Cummins Fire Power or Cummins Inc. recommends using a good quality semi-synthetic, molybdenum-fortified NLGI #2 lithium complex grease.

NOTE: Some lubrication loss may occur during transport and storage. It is recommended that the drive shaft be re-lubricated upon installation.

3. Check that the fire pump is properly installed per the pump manufacturer's specifications.
4. Connect the exhaust piping to a safe location, away from building air intake sources (air conditioners, windows, fresh air intake pipes, etc.).

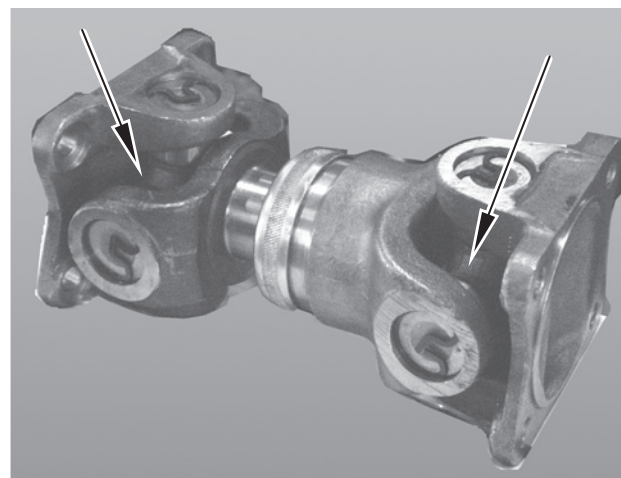

CFP-015

Figure 3-2 Drive Shaft Universal Joint Grease Fittings

5. Check that the alternator/coolant pump drive belt is properly installed.
6. Check that all hoses and tubes are properly installed and all clamps secure.

3.3 Fuel Supply Installation

1. Install a properly rated fuel tank per NFPA 20 guidelines.
2. Install a proper sized fuel line per the Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

NOTE: DO NOT use copper or galvanized pipe for the fuel return or supply lines.

3.3.1 Fuel System Preparation

The fire pump engine fuel system has been primed during manufacturing and test procedures. The engine is equipped with an electric lift pump which primes the fuel filter or filter/separator and high pressure fuel pump when the engine is cranked. Refer to [Figure 2-1](#).

A water separator must be integrated into the fuel delivery system of the fire pump engine. A fuel filter/water separator may be installed directly on the unit in the primary fuel filter location, or a separate filter/separator may be installed in the fuel delivery system near the fire pump engine assembly.



CAUTION

Due to the precise tolerances of diesel injection systems, it is extremely important that the fuel be kept clean and free of dirt or water. Dirt or water in the system can cause severe damage to both the fuel pump and the fuel injectors.

3.3.2 Fuel Recommendations



WARNING

Do not mix gasoline, alcohol, gasohol, ethanol, or methanol with diesel fuel. This mixture will cause severe engine damage or explosion.



CAUTION

Use ONLY no. 2 diesel (ASTM no. 2D) fuel. Any adjustment to compensate for reduced performance with a fuel system using alternate fuel is not warrantable.

3.4 Cooling Water Supply Installation

IMPORTANT: The cooling water supply must be immediately available when the engine is started. Ensure that the supply line valves are in the OPEN position.

NOTE: The velocity of the cooling water should be as great as possible without exceeding the maximum allowable pressure shown in the appropriate Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

1. Provide a cooling water discharge line at the outlet of the engine coolant heat exchanger and provide a cooling water supply line to the cooling water inlet per the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#). Refer to [Figure 2-4](#).

NOTE: Cooling water outlet piping from the heat exchanger should be one pipe size larger than the supply piping.

2. Check the pressure regulator setting with water flowing through the heat exchanger. If supplied as an option from CFP, both water pressure regulators have been set at 207 kPa (30 psi) or slightly less water pressure during manufacture and testing.

IMPORTANT: The manual water valves for the automatic loop should remain OPEN at ALL times. The manual valves for the bypass loop should be CLOSED during automatic (pump controller) operation. When running, the engine should stabilize between temperatures identified on the model specific Engine Data Sheet. The flow rate may need to be adjusted to maintain desired engine temperature.

NOTE: Excessively cold (4° C to 23° C [40° F to 75° F]) cooling water flow can cause condensation inside the charge air cooler.

IMPORTANT: Continuous operation with low coolant temperature (below 70° C [158° F]) or high coolant temperature (above 107° C [225° F]) can damage the engine.

3. The cooling water should be adjusted based on water flow rather than water pressure. The flow is dependent on the cooling water temperature. Refer to the Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#) for details.
4. Use an appropriate sized container to measure and time the flow from the discharge pipe.

Flow rate = time to fill container/container size.

Example: Time to fill 19 liter (5 gal) container = 15 seconds.

Divide 15 by 5 = 3 (seconds per liter [gal]).

Divide 60 seconds by 3 = 20 liters (5 gal) per minute.

- 5) Adjust both pressure regulators to a pressure that will provide a flow rate at or above the specifications.



CAUTION

When the cooling water piping is installed, adjust both pressure regulator set points before operating the pump. Damage to the heat exchanger may occur from improperly regulated cooling water supply pressure.

3.5 Battery Requirements

One set of lead /acid batteries must be supplied for the standard 12VDC operating voltage. Two redundant sets of batteries must be supplied for the optional 24 VDC operating voltage. Refer to National Fire Protection Association Standard NFPA 20 and [Section 1 - Safety](#) of this manual for additional battery installation information.


The minimum recommended reserve capacity (SAE RC) and cold cranking ampere (SAE CCA) values for a particular engine can be found on the Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#). RC and CCA definitions can be found in SAE Standard J537.

3.5.1 Battery Installation

1. Provide adequate room for servicing or replacing the batteries. Provide protection from extremes of temperature and weather.
2. Refer to National Fire Protection Association NFPA 20 for proper location of batteries and applicable local codes requirements. Ensure that the batteries are configured properly for standard 12 VDC operations or optional 24 VDC operations. Refer to [Figure 3-3](#) and [Figure 3-4](#).


NOTE: Coat the terminals with petroleum jelly to prevent corrosion. Tighten the battery connections.

3. Install the Battery Cable Kit or equivalent customer supplied wiring.
4. Follow battery connection schematic [Figure 3-3](#) and [Figure 3-4](#) to ensure adequate starting requirements for the system.

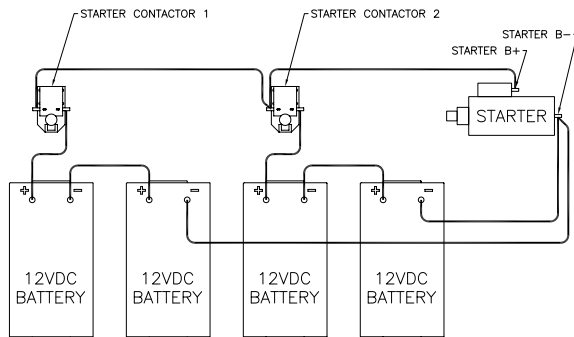

24249_00001

Figure 3-3 Series Battery Connection - 24 VDC

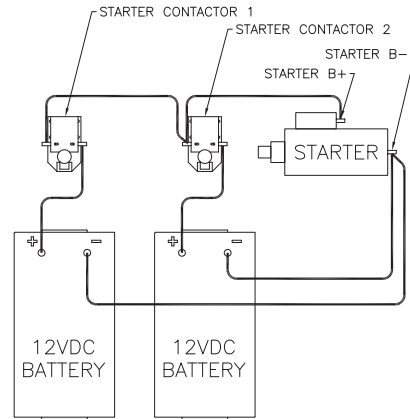

24249_00002

Figure 3-4 Series Battery Connection - 12 VDC

CAUTION

Do not connect battery charging cables to any electronic control system component. This can damage the electronic control system.

WARNING

Batteries can emit explosive gases during charging. Always ventilate the compartment before servicing the batteries. Remove sources of spark or open flame. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

IMPORTANT: Batteries must meet the requirement listed in the electrical system specifications. Batteries may be supplied by Cummins Fire Power or Cummins Inc. as an option, or may be supplied by the customer.

WARNING

Battery electrolyte (sulfuric acid) is highly caustic and can burn clothing and skin. Wear impervious neoprene gloves and safety goggles, or full face shield, when working with the batteries.

3.6 Signal and Control Installation

This section explains how to connect the controller wires to the terminal block.




CAUTION

If the batteries have been installed prior to the control wiring, disconnect the negative (-) cable first and then disconnect the positive (+) battery lead. Install the cables with the positive (+) cable first and the negative (-) cable last before testing.

NOTE: Install signal and control wiring at the Terminal Board (TB). Refer to the terminal wiring schematic decal on the inside of the instrument enclosure.

1. Ensure that the fire control system is properly installed and configured per the manufacturer's instructions. Refer to the wiring schematic drawings provided with the pump manual.
2. Complete the fire pump controller wiring (customer supplied) per the manufacturer's instructions.
3. Connect the following wires to the fire pump engine digital control panel per the engine electrical diagrams.
 - a. TB-1: Connect the control power from the fire pump controller. This power source is necessary for fire pump operations while in the AUTO mode.
 - b. TB-2: Connect the crank termination input signal for the fire pump controller. This signal is present when the engine is running. This signal indicates that the engine has started and that the crank command from the fire pump controller should stop immediately.
 - c. TB-3: Connect the remote overspeed alarm input to the fire pump controller. This signal is present when the overspeed control module has operated. If this event occurs, the fire pump engine will stop.

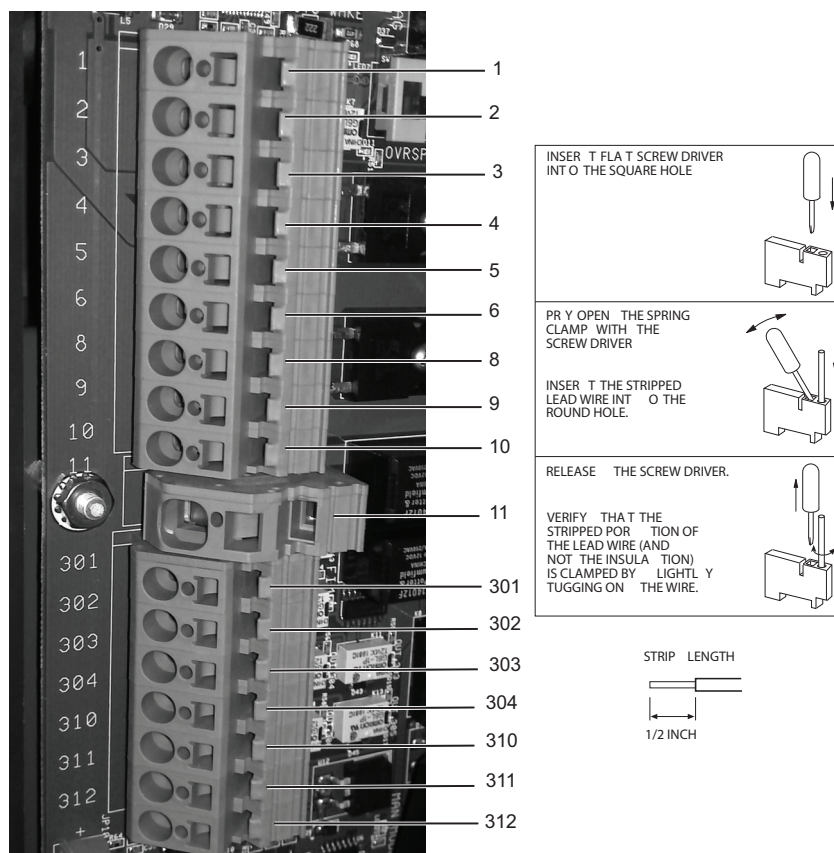

CFP-300

Figure 3-5 Termination Blocks and Wiring Decal

-
- d. TB-4: Connect the low oil pressure alarm input from the fire pump controller. This 0 VDC grounded signal is present when the oil pressure has dropped below the 83 ± 13 kPa (12 ± 2 psi) set point.
 - e. TB-5: Connect the high coolant temperature alarm input from the fire pump controller. This 0 VDC grounded signal is activated when the engine is running and the coolant temperature is at or above 93°C (200°F). The alarm will deactivate when the engine is running and the coolant temperature drops below 88°C (190°F).
 - f. TB-6: Connect battery set A lead from the controller. The controller senses battery A charge state and charges A battery through this heavy gauge wire.
 - g. TB-8: Connect battery set B lead from the controller. The controller senses battery B charge state and charges B battery through this heavy gauge wire.
 - h. TB-9: Battery positive signal driven from the Pump Controller to contactor A when desiring to crank from Battery A. Current in this circuit shall not exceed 10A continuous.
 - i. TB-10: Battery positive signal driven from the Pump Controller to contactor B when desiring to crank from Battery B. Current in this circuit shall not exceed 10A continuous.
 - j. TB-11: Common ground and battery negative for both Battery A and Battery B from between the pump controller and engine. This is not intended to create a fully isolated battery negative or ground system. Current in this circuit shall not exceed 20A continuous.
 - k. TB-301: Battery negative signal driven from the Fire Pump Digital Controller when the engine is operating on ECM B.
 - l. TB-302: Battery negative signal driven from the Fire Pump Digital Controller when either ECM triggers a fault code which can affect performance of the Fuel Injection system. See [CFP9E Fault Code Chart](#) in [Section 7](#) for related fault codes.
 - m. TB-303: Battery negative signal driven from the Fire Pump Digital Controller when a single ECM has failed.
 - n. TB-304: Battery negative signal driven from the Fire Pump Digital Controller when both ECMs have failed.
 - o. TB-310: Battery negative signal driven from the Fire Pump Digital Controller when high cooling water temperature is sensed.
 - p. TB-311: Battery negative signal driven from the Fire Pump Digital Controller when the cooling water supply restriction is sensed.
 - q. TB-312: Battery negative signal driven from an engine temperature switch when engine coolant reaches or falls below $43.3 \pm 2.78^\circ\text{C}$ ($110 \pm 5^\circ\text{F}$). The signal will be removed when the coolant temperature reaches or exceeds $60 \pm 2.78^\circ\text{C}$ ($140 \pm 5^\circ\text{F}$).
- 4. Ensure electrical continuity and adequate insulation resistance for the installed wiring.
 - 5. Provide the initial charge on the redundant batteries per the battery charger's instructions.
 - 6. Check that both voltmeters on the engine digital control panel indicate the approximate battery voltage.

3.7 Coolant System Preparation

The fire pump engine cooling and lubrication system was initially filled during manufacture and testing.



CAUTION

Ensure that all coolant systems have been filled to the proper level before operation by checking the coolant level sight gauge on the heat exchanger.

- 1. Inspect the engine coolant hoses and hose clamps. Ensure that all coolant hoses and clamps are properly installed and water tight.
- 2. The engine coolant heater must maintain an engine coolant temperature of 49°C (120°F) or above.
- 3. Ensure that coolant is present in the engine coolant heater before plugging the heater element into a dedicated circuit.

3.8 Charge Air Cooler System

The charge air cooler system reduces the temperature of the compressed combustion air from the turbocharger before entering the air intake manifold. Refer to [Figure 2-1](#) and [Figure 2-2](#).

Inspect the charge air cooler piping and hoses for loose/missing hose clamps, hose punctures, leaking manifold seals, or corrosion. Torque the hose clamps to the recommended torque value. Refer to the [Torque Table](#) in Section 8.

3.9 Lubricating Oil System Preparation



CAUTION

Some regulatory and shipping restrictions may require that all lubricants, fuels, and coolants be drained for transport. Ensure that all lubrication systems have been filled to the proper level before operation.


1. Check the oil level using the crankcase dip stick before operating. Refer to [Figure 3-6](#).
2. Fill the crankcase at the oil fill port to the “H” mark on the dipstick with engine oil.

NOTE: Do not use special “break-in” oils for new or rebuilt Cummins engines. Use the same type of oil as used in normal operation. Cummins Inc. recommends Valvoline Premium Blue® 15W-40 oil.

3.10 Pre-Start Inspections

Perform a visual inspection as follows:

1. Check that there is no apparent damage and that all components are installed.
2. Check that the drive belt is properly installed.
3. Check that all hoses and tubes are properly installed.
4. Check that all electrical connections are properly installed.

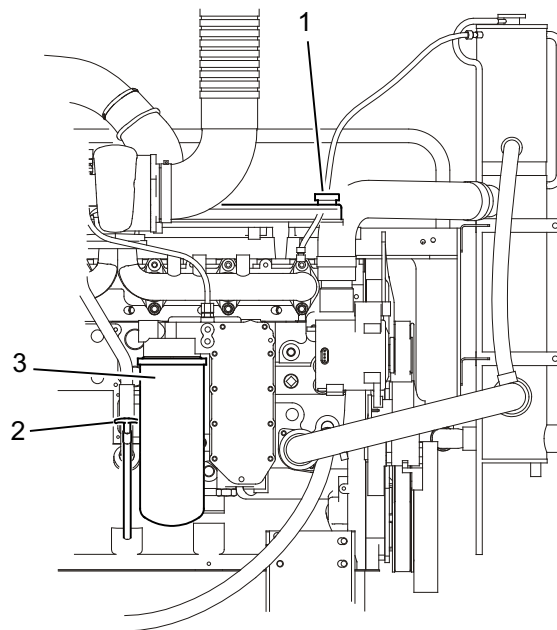

CFP-046

1. Oil Fill Port (on valve cover)
2. Oil Level Dipstick
3. Engine Oil Filter

Figure 3-6 Oil Level Dipstick and Fill Port

5. Check that the fire pump is properly installed per the pump manufacturer's instructions, is correctly aligned, and is free to rotate.
6. After completing preliminary set-up procedures, perform the engine start tests as outlined in detail in [Section 5 - Operation](#)



WARNING

Before operating the equipment, complete all safety checks, remove all tools and foreign objects from the equipment, and ensure that all guards are in place and securely fastened. Alert area personnel that the equipment will be starting. Unintentional equipment start-up or contact with exposed or moving components can cause personal injury or equipment damage.

3.11 Engine Monitoring

When the engine starts it is important to monitor the oil pressure and cooling water temperature gauges to ensure safe operation.



CAUTION

If the oil pressure is not displayed on the gauge or if the low oil pressure message is displayed within 5 seconds, STOP THE ENGINE immediately! Continued operation without proper lubrication will cause engine damage.

1. Immediately check that cooling water flow is established through the coolant heat exchanger. Cooling water flow should be established immediately, but some delay may occur before the flow exits the heat exchanger drain connection.

NOTE: Ensure that cooling water is flowing through the heat exchanger and the water pressure shown on the local pressure gauge is no more than 414 kPa (60 psi). The minimum cooling water flow rate is identified in the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).



CAUTION

If the cooling water flow is not evident at the discharge outlet or cone within 15 seconds, STOP THE ENGINE immediately! Continued operation without proper cooling water flow will cause engine damage.

2. Ensure that the engine operating temperature stabilizes between applicable ranges as identi-

fied in the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

NOTE: If the temperature does not stabilize, stop the engine and refer to Coolant Temperature Above Normal or Coolant Temperature Below Normal (Engine Running) in [Section 7 - Troubleshooting](#).

3. Operate the engine for 8 to 10 minutes.
4. Inspect for leaks, unusual noises, or other indications of incorrect operation.
5. Shut off the engine by pressing and holding the overspeed RESET/STOP switch.
6. Check that cooling water flow stops automatically shortly after the engine stops.
7. Correct any problems found during the inspection before proceeding.
8. Check the engine lubricating oil level at the crankcase dip stick. Top off if necessary.
9. Check the coolant expansion tank level. Top off if necessary.
10. Check the cooling water strainers. Clean the strainers as required per the instructions in [Section 6 - Maintenance](#).
11. Perform engine speed control and safety system tests per the instructions in [Section 5 - Operation](#).

Section 4 - Controls

4.1 Engine Digital Control Panel

The Engine Digital Control Panel (EDCP) contains controls for starting, monitoring engine performance, and controlling fire pump engine operation. Refer to [Figure 4-1](#). In manual mode, the panel remains active as long as battery power is available. In auto mode, the panel is active when battery power is present on TB-1, otherwise it goes into standby mode after 30 minutes of no battery voltage on TB-1.

4.1.1 Warning Lamp

Illuminates (yellow) in the event that the ECM has sensed a non-mission disabling fault.

4.1.2 Fault Indicator Lamp

Indicates Fuel Injection Fault (FIF) and illuminates (red) in the event that the ECM has detected a fuel injection fault or primary sensor fault.

The engine digital control panel also sends a ground signal to terminal buss #302 which sends a signal to set off an alarm on the fire pump system controller to indicate a FIF fault.

4.1.3 Scroll Buttons

Used to scroll up or down when in the menus.

4.1.4 Enter Button

Used when making changes in the menu screen.

4.1.5 Menu Button

Opens the menu option on the display.


4.1.6 Overspeed RESET/STOP Switch

Used to shut off the engine at the engine digital control panel. Momentarily pressing the switch removes key switch for 30 seconds.

Pressing the overspeed RESET switch after correcting an engine overspeed shutdown resets the overspeed control module, allowing subsequent restarts of the fire pump engine.

4.1.7 Battery A and B Voltmeters

The battery voltmeters display the charge status (VDC) of the relative battery connections.

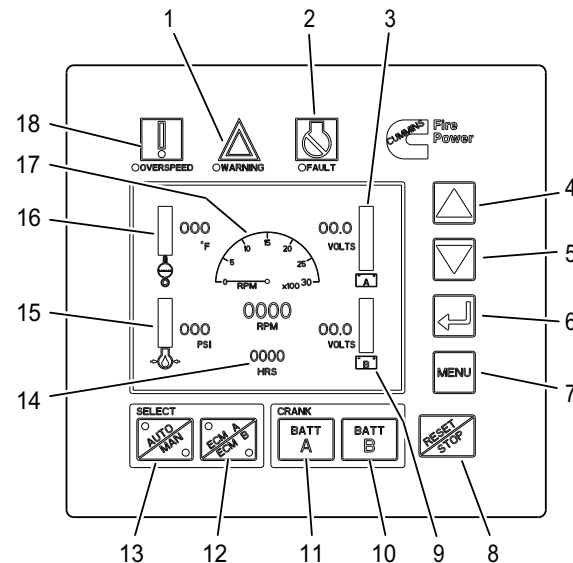

CFP-223

1. Warning Lamp
2. Fault Lamp
3. Battery "A" Voltmeter
4. Scroll UP Button
5. Scroll DOWN Button
6. ENTER Button
7. MENU Button
8. Overspeed RESET/STOP Switch
9. Battery "B" Voltmeter
10. Crank Battery B Momentary Start Button
11. Crank Battery A Momentary Start Button
12. ECM A/B Selector Switch & Indicator Lamps
13. AUTO/MAN Mode Switch & Indicator Lamps
14. Hour Meter
15. Engine Oil Pressure
16. Coolant Temperature
17. Tachometer
18. Overspeed Warning Lamp

Figure 4-1 Engine Digital Control Panel (EDCP)

4.1.8 Tachometer and Hour Meter

The Tachometer displays the engine speed in Revolutions Per Minute (RPM) whenever the engine is operating. The hour meter maintains a running total of the hours of operation (run time).

4.1.9 ECM A/B Indicator Lamps - Applicable on Electronic Engines

The ECM indicator lamps (yellow) will illuminate, indicating the ECM is being used to control the engine. If ECM A (normal position) is selected, ECM A is controlling the engine. Refer to [Figure 4-1](#).

If ECM B (alternate position) is selected, ECM B is controlling the engine, and the EDCP will send a ground signal to terminal buss #301, which will send a signal to set off an alarm on the fire pump system controller to indicate that the engine is operating on the alternate ECM.

4.1.10 Crank Battery A or B Buttons

The CRANK BATT A or CRANK BATT B buttons initiate an immediate engine start (momentary start) using the selected A or B crank battery.

Crank A or B will energize battery contactor A or B, depending on which one is selected.

Both A and B buttons can be energized at the same time in the event both batteries are weak.

4.1.11 AUTO/MANUAL Mode

The AUTO/MANUAL mode determines whether the engine starts and is controlled by the operator (MANUAL) or by an automatic signal from the fire pump system controller (AUTO). The lamp (yellow) is illuminated, depending on which mode is selected.

The MANUAL mode is typically used for engine setup, testing, and emergency and maintenance procedures.

The AUTO mode is used to start the engine under the control of the fire pump control system. In the auto mode, the fire pump engine stops upon loss of signal power from the fire pump controller.

4.1.12 Coolant Temperature Gauge

The coolant temperature gauge displays the engine coolant temperature.

4.1.13 Engine Oil Pressure Gauge

The engine oil pressure gauge displays the engine oil pressure. The gauge is independent of the low oil pressure alarm.

4.1.14 Engine Overspeed Warning Lamp

The overspeed control module monitors engine speed. If the engine RPM exceeds 115% rated

speed, the engine overspeed warning lamp is illuminated (yellow).

The Engine Digital Control Panel (EDCP) will send a power signal to terminal buss #3, which will send a signal to set off an alarm on the fire pump system controller, indicating that an overspeed condition has occurred.

The EDCP will automatically switch to MANUAL mode and will shut the engine down. After the overspeed has been reset by using the RESET/STOP switch on the EDCP, the engine operation will revert to the original AUTO mode position.

NOTE: *The engine will not be allowed to restart automatically from the fire pump system controller until the EDCP is reset.*

4.1.15 ECM Fault Code Lamps - Applicable on Electronic Engines

The amber engine warning lamp and the red engine shutdown lamp alert the operator of engine malfunctions that is categorized as follows:

1. An illuminated amber lamp indicates an engine malfunction that requires timely operator attention.
2. An illuminated red lamp indicates an engine malfunction that requires immediate and decisive operator response.
3. A 3-4 digit diagnostic fault code will display on the EDCP, which can then be used to help describe the engine malfunction. Refer to the Fault Code Chart in [Section 7 - Troubleshooting](#).

4.1.16 Engine Stop Button

The engine stop button is located on the left side of the EDCP enclosure and is used to stop the operation of the engine in either manual or auto mode. The button must be pressed and held until the engine has stopped.

4.1.17 Engine Communications Port

This plug-in is located on the left side of the EDCP enclosure and is used for the communications connection port for Cummins Insite.

NOTE: *Insite is a Cummins Inc. computer software tool used to monitor or report engine performance criteria.*

4.1.18 Contractor Access Port

The contractor access knock-out is located on the lower side of the EDCP enclosure. This is the only 25.4 cm (1 in) knock-out provided for the installing contractor to connect the fire pump system controller to the EDCP.

IMPORTANT: *If this port is not used for the installation, all warranty on the fire pump engine will be void.*

4.1.19 Engine ECM Power Supply

This plug-in is located on the lower side of the EDCP enclosure. The power supply port supplies unswitched battery power to both ECM A and ECM B.

4.1.20 Engine Harness Connection

This plug-in is located on the lower side of the EDCP enclosure. The engine harness connection connects the panel to the power source, start contactors, magnetic pick-up, alternator, and other engine related functions controlled by the EDCP.

4.2 Electronic Control Module (ECM) - Applicable on Electronic Engines

The engine control system is an electronically operated fuel controls system. The ECM performs diagnostic tests on most of its circuits and will activate a fault code if a problem is detected.

4.3 Engine Protection System - Applicable on Electronic Engines

The engine ECM identifies any 3-4 digit engine fault codes and illuminates the appropriate amber warning lamp or red shutdown lamp on the operator engine digital control panel. Refer to [Section 7 - Troubleshooting](#) for additional fault code information.




CAUTION

Normally, Cummins engines with ECMs have derate and shutdown protection calibrated into the ECM. However, the ECM on this Cummins

engine has no derate or shutdown protection. The engine will run to destruction. Therefore, preventive maintenance is essential.

4.4 Cooling Water Flow Control Valves

1. The fire pump system controller opens the cooling water normal loop solenoid valve in either manual or automatic mode. In the OPEN position, water can flow through the heat exchangers. Refer to [Figure 4-2](#). Manual cooling water valves for the automatic loop should remain OPEN at ALL times.
2. Manual cooling water valves for the bypass loop should be CLOSED during automatic (fire pump system controller) operation.

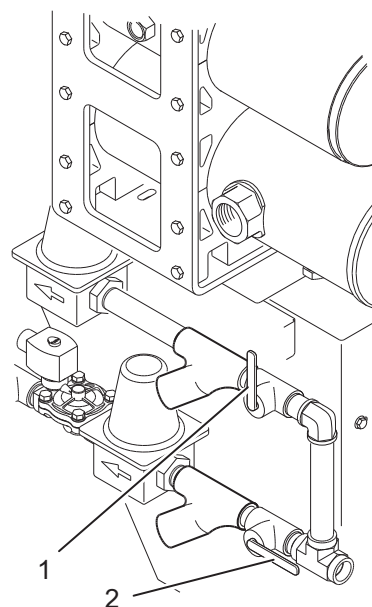

CFP-313

1. Bypass Cooling Water Manual Inlet Valve
2. Normal Cooling Water Manual Inlet Valve

Figure 4-2 Normal Open Cooling Water Manual Valves (typical)



Section 5 - Operation

5.1 Start-up Procedures

This section provides the operator with the information required to prepare the fire pump engine for normal operation, in a safe manner. This Operator's Manual is provided for your specific equipment and should be considered a part of that equipment. All personnel responsible for the operation and maintenance of the equipment should read and thoroughly understand this manual.



WARNING

Before preparing the equipment for normal production, complete all safety checks, remove all tools and foreign objects from the equipment, ensure all guards are in place and securely fastened, and alert area personnel that the equipment will be starting.

5.2 Remote Starting Procedure

To start the engine from the fire pump controller panel:

1. Press the AUTO/MANUAL mode switch on the engine digital control panel to place the engine in the AUTO mode position. Refer to [Figure 4-1](#).
2. Start the engine by initiating an engine crank signal from the fire pump controller.



CAUTION

If the crank termination signal is absent, the engine starter motor will continue to operate. Shut the engine off immediately at the fire pump controller panel to avoid damage to the starter.

3. The engine continues to operate as long as the RUN signal is present. When the RUN signal is terminated by the fire pump control panel, the engine stops.
4. The engine may be stopped locally by pressing the engine stop button on the side of the engine digital control panel.

5.3 Local Starting Procedure

To start the engine locally from the engine digital control panel:

1. Press the AUTO/MANUAL mode switch on the engine digital control panel to the MANUAL mode position to place the engine in manual mode.
2. Press either the CRANK BATT A or CRANK BATT B button to start the engine.

5.4 Emergency Starting Procedure

The engine starts automatically in the event of a fire emergency. However, if it fails to start automatically, the engine can be started locally from the engine digital control panel:


1. If necessary, open both manual bypass valves in the cooling water supply manifold (if equipped). Refer to [Figure 4-2](#).
2. Press the AUTO/MANUAL mode switch on the engine digital control panel to MANUAL mode position to place the engine in manual mode. Refer to [Figure 4-1](#).
3. Press downward on the desired battery contactor lever for up to 15 seconds or until the engine starts. Repeat up to three times if necessary. Refer to [Figure 5-1](#).
4. Release the contactor lever immediately after the engine starts.



CAUTION

To prevent damage to the starter, do not engage the starting motor more than 15 seconds. Wait 15 seconds between each attempt to start, up to six attempts.

5. The engine may be stopped locally by pressing and holding the stop button on the left hand side of the engine digital control panel enclosure.

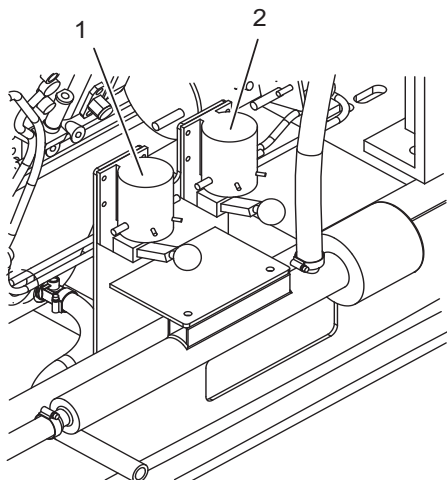

CFP-023


1. Battery A Starter Contactor
2. Battery B Starter Contactor

Figure 5-1 Manual Starter Contactors (typical)

5.5 Engine Digital Control Panel Screens and Adjustments

The following menu screens are available for operator input and monitoring of engine parameters on the engine digital control panel menu screens.

5.5.1 Main Menu

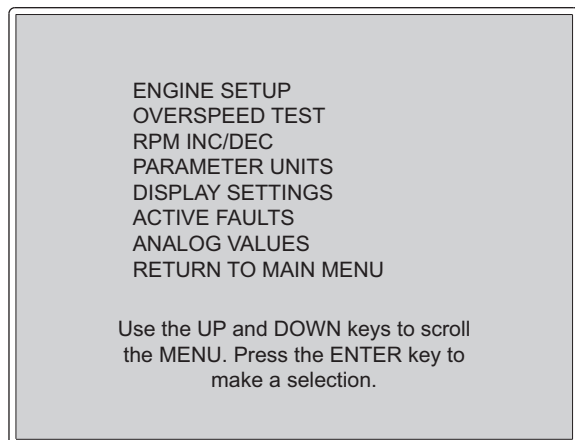

CFP-224

Figure 5-2 Main Menu Screen (Typical)


This screen is the main menu screen for all functions.

5.5.2 Engine Set-up Screen

This screen is for Cummins Fire Power internal use.

5.5.3 Overspeed Test Screen

The engine overspeed set point was set during manufacturing and test procedures. It may, however, be necessary to adjust the overspeed set point based on the actual fire pump application.

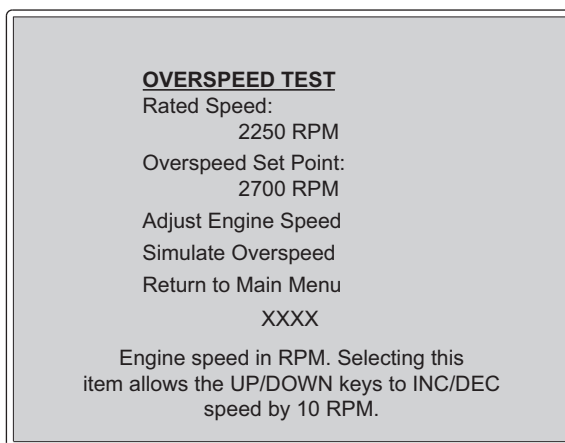

CFP-225


Figure 5-3 Overspeed Test Screen (Example)

The overspeed test screen will allow for two options to demonstrate overspeed:

1. Increment the engine speed up to reach the overspeed set point for the specific engine model. Example above identifies 2250 RPM.
2. Used to simulate overspeed for engine speed models above 2250 RPM or for instances when over-pressurizing of sprinkler systems can cause damage.

NOTE: If Option 1 is selected, the engine speed will have to be manually reset back to pump rated speed after the overspeed test is completed. Use the RESET/STOP switch to reset the engine back to the original values.

5.5.4 RPM INC/DEC Screen

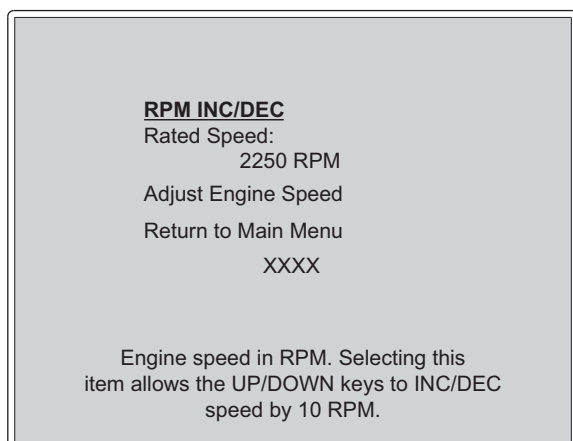


CFP-226

Figure 5-4 RPM INC/DEC Screen (Typical)

This screen allows the operator to make on-site adjustments by incrementing or decrementing the engine operating speed of electronic engines. The engine operating speed was factory set during manufacturing and test procedures.

If the speed does not match the engine RPM shown on the factory setting plate, scribe the actual RPM on the field setting plate.

5.5.5 Parameter Units Screen

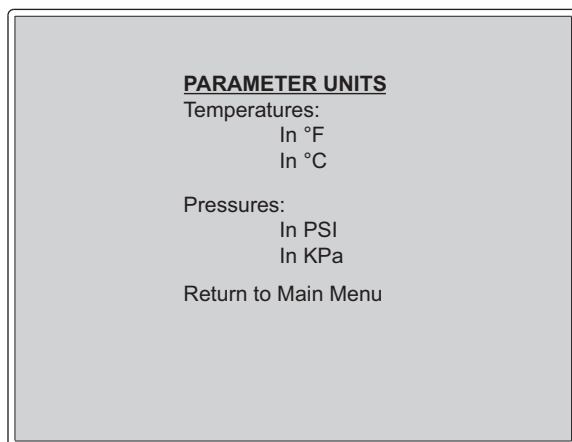


CFP-227

Figure 5-5 Parameter Units Screen (Typical)

This screen will allow the operator to select Imperial or Metric units.

5.5.6 Display Settings Screen

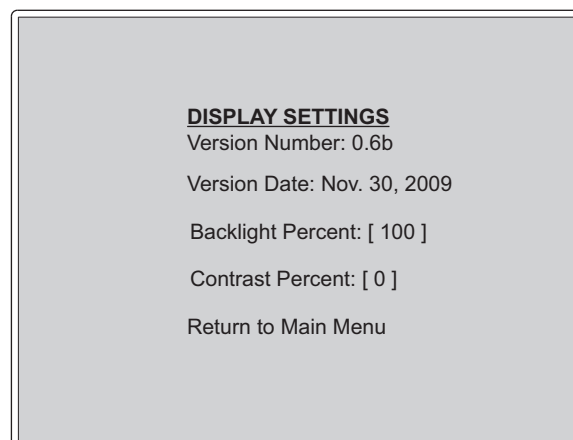


CFP-228

Figure 5-6 Display Settings Screen (Typical)

This screen will enable adjustments to the backlight and contrast for optimal viewing in varying lighting environments. The version number of the EDCP software will be indicated on this screen.

5.5.7 Analog Values Screen

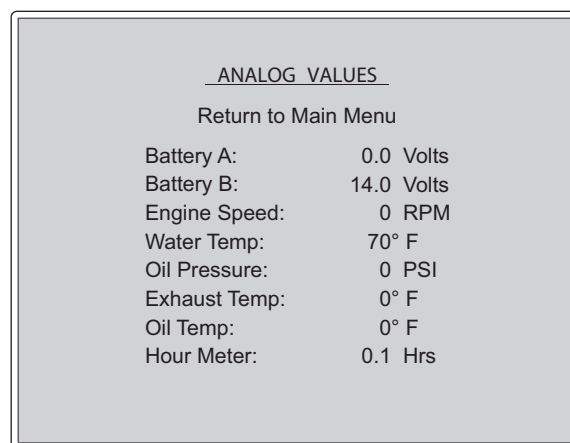

CFP_00012

Figure 5-7 Analog Values Screen (Typical)

This screen will provide analog output values for battery voltages, engine speed, water temperature, oil pressure and temperature, exhaust temperature, differential oil pressure, and hours of operation.

NOTE: Metric or Imperial values can be changed using the Parametric Units screen.

NOTE: For exhaust temperature values less than 93° C (200° F), or not monitored, the value will be displayed as 0°. For oil temperature values less than 24° C (75° F), or not monitored, the value will be displayed as 0°.

5.6 Active Fault Codes - Applicable on Electronic Engines

The Electronic Control Module (ECM) can display and record operation irregularities, which are displayed as fault codes on the engine digital control panel.

5.7 Field Acceptance Testing

The required tests are outlined in the NFPA 20 and NFPA 25 Standards and shall be performed to validate automatic and manual operational requirements for field acceptance testing.



Section 6 - Maintenance

6.1 Introduction

Before performing maintenance procedures, read and understand the Safety Section of this manual. Improper performance or lack of critical information could result in personal injury or equipment damage.

Cummins encourages our customers to perform maintenance and repairs whenever necessary. However, servicing complex components within the normal warranty period may void the Cummins warranty and any specified warranty extended by the manufacturer of OEM products.

Cummins recommends that the engine be maintained according to the maintenance schedule in this section.

Maintenance procedures should be performed by skilled technicians, who are familiar with the equipment, local regulations, and service procedures for fire pump engine and pump systems. Improper maintenance can damage the engine or fire pump, or cause personal injury.

IMPORTANT: *If your engine is equipped with a component or accessory not manufactured by Cummins Inc, refer to the component manufacturer's vendor supplied literature for specific maintenance recommendations.*

6.2 Engine Operation Report

The engine must be maintained in top mechanical condition. The maintenance department needs daily running reports from the operator to make necessary adjustments.

The weekly running report also helps to make provisions for more extensive maintenance, as the reports indicate the necessity.

Report to the maintenance department any of the following conditions:

1. Low engine oil pressure.
2. Engine surge.
3. Erratic operation or frequent shutdowns.
4. Any warning lamps flashing or staying illuminated.
5. Abnormal coolant or oil temperature.
6. Unusual engine noise or vibration.
7. Excessive smoke.
8. Excessive use of coolant, fuel, or engine oil.
9. Any fluid leaks.
10. Loose, worn, or damaged parts.

Maintenance Chart

Task	Period	Page
Weekly Maintenance		
6.3.1 General Walk Around Inspection	Weekly (40-60 Hrs)	6-4
6.3.2 Air Cleaner Filter and Piping	Weekly (40-60 Hrs)	6-4
6.3.3 Cooling System	Weekly (40-60 Hrs)	6-4
6.3.4 Engine Oil System	Weekly (40-60 Hrs)	6-5
6.3.5 Fuel System Inspections	Weekly (40-60 Hrs)	6-6
6.3.6 Engine Exhaust System	Weekly (40-60 Hrs)	6-6
6.3.7 Electrical Supply and Controls	Weekly (40-60 Hrs)	6-6
6.3.8 Crankcase Ventilation Hose	Weekly (40-60 Hrs)	6-6
6.3.9 Clean Cooling Water Strainers	Weekly (40-60 Hrs)	6-6
6.3.10 Check Battery Condition	Weekly (40-60 Hrs)	6-7
6.3.11 Engine Test Run	Weekly (40-60 Hrs)	6-8
6.3.12 Engine Coolant Heater	Weekly (40-60 Hrs)	6-8
Annual Maintenance		
6.4.1 Electrical Components	Annual (1000 Hrs)	6-8
6.4.2 Turbocharger Mounting Nuts	Annual (1000 Hrs)	6-8
6.4.3 Engine Mounting Bolts	Annual (1000 Hrs)	6-9
6.4.4 Inspect Fuel Pumps and Filters	Annual (1000 Hrs)	6-9
6.4.5 Engine Oil and Oil Filter Change	Annual (1000 Hrs)	6-9
6.4.6 Change Fuel Filters	Annual (1000 Hrs)	6-11
6.4.7 Output Shaft Lubrication	Annual (1000 Hrs)	6-11
6.4.8 Engine Operation Checks	Annual (1000 Hrs)	6-12
6.4.8.1 Crank Termination Set Point	Annual (1000 Hrs)	6-12
6.4.8.2 Engine Speed Calibration	Annual (1000 Hrs)	6-12
6.4.9 Coolant Pump/Alternator Belt Inspection	Annual (1000 Hrs)	6-12
6.4.10 Coolant Pump/Alternator Belt Tension	Annual (1000 Hrs)	6-13
6.4.11 Heat Exchanger Pressure Test	Annual (1000 Hrs)	6-13
6.4.12 Turbocharger Inspection	Annual (1000 Hrs)	6-13
Every 2 Years or 2000 Hours		
6.5.1 Coolant Pump Inspection	2 Years (2000 Hrs)	6-14
6.5.2 Drain and Flush Cooling System	2 Years (2000 Hrs)	6-14
Every 4 Years or 5000 Hours		
6.6.1 Coolant Thermostat Removal/Installation	4 Years (5000 Hrs)	6-16
6.6.2 Coolant Pump/Alternator Belt Replacement	4 Years (5000 Hrs)	6-16
6.6.3 Charge Air Cooler (CAC) Heat Exchanger	4 Years (5000 Hrs)	6-18

NOTE: All maintenance and inspections intervals are accumulative. When performing annual maintenance, also perform maintenance listed under daily, weekly, monthly, and 3 month intervals.

Maintenance Record Form

[illegible]

6.3 Weekly Maintenance

When the engine is running, be alert for mechanical problems that could create unsafe or hazardous conditions.

6.3.1 General Walk Around Inspection

The following areas should be inspected weekly to maintain safe and reliable operation.

1. Check fluid levels before starting the engine. Check oil pressure and coolant temperatures frequently. Most engine problems give an early warning.
 - a. Look and listen for changes in engine performance, sound, or appearance that will indicate that service or repair is needed. Be alert for misfires, vibration, excessive exhaust smoke, loss of power, or increases in oil or fuel consumption.
 - b. Check the engine appearance for excessive heat, wiring short circuits, excessive end-play, vibrations, excessive wear, excessive abrasion, damaged electrical wiring, or loose electrical wiring.
 - c. Check the engine for odors of diesel fuel, burning rubber, electrical system failure, exhaust fumes, or smoke.



WARNING

Engine fuel is highly flammable and represents an extreme hazard for fire or explosion when exposed to electrical sparks or open flame. Clean up spilled fuel immediately. Keep sources of electrical spark or open flame away from a fuel source.

6.3.2 Air Cleaner Filter and Piping

The frequency of cleaning or replacing the air cleaner filter element is determined by the conditions in which the engine operates.

1. Visually inspect the air intake filter and piping daily for blockage, damage to piping, loose clamps, or punctures that can allow debris to enter the engine. If there is a blockage the service indicator will be activated. Refer to [Figure 2-2](#).

NOTE: Turbocharged engines must be operated at rated RPM and full load to check maximum intake air restriction.

NOTE: Cummins recommends using an air cleaner filter element, as listed on the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).



CAUTION

Never operate the engine without an air cleaner. Intake air must be filtered to prevent dirt and debris from entering the engine and causing premature wear. Dirt or foreign objects could cause engine damage.

2. The air cleaner filter service indicator is actuated when excessive air restriction has occurred at the air cleaner. Refer to [Figure 2-2](#).
 - a. If the red indicator flag is at the raised position in the window, clean or replace the air filter per the manufacturer's recommendation as required. Do not remove the felt washer from the indicator. The felt washer absorbs moisture.
 - b. After the air cleaner has been serviced, push the flag in to reset the service indicator.

IMPORTANT: Maximum intake air restriction is 762 mm H₂O (25.0 in H₂O) for turbocharged engines

3. Check for corrosion under the clamps and hoses of the intake system piping. Corrosion can allow corrosive products and dirt to enter the intake system. Disassemble and clean as required.
4. Replace damaged air filter or hoses, and tighten loose clamps, as necessary, to prevent the air system from leaking. Torque hose clamps to the recommended torque value. Refer to the [Torque Table](#) in Section 8.

6.3.3 Cooling System




CAUTION

Do not remove a coolant pressure/fill cap from a hot engine. Shut down the engine and wait until the coolant temperature is below 50° C (120° F) before removing the pressure cap. Heated

coolant spray or steam can cause severe personal injury.

1. Inspect the cooling water piping, coolant heat exchanger tanks, charge air cooling system, engine coolant hoses and hose clamps for loose fittings, leaks, damage, and corrosion.

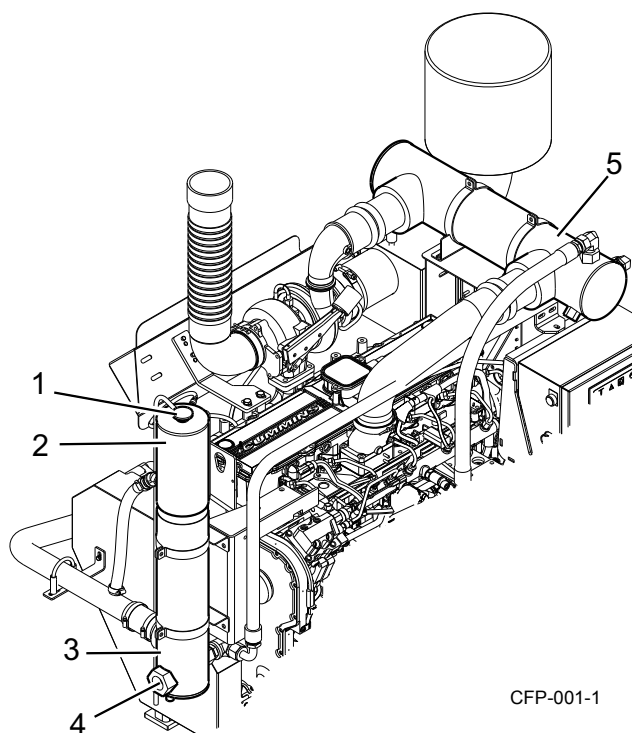

1. Coolant Pressure/Fill Cap
2. Coolant Expansion Tank
3. Coolant Heat Exchanger
4. Cooling Water Discharge Connection
5. Charge Air Cooler (CAC) Heat Exchanger

Figure 6-1 Cooling System Components

- a. Tighten the hose clamps as necessary
- b. Check for cracks, holes, or other damage. Repair or replace as necessary.

CAUTION
Never use a sealing additive to stop leaks in the cooling system. This can result in cooling system plugging and inadequate coolant flow, causing the engine to overheat.

2. With the coolant expansion tank at ambient temperature, press down, unscrew, and remove the pressure cap. Refer to [Figure 6-1](#).

- a. Ensure that the coolant level is visible by checking the coolant level sight gauge.

- b. Add coolant as required. **DO NOT OVER-FILL!**

NOTE: Supplemental engine coolant should be a mixture of 50% ethylene glycol antifreeze and 50% water to avoid engine damage. Refer to antifreeze information in [Section 6.5.2 Drain and Flush Cooling System](#).

3. Check the antifreeze concentration at least 6 times a year or whenever coolant is added to the cooling system by using a refractometer (such as Fleetguard® Part No. CC2800).
4. Drain a small amount of coolant from the return line petcock and inspect the coolant for excessive rust or particulate matter. Change the coolant more frequently if particles are present.

CAUTION
Do not mix coolant brands or chemical solutions, as this could damage the cooling system. Keep a record of the coolant concentration and manufacturer with the engine maintenance records.


5. Check for soft, overly pliant hoses, oxidation, and loose hose clamps. Torque hose clamps to the recommended torque value. Refer to the [Torque Table](#) in [Section 8](#). Replace damaged hoses and clamps as required.
6. Check the heat exchanger for leaks, damage, and dirt buildup. Clean and repair as required.

6.3.4 Engine Oil System

WARNING
Perform the specific checks in this section only after the engine is fully stopped. Unless tests require engine operation, disconnect the battery leads from the batteries (negative terminal first). Contact with exposed or moving components can cause severe personal injury.

1. For accurate dipstick readings, shut off the engine and wait approximately 10 minutes to allow the oil in the upper portions of the engine to drain back into the crankcase.

2. Check the oil level at the engine dipstick. Refer to [Figure 6-2](#).
 - a. If the oil level is greater than the high mark (H), drain excess oil and recheck the level.
 - b. If the oil level is consistently below normal after a fill, check for leaks, loose or damaged gaskets, or oil in the coolant system. Troubleshoot per Engine Oil Consumption Excessive in [Section 7 - Troubleshooting](#).
 - c. If the oil level is below the low mark (L), add the equivalent type oil.

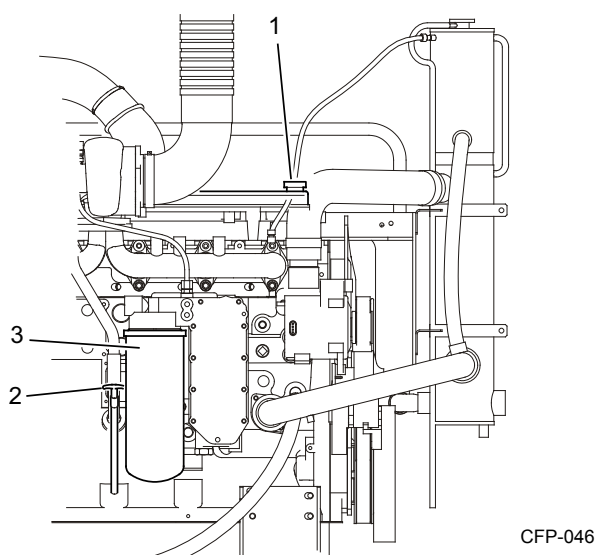

1. Oil Fill Port (on valve cover)
2. Oil Level Dipstick
3. Engine Oil Filter

Figure 6-2 Oil Level Dipstick

NOTE: Cummins recommends using Premium Blue S.A.E. 15W-40 Multi-viscosity Lubricating Oil or equivalent. Refer to the oil change interval and the procedures in [Section 6.4.5 Engine Oil and Oil Filter Change](#).

6.3.5 Fuel System Inspections



WARNING

Engine fuel is highly flammable and represents an extreme hazard for fire or explosion when exposed to electrical sparks or open flame. Clean up spilled fuel immediately. Keep sources of electrical spark or open flame away from a fuel source.

1. Shut off the engine.
2. Inspect the fuel supply line, return line, filter and fittings for cracks or abrasions.
 - a. Ensure the lines are not rubbing against anything that could damage the fuel system hoses. Repair any leaks or alter line routing to eliminate wear immediately.
 - b. Relieve fuel line pressure by carefully loosening the fuel inlet line.

NOTE: Refer to the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#) for Cummins recommended replacement components.

6.3.6 Engine Exhaust System

With the engine operating, inspect the entire exhaust system, including the exhaust manifold, exhaust flex pipe, muffler, and piping.

Check for leaks at all connections, welds, gaskets, and joints. Make sure that the exhaust pipes are not heating surrounding areas excessively. Repair any leaks immediately.

6.3.7 Electrical Supply and Controls

Check the terminals on the starting batteries for clean and tight connections. Loose or corroded connections create resistance which can hinder starting. Inspect the Engine Digital Control Panel (EDCP) harness connections to be sure they are secure.

6.3.8 Crankcase Ventilation Hose

1. Inspect the crankcase ventilation hose for wear, damage, sludge, blockage, or dirt buildup. Refer to [Figure 2-1](#).
2. Clean the ventilation hose if obstructed or blocked. Replace if worn or damaged, as required.


6.3.9 Clean Cooling Water Strainers

The (2) cooling water strainers should be cleaned weekly to remove sediment. Refer to [Figure 6-3](#).

To clean the normal line strainer, ensure that the normal line valves are open and the bypass line valves are closed.

To clean the bypass line strainer, ensure that the bypass line valves are open and the normal line valves are closed.

1. For each cooling water strainer, remove the plug.
2. Inspect and remove any debris.
3. Install the strainer plugs.
4. When finished, open the normal line valves and close the bypass line valves for normal operation.

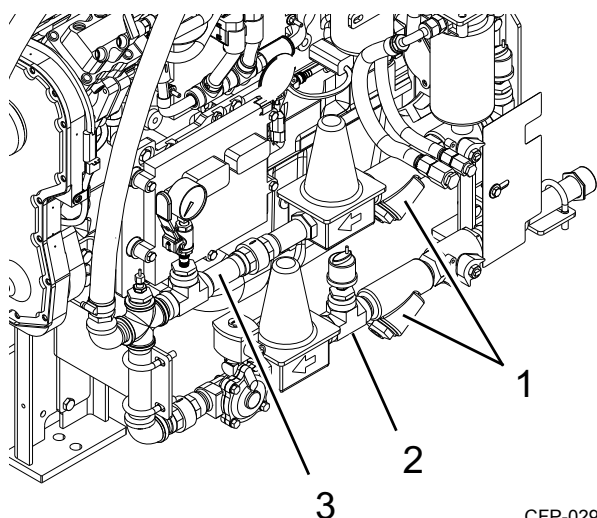

1. Cooling Water Strainers
2. Normal Water Line
3. Bypass Water Line

Figure 6-3 Cooling Water Strainers

6.3.10 Check Battery Condition



CAUTION

Batteries can emit explosive gases during charging. To reduce the possibility of personal injury, always ventilate the battery compartment before servicing the batteries.



CAUTION

To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

1. Keep the batteries clean by wiping them with a damp cloth whenever dirt appears excessive.
2. Use a battery hydrometer to check the specific gravity of the electrolyte in each battery cell. A fully charged battery will have a specific gravity of 1.260. Charge the battery if the specific gravity reading is below 1.215.
3. Check battery wiring and cable connections for loose, corroded, worn, or damaged cables. Check both connectors at the alternator, battery connections, and engine grounding lug (near starter motor).
 - a. If the battery cables are corroded, remove the battery cable clamps, starting with the negative (-) battery cable.
 - b. Use fine emery cloth or a wire brush to clean the cable clamps and battery cables. The metal should be shiny.
 - c. Wash the battery terminals with a solution of baking soda and water - 2 oz (1/4 cup) baking soda to .94 liter (1 qt) of water.
 - d. Be careful to prevent the solution from entering the battery cells, and flush the batteries with clean water when done.
 - e. After cleaning the connections, coat the terminals with a light application of petroleum jelly.
 - f. Reinstall and tighten the cable clamps.



WARNING

Battery electrolyte (sulfuric acid) is highly caustic and can burn clothing, the skin, or cause blindness. Wear protective clothing, impervious neoprene gloves, safety goggles, or full-face shield when working with the batteries.

4. Check the electrolyte level in the batteries monthly. If low, fill the battery cells to the bottom of the filler neck with distilled water.
5. Check for continuity between terminals using a digital multimeter or other test equipment. Also check the insulation resistance to ground. Correct any electrical faults.

6.3.11 Engine Test Run

1. Start the engine at least once a week for a minimum of 30 minutes with as much load as possible. Periods of no-load operation should be held to a minimum, because unburned fuel tends to accumulate in the exhaust system.
2. Refer to the instructions in [Section 5 - Operation](#).
3. Check that the engine starts and operates at the recommended fire pump speed specification.
4. Engine oil pressure must be indicated on the gauge within 15 seconds after starting.
5. Run the engine no less than 30 minutes to attain normal running temperature. Observe that the engine is operating at proper operating speed.
6. Check unusual engine noise. Listen for any unusual engine noise which can indicate that service is required.
7. Ensure oil pressure is greater than 69 kPa (10 psi).
8. Check that the coolant temperature is between 70° C (158° F) and 107° C (225° F).
9. Check that both battery voltmeters indicate 12 VDC for standard or 24 VDC for optional operating systems.
10. Check that the air filter service indicator has not popped-up; indicating an air filter blockage. Replace the air filter as required.
11. End test run by pressing and holding the over-speed RESET/STOP switch until the engine stops.

6.3.12 Engine Coolant Heater

NOTE: Perform this inspection procedure 24 hours after shutting off the engine.

The engine coolant heater must maintain an engine coolant temperature of 49° C (120° F) or above. The engine block must be warm to the touch in the water jacket areas. Refer to [Figure 2-2](#).

If the heater does not appear to be working correctly, contact a Cummins Authorized Repair Location.

6.4 Annual Maintenance

All checks or inspections listed under previous maintenance intervals must also be performed at this time, in addition to those listed under this maintenance interval.

6.4.1 Electrical Components



CAUTION

AVOID SERVICING complex components such as: printed circuit boards, programmable controllers, and ECMs not specifically authorized by Cummins Inc. Contact a Cummins Authorized Repair Location before performing any extensive maintenance.



CAUTION

To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

1. Remove the battery terminal cables, starting with the negative (-) cable first.
2. Inspect the electrical wiring harness, electrical terminal connections, and electrical plug-ins for secure, clean electrical contacts, worn or damaged insulation, burnt wires, broken wires, and loose connections. Refer to [Figure 2-1](#)
 - a. Clean and tighten any loose electrical connections.
 - b. Repair or replace worn, damaged, burnt, or poorly insulated wiring immediately. Refer to [Section 8 - Component Parts and Assemblies](#).


IMPORTANT: Refer to the vendor supplied literature for recommended maintenance procedures.

3. Inspect the function of all gauges, voltmeters, switches, and warning lamps on the Engine Digital Control Panel (EDCP). Replace the EDCP if any are not functioning properly.

6.4.2 Turbocharger Mounting Nuts

1. Check the turbocharger mounting nuts. Refer to [Figure 6-4](#).

2. Torque the mounting nuts to the recommended torque value. Refer to the [Torque Table](#) in Section 8.

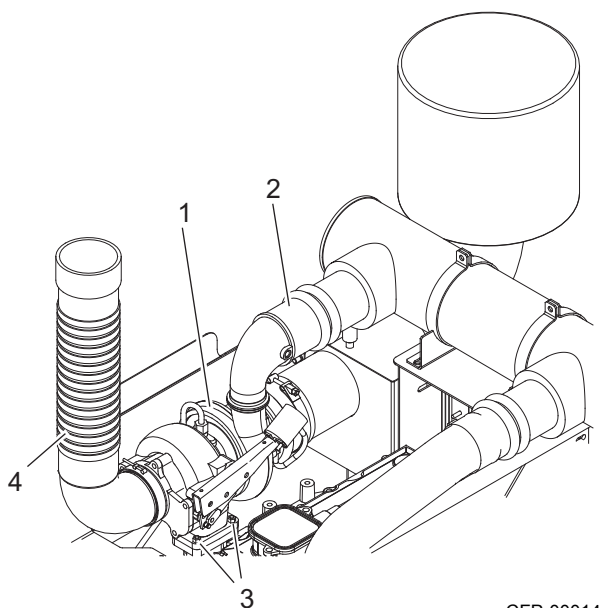

CFP-00014

1. Turbocharger
2. Air Hose to Charge Air Cooler
3. Turbocharger Mounting Nuts
4. Exhaust Flex Connection

Figure 6-4 Turbocharger (typical)

6.4.3 Engine Mounting Bolts

CAUTION


Loose engine mount bolts or damaged brackets can cause engine misalignment or excessive vibration. These conditions can cause engine or pump damage.

1. Inspect all engine supports for cracks or loose bolts. Refer to [Figure 2-1](#) for the location of the engine supports.
2. Check the torque on the engine support mounting bolts. Torque the engine mounting cap screws to the support bracket. Refer to the [Torque Table](#) in Section 8 for recommended torque values.

6.4.4 Inspect Fuel Pumps and Filters

1. Inspect the fuel injection pump mounting nuts, including the support bracket, for loose or damaged hardware. Refer to [Figure 6-5](#).

2. Inspect the fuel line hoses and fuel filters for wear, damage, loose fittings, and leaks. Repair or replace damaged hoses and filters as required.

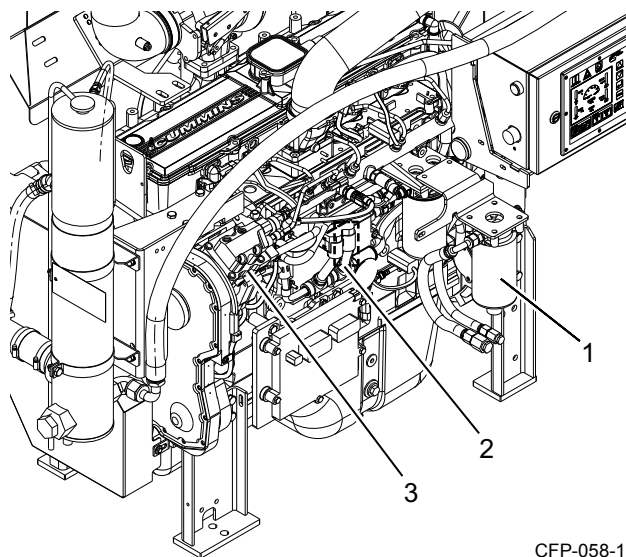

CFP-058-1

1. Fuel Filter or Filter/Separator
2. Lift Pump (Behind ECM A)
3. Fuel Pump

Figure 6-5 Fuel Pumps (typical))

6.4.5 Engine Oil and Oil Filter Change

Engine oil becomes contaminated and essential oil additives are depleted with use. The amount of contamination is related to the total amount of fuel and oil consumed. Change the oil at least once annually.

NOTE: For composite oil pans, always use a new sealing washer on the oil drain plug. Hold the external locking nut in place while tightening the oil drain plug.

1. Change the oil and the oil filter to remove the contaminants suspended in the oil.

IMPORTANT: If the engine oil is drained from the oil pan to make an engine repair, new oil must be used.


NOTE: Cummins does not recommend exceeding 600 hours on oil change intervals.

WARNING

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin. Some state and federal agencies have determined that

used engine oil can be carcinogenic. Prolonged, repeated contact can cause skin disorders or other bodily injury. Wash thoroughly after contact. Avoid inhalation of vapors and ingestion of used engine oil. Dispose of the oil in accordance with local environmental regulations.

2. Operate the engine until the coolant temperature reaches 70° C (158° F). Shut the engine off.
3. Place an appropriate container under the oil pan drain plug. Refer to the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#) for oil pan capacity.
4. Remove the oil drain plug and drain the oil immediately to make sure all the oil and suspended contaminants are removed from the engine.
5. Remove the oil filter. Refer to [Figure 6-6](#).
 - a. Clean the area around the engine oil filter canister.
 - b. Use a filter wrench to remove the filter.
 - c. Remove and discard the O-ring seal if it has remained attached to the mounting flange. Clean the filter mounting flange with a clean lint-free cloth.
 - d. Apply a light film of 15W-40 lubricating oil to the replacement filter gasket before installing the filter.
6. Fill the oil filter with a high-quality 15W-40 multi-viscosity lubricating oil, such as Premium Blue®, or its equivalent.

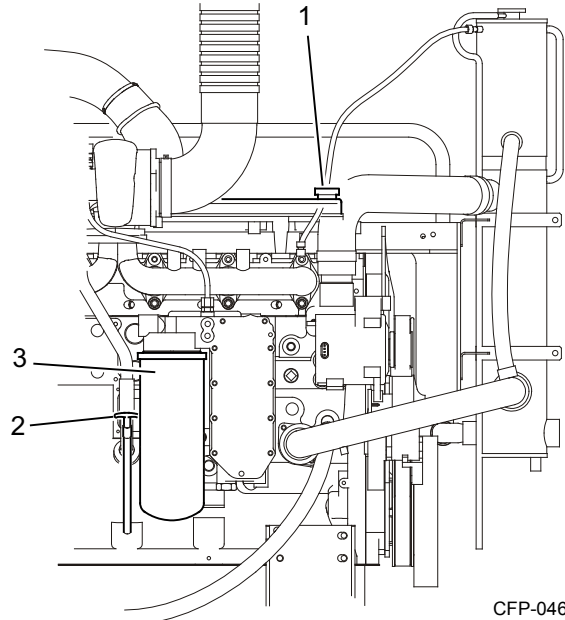

1. Oil Fill Port (on valve cover)
2. Oil Level Dipstick
3. Engine Oil Filter

Figure 6-6 Oil Filter and Oil Level Dipstick

7. Center the filter ring on the threaded mounting nipple. Screw the filter canister onto the mounting flange until the gasket is snug against the mounting flange. Then tighten an additional 1/4 turn.

CAUTION

Mechanical over-tightening can distort the threads or damage the filter element seal.

NOTE: Cummins recommends using oil filter replacement parts as outlined in the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

8. Check and clean the oil pan drain plug threads and sealing surface. Install the oil pan drain plug. Torque the plug to the recommended torque value per the Engine Manual.
9. Fill the engine to the proper level with clean, high quality 15W-40 oil at the fill port. Refer to [Figure 6-6](#).



CAUTION

If no oil pressure is noted within 15 seconds after the engine is started, shut down the engine to reduce the possibility of internal damage.

10. Stop the engine.
11. Wait approximately 15 minutes to let the oil drain from the upper parts of the engine.
12. Check the oil level again. Add oil as necessary to bring the oil level to the H (high) mark on the dipstick.

6.4.6 Change Fuel Filters



WARNING

Engine fuel is highly flammable and represents an extreme hazard for fire or explosion when exposed to electrical sparks or open flame. Clean up spilled fuel immediately. Keep sources of electrical spark or open flame away from a fuel source.



WARNING

Do not open the fuel filter/water separator drain valve or dismantle the fuel lines on the high-pressure fuel system with the engine running. High pressure fuel spray from and operating engine can cause serious personal injury or fire hazard.

1. Shut off the engine.
2. Close any fuel valves (if equipped) to prevent fuel from draining or siphoning.
3. Clean the area around the fuel filter or fuel/water separator heads.

NOTE: Refer to the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#) for filter replacement recommendations.

4. Remove the spent filter canisters using a filter wrench. Refer to [Figure 2-1](#).
5. Clean the filter mounting head surfaces of sludge buildup and foreign particles. Ensure mating gasket surfaces are clean.

6. Lubricate the gasket seals with clean S.A.E. 15W-40 lubricating oil.
7. Center the filter ring on the threaded mounting nipple. Screw the filter canister onto the mounting flange until the gasket is snug against the mounting flange, then tighten an additional 1/4 turn.
8. Open the fuel supply valves (if equipped).



CAUTION

Mechanical over-tightening can distort the threads or damage the filter element seal.

9. Press either the CRANK BATT A or CRANK BATT B button to start the engine to allow the fuel to flow through the system.
10. Depress the contactor switch for up to 15 seconds or until the engine starts. Repeat up to three times, if necessary.



CAUTION

To prevent damage to the starter, do not engage the starting motor more than 15 seconds. Wait 15 seconds between each start attempt.

IMPORTANT: If the engine does not start after three attempts, check the fuel supply system. Absence of blue or white exhaust smoke during cranking indicates no fuel is being delivered.

NOTE: Engines used in fire pumps or standby service are expected to immediately accelerate from crank to full load.

6.4.7 Output Shaft Lubrication

It is recommended that proper lubrication to drive shafts and output shafts is to be completed on a regular schedule.

1. Remove the output shaft guards.
2. Wipe the grease fittings and grease gun nozzle with a clean cloth to avoid contamination.
3. Add grease to the drive shaft universal joint grease fittings. Refer to [Figure 3-2](#).
4. Wipe excess grease from the grease fittings

NOTE: Cummins Inc recommends using a good quality semi-synthetic, molybdenum-fortified NLGI #2 lithium complex grease which protects from -47° to 204° C (-54° to 400° F).

6.4.8 Engine Operation Checks

The following service procedures ensure that the engine starts and operates properly under normal conditions.



WARNING

Before equipment operation, ALL guards, covers, and protective devices MUST BE in place and securely fastened. Serious personal injury could result from contact with exposed or moving components.

6.4.8.1 Crank Termination Set Point

The speed switch crank termination set point is factory set at 600 RPM and should not be changed from this value.

6.4.8.2 Engine Speed Calibration

If the speed does not match the engine RPM shown on the factory settings plate, Refer to Section [5.5.4 RPM INC/DEC Screen](#) on the engine digital control panel.

1. Start the engine using the local start method.
2. Observe that the engine starts and accelerates to the speed set point listed on the factory settings plate.
3. Monitor engine speed on the tachometer. Record the observed engine speed.

If the speed does not ramp up to the setting shown on the factory settings plate, the engine operating speed set point must be calibrated.

4. Depress the up (increase) and down (decrease) arrows on the EDCP display to set the desired speed. Refer to [Figure 4-1](#).

NOTE: Each time the speed INCREASE/DECREASE arrow is depressed, the idle speed is increased or decreased by 10 RPM. Holding the arrows in either the INC or DEC position ramps the engine speed in the selected direction.

5. Stop the engine.
6. Start the engine.
7. Observe that the engine starts and accelerates to the rated speed set point.
8. The engine speed set point calibration is required for both the ECM A and ECM B subsystems.
9. Repeat steps 2 through 6 while the ECM selector switch is set to ECM B.

IMPORTANT: Never switch from ECM A to ECM B while the engine is running.

IMPORTANT: The final pump speed is typically set while the pump is flowing 150%.

6.4.9 Coolant Pump/Alternator Belt Inspection

On some engine models, the pump and alternator belt drives both the pump and alternator.



CAUTION

Belt damage can be caused by, incorrect tension, incorrect size or length, pulley misalignment, incorrect installation, severe operating environment, and oil or grease on the belt or pulley.

1. Place the AUTO/MANUAL mode switch in the MANUAL position.
2. Disconnect both batteries at their terminals. Remove the negative (-) cable first. Install the negative (-) cable last.
3. Remove the belt guard bolts and the belt guard. Set aside for re-installation. Refer to [Figure 6-7](#).
4. Visually inspect the belt for frayed, worn, missing pieces, or cracked belt surfaces. Check the belt for intersecting cracks.

NOTE: Transverse cracks (across the belt width) are acceptable. Longitudinal cracks (direction of belt length) that intersect with transverse cracks are not acceptable. Replace the belt if it is cracked, frayed, or damaged.

5. If the belt condition is acceptable, check the belt tension.

NOTE: Belts with glazed or shiny surfaces indicates belt slippage. Correctly installed and tensioned belts will show even pulley and belt wear.


6.4.10 Coolant Pump/Alternator Belt Tension



CAUTION

Disconnect the batteries (negative cable first) before performing service on the fire pump engine or on any of its controls.

1. Check the coolant pump drive belt tension.
2. Use the Cummins belt tension gauge, Part No. 3822524, to measure the drive belt tension.
 - a. Measure the belt tension in the center span of the belt between the idler and alternator pulleys.
 - b. Belt tension should be set and checked per the Engine Operation Manual.

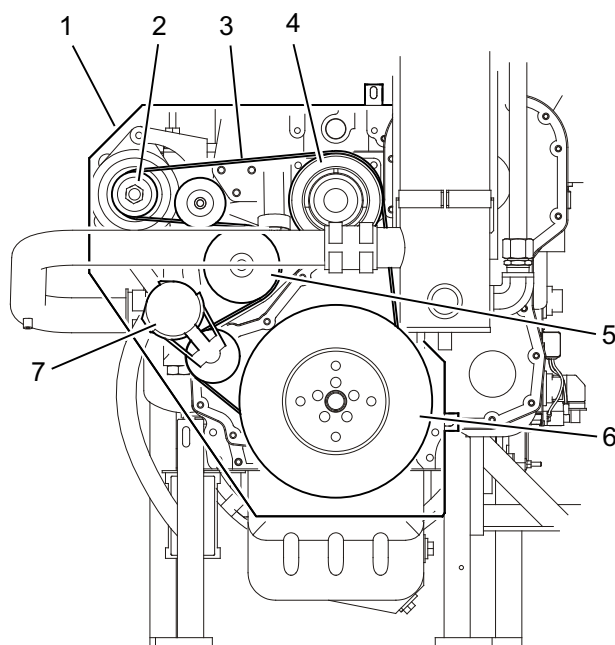

CFP-054

1. Belt Guard
2. Alternator Pulley
3. Drive Belt
4. Idler Pulley
5. Coolant Pump Pulley
6. Balancer Pulley
7. Belt Tensioner

Figure 6-7 Coolant Pump/Alternator Belt (typical)

3. The deflection method can also be used to measure drive belt tension.
 - a. Measure the belt tension in the center span of the belt between the alternator and idler pulleys.
 - b. If belt deflection is more than one belt thickness per foot of pulley center-to-center distance, adjust the belt tension.

6.4.11 Heat Exchanger Pressure Test

This test is required if internal leakage in the heat exchanger is suspected. It may be performed prior to removal from the engine.

NOTE: Use Teflon™ tape or other pipe sealant when installing the test setup in order to prevent leaks.

NOTE: The size of fittings required on the water outlets and inlets are listed on the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

1. Install an adapter at the cooling water outlet of the heat exchanger.
2. Install a pressure test setup with 689 kPa (100 psi) pressure gauge at the cooling water inlet to the heat exchanger.
3. Apply air pressure at 414 kPa (60 psi).
 - a. Isolate the pressure source and monitor the pressure gauge for 5 minutes.
 - b. There should be no change in pressure for the duration of the test.
4. After testing, release the pressure. Remove the tubing adapters, plug, and test equipment.
5. If leakage is detected, the heat exchanger must be replaced.

6.4.12 Turbocharger Inspection

1. Visually inspect the filter and piping for dirt buildup, blockage, wear points, soft hoses, loose clamps, or punctures. Refer to [Figure 6-4](#).
2. Replace damaged filters, pipes, or hoses, and tighten loose clamps, as necessary, to prevent the air system from leaking.

3. Check that the filter service indicator has not indicated a filter blockage. Clean or replace blocked filters.
4. Check for corrosion under the clamps and hoses of the intake system piping. Corrosion can allow foreign particles and dirt to enter the intake system.
5. Disassemble and clean, as required.
6. Remove the air intake and exhaust piping from the turbocharger.
7. Inspect the turbocharger turbine wheel for cracks in the housing or turbine blades, missing blades, mechanical binding, eccentric motion, or excessive end-play.
8. Replace the turbocharger if damage, excessive end-play, binding, wear, or eccentric motion is found. Contact a Cummins Authorized Repair Location for replacement.

IMPORTANT: *The turbocharger must be removed for replacement or rebuild if the clearance is beyond the limits, the housing is cracked, or the turbine wheel is damaged.*

9. Reinstall the air intake filter and exhaust piping. Tighten the clamps. Torque loosened clamps to the recommended torque value. Refer to the [Torque Table](#) in Section 8.

6.5 Every 2 Years or 2000 Hours

All checks or inspections listed under daily or previous maintenance intervals must also be performed at this time, in addition to those listed under this maintenance interval.

6.5.1 Coolant Pump Inspection

1. Inspect the coolant pump for eccentric motion, mechanical binding, excessive end play, seal damage, and grease or coolant leakage around the pump shaft.

2. Replace with a new or rebuilt pre-lubricated unit as necessary. Contact a Cummins Authorized Repair Location for replacement.

6.5.2 Drain and Flush Cooling System


The cooling system must be clean to work properly. If the system shows excessive mineral buildup, particulate matter, scale, oxidation, or oil contamination, drain and flush the cooling system. If the coolant is excessively dirty or is mixed with oil, contact a Cummins Authorized Repair Facility.



WARNING

Do not remove the pressure/fill cap from a hot engine. Shut down the engine and wait until the coolant temperature is below 50° C (120° F) before removing the pressure cap. Heated coolant spray or steam can cause severe personal injury.

1. Press down, unscrew, and remove the coolant expansion tank pressure/fill cap. The cap must be removed to allow air to vent the cooling system during the draining process.
2. Disconnect the engine coolant heater power supply before draining the cooling system. Refer to [Figure 6-8](#).
3. Place a container that will hold at least 57 liters (15 gal) of liquid under the coolant drain valve.
4. Ensure that the coolant filter shut-off valves are OPEN.
5. Open the drain petcock on the lower coolant tube, allowing the coolant to drain into the waste container.
6. When the system is empty, move the container under the engine coolant heater.
7. Disconnect either end of the engine heater coolant hose and drain the engine heater.

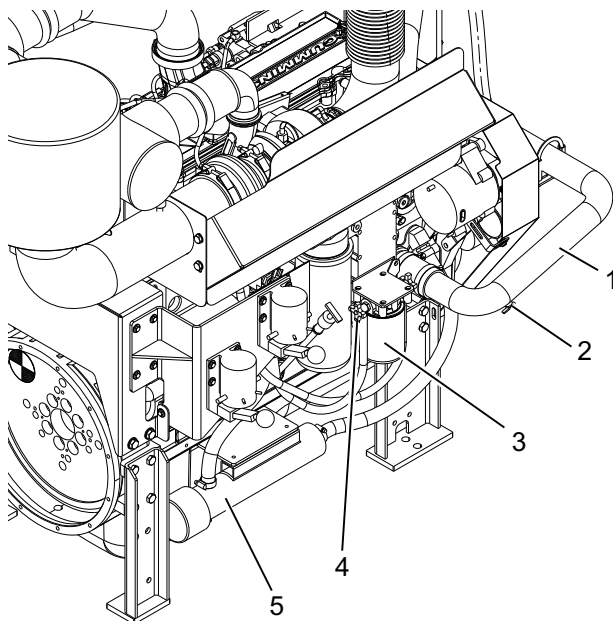

CFP-060

1. Lower Coolant Tube
2. Coolant Drain Petcock
3. Coolant Filter
4. Coolant Filter Shut-off Valve
5. Engine Coolant Heater

Figure 6-8 Engine Coolant Drain

! CAUTION

Coolant is toxic. Avoid prolonged and repeated skin contact with used antifreeze - wash thoroughly after contact. Prolonged, repeated contact can cause skin disorders. Dispose of waste antifreeze in accordance with local environmental regulations.

NOTE: During filling, air must be vented from the engine coolant passages. The air vents through the coolant filler port. The fill rate can be found in the model specific Engine Data Sheets in [Section 8 - Component Parts and Assemblies](#).

8. Flush with clean fresh water or heavy-duty heat exchanger cleaner. Follow the manufacturer's directions on the product container.

NOTE: Some cooling system cleaners or commercial solvents require a soapy water rinse after use. Follow the directions on the cleaning solution or solvent.

! CAUTION

Over-concentration of antifreeze or use of high-silicate antifreeze can damage the engine. Do not use more than 50% antifreeze in the mixture unless additional freeze protection is required. Antifreeze at 68% concentration provides the maximum freeze protection, and must never be exceeded under any condition. Antifreeze protection decreases above 68%.

9. When the flushing water has fully drained, use a filter wrench to remove the water coolant filter from the filter housing.
 - a. Clean the filter housing gasket mount of dirt buildup, oxidation, or particulate matter with a clean cloth.
 - b. Coat the replacement filter gasket with a light coating of 15W-40 lubrication oil.
10. Center the filter ring on the threaded mounting nipple. Screw the filter canister onto the mounting flange until the gasket is snug against the mounting flange, then tighten an additional 1/4 turn. If using a soapy water solution, flush again with clear water. Allow time for the water to fully drain.

! CAUTION

Mechanical over-tightening can distort the threads or damage the filter element seal.

NOTE: Recommendations on filter replacements and fill rates can be found on the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

11. Reconnect the engine heater coolant hose and close the drain petcock on the lower coolant tube.

NOTE: During filling, air must be vented from the engine coolant passages. The air vents through the coolant filler port. The fill rate can be found in the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

12. Fill the coolant tanks with the proper antifreeze. Use a mixture of 50% water and 50% ethylene-glycol base or propylene-glycol antifreeze (or

pre-mixed solution) to protect the engine to -37° C (-34° F) year-around.

CAUTION

Use soft or distilled water in the coolant mixture. Contaminants in hard water neutralize the corrosion inhibitor components. Water must not exceed 300-ppm hardness or contain more than 100 ppm of either chloride or sulfate.

CAUTION

Never use a sealing additive to stop leaks in the cooling system. This can result in cooling system blockage or restricted coolant flow, causing the engine to overheat.

NOTE: Cummins Inc. recommends using Fleet-guard® ES COMPLEAT™ Ethylene-Glycol (EG) or Fleetguard® Propylene-Glycol (PG) Plus™ Anti-freeze/Coolants. Both products are available in concentrated or pre-mixed formulations. Use a 50% concentration level (40% to 60% range) of ethylene-glycol or propylene-glycol and SCA (Supplemental Coolant Additive) required for wet sleeved engines in most climates in most climates. Contact your local Cummins Authorized Repair Location for additional information.

Ethylene-Glycol

40% = -23° C (-10° F)

50% = -37° C (-34° F)

60% = -54° C (-65° F)

68% = -71° C (-96° F)

Propylene-Glycol

40% = -21° C (-6° F)

50% = -33° C (-27° F)

60% = -54° C (-65° F)

68% = -63° C (-82° F)

CAUTION

The system must be filled properly to prevent air locks. During filling, air must be vented from the engine coolant passages.

13. Check the condition of the pressure/fill cap.

- If the pressure/fill cap seal is worn, damaged, missing, or the pressure spring is damaged or shows signs of sticking, replace the filler cap.
- Install the expansion tank fill cap.

14. Operate the engine until it reaches a temperature of 82° C (180° F), and check for coolant leaks.

15. Ensure that the coolant level is just below the fill neck.

6.6 Every 4 Years or 5000 Hours

All maintenance checks and inspections listed in previous maintenance intervals must also be performed at this time.

Cummins recommends performing maintenance on valve lash settings.

CAUTION

Disconnect both batteries (negative cable first) before performing service on the fire pump engine or on any of its controls. Wear safety glasses when disconnecting batteries!

CAUTION

Valve lash maintenance should be performed by a skilled technician. Improper maintenance can damage the engine or cause severe personal injury. Contact your local Cummins Authorized Repair Location before performing any extensive maintenance.

6.6.1 Coolant Thermostat Removal/Installation

The thermostat regulates the temperature of the engine coolant circulating through the engine cooling system. Refer to the Engine Manual for complete instructions.

CAUTION

Always use the correct thermostat, and never operate the engine without a thermostat installed. The engine can overheat if operated without a thermostat because the path of least resistance for the coolant is through the bypass to the pump inlet.

- Remove the upper coolant hose clamps and upper coolant hose at the thermostat housing.
- Remove the (2) thermostat housing flange cap screws and the thermostat flange. Refer to [Figure 6-9](#).


3. Remove the thermostat and gasket from the housing.
4. Clean the housing flange faces of dirt buildup, oxidation, and sludge.
5. Install the thermostat in the housing.

NOTE: Recommendations on thermostat replacement components can be found on the model specific Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

6. Install a new thermostat seal on the thermostat housing flange surface.
7. Replace the thermostat flange and cap screws.

6.6.2 Coolant Pump/Alternator Belt Replacement

Replace the coolant pump/alternator belt if it is cracked, frayed, or has pieces of material missing.

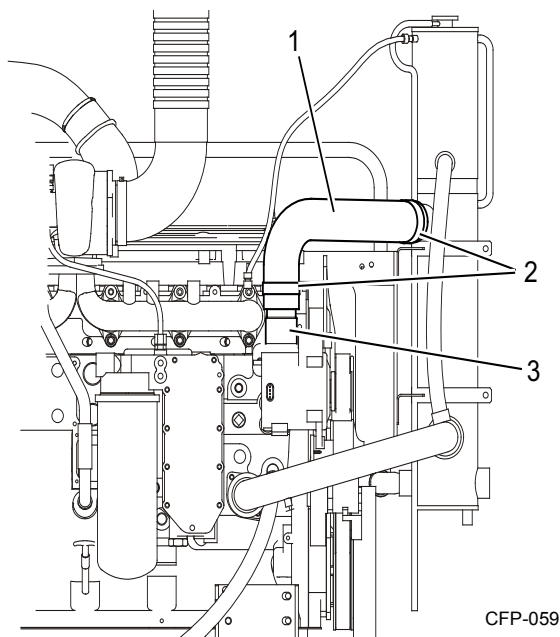

1. Upper Coolant Hose
2. Hose Clamp
3. Thermostat Housing

Figure 6-9 Thermostat Housing

1. Remove the belt guard. Refer to [Figure 6-7](#).
2. Use a 3/8" drive ratchet or breaker bar to rotate the tensioner arm away from the belt and remove the belt.
3. Check the belt tensioner cap screw torque. For recommended torque values, refer to the [Torque Table](#) in Section 8.

4. Check the tensioner arm, pulley, and stops for cracks. If any cracks are noticed, the tensioner must be replaced.
5. Verify that the tensioner arm stop is not in contact with the spring casing stop. If either stop is touching, the tensioner must be replaced.
6. Inspect the tensioner for evidence of the tensioner arm contacting the tensioner cap.

If there is evidence of the two areas making contact, the pivot tube bushing has failed and the tensioner must be replaced.

7. Check the tensioner bearing.
 - a. Rotate the belt tensioner pulley. The pulley should spin freely with no mechanical binding, eccentric motion, or excessive end-play.
 - b. If the arm rotates with mechanical binding, eccentric movement, or excessive end play, replace the tensioner.
8. Inspect the clearance between the tensioner spring case and the tensioner arm for uneven bearing wear.

If the clearance exceeds 3 mm (0.12 in) at any point, the tensioner must be replaced as a complete assembly. Contact a Cummins Authorized Repair Location for replacement.

NOTE: Experience has shown that tensioners generally will show a larger clearance gap near the lower portion of the spring case, resulting in the upper portion rubbing against the tensioner arm. Always replace the belt when a tensioner is replaced.

9. After checking the torque, use a 3/8" drive ratchet or breaker bar to rotate the tensioner slowly away from the area of belt contact.
10. Install the replacement drive belt.



CAUTION

To prevent pulley or belt damage, do not roll a belt over the pulley or pry it on with a tool. Move the tensioner arm away from the belt area before installing the drive belt.

11. Check the location of the drive belt on the belt tensioner pulley. The belt should be centered on, or centered close to, the middle of the pulley.
12. Reinstall the belt guard.

CAUTION

Unaligned belts, either too far forward or backward, can cause belt wear, belt roll-off failures or increase uneven tensioner bushing wear.

6.6.3 Charge Air Cooler (CAC) Heat Exchanger

The charge air cooler heat exchanger should be removed and cleaned internally at least once every four years.

1. Press the AUTO/MANUAL switch to select the MANUAL position.
2. Disconnect both batteries at their terminals. Remove the negative (-) cable first. Install the negative (-) cable last.
3. Shut off the manual cooling water and bypass water hand valves on the cooling loop water supply.
4. Open the coolant filter shut-off valve.
5. Drain the coolant system per the instructions in Section [6.5.2 Drain and Flush Cooling System](#).
6. When the tanks are empty, disconnect the inlet and outlet piping from the charge air cooler tubing to the heat exchanger. Refer to [Figure 2-1](#) and [Figure 2-2](#).
7. Disconnect the cooling water inlet and outlet fittings from the charge air heat exchanger and the coolant heat exchanger.
8. Remove the heat exchanger mounting bracket bolts from the mounting bracket and set aside for later reuse.
9. Provide support for the heat exchanger in order to avoid dropping it. Remove the charge air heat exchanger from the mounting plates.

WARNING

Cleaning chemicals may be caustic and cause skin irritation. Follow the instructions on cleaning containers. Wear protective clothing, eye wear, and rubber gloves when working with cleaning solutions. Dispose of solvents and cleaning solutions properly.

CAUTION

Do not use caustic cleaners to clean the charge air cooler. Damage to the charge air cooler will result. Follow the directions provided by the cleaning solution manufacturer.

10. Flush the charge air cooler internally with cleaning solution in the opposite direction of normal air flow.
11. Shake the charge air cooler and lightly tap on the tank ends with a rubber mallet to dislodge trapped debris. Continue flushing until all debris or oil is removed.

CAUTION

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

12. After the charge air cooler has been thoroughly cleaned of all oil and debris with solvent, wash the charge air cooler internally with hot, soapy water to remove the remaining solvent.
13. Rinse thoroughly with clean water.
14. Blow compressed air into the charge air cooler in the opposite direction of normal air flow until the charge air cooler is dry internally.
15. Depending on the condition of the heat exchanger:
 - a. Perform the pressure test outlined in Section [6.4.11 Heat Exchanger Pressure Test](#).
 - b. Reassemble the CAC heat exchangers, coolant tubing, and cooling loop lines per the instructions outlined in Section [6.5.2 Drain and Flush Cooling System](#).
16. Provide support for the coolant heat exchanger in order to avoid dropping it.
17. When the charge air heat exchanger hose clamps and cooling water lines are secure, tighten the mounting bracket bolts.
18. Open the cooling loop cooling water supply manual valves and check for leaks.
19. After completing all service work, start the engine and check for air leaks, loose clamps, and blowby.



Section 7 - Troubleshooting

7.1 Troubleshooting

The following information is intended as a guide to troubleshooting some common non-technical equipment problems. Many problems can be resolved using corrective maintenance, adjustment, or minor repair. Refer to the vendor supplied literature, electrical schematics, and mechanical prints for additional information.

For engine related issues, refer to the Operation and Maintenance Manual or contact the Cummins Customer Assistance Center at 1-800-DIESELS (1-800-343-7357).



WARNING

*The status checks should be performed **ONLY** by a qualified technician. Contact with exposed electrical components could cause extreme personal injury or death.*



WARNING

*Before equipment operation, **ALL** guards, covers, and protective devices **MUST BE** in place and securely fastened. Serious personal injury could result from contact with exposed or moving components.*



CAUTION

***AVOID SERVICING** complex components such as: printed circuit boards, programmable controllers, and ECM's not specifically authorized by Cummins Inc. Contact a Cummins Fire Power Customer Service Department toll free at 1-800-343-7357 before performing any extensive maintenance.*



CAUTION

Never climb or stand on the equipment frame, guards, or enclosures. Contact with exposed or moving components can cause personal injury or equipment damage.

Table of Contents

Troubleshooting Chart 7-3

Problem	Page
7.1.1 Alternator Overcharging with the Engine Running	7-3
7.1.2 Neither Battery is Charging with the Engine Running	7-3
7.1.3 Only One Battery is Charging with the Engine Running	7-3
7.1.4 Voltage Indications Differ	7-4
7.1.5 Coolant Contamination	7-4
7.1.6 Excessive Coolant Loss	7-5
7.1.7 Coolant Temperature Above Normal	7-6
7.1.8 Coolant Temperature Below Normal when Engine is not Running	7-7
7.1.9 Cooling Water Drain Steaming	7-7
7.1.10 Cooling Water Solenoid Valve Fails to Operate (Applicable to Horizontal Pump Installations) ..	7-8
7.1.11 Auto Start Failure - Does not Crank on Battery A or B	7-8
7.1.12 Auto Start Failure - Cranks but does not Start	7-9
7.1.13 Auto Start Failure - Engine Starts but Continues to Crank	7-9
7.1.14 Manual Start Failure from Contactor Lever - Does not Crank on A or B	7-9
7.1.15 Manual Start Failure from Control Panel - Does not Crank on A or B	7-10
7.1.16 Engine Cranks Normally but will not Start (No Exhaust Smoke)	7-10
7.1.17 Engine Cranks Slowly but does not Start	7-11
7.1.18 Engine Stops During Operation	7-12
7.1.19 Engine will not Reach Rated Speed (RPM)	7-13
7.1.20 Engine will not Shut Off Remotely	7-13
7.1.21 Engine will not Shut Off Locally	7-14
7.1.22 Fuel Consumption is Excessive	7-14
7.1.23 Fuel or Engine Oil Leaking From Exhaust Manifold	7-15
7.1.24 Engine Oil is Contaminated	7-15
7.1.25 Engine Oil Consumption is Excessive	7-15
7.1.26 Lubrication Oil in the Coolant	7-16

CFP9E Fault Code Chart..... 7-17

Troubleshooting Chart

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.1 Alternator Overcharging with the Engine Running NOTE: <i>If the batteries are overcharged while the engine is not running, troubleshoot the customer supplied battery charging system.</i>	Batteries have failed.	Replace the alternator and batteries. Test the battery charger electrically. Replace the battery charger as necessary.
7.1.2 Neither Battery is Charging with the Engine Running NOTE: <i>If one or both batteries do not charge with the engine stopped, troubleshoot the customer supplied battery charging system.</i>	Battery cables or connections are loose, broken, or corroded (excessive resistance). Alternator not functioning. Battery isolator input has faulted. Alternator internal voltage regulator is malfunctioning.	Check the battery cables and connections. Ensure that all connections are free of corrosion and that no cables are broken. Replace the alternator. Contact a Cummins Authorized Repair Facility. Test continuity from the alternator to the battery isolator input. Repair any open circuit. Test continuity through the battery isolator. If an internal open circuit exists, replace battery isolator. Test the alternator electrically. If required, replace the alternator. Contact a Cummins Authorized Repair Facility.
7.1.3 Only One Battery is Charging with the Engine Running NOTE: <i>If one or both batteries do not charge with the engine stopped, troubleshoot the customer supplied battery charging system.</i>	Battery has failed. Battery cables or connections are loose, broken, or corroded (excessive resistance). Battery isolator has failed.	Check battery charge. Check the battery cables and connections. Ensure connections are clean and that no cables are broken. Replace the battery isolator as necessary.

Troubleshooting Chart (Continued)

[illegible]

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.5 Coolant Contamination (continued)		<p>Check and replace the zinc plug, if required.</p> <p>Refill with correct mixture of anti-freeze and water per the instructions in Section 6 - Maintenance.</p>
7.1.6 Excessive Coolant Loss	<p>Adequate coolant was not added following previous maintenance activities.</p> <p>Coolant leak is present.</p> <p>Cooling system hose is leaking.</p> <p>Pressure cap is malfunctioning or has low-pressure rating.</p> <p>Manifold coolant leak.</p>	<p>Check the coolant level. Add coolant as required and check engine operation. If coolant loss persists, check for other problems.</p> <p>Inspect the engine for coolant leaking from drain cocks or vents. Close the leaking drain or vent. Add coolant as required and check engine operation.</p> <p>Check the condition of the hoses. Replace and/or tighten loose hose clamps. Replace any damaged hoses as necessary. Add coolant as required and check engine operation.</p> <p>Check that the pressure cap does not relieve coolant under normal operating conditions. Replace a leaking pressure cap. Add coolant as required and check engine operation.</p> <p>Inspect the engine for coolant leaking from the manifold, expansion and pipe plugs, fittings, engine oil cooler, water pump seal, cylinder block, and other components that have coolant flow. Repair leaking components. Add coolant as required and check engine operation.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.7 Coolant Temperature Above Normal NOTE: <i>The thermostat's normal operating temperature range is 82°-95° C (180°-203° F). The high water temperature lamp on the engine digital control panel only illuminates if the engine is running. If the lamp is illuminated or if temperature is otherwise excessive, the engine should be stopped as soon as practical and the problem corrected.</i>	<p>Incorrect cooling water flow.</p> <p>Cooling water pressure regulator is improperly adjusted.</p> <p>NOTE: <i>Pressure should not exceed 414 kPa (60 psi).</i></p> <p>Cooling water solenoid has failed. (Applicable to Horizontal Pump installations only)</p> <p>Coolant level is low.</p> <p>Cooling system hose is collapsed, restricted, or leaking.</p> <p>Coolant thermostat is malfunctioning.</p> <p>Coolant pump is malfunctioning.</p> <p>Contaminated coolant.</p> <p>Engine oil is contaminated with coolant or fuel.</p> <p>Coolant mixture of antifreeze and water is not correct.</p> <p>Coolant temperature switch is malfunctioning.</p>	<p>Measure cooling water flow and adjust per Engine Data Sheet values in Section 8 - Component Parts and Assemblies.</p> <p>Check the cooling water piping for blockage. Clean the piping if necessary.</p> <p>Check the cooling water pressure gauge. If pressure is inadequate, adjust the regulator.</p> <p>Replace the solenoid.</p> <p>Refill to proper level.</p> <p>Inspect the hoses. Replace any damaged hoses as necessary.</p> <p>Remove and replace the defective thermostat.</p> <p>Contact a Cummins Authorized Repair Facility.</p> <p>Refer to Coolant Contamination in this section. Contact a Cummins Authorized Repair Facility.</p> <p>Check the appearance of the engine oil. If the color and texture is abnormal, refer to Engine Oil is Contaminated in this section.</p> <p>Verify the concentration of anti-freeze in the coolant. Correct the concentration as necessary.</p> <p>Repair or replace the switch.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.8 Coolant Temperature Below Normal when Engine is not Running	<p>The standard 120 VAC or optional 240 VAC power supply to the coolant heater is not connected.</p> <p>The heater's overload thermostat has operated.</p> <p>Coolant temperature switch is malfunctioning.</p> <p>Coolant is not free to circulate through the heater.</p> <p>The coolant heater has failed.</p> <p>Coolant thermostat has failed.</p>	<p>Connect the power supply. Correct any electrical faults in the supply circuit.</p> <p>Ensure that there is coolant in the heater. Allow time for the automatic overload reset to occur.</p> <p>Ensure good wiring contact is maintained during operation. Replace the temperature switch as necessary.</p> <p>Ensure that the coolant hoses are clear. Repair or replace hoses as necessary.</p> <p>Replace the coolant heater.</p> <p>Test operation of the thermostat. Replace the thermostat per instructions in Section 6 - Maintenance as necessary.</p>
7.1.9 Cooling Water Drain Steaming NOTE: <i>The cooling water drain from the coolant heat exchanger may steam if cooling water flow is inadequate when the engine is running. It may also steam shortly after the engine is stopped. If coolant is leaking into the cooling water drain piping, the steaming may last for some time while the engine cools. Antifreeze may also be observed in the cooling water drain.</i>	<p>Cooling water flow did not start when the engine started.</p> <p>Engine coolant is leaking into the cooling water piping in the coolant heat exchanger.</p> <p>Cooling water flow not adequate.</p>	<p>Check engine coolant temperature. Refer to Coolant Temperature Above Normal in this section.</p> <p>Remove the coolant heat exchanger and perform a pressure test. Refer to Section 6 - Maintenance. If pressure is not maintained, replace the heat exchanger.</p> <p>Compare actual flow rate against required flow rate - adjust regulators to required flow.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
<p>7.1.10 Cooling Water Solenoid Valve Fails to Operate (Applicable to Horizontal Pump Installations)</p> <p>NOTE: <i>The cooling water solenoid may fail to open or to close. The normally closed valve may fail to open when the engine starts. This fault will prevent cooling water flow through the normal valves. Bypass flow should be aligned in this event. The valve may also fail to close because of mechanical blockage. In this event, the cooling water flow from the heat exchanger does not stop when it should. Depending upon the fire protection system piping, the open solenoid valve may drain all water from the fire protection system piping that is higher than the engine's piping.</i></p>	<p>Solenoid valve fails to operate.</p> <p>NOTE: <i>Apply 12 VDC to standard operating systems or 24 VDC to optional operating systems.</i></p>	<p>Clean the cooling water strainer more frequently. Increase the frequency of operational testing.</p> <p>Check electrical continuity and insulation from ground to the solenoid. Repair any open or short circuits in the wiring.</p> <p>Apply temporary voltage to the solenoid. If the solenoid fails to operate, replace the solenoid valve. Contact a Cummins Authorized Repair Facility.</p>
<p>7.1.11 Auto Start Failure - Does not Crank on Battery A or B</p>	<p>The electrical connection from the fire protection system controller to the terminal board has failed.</p> <p>The electrical connection from the terminal board to the solenoid has failed.</p> <p>The fire protection system controller fails to produce either redundant start signal to the fire pump.</p>	<p>Test continuity and insulation from the ground between the fire protection system controller and the engine digital control panel. Locate and repair any electrical fault in the field wiring or in the fire protection system controller.</p> <p>Test continuity and insulation from the ground between the terminal board and the solenoid. Locate and repair any electrical fault.</p> <p>Locate and correct the common mode fault in the fire protection system controller.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.12 Auto Start Failure - Cranks but does not Start NOTE: <i>The fire pump engine will crank automatically when either contactor A or contactor B is selected at the fire protection system controller. However, the engine does not start. The engine will start locally. If local starting problems are identified, go to the applicable Manual Start Failure troubleshooting table.</i>	<p>The overspeed control module has activated. The overspeed lamp is illuminated on the engine digital control panel.</p> <p>Crank termination signal from the Engine Digital Control Panel (EDCP) is not received by the fire protection system controller.</p> <p>The AUTO/MAN mode switch fails to select AUTO mode.</p> <p>The overspeed control module has failed.</p> <p>NOTE: <i>Check system basics</i></p> <ul style="list-style-type: none"> - Battery voltage level - Fuel supply - Crank speed <p><i>Reference base engine T/R manual.</i></p>	<p>Press the RESET switch on the engine digital control panel.</p> <p>Verify the signal from the fire protection system controller or the field wiring to the engine digital control panel is adequate.</p> <p>Replace the EDCP as necessary.</p> <p>Replace the engine digital control panel or repair other electrical faults as necessary.</p> <p>Check power and grounding to the overspeed control module. Repair any electrical faults.</p> <p>Test the overspeed setting. 4.1.6 Overspeed RESET/STOP Switch in Section 4. Replace module as necessary.</p>
7.1.13 Auto Start Failure - Engine Starts but Continues to Crank	<p>The crank termination signal has failed.</p> <p>The tachometer indicates zero RPM.</p>	<p>With the engine running, verify tachometer is reading speed.</p> <p>Replace the EDCP as necessary.</p> <p>Contact a Cummins Authorized Repair Facility.</p>
7.1.14 Manual Start Failure from Contactor Lever - Does not Crank on A or B NOTE: <i>The fire pump engine will not crank locally when either contactor lever is actuated.</i>	<p>Crank battery A or B contactor fails to make contact.</p> <p>Both batteries dead or not connected.</p> <p>Starter motor has failed.</p> <p>An electrical fault exists in the power or ground circuit for the starter motor.</p> <p>Engine is seized.</p>	<p>Replace the faulty contactor as necessary.</p> <p>Check wiring connections. Charge or replace the batteries.</p> <p>Replace the starter motor.</p> <p>Test continuity and insulation from ground between the battery splice, the ground connection, and the starter motor. Locate and repair any electrical fault.</p> <p>Contact a Cummins Authorized Repair Facility.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.15 Manual Start Failure from Control Panel - Does not Crank on A or B NOTE: <i>The fire pump engine will not crank locally from the engine digital control panel when either CRANK BATT A or CRANK BATT B is selected, however, it does start when a contactor lever is actuated.</i>	<p>The AUTO/MANUAL mode switch contact fails to close.</p> <p>An electrical fault exists in the signal power circuit or the ground to the solenoids.</p> <p>Overspeed switch crank circuit fails to reset with engine shut-down.</p>	<p>Test the electrical operation of the AUTO/MANUAL mode switch. Replace the engine digital control panel.</p> <p>Test continuity and insulation from the ground between the AUTO/MANUAL switch and the solenoids. Check the solenoid connection to the ground. Locate and repair any electrical fault.</p> <p>Test the crank setting as necessary. Refer to 4.1.6 Overspeed RESET/STOP Switch in Section 4. Replace the overspeed switch as necessary.</p>
7.1.16 Engine Cranks Normally but will not Start (No Exhaust Smoke)	<p>Electronic fault codes are active.</p> <p>Electronic Control Module (ECM) is locked up.</p> <p>Battery voltage supply to the ECM is low, interrupted, or open.</p> <p>No fuel in supply tank.</p> <p>Air is in the fuel system.</p> <p>Fuel drain line is restricted.</p> <p>Fuel filter is clogged.</p> <p>Fuel grade is not correct for the application or fuel quality is poor.</p>	<p>Refer to the model specific Fault Code Chart in this section or contact a Cummins Authorized Repair Facility for assistance.</p> <p>Disconnect the battery cables for 30 seconds. Then reconnect the battery cables and start the engine.</p> <p>Check the battery connections, fuses, and battery supply circuit.</p> <p>Check and replenish the fuel supply. Check the fittings, hose connections, and hose conditions.</p> <p>Check for air in the fuel system. Tighten or replace the fuel connections, fuel lines, fuel tank stand pipe, and fuel filters as necessary. Vent air from the system.</p> <p>Check the fuel drain lines for restriction. Clear or replace the fuel lines, check valves, or tank vents as necessary.</p> <p>Replace the fuel filter. Refer to 6.4.6 Change Fuel Filters in Section 6.</p> <p>Operate the engine from a separate tank of high-quality no. 2 diesel fuel.</p>

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.16 Engine Cranks Normally but will not Start (No Exhaust Smoke) (continued)	Fuel injection pump or fuel lift pump is malfunctioning. Pump timing incorrect.	Contact a Cummins Authorized Repair Facility.
	Fuel pump overflow valve is malfunctioning.	Check the overflow valve. Replace if necessary.
	Fuel suction line is restricted.	Check the fuel suction line for restriction.
	Fuel connections on the fuel pump are loose.	Tighten all the fuel fittings and connections between the fuel tanks and fuel lift pump.
	Fuel suction stand pipe in the fuel tank is broken.	Check and repair the stand pipe, if necessary.
	Fuel supply is not adequate.	Locate and correct the restriction in the customer supplied fuel lines to the engine.
	Fuel tank air breather is blocked.	Clean the fuel tank breather.
	Injection pump drive shaft or drive shaft key is damaged.	Repair or replace the injection pump or contact a Cummins Authorized Repair Facility.
	Fuel injectors are plugged.	Replace the fuel injectors.
	Moisture is in the wiring harness connectors.	Dry the connectors with Cummins electronic cleaner, Part Number 3824510.
7.1.17 Engine Cranks Slowly but does not Start NOTE: Typical engine cranking speed is 120 RPM. Engine cranking speed can be checked with a hand-held tachometer, stroboscope, or electronic service tool.	The battery cable connections are loose, broken, or corroded, creating excessive resistance.	Check the battery cables and connections. Ensure that connections are clean and tight.
	The battery is not properly charged or has failed.	Recharge the battery. If the battery does not take the charge, replace it.
	Engine oil level is too high.	Check the oil level per instructions in Section 6 - Maintenance . Drain any excess oil.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.17 Engine Cranks Slowly but does not Start (continued)	Engine oil is the wrong grade or type.	Check the grade and type of oil. Refer to 6.3.4 Engine Oil System in Section 6 - Maintenance. If the wrong type or grade of oil is present, drain and replace it. Refer to 6.4.5 Engine Oil and Oil Filter Change in Section 6 - Maintenance.
	Starter motor is malfunctioning.	Replace the starter motor. Contact a Cummins Authorized Repair Facility.
7.1.18 Engine Stops During Operation	Normal automatic mode shut-down occurs when the fire protection system controller removes the signal power feed to the engine digital control panel.	No action required. This is a desirable outcome.
	The selected Electronic Control Module (ECM) has detected a serious fault condition. The ECM's STOP light is displayed.	For instructions on how to read active fault codes, Refer to the model specific Fault Code Chart in this section or contact a Cummins Authorized Repair Facility for assistance.
	In the automatic mode, the signal power feed is lost from the fire protection system controller to the engine digital control panel.	Locate and correct the electrical fault in the fire protection system controller or the field wiring to the engine digital control panel.
	An overspeed trip has occurred. The overspeed trip lamp is illuminated on the engine digital control panel.	Remote indications may also be present. Overspeed switch failure has occurred. The trip indications may not be present.
	Power supply or grounding fault exists at the ECM.	Locate and correct the electrical fault in the power supply or grounding for the ECM.
	The selected ECM has failed.	Select the alternate ECM. Replace the failed ECM. Contact a Cummins Authorized Repair Facility.
	Fuel tank level is low.	Fill the fuel tank. Fill and bleed the fuel lines to the engine.
	Clogged fuel tank air breather hose.	Clean the fuel tank breather.
	Fuel piping to engine or fuel filter is clogged.	Clean and repair engine fuel piping. Replace the fuel filter.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.18 Engine Stops During Operation (continued)	Air is trapped in the low pressure fuel lines at the engine. Electronic fault codes are active.	Bleed the fuel lines. Refer to the model specific Fault Code Chart in this section or contact a Cummins Authorized Repair Facility for assistance.
7.1.19 Engine will not Reach Rated Speed (RPM)	Tachometer is not reading correctly or is erratic. Compare the tachometer reading with a hand held tachometer or an electronic service tool reading. Fuel filter requires replacement. Fuel grade not correct for the application, or fuel quality is poor. Fuel suction line is restricted. Charge air cooler restricted. Fuel supply is not adequate. Stop circuit malfunction in the fire pump controller or field wiring.	Replace the engine digital control panel or contact a Cummins Authorized Repair Facility for assistance. Refer to 6.4.6 Change Fuel Filters per the instructions in Section 6 - Maintenance . Operate the engine with a good quality no. 2 diesel fuel. Check the fuel suction line for restriction. Inspect the air cooler for internal and external restrictions. Replace the restricted cooler if necessary. Locate and correct the restriction in the fuel lines to the engine. In AUTO mode operation, the fire pump engine stops upon loss of signal power from the fire pump controller. Check the stop circuit in the fire pump controller.
7.1.20 Engine will not Shut Off Remotely	Stop circuit malfunction in the fire pump controller or field wiring. Electronic fault codes are active.	Check for short to voltage on the signal wiring from the fire pump controller to the engine digital control panel. Correct any faults. Check operation of the AUTO/ MANUAL switch at the engine digital control panel. Replace the engine digital control panel if necessary. Refer to the model specific Fault Code Chart in this section or contact a Cummins Authorized Repair Facility for assistance.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.20 Engine will not Shut Off Remotely (continued)	Engine running on fumes drawn into the air intake.	Identify and isolate the source of the combustible fumes. Contact a Cummins Authorized Repair Facility.
7.1.21 Engine will not Shut Off Locally	Power source has not been removed by the fire pump controller. Electronic fault codes are active. Engine running on fumes drawn into the air intake.	Depress and hold the stop button on left side of the engine digital control panel until the engine is stopped. Check for inadvertent voltage on the wiring to terminal board at the engine control panel. Refer to the model specific Fault Code Chart in this section or contact a Cummins Authorized Repair Facility for assistance. Identify and isolate the source of the combustible fumes.
7.1.22 Fuel Consumption is Excessive	Fuel is leaking. Poor-quality fuel is being used. Defective or clogged injection nozzle. Injection pump is adjusted incorrectly, causing excessive injection. Air intake or exhaust leaks. Air intake system restriction is above specification.	Check the fuel lines, fuel connections, and fuel filters for leaks. Check the fuel lines to the supply tanks. Repair any leaks. Assure good-quality no. 2 diesel fuel is being used. Replace the defective or clogged injection nozzle. Adjust or replace the injection pump. Check for loose or damaged piping connections and missing pipe plugs. Check the turbo-charger and exhaust manifold mounting. Repair any leaks. Check the air intake system for restriction. Refer to 6.3.2 Air Cleaner Filter and Piping in Section 6. Replace the air filter as necessary.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.23 Fuel or Engine Oil Leaking From Exhaust Manifold	Intake air restriction is high.	Check the air intake system for restriction. Refer to 6.3.2 Air Cleaner Filter and Piping in Section 6. Replace the air filter if required.
	Turbocharger drain line is restricted.	Remove the turbocharger drain line and check for restriction. If required, clean or replace the drain line.
	Turbocharger oil seal is leaking.	Check the turbocharger for oil seal leaks.
7.1.24 Engine Oil is Contaminated	Oil supply is contaminated.	Check the oil supply. Replace it as necessary. Drain the oil and replace with non-contaminated oil. Also, replace the oil filter. Refer to 6.4.5 Engine Oil and Oil Filter Change in Section 6.
	Fuel is present in the engine oil.	Contact a Cummins Authorized Repair Facility.
	Coolant is present in the engine oil.	Contact a Cummins Authorized Repair Facility.
	Metal is present in the engine oil.	Contact a Cummins Authorized Repair Facility.
7.1.25 Engine Oil Consumption is Excessive	Verify the oil consumption rate.	Check the amount of oil added versus the operating hours.
	Engine crankcase overfilled.	Remove excess oil and recalibrate dipstick.
	External engine leak is present.	Inspect the engine and its components for seal, gasket, tappet cover, oil cooler, or drain cock leaks. Repair or correct any leaks.
	Crankcase ventilation system is plugged.	Check and clean the crankcase ventilation hose per the instructions in Section 6 - Maintenance .
	Turbocharger oil seal is leaking.	Check the turbocharger compressor and turbine seals. Contact a Cummins Authorized Repair Facility.
	Engine oil cooler is leaking.	Check for engine oil in the coolant. Refer to Lubrication Oil in the Coolant in this section. Contact a Cummins Authorized Repair Facility.

Troubleshooting Chart (Continued)

PROBLEM	POSSIBLE CAUSE	SOLUTION
7.1.25 Engine Oil Consumption is Excessive (continued)	Engine oil does not meet specifications for operating conditions.	Change the oil and filters per the instructions in Section 6 - Maintenance .
	Engine oil drain interval is excessive.	Verify the correct engine oil drain interval. Refer to 6.4.5 Engine Oil and Oil Filter Change in Section 6.
	Piston, cylinder liner, or piston rings are worn or damaged.	Check for air intake system leaks. Contact a Cummins Authorized Repair Facility.
	Piston rings are not seated correctly (after an engine rebuild or piston installation).	Check blowby. If blowby is excessive, check the piston rings for correct seating. Contact a Cummins Authorized Repair Facility.
7.1.26 Lubrication Oil in the Coolant	Coolant is contaminated.	Drain the coolant and replace with non-contaminated coolant. Refer to 6.5.2 Drain and Flush Cooling System in Section 6. Replace the coolant filter.
	Cylinder head gasket is damaged or leaking.	Contact a Cummins Authorized Repair Facility.
	Cylinder block or head is cracked or porous.	Contact a Cummins Authorized Repair Facility.

CFP9E Fault Code Chart

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
111 (Red)	629 12	Controller #1	Engine Control Module Critical Internal Failure - Bad Intelligent Device or Component
115 (Red)	612 2	System Diagnostic Code #2	Engine Speed/Position Sensor Circuit - Lost Both of Two Signals from the Magnetic Pickup Sensor - Data Erratic, Intermittent, or Incorrect
122 (Yellow)	102 3	Boost Pressure	Intake Manifold Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
123 (Yellow)	102 4	Boost Pressure	Intake Manifold Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
124 (Yellow)	102 16	Boost Pressure	Intake Manifold 1 Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
131 (Red)	91 3	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor Circuit - Voltage Above Normal or Shorted to High Source
132 (Red)	91 4	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor Circuit - Voltage Below Normal or Shorted to Low Source
133 (Red)	974 3	Remote Accelerator	Remote Accelerator Pedal or Level Position Sensor Circuit - Voltage Above Normal or Shorted to High Source
134 (Red)	974 4	Remote Accelerator	Remote Accelerator Pedal or Level Position Sensor Circuit - Voltage Below Normal or Shorted to Low Source
135 (Yellow)	100 3	Engine Oil Pressure	Oil Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
141 (Yellow)	100 4	Engine Oil Pressure	Oil Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
143 (Yellow)	100 18	Engine Oil Pressure	Oil Pressure Low - Data Valid but Below Normal Operational Range - Moderately Severe Level
144 (Yellow)	110 3	Engine Coolant Temperature	Coolant Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
145 (Yellow)	110 4	Engine Coolant Temperature	Coolant Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
146 (Yellow)	110 16	Engine Coolant Temperature	Coolant Temperature High - Data Valid but Above Normal Operational Range - Moderately Severe Level
147 (Red)	91 1	Accelerator Pedal Position	Accelerator Pedal or Level Position Sensor Circuit - Abnormal Frequency, Pulse Width, or Period
148 (Red)	91 0	Accelerator Pedal Position	Accelerator Pedal or Level Position Sensor Circuit - Abnormal Frequency, Pulse Width, or Period
151 (Red)	110 0	Engine Coolant Temperature	Coolant Temperature Low - Data Valid but Above Normal Operational Range - Most Severe Level
153 (Yellow)	105 3	Intake Manifold #1 Temperature	Intake Manifold Air Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
154 (Yellow)	105 4	Intake Manifold #1 Temperature	Intake Manifold Air Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
155 (Red)	105 0	Intake Manifold #1 Temperature	Intake Manifold Air Temperature High - Data Valid but Above Normal Operational Range - Most Severe Level
187 (Yellow)	3510 4	5 Volts DC Supply	Sensor Supply Voltage #2 Circuit - Voltage Below Normal or Shorted to Low Source

CFP9E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
195 (Yellow)	111 3	Coolant Level	Coolant Level Sensor Circuit - Voltage Above Normal or Shorted to High Source
196 (Yellow)	111 4	Coolant Level	Coolant Level Sensor Circuit - Voltage Below Normal or Shorted to Low Source
197 (Yellow)	111 18	Coolant Level	Coolant Level - Data Valid but Below Normal Operational Range - Moderately Severe Level
199 (Yellow)	1661 4	Engine Automatic Start Lamp	Engine Automatic Start Lamp Driver Circuit - Voltage Above Normal or Shorted to High Source
211 (None)	1484 31	J1939 Error	Additional Auxiliary Diagnostic Codes Logged - Condition Exists
212 (Yellow)	175 3	Oil Temperature	Engine Oil Temperature Sensor #1 Circuit - Voltage Above Normal or Shorted to High Source
213 (Yellow)	175 4	Oil Temperature	Engine Oil Temperature Sensor #1 Circuit - Voltage Below Normal or Shorted to Low Source
214 (Red)	175 0	Oil Temperature	Engine Oil Temperature - Data Valid but Above Normal Operational Range - Most Severe Level
221 (Yellow)	108 3	Barometric Pressure	Barometric Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
222 (Yellow)	108 4	Barometric Pressure	Barometric Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
227 (Yellow)	3510 3	5 Volts DC Supply	Sensor Supply Voltage #2 Circuit - Voltage Above Normal or Shorted to High Source
231 (Yellow)	109 3	Coolant Pressure	Coolant Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
232 (Yellow)	109 4	Coolant Pressure	Coolant Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
233 (Yellow)	109 18	Coolant Pressure	Coolant Pressure - Data Valid but Below Normal Operational Range - Moderately Severe Level
234 (Red)	190 0	Engine Speed	Engine Speed High - Data Valid but Above Normal Operational Range - Most Severe Level
235 (Red)	111 1	Coolant Level	Coolant Level Low - Data Valid but Below Normal Operational Range - Most Severe Level
237 (Yellow)	644 2	External Speed Input	External Speed Input (Multiple Unit Synchronization) - Data Erratic, Intermittent, or Incorrect
238 (Yellow)	3511 4	System Diagnostic Code #1	Sensor Supply Voltage #3 Circuit - Voltage Below Normal or Shorted to Low Source
239 (Yellow)	3511 3	System Diagnostic Code #2	Sensor Supply Voltage #3 Circuit - Voltage Above Normal or Shorted to High Source
241 (Yellow)	84 2	Wheel-based Vehicle Speed	Vehicle Speed Sensor Circuit - Data Erratic, Intermittent, or Incorrect
242 (Yellow)	84 10	Wheel-based Vehicle Speed	Vehicle Speed Sensor Circuit - Tampering has been Detected - Abnormal Rate of Change
244 (Yellow)	623 4	Red Stop Lamp	Red Stop Lamp Driver Circuit - Voltage Below Normal, or Shorted to Low Source
245 (Yellow)	647 4	Fan Clutch Output Device Driver	Fan Control Circuit - Voltage Below Normal or Shorted to Low Source
249 (Yellow)	171 3	Ambient Air Temperature	Ambient Air Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source

CFP9E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
256 (Yellow)	171 4	Ambient Air Temperature	Ambient Air Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
261 (Yellow)	174 16	Fuel Temperature	Engine Fuel Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
263 (Yellow)	174 3	Fuel Temperature	Engine Fuel Temperature Sensor #1 Circuit - Voltage Above Normal or Shorted to High Source
265 (Yellow)	174 4	Fuel Temperature	Engine Fuel Temperature Sensor #1 Circuit - Voltage Below Normal or Shorted to Low Source
268 (Yellow)	94 2	Fuel Delivery Pressure	Fuel Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
271 (Yellow)	1347 4	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve Circuit - Voltage Below Normal or Shorted to Low Source
272 (Yellow)	1347 3	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve Circuit - Voltage Above Normal or Shorted to High Source
281 (Yellow)	1347 7	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve #1 - Mechanical System Not Responding Properly or Out of Adjustment
284 (Yellow)	1043 4	Internal Sensor Voltage Supply	Engine Speed/Position Sensor (Crankshaft) Supply Voltage Circuit - Voltage Below Normal or Shorted to Low Source
285 (Yellow)	639 9	SAE J1939 Datalink	SAE J1939 Multiplexing PGN Timeout Error - Abnormal Update Rate
286 (Yellow)	639 13	SAE J1939 Datalink	SAE J1939 Multiplexing Configuration Error - Out of Calibration
287 (Red)	91 19	Accelerator Pedal Position	SAE J1939 Multiplexing Accelerator Pedal or Level Sensor System Error - Received Network Data in Error
288 (Red)	974 19	Remote Accelerator	SAE J1939 Multiplexing Remote Accelerator Pedal or Level Data Error - Received Network Data in Error
292 (Red)	441 14	Auxiliary Temperature 1	Auxiliary Temperature Sensor Input #1 - Special Instructions
293 (Yellow)	441 3	OEM Temperature	Auxiliary Temperature Sensor Input #1 Circuit - Voltage Above Normal or Shorted to High Source
294 (Yellow)	441 4	OEM Temperature	Auxiliary Temperature Sensor Input #1 Circuit - Voltage Below Normal or Shorted to Low Source
295 (Yellow)	108 2	Barometric Pressure	Barometric Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
296 (Red)	1388 14	Auxiliary Pressure	Auxiliary Pressure Sensor Input #1 - Special Instructions
297 (Yellow)	1388 3	Auxiliary Pressure	Auxiliary Pressure Sensor Input #2 Circuit - Voltage Above Normal or Shorted to High Source
298 (Yellow)	1388 4	Auxiliary Pressure	Auxiliary Pressure Sensor Input #2 Circuit - Voltage Below Normal or Shorted to Low Source
319 Maint.	251 2	Real Time Clock Power	Real Time Clock Power Interrupt - Data Erratic, Intermittent, or Incorrect
322 (Yellow)	651 5	Injector Cylinder #1	Injector Solenoid Cylinder #1 Circuit - Current Below Normal or Open Circuit
323 (Yellow)	655 5	Injector Cylinder #5	Injector Solenoid Cylinder #5 Circuit - Current Below Normal or Open Circuit
324 (Yellow)	653 5	Injector Cylinder #3	Injector Solenoid Cylinder #3 Circuit - Current Below Normal or Open Circuit

CFP9E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
325 (Yellow)	656 5	Injector Cylinder #6	Injector Solenoid Cylinder #6 Circuit - Current Below Normal or Open Circuit
331 (Yellow)	652 5	Injector Cylinder #2	Injector Solenoid Cylinder #2 Circuit - Current Below Normal or Open Circuit
332 (Yellow)	654 5	Injector Cylinder #4	Injector Solenoid Cylinder #4 Circuit - Current Below Normal or Open Circuit
334 (Yellow)	110 2	Engine Coolant Temperature	Coolant Temperature Sensor Circuit - Data Erratic, Intermittent, or Incorrect
338 (Yellow)	1267 3	Vehicle Accessories Relay Driver	Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Above Normal or Shorted to High Source
339 (Yellow)	1267 4	Vehicle Accessories Relay Driver	Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Below Normal or Shorted to Low Source
341 (Yellow)	630 2	Calibration Memory	Engine Control Module Data Lost - Data Erratic, Intermittent, or Incorrect
342 (Red)	630 13	Calibration Memory	Electronic Calibration Code Incompatibility - Out of Calibration
343 (Yellow)	629 12	Controller #1	Engine Control Module Warning Internal Hardware Failure - Bad Intelligent Device or Component
349 (Yellow)	191 16	Transmission Output Shaft Speed	Transmission Output Shaft Speed - Data Valid but Above Normal Operational Range - Moderately Severe Level
351 (Yellow)	627 12	Controller #1	Injector Power Supply - Bad Intelligent Device or Component
352 (Yellow)	3509 4	5 Volts DC Supply	Sensor Supply Voltage #1 Circuit - Voltage Below Normal or Shorted to Low Source
386 (Yellow)	3509 3	5 Volts DC Supply	Sensor Supply Voltage #1 Circuit - Voltage Above Normal or Shorted to High Source
415 (Red)	100 1	Engine Oil Pressure	Oil Pressure Low - Data Valid but Below Normal Operational Range - Most Severe Level
418 Maint.	97 15	Water in Fuel Indicator	Water in Fuel Indicator High - Data Valid but Above Normal Operational Range - Least Severe Level
422 (Yellow)	111 2	Coolant Level	Coolant Level - Data Erratic, Intermittent, or Incorrect
425 (Yellow)	175 2	Oil Temperature	Engine Oil Temperature - Data Erratic, Intermittent, or Incorrect
428 (Yellow)	97 3	Water in Fuel Indicator	Water in Fuel Sensor Circuit - Voltage Above Normal or Shorted to High Source
429 (Yellow)	97 4	Water in Fuel Indicator	Water in Fuel Sensor Circuit - Voltage Below Normal or Shorted to Low Source
431 (Yellow)	558 2	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Data Erratic, Intermittent, or Incorrect
432 (Red)	558 13	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Out of Calibration
435 (Yellow)	100 2	Engine Oil Pressure	Oil Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
441 (Yellow)	168 18	Electrical Potential (Voltage)	Battery #1 Voltage Low - Data Valid but Below Normal Operational Range - Moderately Severe Level
442 (Yellow)	168 16	Electrical Potential (Voltage)	Battery #1 Voltage High - Data Valid but Above Normal Operational Range - Moderately Severe Level

CFP9E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
449 (Red)	157 0	Injector Metering Rail #1 Pressure	Fuel Pressure High - Data Valid but Above Normal Operational Range - Moderately Severe Level
451 (Yellow)	157 3	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
452 (Yellow)	157 4	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
488 (Yellow)	105 16	Intake Manifold	Intake Manifold #1 Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
489 (Yellow)	191 18	Transmission Output Shaft Speed	Transmission Output Shaft Speed - Data Valid but Below Normal Operational Range - Moderately Severe Level
497 (Yellow)	1377 2	Switch Circuit	Multiple Unit Synchronization Switch Circuit - Data Erratic, Intermittent, or Incorrect
523 (Yellow)	611 2	System Diagnostic Code #1	OEM Intermediate (PTO) Speed Switch Validation - Data Erratic, Intermittent, or Incorrect
527 (Yellow)	702 3	Circuit - Voltage	Auxiliary Input/Output #2 Circuit - Voltage Above Normal, or Shorted to High Source
528 (Yellow)	93 2	Switch - Data	Auxiliary Alternate Torque Validation Switch - Data Erratic, Intermittent, or Incorrect
529 (Yellow)	703 3	Circuit - Voltage	Auxiliary Input/Output #3 Circuit - Voltage Above Normal or Shorted to High Source
546 (Yellow)	94 3	Fuel Delivery Pressure	Fuel Delivery Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
547 (Yellow)	94 4	Fuel Delivery Pressure	Fuel Delivery Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
551 (Yellow)	558 4	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Voltage Below Normal or Shorted to Low Source
553 (Yellow)	157 16	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure High - Data Valid but Above Normal Operational Range - Moderately Severe Level
554 (Yellow)	157 2	Injector Metering Rail #1 Pressure	Fuel Pressure Sensor Error - Data Erratic, Intermittent, or Incorrect
559 (Yellow)	157 18	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure High - Data Valid but Below Normal Operational Range - Moderately Severe Level
584 (Yellow)	677 3	Starter Solenoid Lockout Relay Driver Circuit	Starter Relay Circuit - Voltage Above Normal or Shorted to High Source
585 (Yellow)	677 4	Starter Solenoid Lockout Relay Driver Circuit	Starter Relay Circuit - Voltage Below Normal or Shorted to Low Source
595 (Yellow)	103 16	Turbocharger #1 Speed	Turbocharger #1 Speed High - Data Valid but Above Normal Operational Range - Moderately Severe Level
596 (Yellow)	167 16	Alternate Potential (voltage)	Electrical Charging System Voltage High - Data Valid but Above Normal Operational Range - Moderately Severe Level
597 (Yellow)	167 18	Alternate Potential (voltage)	Electrical Charging System Voltage High - Data Valid but Below Normal Operational Range - Moderately Severe Level
598 (Red)	167 1	Alternate Potential (voltage)	Electrical Charging System Voltage High - Data Valid but Below Normal Operational Range - Most Severe Level
599 (Red)	640 14	Engine External Protection Input	Auxiliary Commanded Dual Output Shutdown - Special Instructions
649 Maint.	1378 31	Engine Oil Change Interval	Change Lubricating Oil and Filter - Condition Exists
687 (Yellow)	103 18	Turbocharger #1 Speed	Turbocharger #1 Speed Low - Data Valid but Below Normal Operational Range - Moderately Severe Level

CFP9E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
689 (Yellow)	190 2	Engine Speed	Primary Engine Speed Sensor Error - Data Erratic, Intermittent, or Incorrect
691 (Yellow)	1172 3	Turbocharger #1 Compressor Inlet Temp	Turbocharger #1 Compressor Inlet Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
692 (Yellow)	1172 4	Turbocharger #1 Compressor Inlet Temp	Turbocharger #1 Compressor Inlet Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
697 (Yellow)	1136 3	Sensor Circuit - Voltage	ECM Internal Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
698 (Yellow)	1136 4	Sensor Circuit - Voltage	ECM Internal Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
719 (Yellow)	22 3	Crankcase Pressure	Extended Crankcase Blow-by Pressure Circuit - Voltage Above Normal or Shorted to High Source
729 (Yellow)	22 4	Crankcase Pressure	Extended Crankcase Blow-by Pressure Circuit - Voltage Below Normal or Shorted to Low Source
731 (Yellow)	723 7	Engine Speed Sensor #2	Engine Speed/Position #2 Mechanical Misalignment Between Camshaft and Crankshaft Sensors - Mechanical System not Responding Properly or Out of Adjustment
757 (Yellow)	2802 31	Electronic Control Module	Electronic Control Module Data Lost - Condition Exists
778 (Yellow)	723 2	Engine Speed Sensor #2	Engine Speed Sensor (Camshaft) Error - Data Erratic, Intermittent, or Incorrect
779 (Yellow)	703 11	Auxiliary Equipment Sensor Input	Warning Auxiliary Equipment Sensor Input #3 (OEM Switch) - Root Cause Not Known
951 (None)	166 2	Cylinder Power	Cylinder Power Imbalance Between Cylinders - Data Erratic, Intermittent, or Incorrect
1117 (None)	627 2	Power Supply	Power Lost with Ignition On - Data Erratic, Intermittent, or Incorrect
1139 (Yellow)	651 7	Injector Cylinder #1	Injector Cylinder #1 - Mechanical System Not Responding Properly or Out of Adjustment
1141 (Yellow)	652 7	Injector Cylinder #2	Injector Cylinder #2 - Mechanical System Not Responding Properly or Out of Adjustment
1142 (Yellow)	653 7	Injector Cylinder #3	Injector Cylinder #3 - Mechanical System Not Responding Properly or Out of Adjustment
1143 (Yellow)	654 7	Injector Cylinder #4	Injector Cylinder #4 - Mechanical System Not Responding Properly or Out of Adjustment
1144 (Yellow)	655 7	Injector Cylinder #5	Injector Cylinder #5 - Mechanical System Not Responding Properly or Out of Adjustment
1145 (Yellow)	656 7	Injector Cylinder #6	Injector Cylinder #6 - Mechanical System Not Responding Properly or Out of Adjustment
1239 (Yellow)	2623 3	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor #2 Circuit - Voltage Above Normal or Shorted to High Source
1241 (Yellow)	2623 4	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor #2 Circuit - Voltage Below Normal or Shorted to Low Source
1242 (Red)	91 2	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor #1 and #2 - Data Erratic, Intermittent, or Incorrect
1256 (Yellow)	1563 2	Control Module Identification Input State	Control Module Identification Input State Error - Data Erratic, Intermittent, or Incorrect
1257 (Red)	1563 2	Control Module Identification Input State	Control Module Identification Input State Error - Data Erratic, Intermittent, or Incorrect
1852 (Yellow)	97 16	Water in Fuel Indicator	Water in Fuel Indicator - Data Valid but Above Normal Operational Range - Moderately Severe Level

CFP9E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
1911 (Yellow)	157 0	Injector Metering Rail	Injector Metering Rail #1 Pressure - Data Valid but Above Normal Operational Range - Most Severe Level
2111 (Yellow)	52 3	Coolant Temperature	Coolant Temperature #2 Sensor Circuit - Voltage Above Normal or Shorted to High Source
2112 (Yellow)	52 4	Coolant Temperature	Coolant Temperature #2 Sensor Circuit - Voltage Below Normal or Shorted to Low Source
2113 (Yellow)	52 16	Coolant Temperature	Coolant Temperature #2 - Data Valid but Above Normal Operational Range - Moderately Severe Level
2114 (Red)	52 0	Coolant Temperature	Coolant Temperature #2 - Data Valid but Above Normal Operational Range - Most Severe Level
2115 (Yellow)	2981 3	Coolant Pressure	Coolant Pressure #2 Circuit - Voltage Above Normal or Shorted to High Source
2116 (Yellow)	2981 4	Coolant Pressure	Coolant Pressure #2 Circuit - Voltage Below Normal or Shorted to Low Source
2117 (Yellow)	2981 18	Coolant Pressure	Coolant Pressure #2 - Data Valid but Below Normal Operational Range - Moderately Severe Level
2182 (Yellow)	1072 3	Engine Brake Output #1	Engine Brake Actuator Driver #1 Circuit - Voltage Above Normal or Shorted to High Source
2183 (Yellow)	1072 4	Engine Brake Output #1	Engine Brake Actuator Driver #1 Circuit - Voltage Below Normal or Shorted to Low Source
2185 (Yellow)	3512 3	System Diagnostic Code #1	Sensor Supply Voltage #4 Circuit - Voltage Above Normal or Shorted to High Source
2186 (Yellow)	3512 4	System Diagnostic Code #1	Sensor Supply Voltage #4 Circuit - Voltage Below Normal or Shorted to Low Source
2195 (Yellow)	703 14	Auxiliary Equipment Sensor	Auxiliary Equipment Sensor Input #3 Engine Protection Critical - Special Instructions
2215 (Yellow)	94 18	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Below Normal Operational Range - Moderately Severe Level
2216 (Yellow)	94 1	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
2217 (Yellow)	630 31	Calibration Memory	ECM Program Memory (RAM) Corruption - Condition Exists
2249 (Yellow)	157 1	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure - Data Valid but Below Normal Operational Range - Most Severe Level
2261 Maint.	94 15	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Above Normal Operational Range - Least Severe Level
2262 Maint.	94 17	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Below Normal Operational Range - Least Severe Level
2263 (Yellow)	1800 16	Battery Temperature	Battery Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
2264 (Yellow)	1800 18	Battery Temperature	Battery Temperature - Data Valid but Below Normal Operational Range - Moderately Severe Level
2265 (Yellow)	1075 3	Electric Lift Pump for Engine Fuel	Fuel Priming Pump Control Signal Circuit - Voltage Above Normal or Shorted to High Source
2266 (Yellow)	1075 4	Electric Lift Pump for Engine Fuel	Fuel Priming Pump Control Signal Circuit - Voltage Below Normal or Shorted to Low Source
2292 (Yellow)	611 16	Fuel Inlet Meter Device	Fuel Inlet Meter Device - Data Valid but Above Normal Operational Range - Moderately Severe Level
2293 (Yellow)	611 18	Fuel Inlet Meter Device	Fuel Inlet Meter Device Flow Demand Lower Than Expected - Data Valid but Below Normal Operational Range - Moderately Severe Level

CFP9E Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
2311 (Yellow)	633 31	Fuel Control Valve #1	Fueling Actuator #1 Circuit Error - Condition Exists
2321 (None)	190 2	Engine Speed	Engine Speed/Position Sensor #1 - Data Erratic, Intermittent, or Incorrect
2322 (None)	723 2	Engine Speed Sensor #2	Engine Speed/Position Sensor #2 - Data Erratic, Intermittent, or Incorrect
2345 (Yellow)	103 10	Turbocharger #1 Speed	Turbocharger Speed Invalid Rate of Change Detected - Abnormal Rate of Change
2346 (None)	2789 15	System Diagnostic Code #1	Turbocharger Turbine Inlet Temperature (calculated) - Data Valid but Above Normal Operational Range - Least Severe Level
2347 (None)	2790 15	System Diagnostic Code #1	Turbocharger Turbine Outlet Temperature (calculated) - Data Valid but Above Normal Operational Range - Least Severe Level
2363 (Yellow)	1073 4	Engine Compression Brake Output #2	Engine Brake Actuator Circuit #2 - Voltage Below Normal, or Shorted to Low Source
2365 (Yellow)	1112 4	Engine Brake Output #3	Engine Brake Actuator Driver Output #3 Circuit - Voltage Below Normal or Shorted to Low Source
2367 (Yellow)	1073 3	Engine Compression Brake Output #2	Engine Brake Actuator Circuit #2 - Voltage Above Normal or Shorted to High Source
2368 (Yellow)	1112 3	Engine Brake Output #3	Engine Brake Actuator Driver Output #3 Circuit - Voltage Above Normal or Shorted to High Source
2372 (Yellow)	95 16	Engine Fuel Filter Differential Pressure	Fuel Filter Differential Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
2373 (Yellow)	1209 3	Exhaust Gas Pressure	Exhaust Gas Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
2374 (Yellow)	1209 4	Exhaust Gas Pressure	Exhaust Gas Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
2375 (Yellow)	412 3	Exhaust Gas Recirculation Temperature	Exhaust Gas Recirculation Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
2376 (Yellow)	412 4	Exhaust Gas Recirculation Temperature	Exhaust Gas Recirculation Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
2377 (Yellow)	647 3	Fan Clutch Output Device Driver	Fan Control Circuit - Voltage Above Normal or Shorted to High Source
2425 (None)	730 4	Intake Air Heater #2	Intake Air Heater #2 Circuit - Voltage Below Normal or Shorted to Low Source
2426 (None)	730 3	Intake Air Heater #2	Intake Air Heater #2 Circuit - Voltage Above Normal or Shorted to High Source
2555 (Yellow)	729 3	Intake Air Heater Driver #1	Intake Air Heater #1 Circuit - Voltage Above Normal or Shorted to High Source
2556 (Yellow)	729 4	Intake Air Heater Driver #1	Intake Air Heater #1 Circuit - Voltage Below Normal or Shorted to Low Source
2557 (Yellow)	697 3	Auxiliary PWM Driver #1	Auxiliary PWM Driver #1 - Voltage Above Normal or Shorted to High Source
2558 (Yellow)	697 4	Auxiliary PWM Driver #1	Auxiliary PWM Driver #1 - Voltage Below Normal or Shorted to Low Source
2963 (None)	110 15	Engine Coolant Temperature	Engine Coolant Temperature High - Data Valid but Above Normal Operational Range - Least Severe Level
2973 (Yellow)	102 2	Boost Pressure	Intake Manifold Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect



Section 8 - Component Parts and Assemblies

8.1 Part Ordering Information

Replacement parts for the Cummins Inc. equipment are manufactured to the same quality standards and specifications as the original equipment. Unapproved substitution may result in poor performance, reduced service life, lost production, or unsafe operation.

Cummins Inc. relies on the best and most cost effective shipping methods, unless specific instructions or requirements are requested by the customer. When ordering parts, please be prepared to provide the following information.

PARTS REQUESTS REQUIRE:

1. Model and serial number.
2. Part description by name or number.
3. Quantity required.
4. Purchase order number.

NOTE: *A purchase order number is desirable, even if the part(s) are supplied on a Returned Goods Authorization (RGA) issue number. A purchase order number helps Cummins NPower Inc. and its customer track the parts and necessary credits.*

8.2 Routine Service and Parts

Personnel at Cummins Authorized Repair Locations can assist you with the correct operation and service of your engine. Cummins has a worldwide service network of more than 5,000 Distributors and Dealers who have been trained to provide sound advice, expert service, and complete parts support.

Check the telephone directory yellow pages or refer to the directory in this section for the nearest Cummins Authorized Repair Location.

8.3 Emergency Repairs and Technical Service

The Cummins Customer Assistance Center provides a 24-hour, toll free telephone number to aid in technical and emergency service when a Cummins Authorized Repair Location can not be reached or is unable to resolve an issue with a Cummins product.

If assistance is required, call Toll-Free: 1-800-DIESELS (1-800-343-7357). Includes all 50 states, Bermuda, Puerto Rico, Virgin Islands, and the Bahamas.


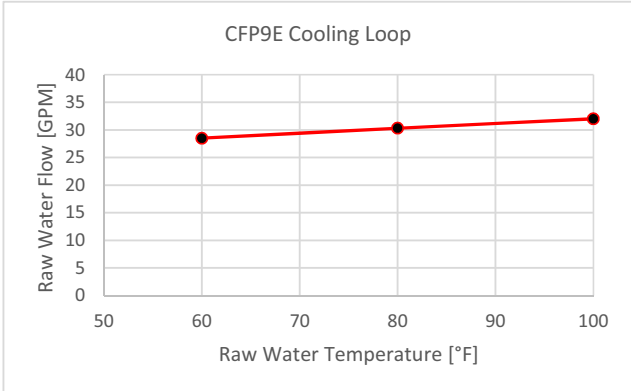
Outside of North America contact your Regional Office. Telephone numbers and addresses are listed in the International Directory.

Refer also to the Cummins Inc. web site at www.cummins.com.

8.4 Recommended Spares Inventory

To minimize downtime and increase productivity, Cummins Inc. recommends maintaining a stock of spare parts critical to uninterrupted engine operation. Shipping costs can be lower using ground transportation rather than overnight or next day air freight. For this reason Cummins Inc. can provide a list of recommended spare parts. Contact the Cummins Authorized Repair Location for additional information.

CFP9E Engine Data Sheet

	Engine Data Sheet Cummins Fire Power De Pere, WI 54115 http://www.cumminsfirepower.com	Basic Engine Model CFP9E-F10,F20,F30,F40,F50,F60	
	Configuration Number: D563004CX03 Installation Drawing: 26112	Curve Number: FR - 91518 CPL Code: 8641	Engine Family: Industrial Revision Date: March 2015
General Engine Data			
Type.....	4 Cycle; In-Line; 6 Cylinder		
Aspiration.....	Turbocharged, Chrg Air Cooled		
Bore & Stroke - in. (mm).....	4.49 x 5.69 (114 x 145)		
Displacement - in. ³ (litre).....	543	(8.9)	
Compression Ratio.....	17.8:1		
Valves per Cylinder - Intake.....	2		
- Exhaust.....	2		
Maximum Allowable Bending Moment @ Rear Face of Block - lb.-ft. (N-m).....	1000	(1356)	
Air Induction System			
Max. Temperature Rise Between Ambient Air and Engine Air Inlet - delta °F (delta °C).....	30	(16.7)	
Maximum Inlet Restriction with Dirty Filter - in. H ₂ O (mm H ₂ O).....	25	(635)	
Recommended Air Cleaner Element - (Standard).....	FLG Industrial.....	AH19220	
- (Optional) Heavy Duty Element.....	Primary	AF1828	
	Secondary	AF1894M	
Lubrication System			
Oil Pressure Range at Rated - PSI (kPa)	40-60	(276-414)	
Oil Capacity of Pan (High - Low) - U.S. quarts (litre)	24-20		
Total System Capacity - U.S. Gal. (litre)	6.5	(24.6)	
Recommended Lube Oil Filter	Fleetguard (Cummins).....	LF9009	(3401544)
Cooling System			
Raw Water Working Pressure Range at Heat Exchanger - PSI (kPa)	60	(413)	MAX
Recommended Min. Water Supply Pipe Size to Heat Exchanger - in. (mm).....	0.75	(19.05)	
Recommended Min. Water Disch. Pipe Size From Heat Exchanger - in. (mm).....	1.00	(25.40)	
Coolant Water Capacity (Engine Side) - U.S. gal. (litre)	2.9	(11.0)	
Standard Thermostat - Type.....	Modulating		
- Range - deg F (deg C)	180-199	(82-93)	
Minimum Raw Water Flow			
with Water Temperatures to 60 °F (16 °C) - U.S. GPM (litre/s)	28.5	(1.80)	
with Water Temperatures to 80 °F (27 °C) - U.S. GPM (litre/s)	30.3	(1.91)	
with Water Temperatures to 100 °F (38 °C) - U.S. GPM (litre/s)	32	(2.02)	
Recommended Cooling Water Filter.....	Fleetguard (Cummins)	WF2074	(3100307)
A jacket water heater is mandatory on this engine. The recommended heater wattage is 2250 down to 40 °F (4 °C).			
<div><div>CFP9E Cooling Loop</div></div>			

CFP9E Engine Data Sheet (Continued)

Exhaust System

Max. Back Pressure Imposed by Complete Exhaust System inches H ₂ O (kPa)	40.8	(10.2)
Exhaust Pipe Size Normally Acceptable - in. (mm)	5.0	(127)

Noise Emissions

Top.....	97.2 dBa
Right Side.....	97.2 dBa
Left Side.....	97.2 dBa
Front.....	97.2 dBa
Exhaust.....	119.5 dBa

The noise emission values are estimated sound pressure levels at 3.3 ft. (1 m.).

Fuel Supply / Drain System

Fuel Consumption	1470	1760	1900	2100	2300
CFP9E-F60 Gal/hr (L/hr)	15.7 (59.5)	18.6 (70.2)	18.9 (71.6)	18.6 (70.4)	16.3 (61.6)
CFP9E-F50 Gal/hr (L/hr)	14.9 (56.5)	18.1 (68.5)	18.7 (70.6)	17.4 (65.8)	15.3 (57.7)
CFP9E-F40 Gal/hr (L/hr)	14.0 (53.0)	16.9 (64.0)	18.0 (68.1)	16.3 (61.7)	14.3 (54.1)
CFP9E-F30 Gal/hr (L/hr)	13.0 (49.3)	15.8 (59.7)	16.7 (63.4)	15.1 (50.2)	13.3 (50.2)
CFP9E-F20 Gal/hr (L/hr)	12.0 (45.6)	14.6 (55.2)	15.5 (58.7)	14.0 (53.2)	12.3 (46.6)
CFP9E-F10 Gal/hr (L/hr)	11.1 (42.1)	13.4 (50.9)	11.3 (54.0)	12.9 (48.8)	11.3 (43.0)

Fuel Type	Number 2 Diesel Only
Minimum Supply Line Size - in. (mm)	0.5 (12.70)
Minimum Drain Line Size - in. (mm)	0.375 (9.53)
Maximum Fuel Height above C/L Fuel Pump in. (m)	227 (5.7)
Recommended Fuel Filter - Primary	Fleetguard (Cummins) FF5580 (3976312)
- Secondary	FS1212
Maximum Restriction @ Lift Pump-Inlet - With Clean Filter - in. Hg (mm Hg)	6.0 (152)
Maximum Restriction @ Lift Pump-Inlet - With Dirty Filter - in. Hg (mm Hg)	10.0 (254)
Maximum Return Line Restriction - Without Check Valves - in. Hg (mm Hg)	20.4 (518)
Minimum Fuel Tank Vent Capability - ft ³ /hr (m ³ /hr)	7 (0.21)
Maximum Fuel Temperature @ Lift Pump Inlet - °F (°C)	160 (71)

Starting and Electrical System

	12V	24V
Min. Recommended Batt. Capacity - Cold Soak at 0°F (-18°C) or Above		
Engine Only - Cold Cranking Amperes - (CCA)	1400	900
Engine Only - Reserve Capacity - Minutes	430	430
Battery Cable Size (Maximum Cable Length Not to Exceed 5 ft. [1.5 m] AWG)	00	00
Maximum Resistance of Starting Circuit - Ohms	0.002	0.002
Typical Cranking Speed - RPM	130	130
Alternator (Standard), Internally Regulated - Ampere	95	45
Wiring for Automatic Starting (Negative Ground)	Standard	
Reference Wiring Diagram	16260	

Performance Data

All data is based on the engine operating with fuel system, water pump, lubricating oil pump, air cleaner, and alternator; not included are compressor, fan, optional equipment, and driven components. Data is based on operation at SAE standard J conditions of 300 ft. (91.4 m) altitude, 29.61 in. (752 mm) Hg dry barometer, and 77 °F (25 °C) intake air temperature, using diesel or a fuel corresponding to ASTM-D2.

Altitude Above Which Output Should be Limited - ft. (m)	300	(91.4)
Correction Factor per 1000 ft. (305 m) above Altitude Limit	3%	
Temperature Above Which Output Should be Limited - °F (°C)	77	(25)
Correction Factor per 10 °F (11 °C) Above Temperature Limit	1%	(2%)

CFP9E Engine Data Sheet (Continued)

FM Approved and UL Listed Ratings for CFP9E-F10, F20, F30, F40, F50, F60

Engine Speed - RPM	1470	1760	1900	2100	2300
CFP9E-F60 Output - BHP (kW) .	304 (227)	359 (268)	365 (272)	355 (265)	304 (227)
Ventilation Air CFM (litre/sec)	580 (274)	723 (341)	738 (348)	788 (372)	827 (391)
Exhaust Flow - CFM (litre/sec) ..	1615 (762)	2041 (963)	2077 (980)	2133 (1,007)	2090 (986)
Exhaust Temp.- °F (°C)	1074 (579)	1049 (565)	1106 (597)	1077 (581)	991 (533)
Heat Rejection					
To Coolant BTU/min. (kW)	4810 (85)	6517 (115)	6705 (118)	6690 (118)	6155 (108)
To Ambient BTU/min (kW)	1223 (21)	1302 (23)	1350 (24)	1305 (23)	1279 (22)
CFP9E-F50 Output - BHP (kW) .	289 (216)	350 (261)	360 (268)	332 (248)	285 (213)
Ventilation Air CFM (litre/sec)	584 (276)	686 (324)	736 (347)	785 (371)	824 (389)
Exhaust Flow - CFM (litre/sec) ..	1621 (765)	1918 (905)	2053 (969)	2107 (995)	2065 (975)
Exhaust Temp.- °F (°C)	1076 (580)	1083 (584)	1097 (592)	1064 (573)	979 (526)
Heat Rejection					
To Coolant BTU/min. (kW)	4849 (85)	6157 (108)	6815 (120)	6530 (115)	6008 (106)
To Ambient BTU/min (kW)	1186 (21)	1263 (22)	1310 (23)	1266 (22)	1241 (22)
CFP9E-F40 Output - BHP (kW) .	271 (202)	327 (244)	347 (259)	311 (232)	267 (199)
Ventilation Air CFM (litre/sec)	557 (263)	685 (323)	735 (347)	783 (370)	822 (388)
Exhaust Flow - CFM (litre/sec) ..	1584 (748)	1899 (896)	2036 (961)	2084 (984)	2042 (964)
Exhaust Temp.- °F (°C)	1083 (584)	1076 (580)	1088 (587)	1052 (567)	1030 (554)
Heat Rejection					
To Coolant BTU/min. (kW)	4885 (86)	5988 (105)	6386 (112)	6417 (113)	5904 (104)
To Ambient BTU/min (kW)	1151 (20)	1225 (22)	1270 (22)	1228 (22)	1203 (21)
CFP9E-F30 Output - BHP (kW) .	252 (188)	305 (227)	323 (241)	289 (216)	248 (185)
Ventilation Air CFM (litre/sec)	558 (263)	681 (321)	727 (343)	781 (369)	820 (387)
Exhaust Flow - CFM (litre/sec) ..	1574 (743)	1863 (879)	1973 (931)	2056 (970)	2015 (951)
Exhaust Temp.- °F (°C)	1075 (579)	1057 (569)	1058 (570)	1037 (558)	954 (512)
Heat Rejection					
To Coolant BTU/min. (kW)	4809 (85)	5807 (102)	6049 (106)	6328 (111)	5822 (102)
To Ambient BTU/min (kW)	1116 (20)	1188 (21)	1232 (22)	1191 (21)	1167 (21)
CFP9E-F20 Output - BHP (kW) .	233 (174)	282 (210)	299 (223)	268 (200)	230 (172)
Ventilation Air CFM (litre/sec)	555 (262)	674 (318)	720 (340)	776 (366)	815 (385)
Exhaust Flow - CFM (litre/sec) ..	1527 (721)	1813 (856)	1927 (910)	2019 (953)	1979 (934)
Exhaust Temp.- °F (°C)	1033 (556)	1030 (554)	1036 (558)	1018 (548)	937 (503)
Heat Rejection					
To Coolant BTU/min. (kW)	4486 (79)	5591 (98)	5880 (103)	6189 (109)	5694 (100)
To Ambient BTU/min (kW)	1083 (19)	1153 (20)	1195 (21)	1155 (20)	1132 (20)
CFP9E-F10 Output - BHP (kW) .	215 (160)	260 (194)	275 (205)	246 (183)	212 (158)
Ventilation Air CFM (litre/sec)	544 (257)	665 (314)	712 (336)	763 (360)	801 (378)
Exhaust Flow - CFM (litre/sec) ..	1432 (676)	1751 (826)	1872 (884)	1922 (907)	1884 (889)
Exhaust Temp.- °F (°C)	971 (522)	997 (536)	1008 (542)	968 (520)	891 (477)
Heat Rejection					
To Coolant BTU/min. (kW)	4259 (75)	5340 (94)	5679 (100)	5781 (102)	5319 (93)
To Ambient BTU/min (kW)	1050 (18)	1118 (20)	1159 (20)	1121 (20)	1098 (19)

All Data is Subject to Change Without Notice.

Engineering Manager: Mike Dawson
Cummins Fire Power, De Pere, WI 54115 U.S.A.

Torque Table

Cap Screw Markings and Torque Values



Always use a cap screw of the same measurement and strength as the cap screw being replaced. Using the wrong cap screws can result in engine damage.

Always use the torque values listed in the following tables when specific torque values are not available.




When the ft-lb value is less than 10, convert the ft-lb value to in-lb to obtain a better torque with an in-lb torque wrench. Example: 6 ft-lb equals 72 in-lb.

Metric Cap Screw Identification

Sample:	M8-1.25 x 25		
Value:	M8	1.25	X 25
Meaning:	Major thread diameter in millimeters	Distance between threads in millimeters	Length in millimeters

Metric Cap Screw Head Markings

Metric cap screws and nuts are identified by the grade number stamped on the head of the cap screw or on the surface of the nuts.




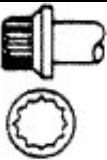
Commercial Steel Class	8.8	10.9	12.9
Cap Screw Head Markings			

US Customary Cap Screw Identification

Sample:	5/16 x 18 x 1-1/2		
Value:	5/16	18	1-1/2
Meaning:	Major thread diameter in inches	Number of threads per inch	Length in inches

U.S. Customary Cap Screw Head Markings

U.S. Customary cap screws are identified by radial lines stamped on the head of the cap screw.

SAE Grade 5 w/ three lines	SAE Grade 8
 	 

Torque Table (Continued)

Metric Cap Screw Torque Values (lubricated threads)

Class:	8.8				10.9				12.9			
Diameter	Cast Iron		Aluminum		Cast Iron		Aluminum		Cast Iron		Aluminum	
mm	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb
6	9	5	7	4	13	10	7	4	14	9	7	4
7	14	9	11	7	18	14	11	7	23	18	11	7
8	23	17	18	14	33	25	18	14	40	29	18	14
10	45	33	30	25	65	50	30	25	70	50	30	25
12	80	60	55	40	115	85	55	40	125	95	55	40
14	125	90	90	65	180	133	90	65	195	145	90	65
16	195	140	140	100	280	200	140	100	290	210	140	100
18	280	200	180	135	390	285	180	135	400	290	180	135
20	400	290	—	—	550	400	—	—	—	—	—	—

U.S. Customary Cap Screw Torque Values (lubricated threads)




Grade:	SAE Grade 5				SAE Grade 8			
Cap Screw Body Size	Cast Iron		Aluminum		Cast Iron		Aluminum	
	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb
1/4-20	9	7	8	6	15	11	8	6
1/4-28	12	9	9	7	18	13	9	7
5/16-18	20	15	16	12	30	22	16	12
5/16-24	23	17	19	14	33	24	19	14
3/8-16	40	30	25	20	55	40	25	20
3/8-24	40	30	35	25	60	45	35	25
7/16-14	60	45	45	35	90	65	45	35
7/16-20	65	50	55	40	95	70	55	40
1/2-13	95	70	75	55	130	95	75	55
1/2-20	100	75	80	60	150	110	80	60
9/16-12	135	100	110	80	190	140	110	80
9/16-18	150	110	115	85	210	155	115	85
5/8-11	180	135	150	110	255	190	150	110
5/8-18	210	155	160	120	290	215	160	120
3/4-10	325	240	255	190	460	340	255	190
3/4-16	365	270	285	210	515	380	285	210
7/8-9	490	360	380	280	745	550	380	280
7/8-14	530	390	420	310	825	610	420	310
1-8	720	530	570	420	1100	820	570	420
1-14	800	590	650	480	1200	890	650	480

8.5 Assembly Drawings

The most current revisions to these drawings and related documents are accessible at: <http://www.cumminsfirepower.com/products.html>.

Description	Drawing No.	Revision Level	Change Date
General Layout, Fire Pump, CFP9E	26728	-	11/13
Drawing, Installation, Fire Pump, CFP9E	26112	C	5/14
Options, Engine, Industrial, CFP9E (QSL9)	8739	D1	1/14
Assembly, Engine 12V with Valve Cover	26775	-	3/14
Assembly, Heat Exchanger	A042A471	B	3/15
Assembly, Air Intake	26553	A	8/14
Assembly, Guarding	A042B446	A	8/14
Assembly, Coolant Heater	23526	B	2/14
Assembly, Fuel Pre-Filter	A042A379	A	4/14
Assembly, Sensor Package	15602	D1	3/14
Assembly, Secondary ECM	15613	B1	3/14
Assembly, Control Panel Mounting	21249	-	9/12
Assembly, All Components Top-level:	CFP9E-AC-2014		
Assembly, Panel, Digital Electronic	22791	A	1/14
Assembly, Harness	23931	D	12/14
Cables, Battery Contactors	24234	B	2/14
Battery Contactors 12V	8824-12	A	2/11
Kit, Fuel Lines	15208	A	5/11
Misc. Piping, Cooling Loop, Raw Water	24836	E	8/14
Assembly, Raw Water Cooling Loop, 3/4" Vertical	21511	A	2/15
Assembly, Raw Water Cooling Loop, 3/4" Horizontal 12V	21509	B	2/15
Assembly, Raw Water Cooling Loop, 3/4" Horizontal 24V	21510	B	2/15
Misc. Piping, Cooling Loop, Sea Water	A042A543	B	9/14
Assembly, Sea Water Cooling Loop, 3/4" Vertical	21512	B	2/15
Assembly, Sea Water Cooling Loop, 3/4" Horizontal 12V	21438	C	2/15
Assembly, Sea Water Cooling Loop, 3/4" Horizontal 24V	21439	C	2/15
Assembly, Stub Shaft	8619	D	3/10
Schematic, Control Panel, Electronic	16260	D	3/14

LEGEND AND DATUM IDENTIFIER	
SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	U-JOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

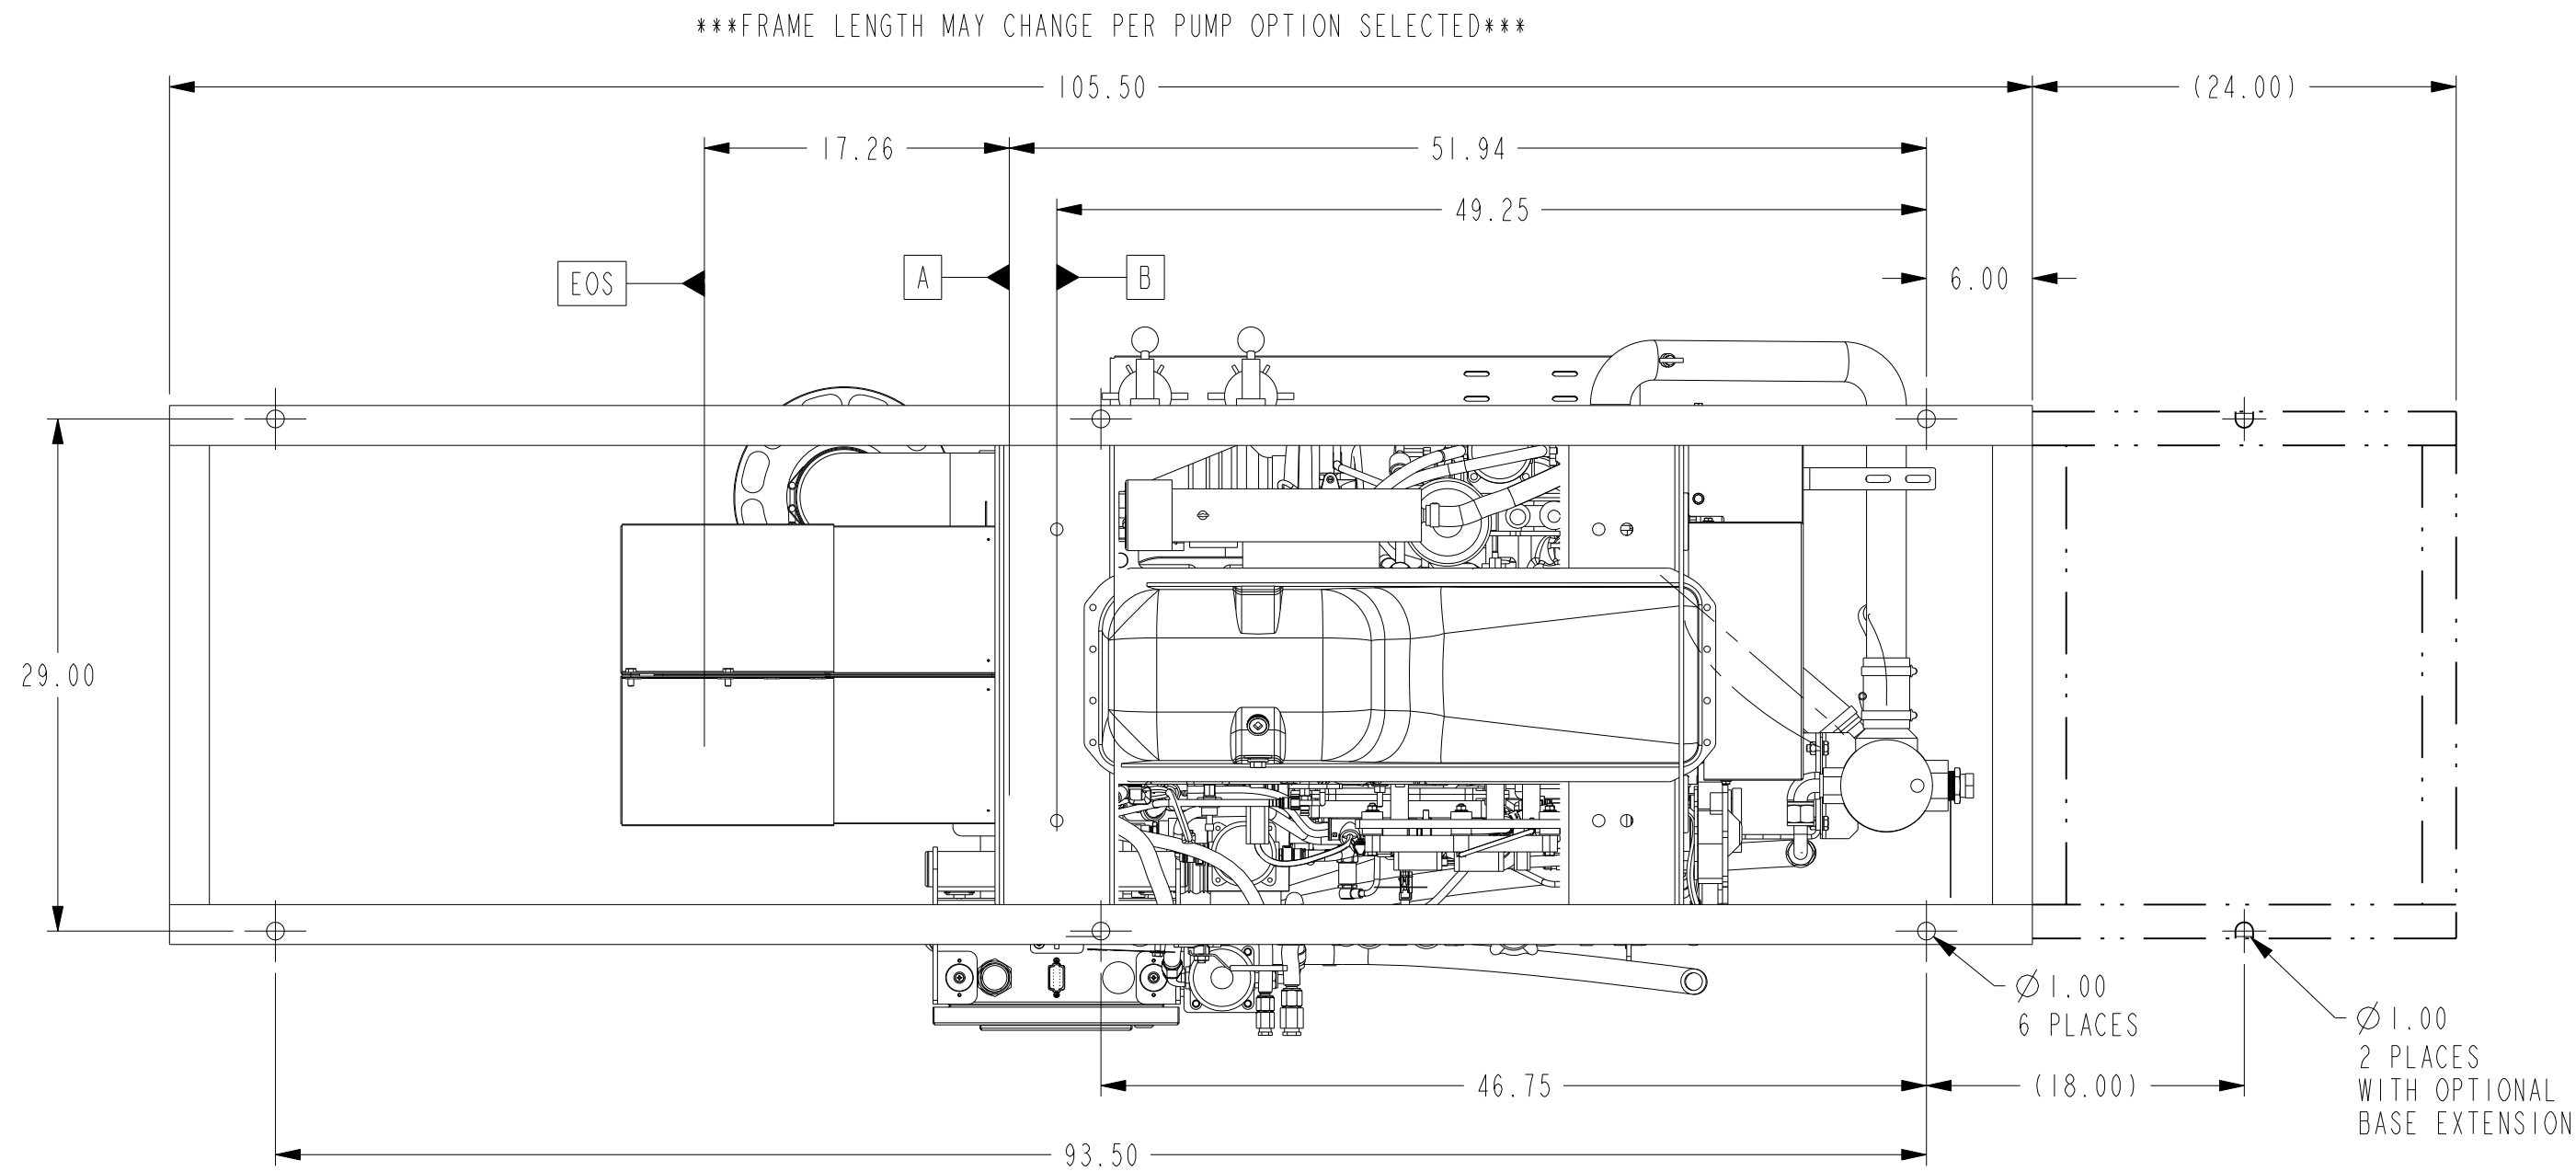
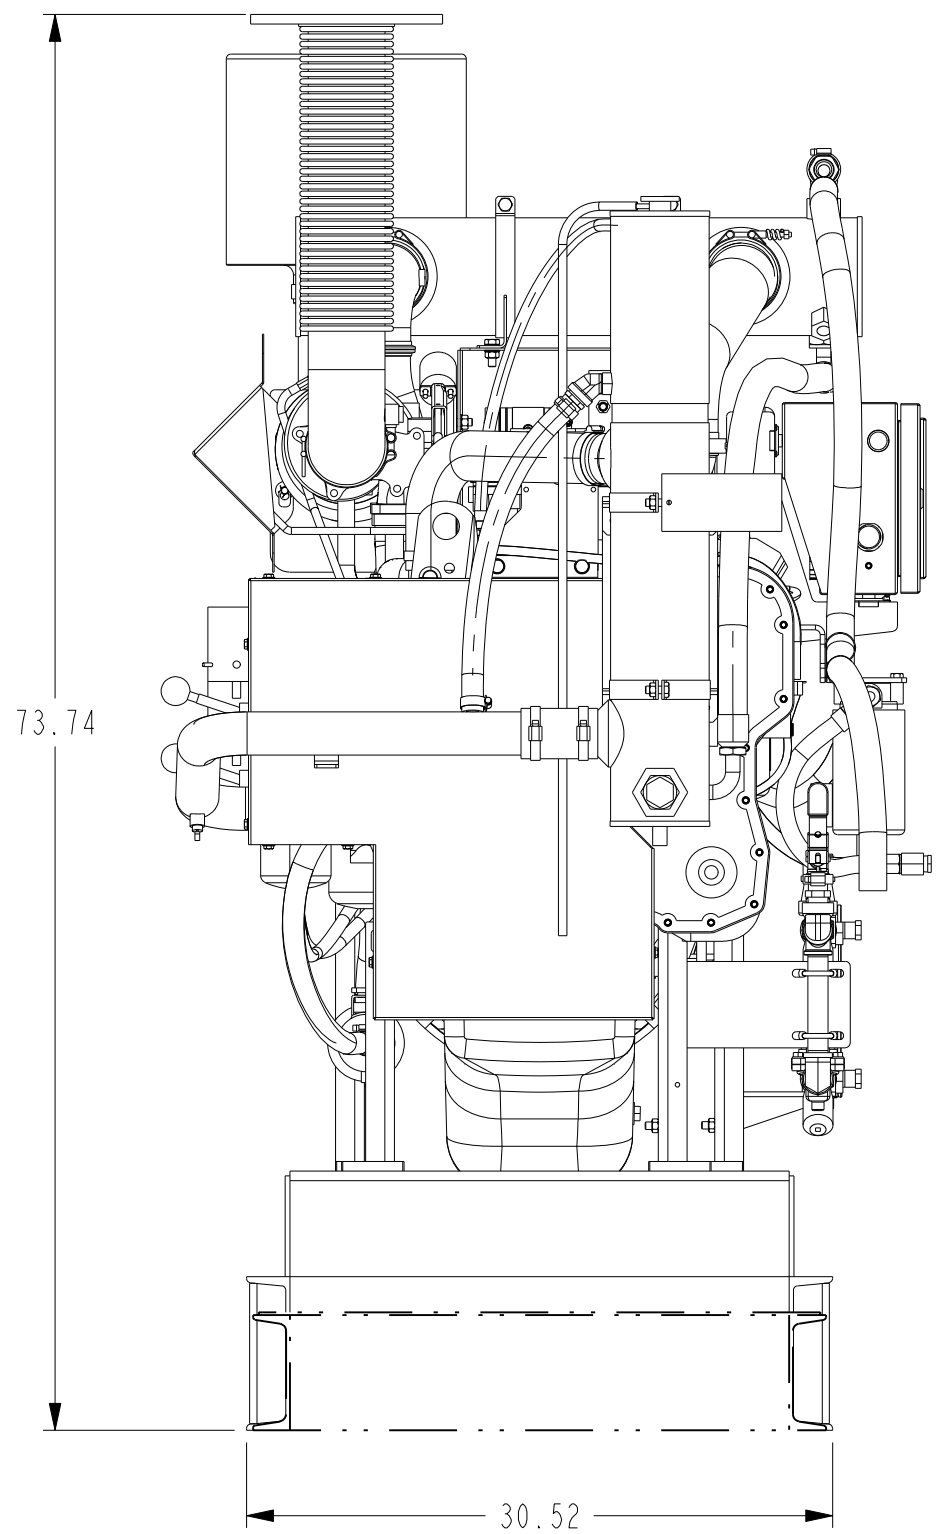
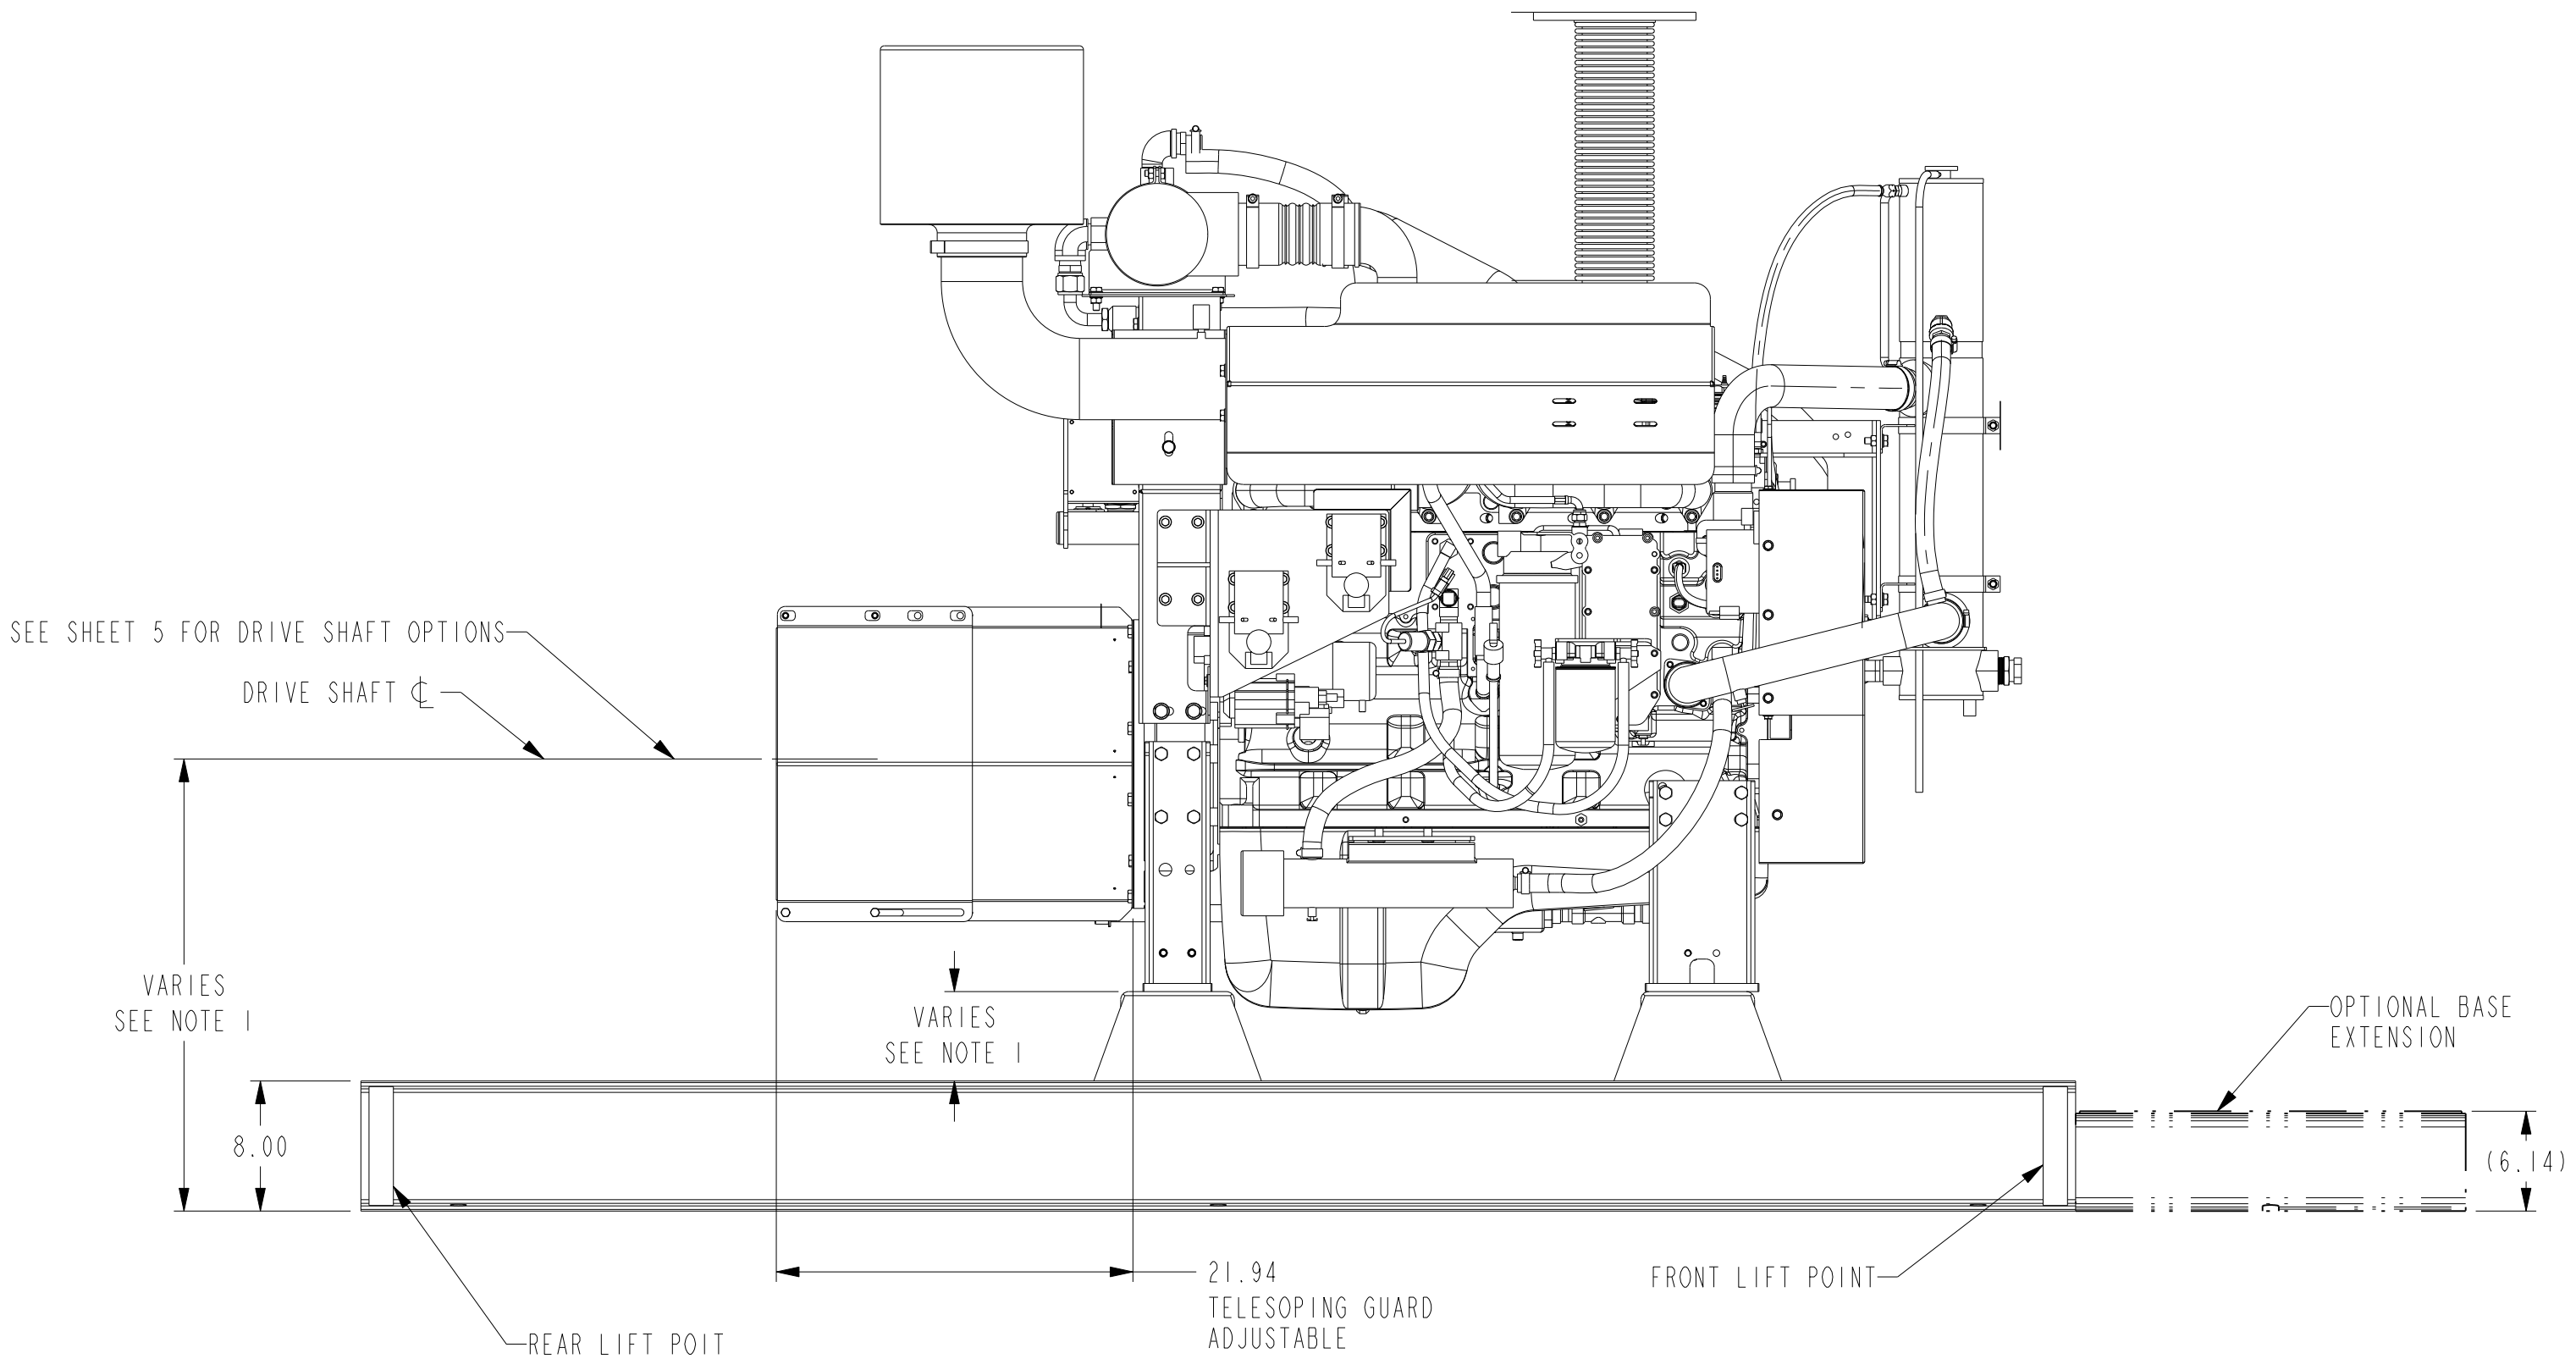


- NOTES:
1. RISER HIEGHT VARIES TO ACCOMODATE CUSTOMER SUPPLIED PUMPS
 2. REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
 3. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.
 4. REFERENCE SHEET 1 FOR BASE FIREPUMP INTERFACE

<p>This document contains confidential and trade secret information, is the property of Cummins Fire Power, LLC and is given in confidence. It is intended for use only by the recipient and is not to be distributed, copied, or otherwise used without the express written consent of Cummins Fire Power, LLC. If you are not the intended recipient, you are notified that disclosing, copying, distributing, or taking any action in reliance on the contents of this information is strictly prohibited. If you have received this document in error, please notify the sender immediately by e-mail or phone. If you are not the intended recipient, you are notified that disclosing, copying, distributing, or taking any action in reliance on the contents of this information is strictly prohibited. If you have received this document in error, please notify the sender immediately by e-mail or phone.</p>		<p>Cummins Fire Power</p> <p>CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 DIERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM</p>		<p>CUSTOM DESIGN AND UPGIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</p>	
<p>GENERAL ARRANGEMENT CFP9E-F10/F20/F30/F40/F50/F60</p>					
<p>DWG UNITS: IN/LB/S</p>		<p>DRAWN BY: PBS</p>		<p>DATE: 12NOV2013</p>	
<p>SCALE: 0.100</p>		<p>PRO-ENGINEER</p>		<p>UNIT ECO: 2013-662</p>	
<p>EST WEIGHT: 42238.628</p>		<p>SHEET 2 OF 5</p>		<p>DRAWING NO: 26728</p>	

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

LEGEND AND DATUM IDENTIFIER	
SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	U-JOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

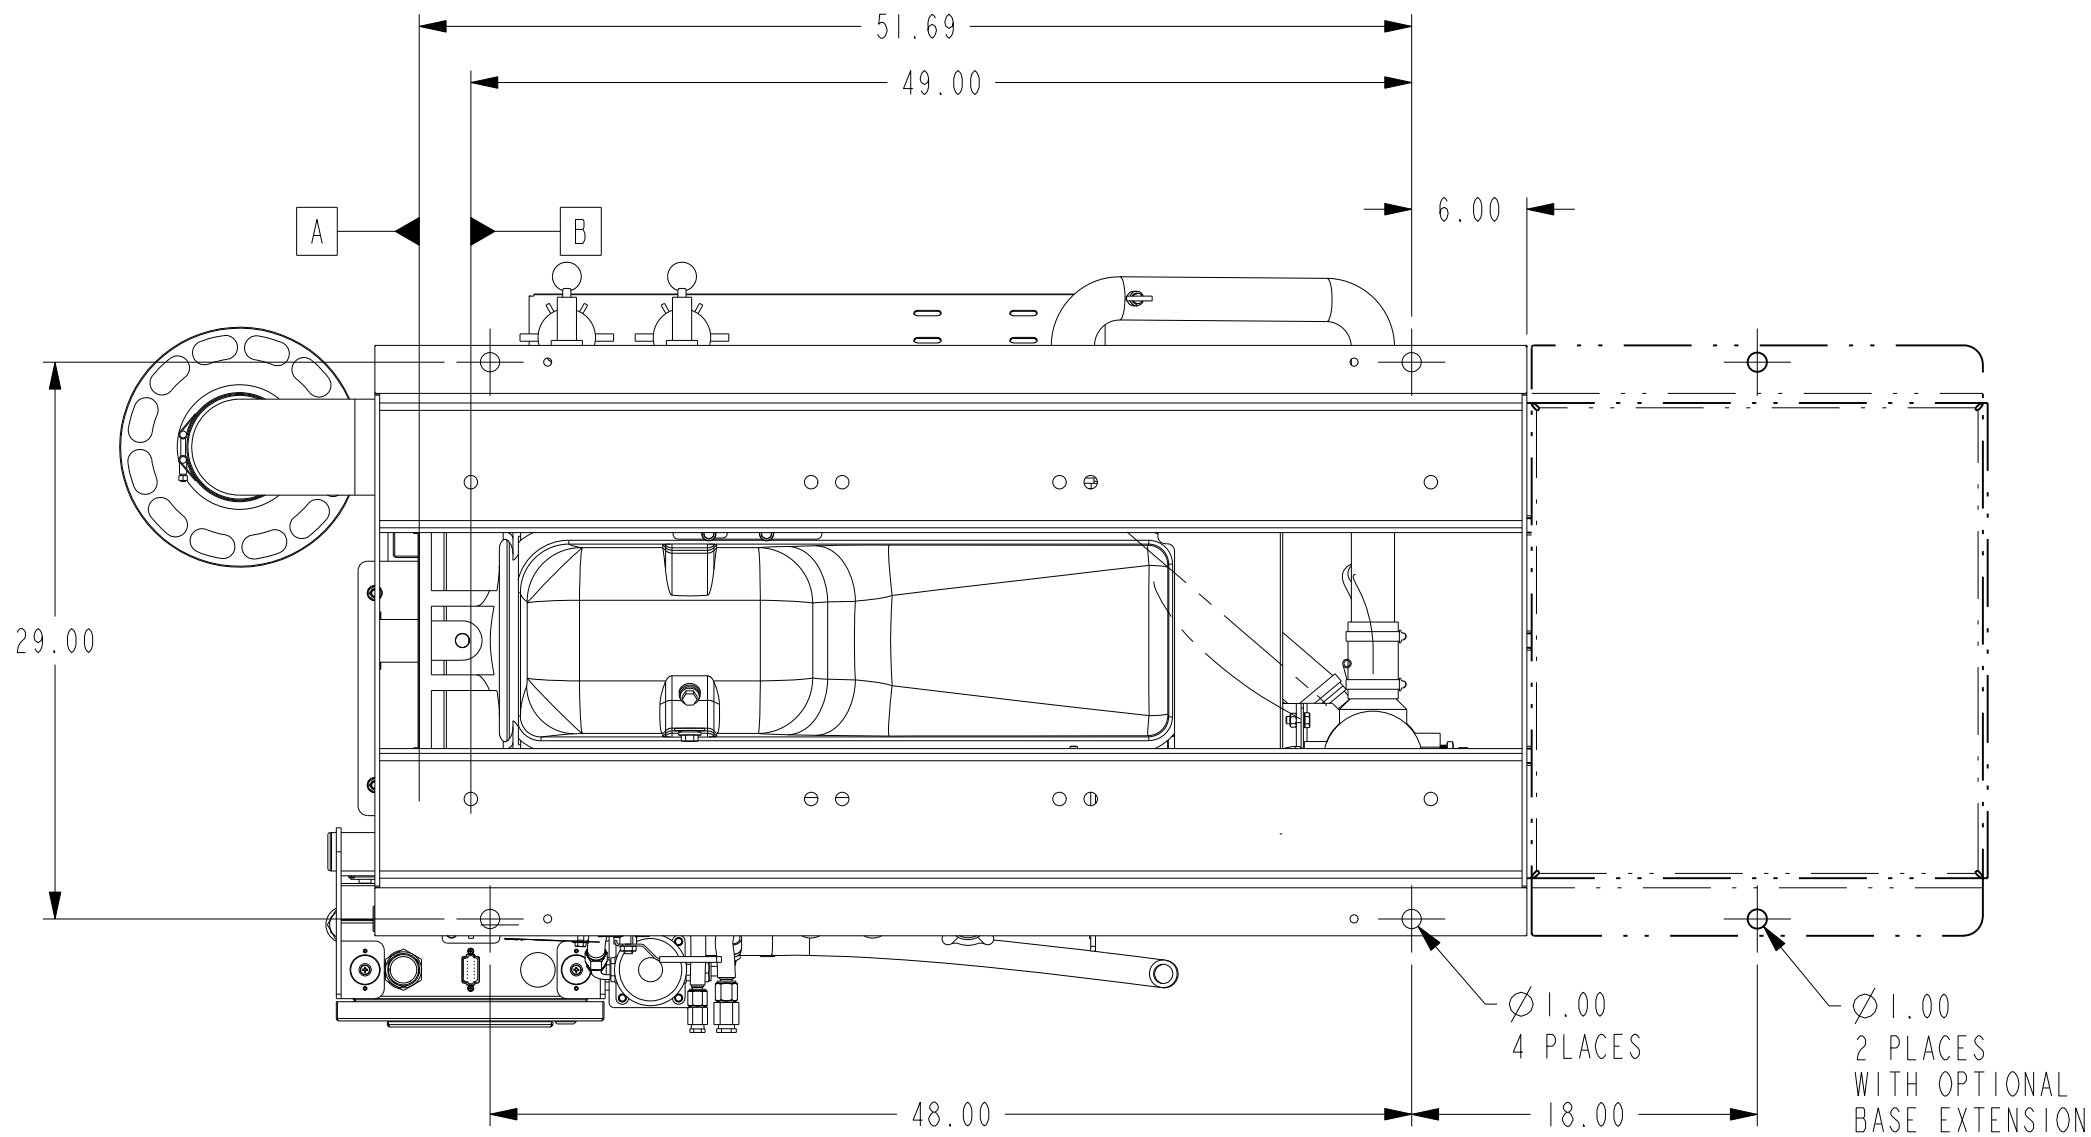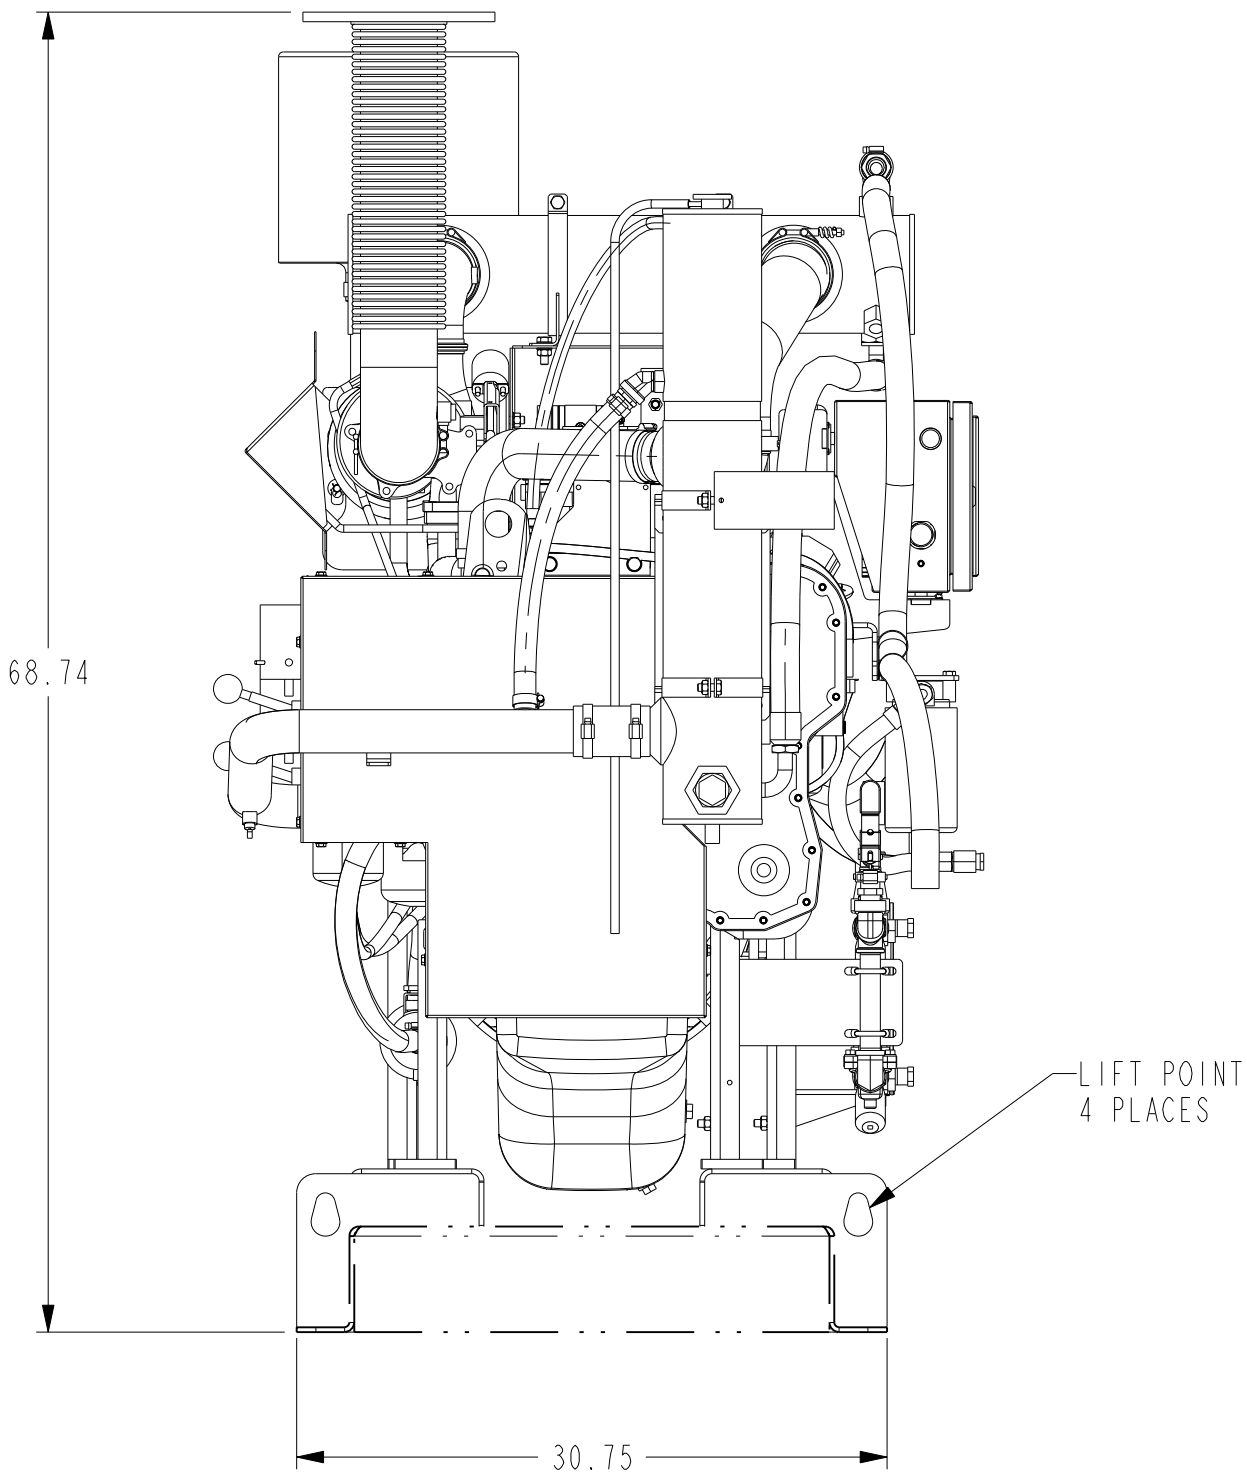
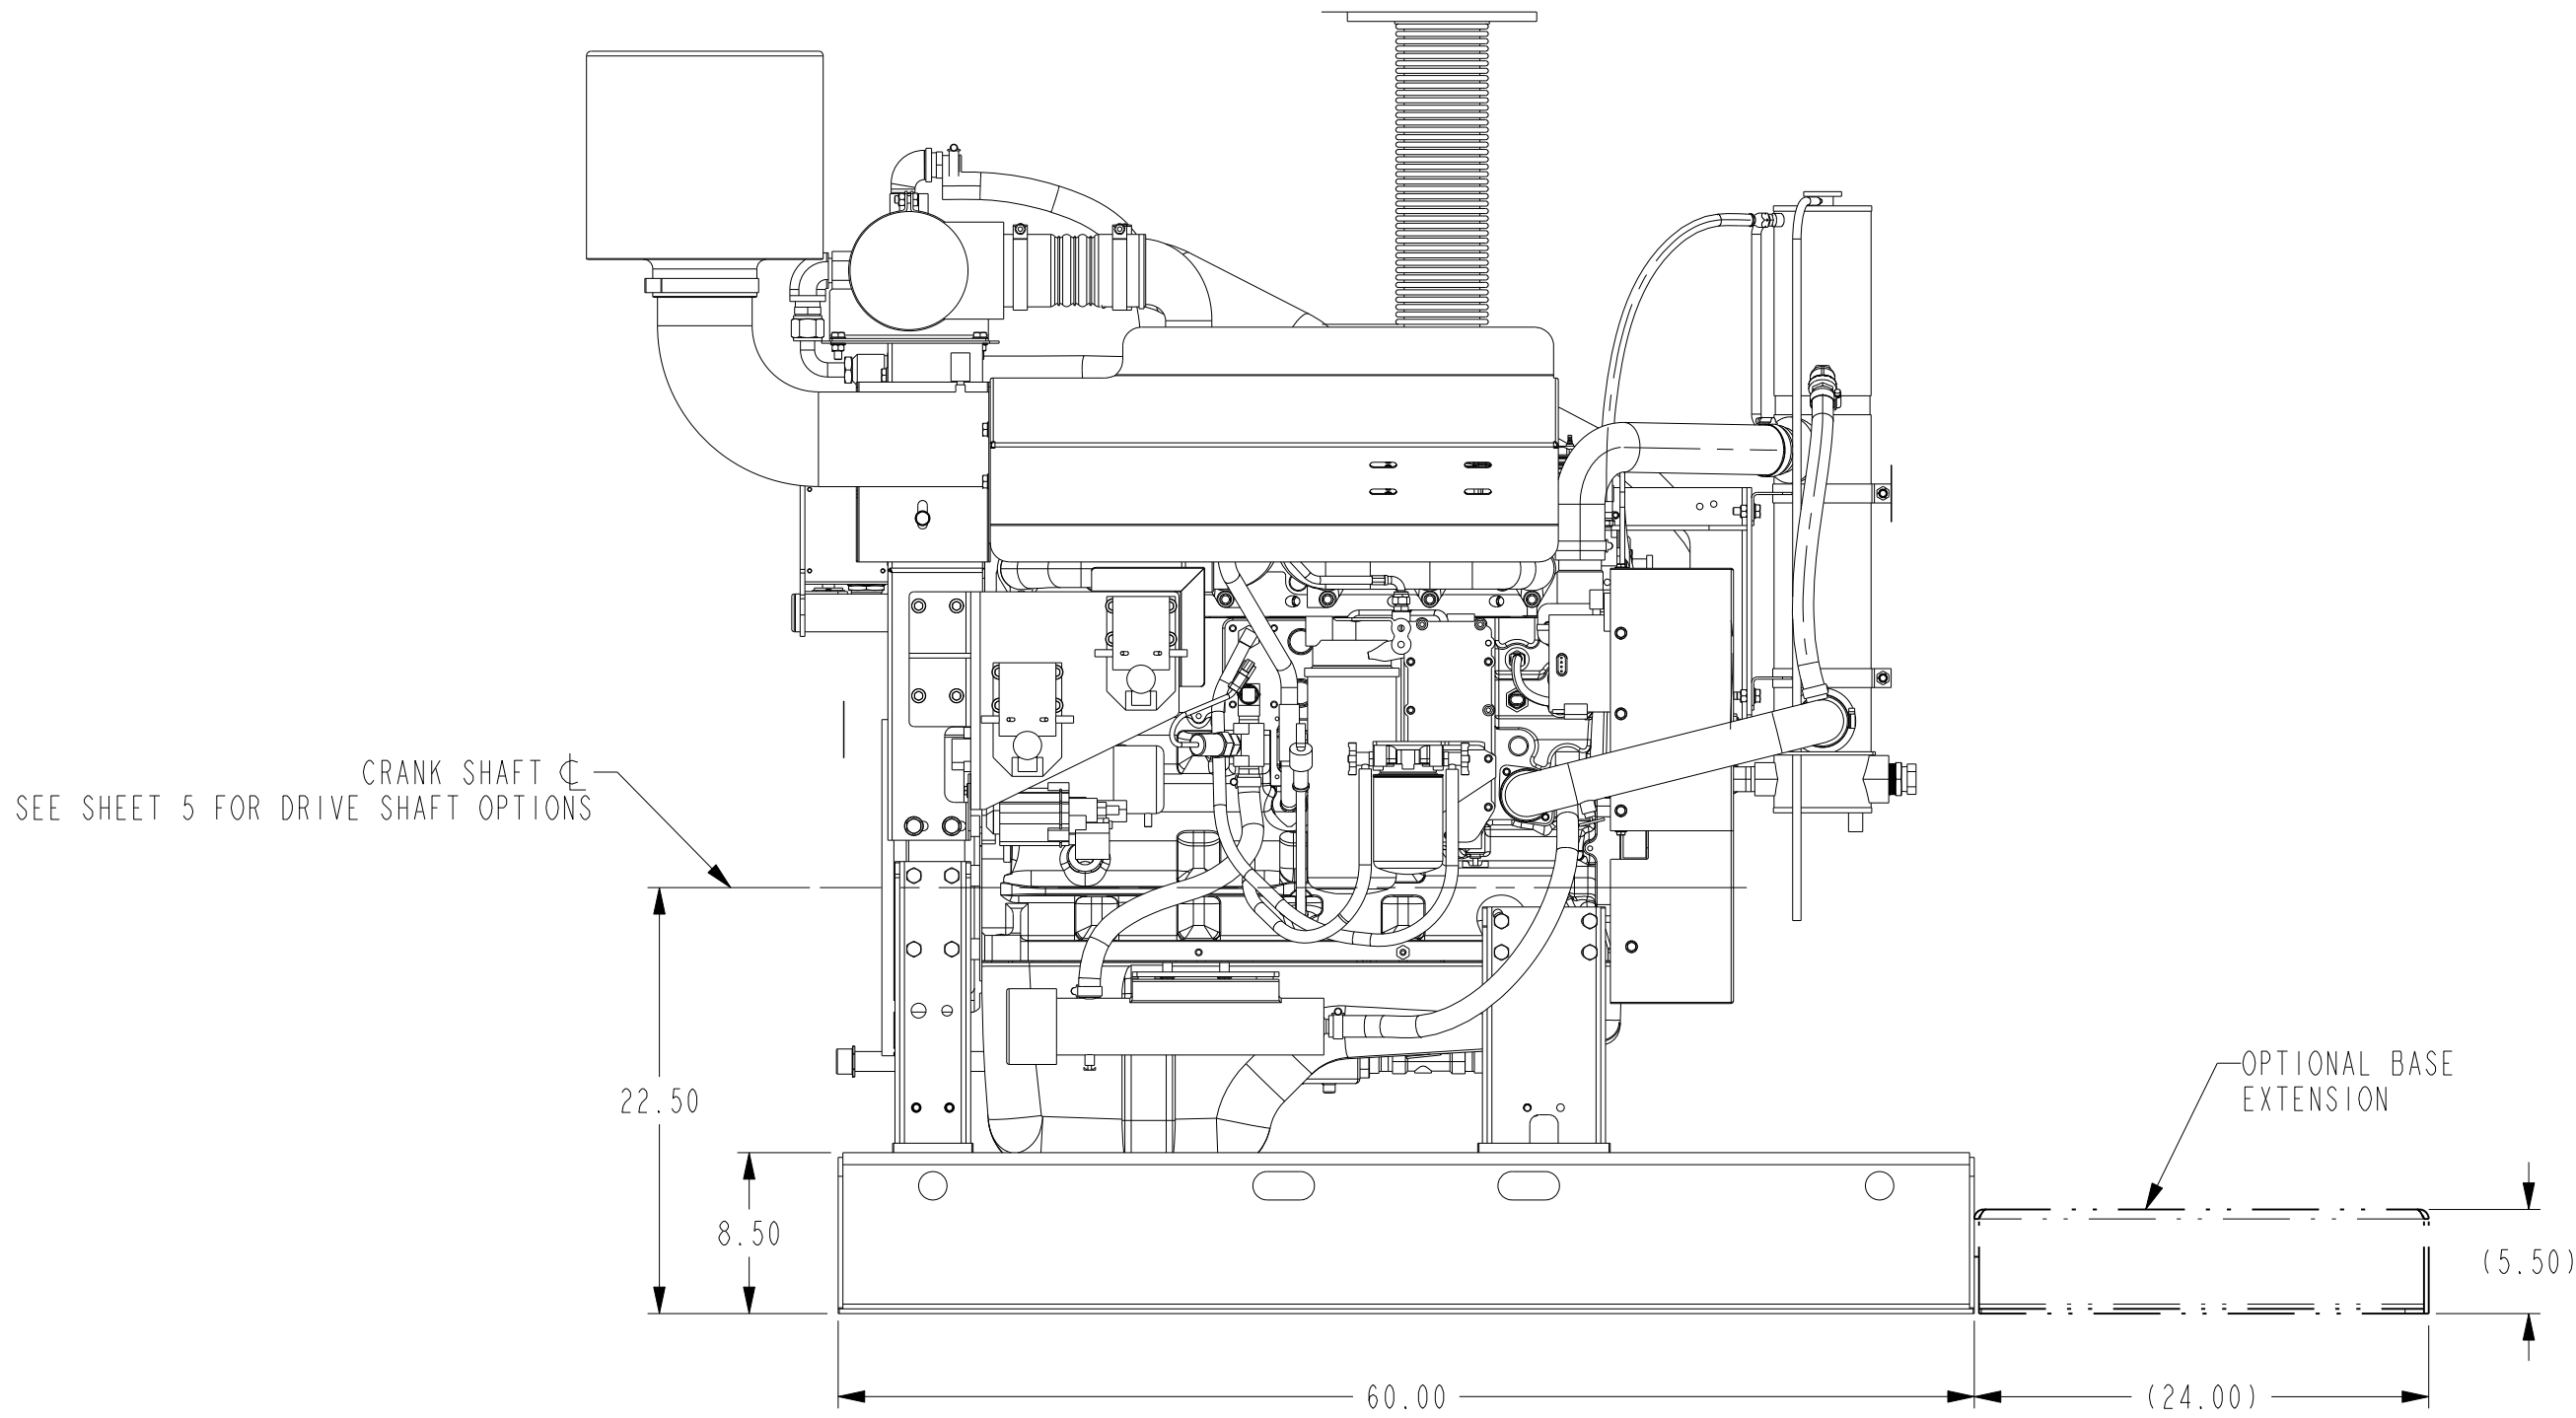


- NOTES:
1. TORSIONAL ANALYSIS REQUIRED FOR VERTICAL TUBINE INSTALLATION
 2. REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
 3. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.
 4. REFERENCE SHEET 1 FOR BASE FIREPUMP INTERFACE


This document contains confidential and trade secret information, is the property of Cummins Fire Power, LLC and is given in confidence, to and received by the recipient in confidence. It is to be used only for the purpose intended and is not to be distributed, copied, or otherwise used without the express written permission of Cummins Fire Power, LLC. If this document is to be used for any other purpose, the recipient must obtain the express written permission of Cummins Fire Power, LLC. If this document is to be used for any other purpose, the recipient must obtain the express written permission of Cummins Fire Power, LLC. If this document is to be used for any other purpose, the recipient must obtain the express written permission of Cummins Fire Power, LLC.			
ANGULAR DIMENSIONS \pm 1°	MACHINED SURFACES	IMPERIAL UNITS IN/LB/S	METRIC UNITS MM/KG
THIRD ANGLE PROJECTION	125	FORM TOLERANCE 0.005 IN/0.127 MM	FORM TOLERANCE 0.127 MM/0.005 IN

Cummins Fire Power		CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 DUBUQUE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPGRADE CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
GENERAL ARRANGEMENT CFP9E-F10/F20/F30/F40/F50/F60		DWG UNITS: IN/LB/S SCALE: 0.100 EST WEIGHT: 42238.628	DRAWN BY: PBS PRO-ENGINEER SHEET 3 OF 5 DATE: 12NOV2013 INIT ECO: 2013-662 DRAWING NO: 26728


REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

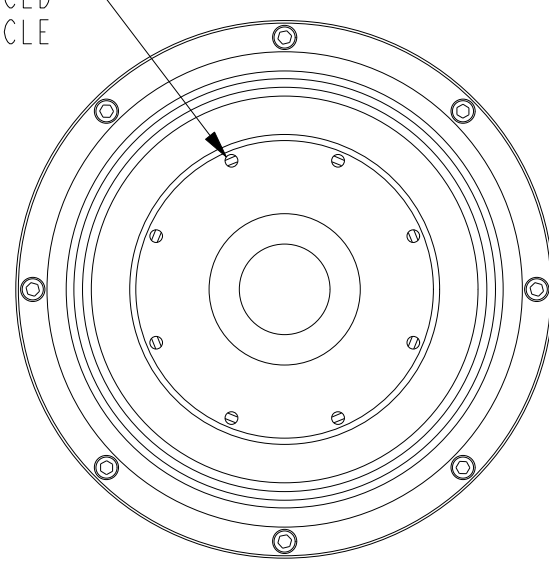

TORSIONAL COUPLING FOR 1710 DRIVE SHAFT




TORSIONAL COUPLING FOR 1710/1810 DRIVE SHAFT



U-JOINT ADAPTER FOR 1710 DRIVE SHAFT



U-JOINT ADAPTER FOR 1710 DRIVE SHAFT




U-JOINT ADAPTER FOR 1810 DRIVE SHAFT

U-JOINT ADAPTER FOR 1810 DRIVE SHAFT



U-JOINT ADAPTER FOR 1810 DRIVE SHAFT



U-JOINT ADAPTER FOR 3172 DRIVE SHAFT

U-JOINT ADAPTER FOR 3172 DRIVE SHAFT


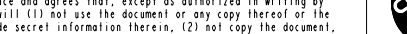
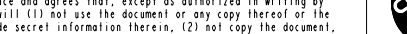
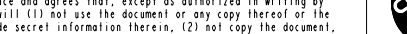


LEGEND AND DATUM IDENTIFIER



SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	U-JOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

SHEET 4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	U-JOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

DATUM "EOS"	END OF PUMP SHAFT
-------------	-------------------



<p>The document contains confidential and trade secret information, is the property of Cummings Fire Power LLC, and is not to be distributed, copied, reproduced, retransmitted, or otherwise made available to the public. The recipient of this document is authorized to use it for the purpose for which it was provided. The recipient shall not use the information contained herein for any other purpose, and shall not disclose the information contained herein to any third party. The recipient shall be responsible for the protection of this information and shall ensure that it is not disclosed to any unauthorized person. If the recipient is not the intended recipient, the recipient shall notify Cummings Fire Power LLC immediately and shall delete the information from the system. If the recipient is a government agency, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a contractor, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a subcontractor, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a supplier, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a customer, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a partner, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is an affiliate, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a joint venturer, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a licensee, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a franchisee, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a distributor, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a sales agent, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a broker, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a dealer, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a wholesaler, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a retailer, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a manufacturer, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a service provider, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a consultant, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is an advisor, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a representative, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is an agent, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a partner, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is an affiliate, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a joint venturer, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a licensee, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a franchisee, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a distributor, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a sales agent, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a broker, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a dealer, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a wholesaler, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a retailer, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a manufacturer, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a service provider, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a consultant, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is an advisor, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is a representative, the recipient shall ensure that the information is not disclosed to any unauthorized person. If the recipient is an agent, the recipient shall ensure that the information is not disclosed to any unauthorized person.</p>		<p>CUMMINS FIRE POWER LLC CORPORATE OFFICE 10000 W. WISCONSIN AVE WHITE RIVER LAKE, WI WWW.CUMMINSFIREPOWER.COM</p>	<p>CUSTOM DESIGN AND UPFIT CENTER 10000 W. WISCONSIN AVE WHITE RIVER LAKE, WI DEPERE, WISCONSIN</p>				
<p>GENERAL ARRANGEMENT CFP9E-F10/F20/F30/F40/F50/F60</p> <table border="1"> <tr> <td data-bbox="2455 1862 2648 1878"> <p>ANGULAR DIMENSIONS: ± 1° THIRD ANGLE PROJECTION</p>  </td> <td data-bbox="2648 1862 2778 1878"> <p>DWG UNITS: IN./LBS/5 SCALE: 0.100 EST WEIGHT: 42338.628</p> </td> <td data-bbox="2778 1862 2909 1878"> <p>DRAWN BY: PBS PRO-ENGINEER SHEET 4 OF 5</p> </td> <td data-bbox="2909 1862 2971 1878"> <p>DATE: 12NOV2013 INIT CEC: 2013-662</p> </td> </tr> </table>				<p>ANGULAR DIMENSIONS: ± 1° THIRD ANGLE PROJECTION</p> 	<p>DWG UNITS: IN./LBS/5 SCALE: 0.100 EST WEIGHT: 42338.628</p>	<p>DRAWN BY: PBS PRO-ENGINEER SHEET 4 OF 5</p>	<p>DATE: 12NOV2013 INIT CEC: 2013-662</p>
<p>ANGULAR DIMENSIONS: ± 1° THIRD ANGLE PROJECTION</p> 	<p>DWG UNITS: IN./LBS/5 SCALE: 0.100 EST WEIGHT: 42338.628</p>	<p>DRAWN BY: PBS PRO-ENGINEER SHEET 4 OF 5</p>	<p>DATE: 12NOV2013 INIT CEC: 2013-662</p>				

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

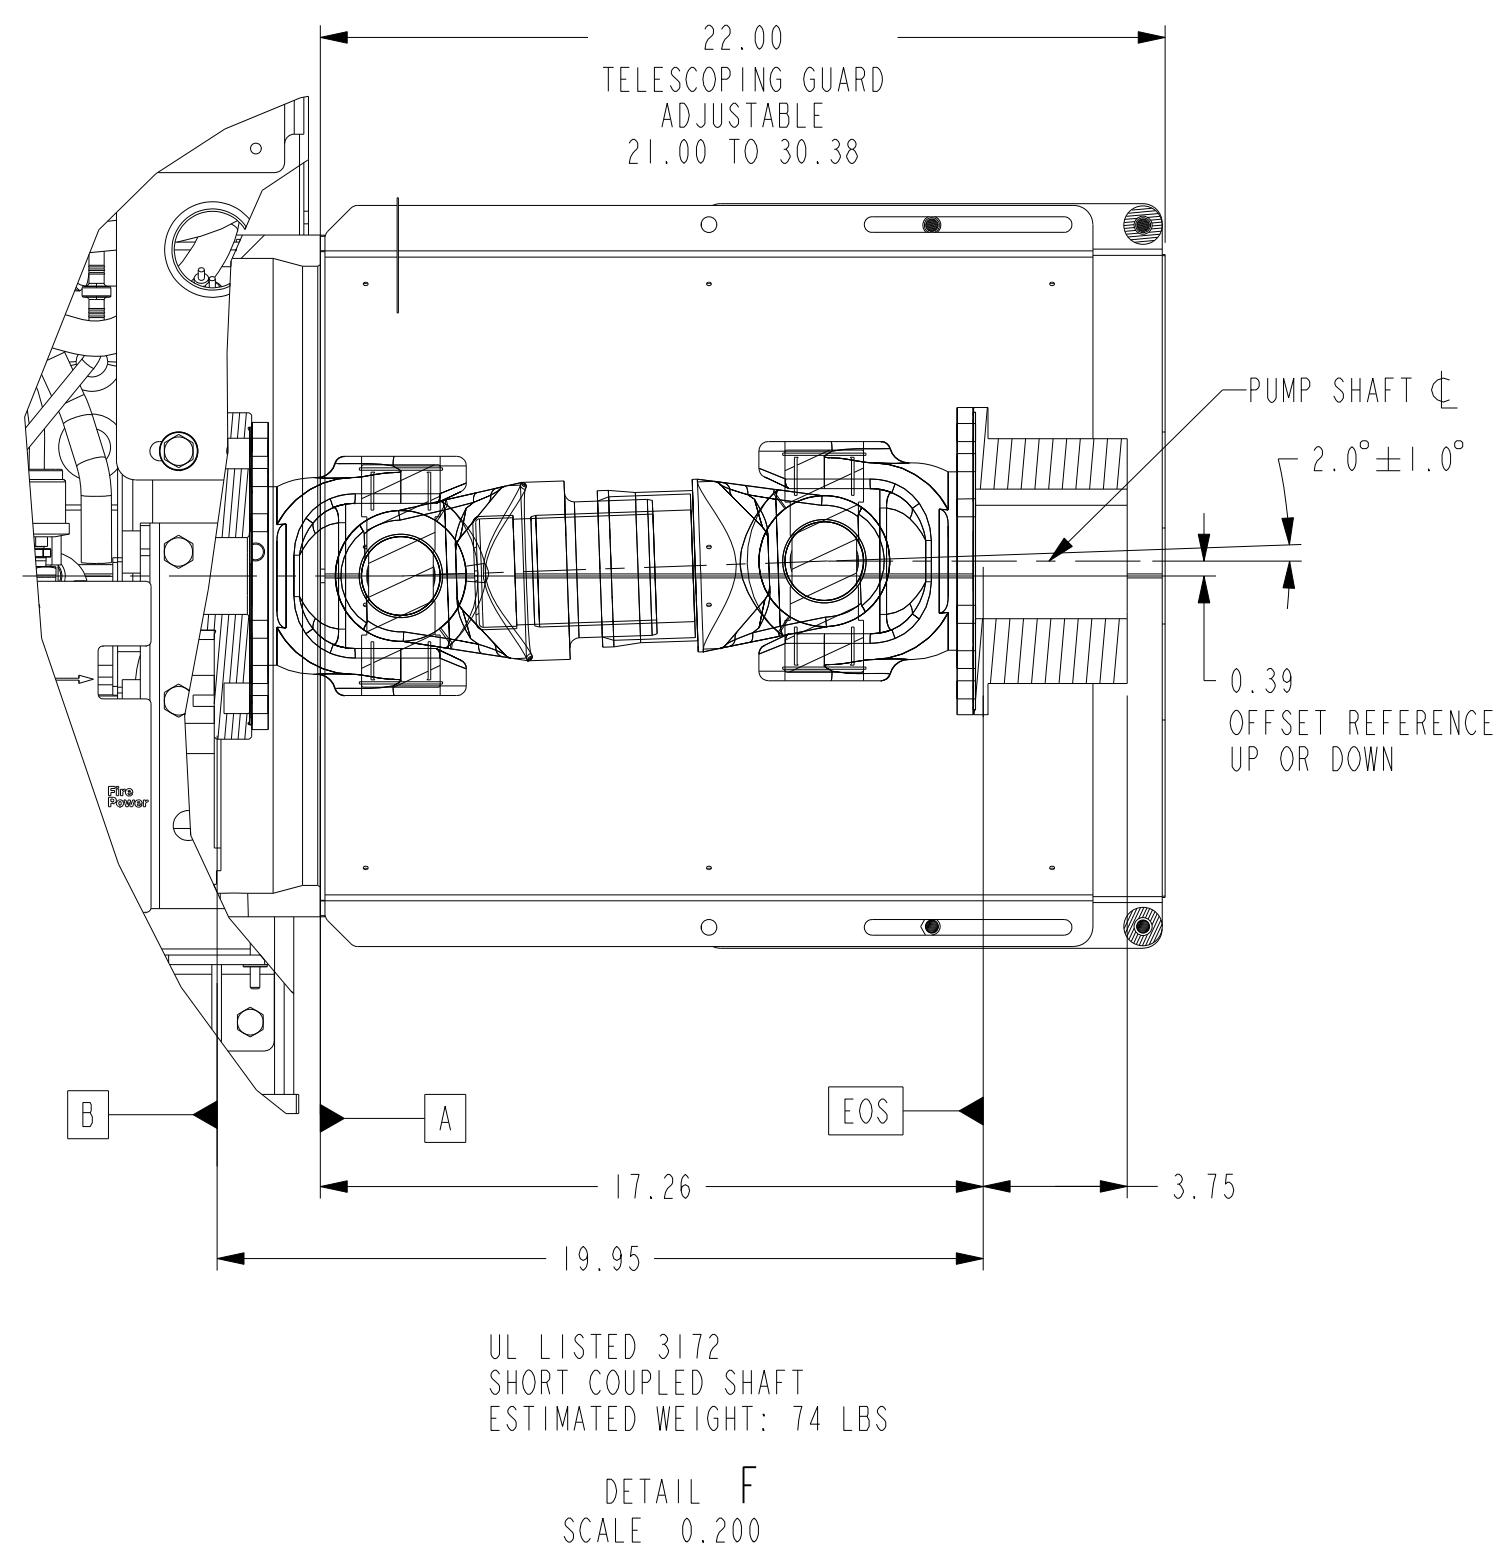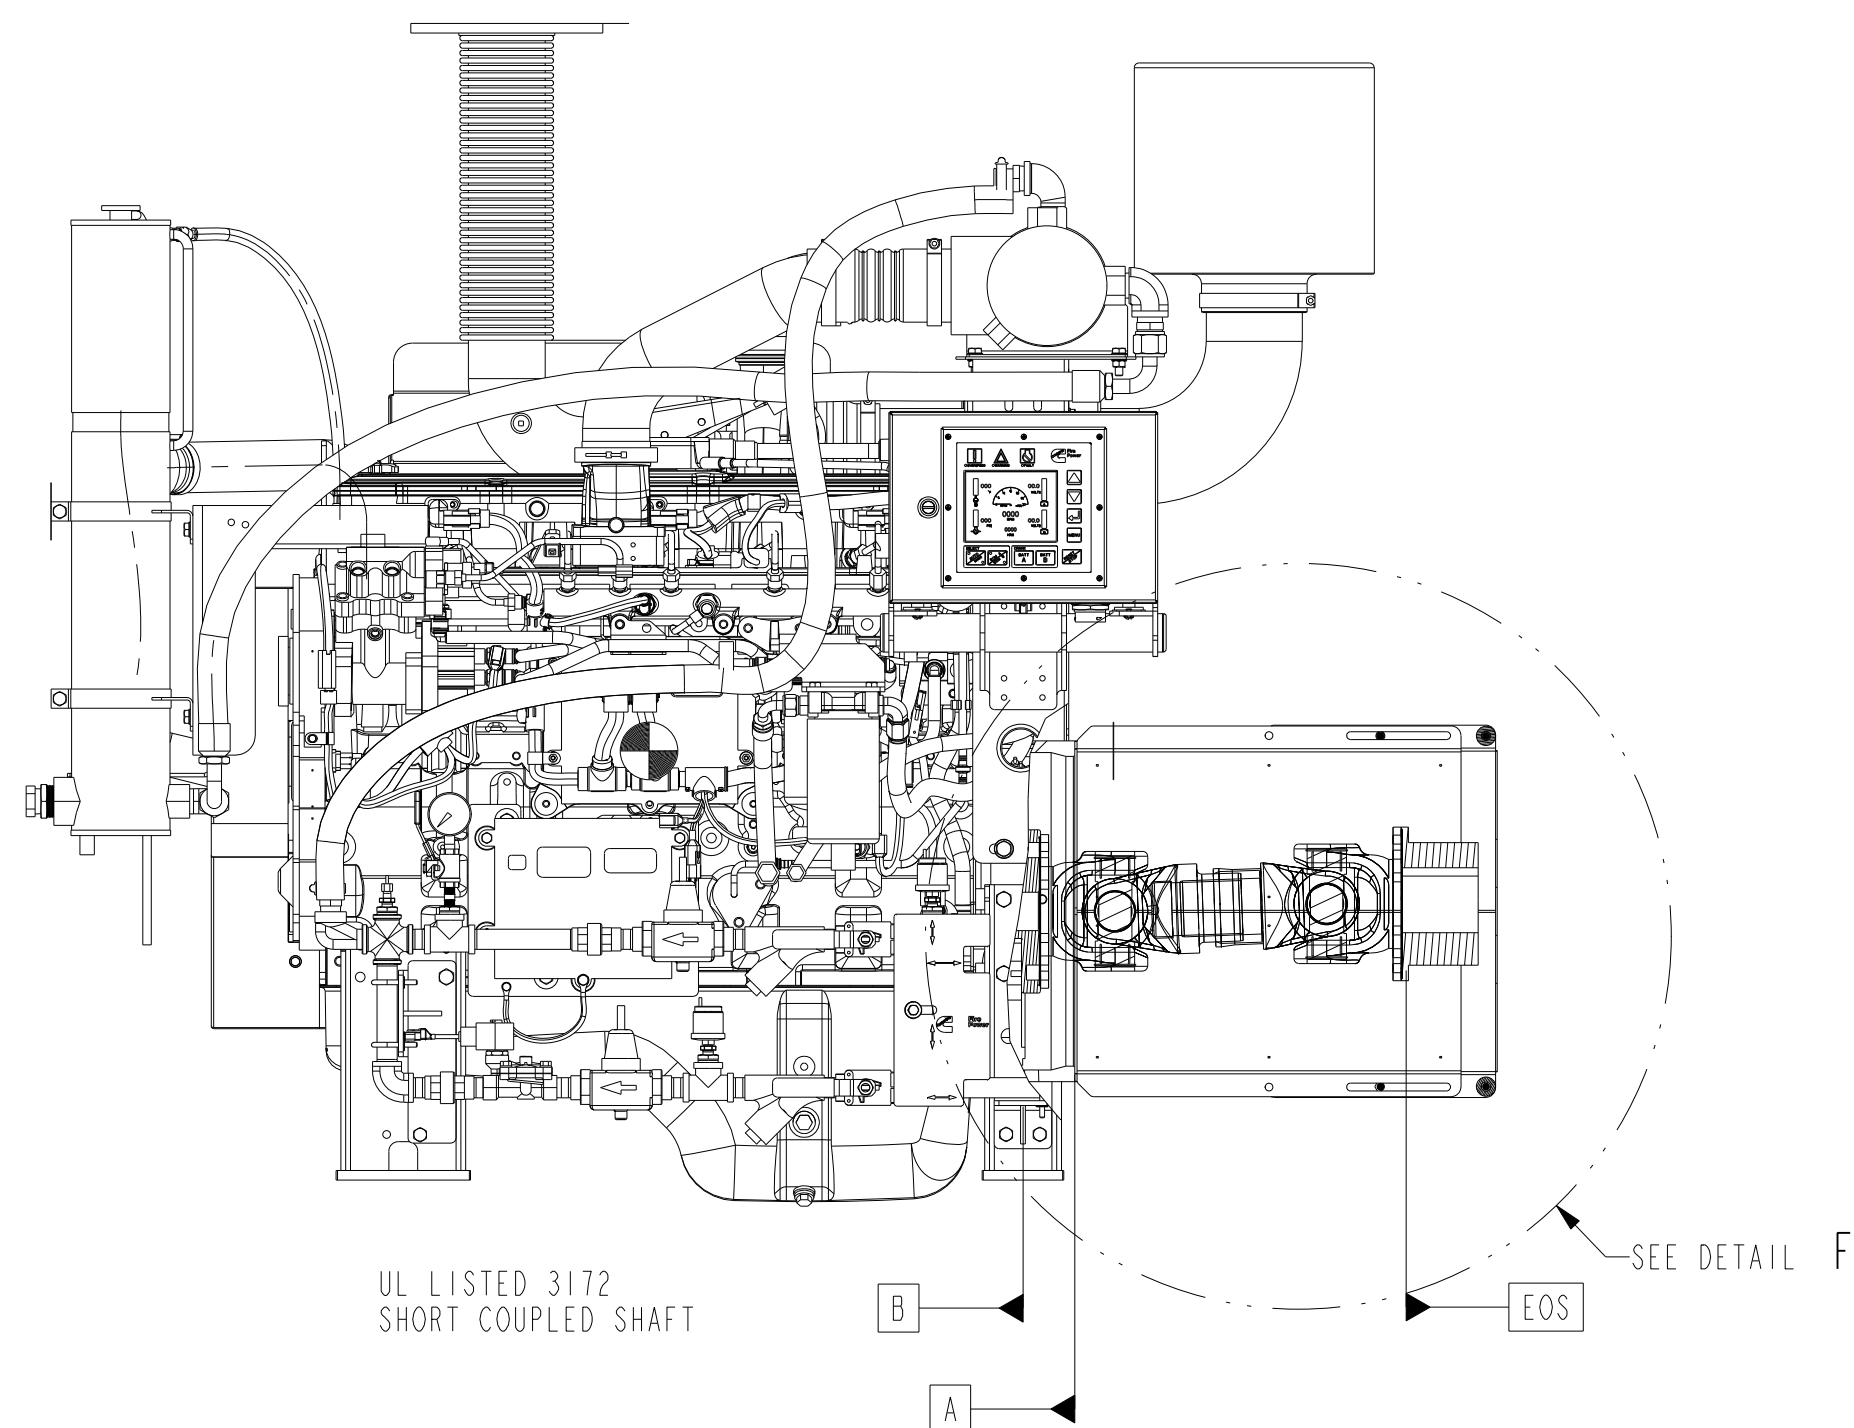

CFP DRIVE SHAFT MATRIX					
ENGINE MODELS	CFP F-RATINGS WITH MULTIPLE SHAFTS				
	RPM 1470	RPM 1760	RPM 1900	RPM 2100	RPM 2300
CFP9E-F10	1710 SHAFT	1710 SHAFT	1710 SHAFT	1710 SHAFT	1710 SHAFT
CFP9E-F20	1810 SHAFT	1810 SHAFT	1810 SHAFT	1710 SHAFT	1710 SHAFT
CFP9E-F30	1810 SHAFT	1810 SHAFT	1810 SHAFT	1710 SHAFT	1710 SHAFT
CFP9E-F40	1810 SHAFT	1810 SHAFT	1810 SHAFT	1710 SHAFT	1710 SHAFT
CFP9E-F50	3172 SHAFT	3172 SHAFT	1810 SHAFT	1810 SHAFT	1710 SHAFT
CFP9E-F60	3172 SHAFT	3172 SHAFT	NON LISTED 1810 SHAFT	1810 SHAFT	1710 SHAFT

[illegible]

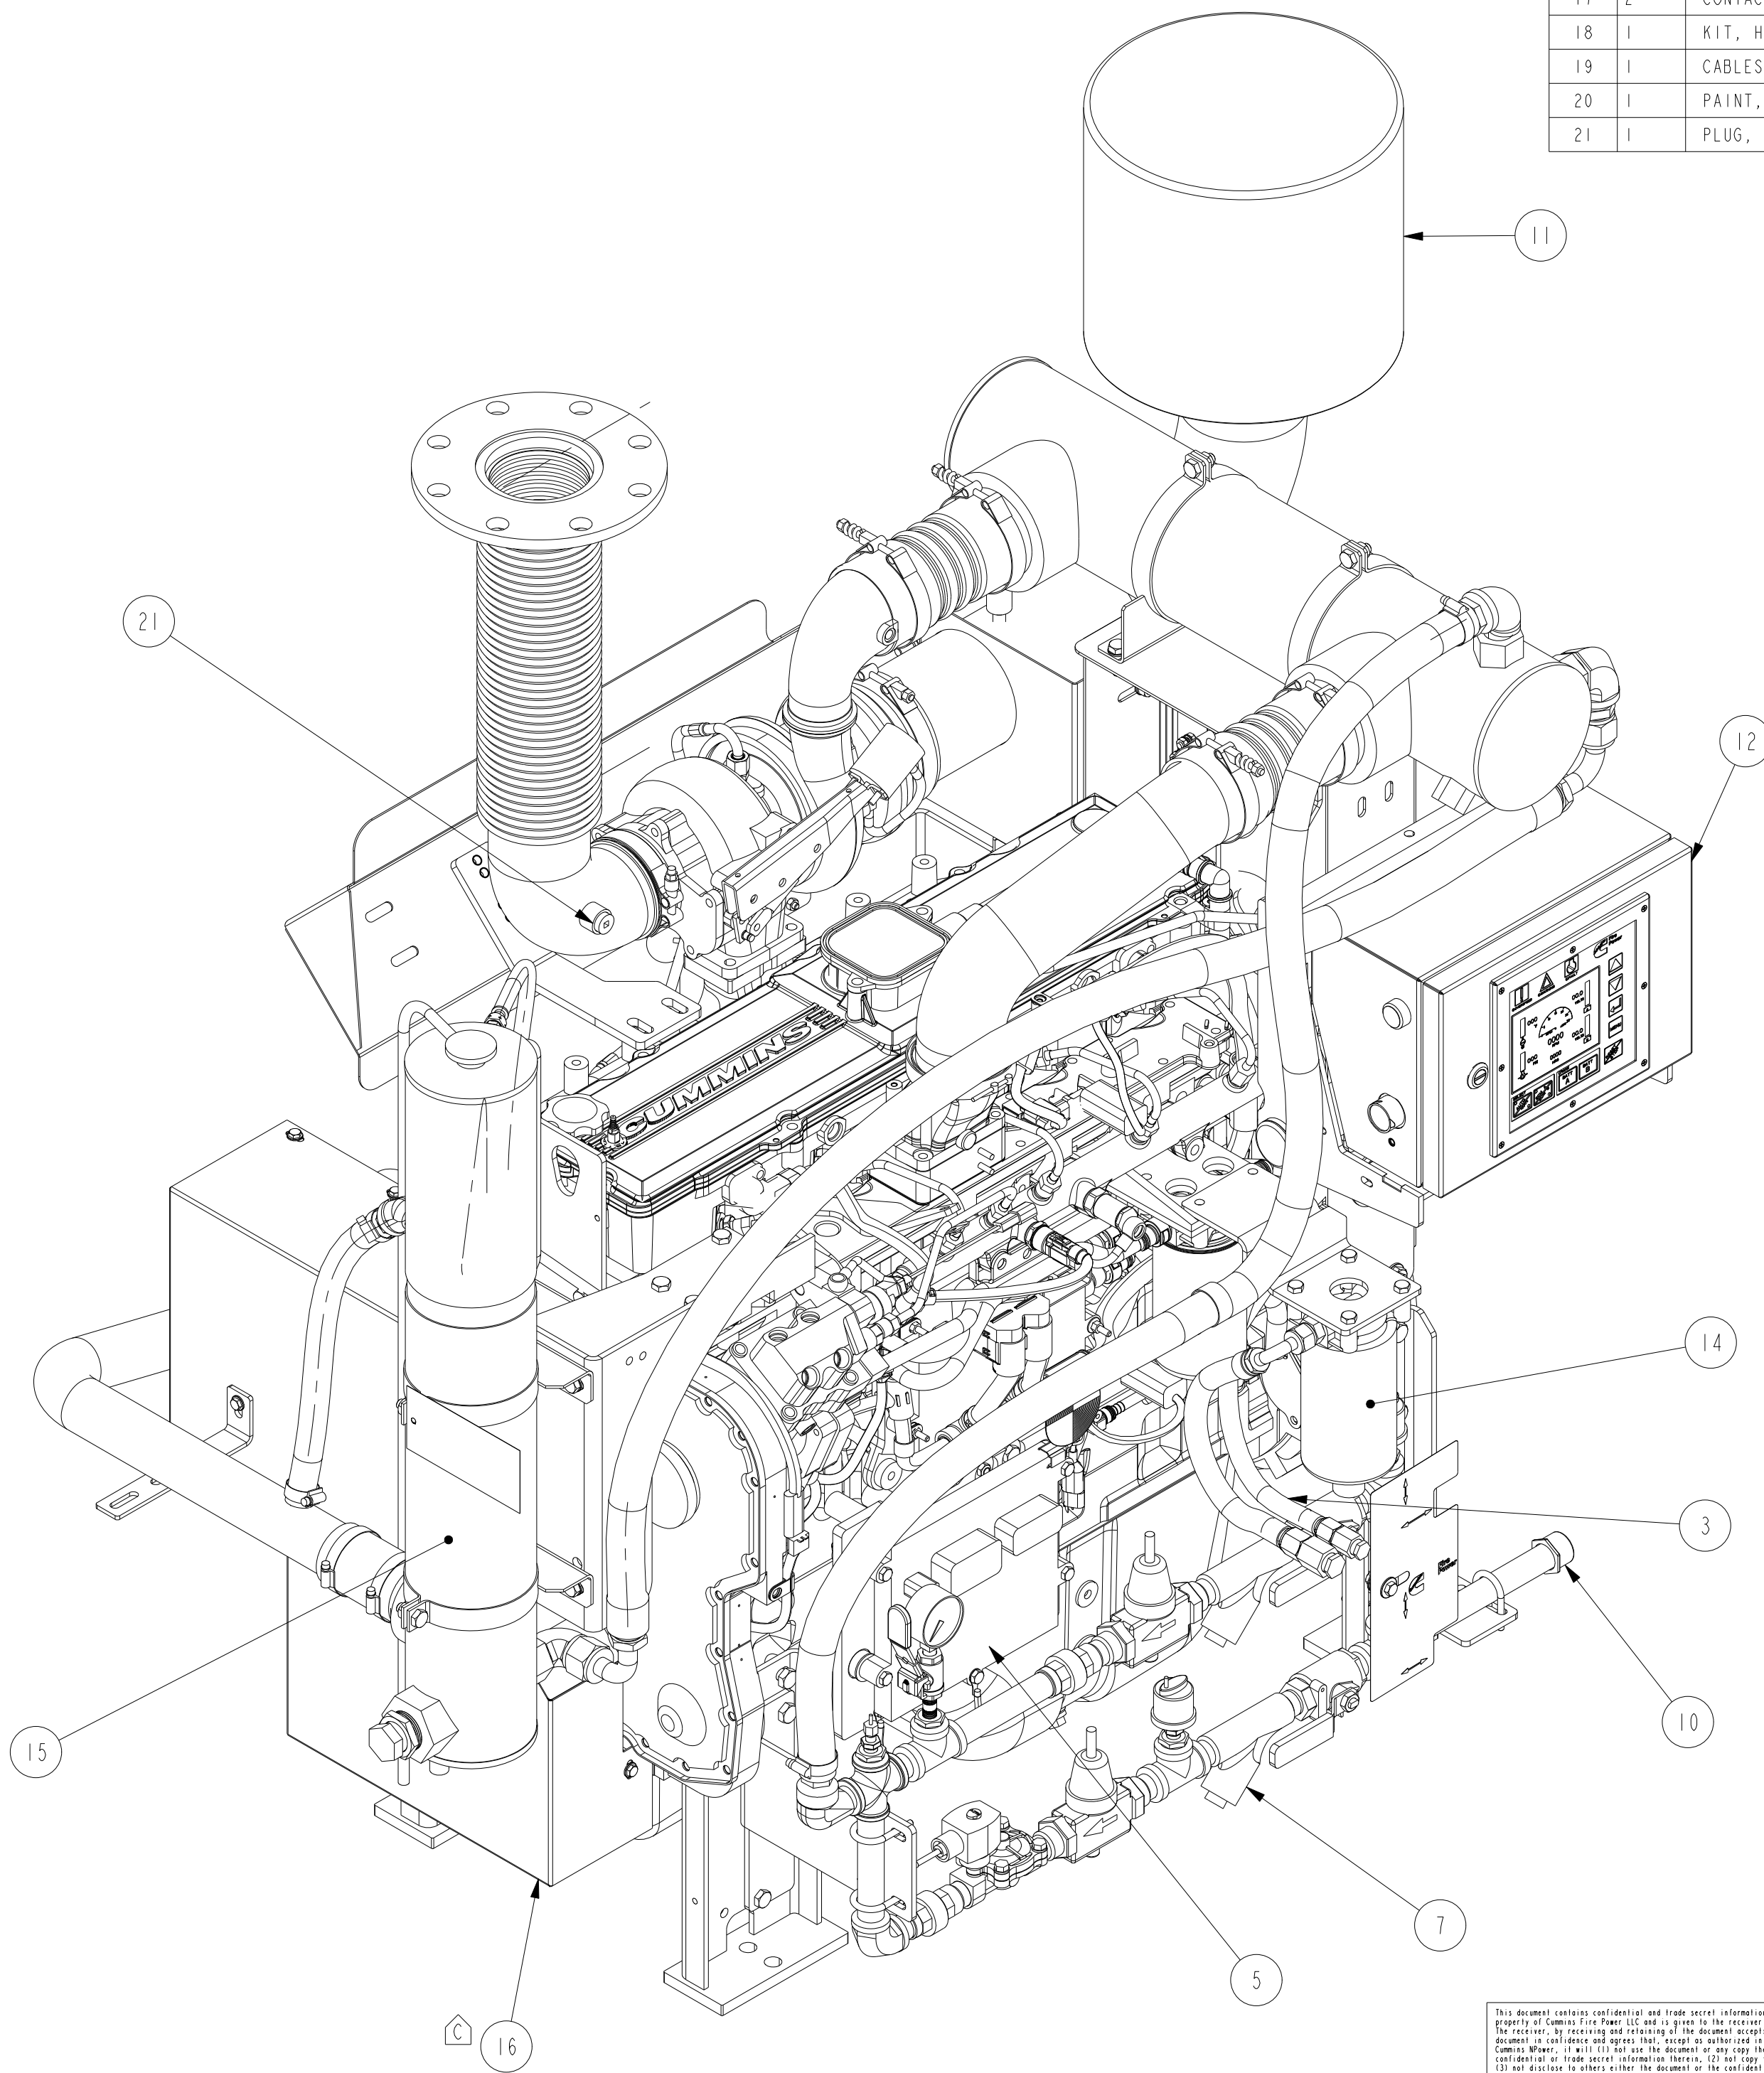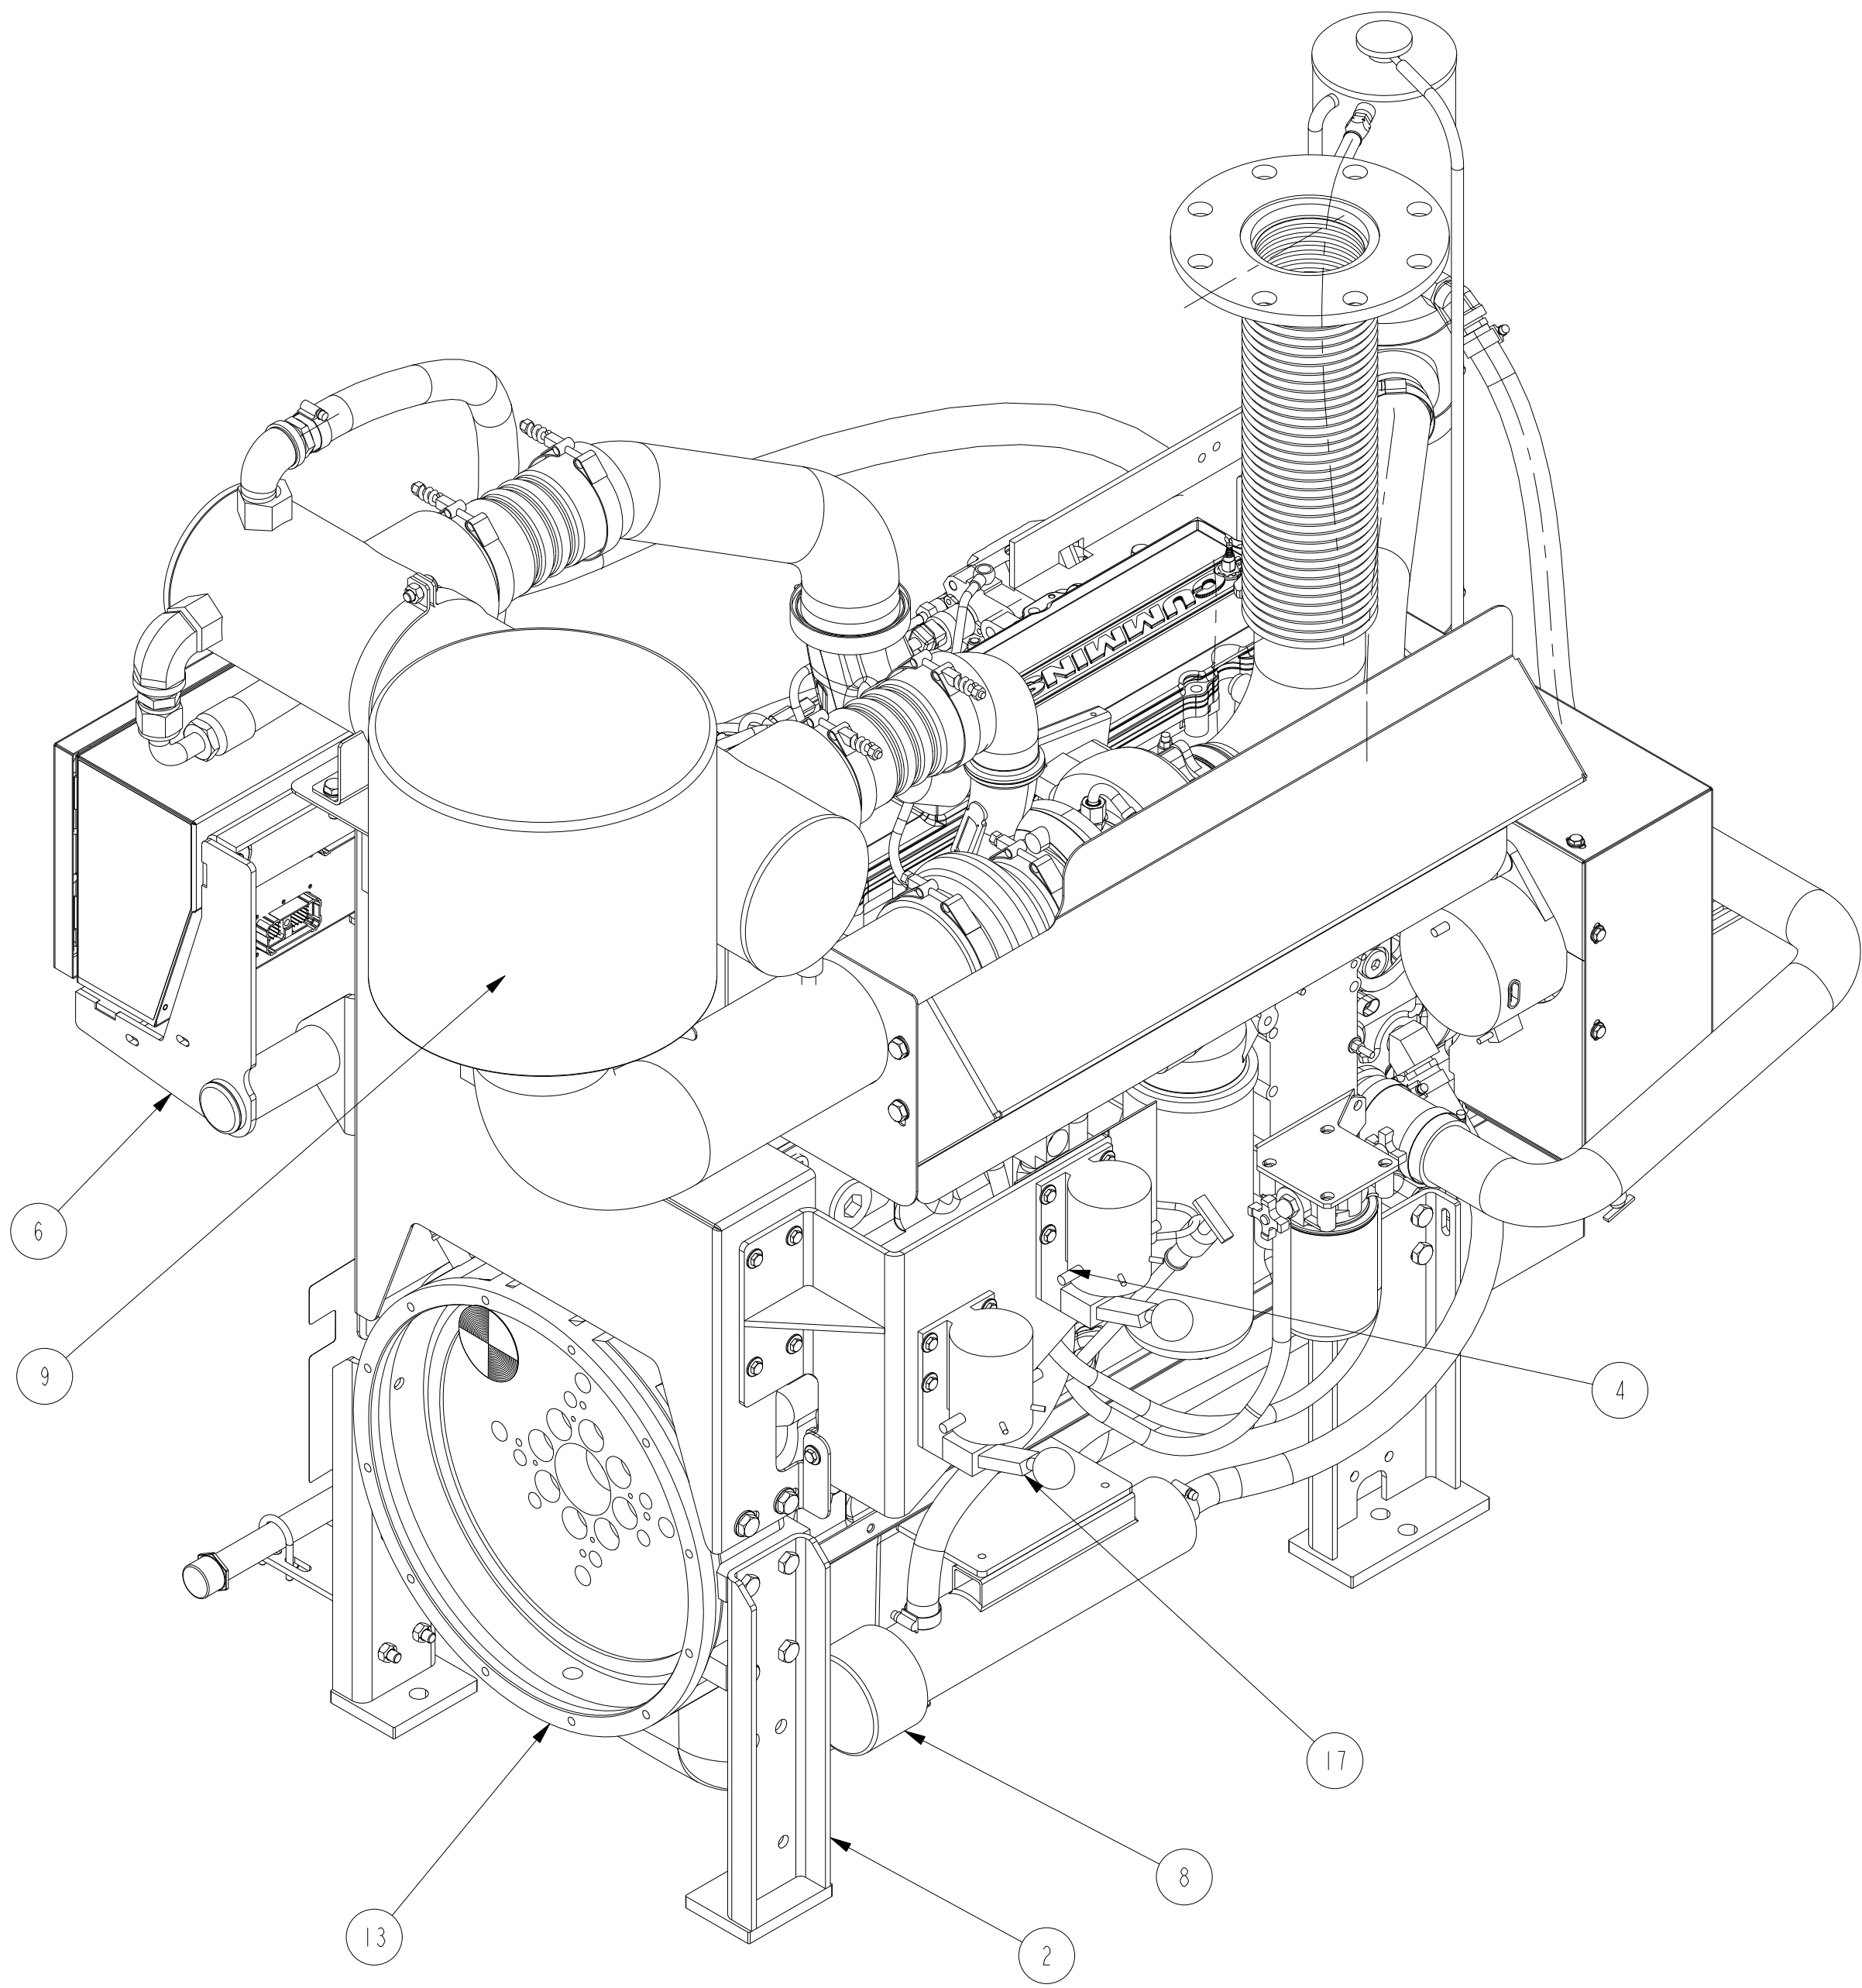

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	EXHAUST, 90° HALF MARMON, 4" TURBO OUT, 5" 125LB ANSI FLANGE	8780_04
2	1	ASSEMBLY, MOUNTING LEGS, CFP9E	8907
3	1	KIT, FUEL LINES, CFP9E, F10/20/30/40/50/60 - EXT ONLY	15208
4	1	KIT, SENSOR & ADAPTER, CFP9E	15602
5	1	ASSEMBLY, SECONDARY ECM, CFP9E	15613
6	1	ASSEMBLY, CONTROL PANEL MOUNTING, CFP POWER UNITS	21249
7	1	COOLING LOOP, 3/4" ,12V, RAW WATER	21509
8	1	HEATER, COOLANT, ASSEMBLY, CFP9E	23526
9	1	ASSEMBLY, HEAT EXCHANGER SUPPORT, CFP9E	24834
10	1	MISC PIPING, RAW WATER, CFP9E	24836
11	1	ASSEMBLY, AIR INTAKE, CFP9E	26553
12	1	CONTROL ASSEMBLY, FPDP ELECTRONIC CARBON STEEL	26764
13	1	ASSEMBLY,ENGINE,12V, CFP9E-F10/20/30/40/50/60	26775
14	1	ASSY, FUEL PREFILTER, CFP9E	A042A379
15	1	ASSY,HEAT EXCHANGER,RAW WATER, CFP9E	A042A471
16	1	ASSEMBLY, GUARDING, CFP9E, 12VDC	A042B446
17	2	CONTACTOR, MANUAL OVERRIDE, 12V, PN:535-0127, FIREPUMP	8824-12
18	1	KIT, HARNESS, CFP9E	23931
19	1	CABLES, BATTERY, CFP5E, 7E, 9E, 11E	24234
20	1	PAINT, SPRAY BOMB, CUMMINS RED	A15730-A12
21	1	PLUG, 1/2 NPT	LTL-SCSP12

This document contains confidential and trade secret information, is the property of Cummins Fire Power, LLC and is given in confidence. It is understood that the recipient will not disclose, copy, reproduce, or otherwise use this information without the express written consent of Cummins Fire Power, LLC. If you are not an authorized recipient, you are notified that disclosing, copying, reproducing, or otherwise using this information is strictly prohibited. If you are an authorized recipient, you are notified that disclosing, copying, reproducing, or otherwise using this information is strictly prohibited. If you are not an authorized recipient, you are notified that disclosing, copying, reproducing, or otherwise using this information is strictly prohibited. If you are an authorized recipient, you are notified that disclosing, copying, reproducing, or otherwise using this information is strictly prohibited.

Cummins Fire Power

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUELAKE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN




UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:

ANGULAR DIMENSIONS ± °	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
125	±.005	±.005	±.005
125	±.005	±.005	±.005

ASSEMBLY, FIREPUMP, 12V
CFP9E-F10/20/30/40/50/60

DWG UNITS: IN/LB/S	DRAWN BY: PBS	DATE: 23AUG2013
SCALE: 0.188	PRO-ENGINEER	INIT ECO: 2013-498
EST WEIGHT: 42238.628	SHEET 1 OF 3	DRAWING NO: 26112

C	2014-356	DELETED: 10920 ADDED: A042B446	PBS	21MAY2014
B	2014-049	REVISED AND RESTRUCTURED ASSEMBLIES	GVD	17FEB2014
A	2014-056	ITEM A042A311 WAS 15749 ITEM LTL-SCSP12 WAS LTL-SCSP14	GVD	29JAN2014
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

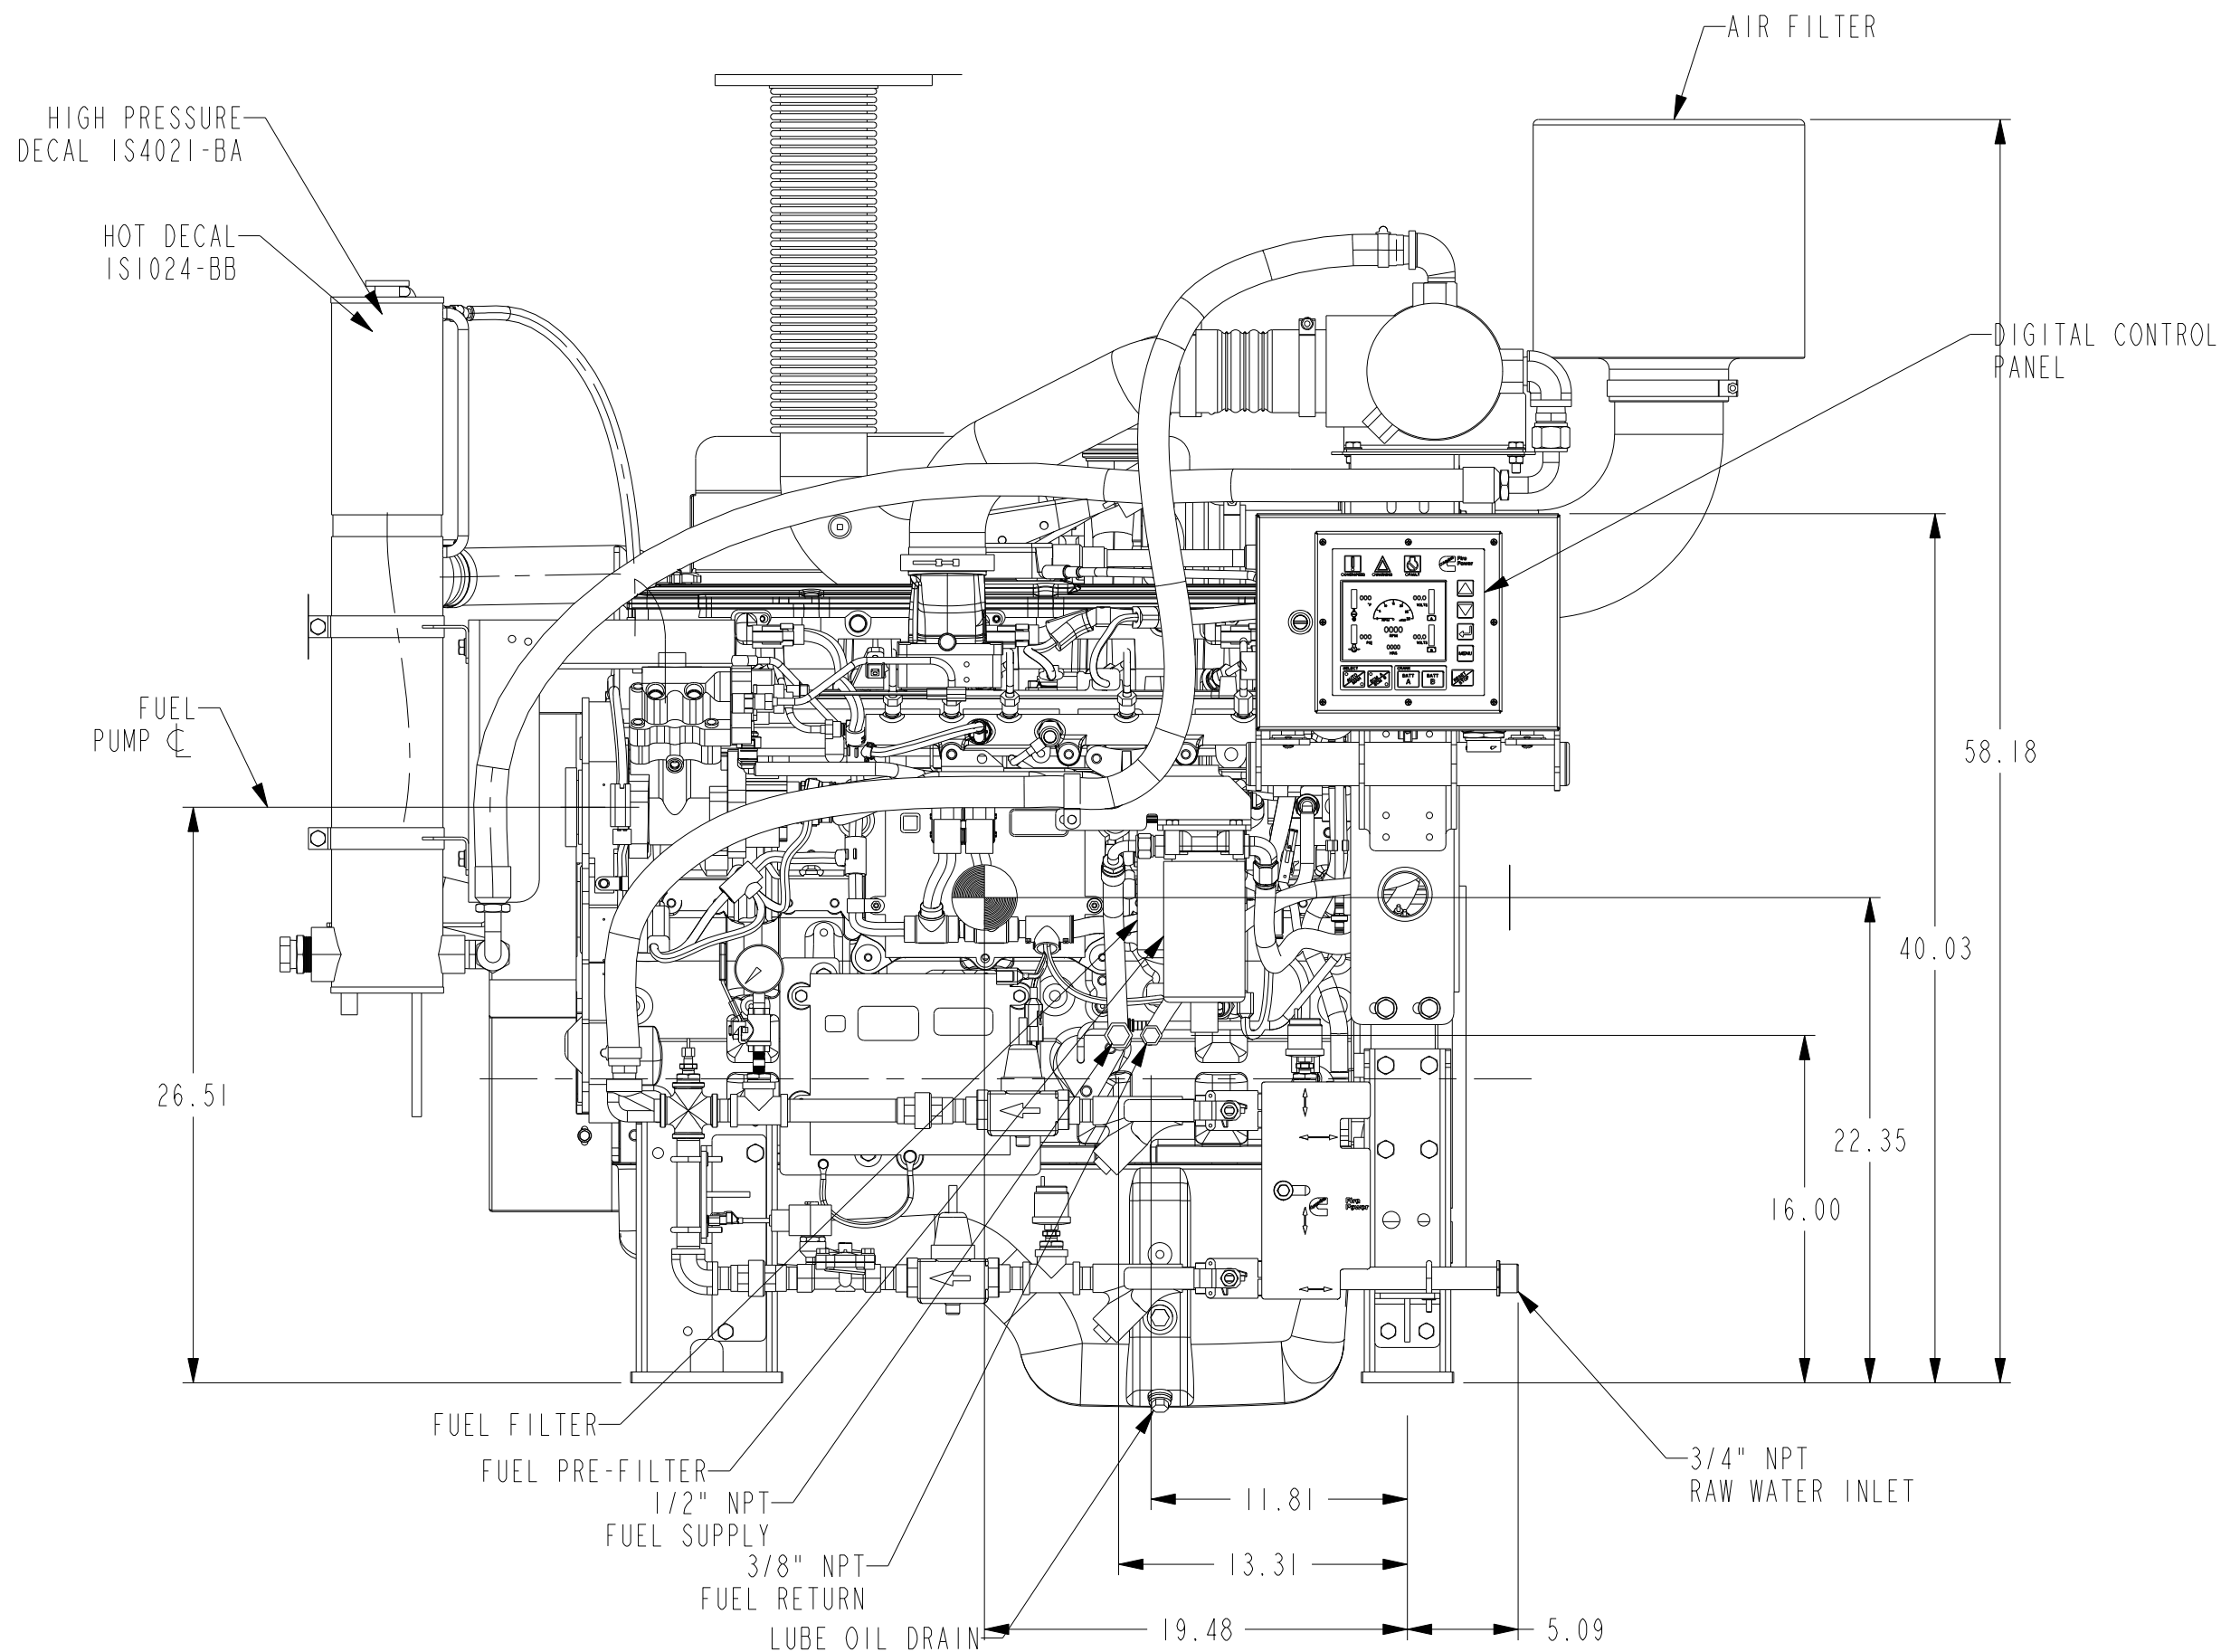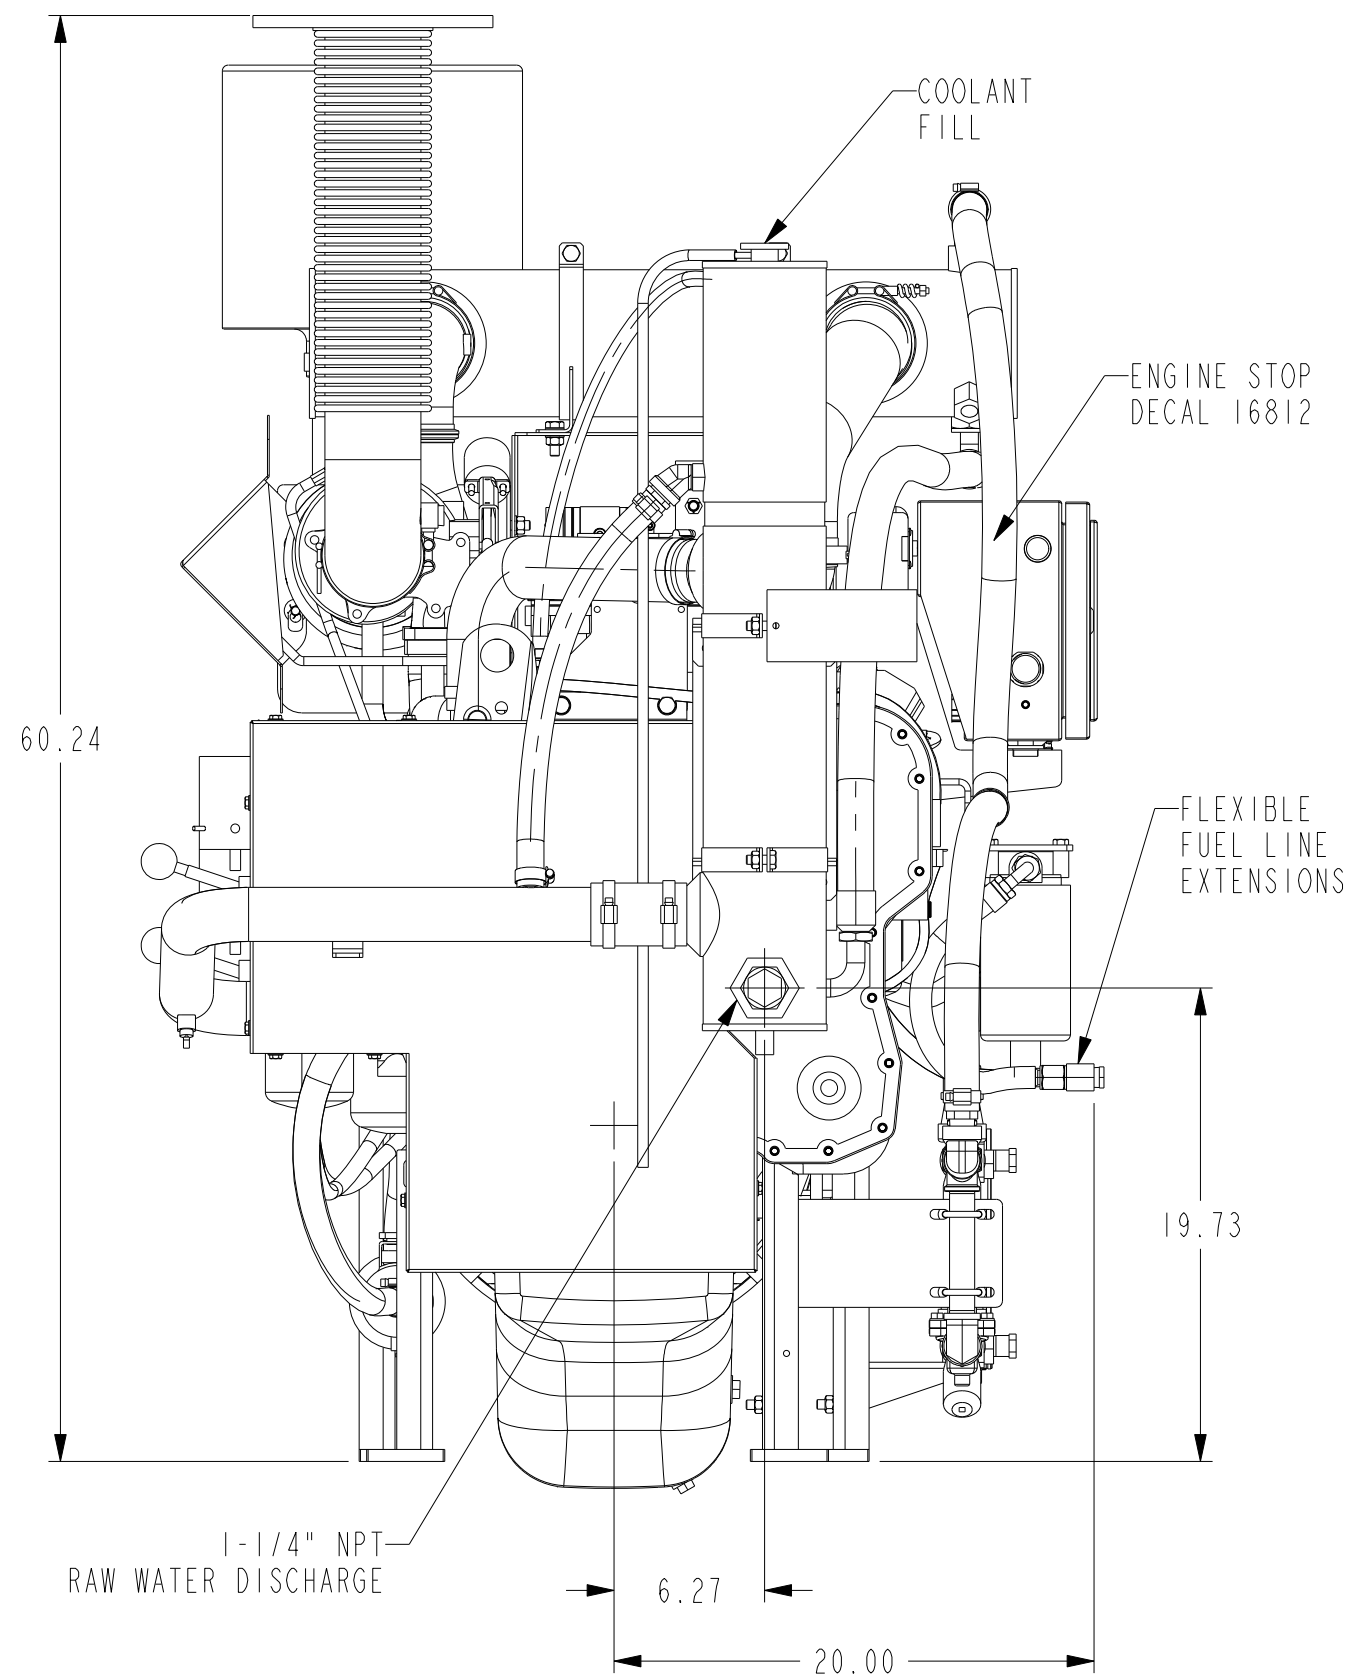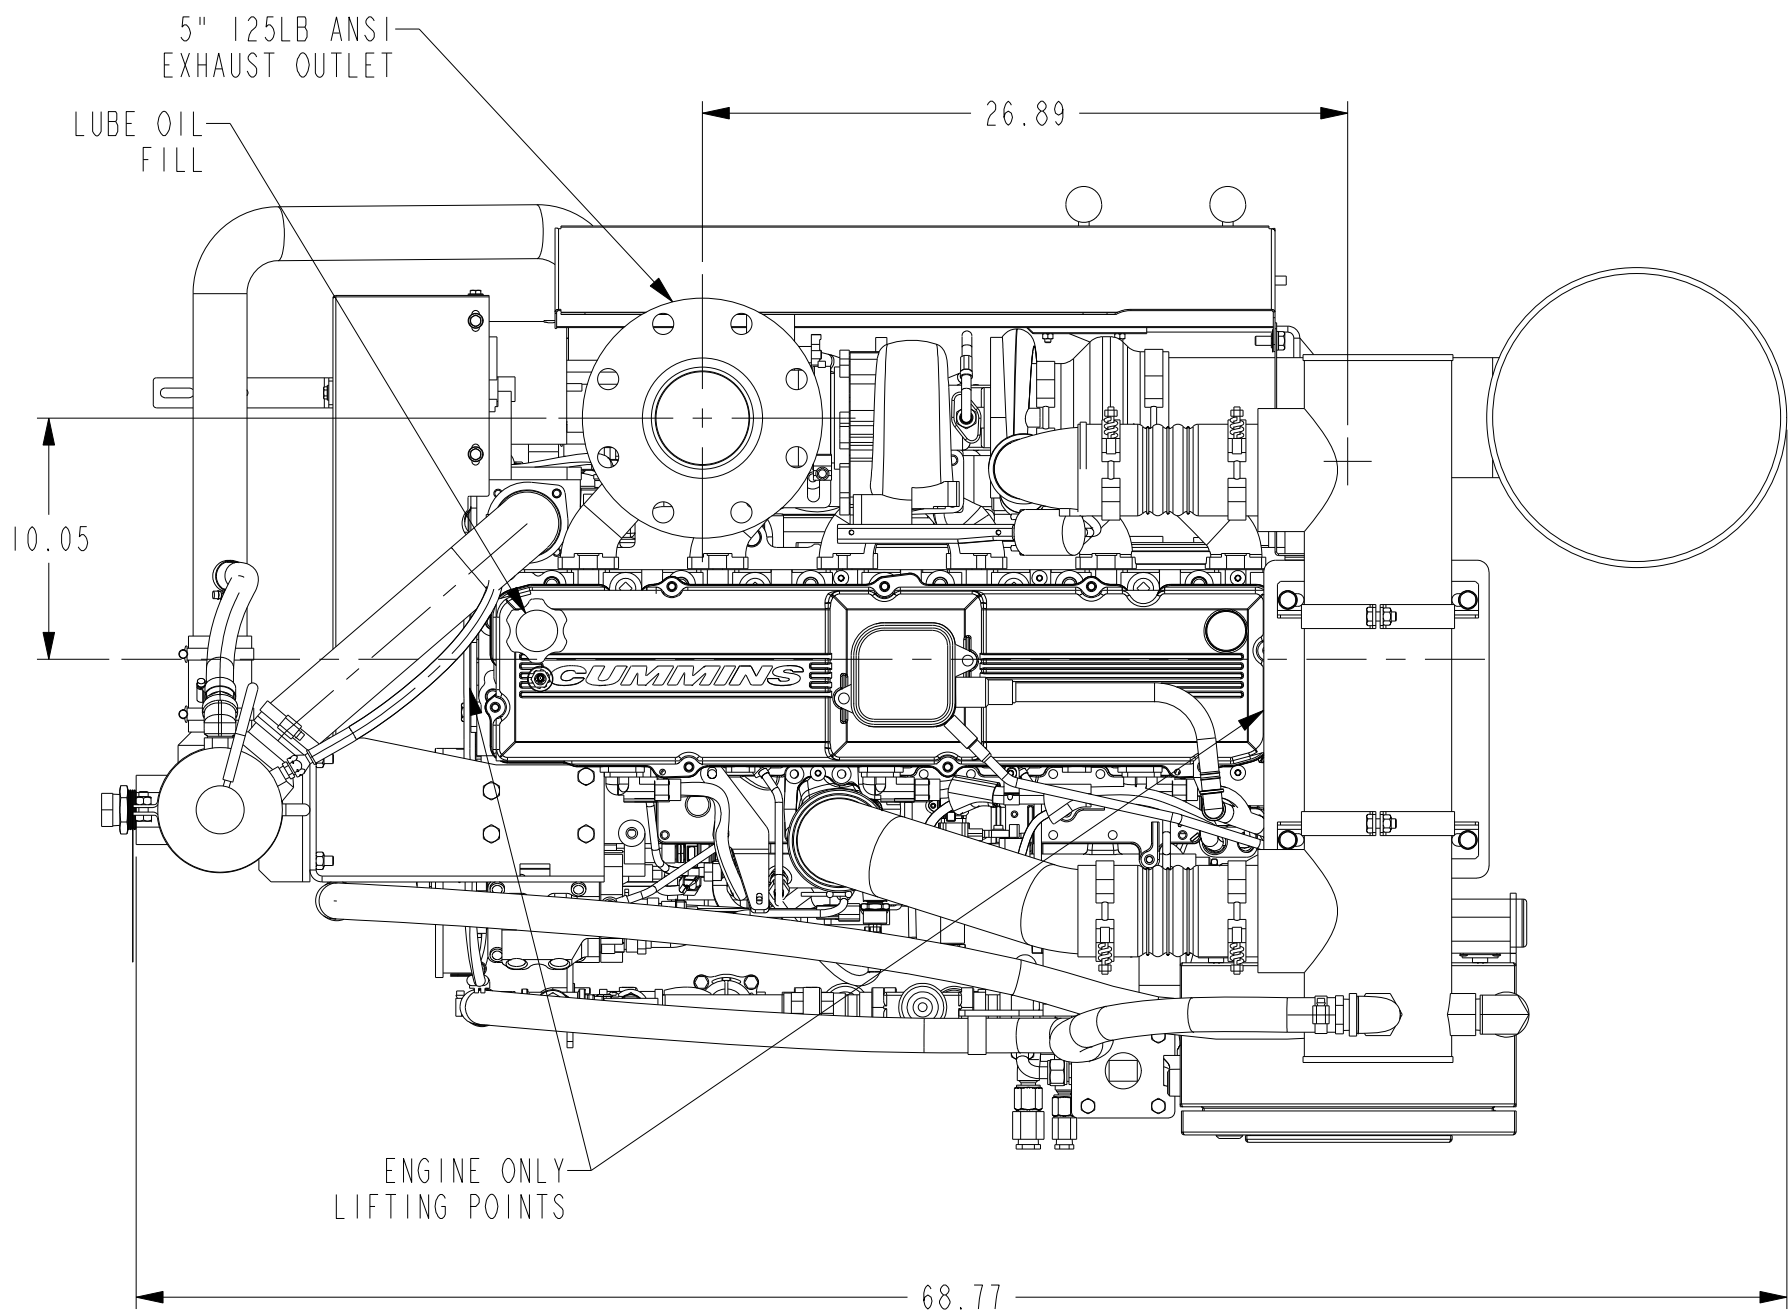

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given in confidence, in whole or in part, to the recipient. It is to be used only for the purpose intended and is not to be disclosed, copied, reproduced, or otherwise used in any manner without the prior written consent of Cummins Fire Power LLC. If you are not an authorized recipient, you are notified that disclosing, copying, reproducing, or otherwise using this document is strictly prohibited. If you are an authorized recipient, you are notified that disclosing, copying, reproducing, or otherwise using this document is strictly prohibited. If you are not an authorized recipient, you are notified that disclosing, copying, reproducing, or otherwise using this document is strictly prohibited. If you are an authorized recipient, you are notified that disclosing, copying, reproducing, or otherwise using this document is strictly prohibited.

Cummins Fire Power

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUEKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPGRADE CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN




ASSEMBLY, FIREPUMP, 12V
CFP9E-F10/20/30/40/50/60

DWG UNITS: IN/LB/S
SCALE: 0.125
EST WEIGHT:

DRAWN BY: PBS
PRO-ENGINEER
SHEET 2 OF 3

DATE: 23AUG2013
INIT ECO: 2013-498
DRAWING NO: 26112


C	2014-356	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	21MAY2014	THIRD ANGLE PROJECTION
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE	

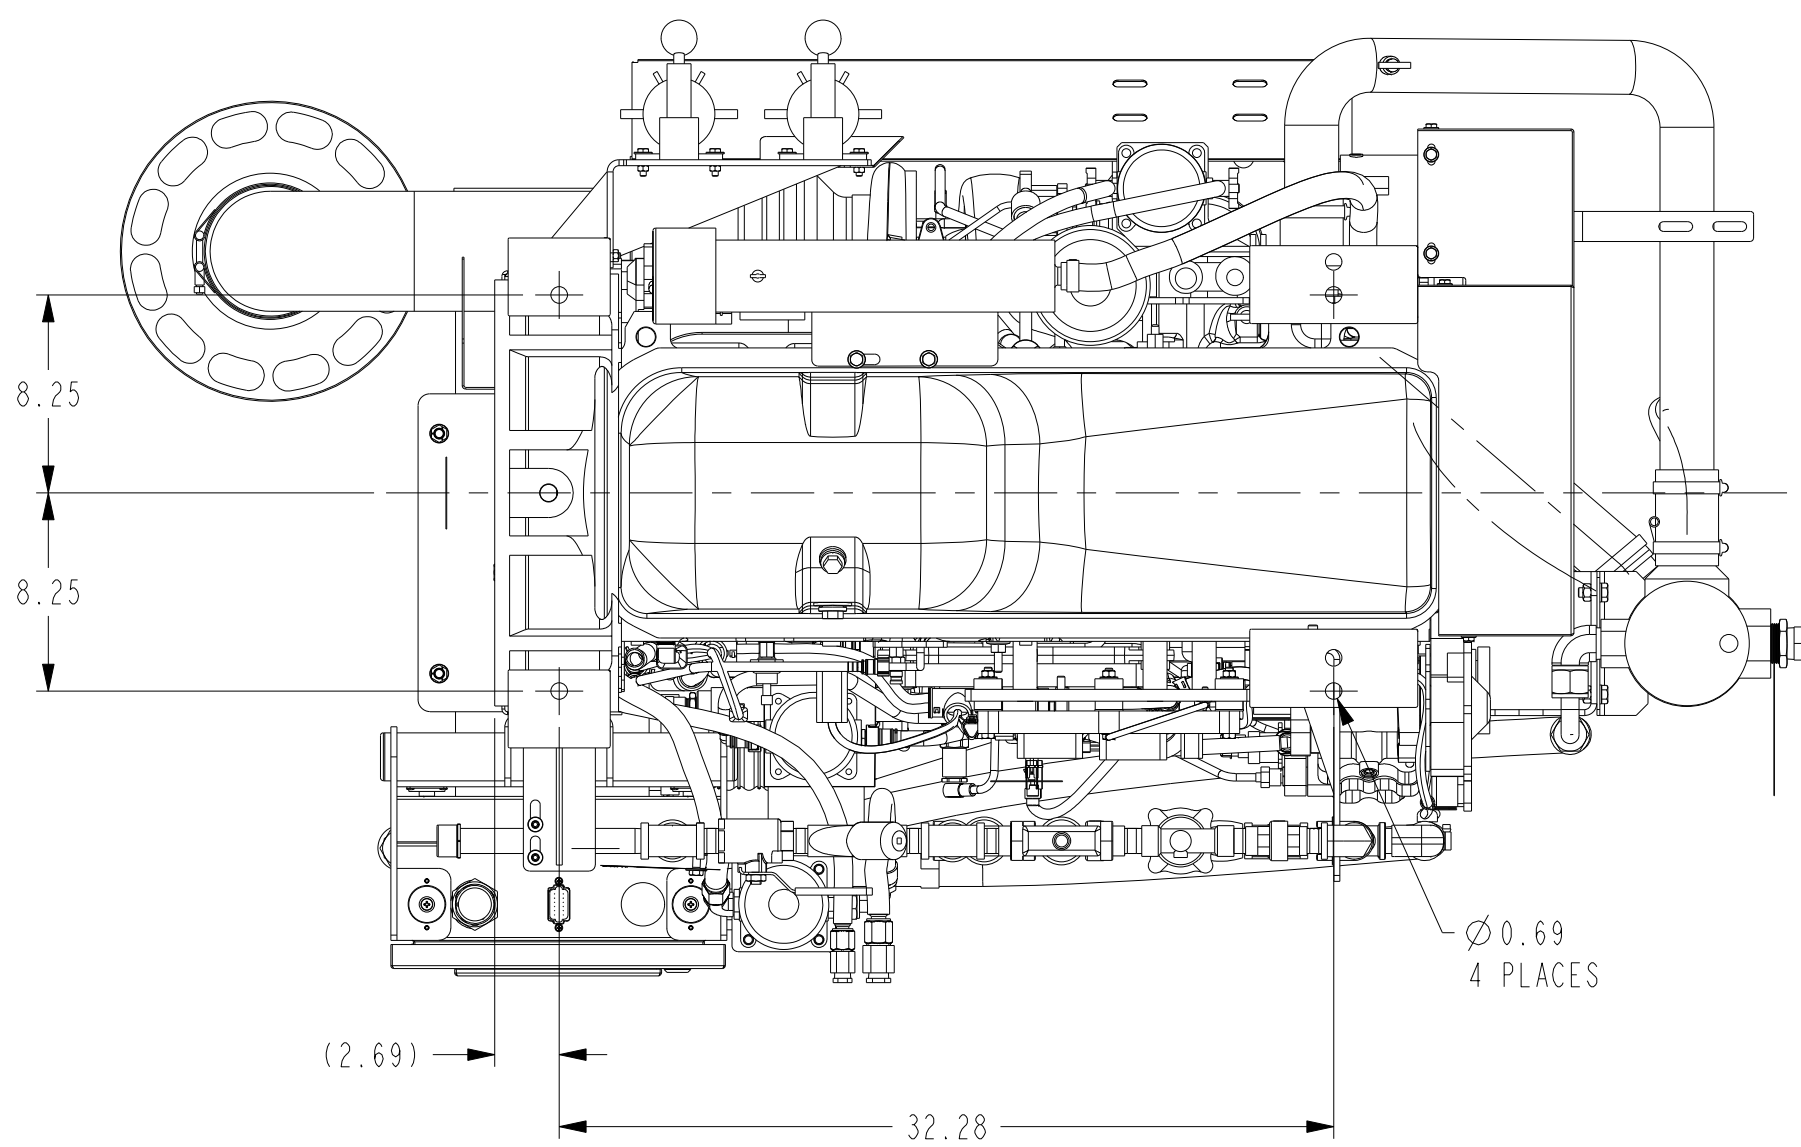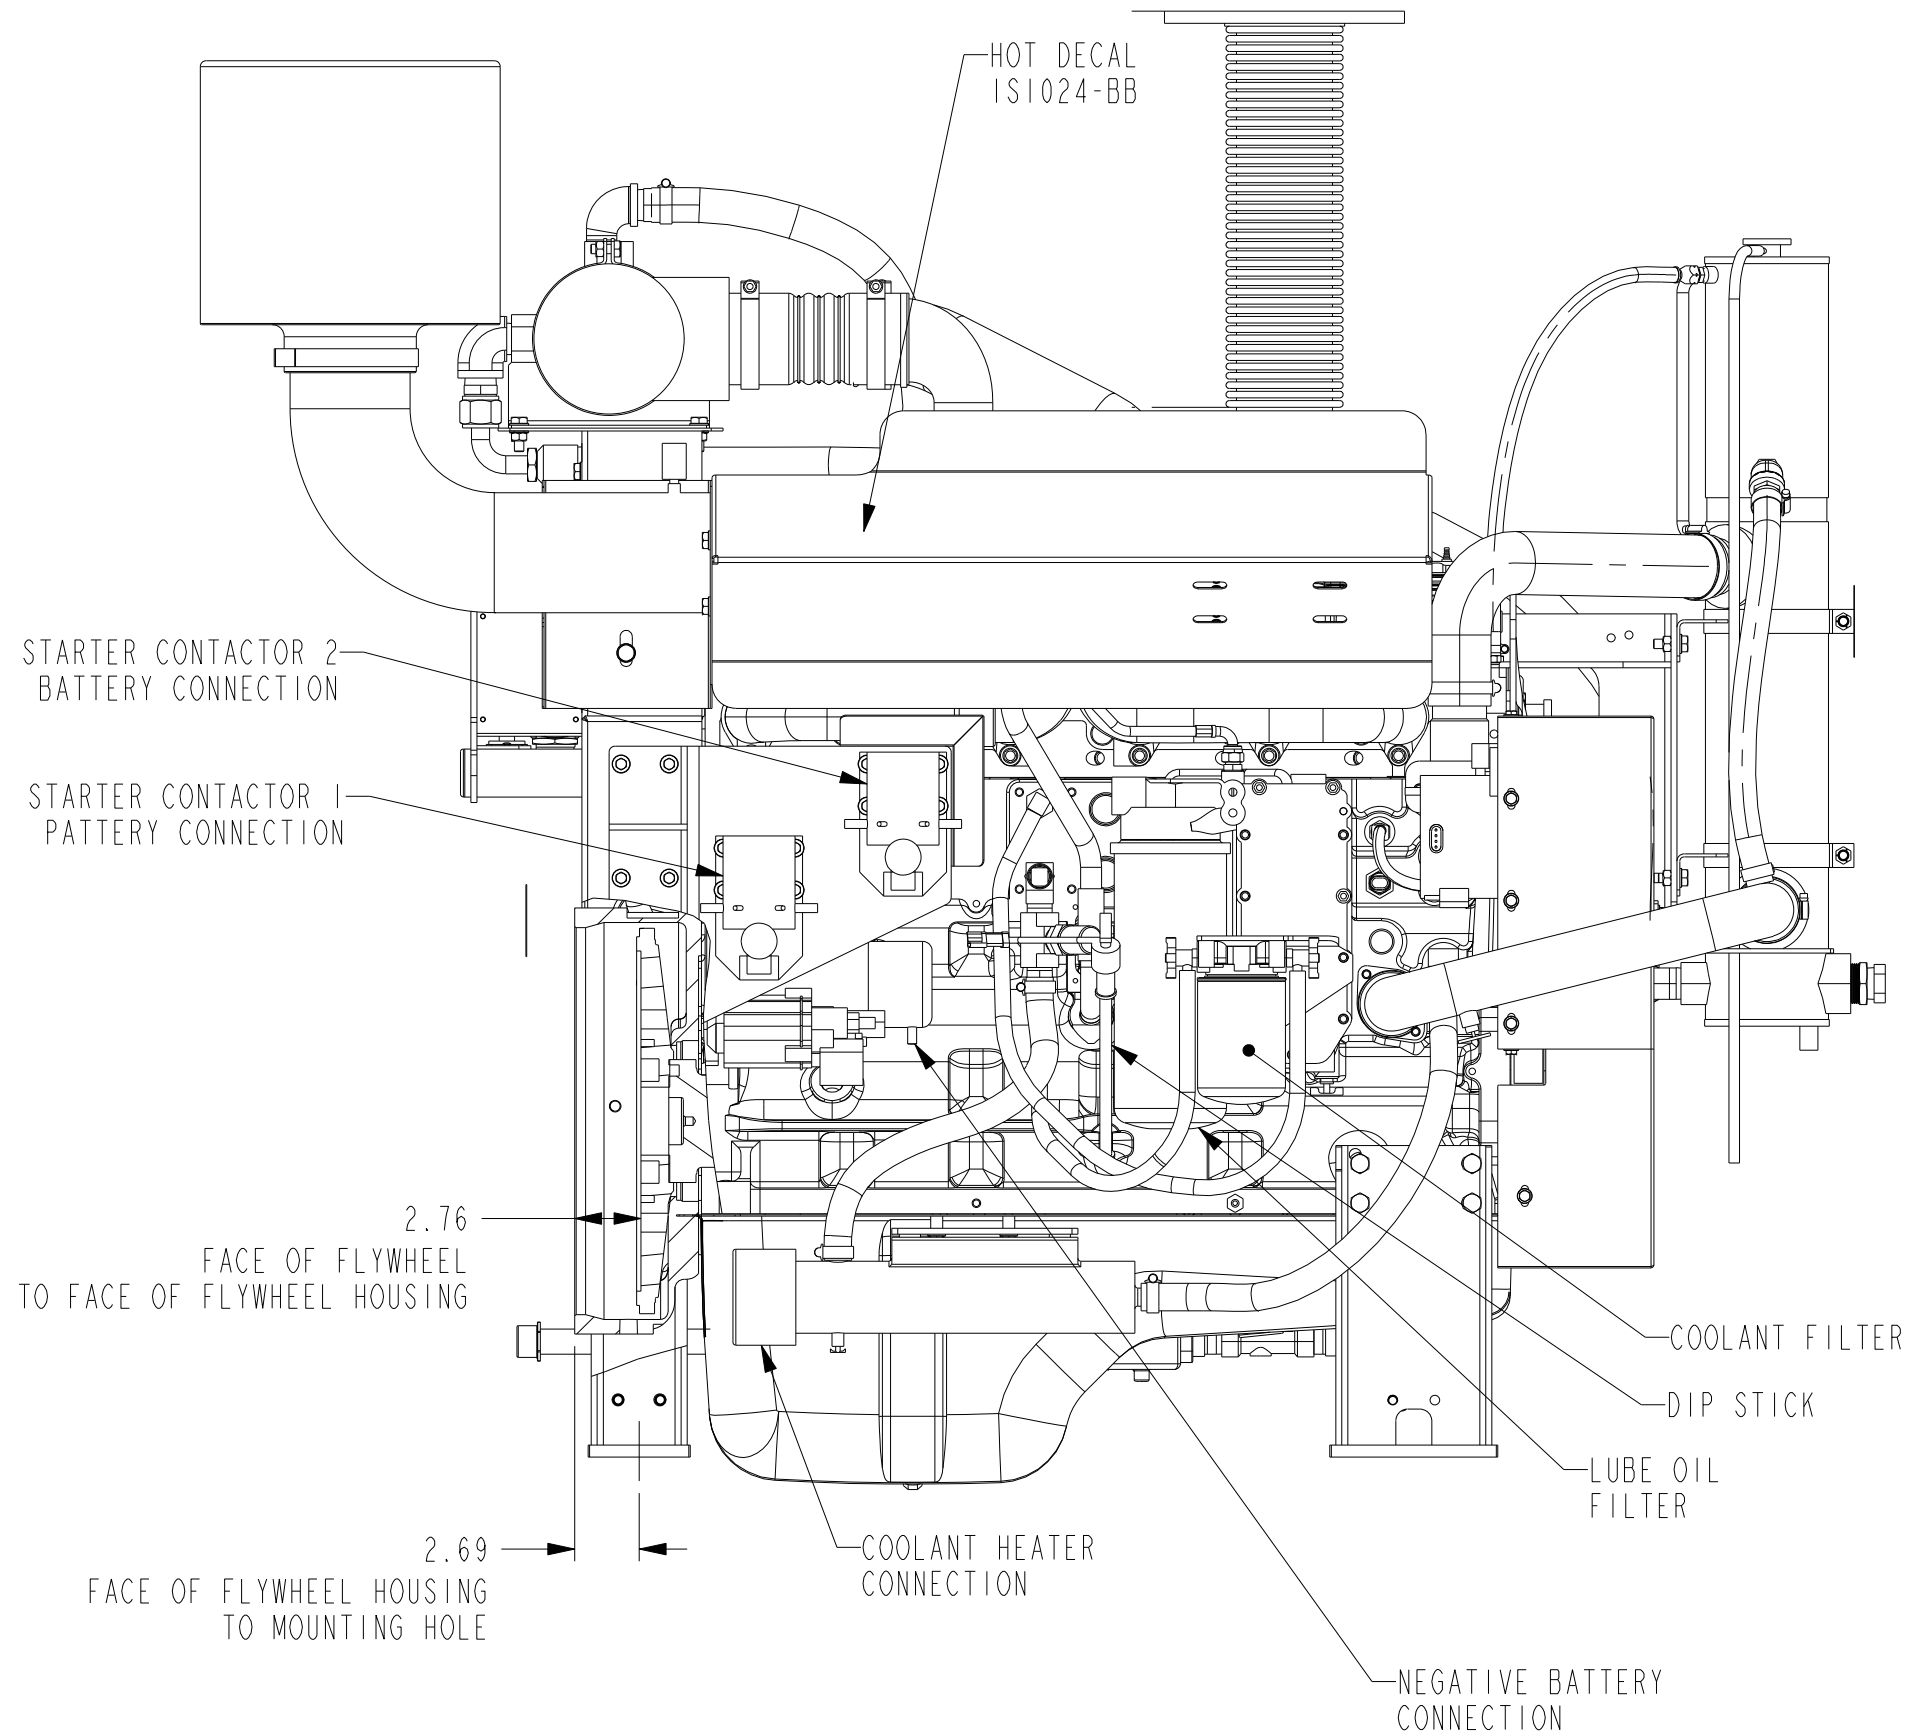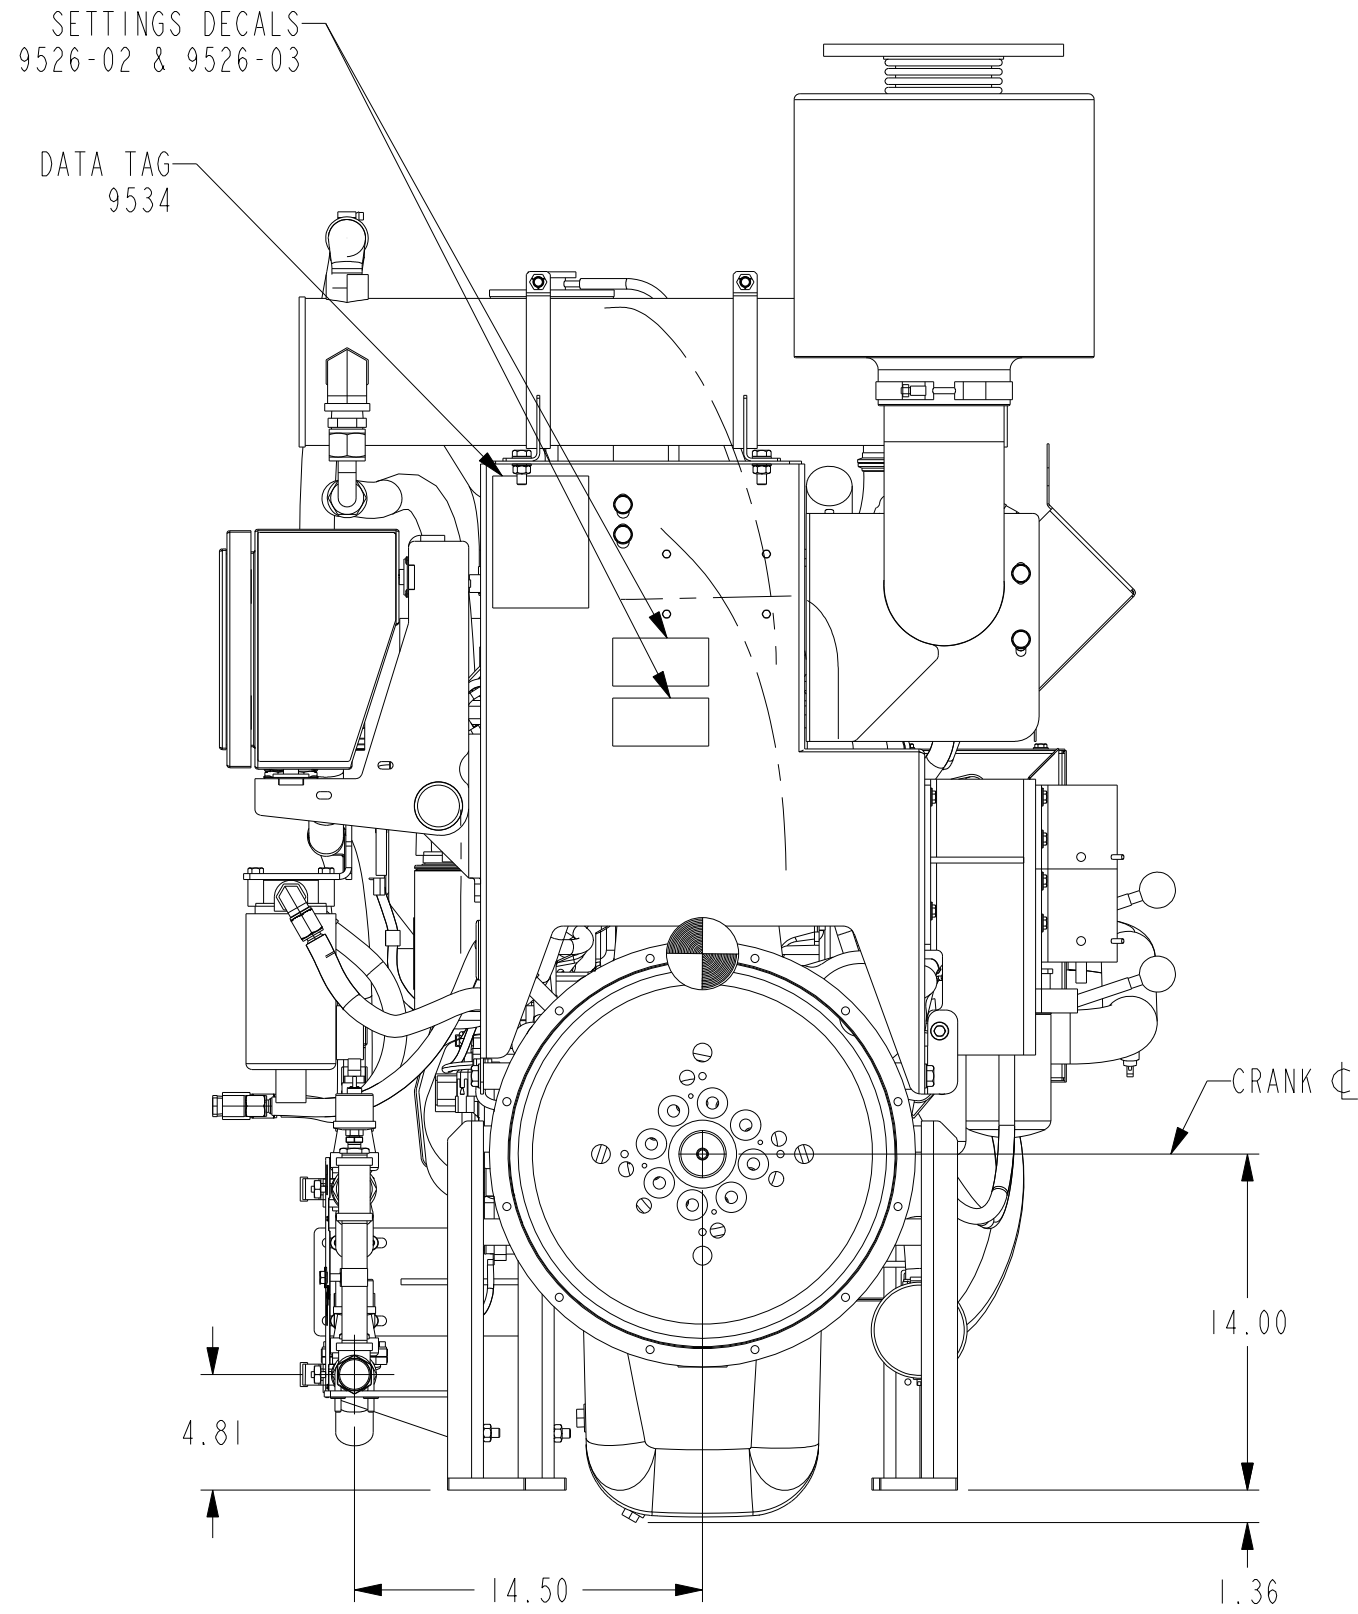


This document contains confidential and trade secret information, is the property of Cummins Fire Power, LLC, and is given in confidence, in full or in part, to the recipient. It is not to be used, copied, or otherwise disclosed, in whole or in part, to any other person, firm, or organization, without the prior written consent of Cummins Fire Power, LLC. If you are not an authorized recipient, you are notified that disclosing, copying, distributing, or taking any action in reliance on the contents of this information is strictly prohibited. If you are an authorized recipient, you are notified that disclosing, copying, distributing, or taking any action in reliance on the contents of this information is strictly prohibited.			
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:			
ANGULAR DIMENSIONS \pm	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	125	IN/LB/S	MM/KG/M
FORM TOLERANCES	FORM TOLERANCES	FORM TOLERANCES	FORM TOLERANCES
SEE DRAWING	SEE DRAWING	SEE DRAWING	SEE DRAWING

C	2014-356	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	21MAY2014	DATE
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE	

Cummins Fire Power		CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUEKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPGRADE CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
ASSEMBLY, FIREPUMP, 12V CFP9E-F10/20/30/40/50/60			
DWG UNITS: IN/LB/S	DRAWN BY: PBS	DATE: 23AUG2013	
SCALE: 0.125	PRO-ENGINEER	INIT ECO: 2013-498	
EST WEIGHT:	SHEET 3 OF 3	DRAWING NO: 26112	

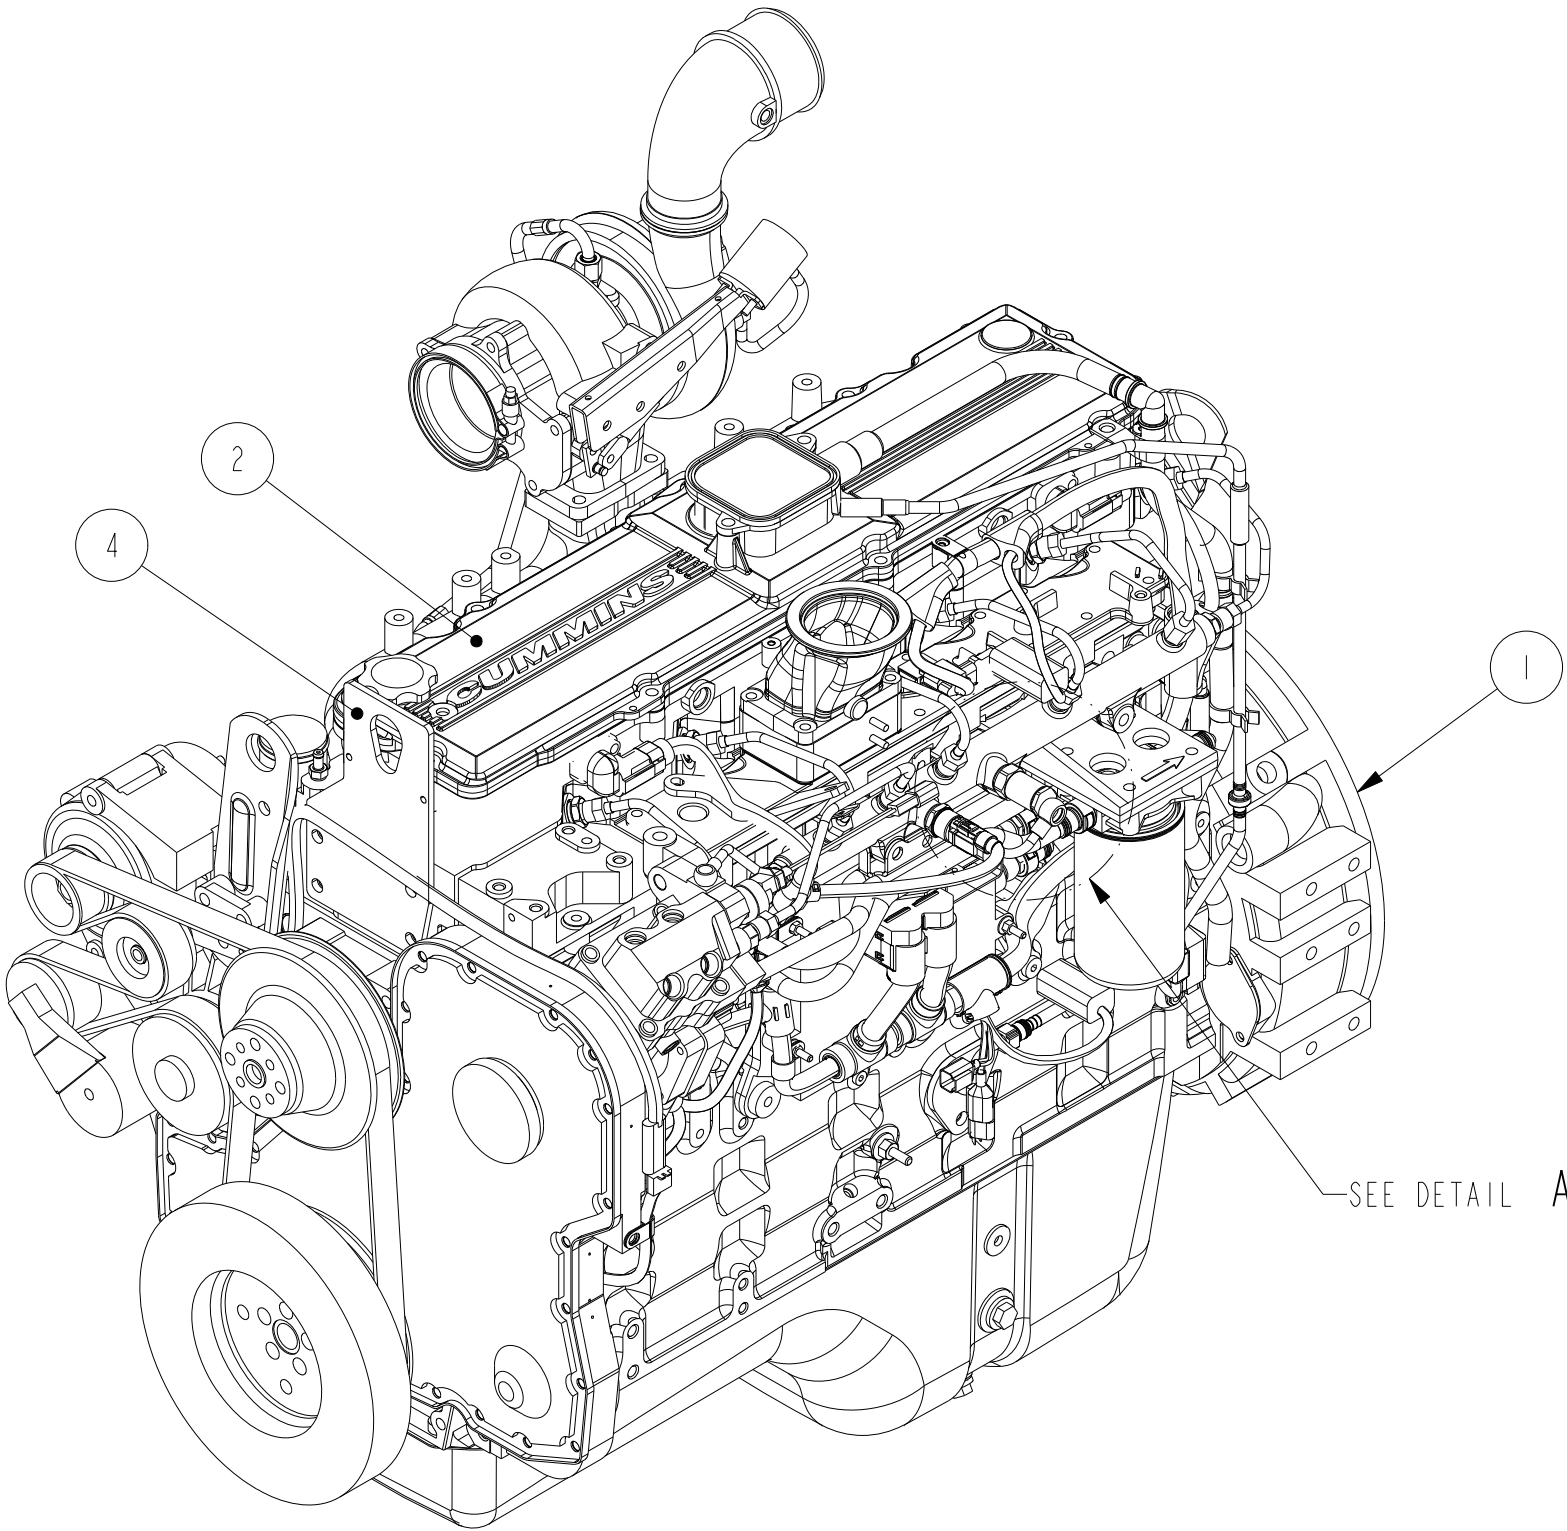

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY, ENGINE, QSL9	8739
2	1	VALVE COVER MODIFICATION, CFP9E, FIREPUMP	14454
3	22	PREMIUM BLUE 15W40, (QUART)	V705290
4	1	BRKT,ENGINE LIFTING, CFP9E	15853
5	1	MANUAL, O&M, CFP9E	24807
6	1	VALVE, PRESSURE RELIEF,	3947799

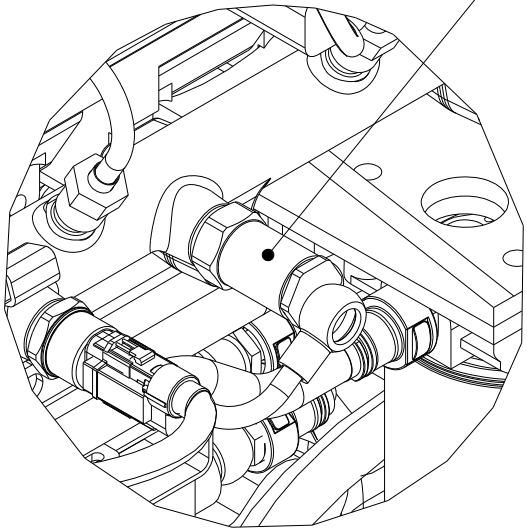


CHANGE OUT FACTORY RELIEF VALVE WITH 3947799

SEE DETAIL A

DETAIL A
SCALE 0.375

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins NPower LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins NPower LLC





CUMMINS NPOWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSNPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, ENGINE, 12V
CFP9E-F10/20/30/40/50/60

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE	ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	METRIC UNITS MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2	DWG UNITS: IN/LB/S	DRAWN BY: GVD PRO-ENGINEER	DATE: 03FEB2014 INIT ECO: 2014-049
THIRD ANGLE PROJECTION	125	FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4	FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	SCALE: 0.156 EST WEIGHT: 42238.628	SHEET 1 OF 1	DRAWING NO: 26775

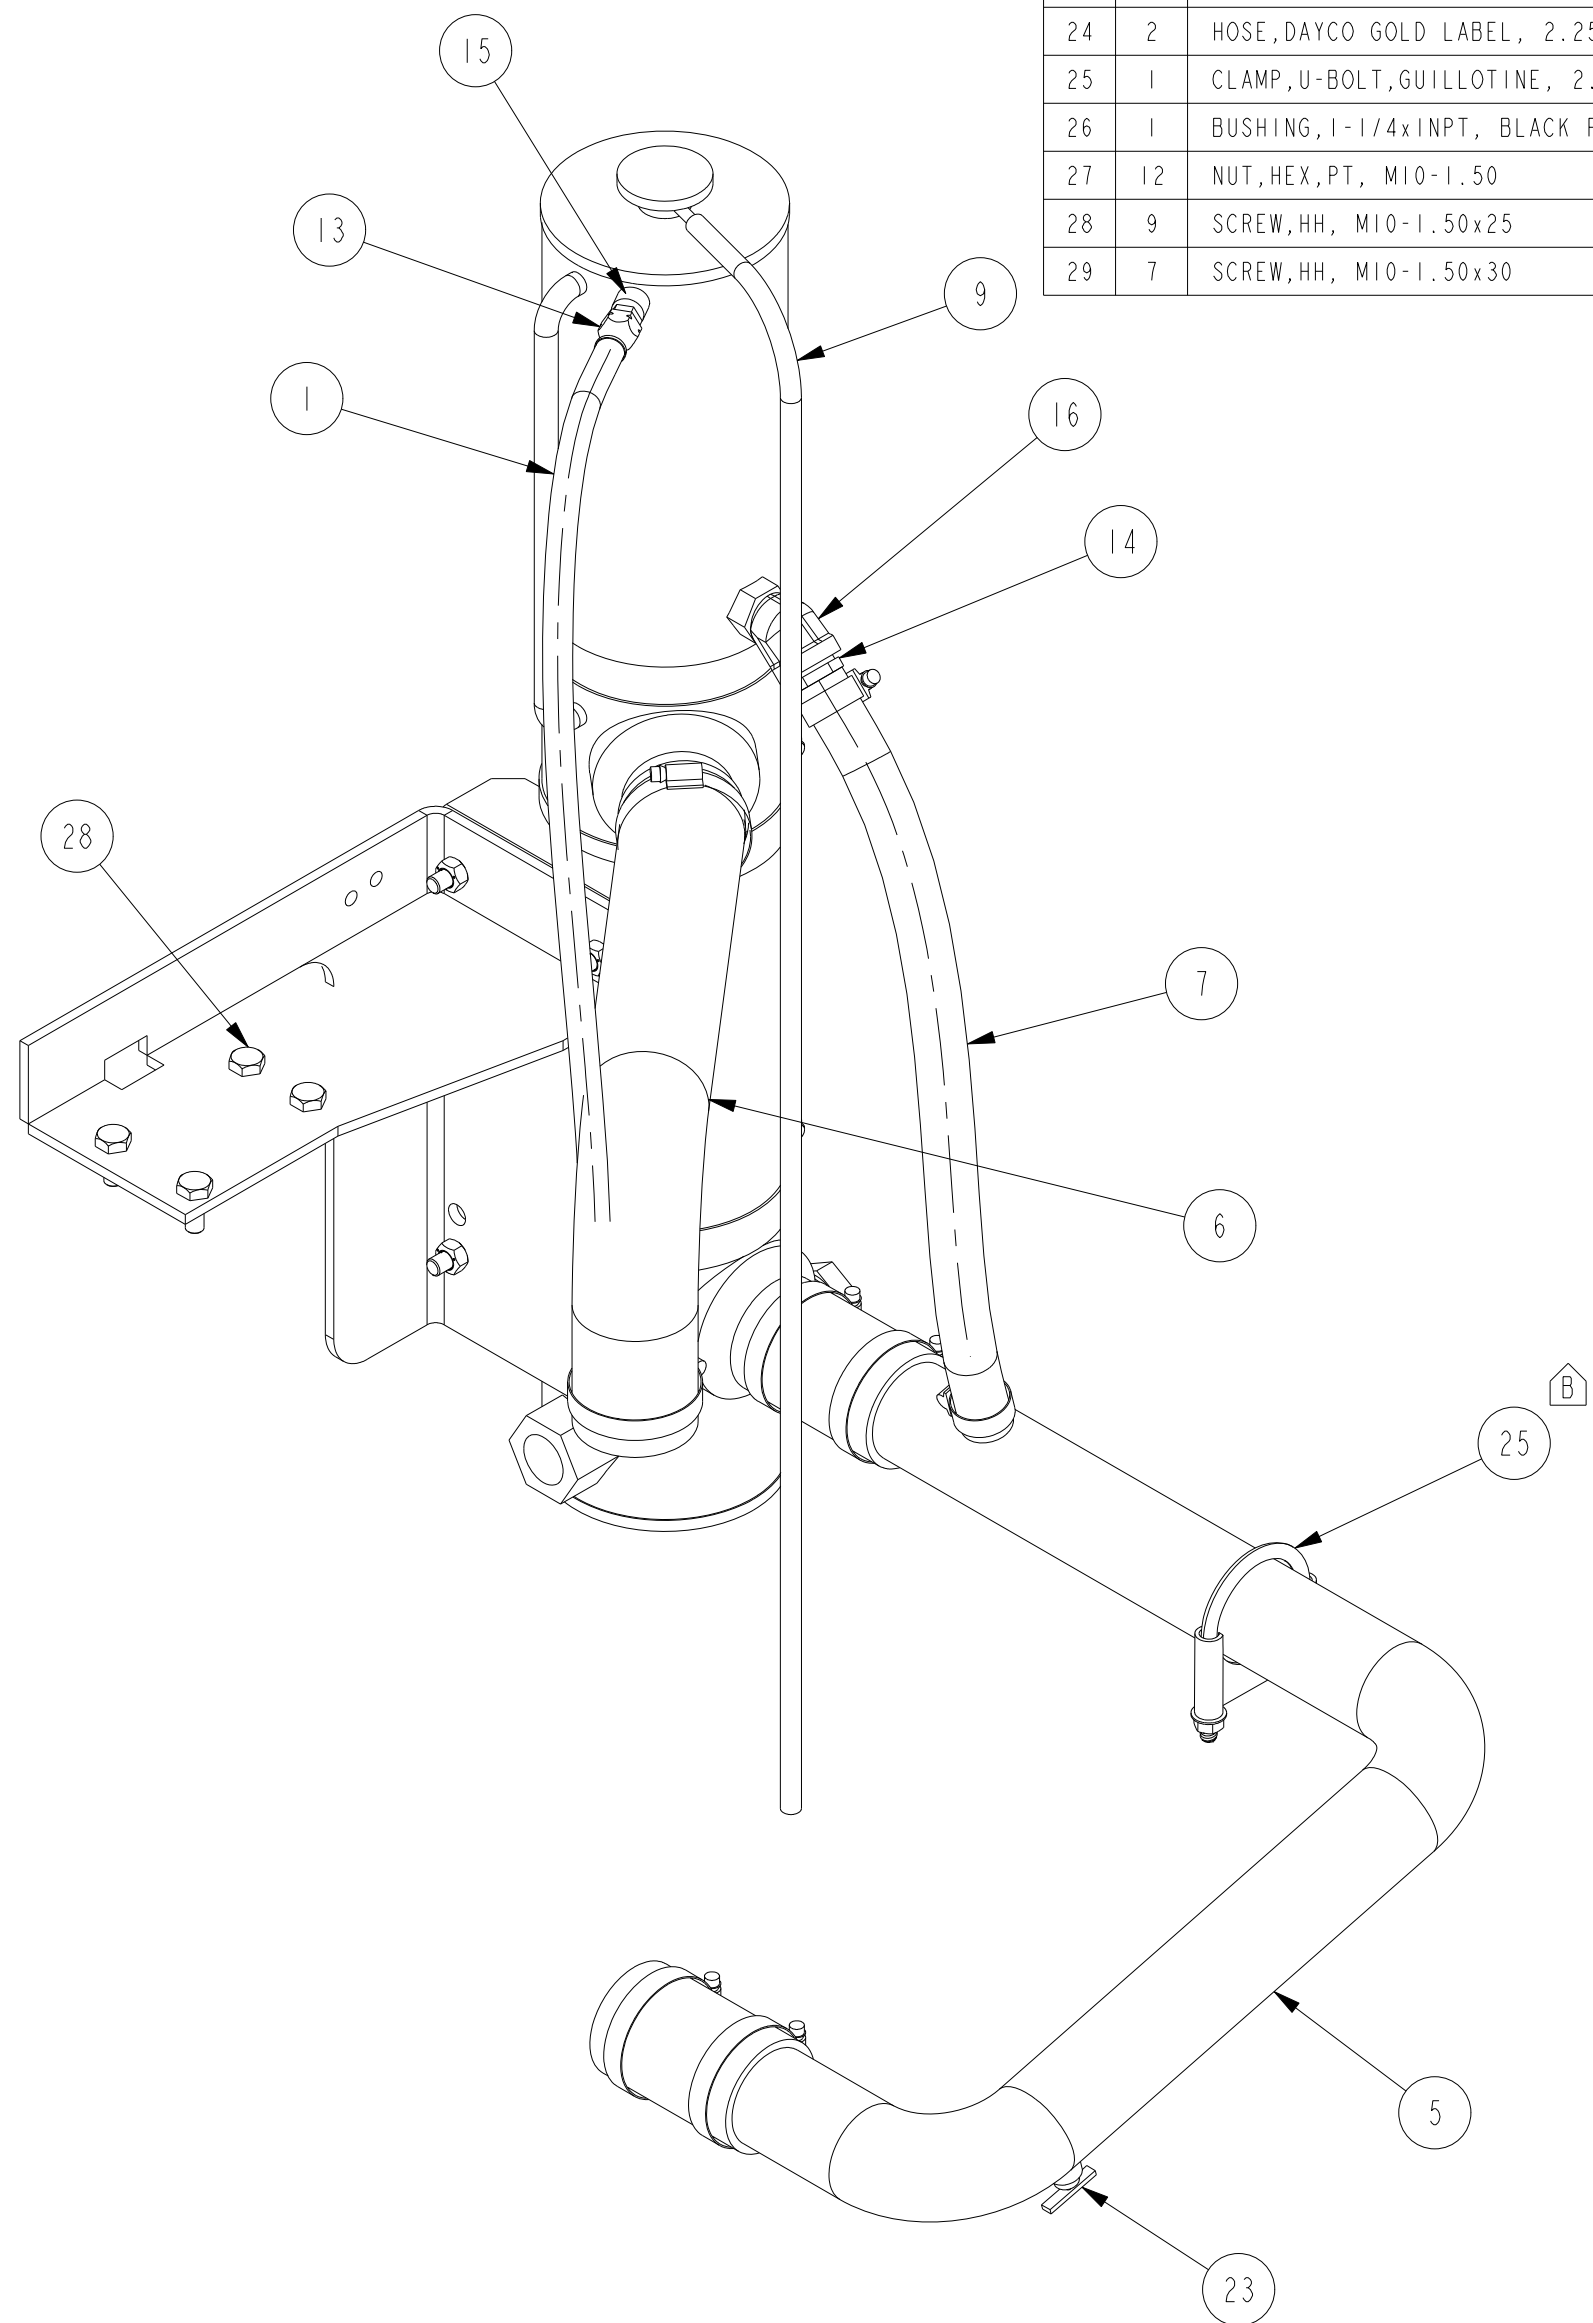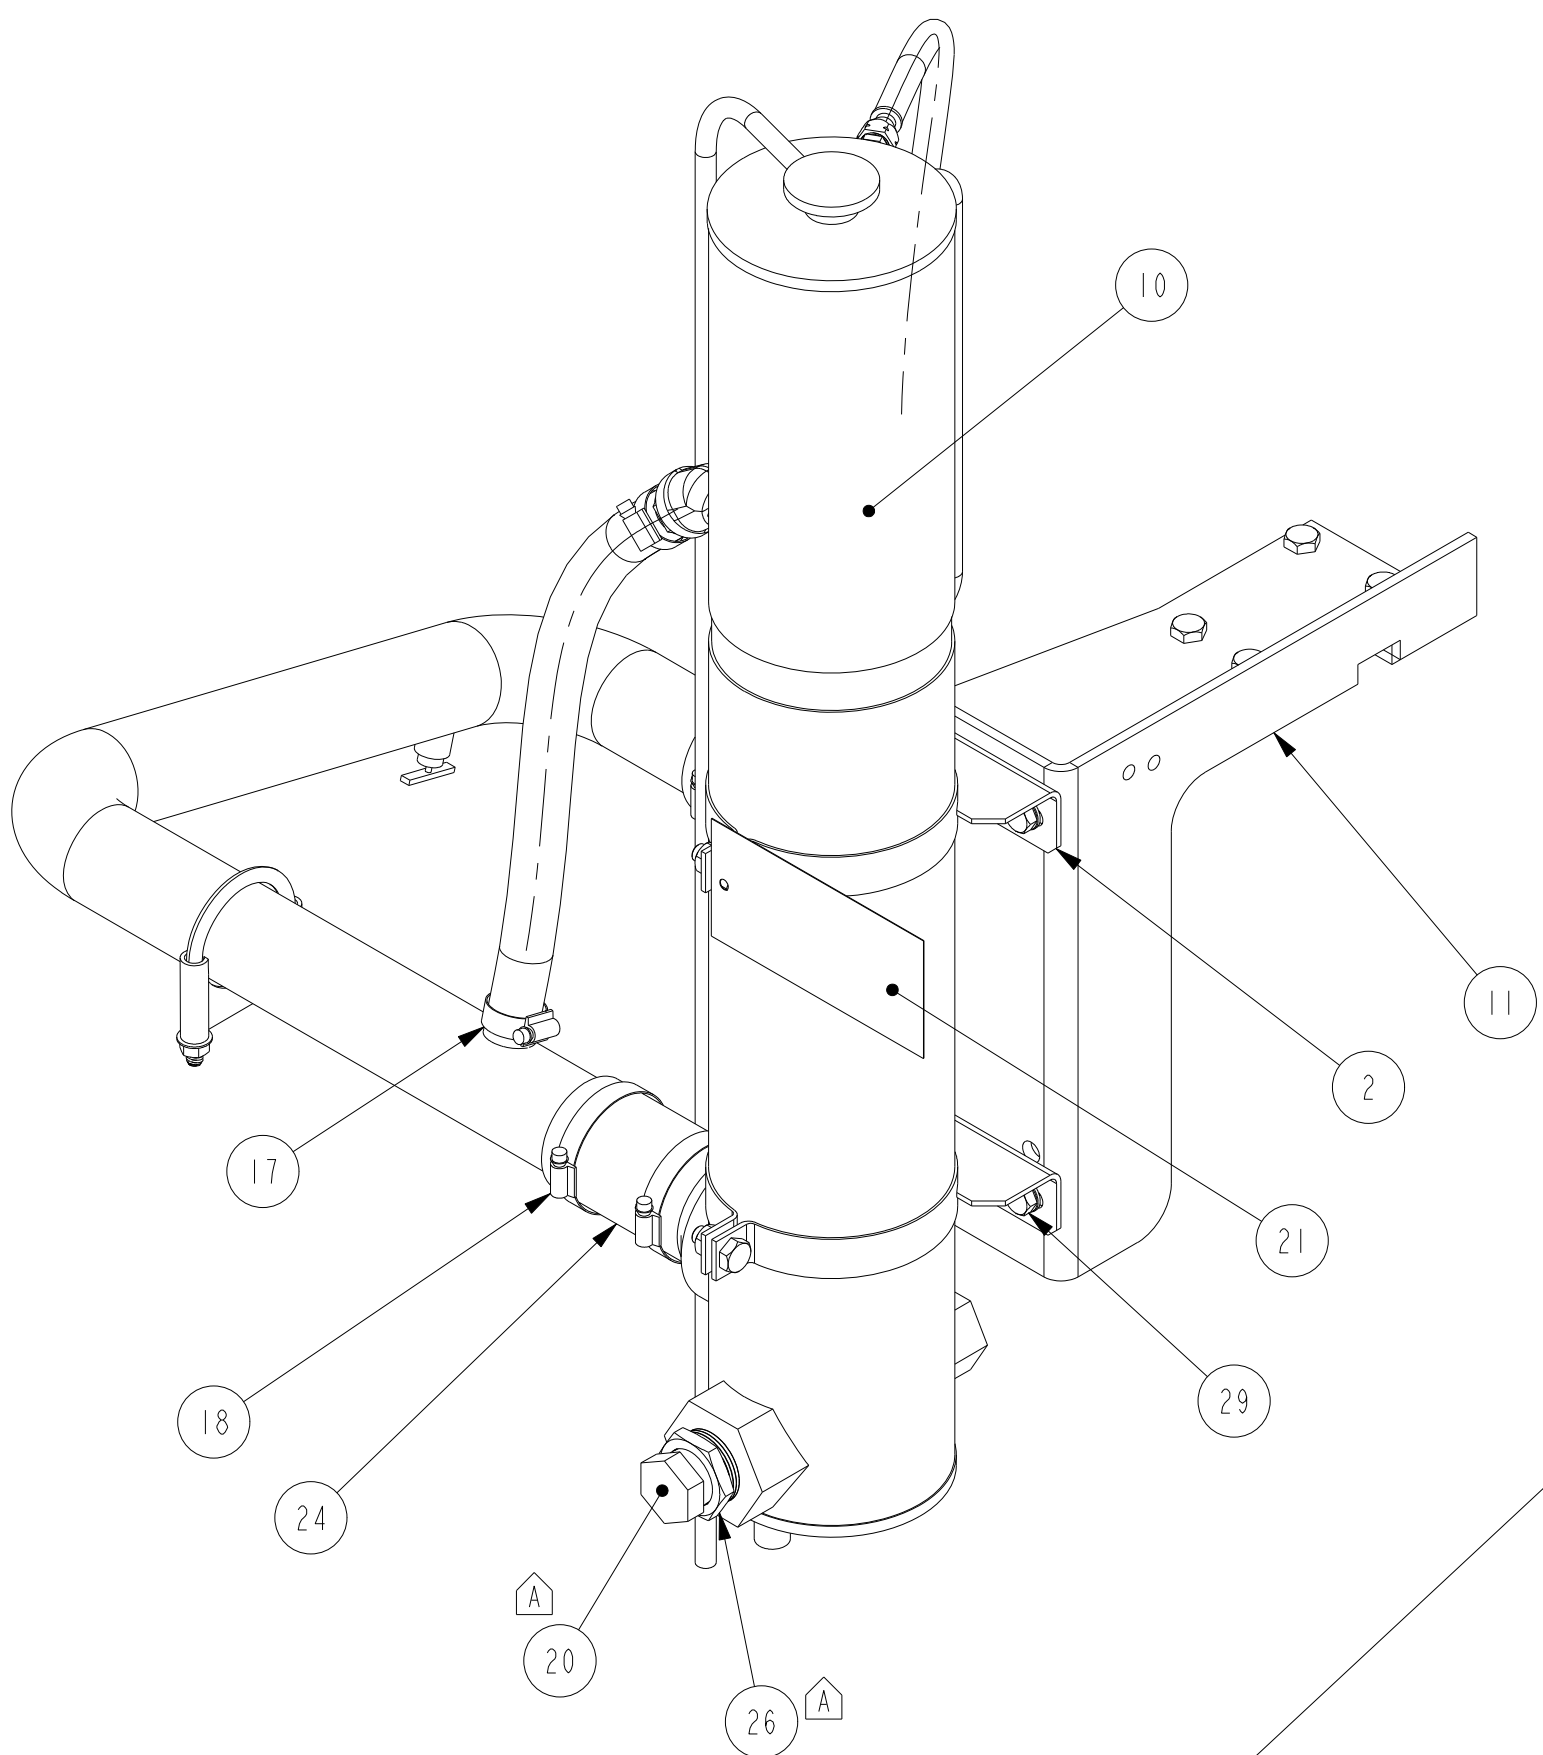

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, VENT LINE, #801-6 X 28" LG, CFP9E	801-06
2	2	CLAMP, SUPPORT, HEAT EXCHANGER, CHAMP #300385	8819
3	2	CLAMP, HEAT EXCHANGER, 6" DIA, CMAP #CP090496-2	8965
4	1	TUBE, CAC INTAKE, OSC/OSLT3 FIREPUMP	10517
5	1	TUBE, WATER INLET, CFP9E	12399
6	1	ELBOW,HOSE,2-1/4" ID, GATES	21418
7	1	FILL HOSE, 3/4" ID X 18" LG	802426L
8	5	COOLANT, FC EG PM, 1 GALLON	CC2743
9	1	TUBE, OVERFLOW, 5/16" ID X 60" LG, #27003	8662
10	1	HEAT EXCHANGER, 5" DIA., 2-PASS, INTEGRAL TOP TANK	8687
11	1	BRACKET, SUPPORT, HEAT EXCHANGER, FIREPUMP, C8.3	8922
12	1	COOLER, CHARGE AIR, 6" DIAMETER, 4-PASS W/ RAW WATER DRAIN	8966
13	1	HOSE END, STR, -6 FLR X 6- HS	12543-6-6
14	1	FTG, STR, -12 BARB X -12 NPT	12548-12-12
15	1	FTG, STR, -6 FLR X -4 NPT	12553-6-4
16	1	ELBOW, 45°, 3/4"NOM, MNPTx FNPT, 150LB BLACK IRON	14204-12
17	2	CLAMP, WORM, .88 - 1.25	14990-12
18	6	CLAMP, WORM, 1.81 - 2.75	14990-36
19	1	CLAMP, WORM, .25 - .63	14992-04
20	1	PLUG, NPT, PLASTIC, -16 (1") NPT	15255-16
21	1	TAG, ENGINE WEIGHT	16825
22	12	WASHER,FLAT, M10	20020-M10
23	1	DRAIN VALVE, 1/4" NPT	80511
24	2	HOSE,DAYCO G6 LABEL, 2.25" ID X 4" LG	772256L-4IN
25	1	CLAMP,U-BOLT,GUILLOTINE, 2.25"	89542K
26	1	BUSHING,1-1/4x1NPT, BLACK PIPE	BBHG
27	12	NUT,HEX,PT, M10-1.50	20140-M10
28	9	SCREW,HH, M10-1.50x25	20310-025
29	7	SCREW,HH, M10-1.50x30	20310-030

NOTE:
1. APPLY THREAD SEALANT TO ALL NPT THREADS.

This document contains confidential and trade secret information, is the property of Cummins NPower LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the content is confidence and agrees that, except as authorized in writing by Cummins NPower, it will not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins NPower LLC



NPower

CUMMINS NPOWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSNPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN


ASSY, HEAT EXCHANGER, RAW WATER
CFP9E

DWG UNITS: INCLDS	DRAWN BY: GVD PRG ENGINE
----------------------	-----------------------------


DATE: 19FEB2014
NL: ECO

PRINTING NO:

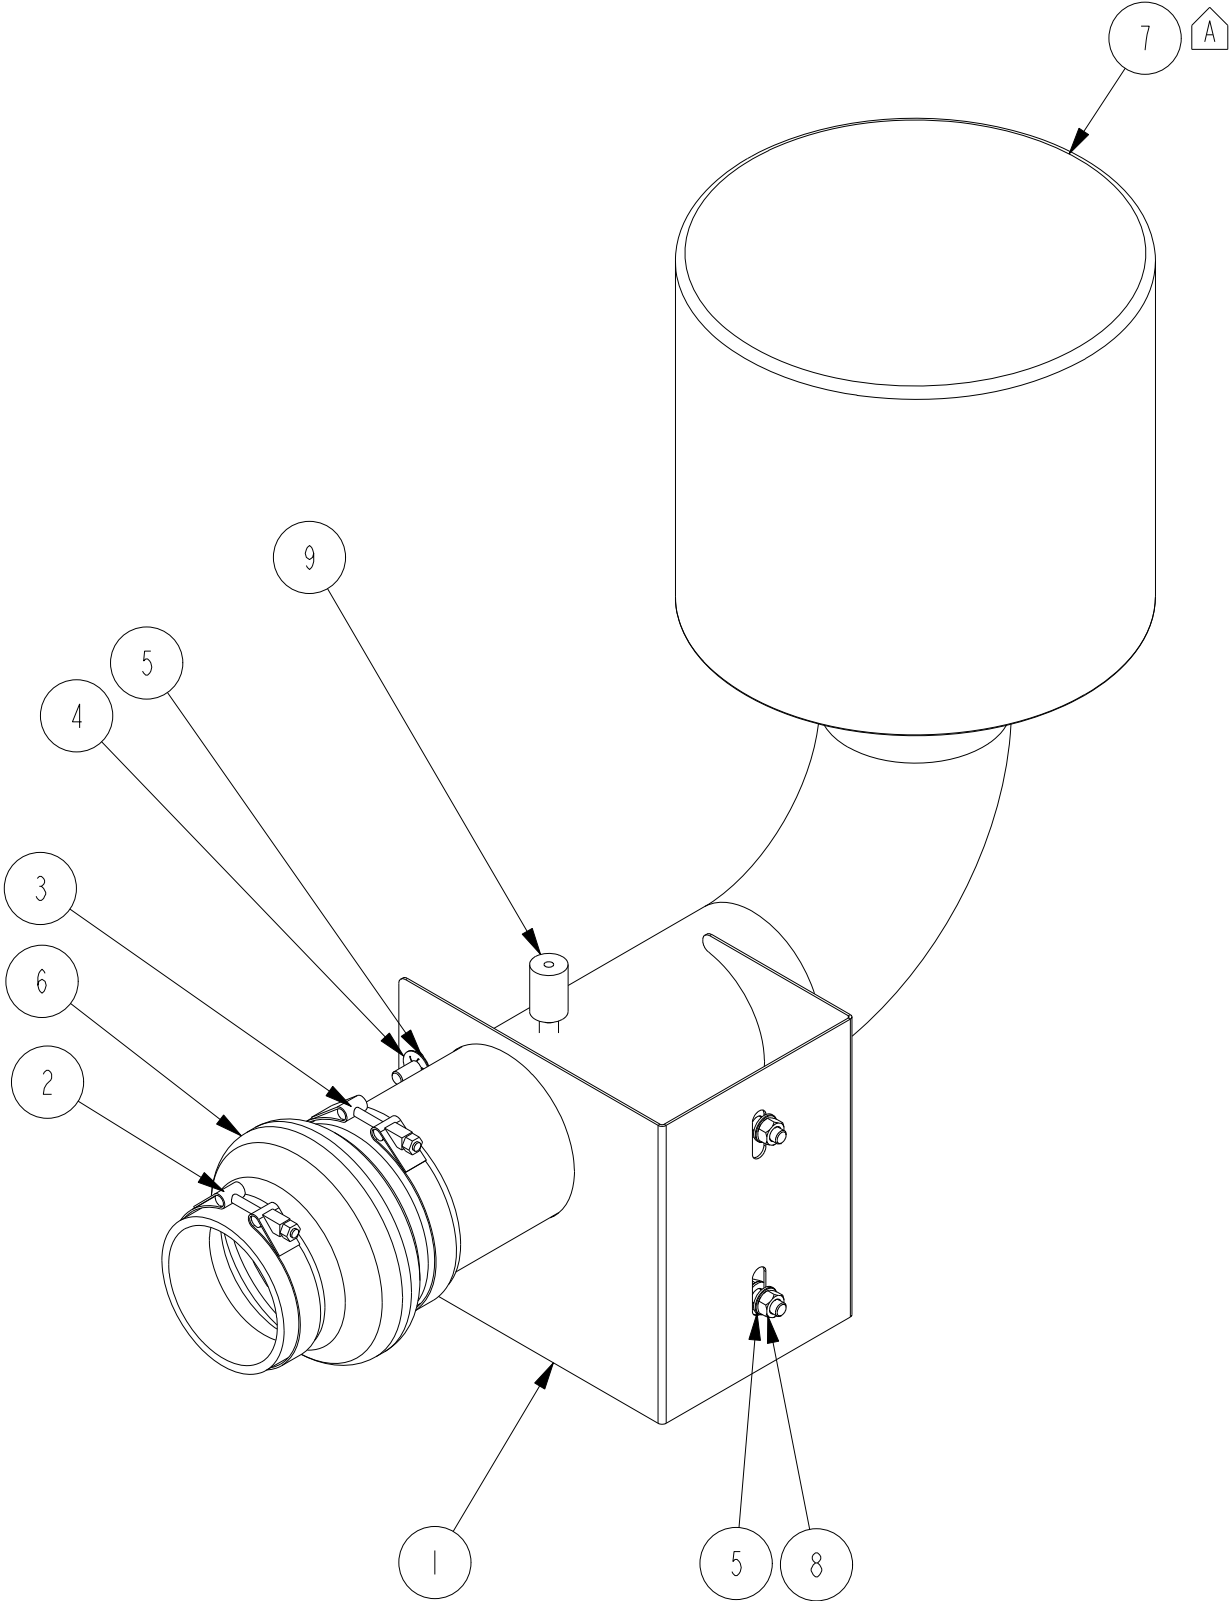

B	2015-136	ADDED: 89542K	PBS	02MAR2015
A	2014-461	ADDED BBHG, 15255-16 WAS 15255-20	PBS	02JUL2014
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

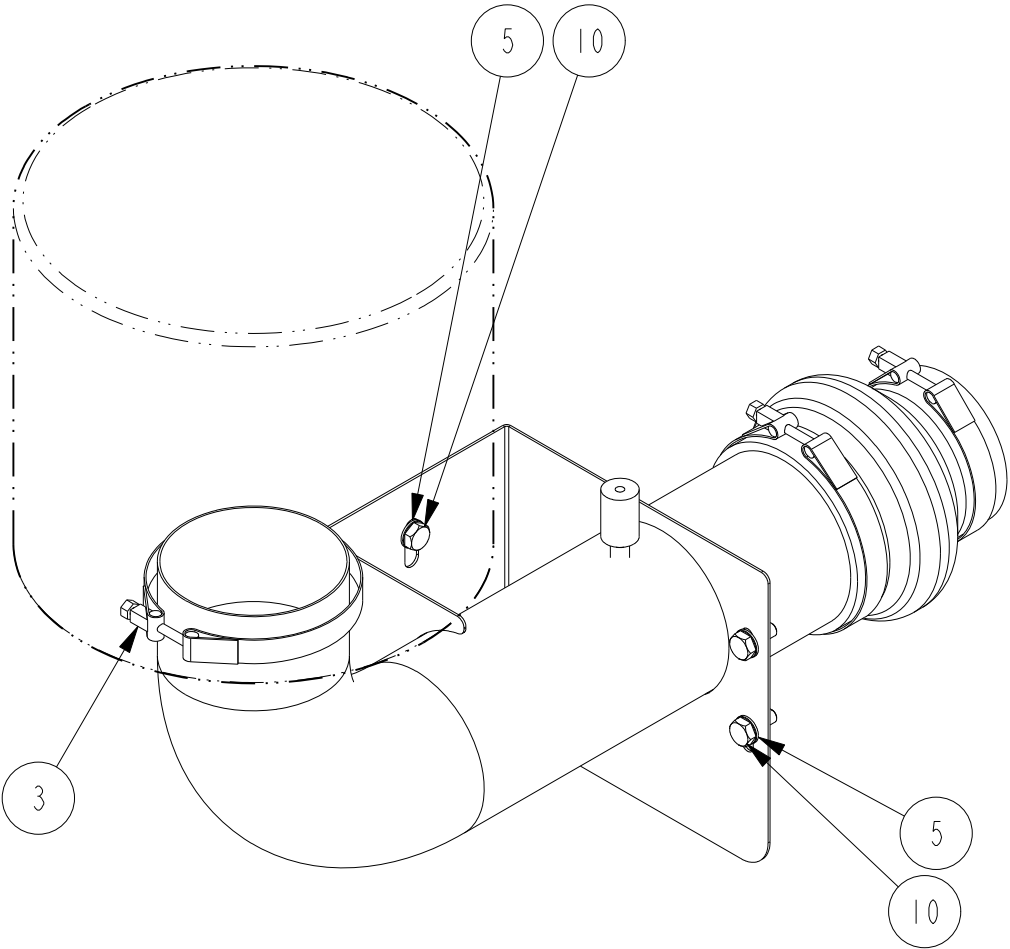



BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	TUBE, AIR CLEANER, CFP9E	15481
2	1	CLAMP, T-BOLT, 4.28-4.59	13164-0450
3	2	CLAMP, T-BOLT, 5.28-5.59	13164-0550
4	2	WASHER, RETAINING, M10	16662-13
5	8	WASHER, FLAT, M10	20020-M10
6	1	HUMP HOSE REDUCER, 5.0" x 4.0"	3316618S
7	1	AIR CLEANER, 5" CONNECTION, FLG# AH19220	AH19220
8	2	NUT, HEX, M10-1.50	20120-M10
9	1	RESTRICTION INDICATOR, 1/8" NPT	RAX00-2352
10	4	SCREW, HH, M10-1.50x25	20310-025



A	2014-504	OMIT 15610, ADDED AH19220	MRH	16JUL2014
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE


<p>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC</p>						CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM		CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN			
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE											
ANGULAR DIMENSIONS ± 1°		MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS	ASSEMBLY, AIR INTAKE CFP9E						
THIRD ANGLE PROJECTION			125	MACHINE TOLERANCES	MACHINE TOLERANCES	DWG UNITS:		DRAWN BY: PBS		DATE: 19SEP2013	
.XX ± 0.010	.X ± 0.4			IN/LB/S		PRO-ENGINEER		INIT ECO:			
.XXX ± 0.005	.XX ± 0.2										
		FORM TOLERANCES	FORM TOLERANCES	SCALE: 0.200		SHEET 1 OF 1		DRAWING NO: 26553			
		.XX ± 0.030	.X ± 0.8	EST WEIGHT: 55.643							
		FAB TOLERANCES	FAB TOLERANCES								
		.XX ± 0.060	.X ± 1.5								
		.XXX ± 0.030	.XX ± 0.8								


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	GUARD, PULLEY, CFP9E	A042B435
2	1	GUARD	A042B439
3	1	GUARD	A042B441
4	1	BRACKET, GUARD	A042B443
5	1	BRACKET, GUARD	A042B445
6	1	BRACKET, MOUNTING, TUBE SUPPORT, FIREPUMP	9834
7	1	HEAT SHIELD, CFP59	15383
8	1	BRACKET, HEAT SHIELD	15431
9	9	WASHER, RETAINING, 1/4"	16662-04
10	2	WASHER, RETAINING, M10	16662-13
11	2	WASHER, FLAT, M10	20020-M10
12	10	WASHER, FLAT, SMALL, 0.25	20010-025
13	10	SCREW, HH, 0.25-20x0.50	20225-050
14	2	SCREW, HH, M10-1.50x25	20310-025

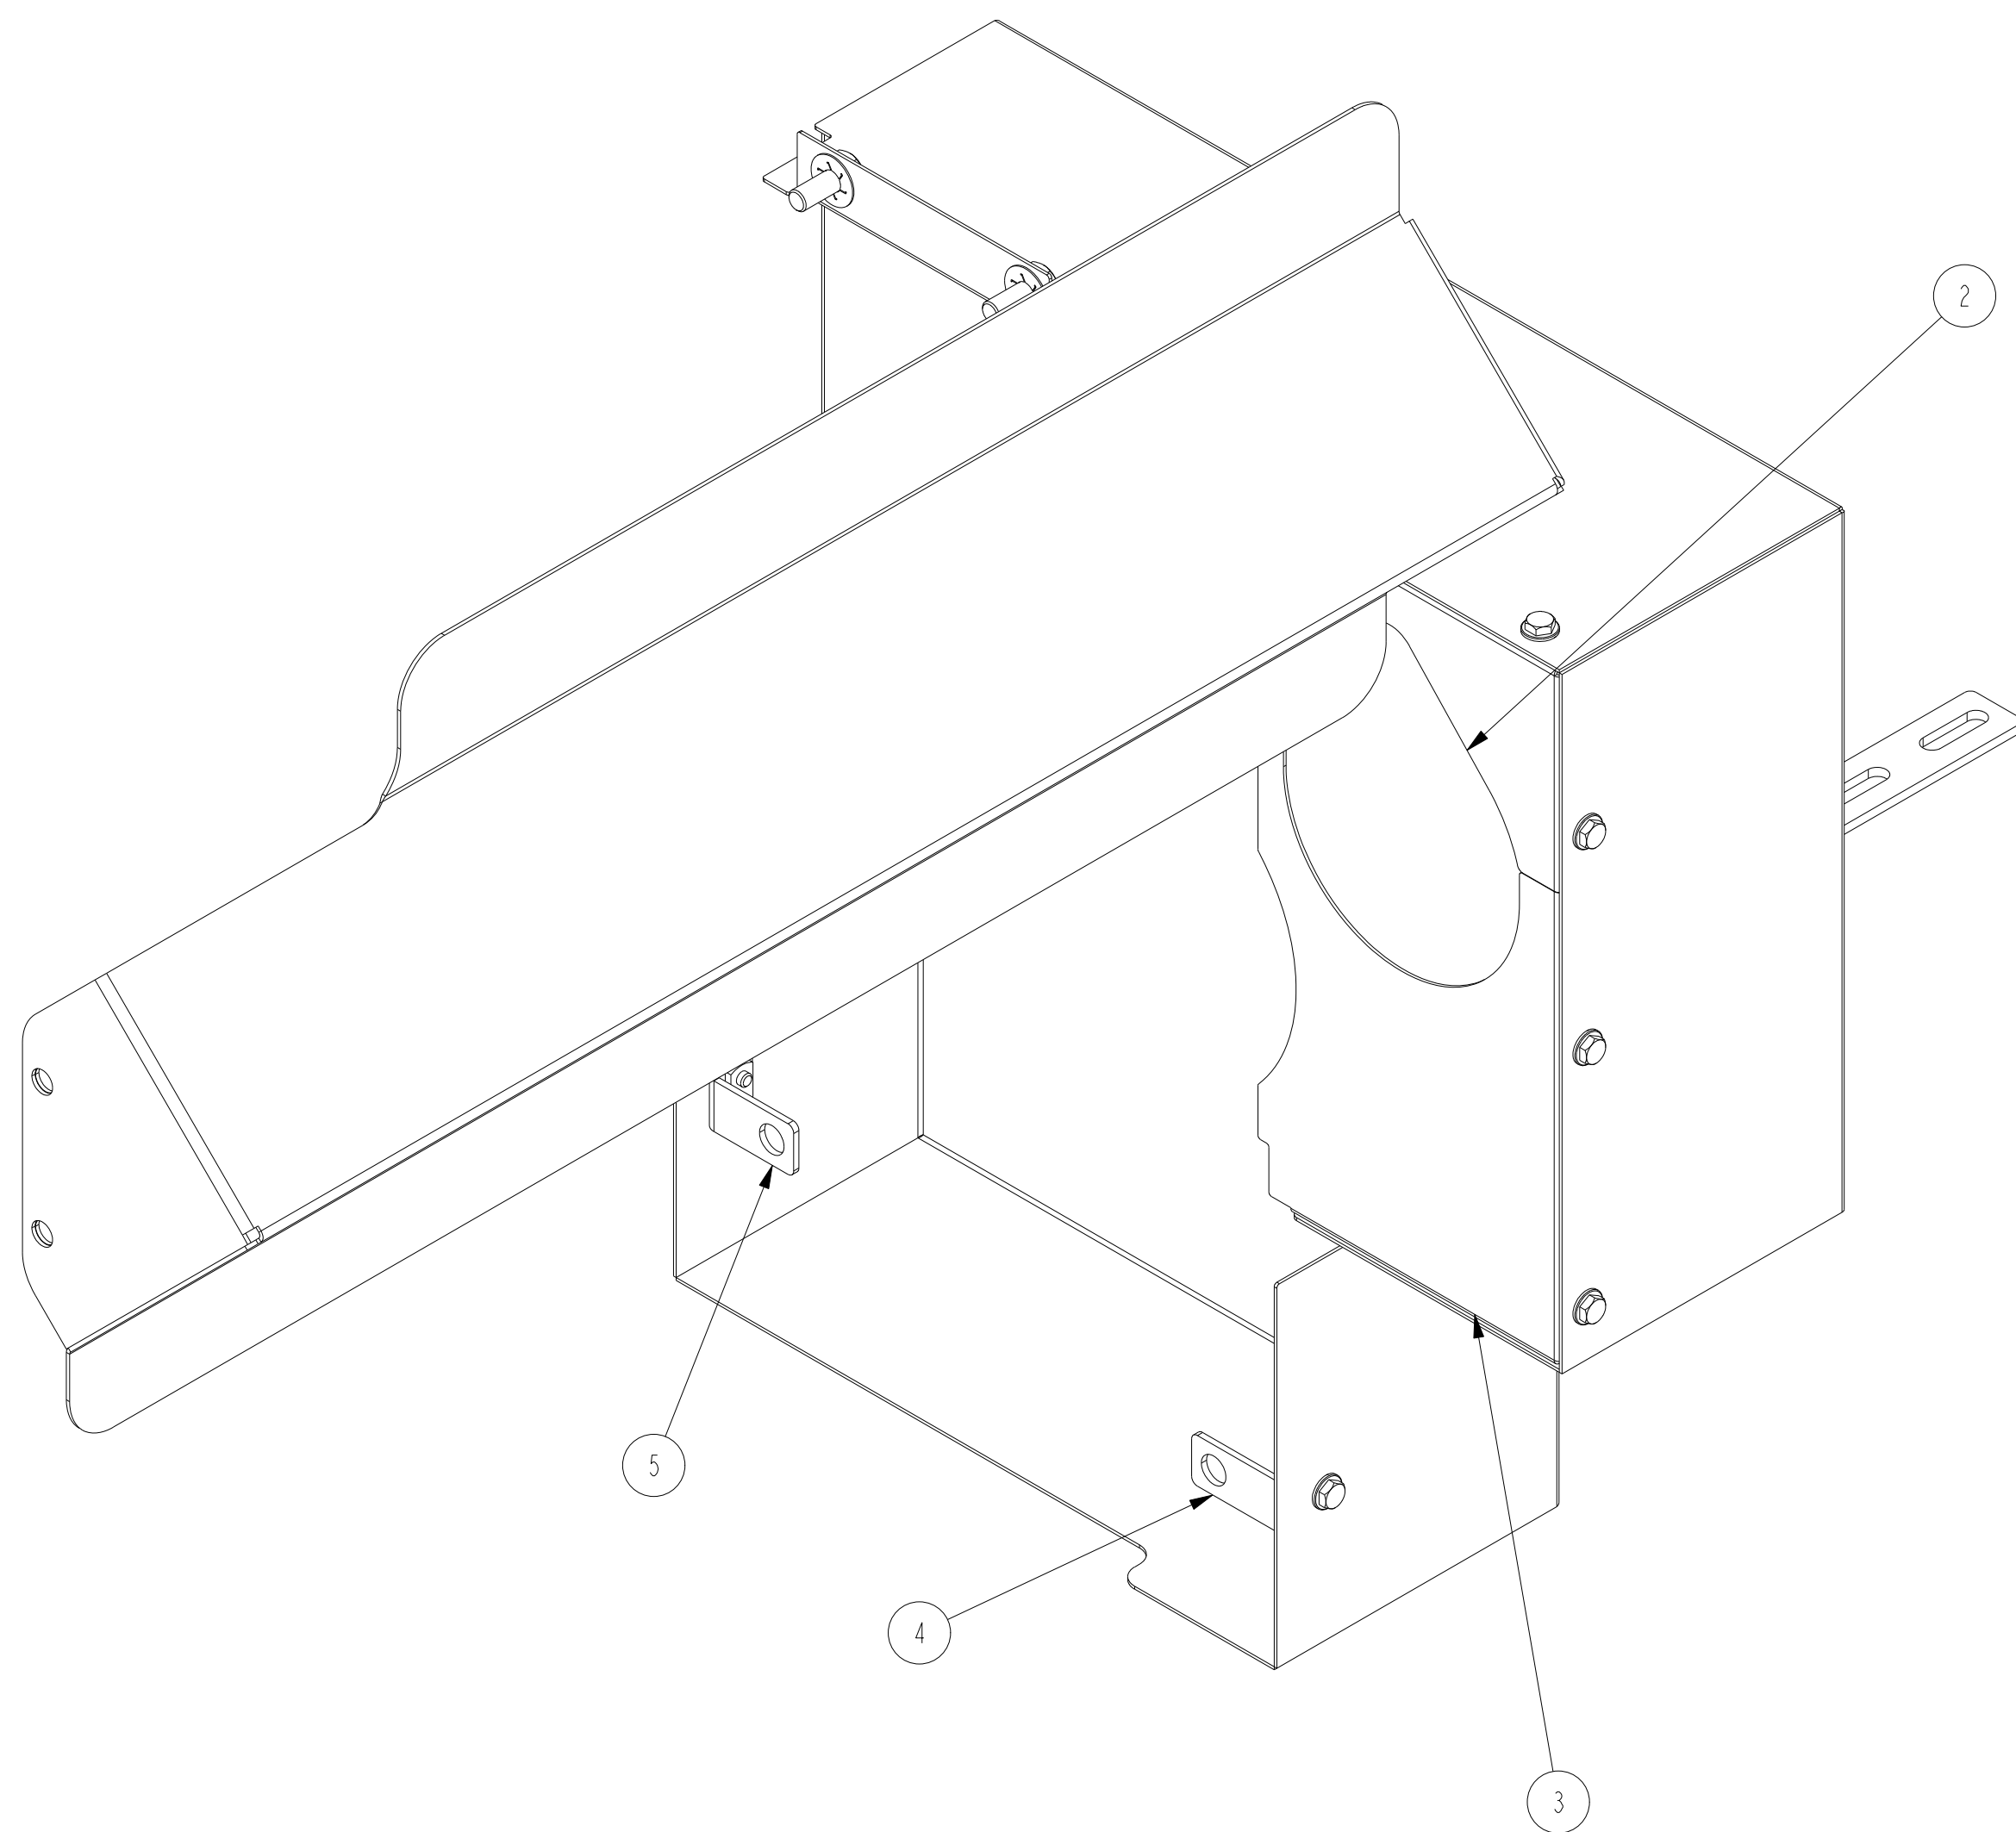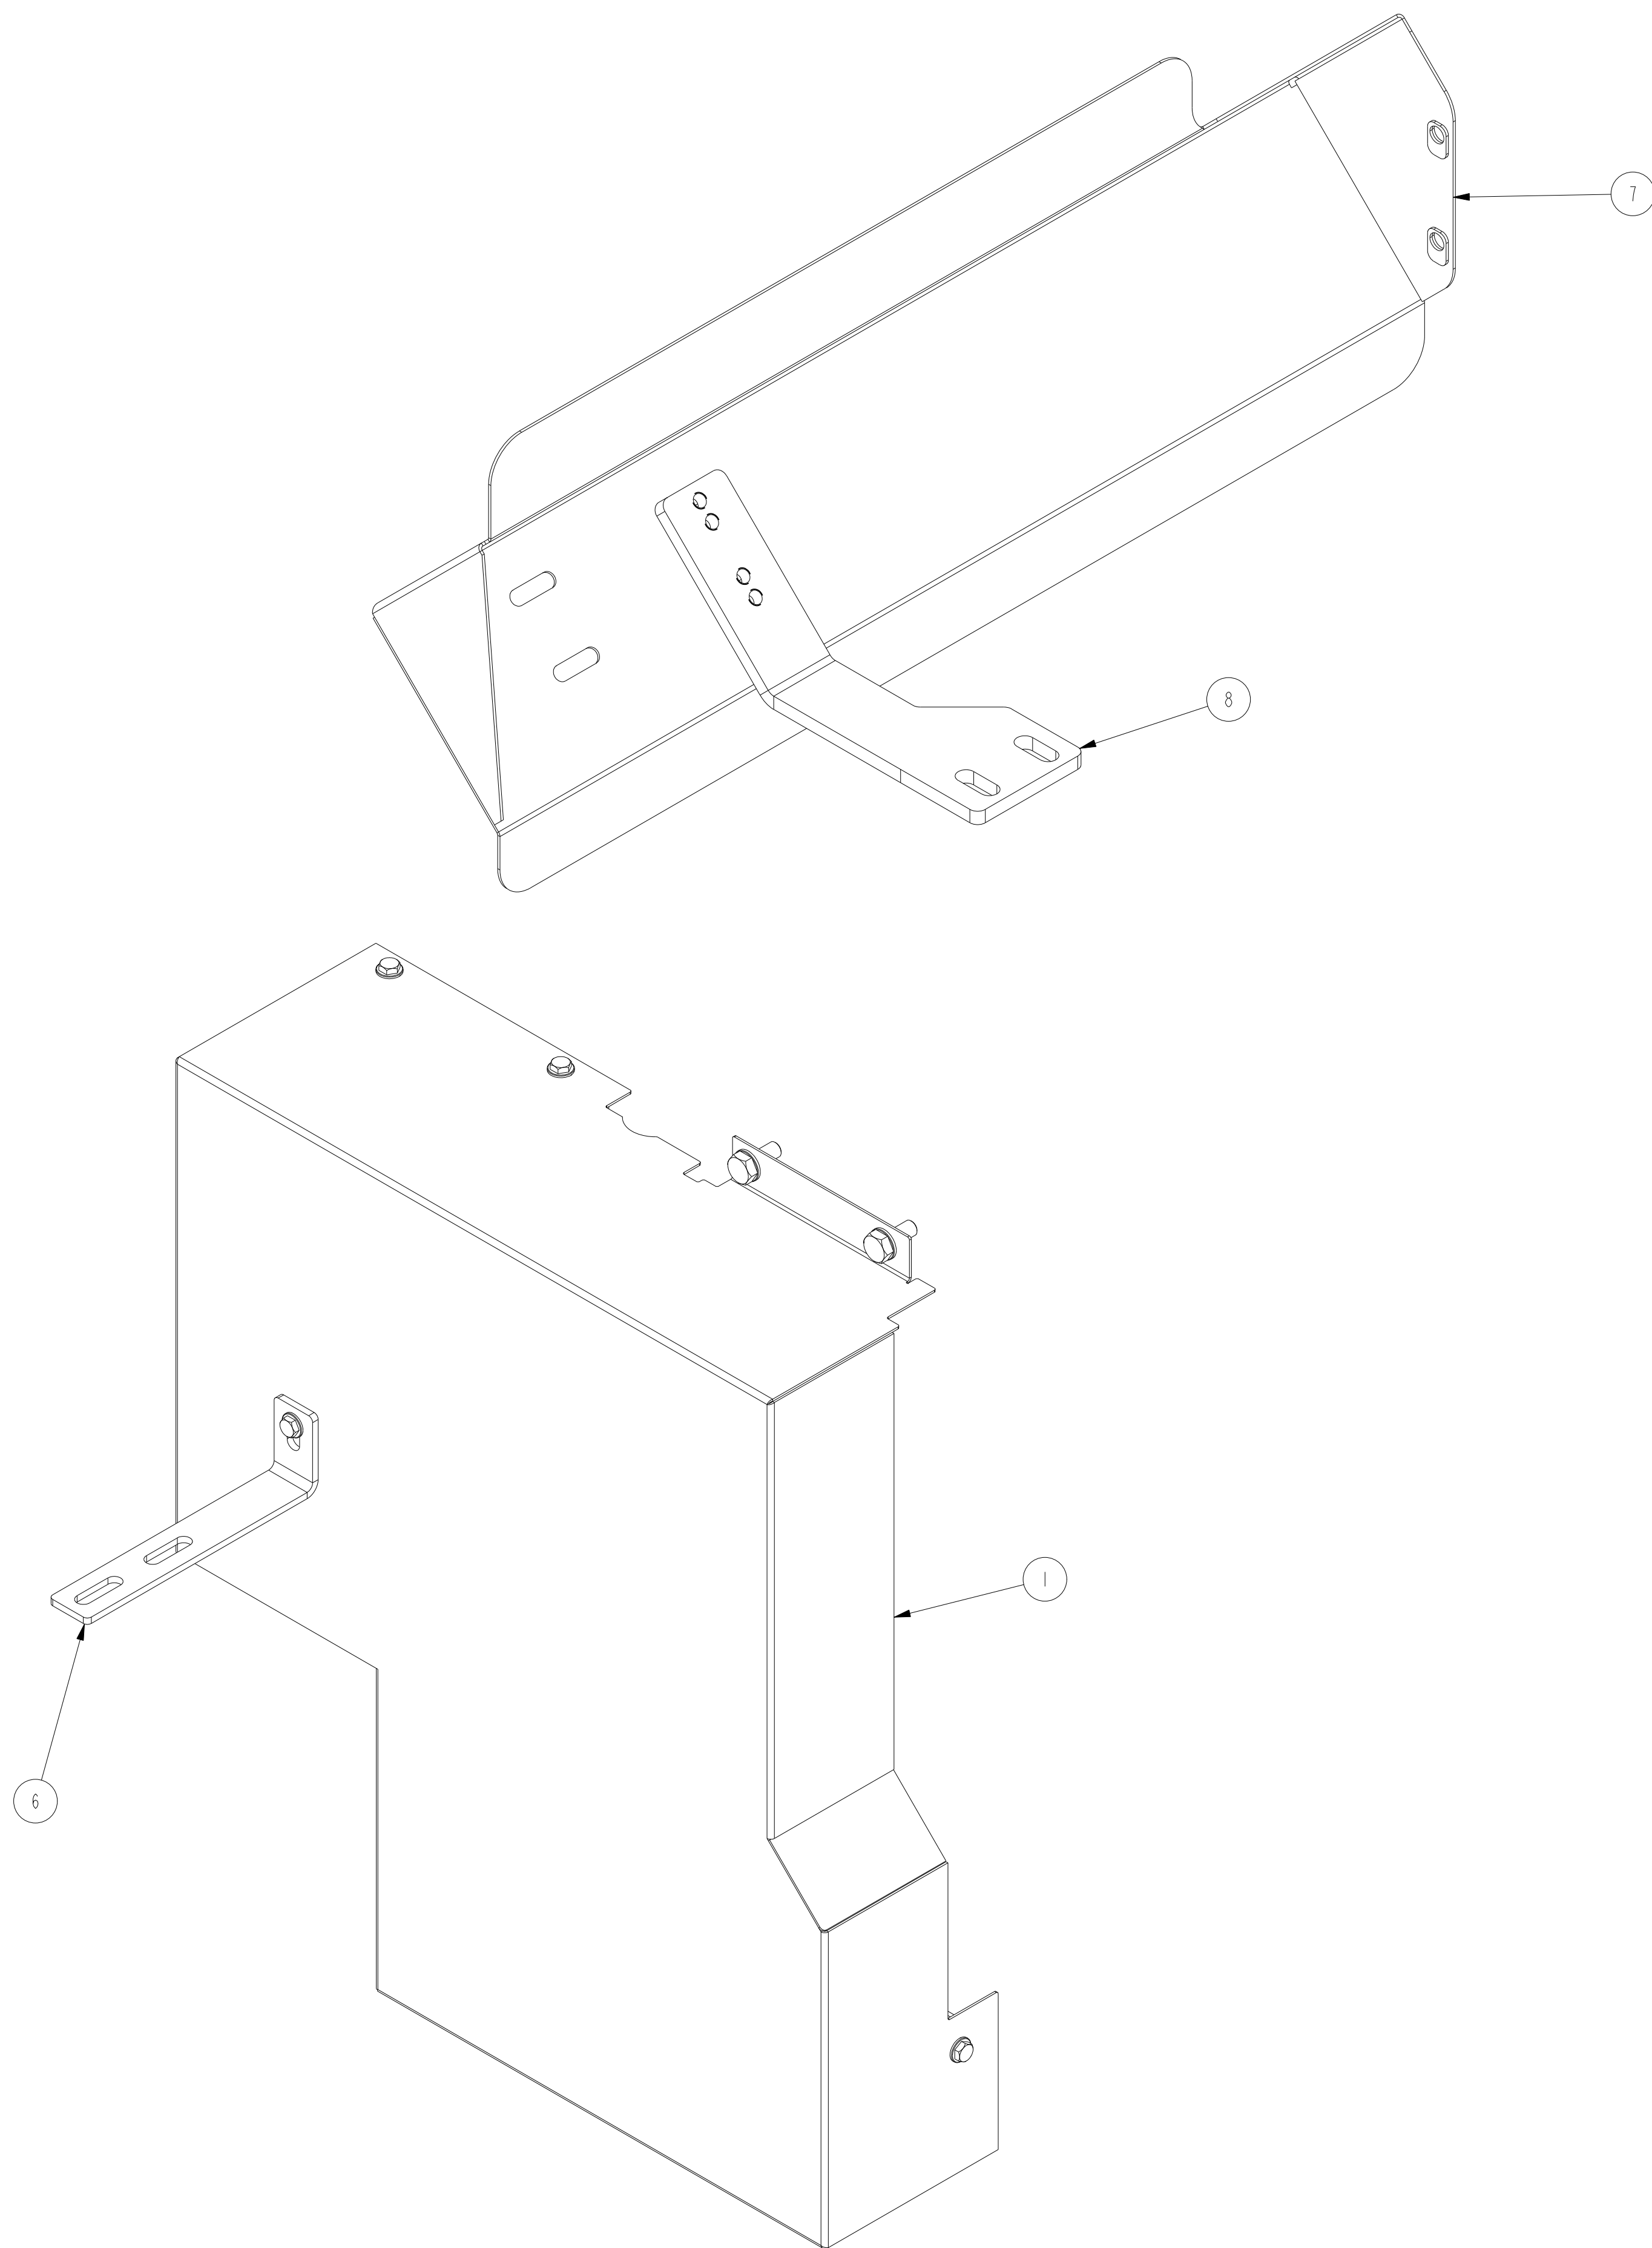


This document contains confidential and trade secret information, is the property of Cummins Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as expressly provided by Cummins Power LLC, it will not use the document or any copy thereof or the confidential or trade secret information therein, nor will it disclose or attempt to disclose the document or the confidential or trade secret information therein, nor will it permit any other person to use the document, or to use, either directly, the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Power LLC

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION		FORM TOLERANCES	FORM TOLERANCES
		AS + 0.004	AS + 0.010
		AS - 0.004	AS - 0.010
		AS ± 0.008	AS ± 0.020
		FORM TOLERANCES	FORM TOLERANCES
		AS + 0.004	AS + 0.010
		AS - 0.004	AS - 0.010
		AS ± 0.008	AS ± 0.020

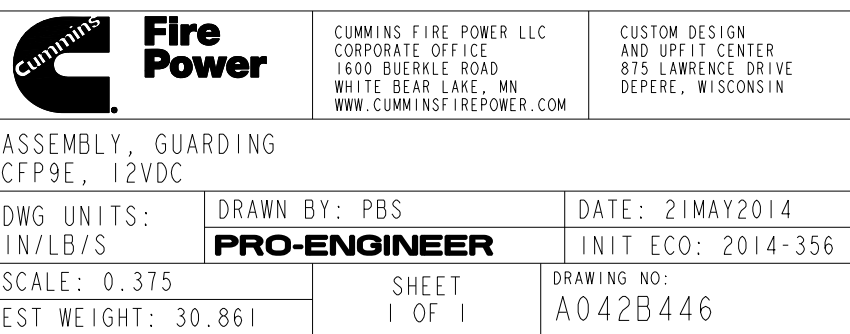


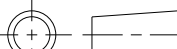
A	2014-508	DELETED 89542K	PBS	17JUL201
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

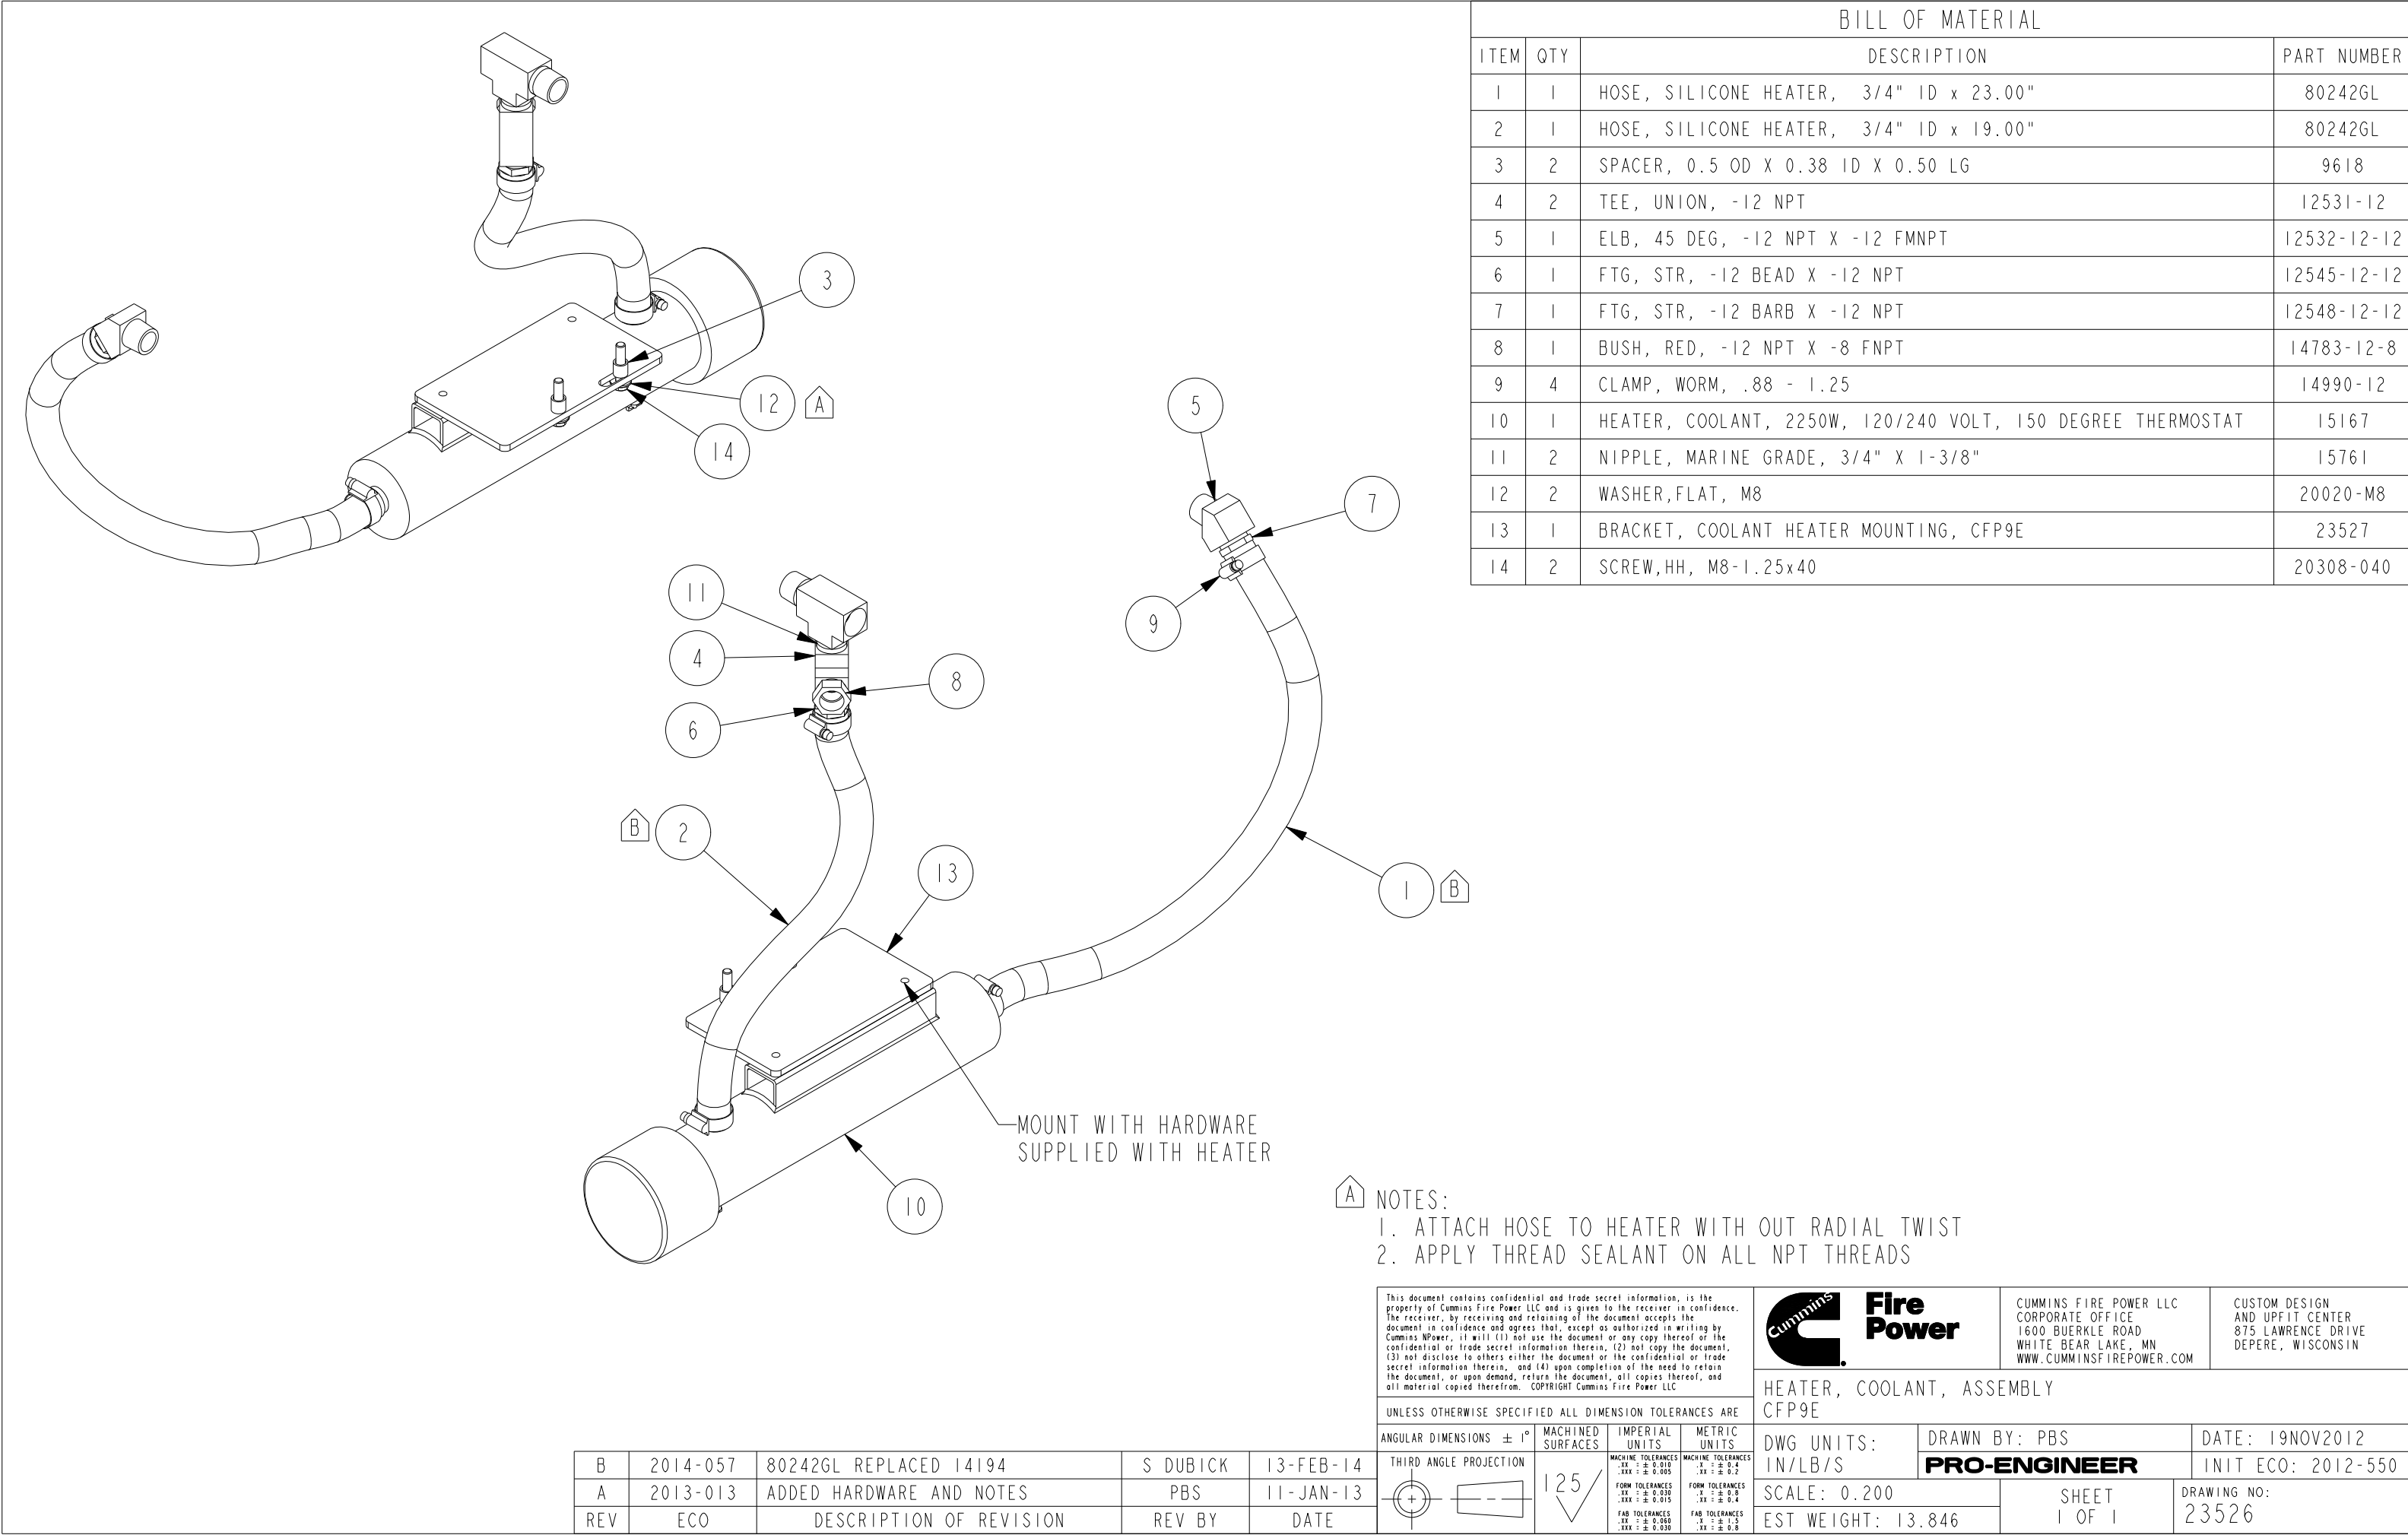


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, SILICONE HEATER, 3/4" ID x 23.00"	80242GL
2	1	HOSE, SILICONE HEATER, 3/4" ID x 19.00"	80242GL
3	2	SPACER, 0.5 OD X 0.38 ID X 0.50 LG	9618
4	2	TEE, UNION, -12 NPT	12531-12
5	1	ELB, 45 DEG, -12 NPT X -12 FMNPT	12532-12-12
6	1	FTG, STR, -12 BEAD X -12 NPT	12545-12-12
7	1	FTG, STR, -12 BARB X -12 NPT	12548-12-12
8	1	BUSH, RED, -12 NPT X -8 FNPT	14783-12-8
9	4	CLAMP, WORM, .88 - 1.25	14990-12
10	1	HEATER, COOLANT, 2250W, 120/240 VOLT, 150 DEGREE THERMOSTAT	15167
11	2	NIPPLE, MARINE GRADE, 3/4" X 1-3/8"	15761
12	2	WASHER,FLAT, M8	20020-M8
13	1	BRACKET, COOLANT HEATER MOUNTING, CFP9E	23527
14	2	SCREW,HH, M8-1.25x40	20308-040

- NOTES:
1. ATTACH HOSE TO HEATER WITH OUT RADIAL TWIST
 2. APPLY THREAD SEALANT ON ALL NPT THREADS

B	2014-057	80242GL REPLACED 14194	S DUBICK	13-FEB-14
A	2013-013	ADDED HARDWARE AND NOTES	PBS	11-JAN-13
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC						CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUEKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM		CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN			
				HEATER, COOLANT, ASSEMBLY CFP9E							
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE											
ANGULAR DIMENSIONS ± 1°		MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS	DWG UNITS:		DRAWN BY: PBS		DATE: 19NOV2012		
THIRD ANGLE PROJECTION			MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2	IN/LB/S		PRO-ENGINEER		INIT ECO: 2012-550		
			FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4	SCALE: 0.200		SHEET 1 OF 1		DRAWING NO: 23526		
				EST WEIGHT: 13.846							

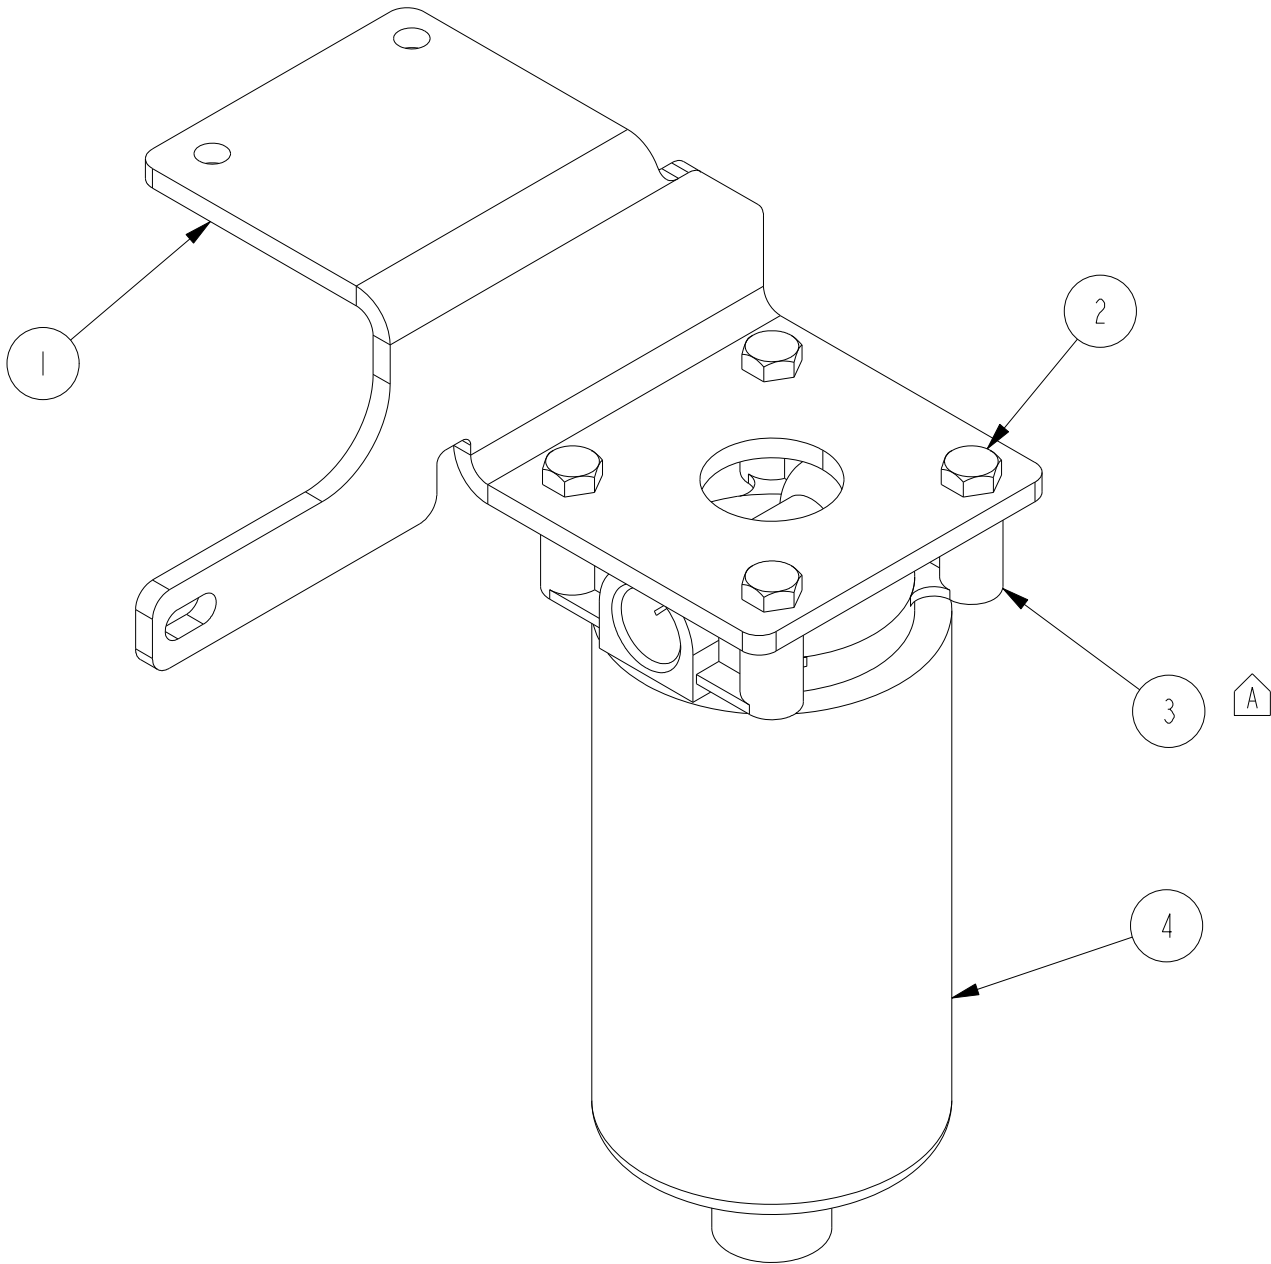

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	BRACKET, COOLING LOOP SUPPORT, UPPER, CFP9E	13583
2	4	SCREW,HH, 0.38-16x1.00	20238-100
3	1	FILTER HEAD, CUMMINS	142784-S
4	1	FILTER, FUEL	FS1212

A	2014-239	142784-S WAS 142784	PBS	16APR2014
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM


CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSY, FUEL PREFILTER
CFP9E


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	125	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2
		FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
		FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8


DWG UNITS: IN/LB/S	DRAWN BY: GVD PRO-ENGINEER	DATE: 15FEB2014 INIT ECO: 2014-049
SCALE: 0.500	SHEET 1 OF 1	DRAWING NO: A042A379
EST WEIGHT: 9.226		

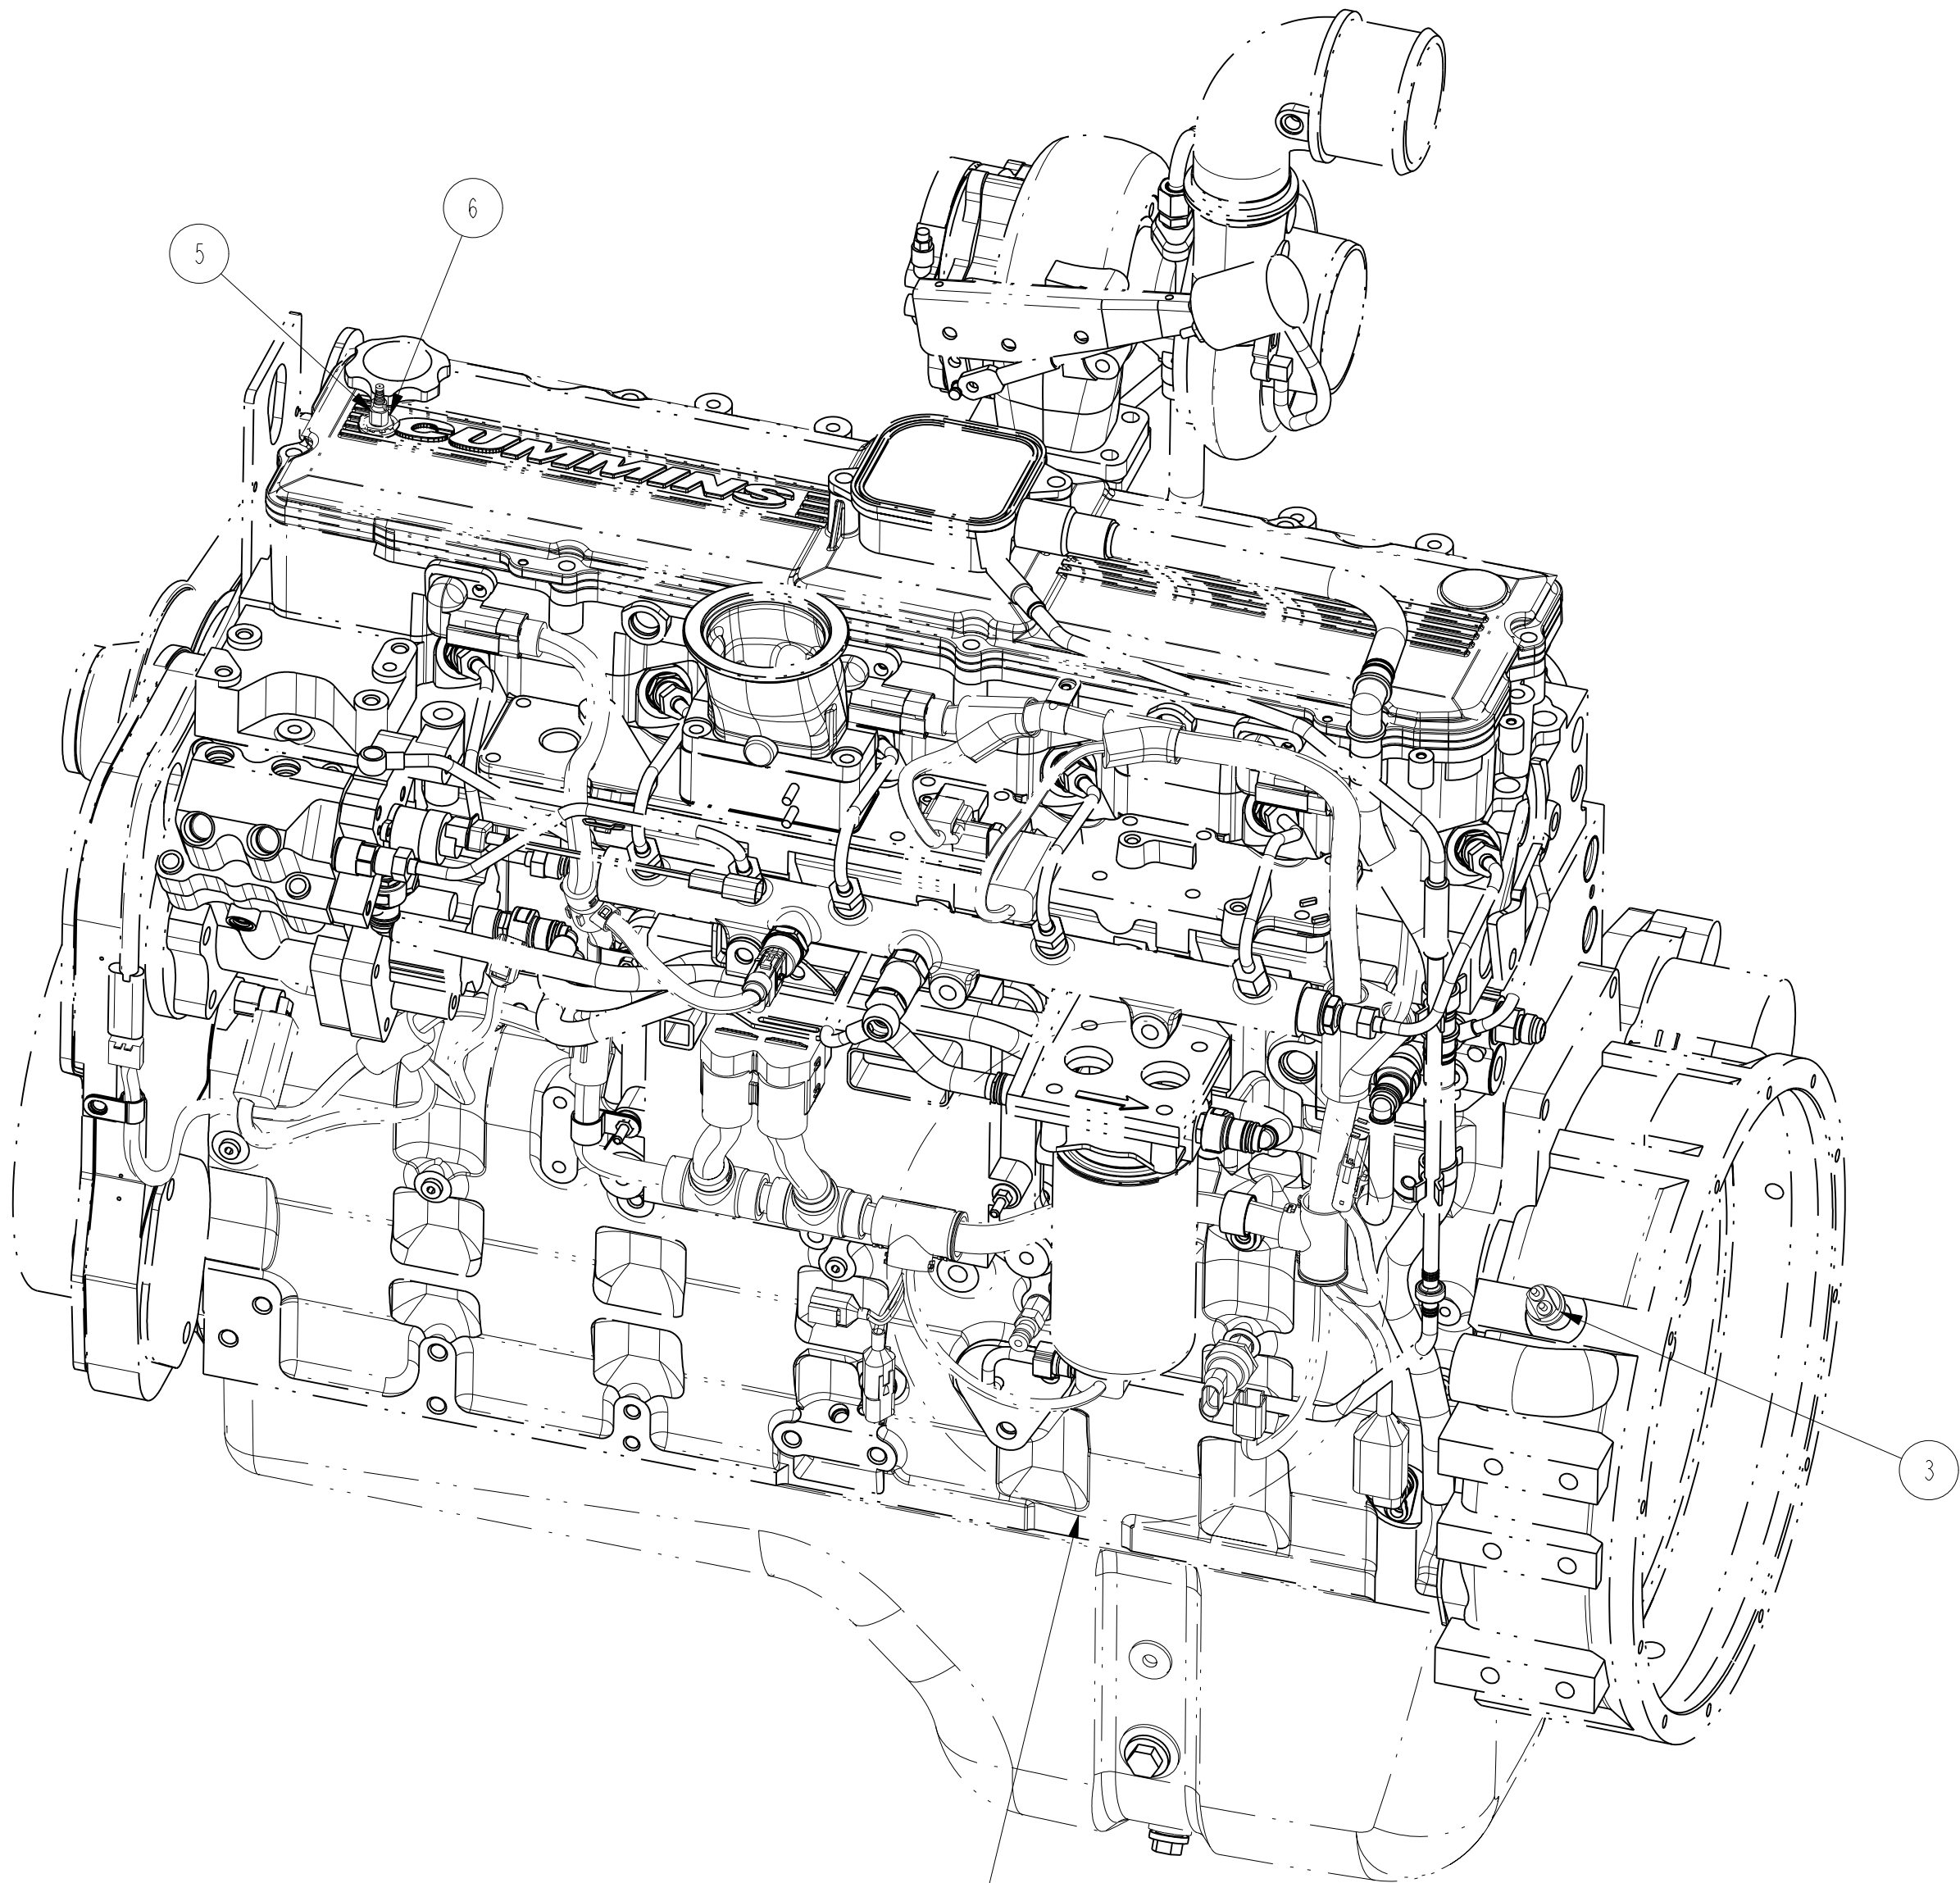


SEE DETAIL A

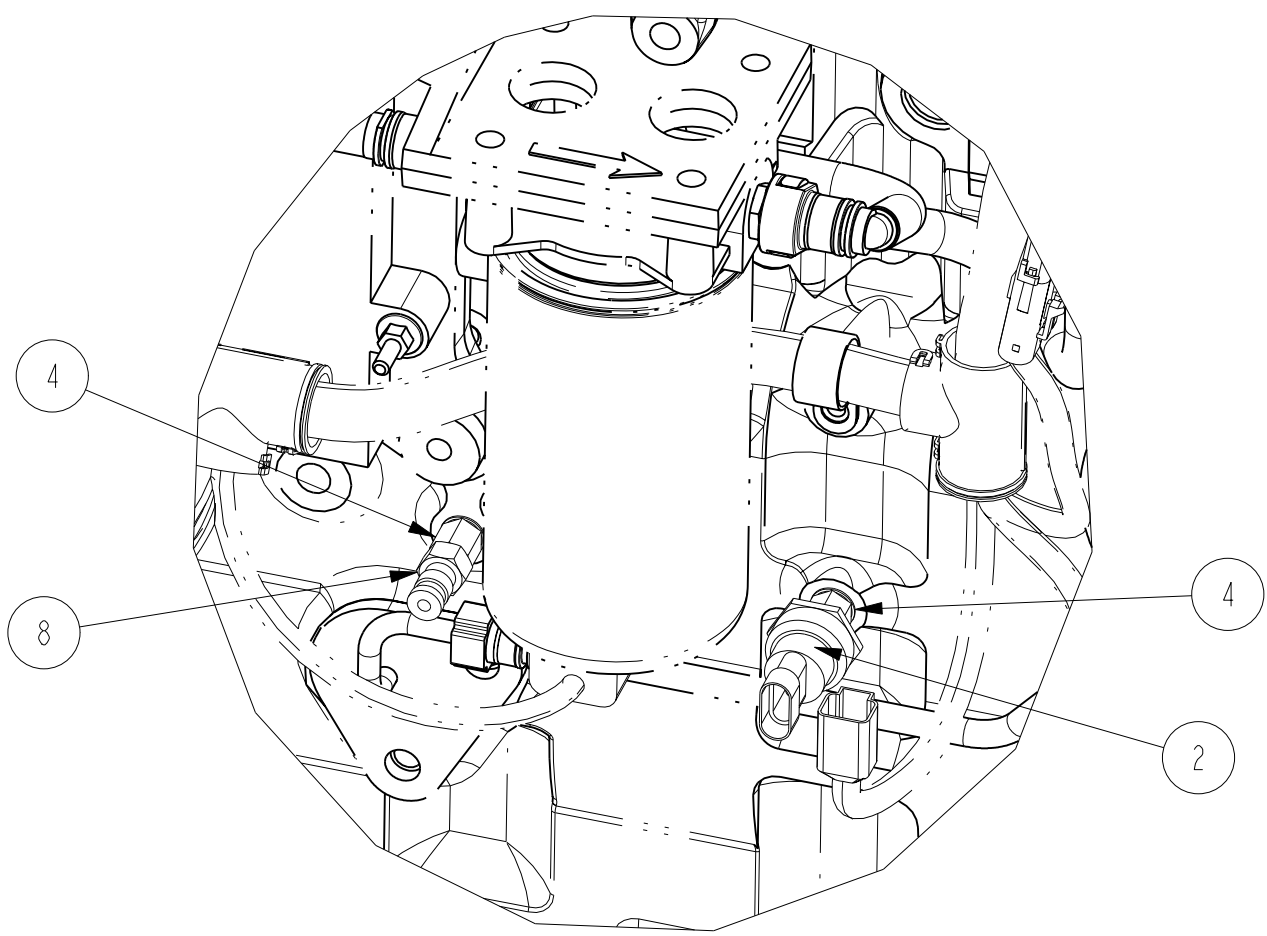

DETAIL A
SCALE 0.375

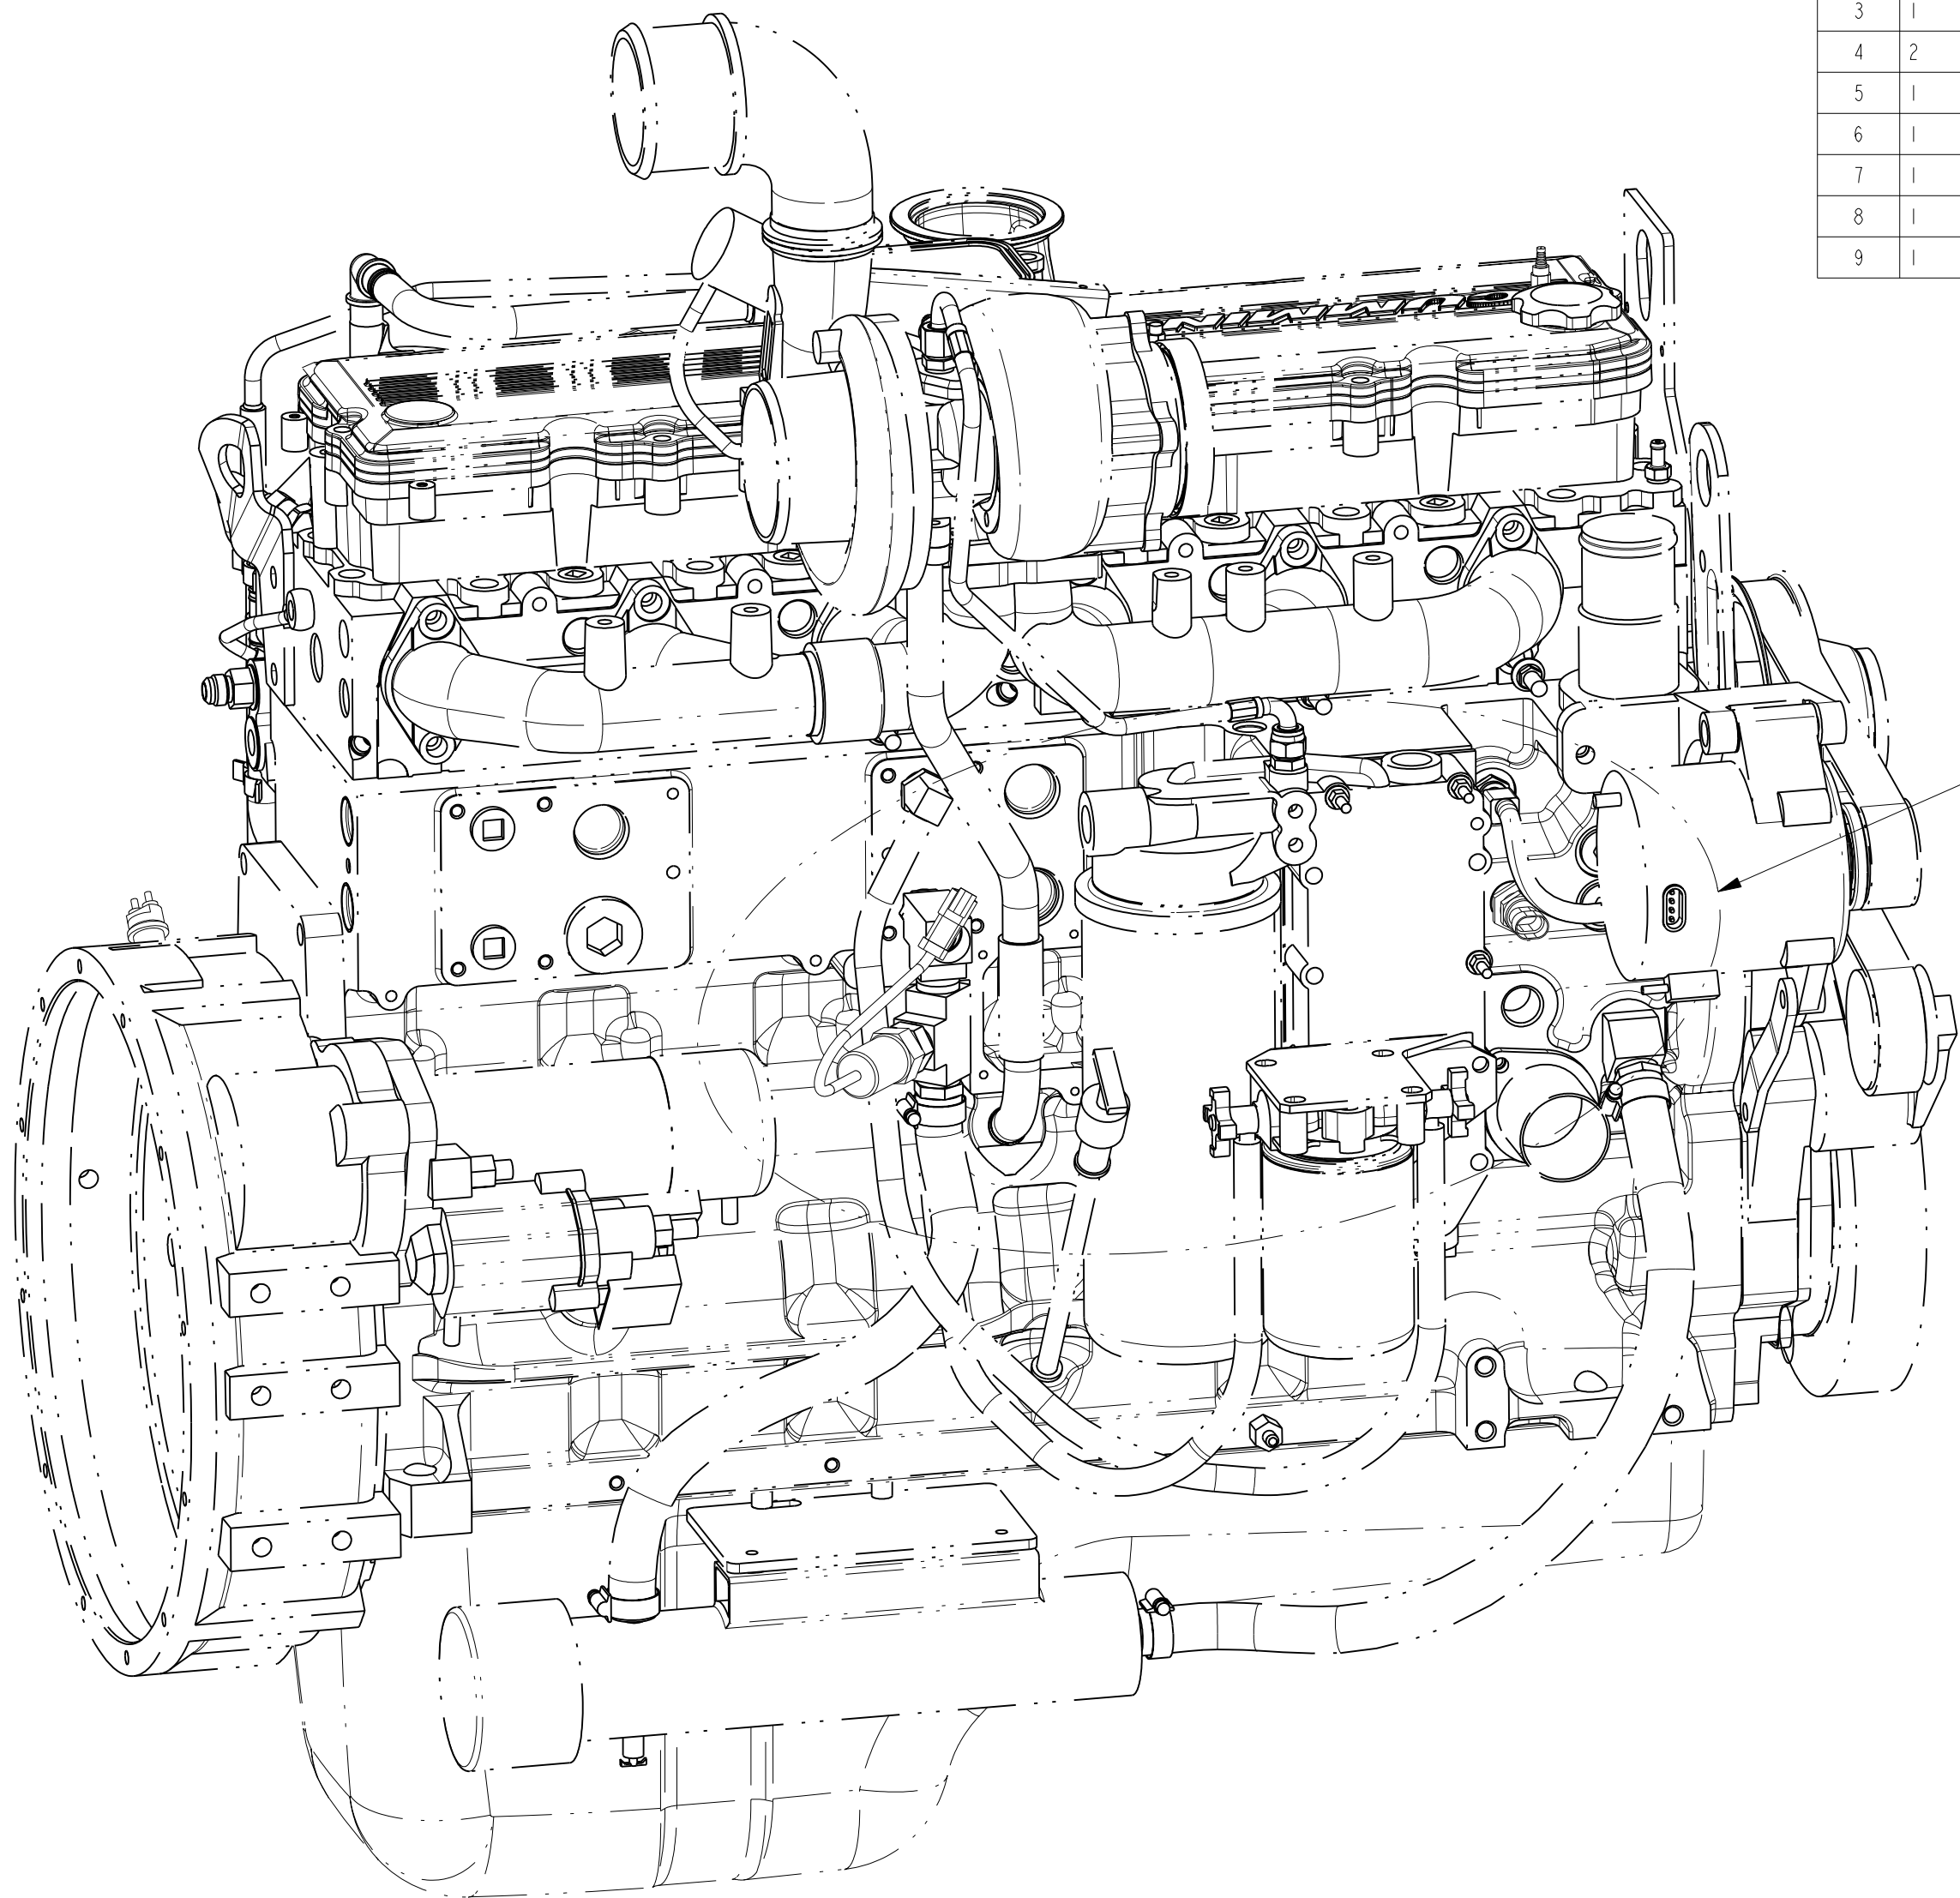

SEE DETAIL B

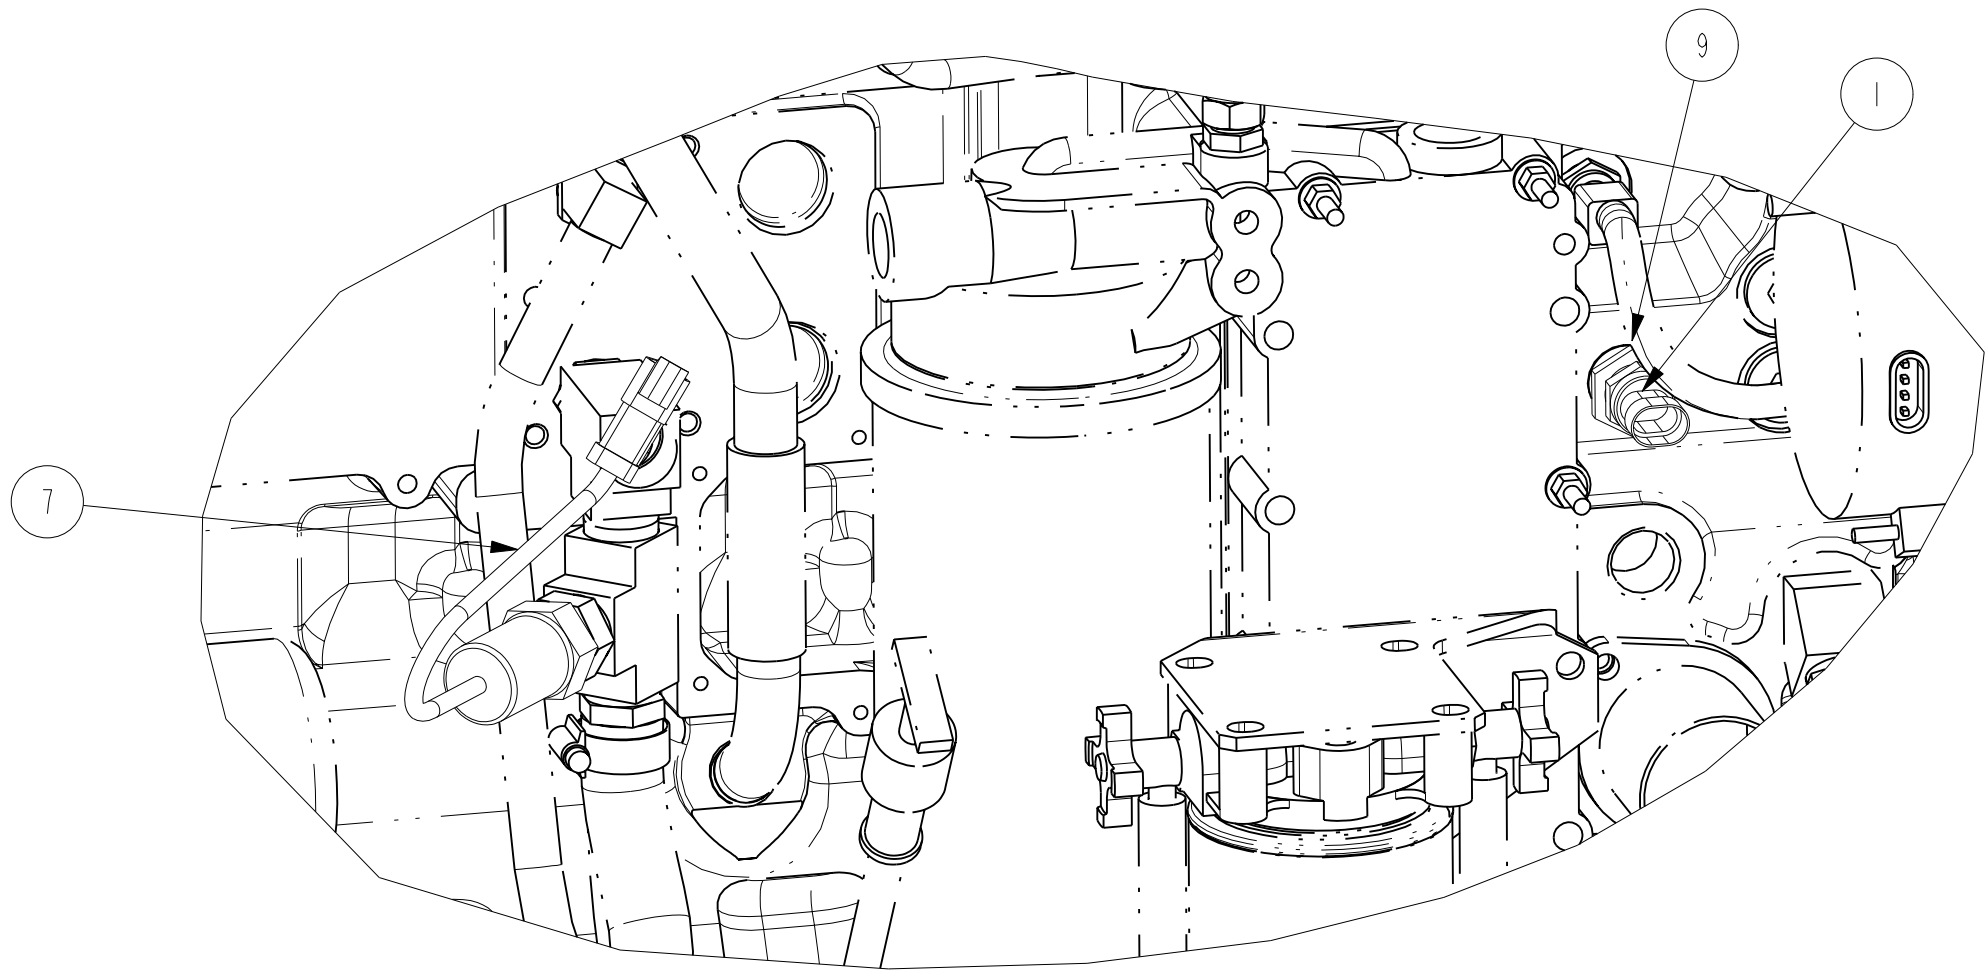

DETAIL B
SCALE 0.375





BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	SWITCH, WATER TEMP, 200F SETTING, #3408632	8860
2	1	SWITCH, OIL PRESSURE, 16 PSI, #3408607	8861
3	1	SENSOR, MAG PICK UP, #5MT2005	9569
4	2	FTG, STR, M10 ORR X -2 FNPT	12181-M10-2
5	1	SWITCH, PROXIMITY, 2M CABLE, 12-24V	12865
6	1	WASHER, PRESSURE SEALING WASHER, -	13769
7	1	SWITCH, LOW COOLANT TEMP, 110° F SET POINT	18105
8	1	CONNECTOR, QUICK DISCONNECT	3377244
9	1	BUSHING, 1/2" x 3/4" NPT	LTL-SRB3412

NOTES:
1. ADD THREAD SEALANT TO ALL NPT THREADS

DI	2014-049	ADDED ITEMS 12865 AND 13769	GVD	13FEB2014
CI	2013-272	ADDED MAG PICK-UP	PBS	14MAY2013
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE: ANGULAR DIMENSIONS ± ° THIRD ANGLE PROJECTION			
MACHINED SURFACES	IMPERIAL UNITS IN/LB/S ± .005	METRIC UNITS MM/KG ± .005	THIRD ANGLE PROJECTION
125	± .005	± .005	THIRD ANGLE PROJECTION

KIT, SENSOR & ADAPTER CFP9E		DWG UNITS: IN/LB/S	SCALE: 0.250	EST WEIGHT: 3.047
DRAWN BY: MAC		SHEET 1 OF 2	DATE: 17SEPT2009	CUSTOM DESIGN AND UPGIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
PRO-ENGINEER		INIT ECO: -	DRAWING NO: 15602	

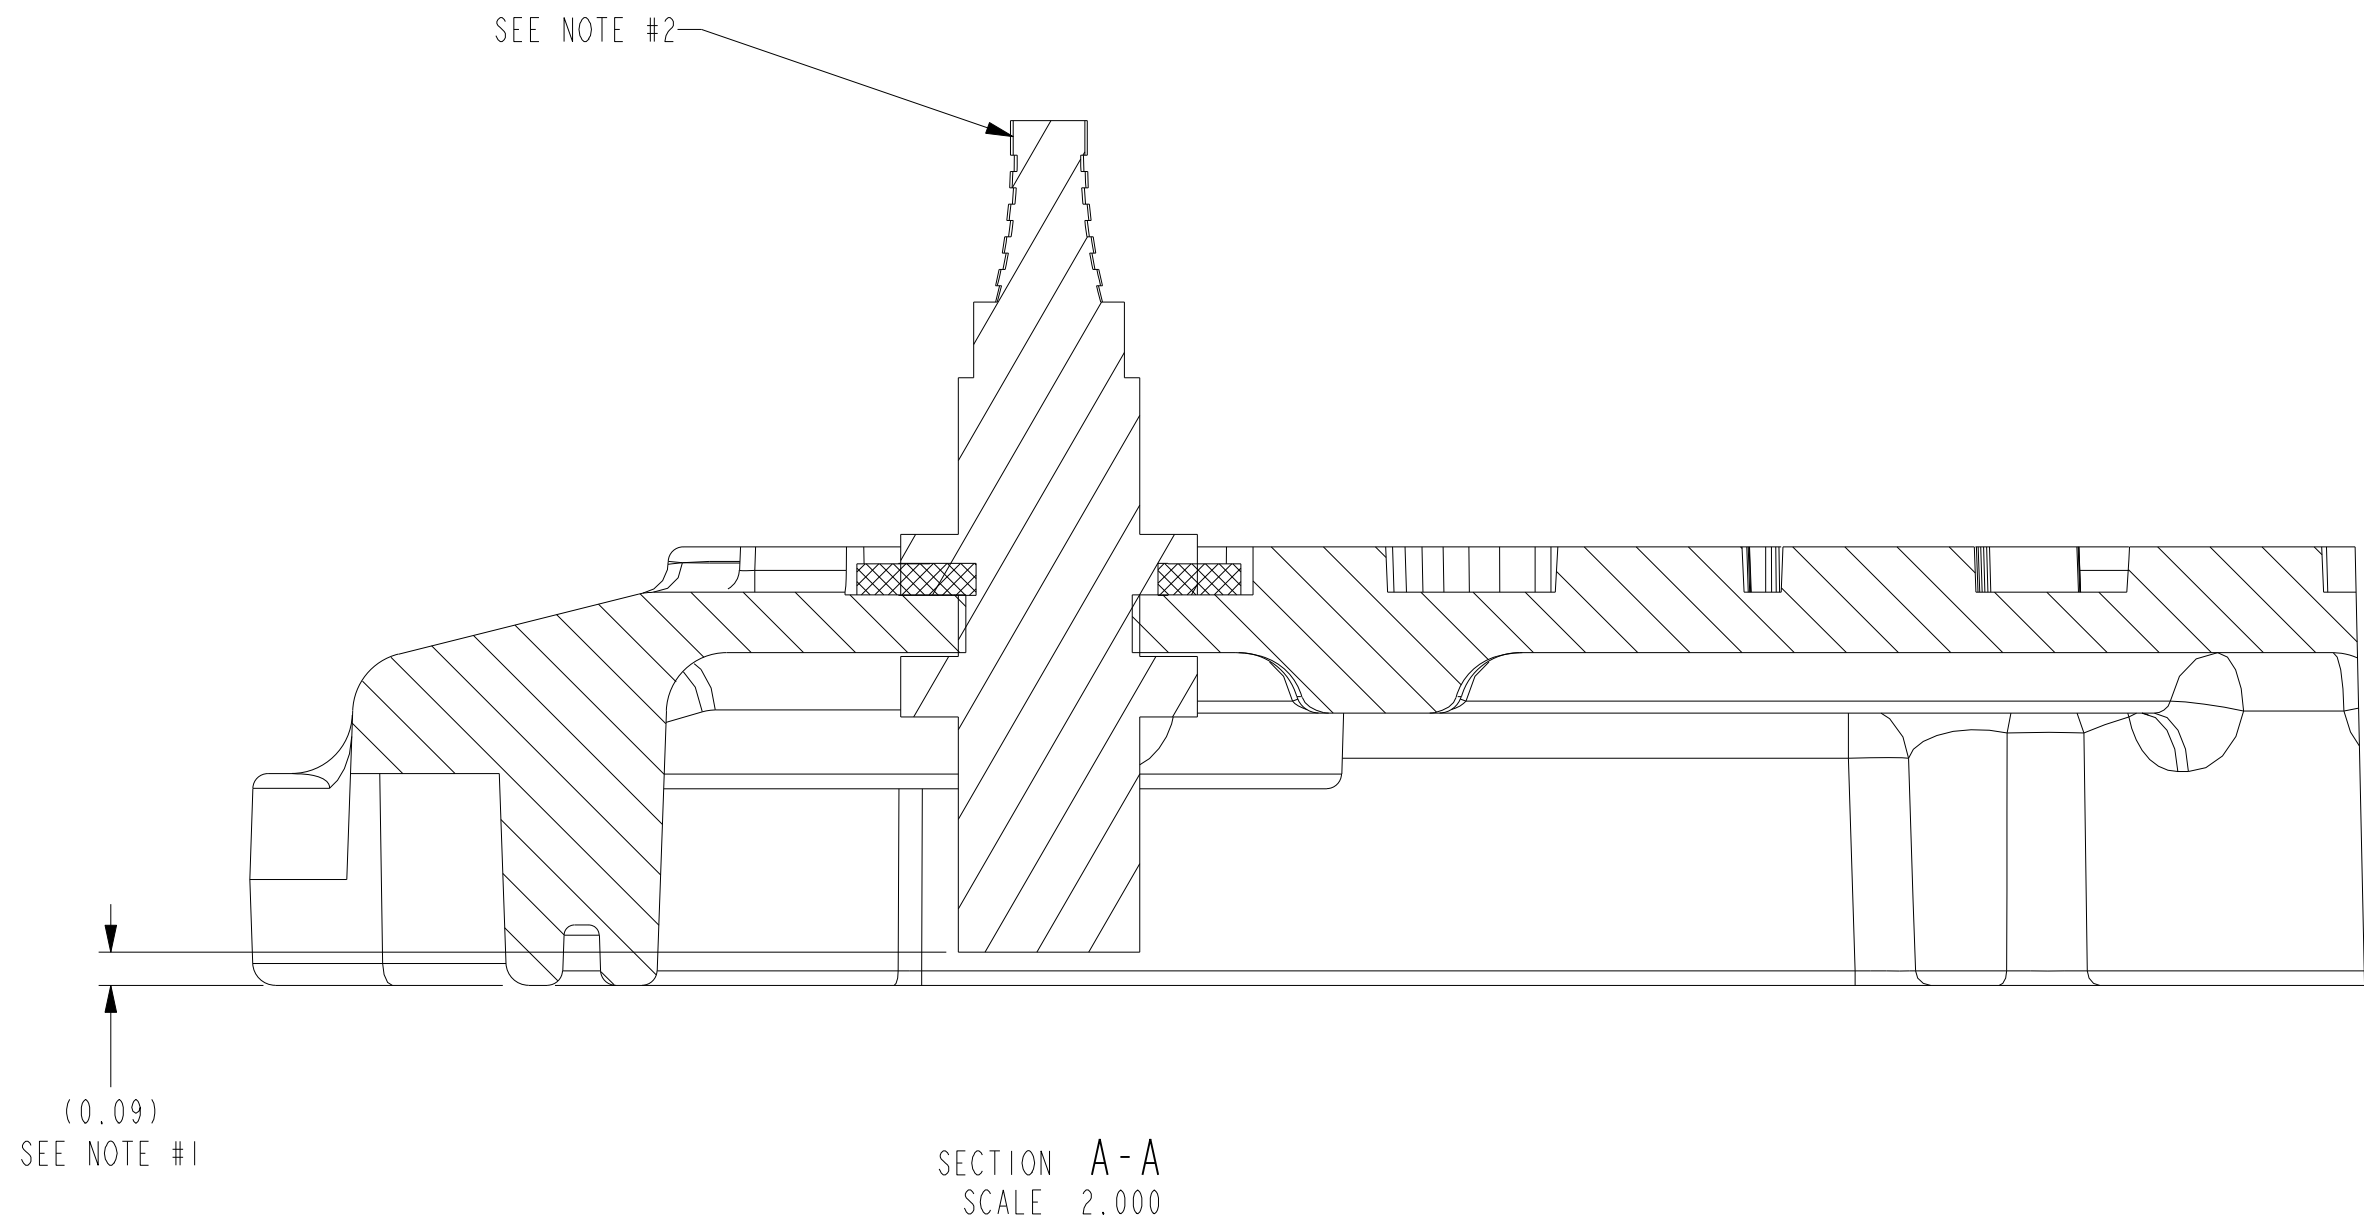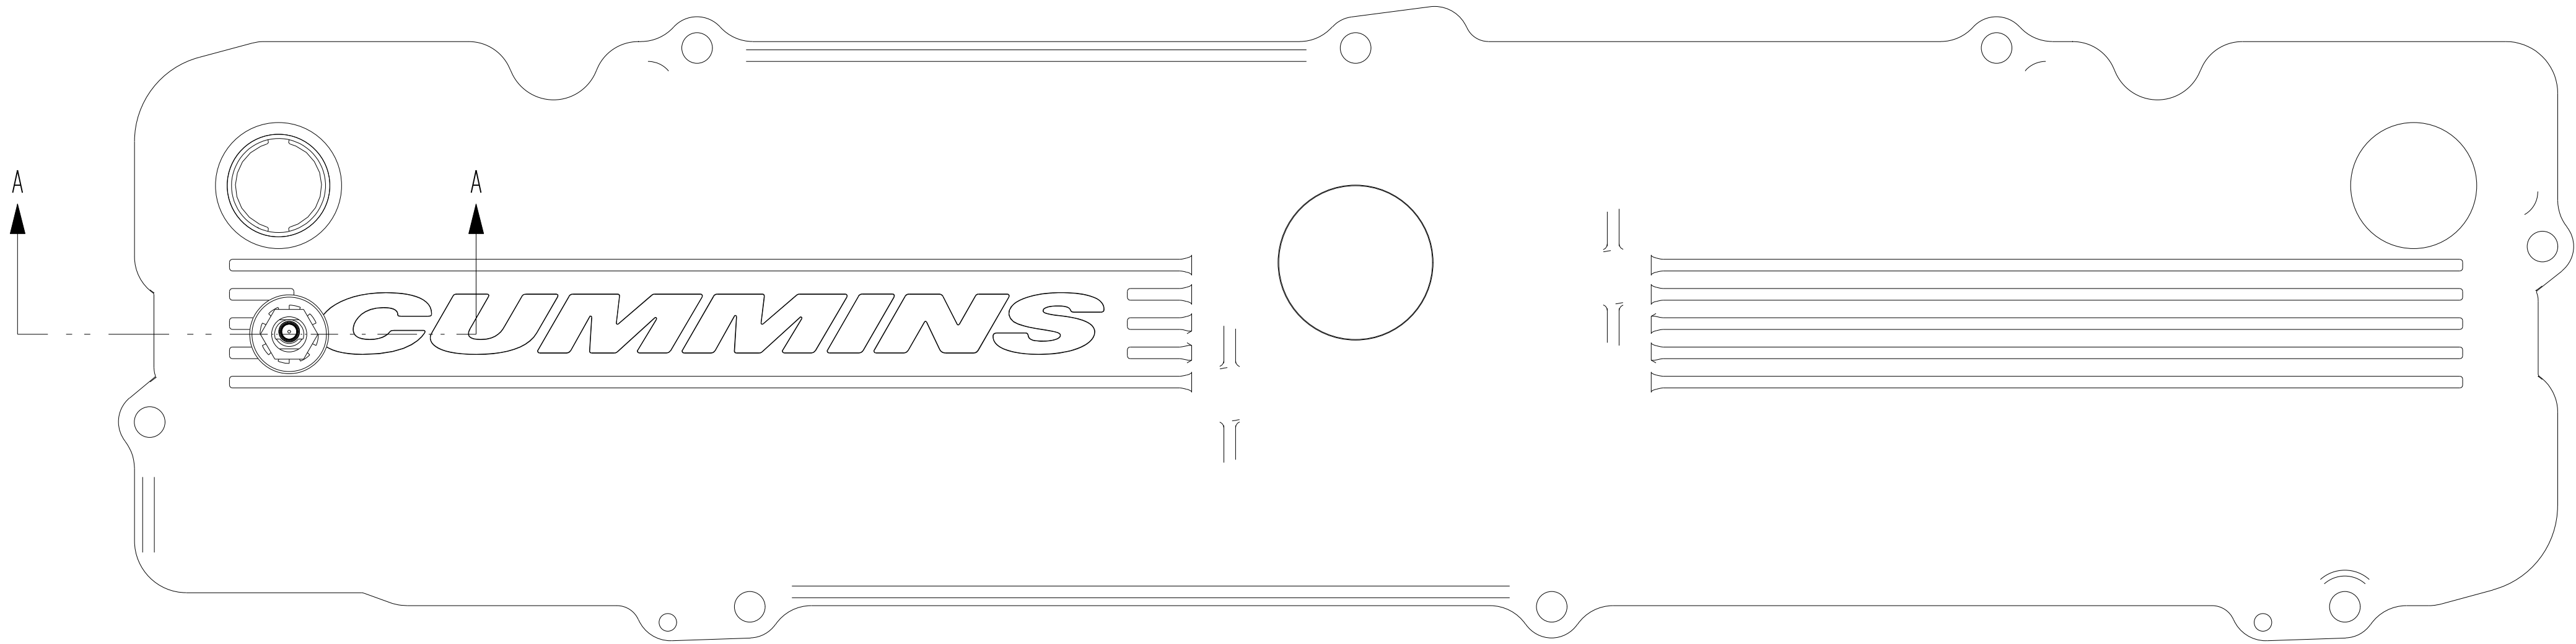

- NOTES:
1. USE TOOL 15341 TO SET PROXIMITY SENSOR (12865) HEIGHT
 2. USE SOCKET THAT IS MODIFIED TO ACCOMMODATE SENSOR WIRES
 3. RE-USE VALVE COVER GASKET AND HARDWARE

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE			<div><div>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given in confidence, to and for the use of the recipient only. It is not to be distributed, copied, or otherwise used without the express written permission of Cummins Fire Power LLC. If you are not the intended recipient, you should not disseminate this information. If you are the intended recipient, you should not disseminate this information without the express written permission of Cummins Fire Power LLC. If you are not the intended recipient, you should not disseminate this information without the express written permission of Cummins Fire Power LLC. If you are the intended recipient, you should not disseminate this information without the express written permission of Cummins Fire Power LLC.</div><div>UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE: ANGULAR DIMENSIONS ± 1° MACHINED SURFACES THIRD ANGLE PROJECTION</div><div><div>IMPERIAL UNITS IN/LB/S</div><div>METRIC UNITS MM/KG</div></div><div><div>FORM TOLERANCE SEE 125</div><div>FORM TOLERANCE SEE 125</div></div></div>	<div><div></div><div>CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 DUEKALE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM</div></div> <div><div>CUSTOM DESIGN AND UPPITY CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</div></div>	<div><div>KIT, SENSOR & ADAPTER CFP9E</div><div>DWG UNITS: IN/LB/S</div><div>SCALE: 0.625</div><div>EST WEIGHT: 3.047</div></div> <div><div>DRAWN BY: MAC PRO-ENGINEER</div><div>SHEET 2 OF 2</div></div> <div><div>DATE: 17SEPT2009</div><div>INIT ECO: -</div><div>DRAWING NO: 15602</div></div>
-----	-----	-------------------------	--------	------	--	--	---	--	--

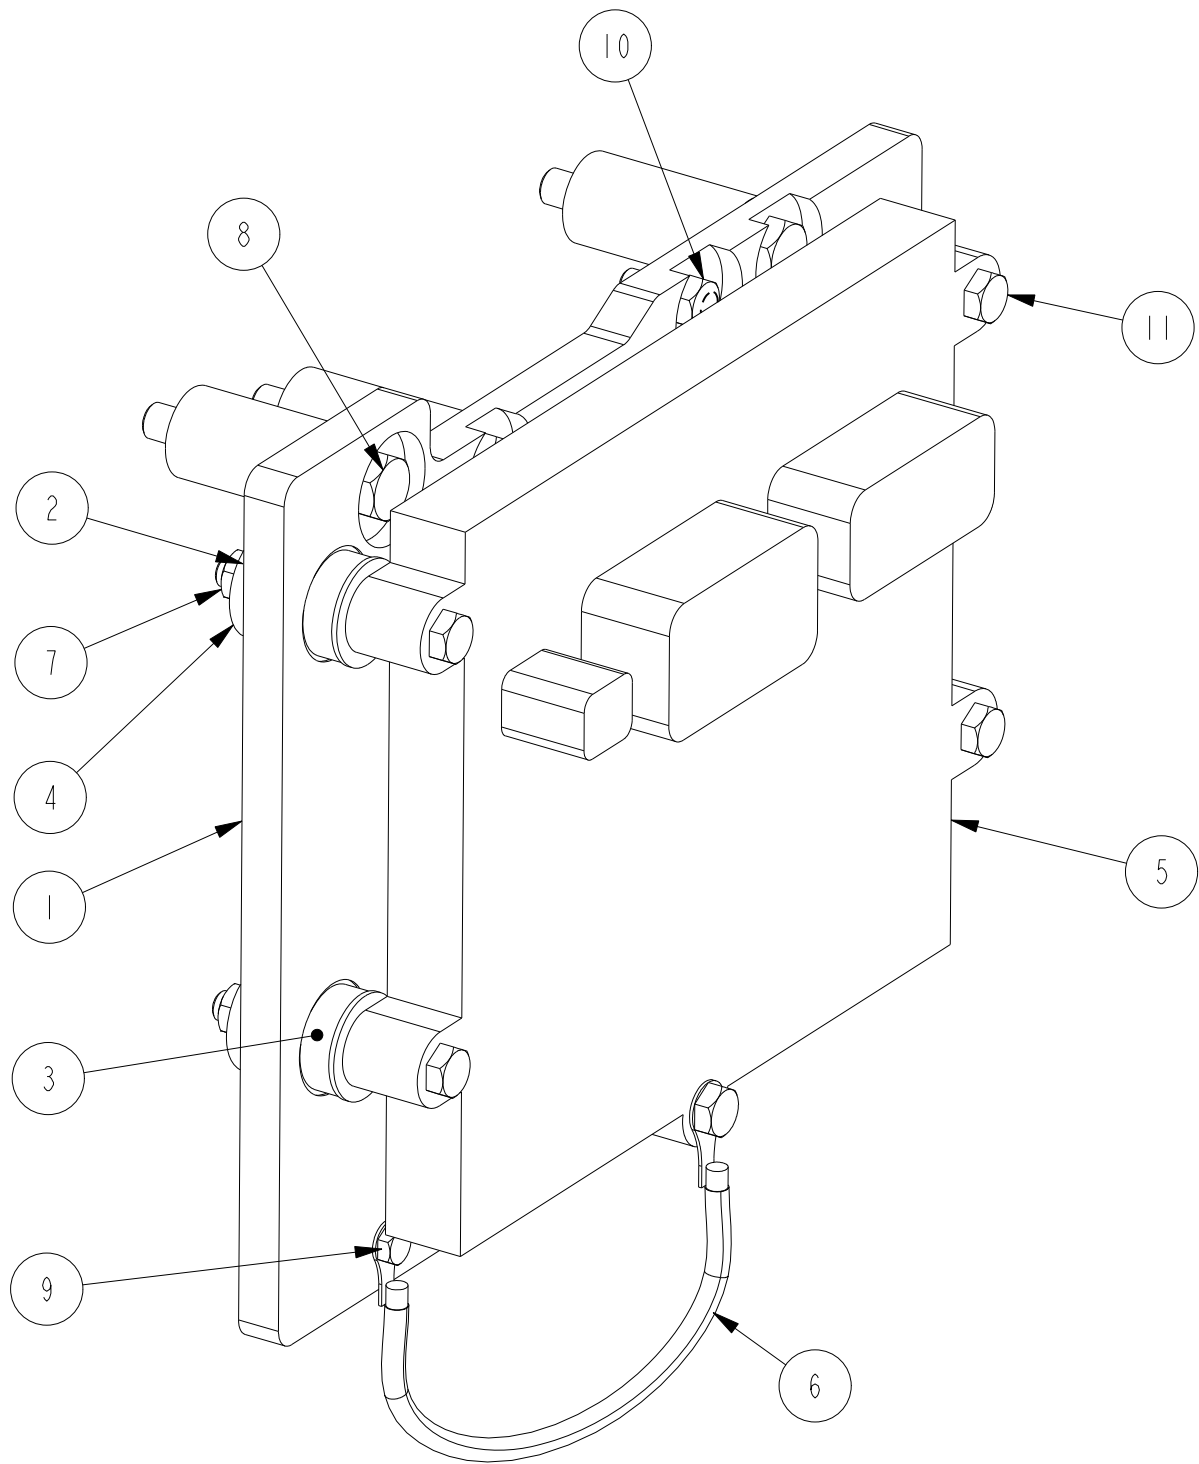

BI A

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	BRACKET, SECONDARY ECM, CFP9E	14842
2	5	WASHER,FLAT, M8	20020-M8
3	5	ISOLATOR, VIBRATION, CUMMINS	3955219
4	5	ISOLATOR, VIBRATION, CUMMINS	3955220
5	1	ECM MODULE, CUMMINS, #4921776	12726
6	1	STRAP,GORUND,6" LONG, RING ENDS	AG-GLFW6
7	5	NUT,HEX,PT, M8-1.25	20140-M8
8	4	SCREW,HH, M10-1.50x70	20310-070
9	1	SCREW,HH, M6-1.00x16MM	20306-016
10	1	SCREW,HH, M8-1.25x20	20308-020
11	5	SCREW,HH, M8-1.25x70	20308-070

This document contains confidential and trade secret information, is the property of Cummins NPower LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins NPower LLC



CUMMINS NPOWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSNPOWER.COM


CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, SECONDARY ECM
CFP9E

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS $\pm 1^\circ$ MACHINED SURFACES IMPERIAL UNITS METRIC UNITS

THIRD ANGLE PROJECTION



125

MACHINE TOLERANCES
.XX ± 0.010
.XXX ± 0.005
FORM TOLERANCES
.XX ± 0.030
.XXX ± 0.015
FAB TOLERANCES
.XX ± 0.060
.XXX ± 0.030

MACHINE TOLERANCES
.X ± 0.4
.XX ± 0.2
FORM TOLERANCES
.X ± 0.8
.XX ± 0.4
FAB TOLERANCES
.X ± 1.5
.XX ± 0.8

DWG UNITS:
IN/LB/S

DRAWN BY: DAN

PRO-ENGINEER

SCALE: 0.500

EST WEIGHT: 25.970

SHEET
1 OF 1



DATE: 18-SEP-09

INIT ECO: -

DRAWING NO:

15613


BI	2014-049	ADDED AG-GLFW6	GVD	17FEB2014
A	2011-056	ADD FASTENERS PER SIX SIGMA	SAD	10MAY2011
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

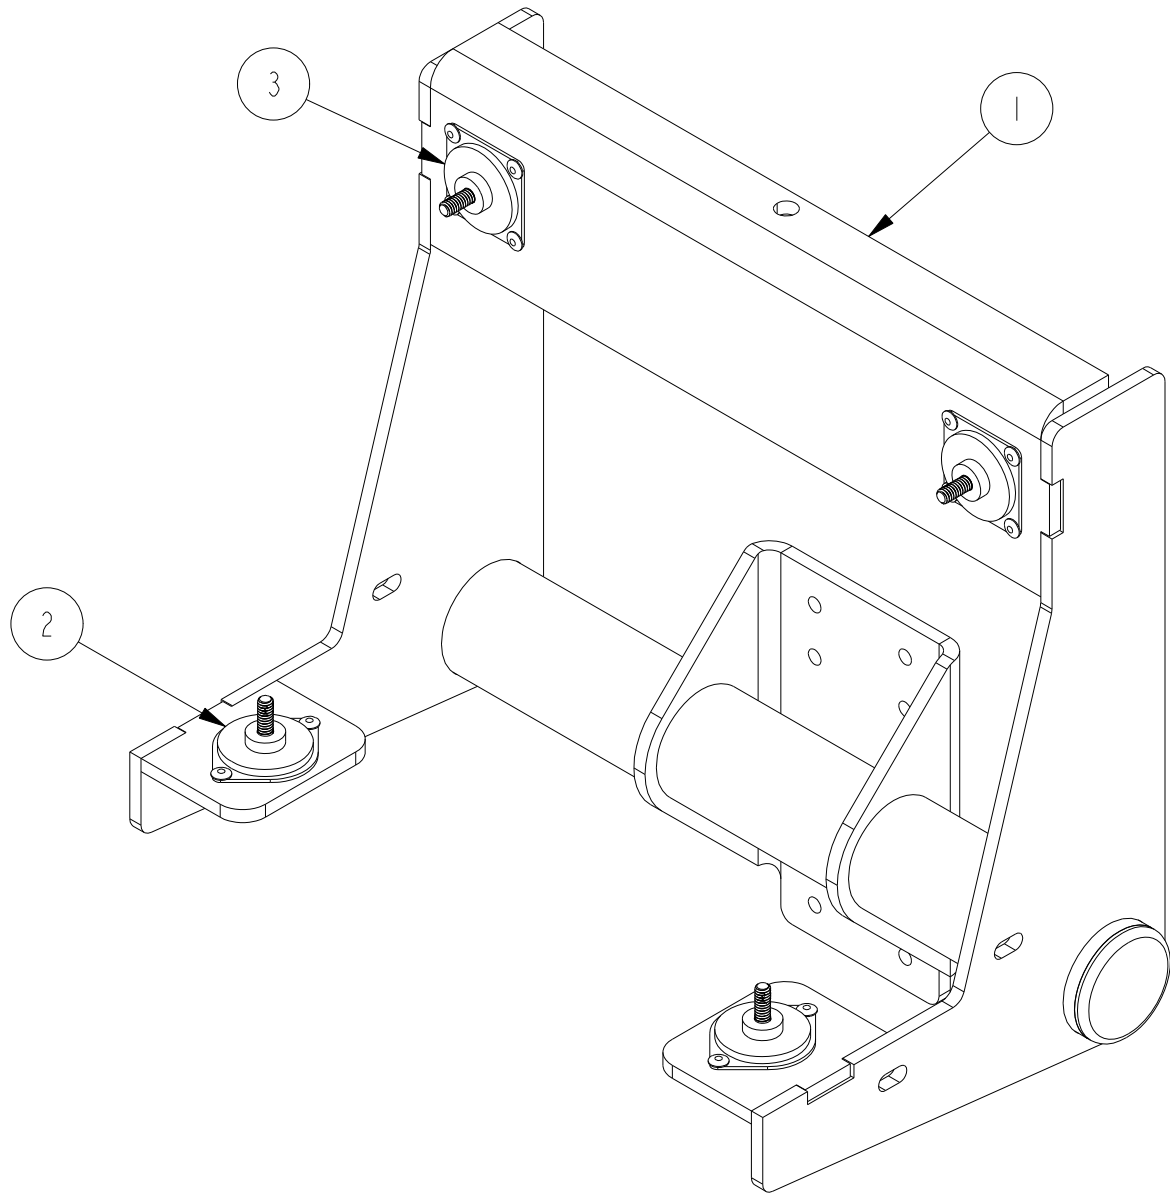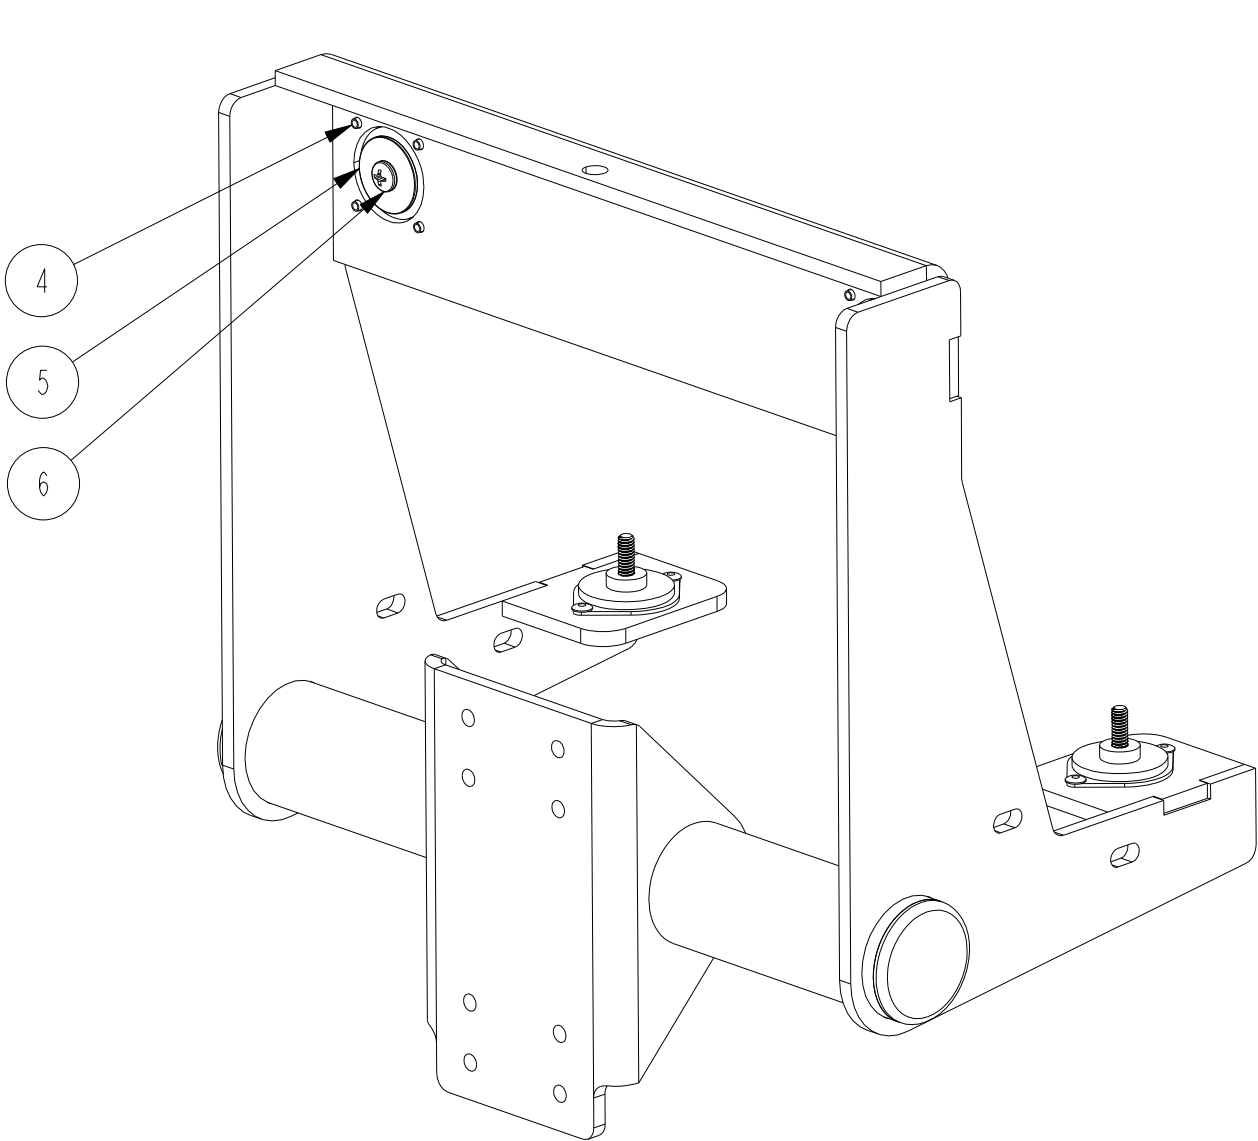

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	MOUNT, OPERATOR STATION, CFP CONTROL PANEL	22318
2	2	ISOLATOR, PLATE MOUNT, 3 LB (YELLOW MARK)	15400
3	2	ISOLATOR, PLATE MOUNT, 6 LB (RED MARK)	15412
4	12	RIVET, ALUMINUM, STEEL SHANK, 0.156 DIA, 0.25-0.38 GRIP	15414
5	2	FENDER WASHER, 0.281 X 1.25	15421
6	4	SCREW, SELF LOCKING, 0.25-20 X 1.00, PH OR BH	15422

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	125 ✓	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2
		FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
		FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8

ASSEMBLY, CONTROL PANEL MOUNTING
CFP POWER UNITS


DWG UNITS: IN/LB/S	DRAWN BY: S DUBICK PRO-ENGINEER	DATE: 26-SEP-12 INIT ECO: 2012-392
SCALE: 0.333 EST WEIGHT: 16.439	SHEET 1 OF 1	DRAWING NO: 21249

KIT INCLUDES


- 1) 16089 HARNESS, WIRE, SENSOR AND ACTUATOR
- 2) 16090 HARNESS, WIRE, ECM A
- 3) 16091 HARNESS, WIRE, ECM B
- 4) 22813 HARNESS, WIRE, POWER
- 5) 23932 HARNESS, WIRE, INTERFACE




D	2014-867	ITEM 5: ADDED VSP SEALING PLUG	BG	23DEC2014	<div>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC</div> <div>UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE</div> <div>ANGULAR DIMENSIONS ± 1°</div> <div>THIRD ANGLE PROJECTION</div> <div>MACHINE TOLERANCES JXX = ± 0.010 JXXX = ± 0.005</div> <div>FORM TOLERANCES JXX = ± 0.030 JXXX = ± 0.015</div> <div>FAB TOLERANCES JXX = ± 0.060 JXXX = ± 0.030</div> <div>MACHINE TOLERANCES X = ± 0.4 JXX = ± 0.2</div> <div>FORM TOLERANCES X = ± 0.8 JXX = ± 0.4</div> <div>FAB TOLERANCES X = ± 1.5 JXX = ± 0.8</div>	<div></div> <div>CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM</div> <div>CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</div>			
C	2014-108	ITEM 5: ADDED VSP ADJUSTED LENGTHS	RMJ	11MAR2014			KIT, WIRE HARNESSES QSL9 FIRE PUMP DRIVER. LH OP		
B	2013-386	ITEM 5: ADDED MPU AND COOLING LOOP CONNECTORS.	BG	7JUN2013			DWG UNITS:	DRAWN BY: BG	DATE: 15 JAN 2013
A	2013-165	ITEM 4: NEW PART NUMBER PULLED FOR ITEM 4 TO REACH MOVED CONTACTORS. ITEM 5: CHANGED TO REACH LCT SWITCH.	BG	22MAR2013			INCH/LB/S	AUTO CAD	INIT ECO: 2013-026
REV	ECO	DESCRIPTION OF REVISION	BY	DATE			SCALE:	SHEET 10F1	DRAWING NO: 23931
					EST WEIGHT:				

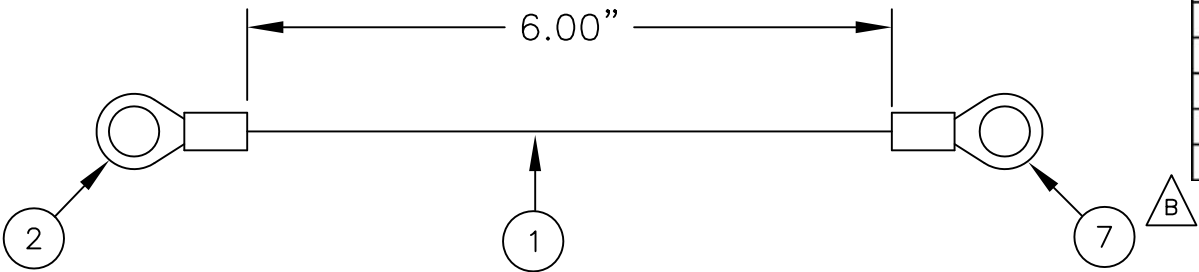


TAGS	QTY	SUB	CATALOG	MFG	DESC
1	1	6"	WL10-9	WAYTEK	WIRE, GXL, WHITE, 10 AWG
2	1	1	32706	WAYTEK	TERMINAL, RING, 1/2", 10 AWG, INSULATED
3	1	14"	WC00-0	WAYTEK	CABLE, WELDING, 2/0 AWG, BLACK
4	4	1	36534	WAYTEK	TERMINAL, EYELET, HEAVY DUTY, 3/8", 2/0 AWG, NON-INSULATED
5	1	15"	WC00-0	WAYTEK	CABLE, WELDING, 2/0 AWG, BLACK
6	1	1	WC90397-1	LTL	4GA, GROUND STRAP (CNP PART NUMBER 9757)
7	1	1	32702	WAYTEK	TERMINAL, RING, 10 STUD, 10 AWG, INSULATED

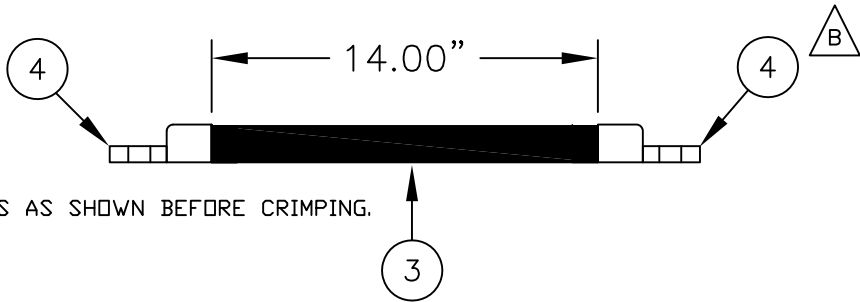

NOTE: ROTATE LUGS AS SHOWN BEFORE CRIMPING.

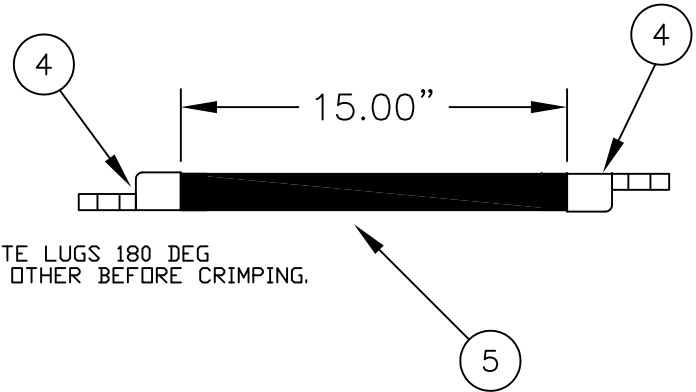
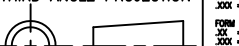


NOTE: ROTATE LUGS 180 DEG FROM EACH OTHER BEFORE CRIMPING.

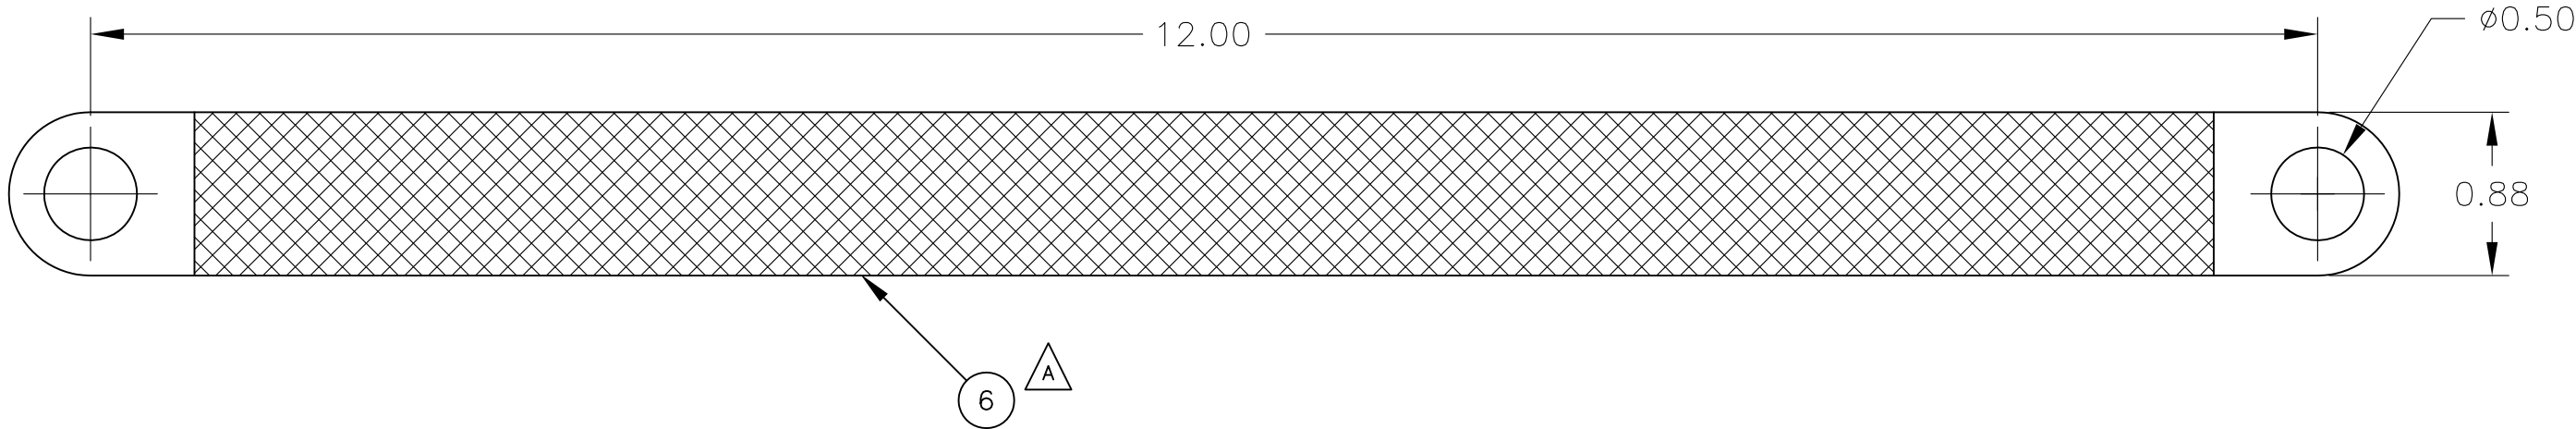


NOTES: 1) USE RED HEAT SHRINK ON ALL BATTERY CABLE TERMINALS.
2) COMPONENTS MAY BE SUBSTITUTED AS LONG AS FIT, FORM, FUNCTION AND REGULATORY STANDARDS ARE MET OR EXCEEDED.


B	2014-528	14" WIRE HAD A BURNDY YAV2CLTC12FX90 ON ONE END. 6" WIRE HAD AN AMP 52717-2 ON ONE END	PBS	06FEB2014
A	2014-076	ADDED 9757	PBS	06FEB2014
REV	ECO	DESCRIPTION OF REVISION	BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC					CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM		CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN				
			CABLES, BATTERY CFP5E, 7E, 9E, 11E								
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE											
ANGULAR DIMENSIONS ± 1°		IMPERIAL UNITS		METRIC UNITS		DWG UNITS:		DRAWN BY: BG		DATE: 16 JAN 2013	
THIRD ANGLE PROJECTION		MACHINE TOLERANCES XX = ± 0.010 XXX = ± 0.005		MACHINE TOLERANCES X = ± 0.1 XX = ± 0.2		INCH/LB/S		AUTO CAD		INIT ECO: 2012-026	
		FORM TOLERANCES XX = ± 0.030 XXX = ± 0.015		FORM TOLERANCES X = ± 0.6 XX = ± 0.4		SCALE:		SHEET 10F1		DRAWING NO: 24234	
		FAB TOLERANCES XX = ± 0.020 XXX = ± 0.010		FAB TOLERANCES X = ± 1.0 XX = ± 0.8		EST WEIGHT:					

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	CONTACTOR, MANUAL OVERRIDE, 12V, PN:535-0127, FIREPUMP	8824-12
2	1	CONTACTOR, MANUAL OVERRIDE, 24V, PN:535-0098, FIREPUMP	8824-24

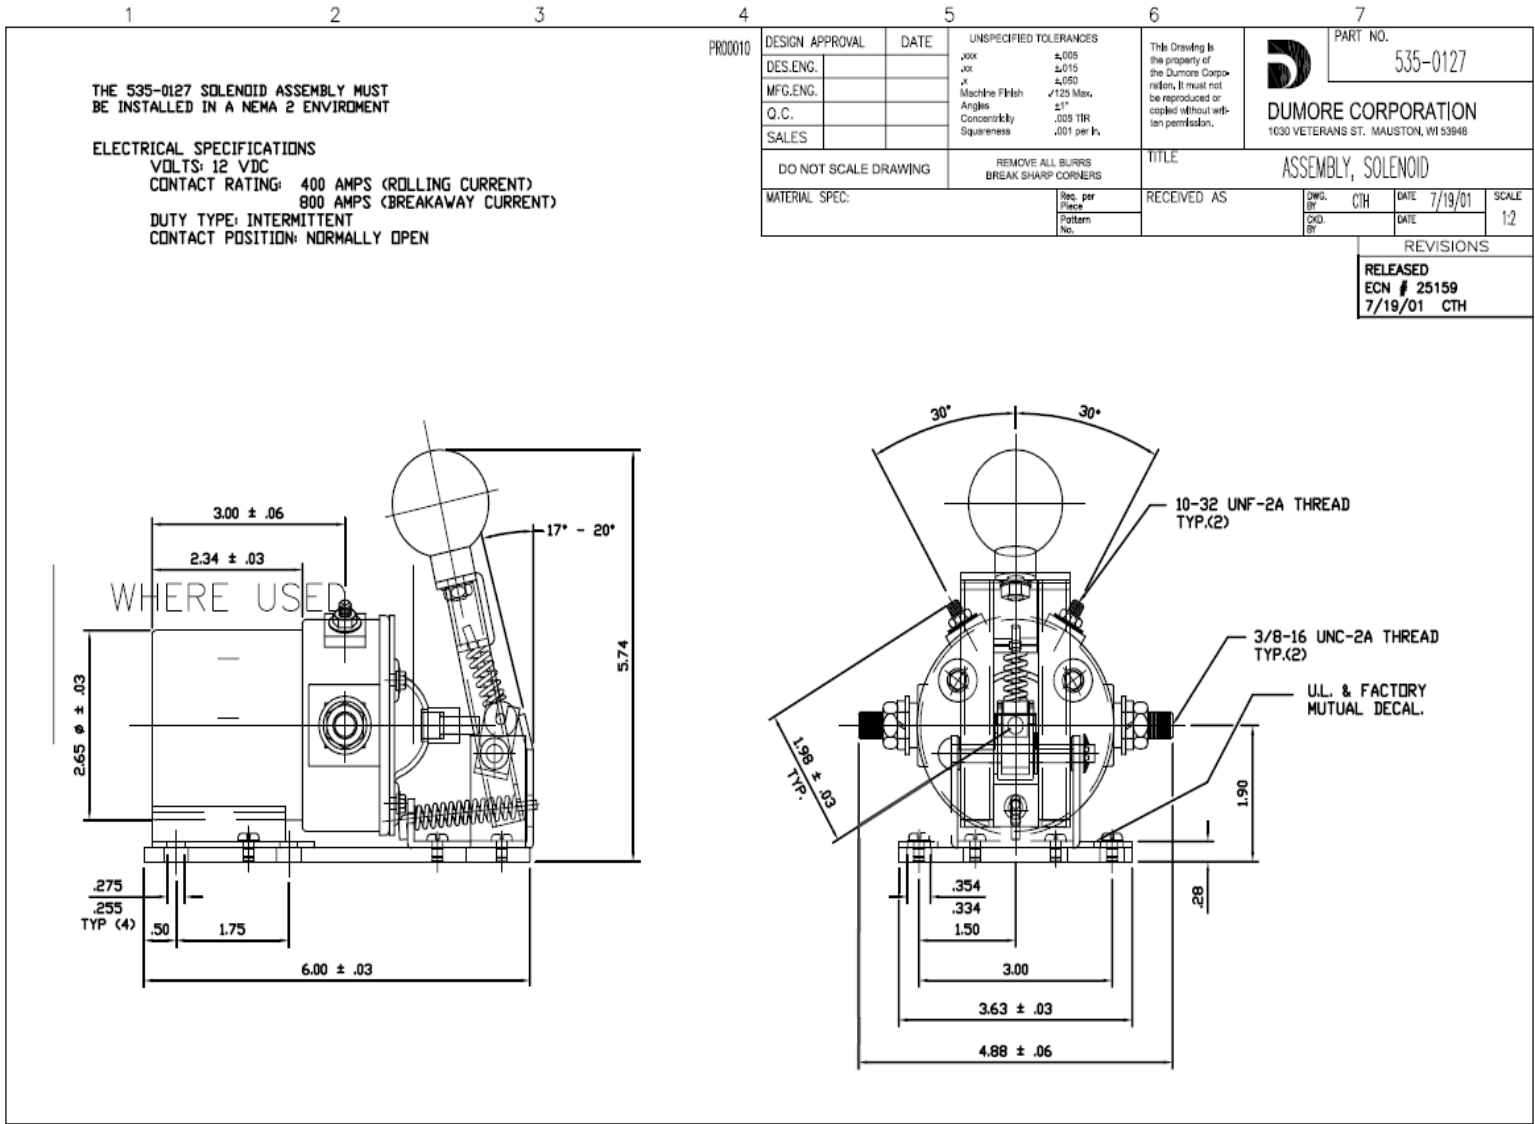
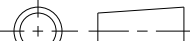



ITEM:1 - 8824-12

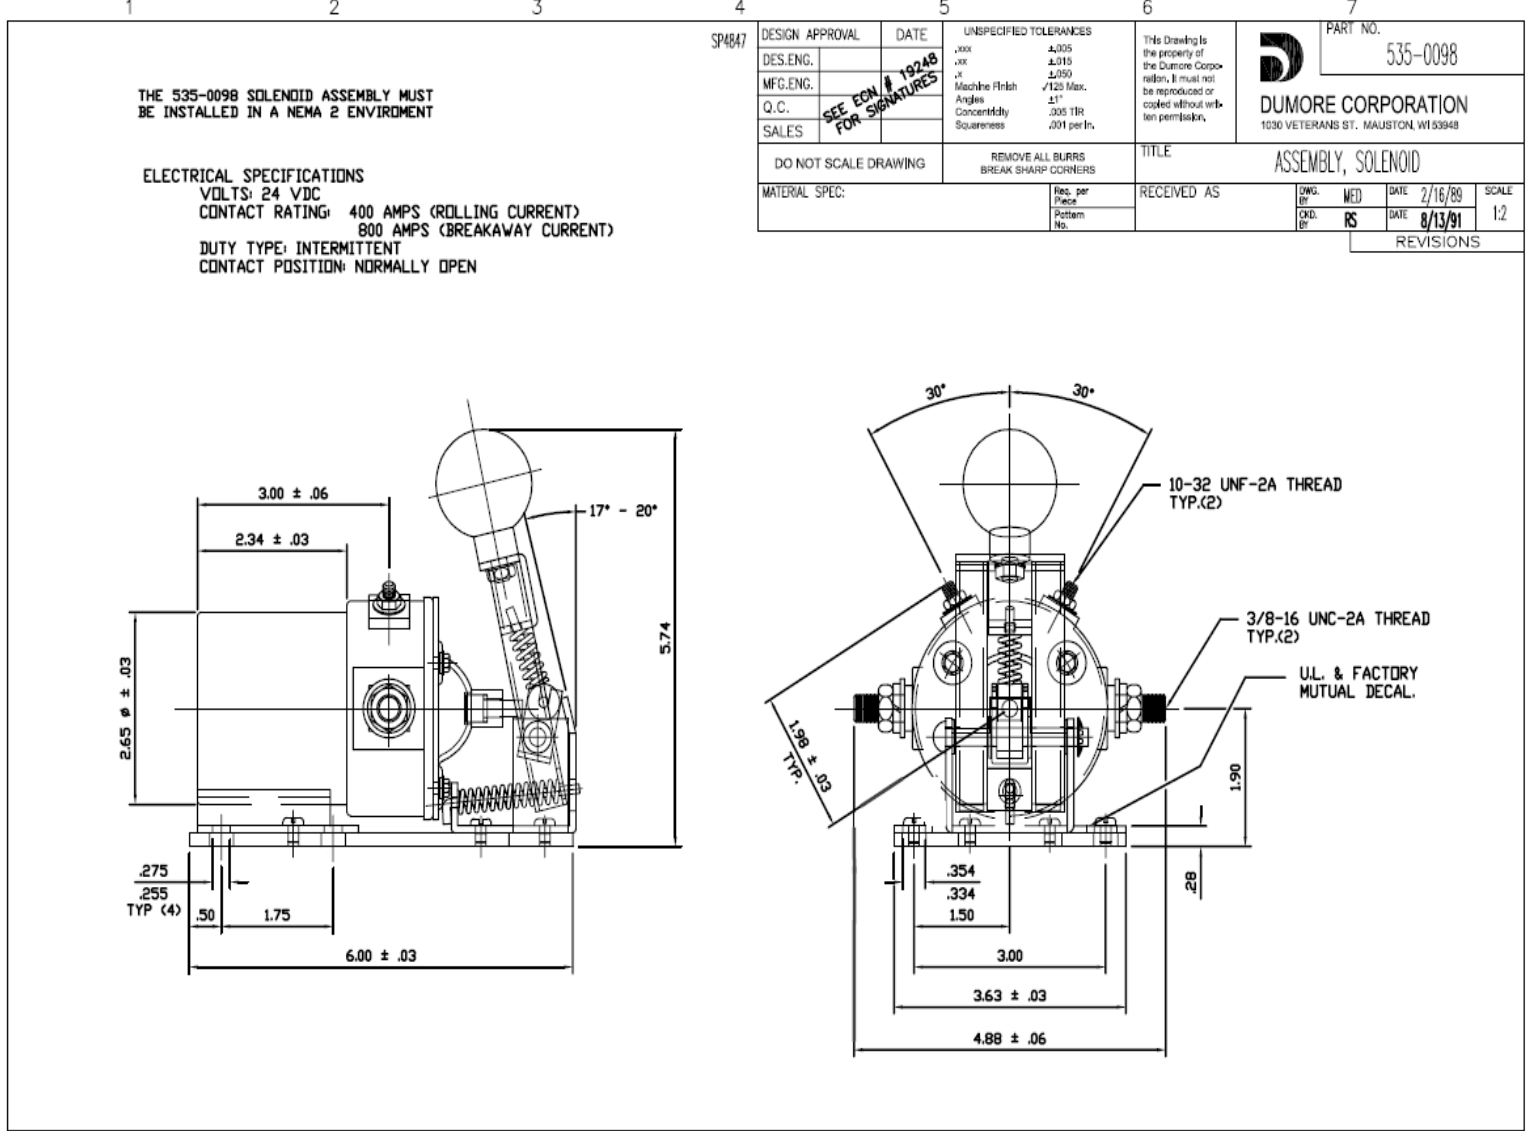

ITEM:2 - 8824-24

A	2011-068	UPDATED DRAWING FORMAT ADDED CNP LABEL TO PDF DRAWING	MAC	18FEB2011
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE


This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC					CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUEKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM		CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN				
MANUAL SOLENOID											
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE											
ANGULAR DIMENSIONS ± 1°		IMPERIAL UNITS		METRIC UNITS		DWG UNITS: IN/LB/S		DRAWN BY: CMC		DATE: 12JUNE2004	
THIRD ANGLE PROJECTION		MACHINE TOLERANCES .XX : ± 0.010 .XXX : ± 0.005		MACHINE TOLERANCES .X : ± 0.4 .XX : ± 0.2		PRO-ENGINEER		INIT ECO: -			
		FORM TOLERANCES .XX : ± 0.010 .XXX : ± 0.015		FORM TOLERANCES .X : ± 0.8 .XX : ± 0.4		SCALE: 1.000		SHEET 1 OF 1		DRAWING NO: 8824	
		FAB TOLERANCES .XX : ± 0.005 .XXX : ± 0.030		FAB TOLERANCES .X : ± 0.5 .XX : ± 0.8		EST WEIGHT: 42238.628					

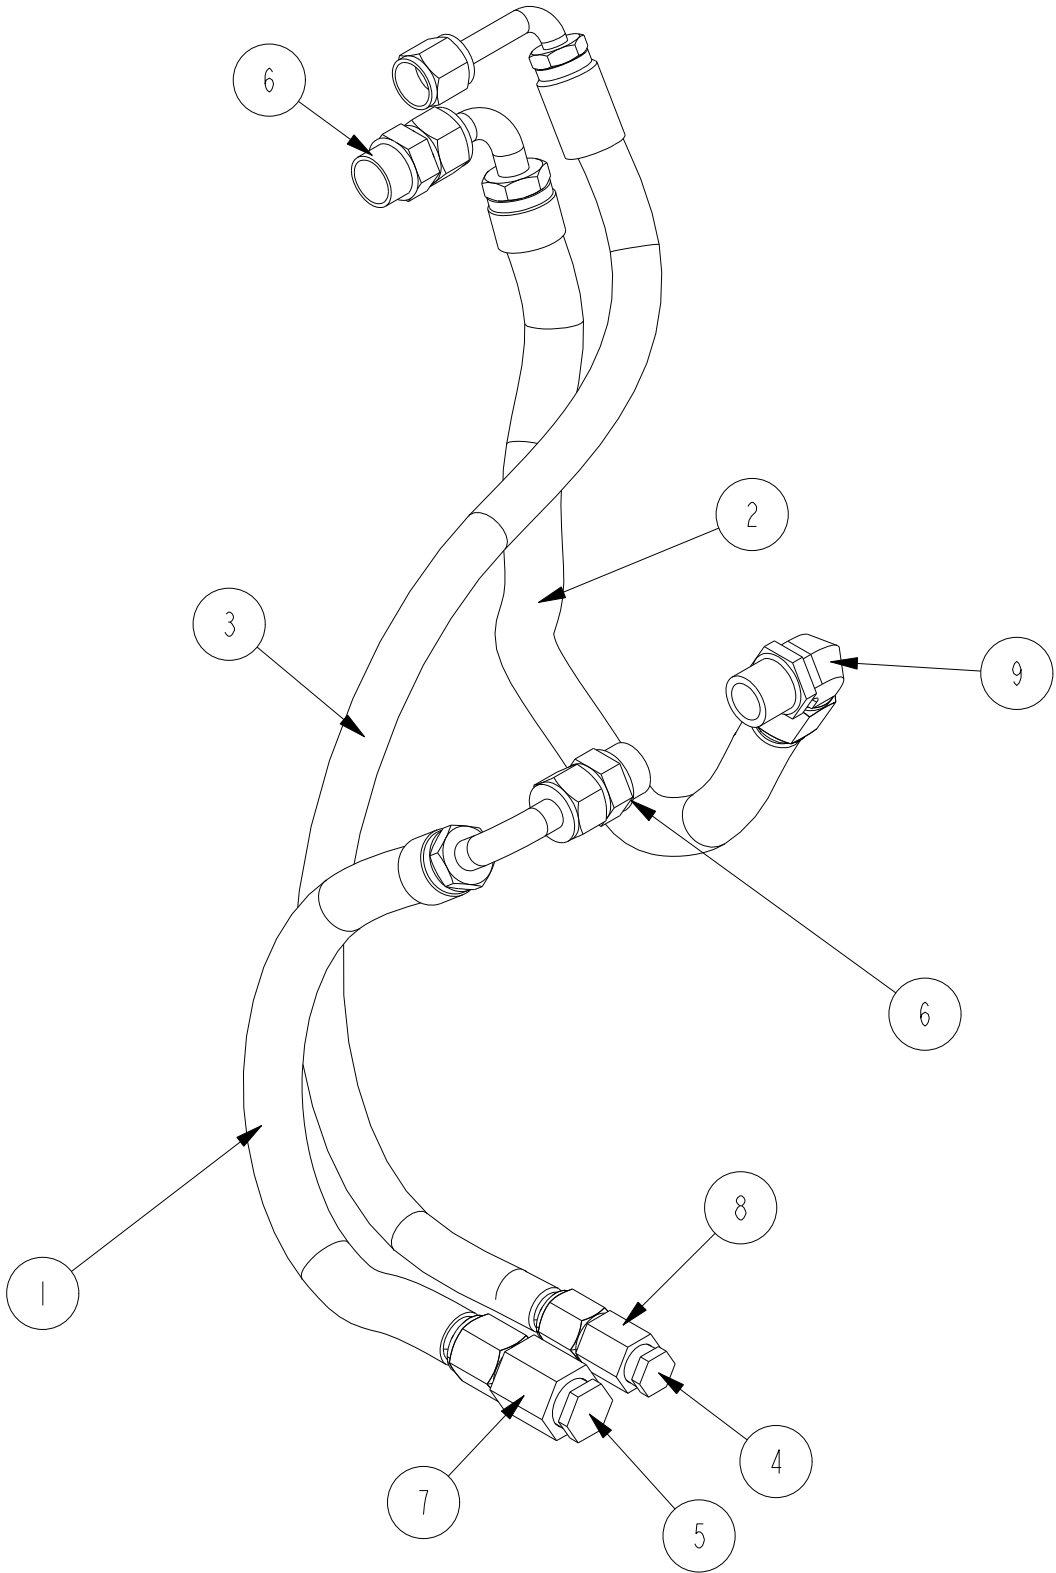

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY, HOSE, FUEL LINE, CFP9E SUPPLY	15275
2	1	ASSEMBLY, HOSE, FUEL LINE, CFP9E JUMPER	15276
3	1	ASSEMBLY, HOSE, FUEL LINE, CFP9E RETURN	15277
4	1	PLUG. PIPE, -6 NPT	12210-6
5	1	PLUG. PIPE, -8 NPT	12210-8
6	2	FTG, STR, -10 JIC X -10 ORB	12235-10-10
7	1	FTG, STR, -10 JIC X -8 FMNPT	12240-10-8
8	1	FTG, STR, -8 JIC X -6 FMNPT	12240-8-6
9	1	ELB, 90 DEG, -10 JIC X -10 ORB	12268-10-10

 NOTE: ADD THREAD SEALANT TO ALL NPT THREADS.


This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

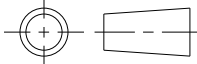ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION 	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005 FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015 FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2 FORM TOLERANCES .X ± 0.8 .XX ± 0.4 FAB TOLERANCES .X ± 1.5 .XX ± 0.8

DWG UNITS: IN/LB/S	DRAWN BY: DAN PRO-ENGINEER	DATE: 09-JUL-09 INIT ECO:
SCALE: 0.333 EST WEIGHT: 13.961	SHEET 1 OF 1	DRAWING NO: 15208

A	2011-056	ADD NOTE	S DUBICK	09-MAY-11
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	VALVE, BALL, 3/4"NPT, BRASS, LOCKABLE	21504
2	1	VALVE, SOLENOID, 3/4" NPT, 12VDC	A042B123
3	1	SENDER, TEMPERATURE, DATCON #02022-00	8862
4	2	REGULATOR, 3/4" NPT, 400 PSI MAX, 25 TO 75 PSI OUT	8890
5	2	STRAINER, 3/4" NPT W/ PLUG	8891
6	1	GAUGE, PRESSURE, 1/4" NPT, DPG1-2 1/2, 0-100 PSI, (WATTS)	8892
7	1	CROSS, 3/4NPT, STEEL, SCHEDULE 40 PIPE	21519
8	2	SENSOR, 300PSI, 1/8NPT, VEETHREE-977035	21574
9	2	VALVE, 3/4" NPT CHECK, VALUE ADDED: CV075	25502
10	4	BUSHING, 3/4" NPT X 1/4" NPT, -	71494
11	3	NIPPLE, BLK, 3/4x6	71550
12	1	VALVE, BALL, 1/4" NPT FEMALE	A042D838
13	1	NIPPLE, 1/4" NPT x 1 1/2", BLK STEEL	LTL-CPN14112
14	12	NIPPLE, BLK, 3/4x1-1/2	LTL-CPN34
15	1	ELBOW, BLK, 3/4" NPT, 90 DEG.	LTL-E3490
16	2	PLUG, 1/2 NPT	LTL-SCSP12
17	3	REDUCER BUSHING, HEX, 1/4 x 1/8, BLK STEEL	LTL-SRB1418
18	4	TEE, BLACK PIPE, 3/4" NPT	LTL-ST34

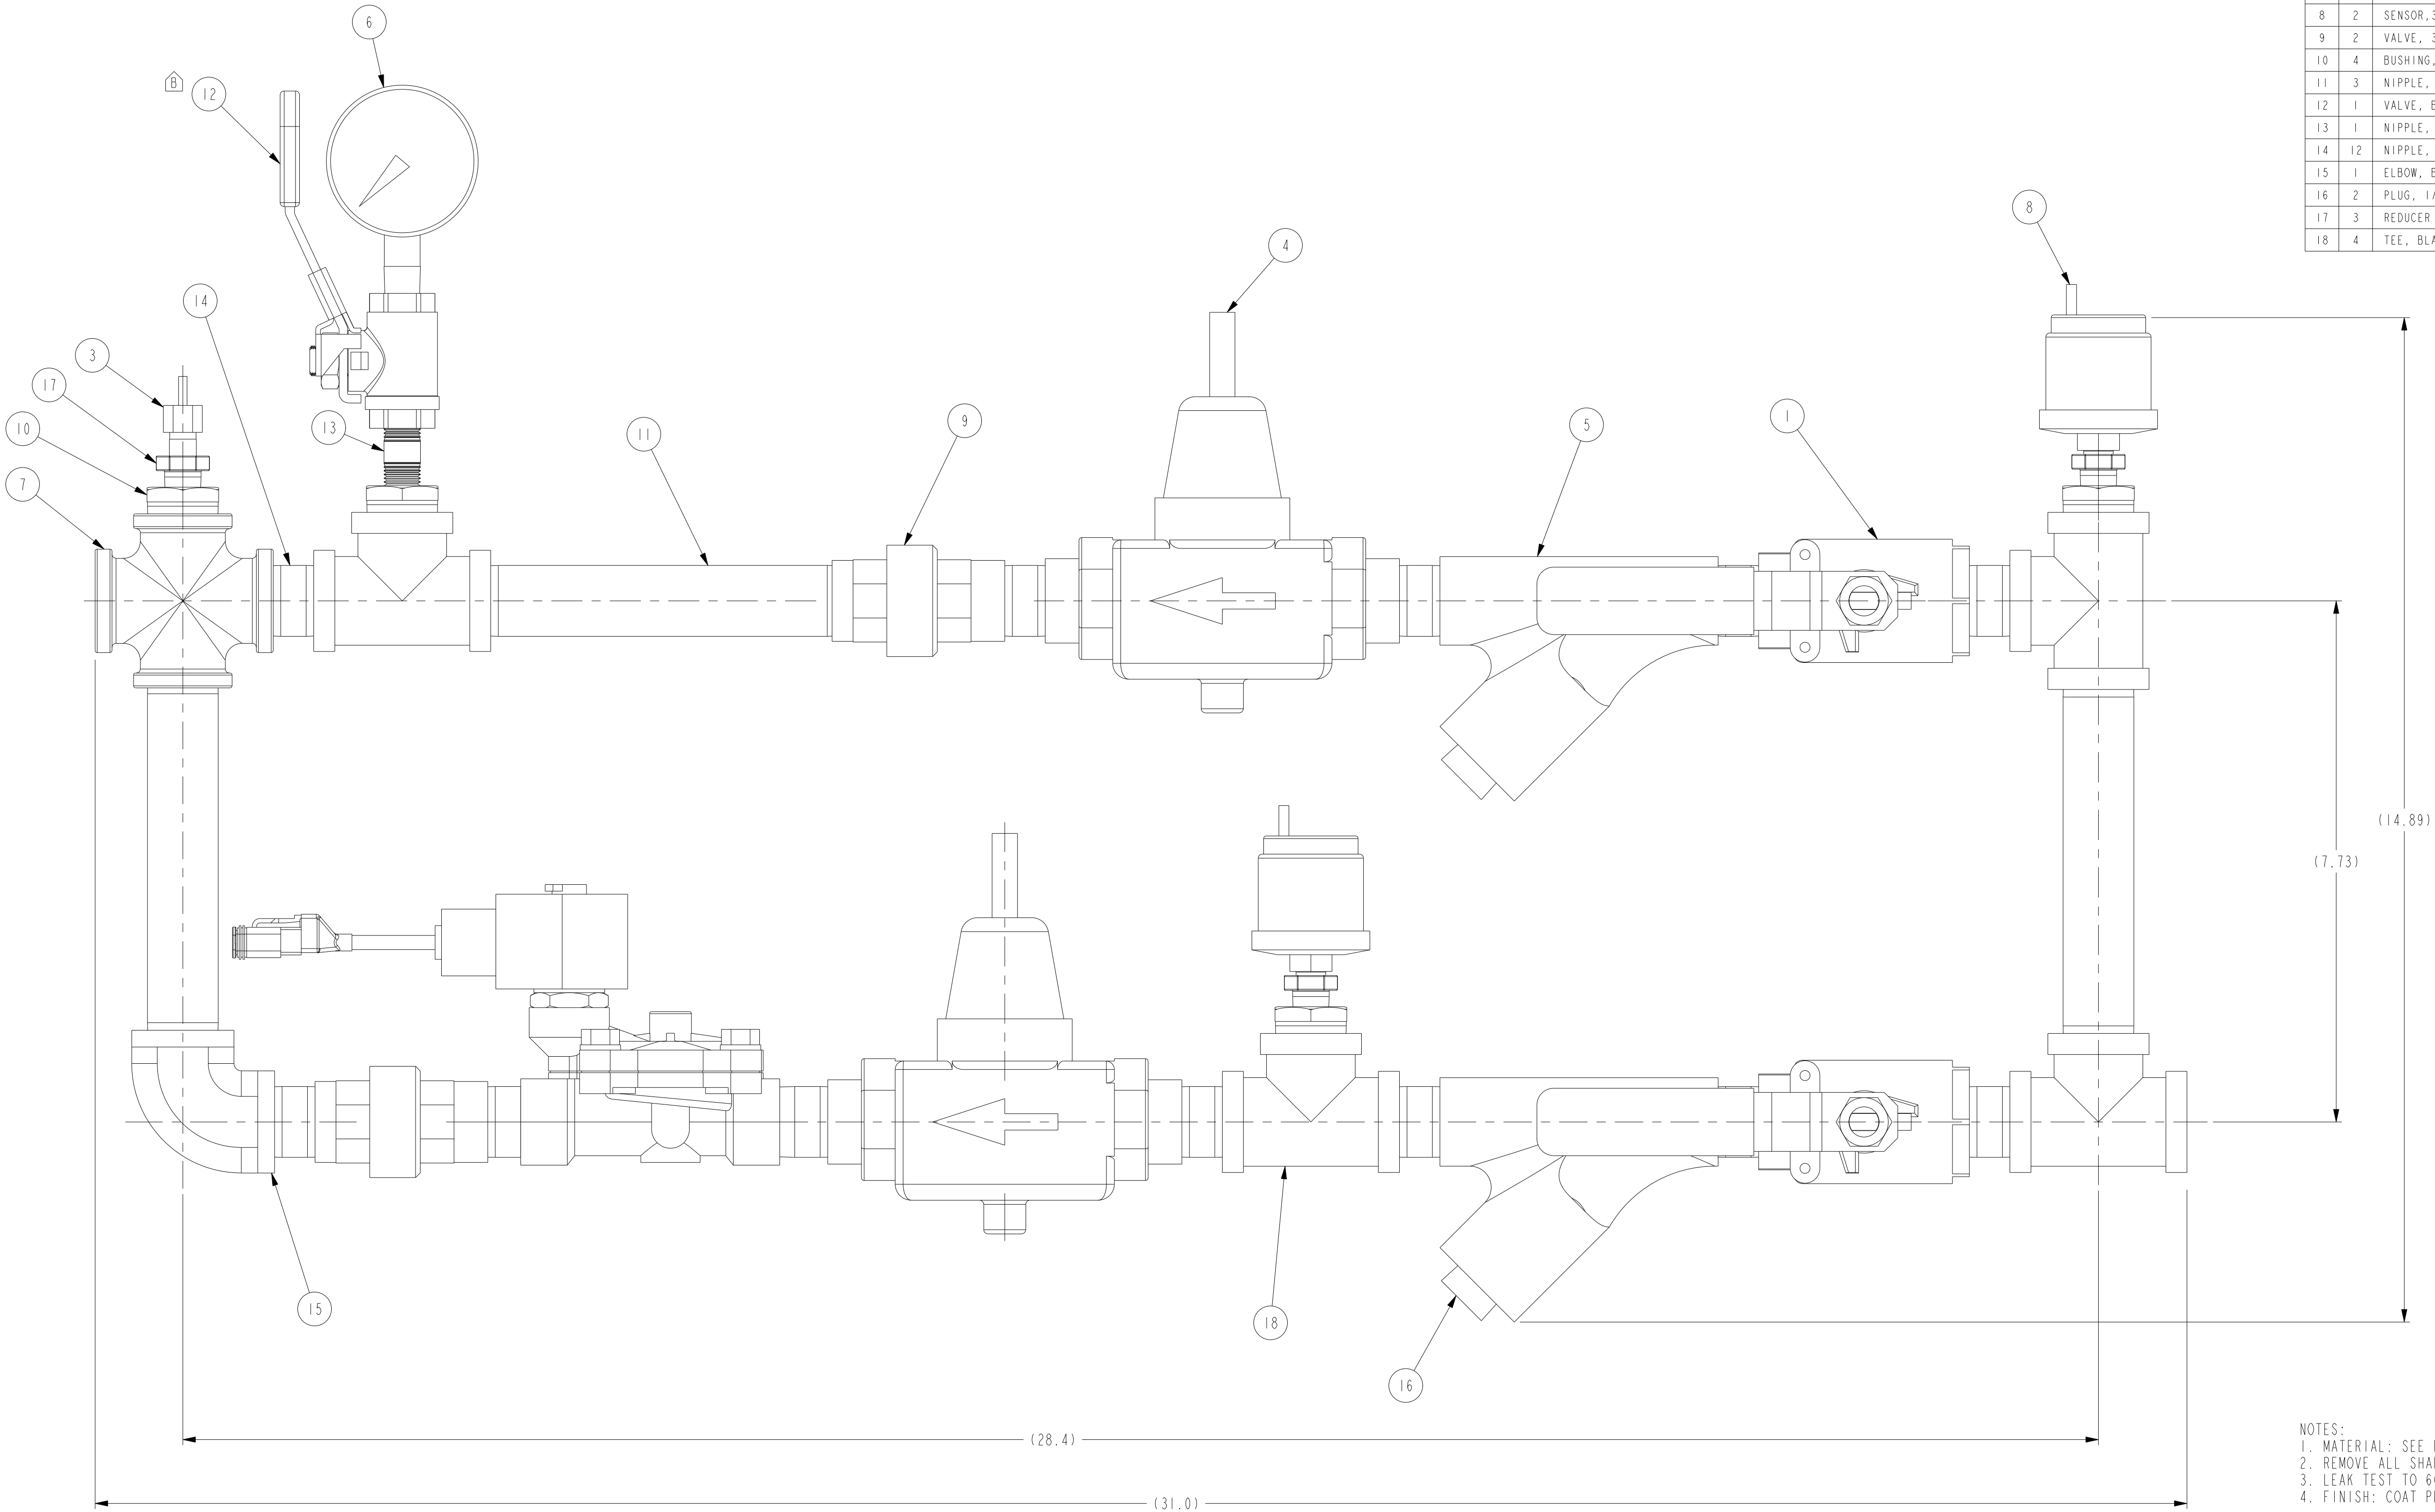

NOTES:
1. MATERIAL: SEE PARTS LIST
2. REMOVE ALL SHARP EDGES PRIOR TO COATING
3. LEAK TEST TO 60PSI AND PRESET REGULATORS TO 60PSI
4. FINISH: COAT PER CUMMINS SPEC ES044 RAL 3001


This document contains confidential and trade secret information, is the property of Cummins Fire Power, LLC and is given in confidence. It is not to be disclosed, copied, reproduced, or otherwise used without the express written consent of Cummins Fire Power, LLC. If you are not an authorized user, you are notified that you are not to use this document for any purpose other than the one for which it was provided. If you are an authorized user, you are notified that you are not to use this document for any purpose other than the one for which it was provided. If you are not an authorized user, you are notified that you are not to use this document for any purpose other than the one for which it was provided. If you are an authorized user, you are notified that you are not to use this document for any purpose other than the one for which it was provided.

Cummins Fire Power
CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUEFALE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPGRADE CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

B	2015-043	ADDED SHEET 2 WITH MATERIAL SPECIFICATIONS	PBS	16JAN2015	ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS	THIRD ANGLE PROJECTION	125	DWG UNITS: IN/LB/S	DRAWN BY: BOB KROPP	DATE: 06MAR2012
A	2014-241	A042B123 WAS FA60204-1	PBS	17APR2014							SCALE: 0.750	SHEET 1 OF 2	INIT ECO: 2013-303
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE							EST WEIGHT: NA		DRAWING NO: 21509

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	VALVE, BALL, 3/4NPT, BRASS, LOCKABLE	21504
2	1	VALVE, SOLENOID, 3/4" NPT, 24VDC	A042B125
3	1	SENDER, TEMPERATURE, DATCON #02022-00	8862
4	2	REGULATOR, 3/4" NPT, 400 PSI MAX, 25 TO 75 PSI OUT	8890
5	2	STRAINER, 3/4" NPT W/ PLUG	8891
6	1	GAUGE, PRESSURE, 1/4" NPT, DPG1-2 1/2, 0-100 PSI, (WATTS)	8892
7	1	CROSS, 3/4NPT, STEEL, SCHEDULE 40 PIPE	21519
8	2	SENSOR, 300PSI, 1/8NPT, VEETHREE-977035	21574
9	2	VALVE, 3/4" NPT CHECK, VALUE ADDED: CV075	25502
10	4	BUSHING, 3/4" NPT X 1/4" NPT, -	71494
11	3	NIPPLE, BLK, 3/4x6	71550
12	1	VALVE, BALL, 1/4" NPT FEMALE	A042D838
13	1	NIPPLE, 1/4" NPT x 1 1/2", BLK STEEL	LTL-CPN14112
14	12	NIPPLE, BLK, 3/4x1-1/2	LTL-CPN34
15	1	ELBOW, BLK, 3/4" NPT, 90 DEG.	LTL-E3490
16	2	PLUG, 1/2 NPT	LTL-SCSP12
17	3	REDUCER BUSHING, HEX, 1/4 x 1/8, BLK STEEL	LTL-SRB1418
18	4	TEE, BLACK PIPE, 3/4" NPT	LTL-ST34

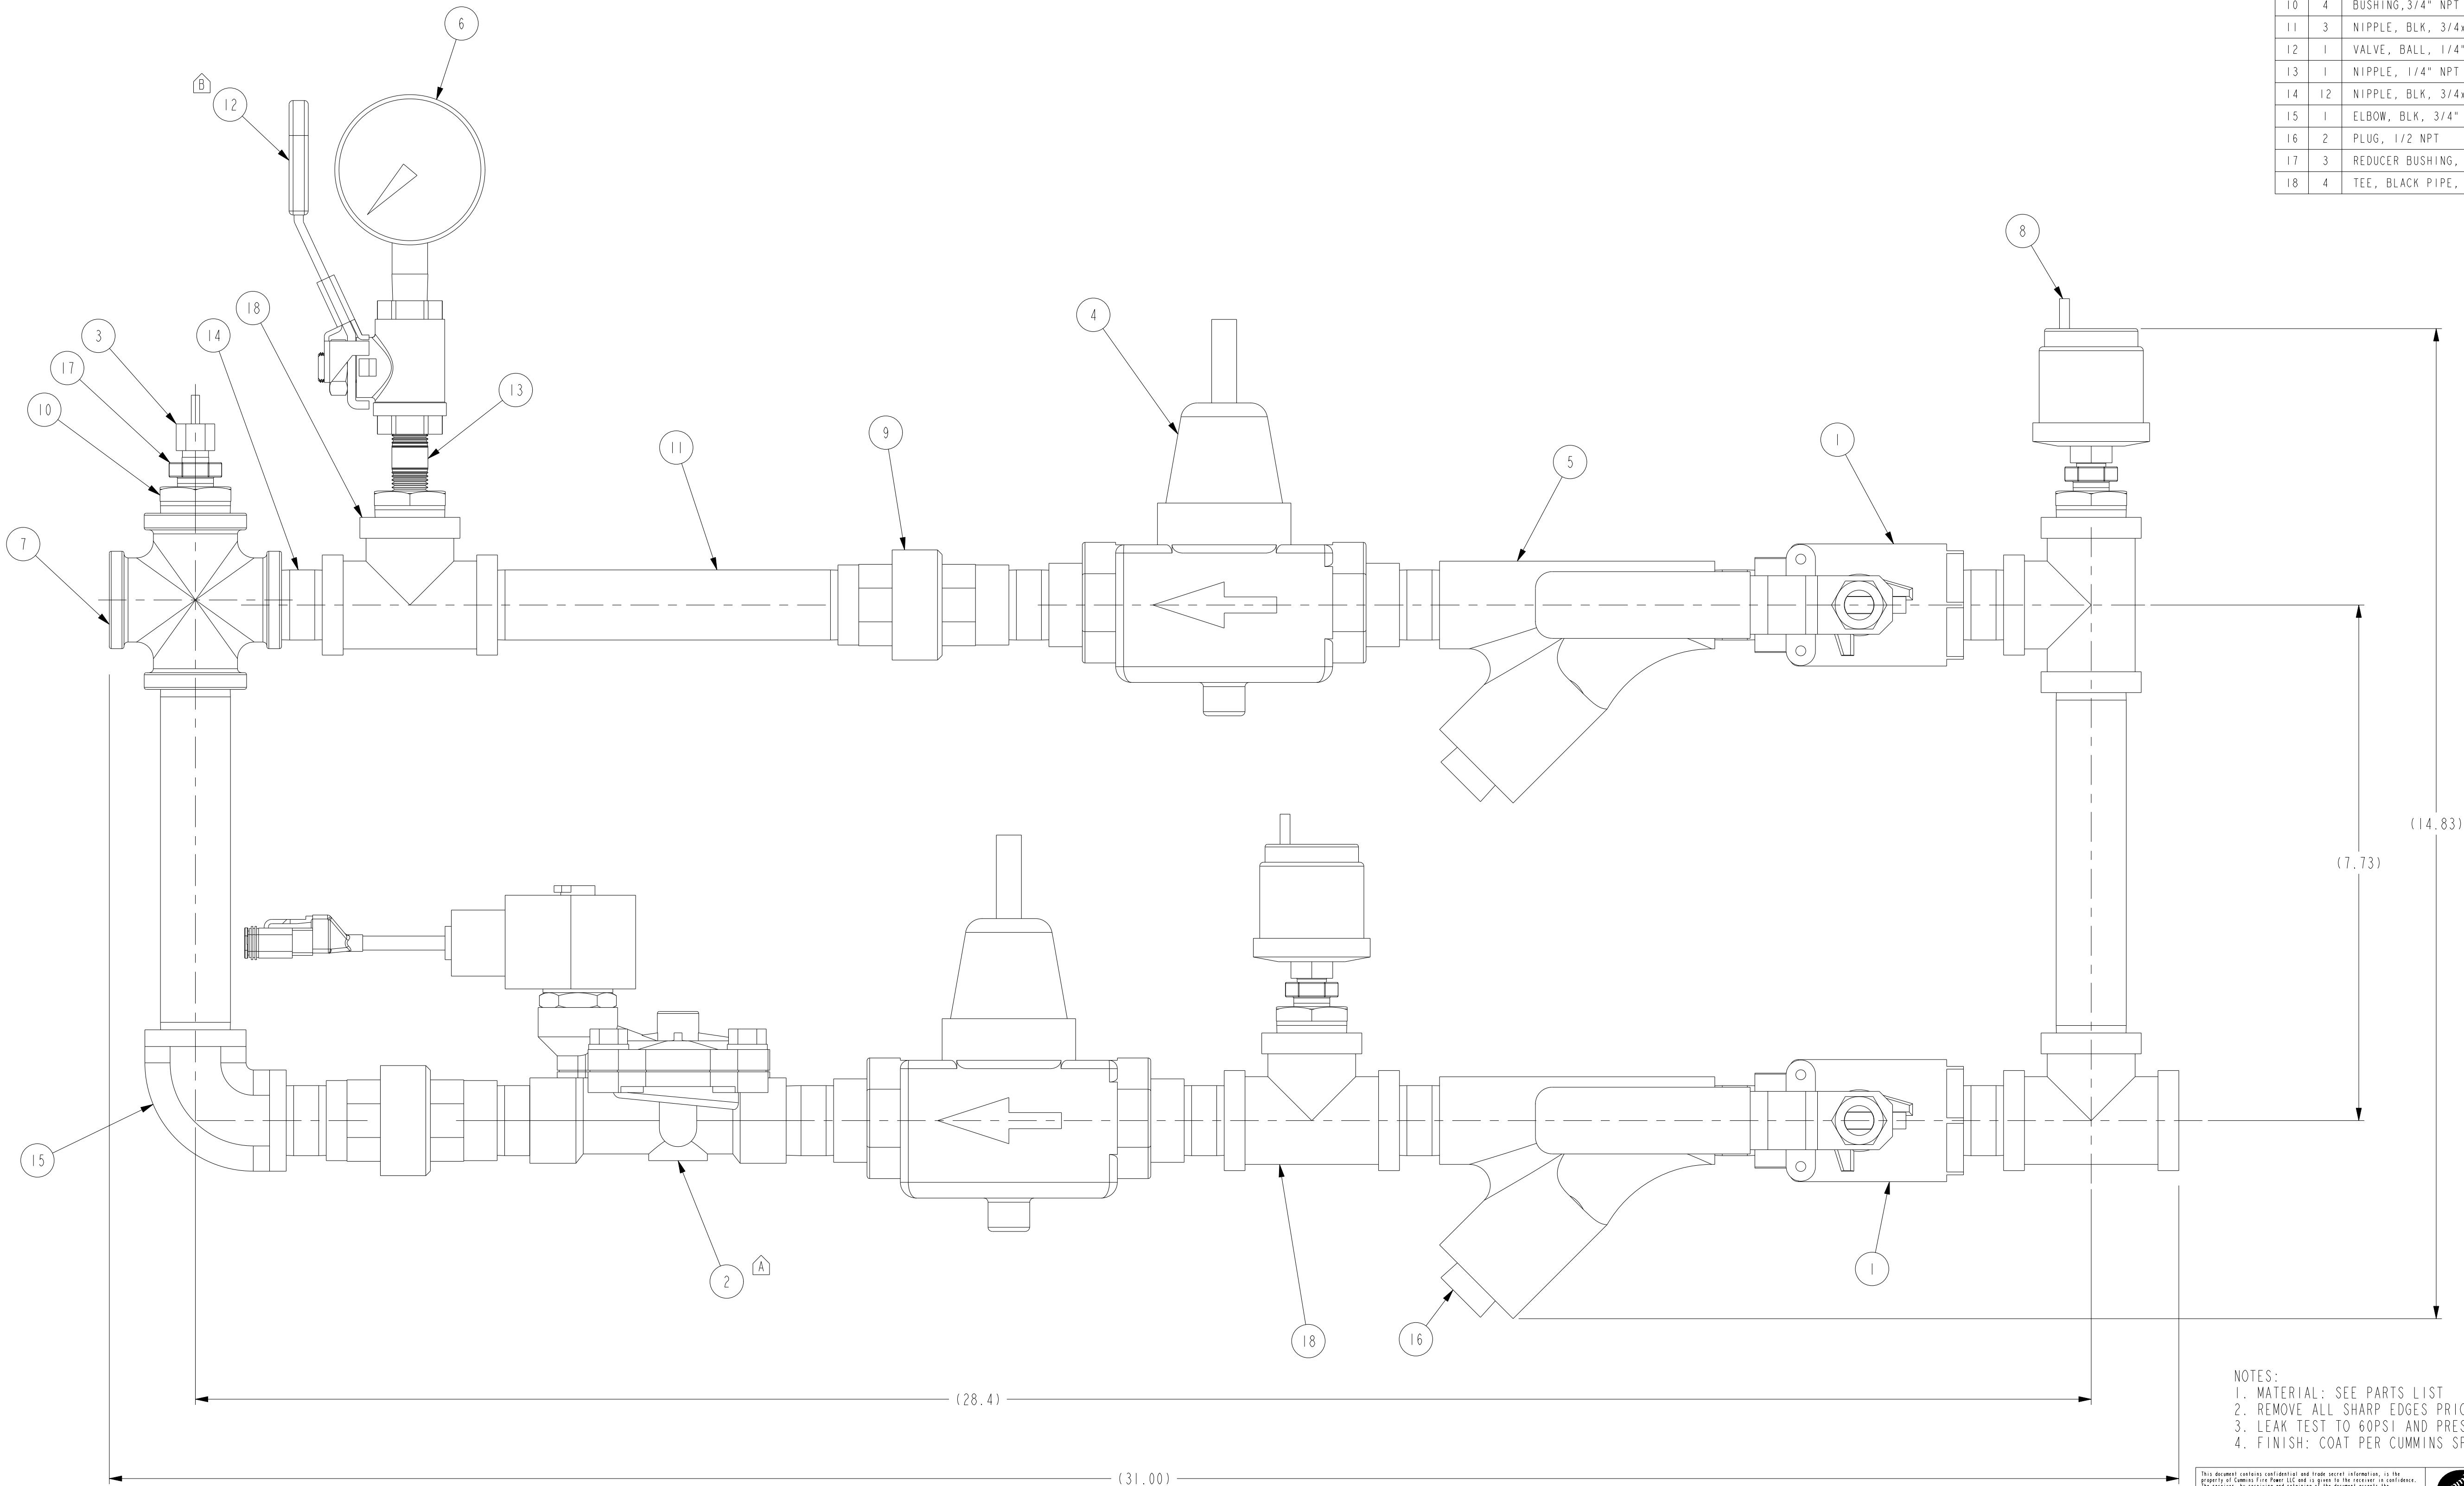


- NOTES:
1. MATERIAL: SEE PARTS LIST
 2. REMOVE ALL SHARP EDGES PRIOR TO COATING
 3. LEAK TEST TO 60PSI AND PRESET REGULATORS TO 60PSI
 4. FINISH: COAT PER CUMMINS SPEC ES044 RAL 3001

This document contains confidential and trade secret information, is the property of Cummins Fire Power, LLC and is given in confidence. It is intended for use only by the recipient and is not to be distributed, copied, or otherwise used without the express written consent of Cummins Fire Power, LLC. If you are not the intended recipient, you should not disseminate this information. If you are the intended recipient, you should not disseminate this information without the express written consent of Cummins Fire Power, LLC. If you are not the intended recipient, you should not disseminate this information without the express written consent of Cummins Fire Power, LLC. If you are the intended recipient, you should not disseminate this information without the express written consent of Cummins Fire Power, LLC.

Cummins Fire Power
CORPORATE OFFICE
1600 BUELALE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPGRADE CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

B	2015-043	ADDED SHEET 2 WITH MATERIAL SPECIFICATIONS	PBS	16JAN2015	ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS	DWG UNITS: 1/8" LB/S	DRAWN BY: BOB KROPP	DATE: 06MAR2012
A	2014-241	A042B125 WAS FA60204-1	PBS	17APR2014	THIRD ANGLE PROJECTION	125	INCHES	MILLIMETERS	SCALE: 0.750	PRO-ENGINEER	INIT ECO: 2013-303
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE					EST WEIGHT: NA	SHEET 1 OF 2	DRAWING NO: 21510

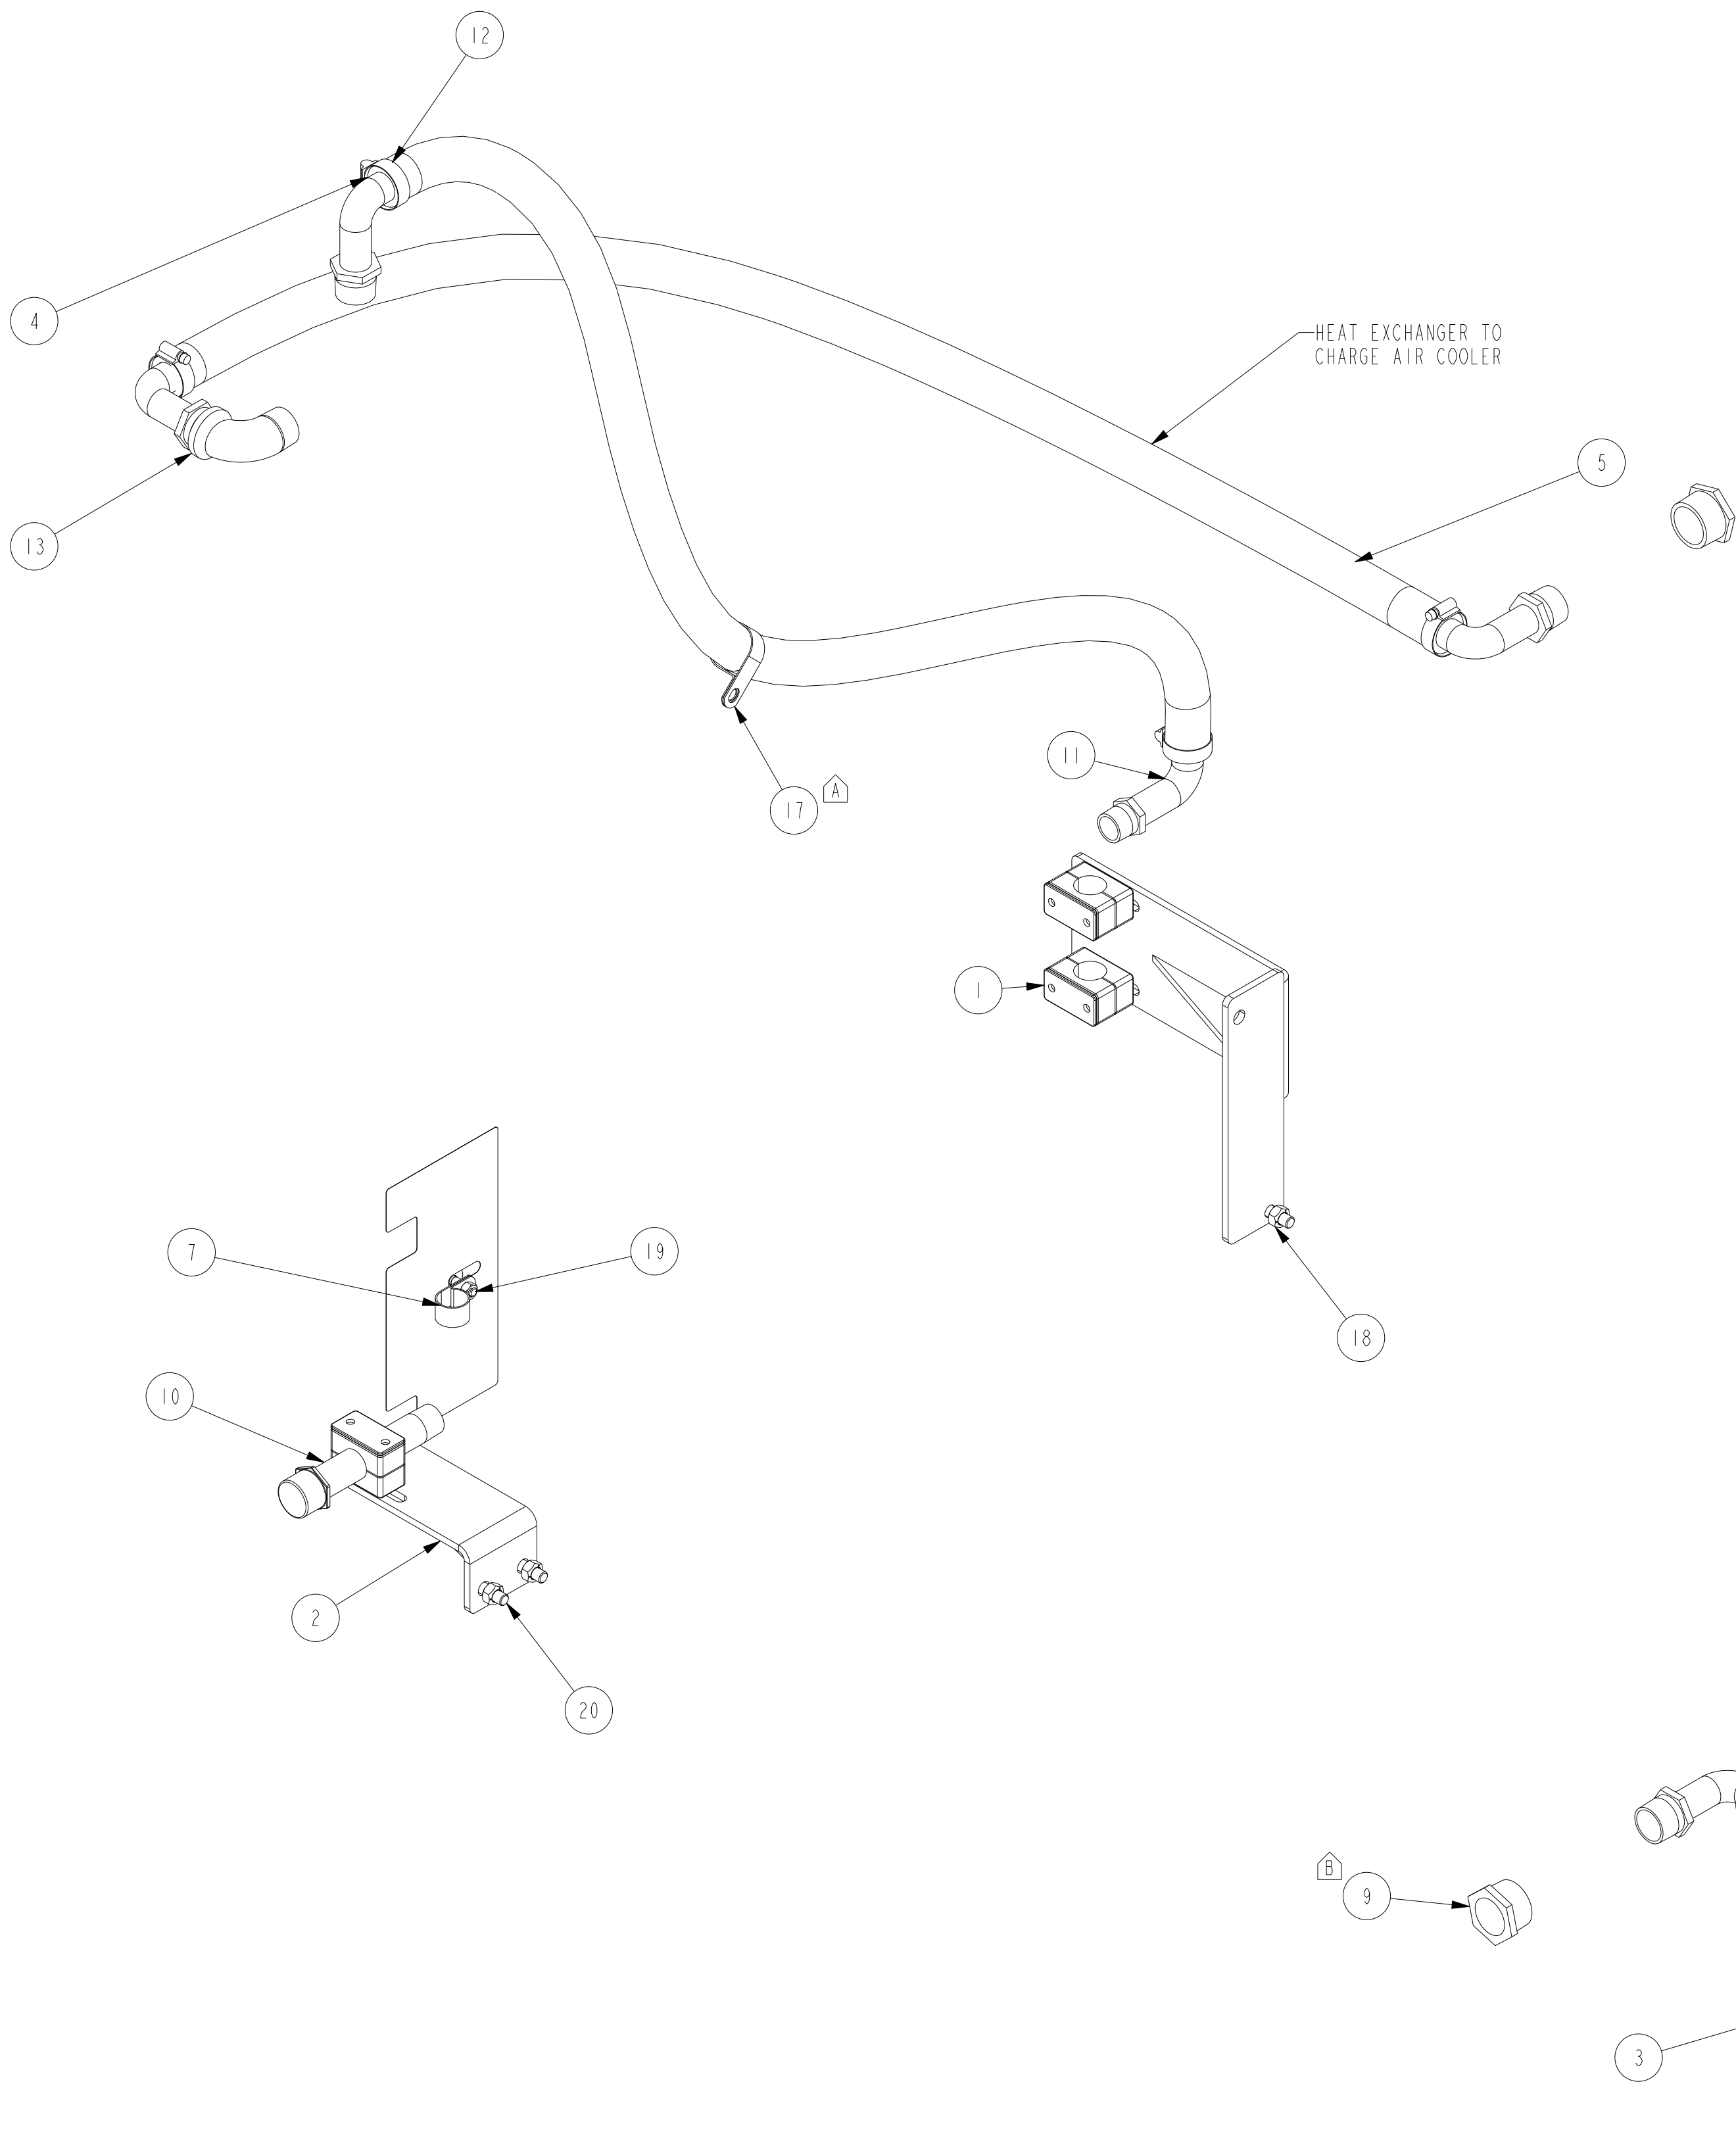


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	3	CLAMP, PIPE, .75", PLASTIC, W/COVER PLATE	14926-01
2	1	BRACKET, COOLING REAR MOUNT, CFP9E	26365
3	1	BRACKET, COOLING FRONT MOUNT, CFP9E	26367
4	1	HOSE, SILICONE, 1" ID x 59.00"	80244GL
5	1	HOSE, SILICONE, 1" ID x 63.00"	80244GL
6	1	DECAL, COOLANT LOOP LABEL, VERTICAL MTG, ENGLISH	A042A53
7	1	CLAMP, P-STYLE, 1" W/ 0.50 HOLE, LTL-CCV1717	14554
8	4	CLAMP, WORM, 1.00 - 1.50	14990-16
9	1	BUSHING, MARINE GRADE, 1-1/4" X 1"	15758-20-16
10	1	NIPPLE, MARINE GRADE, 3/4" X 6"	15764
11	1	ELBOW, NAVAL BRONZE, NPT X BARB, 3/4" NPT X 1" BARB	15767-12-16
12	3	ELBOW, NAVAL BRONZE, NPT X BARB, 1" NPT X 1" BARB	15767-16-16
13	1	STREET ELBOW, NAVAL BRONZE, NPT, 1" NPT	15795-16
14	1	CAP, PVC, NPT FEMALE, 3/4" NPT	16663-12
15	1	WASHER, FLAT, 0.31	20000-031
16	1	SCREW, HH, 0.31-18x1.00	20231-100
17	1	CLIP, CSHN, 1.50 ID, -	LTL-SCP24627
18	3	NUT, HEX, PT, M10-1.50	20140-M10
19	1	NUT, HEX, 0.31-18	20100-031
20	3	SCREW, HH, M10-1.50x30	20310-030

- NOTES:
1. ADD THREAD SEALANT TO ALL NPT THREADS
2. REFERENCE DRAWING A042A541 FOR INSTALLATION ONTO THE POWER UNIT

<p>This document contains confidential and trade secret information, is the property of Cummins Fire Power, LLC and is given in confidence. It is intended for use only by the recipient and is not to be distributed, copied, or otherwise used without the express written consent of Cummins Fire Power, LLC. If you are not the intended recipient, you should not disseminate this information. If you are the intended recipient, you should not disseminate this information without the express written consent of Cummins Fire Power, LLC. If you are not the intended recipient, you should not disseminate this information without the express written consent of Cummins Fire Power, LLC. If you are the intended recipient, you should not disseminate this information without the express written consent of Cummins Fire Power, LLC.</p>		<p>Cummins Fire Power</p>		<p>CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUELAKE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM</p>		<p>CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</p>			
<p>MISCELLANEOUS PIPING CFP9E, SEA WATER COMPATIBLE</p>									
<p>UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE ANGULAR DIMENSIONS ± °</p>		<p>THIRD ANGLE PROJECTION</p>		<p>DWG UNITS: IN/LB/S</p>		<p>DRAWN BY: PBS PRO-ENGINEER</p>		<p>DATE: 26FEB2014 INIT ECO: 2014-138</p>	
<p>REV</p>		<p>ECO</p>		<p>SCALE: 0.250</p>		<p>SHEET 1 OF 1</p>		<p>DRAWING NO: A042A543</p>	
<p>B</p>		<p>2014-673</p>		<p>EST WEIGHT: 4.853</p>		<p>ADDED 15758-20-16</p>		<p>PBS 24SEP2014</p>	
<p>A</p>		<p>2014-564</p>		<p>ADDED LTL-SCP24627</p>		<p>PBS 13AUG2014</p>			
<p>REV</p>		<p>ECO</p>		<p>DESCRIPTION OF REVISION</p>		<p>REV BY</p>		<p>DATE</p>	

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	VALVE, SOLENOID, 3/4" NPT, 12VDC, SEA WATER COMPATIBLE	15738
2	2	VALVE,BALL,3/4NPT, SEA WATER COMPATIBLE,LOCKABLE	21434
3	1	SENDER, TEMPERATURE, DATCON #02022-00	8862
4	1	GUAGE, 0-100 PSI, 1/4" NPT STN STL	13113
5	2	REGULATOR/STRAINER, 3/4" NPT, SEA WATER COMPATIBLE	13703
6	4	TEE, MARINE GRADE, 3/4" NPT	15755-12
7	1	ELBOW, MARINE GRADE, 3/4" NPT	15756-12
8	4	BUSHING, MARINE GRADE, 3/4" x 1/4"	15758-12-4
9	3	BUSHING, MARINE GRADE, 1/4" x 1/8"	15758-4-2
10	1	VALVE, BALL, 1/4" NPT., APOLLO 77-100 (MARINE)	15759-04
11	1	NIPPLE, NAVAL BRONZE, 1/4" X CLOSE	15760
12	7	NIPPLE, MARINE GRADE, 3/4" X 1-3/8"	15761
13	3	NIPPLE, MARINE GRADE, 3/4" X 2-1/2"	15762
14	3	NIPPLE, MARINE GRADE, 3/4" X 6"	15764
15	2	CHECK VALVE, MARINE GRADE, 3/4" NPT	15768-12
16	1	CROSS,3/4,NVL-BRNZ, SCHEDULE 40 PIPE	21436
17	2	SENSOR,300PSI,1/8NPT, VEETHREE-977035	21574

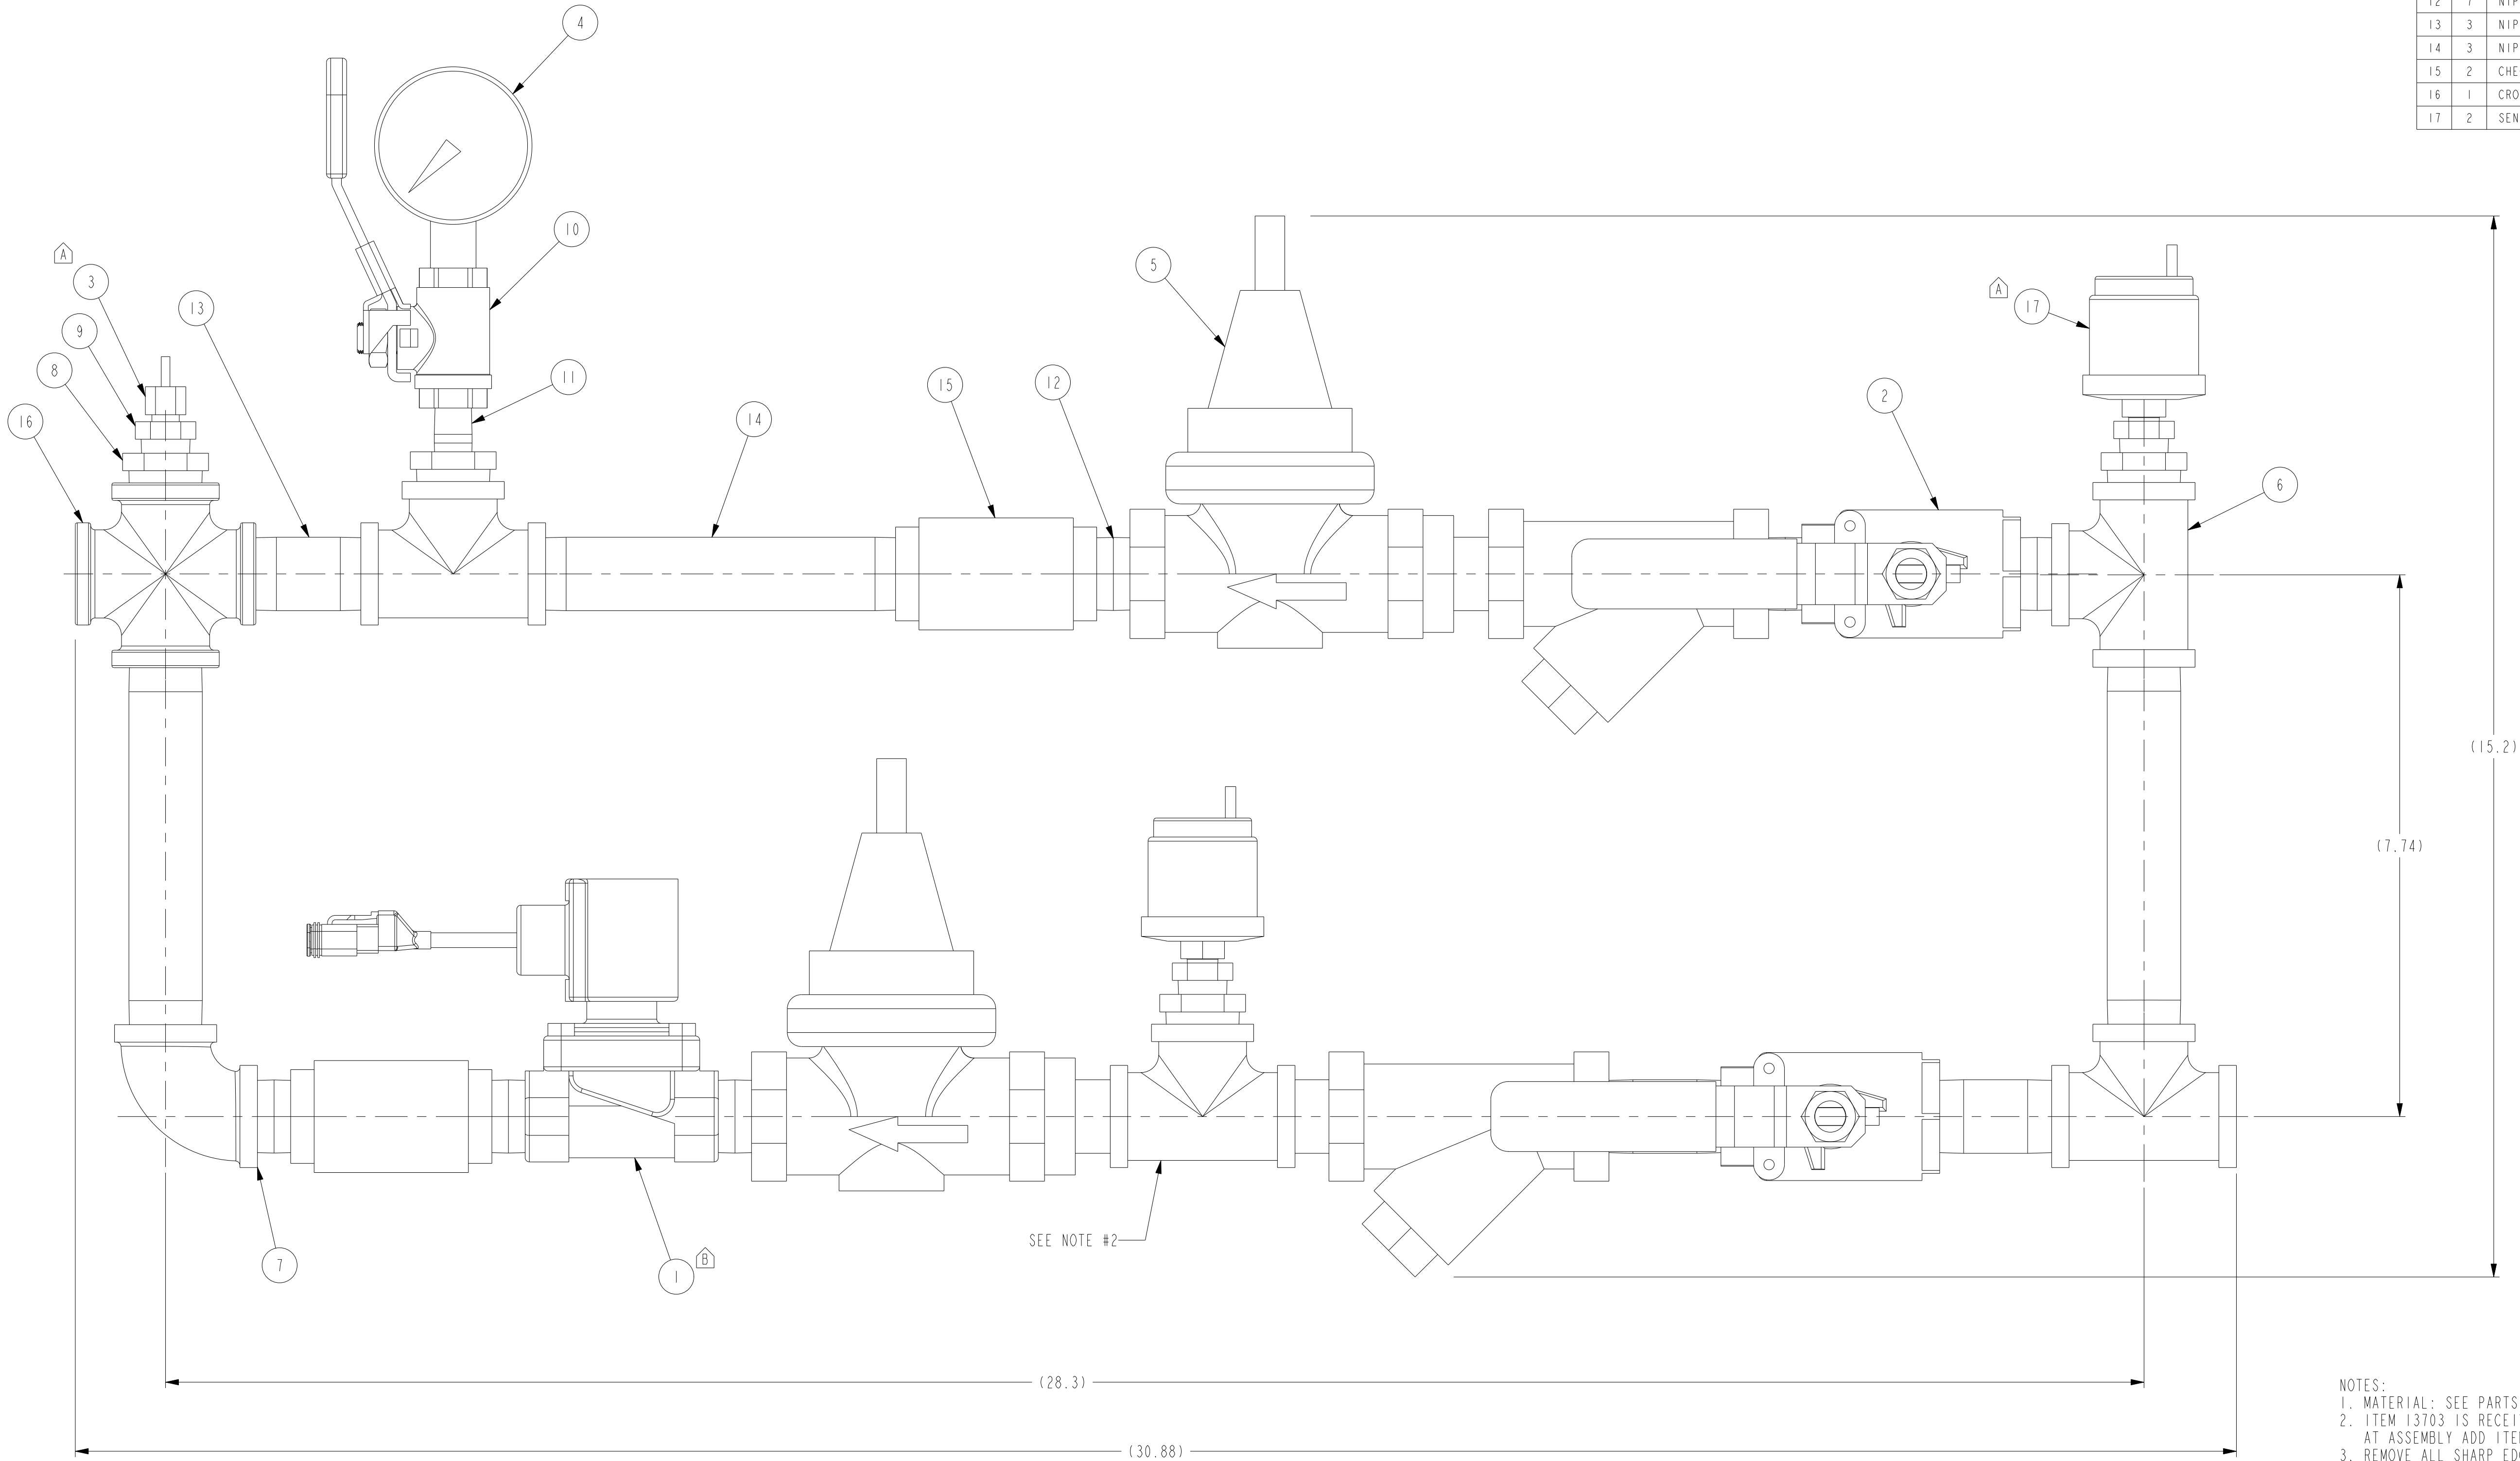

- NOTES:
1. MATERIAL: SEE PARTS LIST
2. ITEM 13703 IS RECEIVED AS AN UNASSEMBLED KIT.
AT ASSEMBLY ADD ITEMS SHOWN
3. REMOVE ALL SHARP EDGES AND BURRS
4. LEAK TEST TO 60PSI AND PRESET REGULATORS TO 60PSI

This document contains confidential and trade secret information, is the property of Cummins Fire Power, LLC and is given in confidence, is confidential, and is not to be disclosed or used for any other purpose without the express written consent of Cummins Fire Power, LLC. If this document is disclosed or used for any other purpose without the express written consent of Cummins Fire Power, LLC, the user agrees to indemnify and hold Cummins Fire Power, LLC harmless from all damages, including reasonable attorneys' fees, and all other costs incurred by Cummins Fire Power, LLC in connection with this document. If this document is disclosed or used for any other purpose without the express written consent of Cummins Fire Power, LLC, the user agrees to indemnify and hold Cummins Fire Power, LLC harmless from all damages, including reasonable attorneys' fees, and all other costs incurred by Cummins Fire Power, LLC in connection with this document.			
ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS IN/LB/S	METRIC UNITS MM/KG
THIRD ANGLE PROJECTION	125	FORM 10/2013	FORM 10/2013

C	2015-043	ADDED SHEET 2 WITH MATERIAL SPECIFICATIONS	PBS	16JAN2015
B	2014-241	UPDATED TO SHOW LEADS ON SOLENOID VALVE	PBS	17APR2014
A	2013-611	REPLACED 21008 & 21009 WITH 21574 & 8862	PBS	02OCT2013
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

Cummins Fire Power		CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 DUBUQUE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
COOLING LOOP, 3/4", 12V SEA WATER COMPATIBLE			
DWG UNITS: IN/LB/S	SCALE: 0.750	DRAWN BY: BOB KROPP PRO-ENGINEER	DATE: 02MAR2012
EST WEIGHT: NA	SHEET 1 OF 2	DRAWING NO: 21438	INIT ECO: 2013-303

Assembly	Component	Manufacture/pn	Description	Sub-Component	Material	Specification
21438			3/4" 12VDC, Sea Water			
	15738	GC Valves, S211GF15J7EG5	3/4" NPT 12V solenoid valve			
				valve boby/bonnet	316 stainless steel	ASTM A351 CF8M
				plunger tube -tub head	430FR	ASTM A838 alloy 2
				tube head shading ring	commercial grade silver	ASTM B742-90
				plunger tube	304 stainless steel	ASTM A269
				valve plunger	430FR	ASTM A838 alloy 2
				plunger spring	302 stainless steel	ASTM 313-08
				diaphragm pilot orifice	303 stainless steel	ASTM A8582
				diaphragm back plate/dish plate	304 stainless steel	ASTM A276-13
	21434	Apollo, 75-104-01	3/4" ball valve			
				lever and grip	steel, zinc plated w/vinyl	
				stem packing	MPTFE	
				stem bearing	RPTFE	
				ball	chrome plated	ASTM B16
				seat	RPTFE	
				retainer		ASTM B16
				gland nut		ASTM B16
				stem		ASTM B16
				lever nut	steel, zinc plated	
				body seal	PTFE	
				body		ASTM B524-C84400
	8862	Datcon 02022-00	temperature sender	Body	brass	
	13113	Grainger, 4RY95	pressure gauge			
				case	stainless steel	
				socket	316 stainless steel	
				tube	316 stainless steel	
				lens	polycarbonate	
				ring	316 stainless steel	
	13703	Wilkins, 500YSBRHLRSW	3/4" regulator/strainer			
				body	cast bronze	ASTM B584
				access covers	cast bronze	ASTM B584
					brass	ASTM B16
				fasteners	300 series stainless steel	
				stem & plunger	cast bronze	ASTM B584
					brass	ASTM B16
				elasttomers	Buna Nitrile	FDA approved
					EPDM	FDA approved
				cap gaskets	natural vulcanized fibre	
					Acetal (Delrin 500)	NSF Listed
				springs	oil tempered wire	ASTM A229
				strainer screen	300 series stainless steel	
				seat	300 series stainless steel	
	15755-12		3/4" tee		Copper Alloy	ASTM B62-09
	15756-12		3/4" elbow		Copper Alloy	ASTM B62-09
	15758-12-4		3/4" x 1/4" reducing bushing		Copper Alloy	ASTM B62-09
	15758-4-2		1/4" x 1/8" reducing bushing		Copper Alloy	ASTM B62-09
	15759-04	Apollo, 77-101-01	1/4" ball valve			
				lever and grip	steel, zinc plated w/vinyl	
				stem packing	MPTFE	
				stem bearing	RPTFE	
				ball	chrome plated	ASTM B16
				seat	RPTFE	
				retainer		ASTM B16
				gland nut		ASTM B16
				stem		ASTM B16
				lever nut	steel, zinc plated	
				body seal	PTFE	
				body		ASTM B524-C84400
	15760		1/4" close nipple		Copper Alloy	ASTM B62-09
	15761		3/4" x 1-3/8" nipple		Copper Alloy	ASTM B62-09
	15762		3/4" x 2-1/2" nipple		Copper Alloy	ASTM B62-09
	15764		3/4" x 6" nipple		Copper Alloy	ASTM B62-09
	15768-12	Watts, series 600	3/4" check valve			
				body	bronze	
				guide bushing	stainless steel	
				spring	stainless steel	
				check	brass	
				seat	PTFE	
				O-ring	Nitrile	
				adapler	brass	
	21436		3/4" cross		Copper Alloy	ASTM B62-09
	21574	Veethree, 977035	pressure sensor			
				housing	diecast	
				diaphragm	beryllium copper	
				wiper	phosphor bronze	
				contact	silver coated	
				wire	German nickel chrome resistance	

C

2015-043

SEE SHEET 1 FOR LATEST REVISION DETAILS

PBS

16JAN2015

REV

ECO

DESCRIPTION OF REVISION

REV BY

DATE

THIRD ANGLE PROJECTION

125

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
ANGULAR DIMENSIONS ± .1°
MACHINED SURFACES
IMPERIAL UNITS
METRIC UNITS
DIM TOLERANCES
FRACTIONAL
DECIMAL
INCHES
MILLIMETERS
FRACTIONAL
DECIMAL
INCHES
MILLIMETERS

Cummins Fire Power

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUELALE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPPIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

COOLING LOOP, 3/4", 12V
SEA WATER COMPATIBLE

DWG UNITS:
IN/LB/S

SCALE: 0.750

EST WEIGHT: 28.157

DRAWN BY: BOB KROPP

PRO-ENGINEER


SHEET
2 OF 2

DATE: 02MAR2012

INIT ECO: 2013-303


DRAWING NO:
21438

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	VALVE, SOLENOID, 3/4" NPT, 24VDC, SEA WATER COMPATIBLE	15739
2	2	VALVE,BALL,3/4NPT, SEA WATER COMPATIBLE,LOCKABLE	21434
3	1	SENDER, TEMPERATURE, DATCON #02022-00	8862
4	1	GUAGE, 0-100 PSI, 1/4" NPT STN STL	13113
5	2	REGULATOR/STRAINER, 3/4" NPT, SEA WATER COMPATIBLE	13703
6	4	TEE, MARINE GRADE, 3/4" NPT	15755-12
7	1	ELBOW, MARINE GRADE, 3/4" NPT	15756-12
8	4	BUSHING, MARINE GRADE, 3/4" X 1/4"	15758-12-4
9	3	BUSHING, MARINE GRADE, 1/4" x 1/8"	15758-4-2
10	1	VALVE, BALL, 1/4" NPT., APOLLO 77-100 (MARINE)	15759-04
11	1	NIPPLE, NAVAL BRONZE, 1/4" X CLOSE	15760
12	6	NIPPLE, MARINE GRADE, 3/4" X 1-3/8"	15761
13	3	NIPPLE, MARINE GRADE, 3/4" X 2-1/2"	15762
14	3	NIPPLE, MARINE GRADE, 3/4" X 6"	15764
15	2	CHECK VALVE, MARINE GRADE, 3/4" NPT	15768-12
16	1	CROSS,3/4,NVL-BRNZ, SCHEDULE 40 PIPE	21436
17	2	SENSOR,300PSI,1/8NPT, VEETHREE-977035	21574



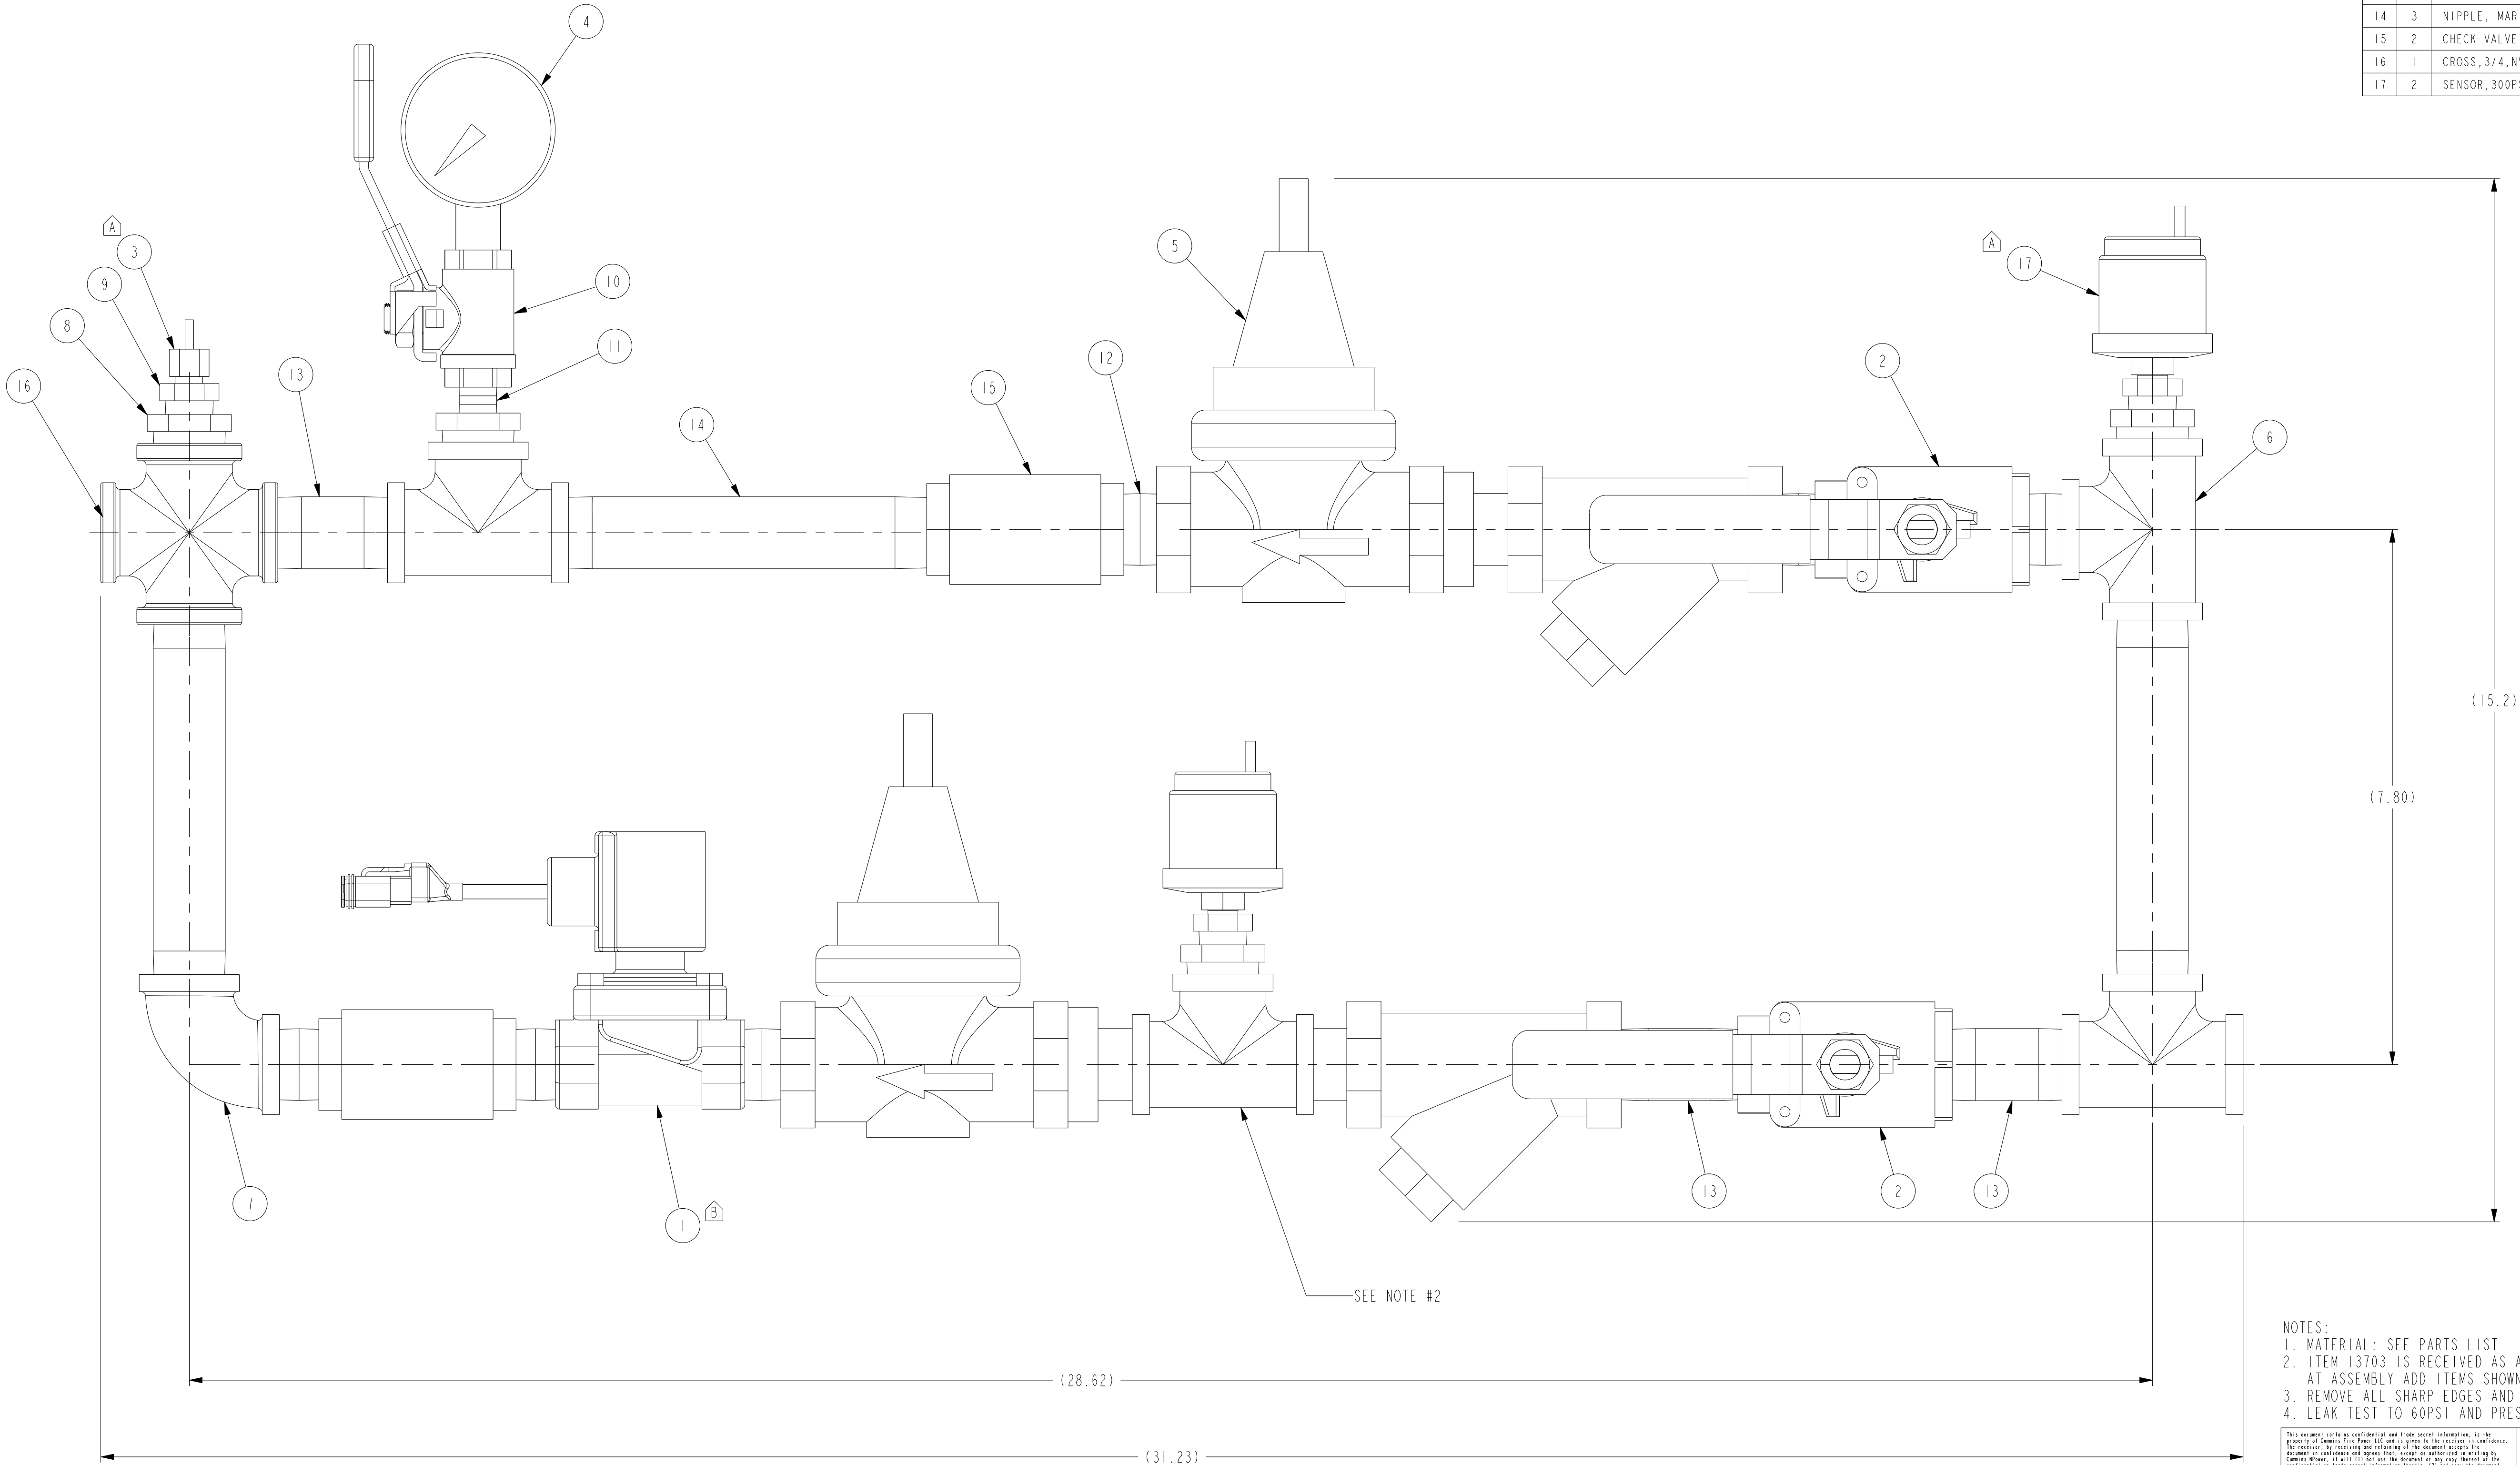


- NOTES:
1. MATERIAL: SEE PARTS LIST
2. ITEM 13703 IS RECEIVED AS AN UNASSEMBLED KIT.
AT ASSEMBLY ADD ITEMS SHOWN
3. REMOVE ALL SHARP EDGES AND BURRS
4. LEAK TEST TO 60PSI AND PRESET REGULATORS TO 60PSI

This document contains confidential and trade secret information, is the property of Cummins Fire Power, LLC and is given in confidence, to and for the use of the recipient. It is not to be distributed, copied, reproduced, or otherwise used without the express written permission of Cummins Fire Power, LLC. If this document is to be used for any other purpose, it must be approved by Cummins Fire Power, LLC. If this document is to be used for any other purpose, it must be approved by Cummins Fire Power, LLC. If this document is to be used for any other purpose, it must be approved by Cummins Fire Power, LLC.			
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:	ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS: IN/LB/S
THIRD ANGLE PROJECTION	125	FREE SURFACES	METRIC UNITS: MM/KG/S
REV	ECO	DESCRIPTION OF REVISION	REV BY DATE


		CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUELALE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPGIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
COOLING LOOP, 3/4", 24V SEA WATER COMPATIBLE			
DWG UNITS: IN/LB/S	DRAWN BY: BOB KROPP PRO-ENGINEER		DATE: 02MAR2012 INIT ECO: 2013-303
SCALE: 0.750 EST WEIGHT: NA	SHEET 1 OF 2	DRAWING NO: 21439	

TYPICAL GUARDING FASTENERS
SCALE 0.500

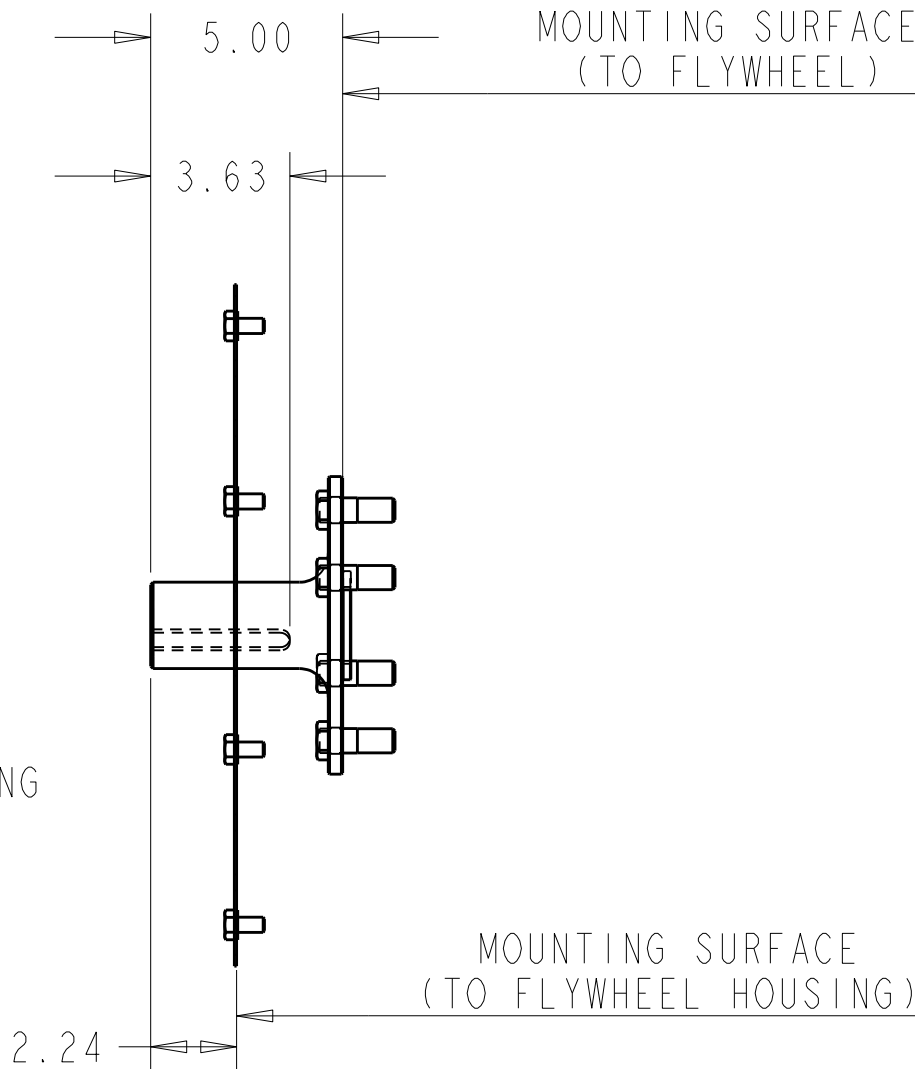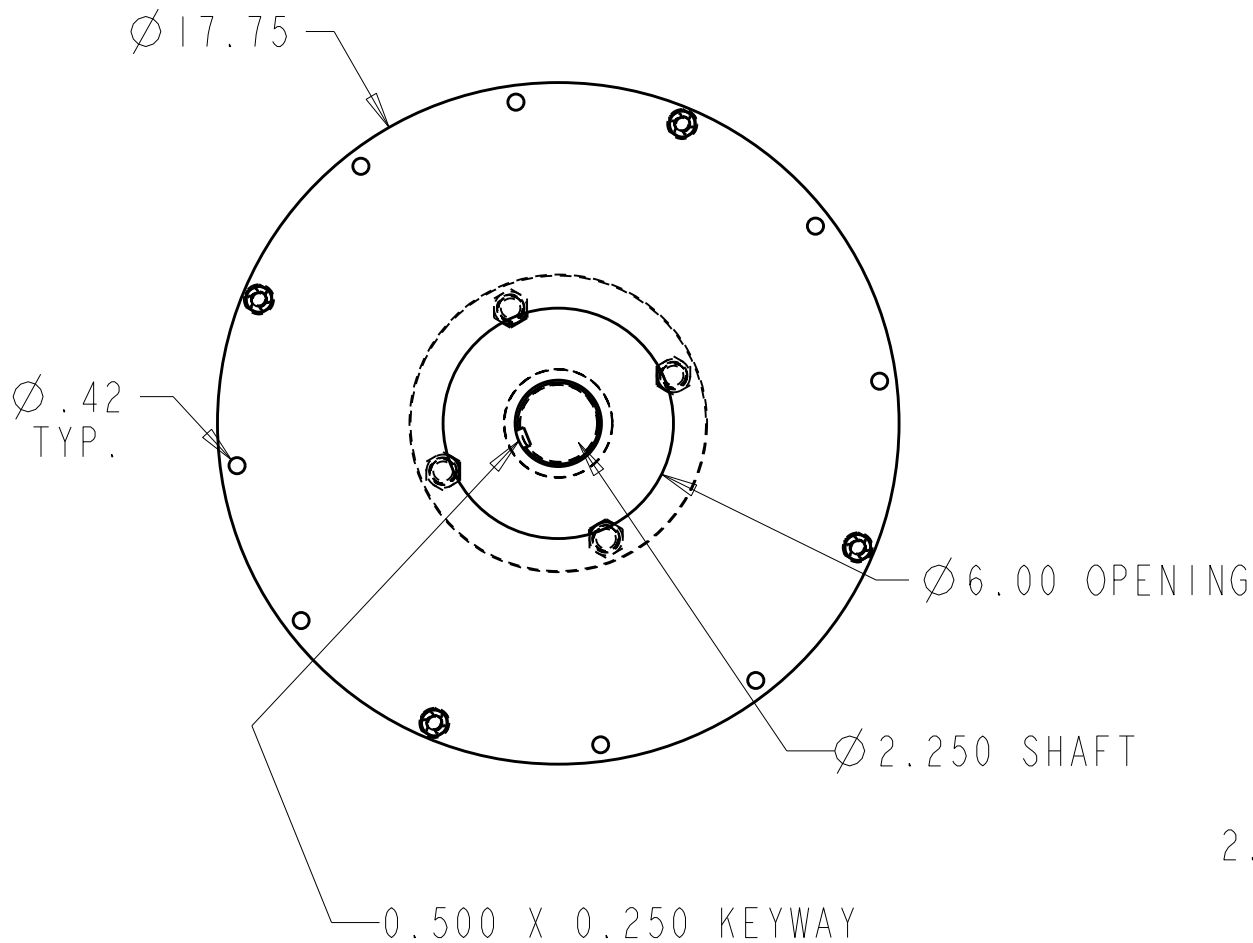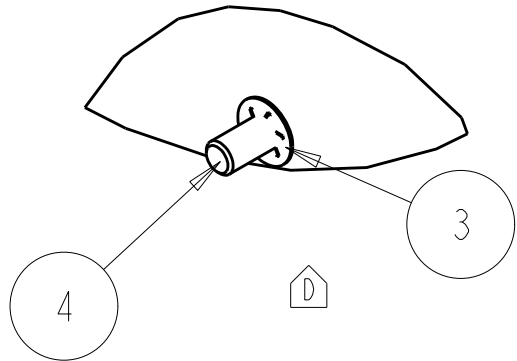

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	GUARD, STUB SHAFT, SAE #3 FLYWHEEL, FIREPUMP	8611
2	1	STUB SHAFT, SAE #3 FLYWHEEL, HAYES #, FIREPUMP	9624
3	4	RETAINING WASHER, PUSHNUT, 3/8" BOLT	16662-06
4	4	SCREW, CAP, HEX HEAD, M10-1.5	HHCS_M10
5	4	SCREW, CAP, HEX HEAD, M16 x 50	HHCS_M16_50

TORQUE CLASS 1
260-290 N*M

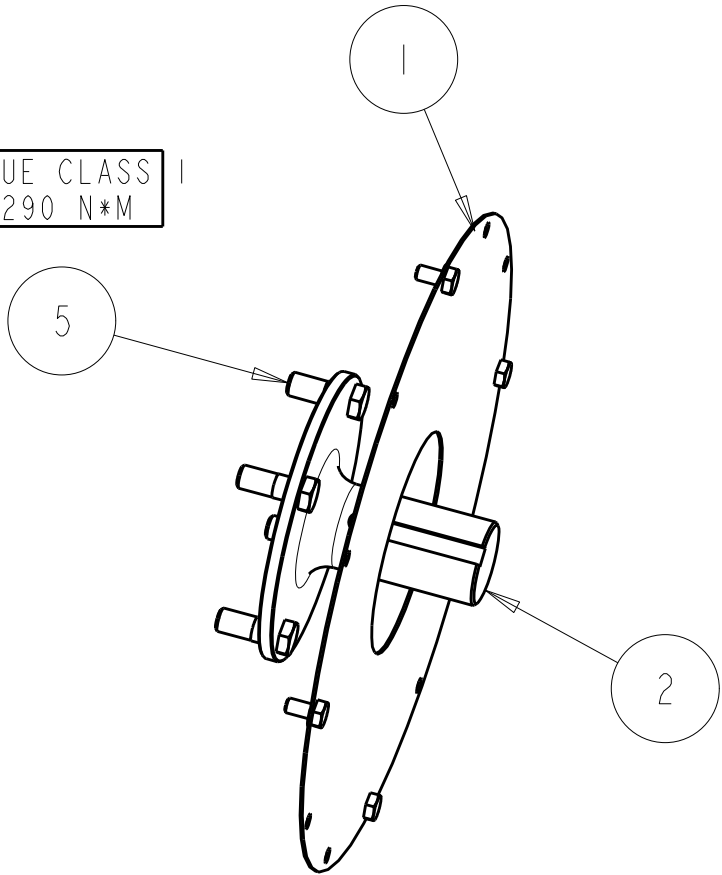


NOTES:
1. MASS: 13.9 LBS, INERTIA: 67.49 IB.IN^2

D	2010-098	ADDED RETAINING FASTENERS	DAN	04-MAR-10
C	2009-620	ADDED MASS & INERTIA DATA	S DUBICK	12/23/09
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC		
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE		
ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005 FORM TOLERANCES .XX ± 0.010 .XXX ± 0.015 FAB TOLERANCES .XX ± 0.010 .XXX ± 0.030	MACHINE TOLERANCES .XX ± 0.4 .XXX ± 0.2 FORM TOLERANCES .XX ± 0.8 .XXX ± 0.4 FAB TOLERANCES .XX ± 1.0 .XXX ± 0.8


		CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
ASSEMBLY, STUB SHAFT, 2.25" DIA FIREPUMP			
DWG UNITS: IN/LB/S	DRAWN BY: DAVE N PRO-ENGINEER		DATE: 15OCT2004 INIT ECO:
SCALE: 0.200 EST WEIGHT: 33.399	SHEET 1 OF 1		DRAWING NO: 8619




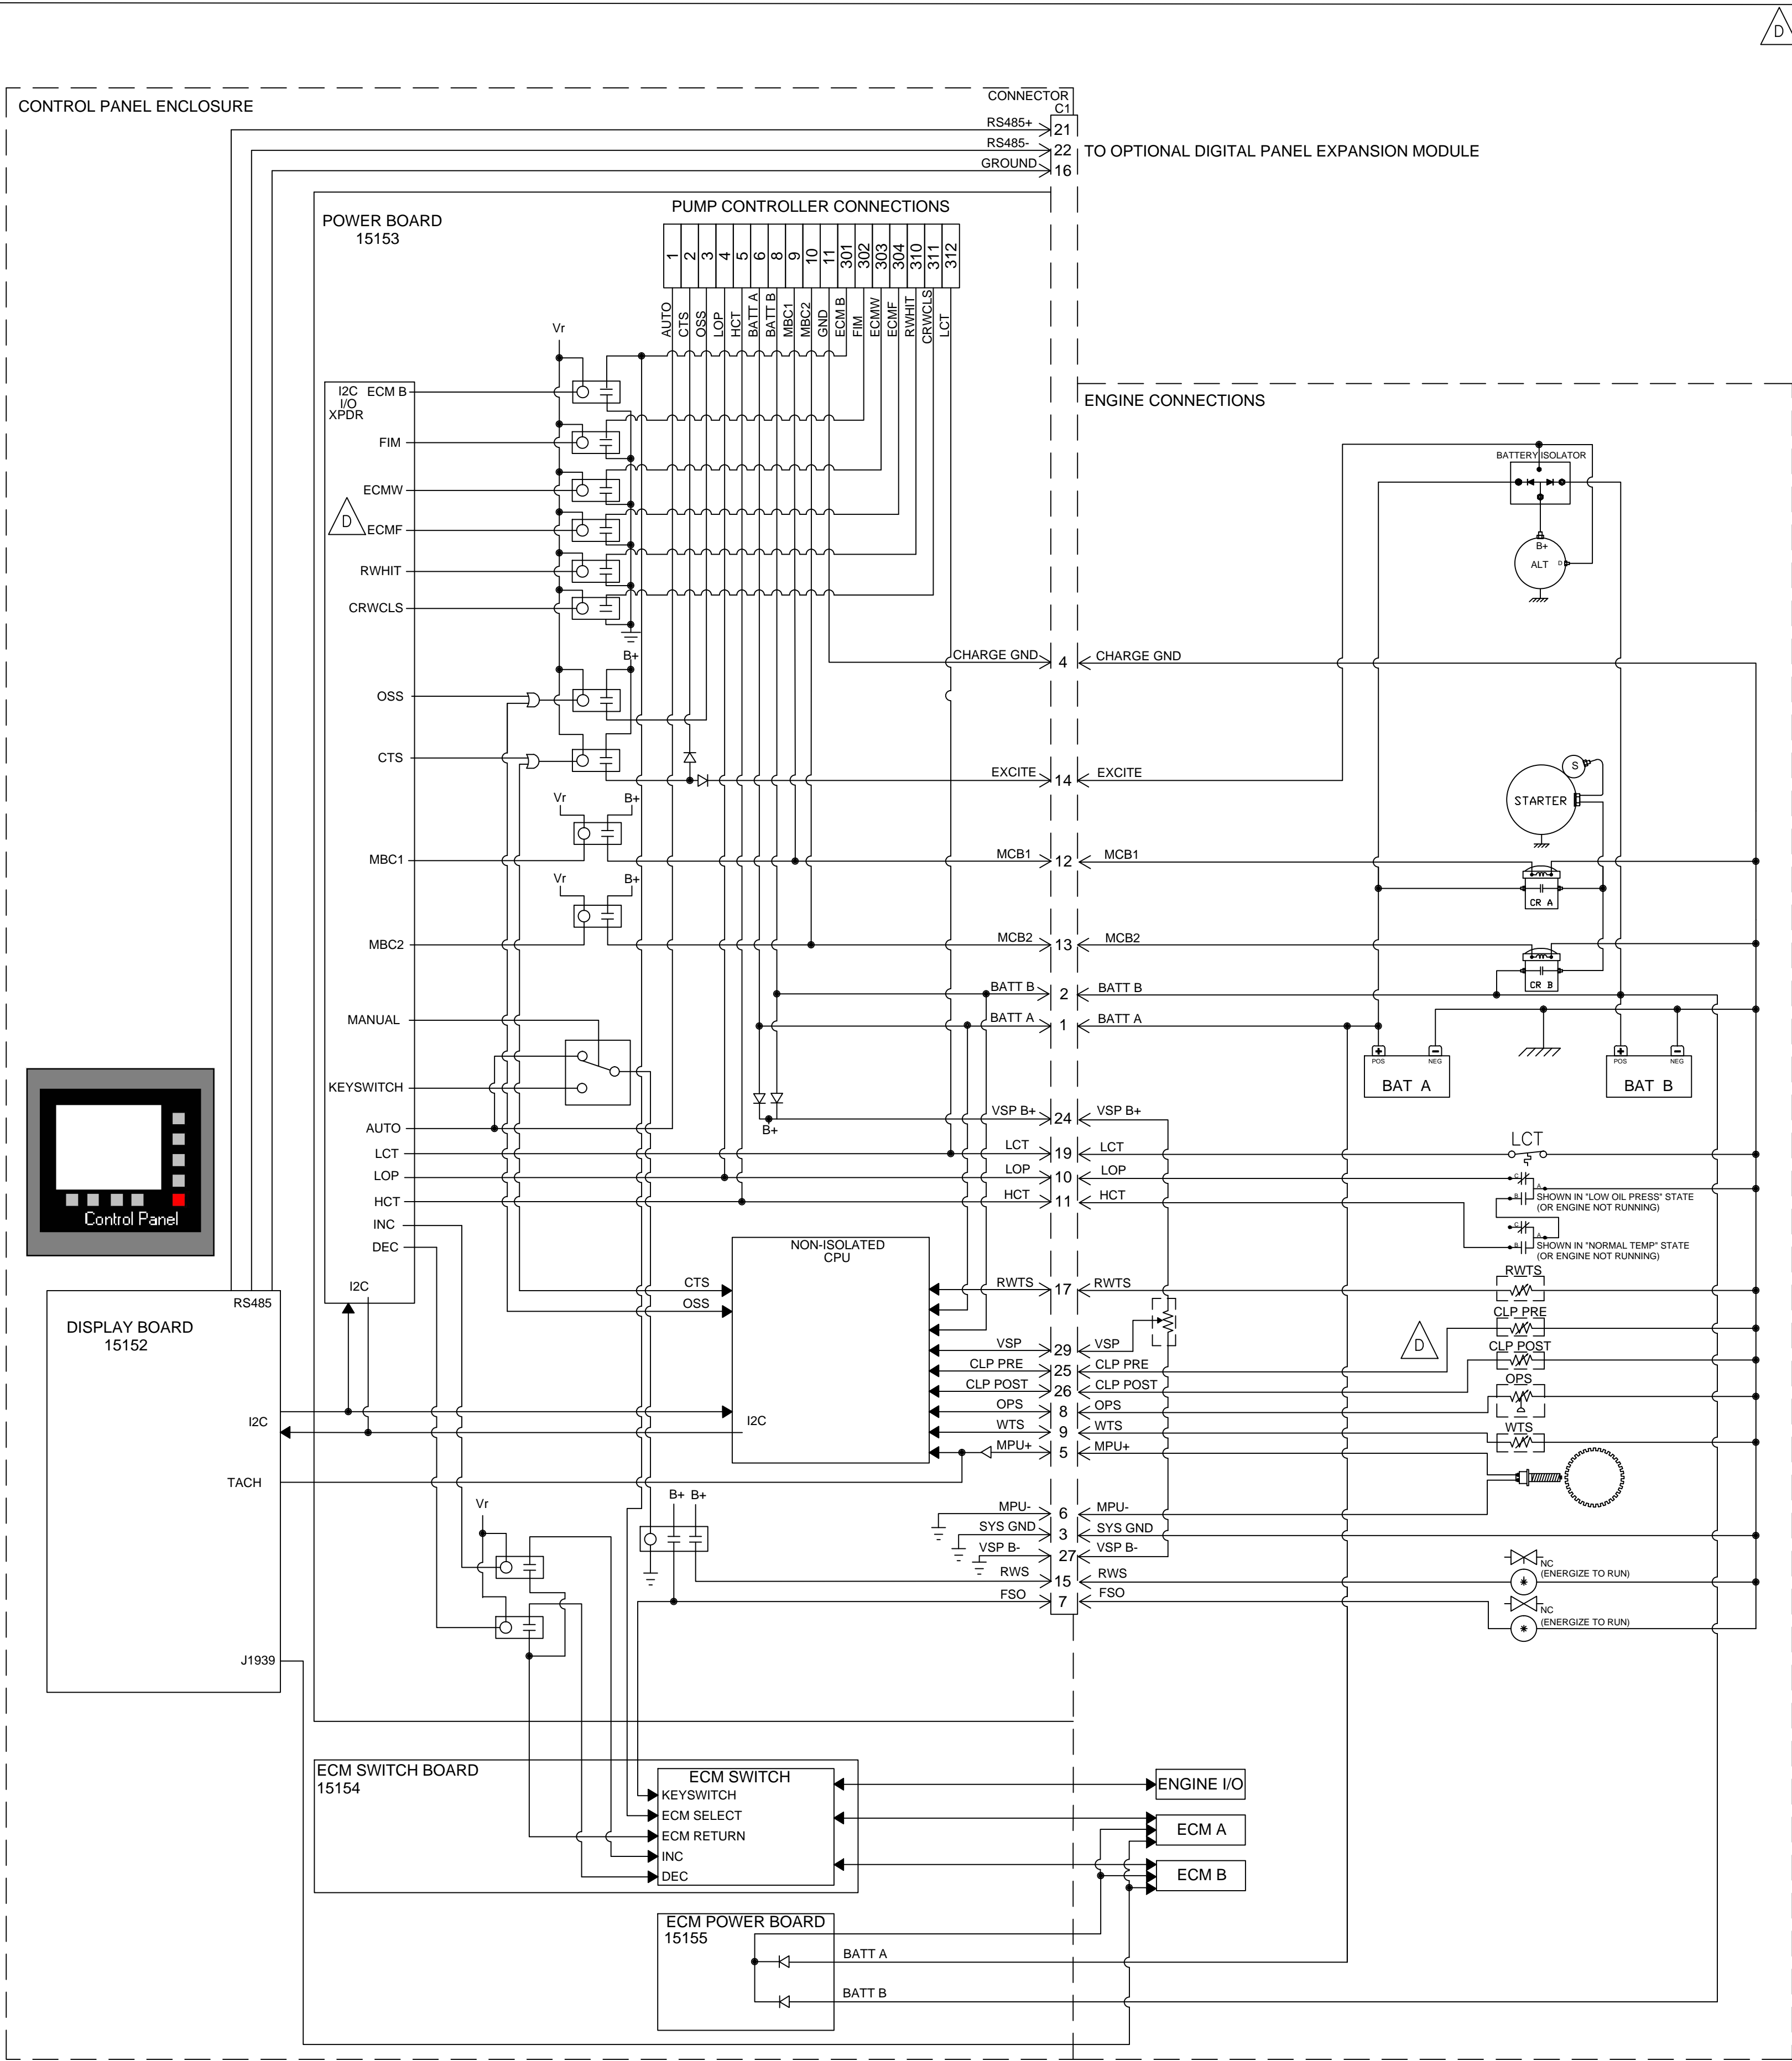



NOTES:

- 1) SEE SHEET 2 FOR CFP5E ECM SWITCH SCHEMATIC
- 2) SEE SHEET 3 FOR CFP7E ECM SWITCH SCHEMATIC
- 3) SEE SHEET 4 FOR CFP9E ECM SWITCH SCHEMATIC
- 4) SEE SHEET 5 FOR CFP11E ECM SWITCH SCHEMATIC
- 5) SEE SHEET 6 FOR CFP15E ECM SWITCH SCHEMATIC
- 6) SEE SHEET 7 FOR CFP23E ECM SWITCH SCHEMATIC

D	2014-107	ADDED COOLING LOOP SENSORS	RMJ	21FEB2014
C		ADDED LOW COOLANT TEMP SWITCH WIRING	KAK	03DEC2013
B	2011-307	MODIFIED SHEET 7: CFP23E	S DUBICK	12-JAN-12
A	2011-189	ADDED RS485 WIRES	PBS	15JUN2011
REV	ENF	DESCRIPTION OF REVISION	BY	DATE

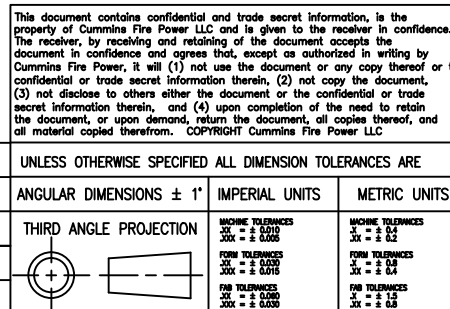




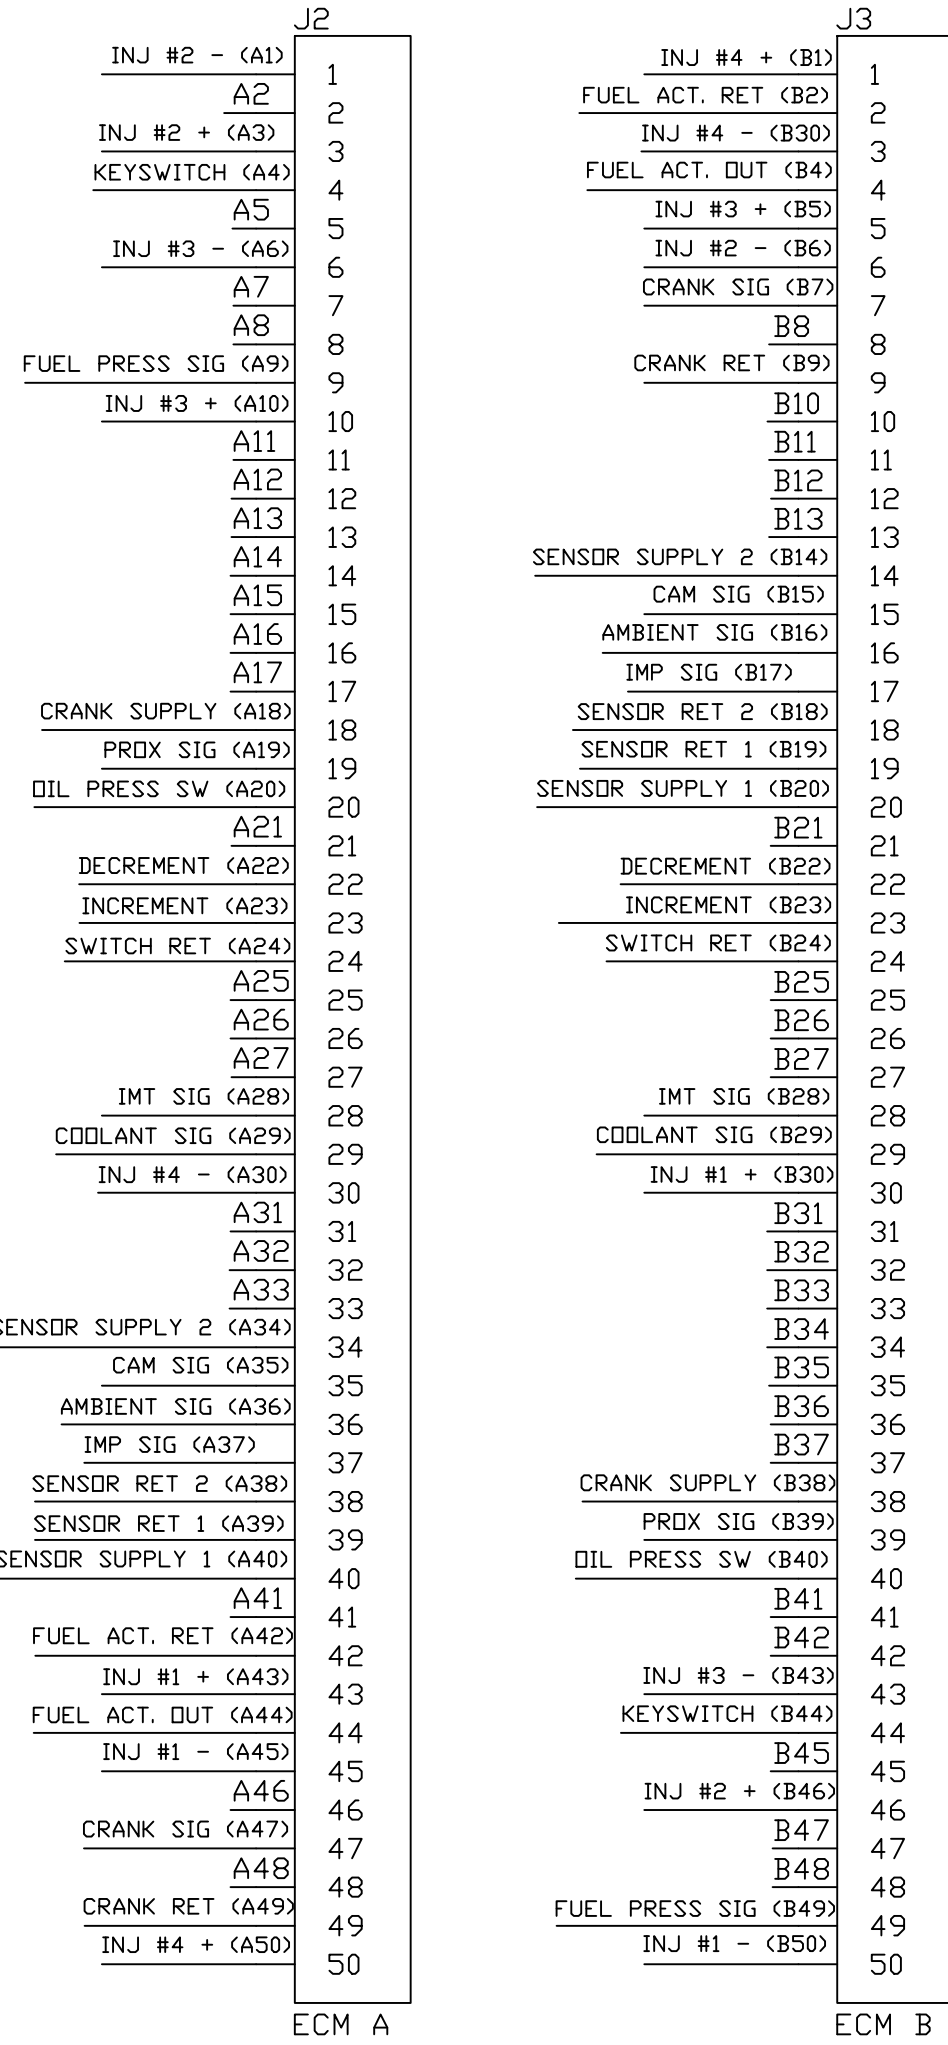
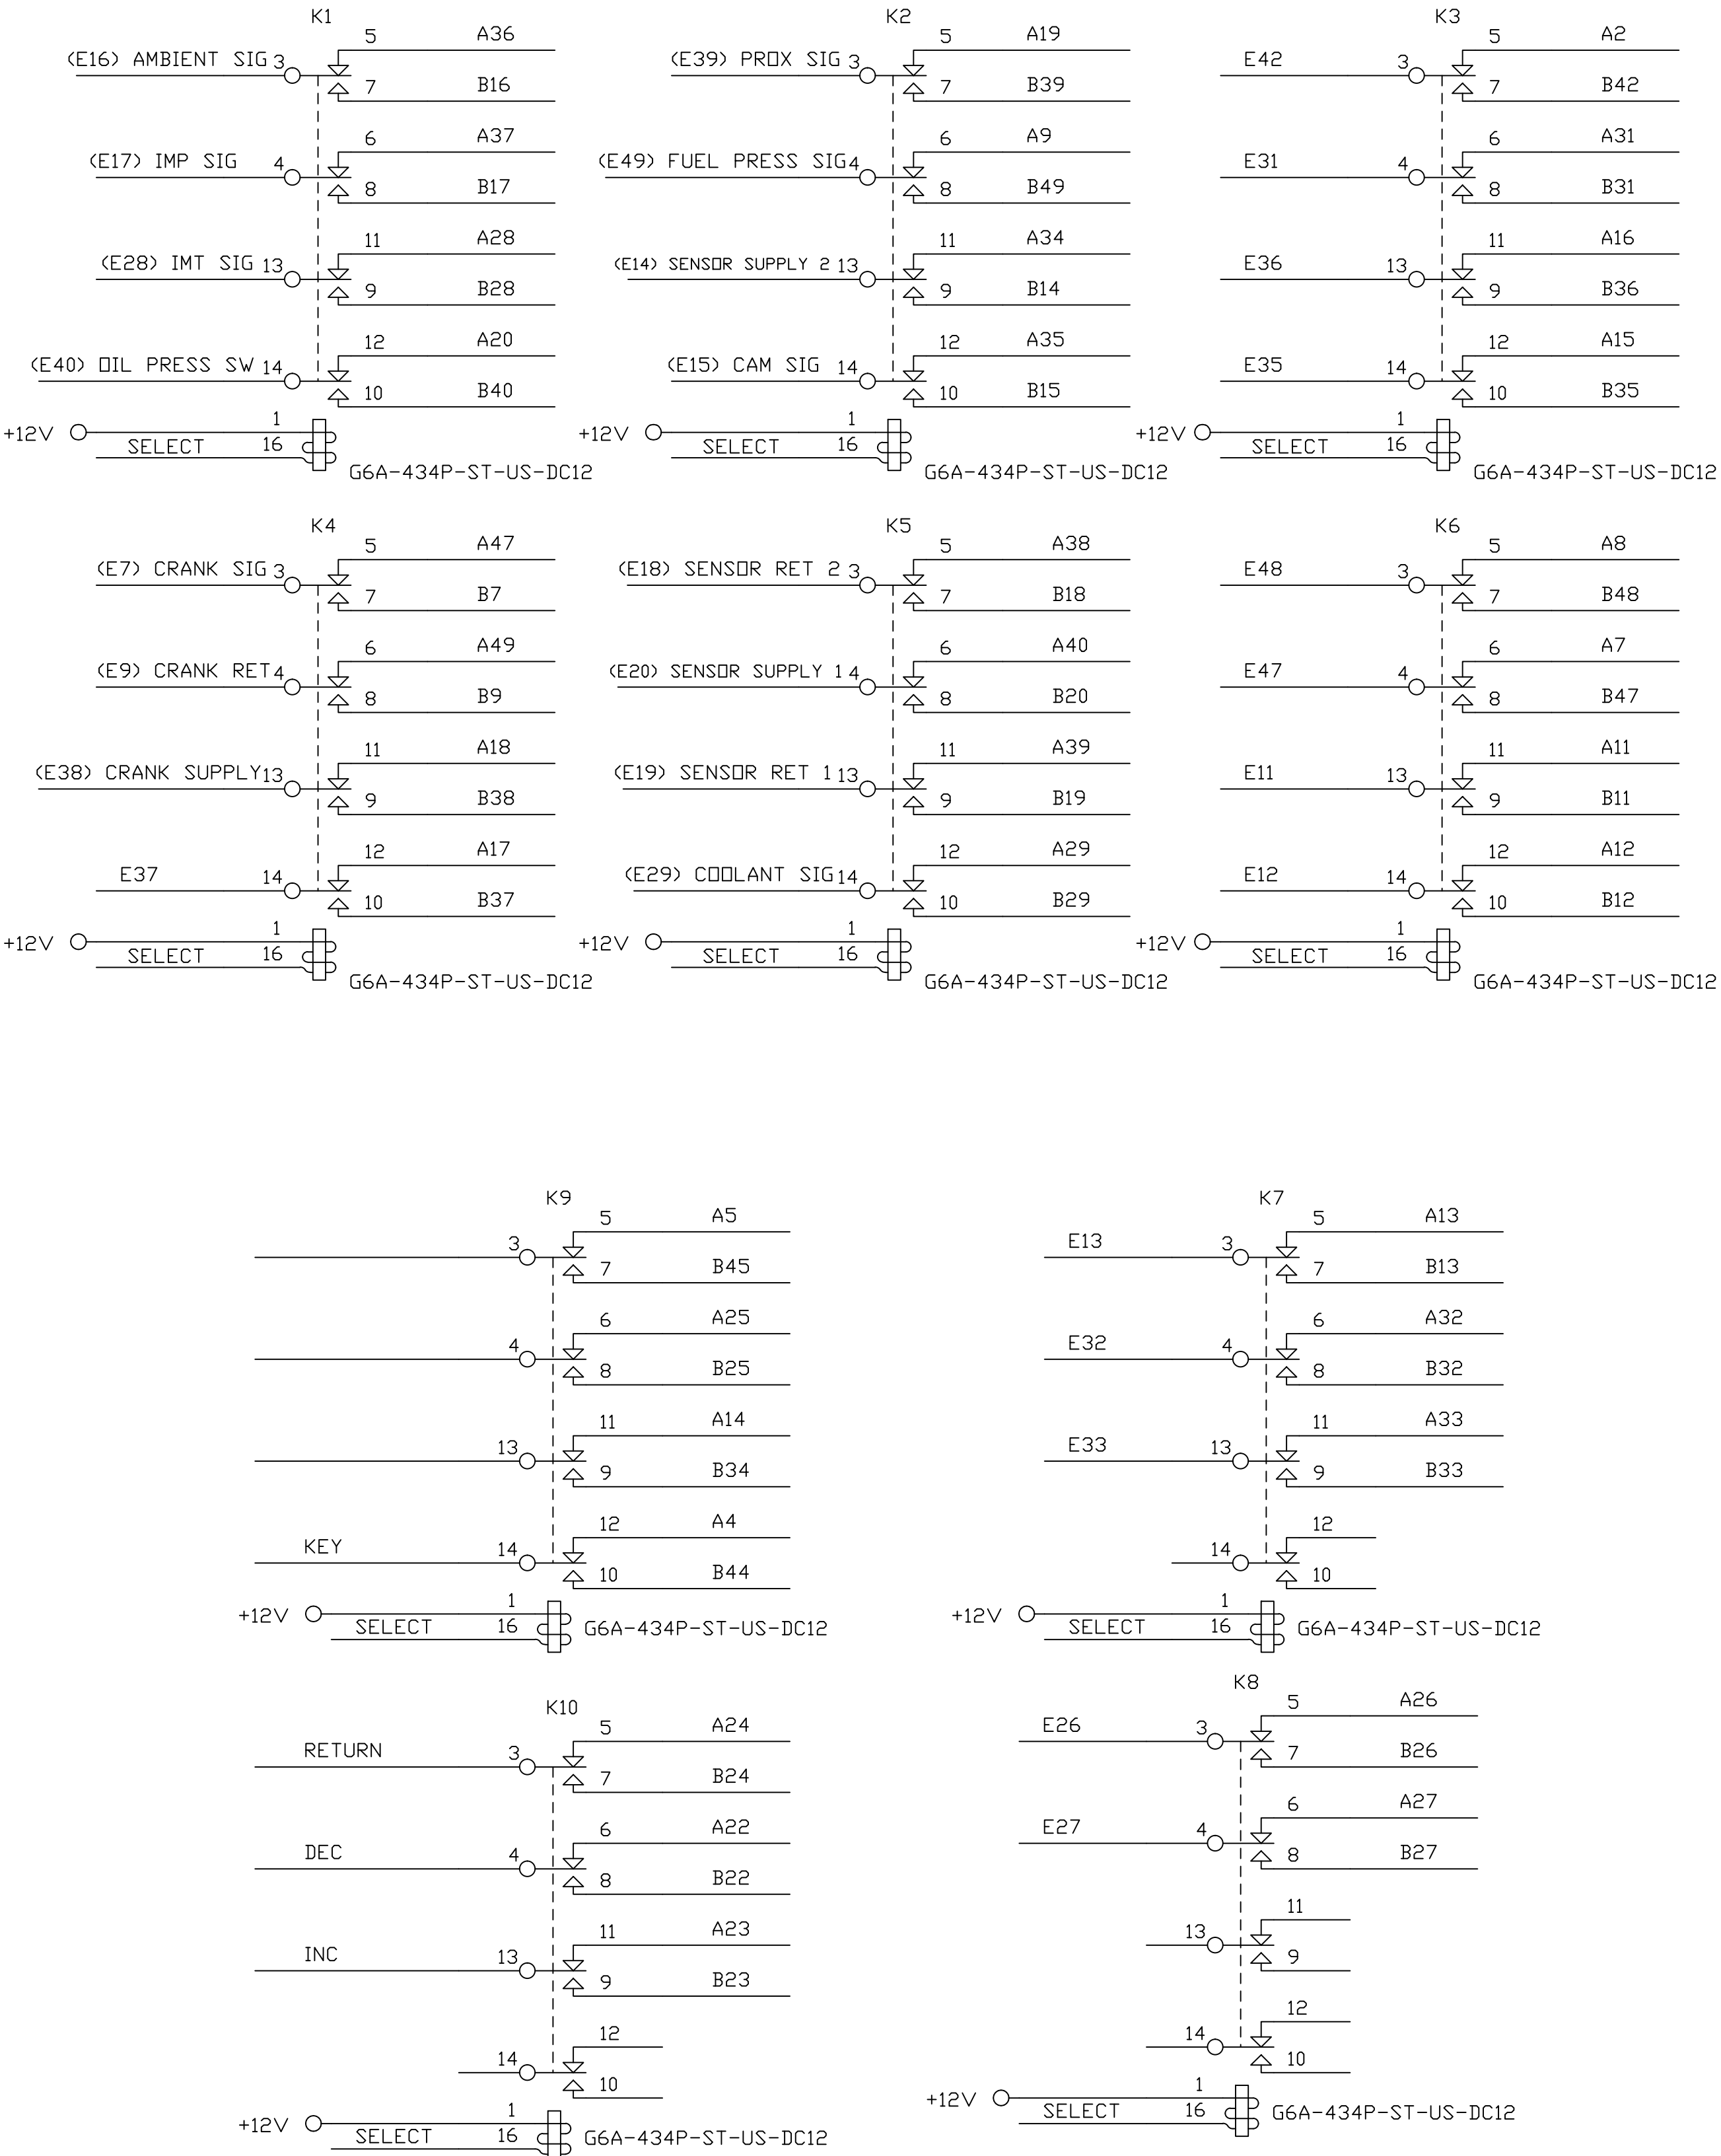
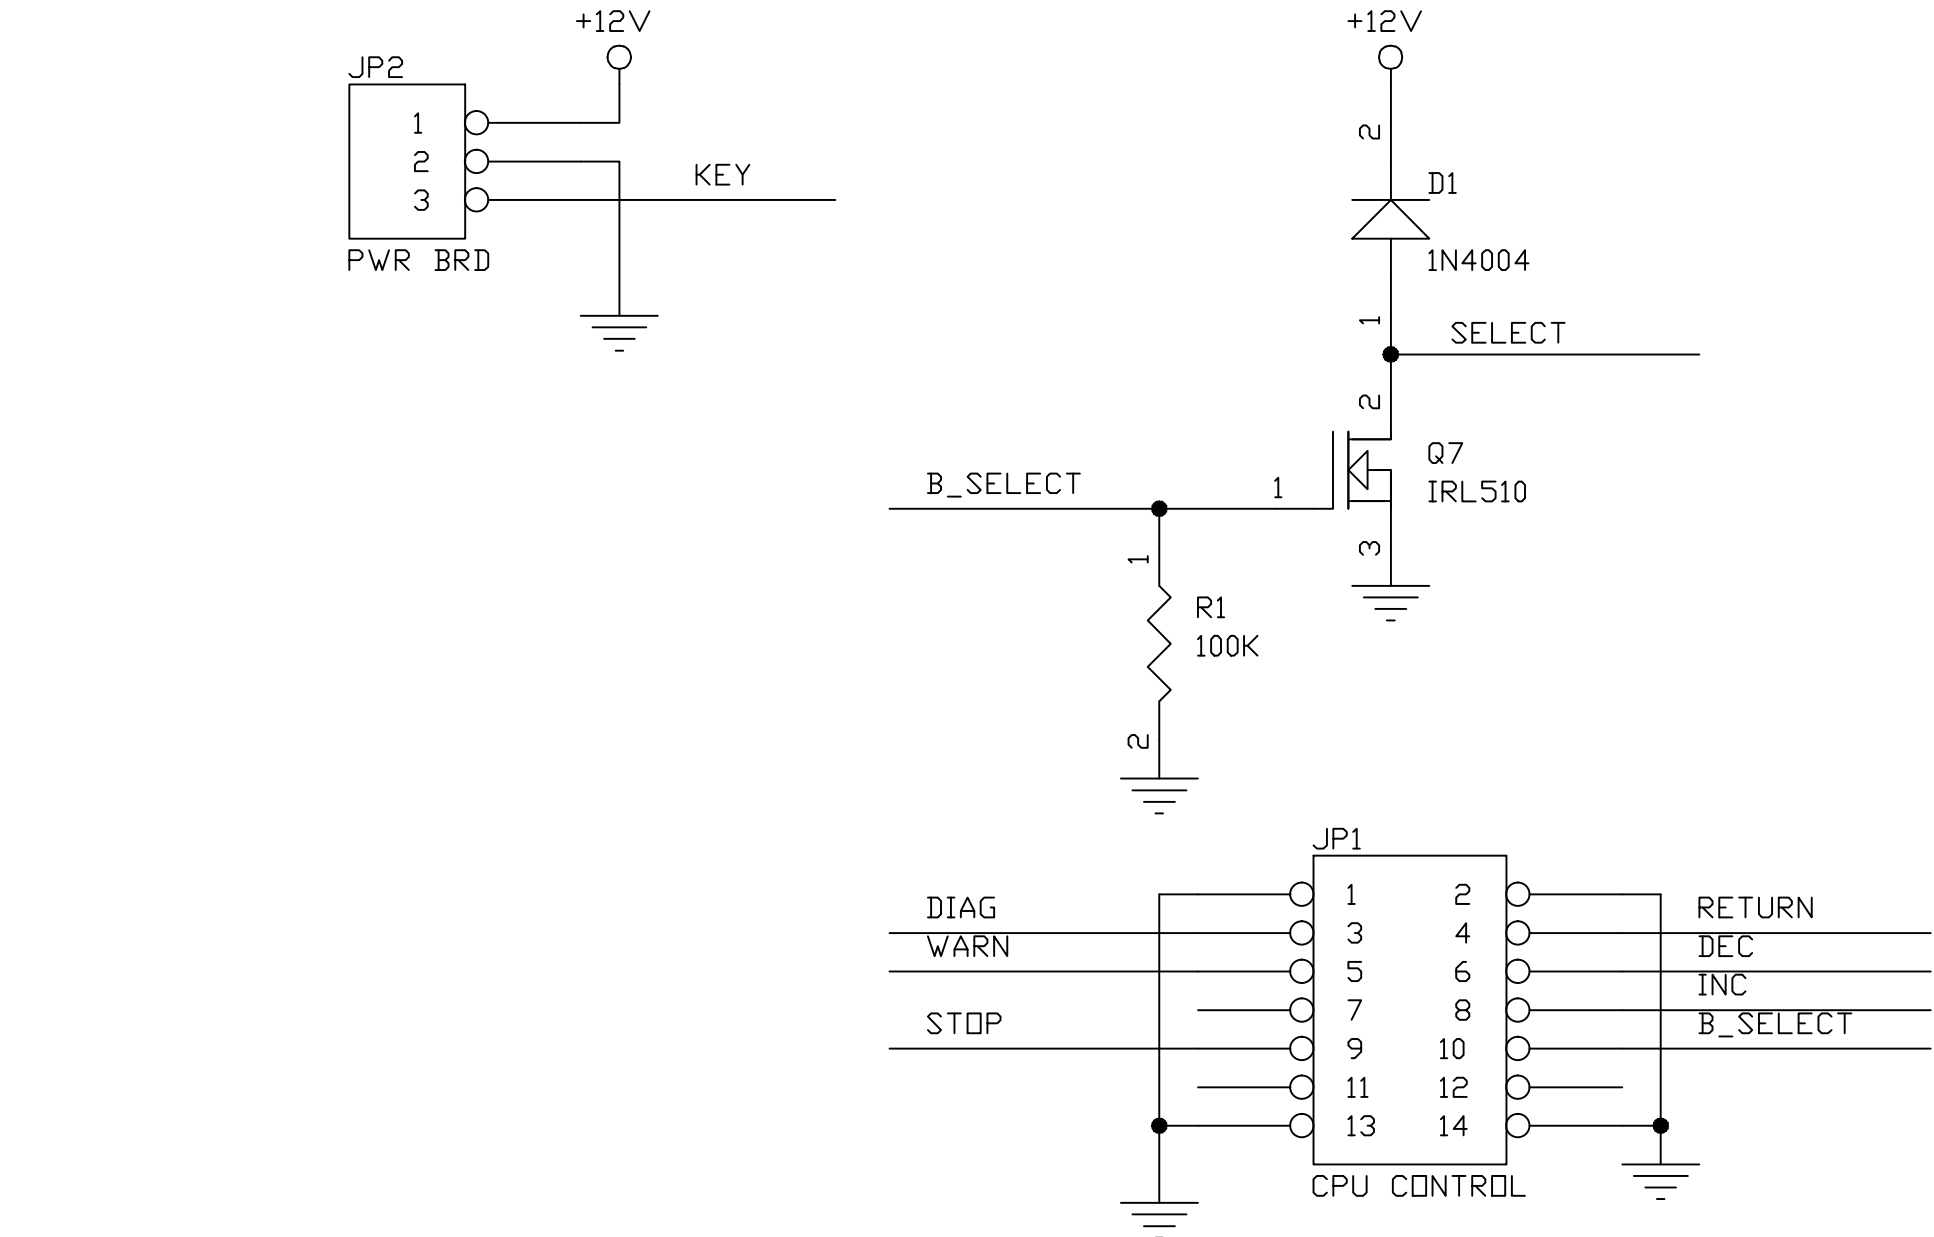
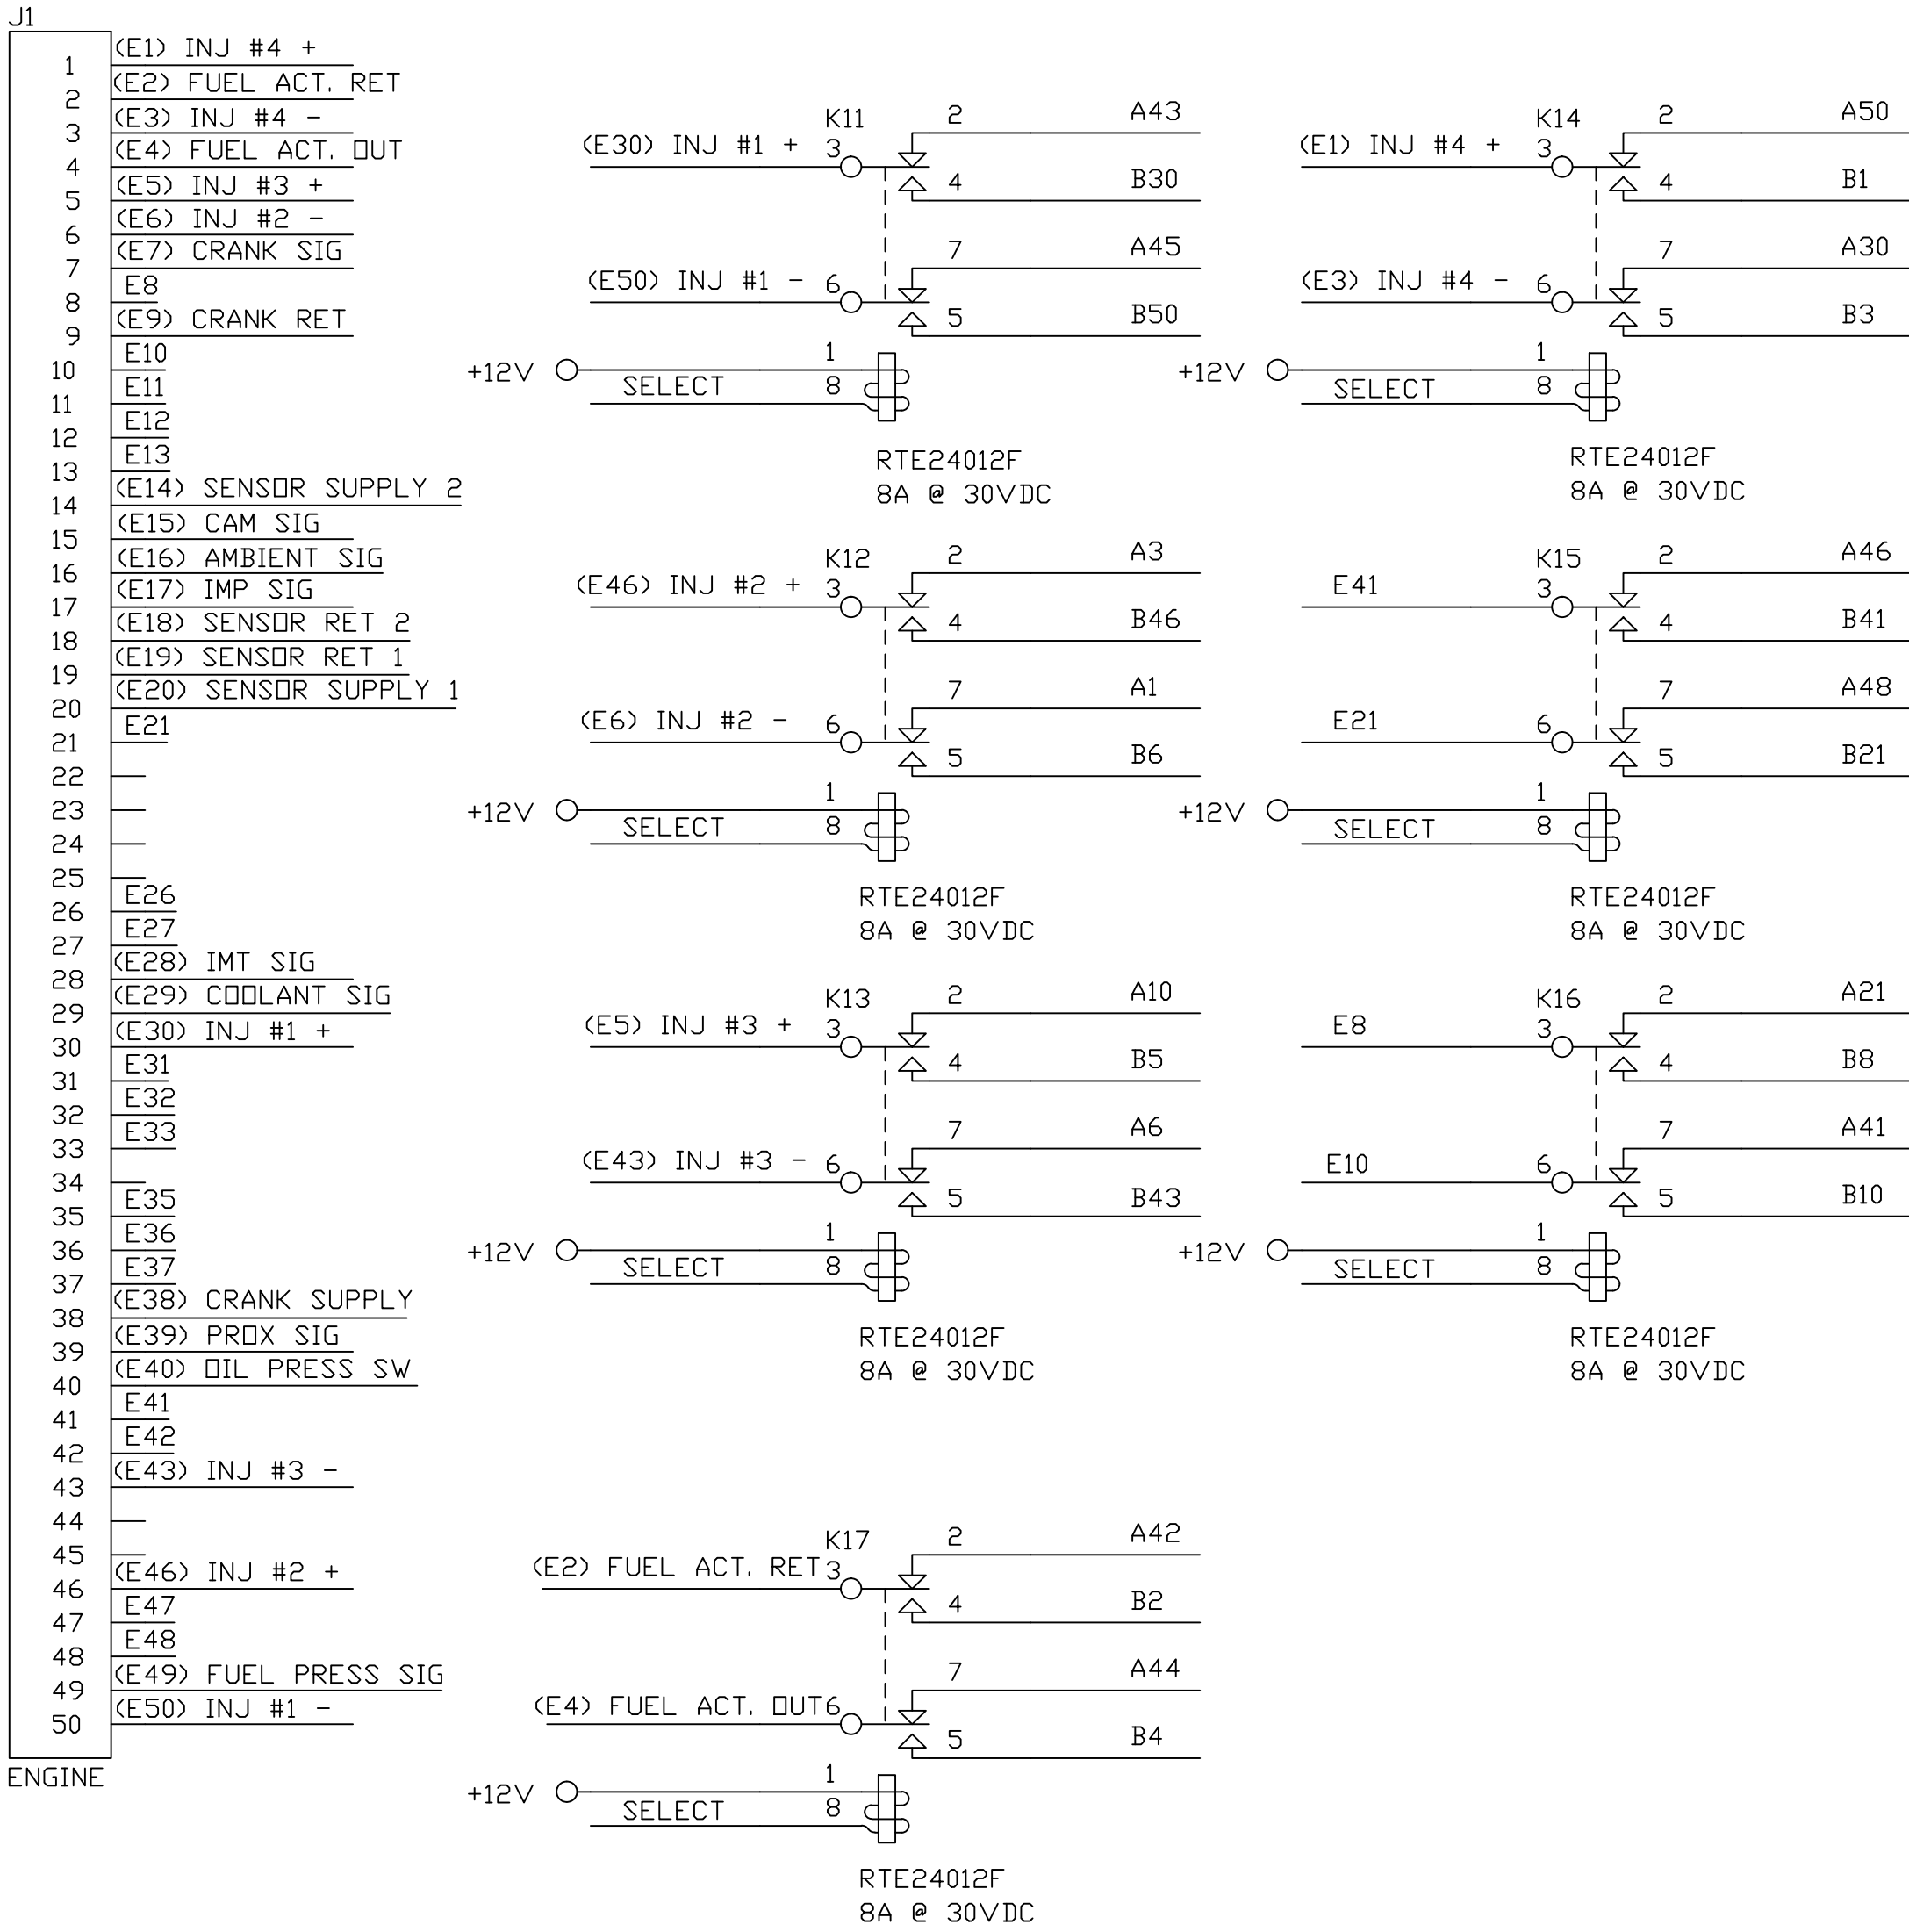


<p>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC</p>				<p>CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM</p>		<p>CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</p>									
<p>SCHEMATIC, ECM SWITCH CFP5E FIRE PUMP DRIVER</p>															
<p>ANGULAR DIMENSIONS ± 1°</p>		<p>IMPERIAL UNITS</p>		<p>METRIC UNITS</p>		<p>DWG UNITS: INCH/LB/S</p>		<p>DRAWN BY: KAK</p>		<p>DATE: 14 DEC 2009</p>					
<p>THIRD ANGLE PROJECTION</p>		<p>MACHINE TOLERANCES XX = ± 0.010 XXX = ± 0.005</p>		<p>MACHINE TOLERANCES X = ± 0.1 XX = ± 0.2</p>		<p>FORM TOLERANCES XX = ± 0.005 XXX = ± 0.010</p>		<p>FORM TOLERANCES X = ± 0.4 XX = ± 0.8</p>		<p>SCALE: EST WEIGHT:</p>		<p>SHEET 20F7</p>		<p>DRAWING NO: 16260</p>	

D	2014-107	SEE SHEET 1 FOR LATEST REVISION.	RMJ	24FEB2014
C		SEE SHEET 1 FOR LATEST REVISION.	KAK	03DEC2013
REV	ENF	DESCRIPTION OF REVISION	BY	DATE









J1
1 <E1> INJ #4 +
2 <E2> FUEL ACT. RET
3 <E3> INJ #4 -
4 <E4> FUEL ACT. OUT
5 <E5> INJ #3 +
6 <E6> INJ #2 -
7 <E7> CRANK SIG
8 <E8> INJ #6 +
9 <E9> CRANK RET
10 <E10> INJ #6 -
11 E11
12 E12
13 E13
14 <E14> SENSDR SUPPLY 2
15 <E15> CAM SIG
16 <E16> AMBIENT SIG
17 <E17> IMP SIG
18 <E18> SENSOR RET 2
19 <E19> SENSOR RET 1
20 <E20> SENSOR SUPPLY 1
21 <E21> INJ #5 -
22
23
24
25 E26
26 E27
27 <E28> IMT SIG
28 <E29> COOLANT SIG
29 <E30> INJ #1 +
30 E31
31 E32
32 E33
33
34 E35
35 E36
36 E37
37 <E38> CRANK SUPPLY
38 <E39> PROX SIG
39 <E40> OIL PRESS SW
40 <E41> INJ #5 +
41 E42
42 <E43> INJ #3 -
43
44
45 <E46> INJ #2 +
46 E47
47 E48
48 <E49> FUEL PRESS SIG
49 <E50> INJ #1 -
50

ENGINE

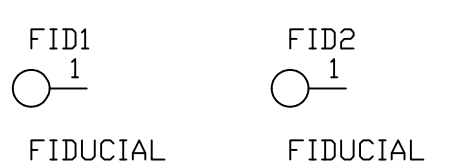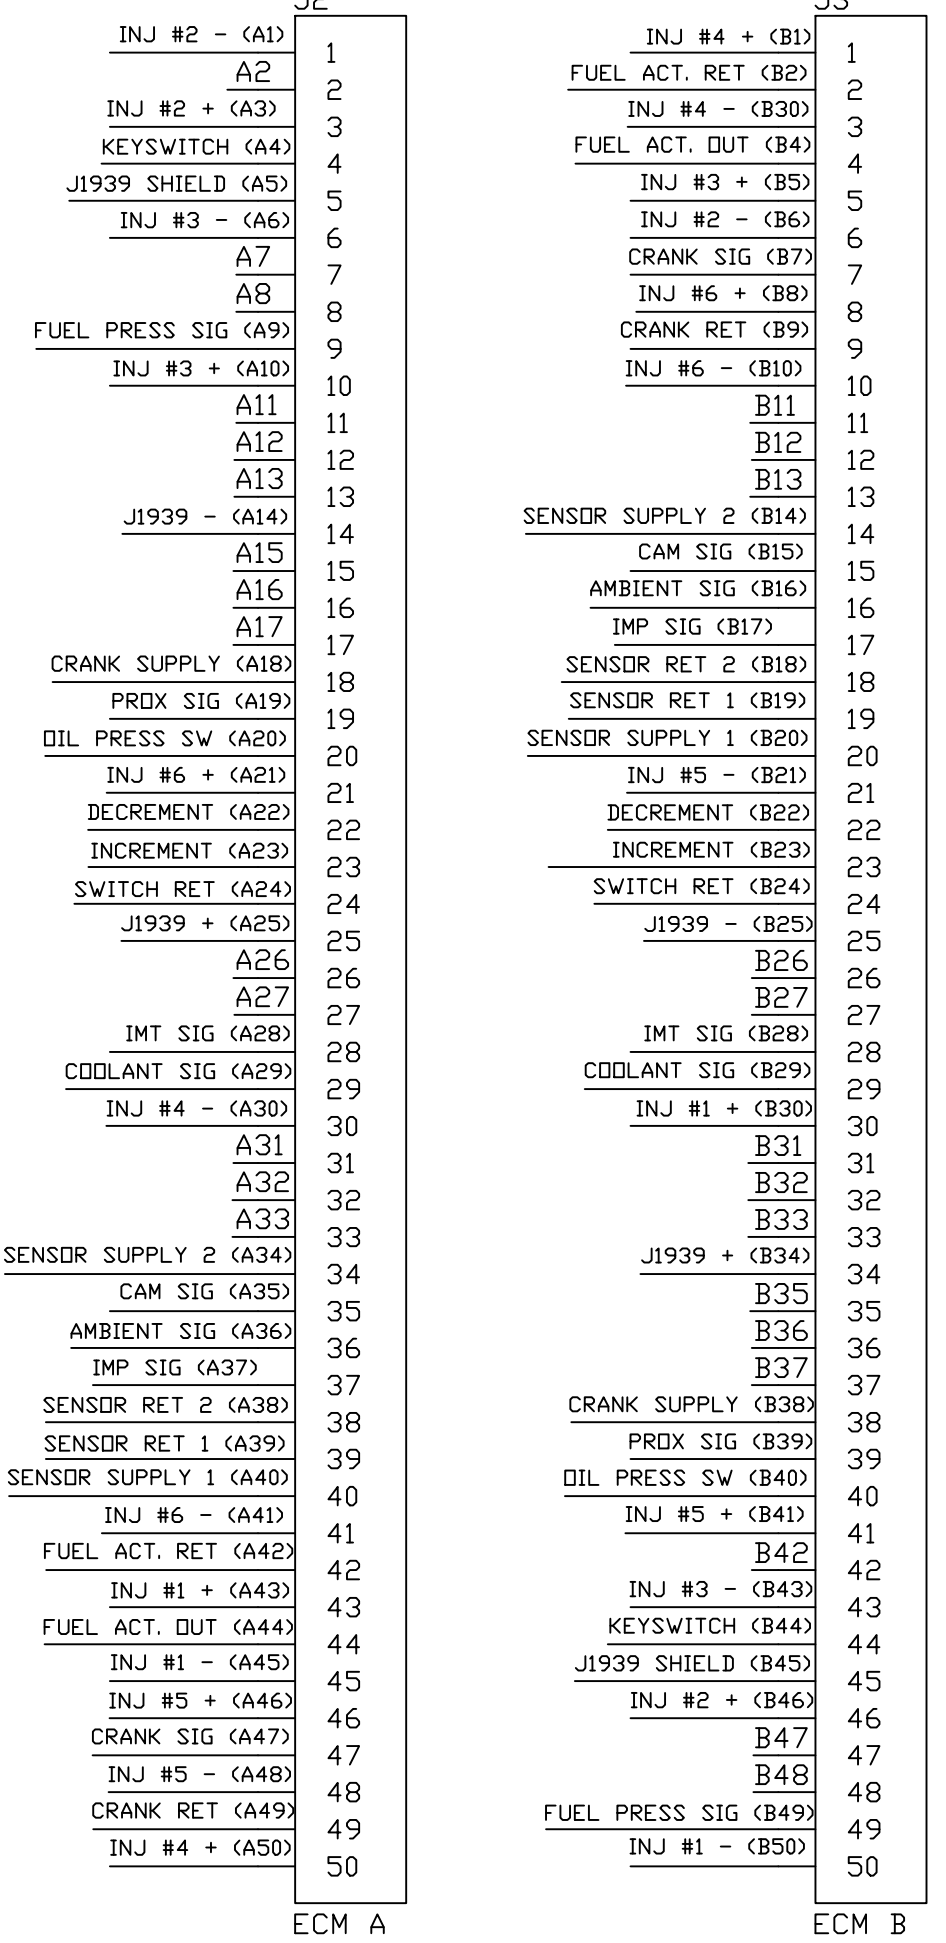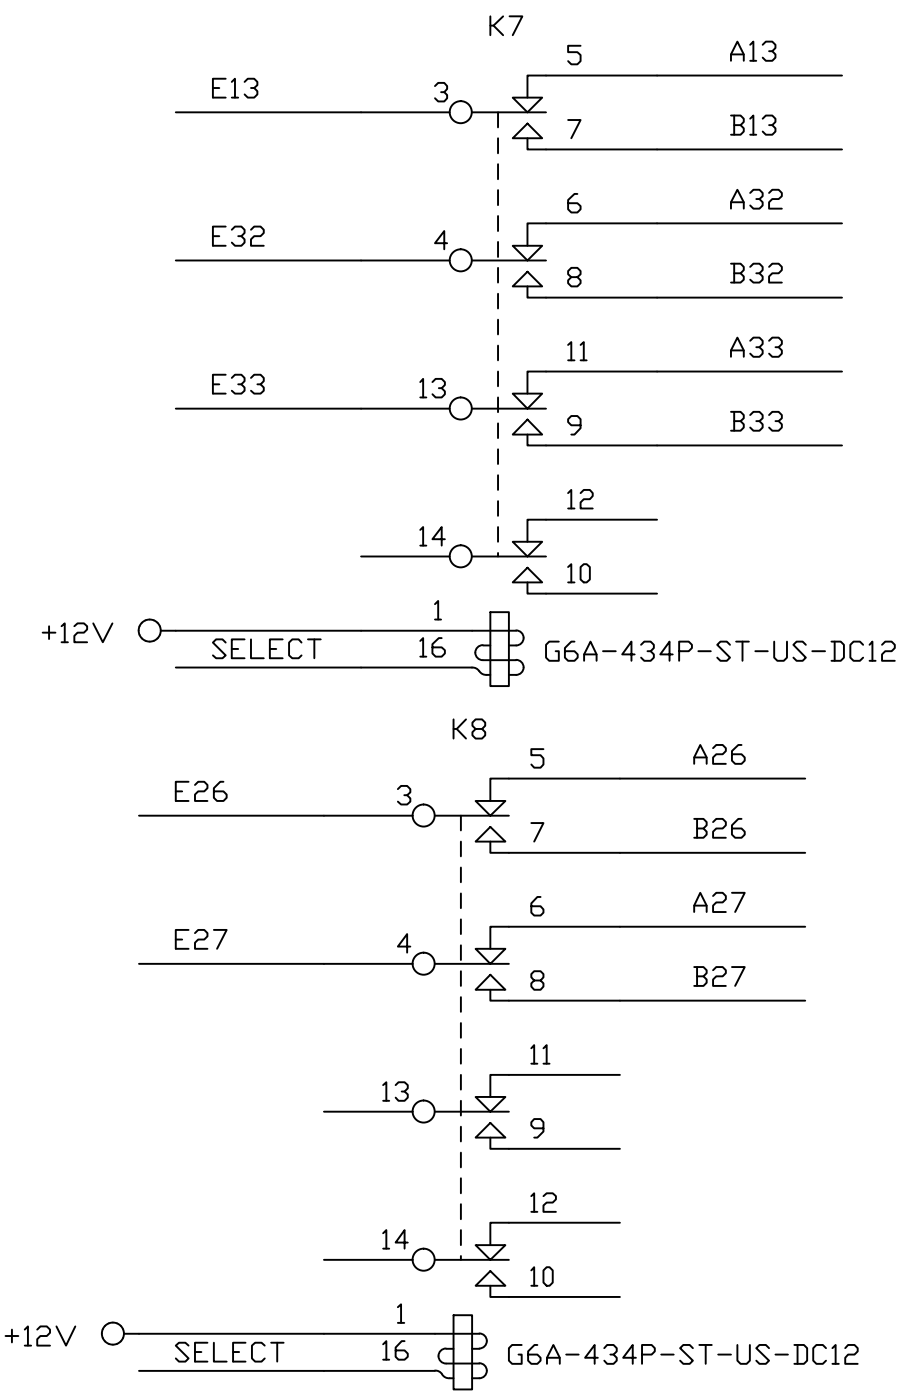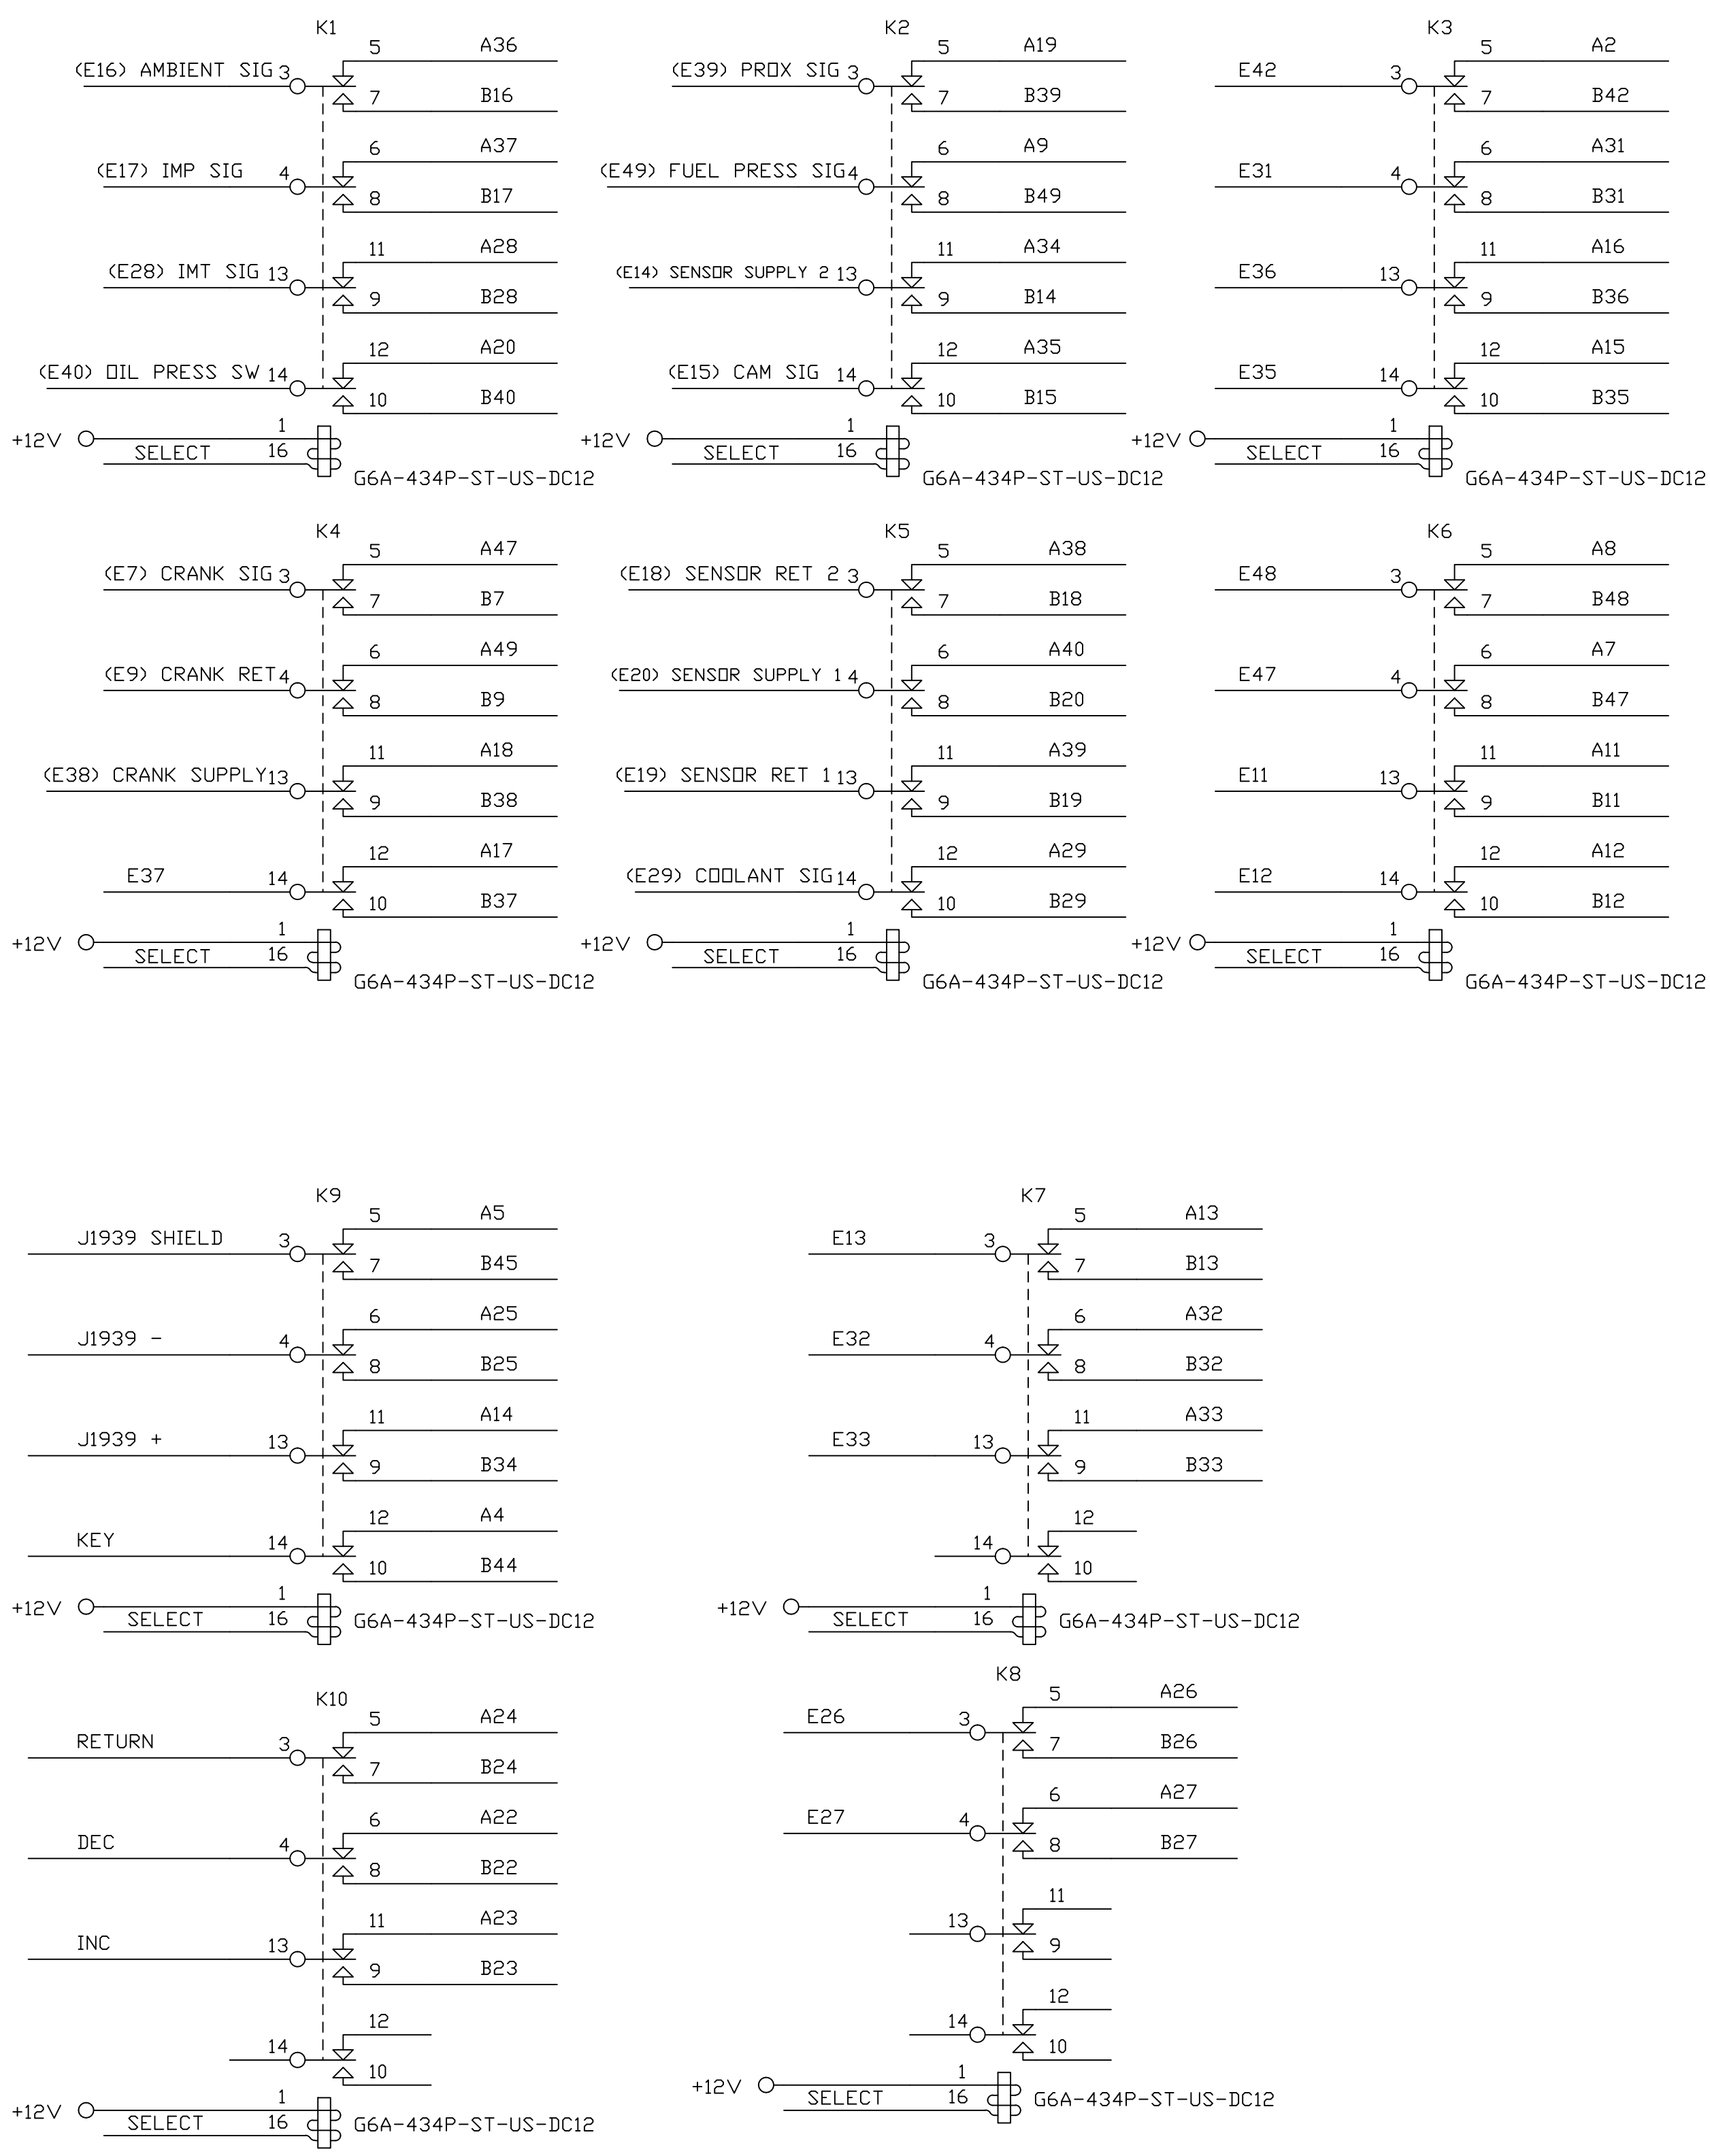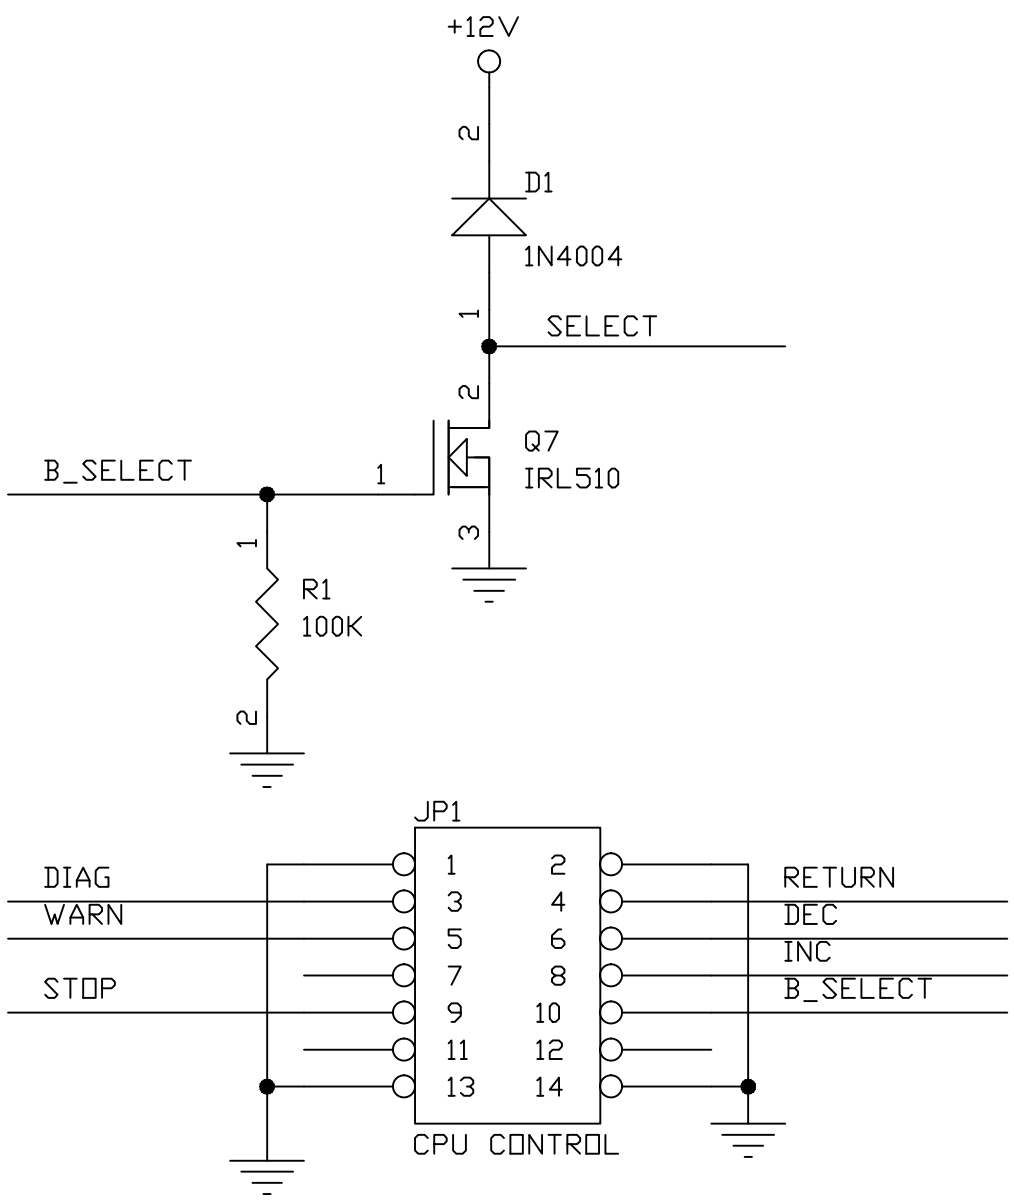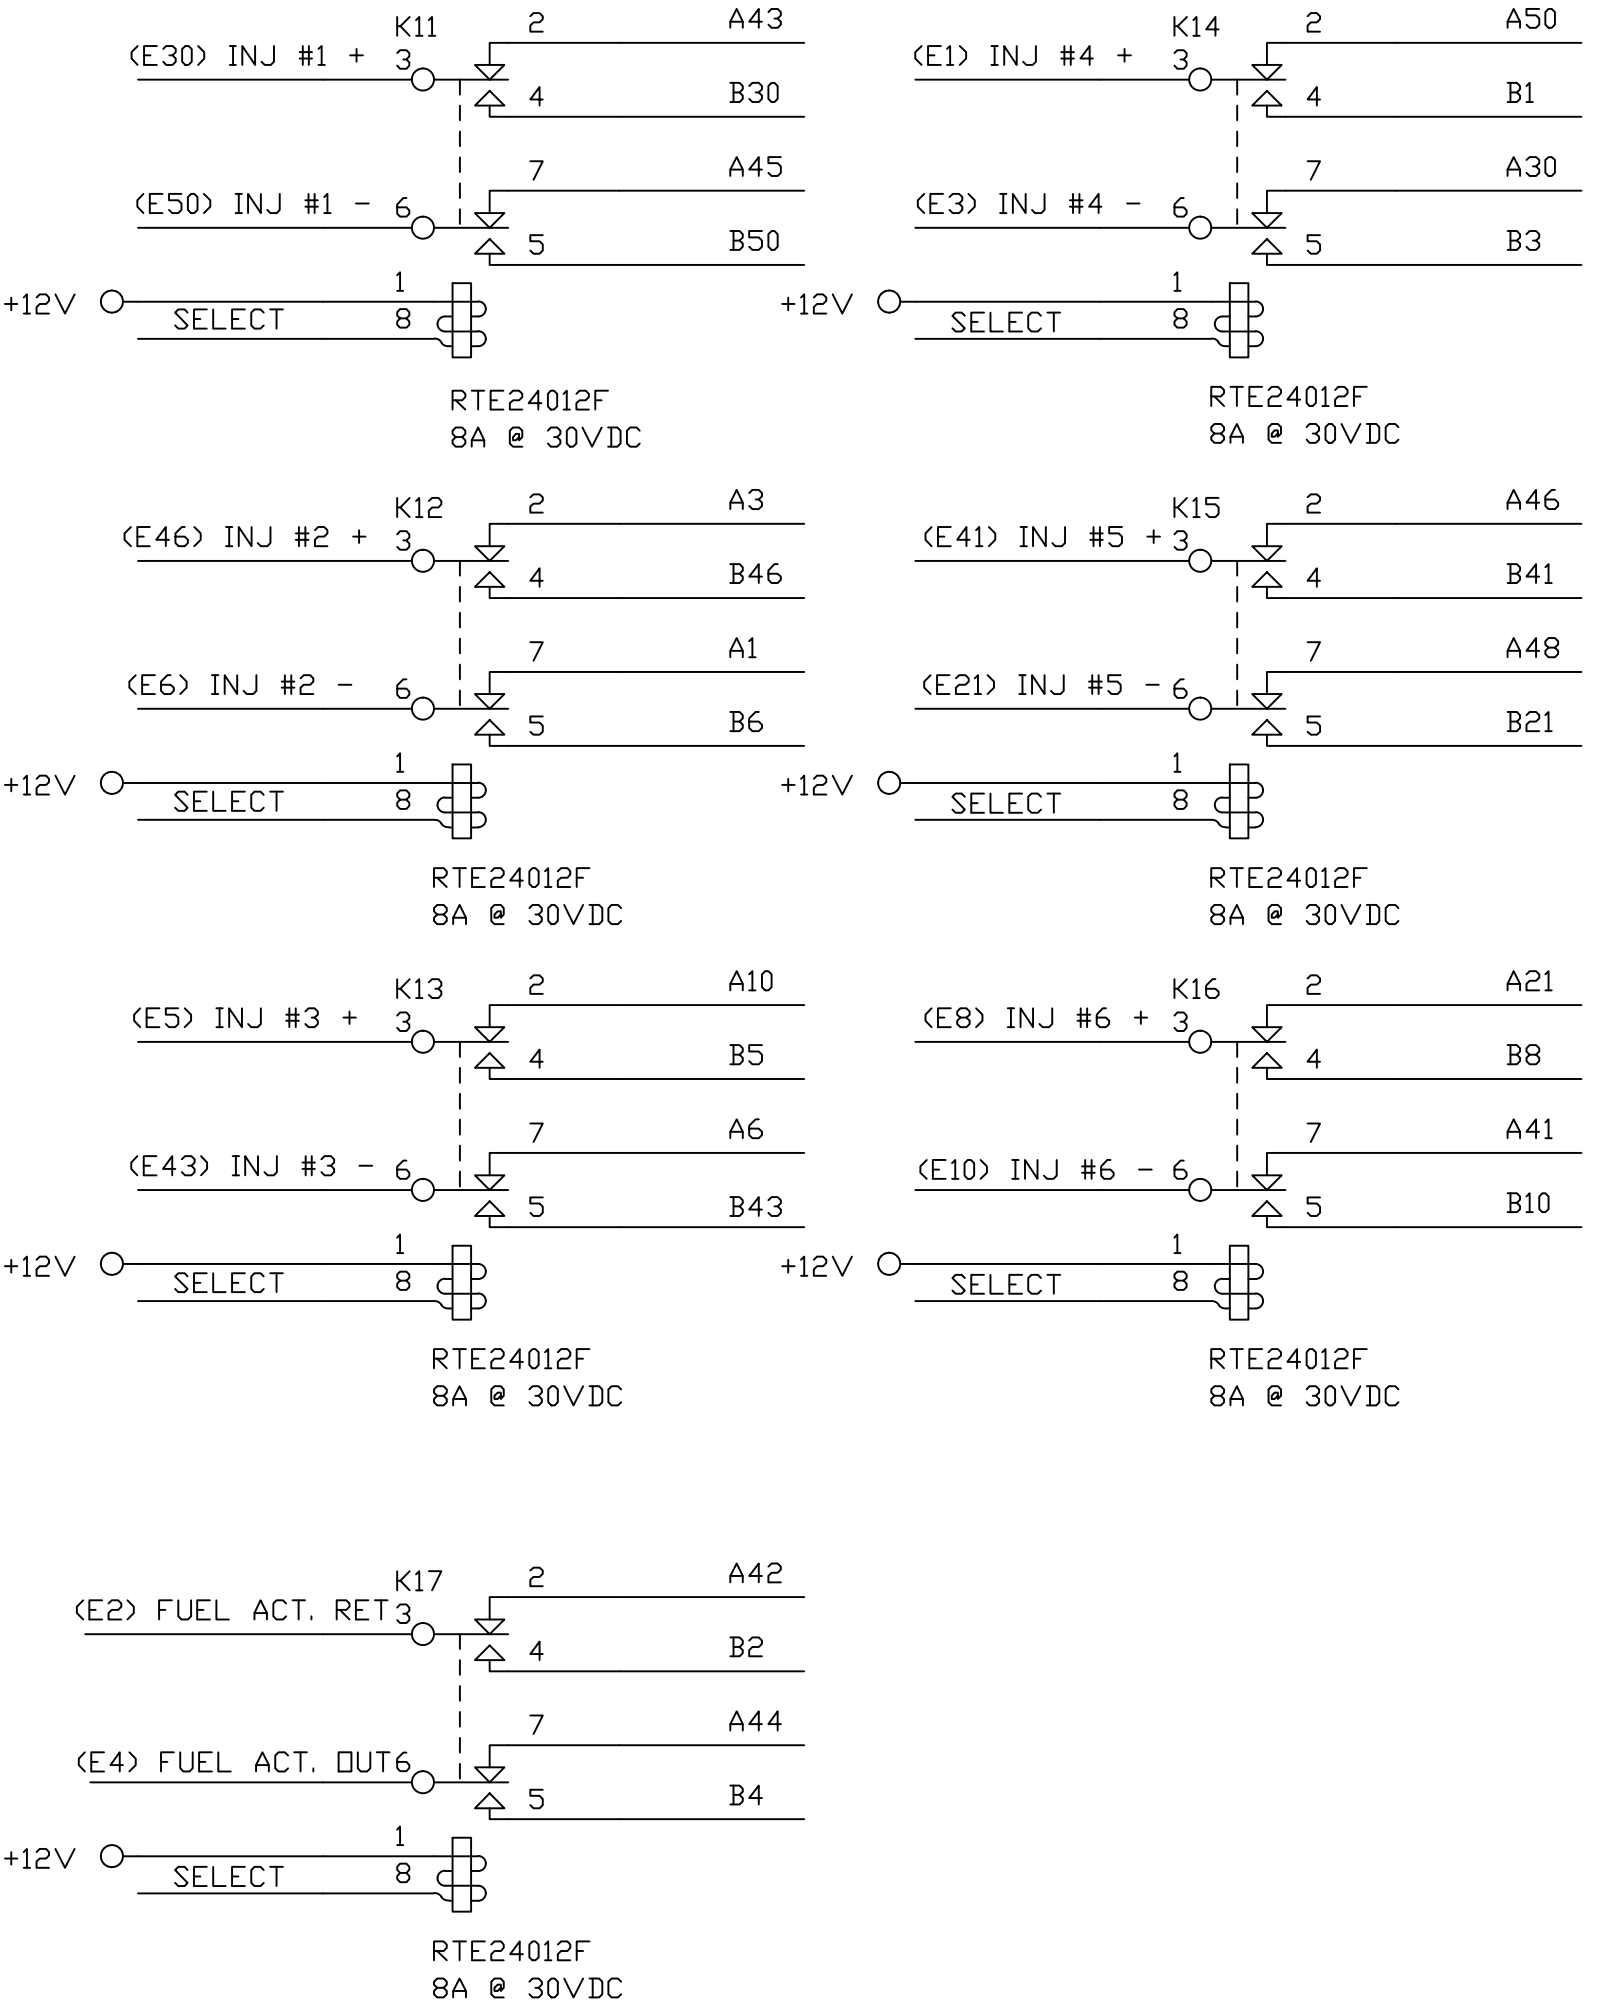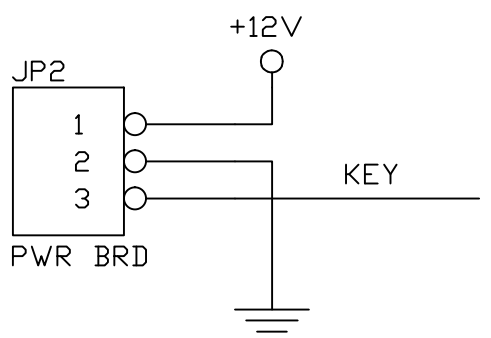

<small>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein; (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. ©2009 Cummins Fire Power LLC</small>						CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM		CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN	
SCHEMATIC, ECM SWITCH CFP7E FIRE PUMP DRIVER									
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE				ANGULAR DIMENSIONS ± 1°		IMPERIAL UNITS MACHINE TOLERANCES XX = ± 0.010 XX = ± 0.005 XX = ± 0.010 FAB TOLERANCES XX = ± 0.010 XX = ± 0.005 XX = ± 0.010		METRIC UNITS MACHINE TOLERANCES XX = ± 0.2 XX = ± 0.1 XX = ± 0.2 FAB TOLERANCES XX = ± 0.2 XX = ± 0.1 XX = ± 0.2	
DWG UNITS: INCH/LB/S		DRAWN BY: KAK		DATE: 14 DEC 2009		SCALE:		SHEET 30F7	
EST WEIGHT:		REF DRWG:		DRAWING NO: 16260					

D	2014-107	SEE SHEET 1 FOR LATEST REVISION.	RMJ	24FEB2014
C		SEE SHEET 1 FOR LATEST REVISION.	KAK	03DEC2013
REV	ENF	DESCRIPTION OF REVISION	BY	DATE

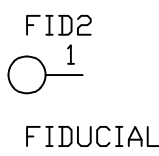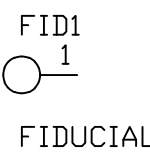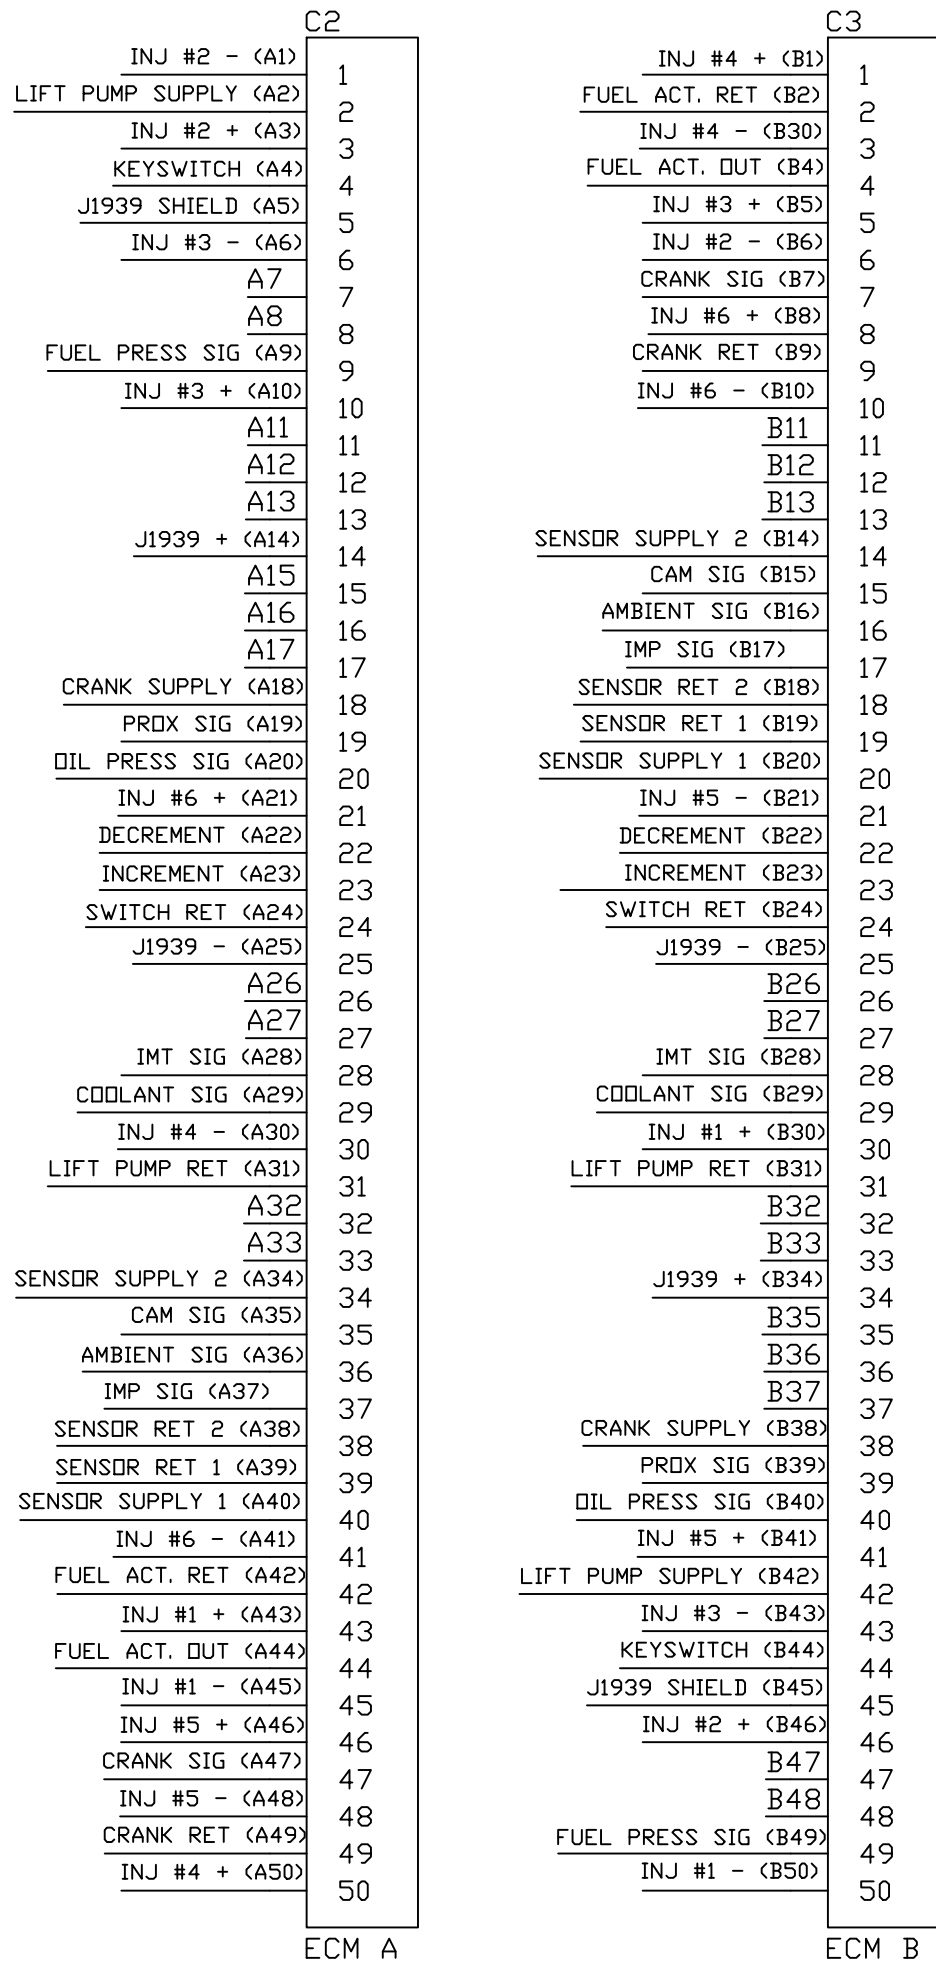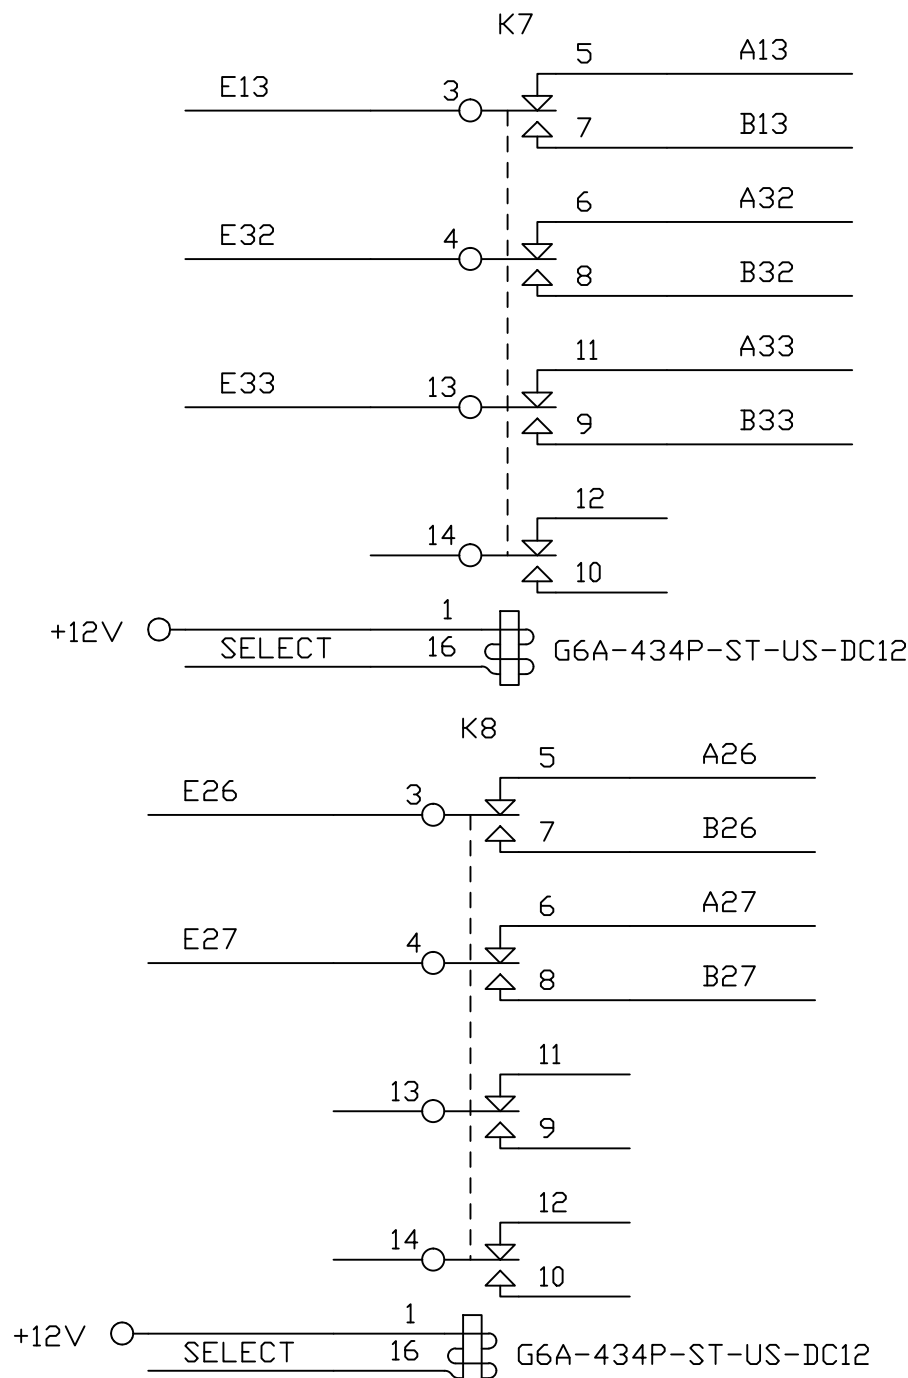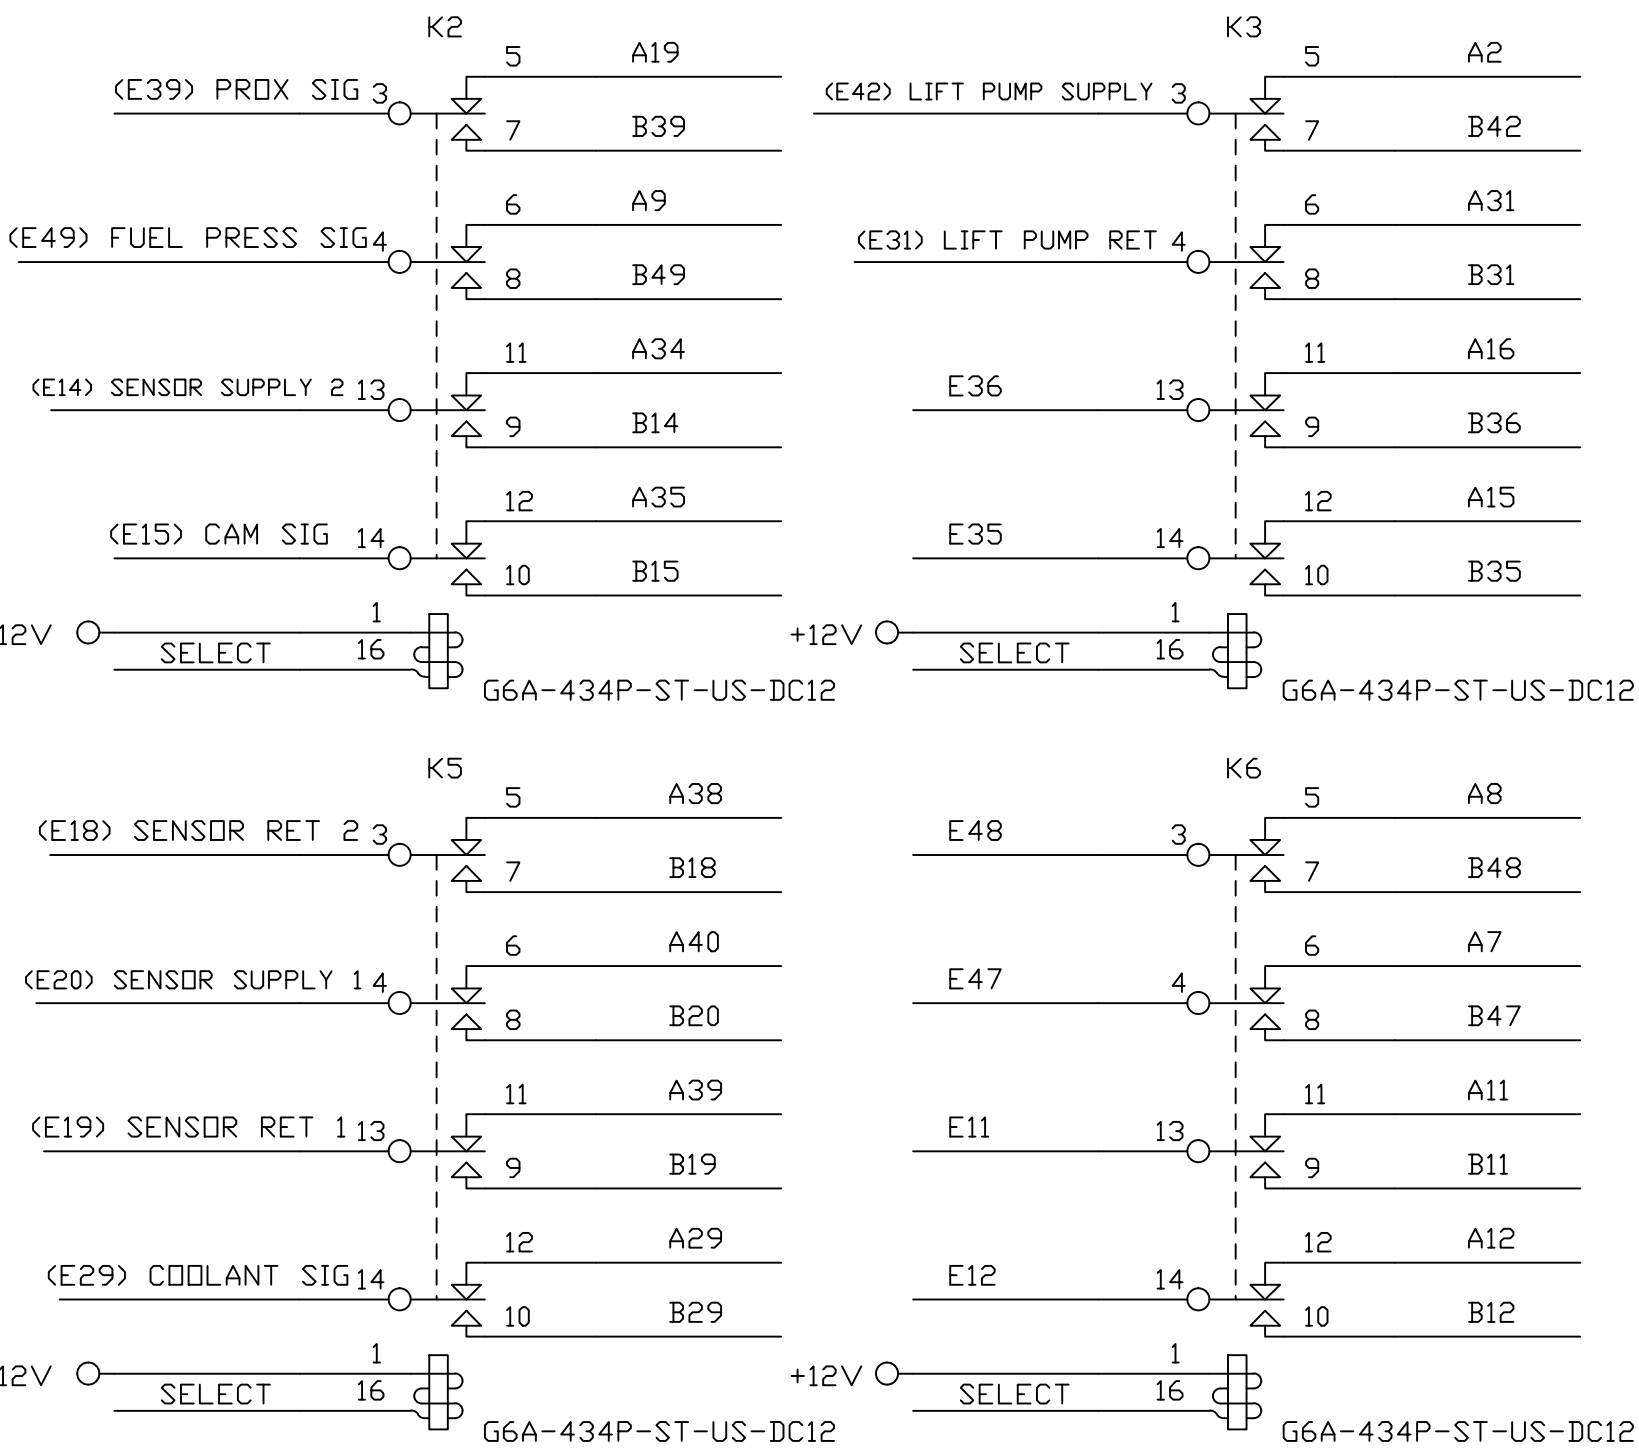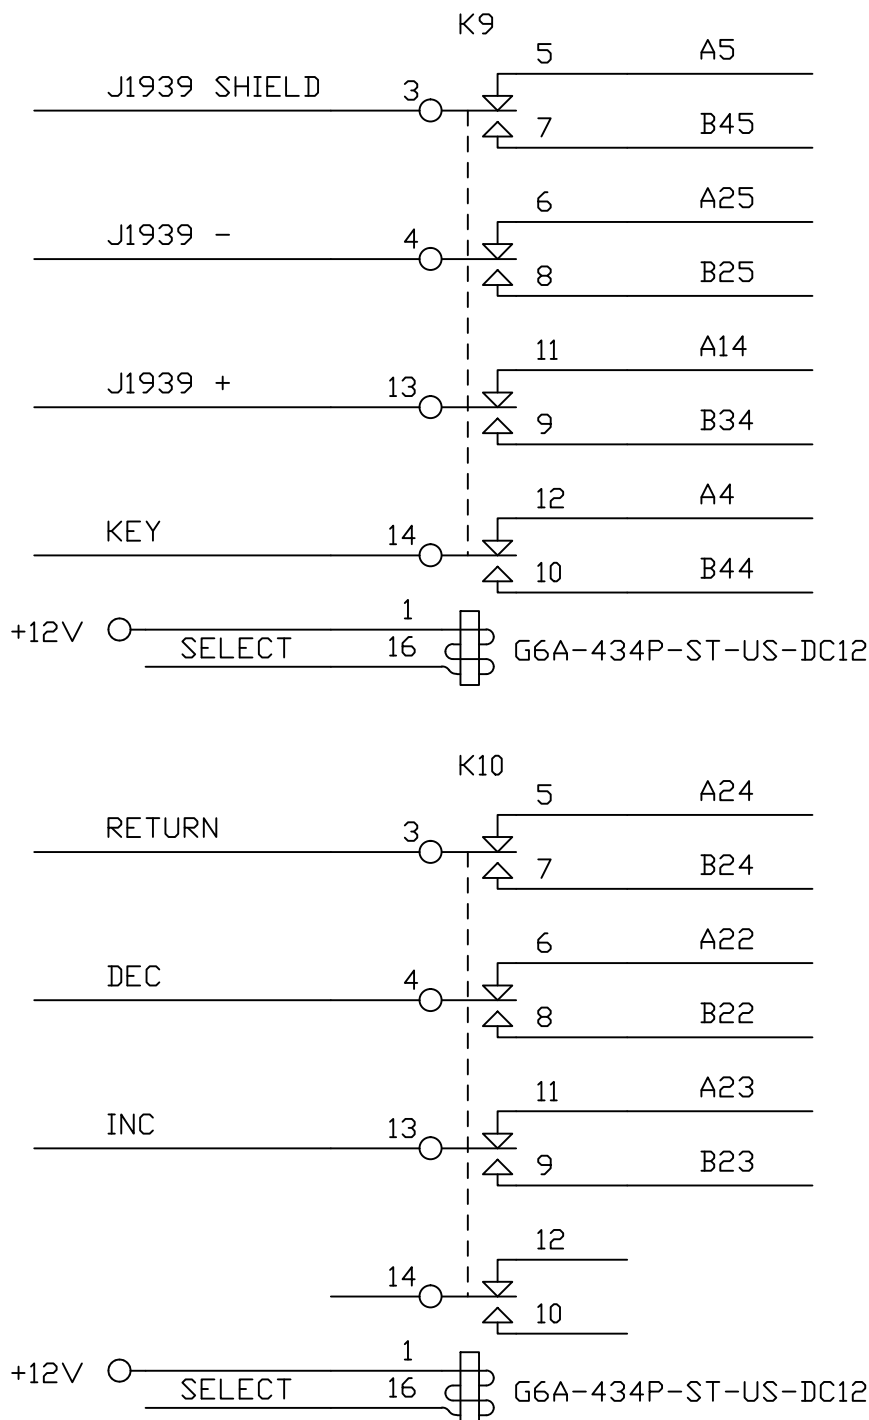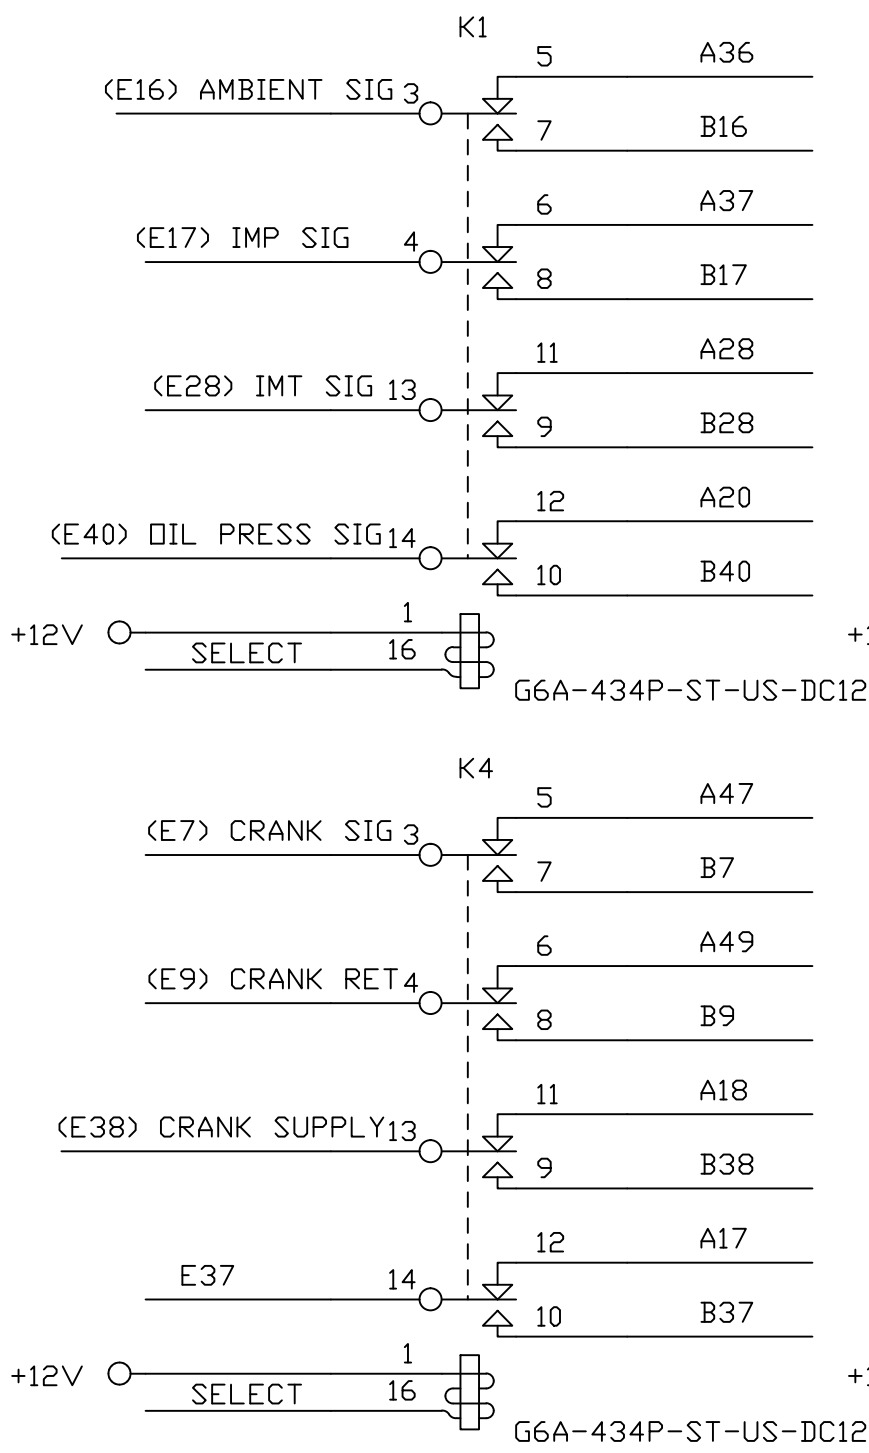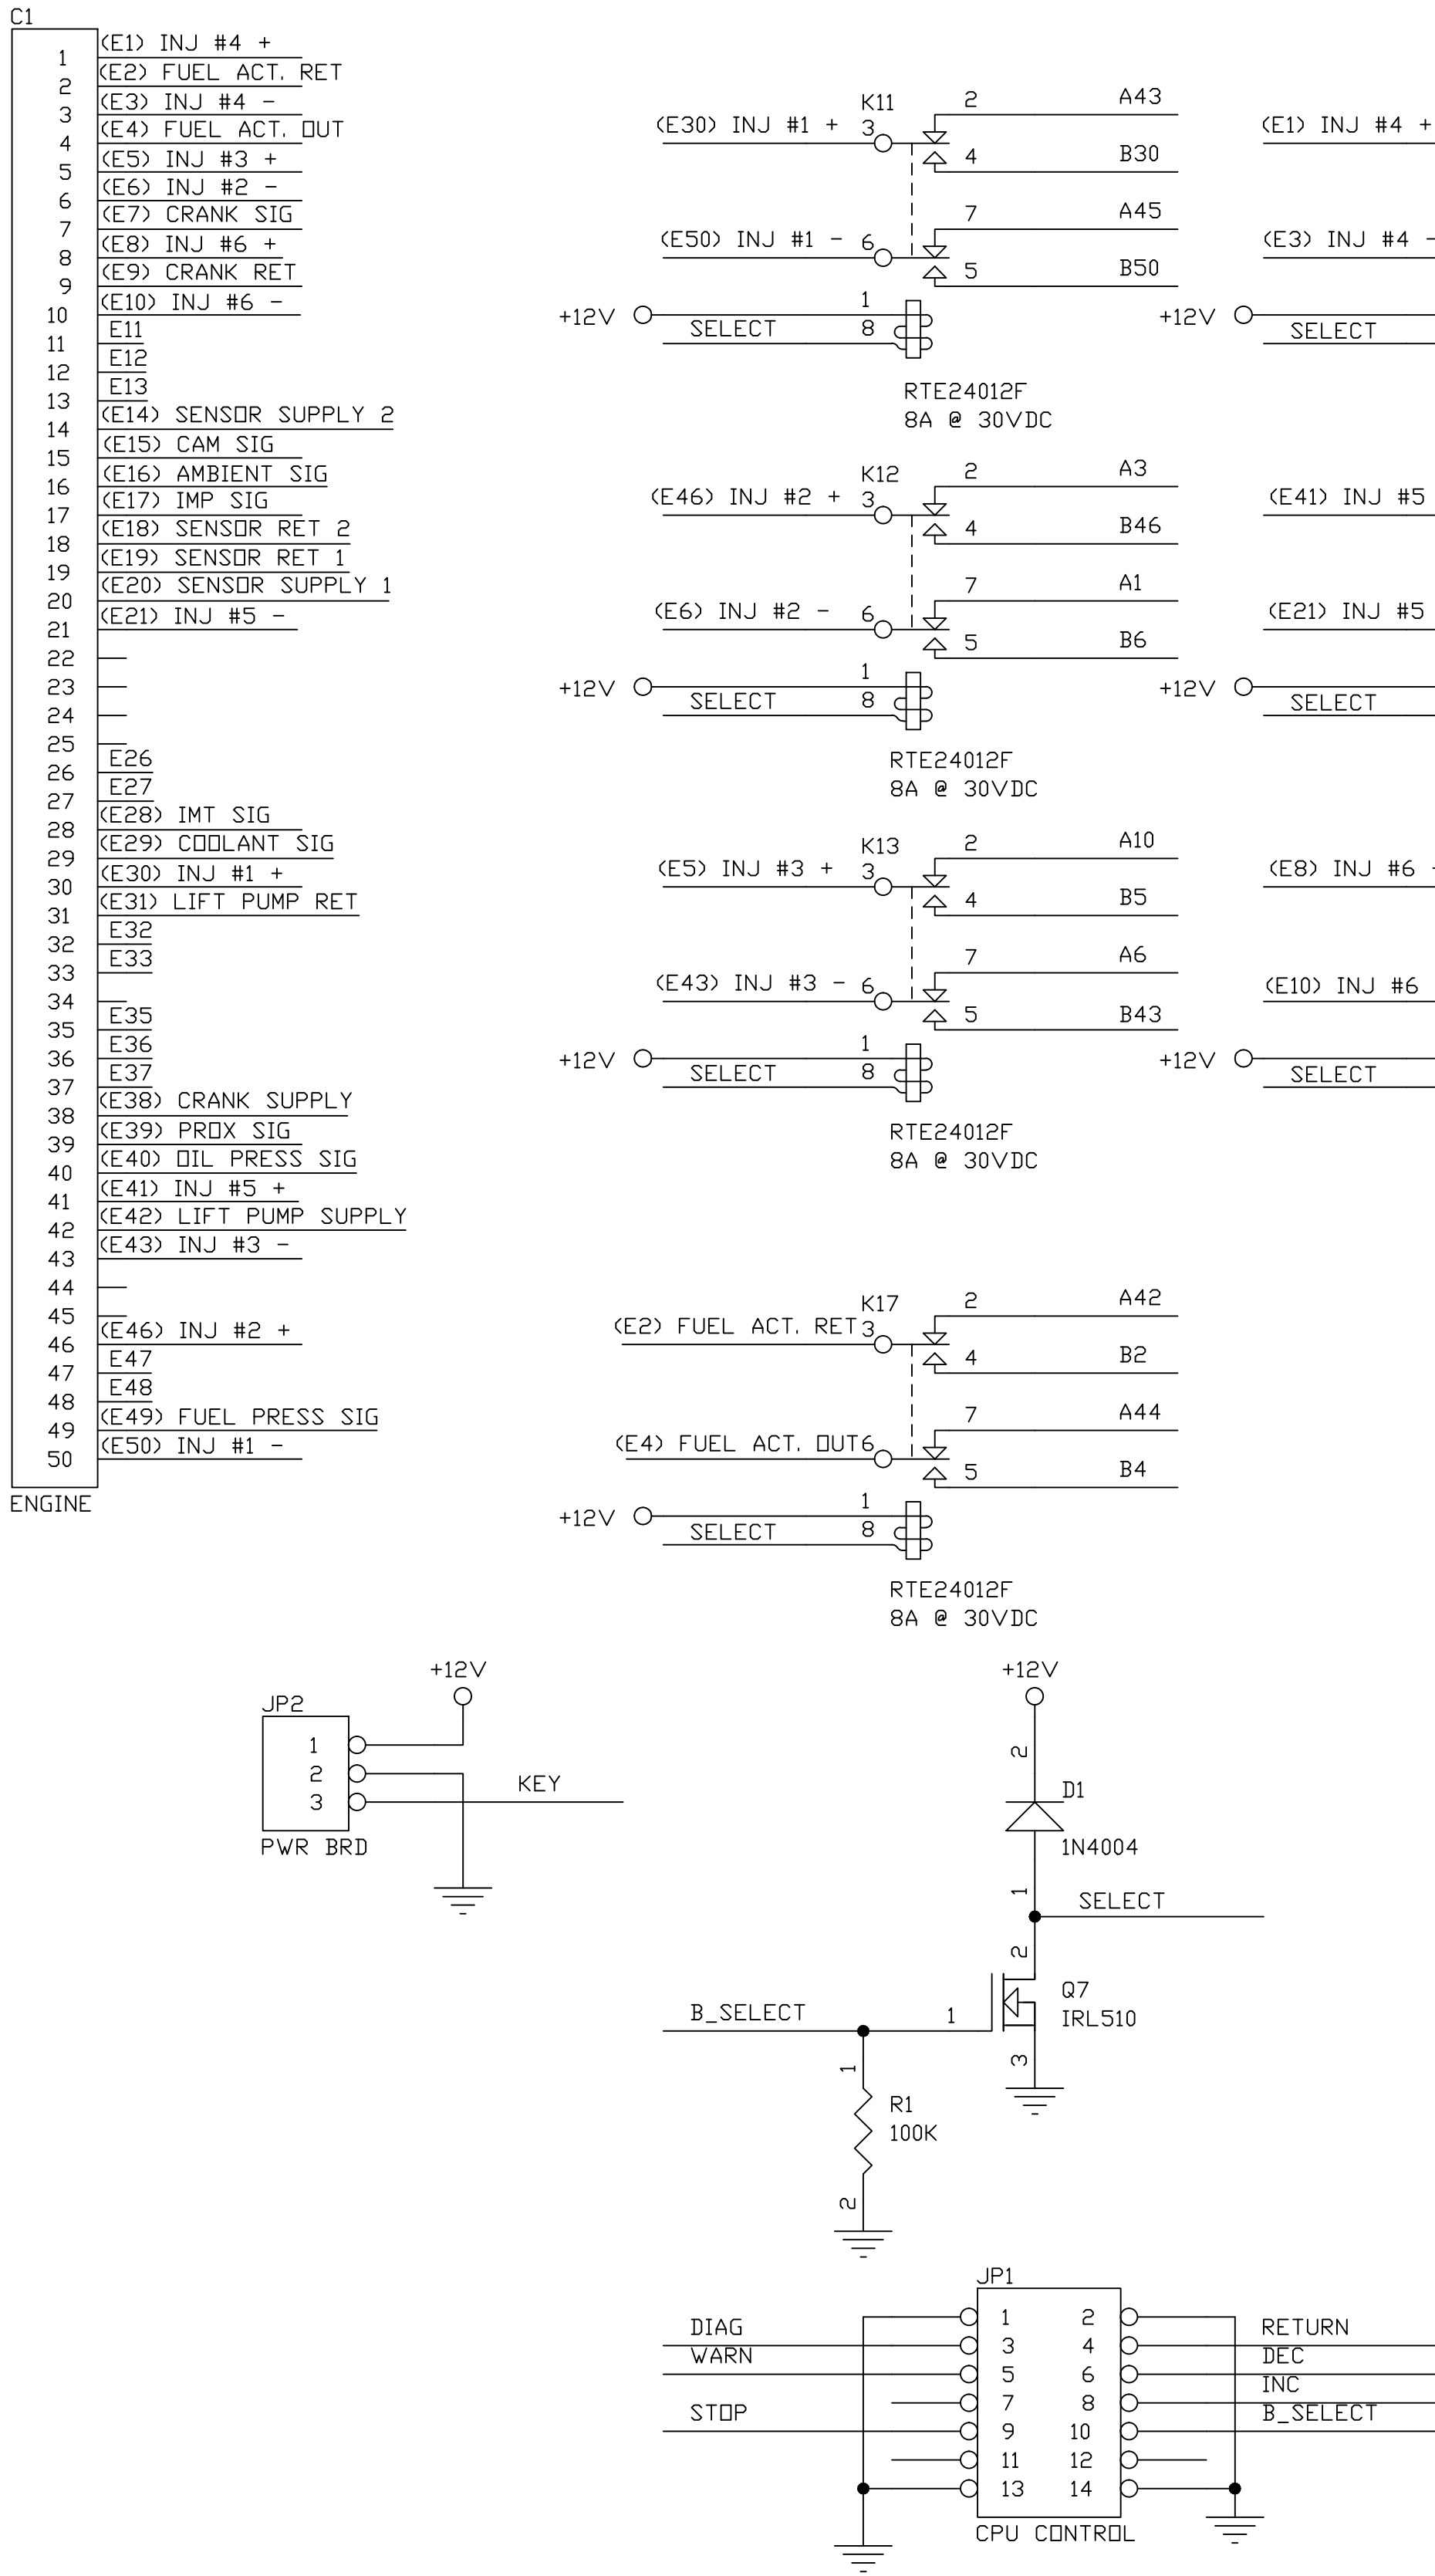



This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°

THIRD ANGLE PROJECTION






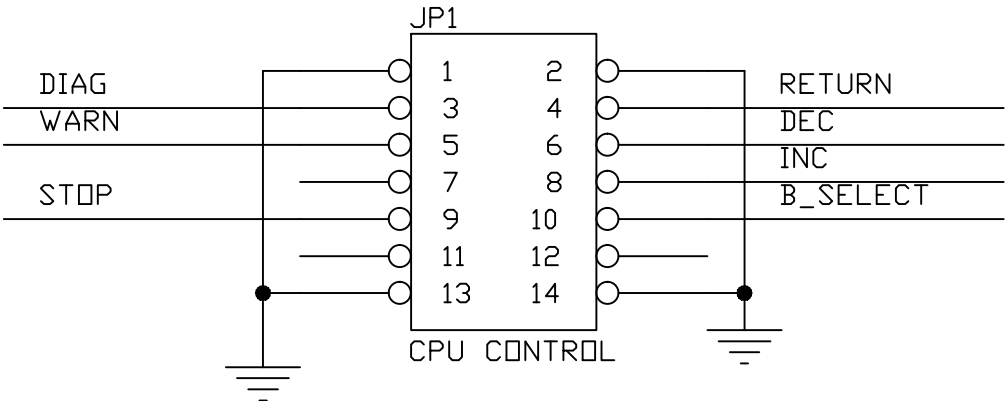DRAWING NO: 1626C

FAB TOLERANCES
X = ± 1.5
XX = ± 0.8

C1	
1	(E1) RFA +
2	(E2) LIFT PUMP RET
3	(E3) RFA -
4	(E4) FSV
5	(E5) RTA +
6	(E6) FTA -
7	(E7) CRANK SIG
8	E8
9	(E9) CRANK RET
10	E10
11	(E11) IMT/IMP SUPPLY
12	(E12) IMT/IMP RET
13	(E13) COOLANT SIG
14	(E14) OIL PRESS SUPPLY
15	(E15) OIL PRESS RET
16	(E16) AMBIENT SIG
17	(E17) AMBIENT SUPPLY
18	(E18) FUEL PRESS SIG
19	(E19) FUEL PRESS RET
20	(E20) FUEL PRESS SUPPLY
21	E21
22	
23	
24	
25	E26
26	E27
27	(E28) AMBIENT RET
28	(E29) COOLANT SIG
29	(E30) FFA +
30	(E31) CAM SUPPLY
31	E32
32	(E33) COOLANT RET
33	
34	E35
35	(E36) CAM RET
36	E37
37	(E38) CRANK SUPPLY
38	(E39) OIL PRESS SIG
39	E40
40	E41
41	(E42) CAM SIG
42	(E43) RTA -
43	
44	
45	(E46) FTA +
46	(E47) IMP SIG
47	(E48) IMT SIG
48	(E49) OIL TEMP SIG
49	(E50) FFA -
50	

ENGINE

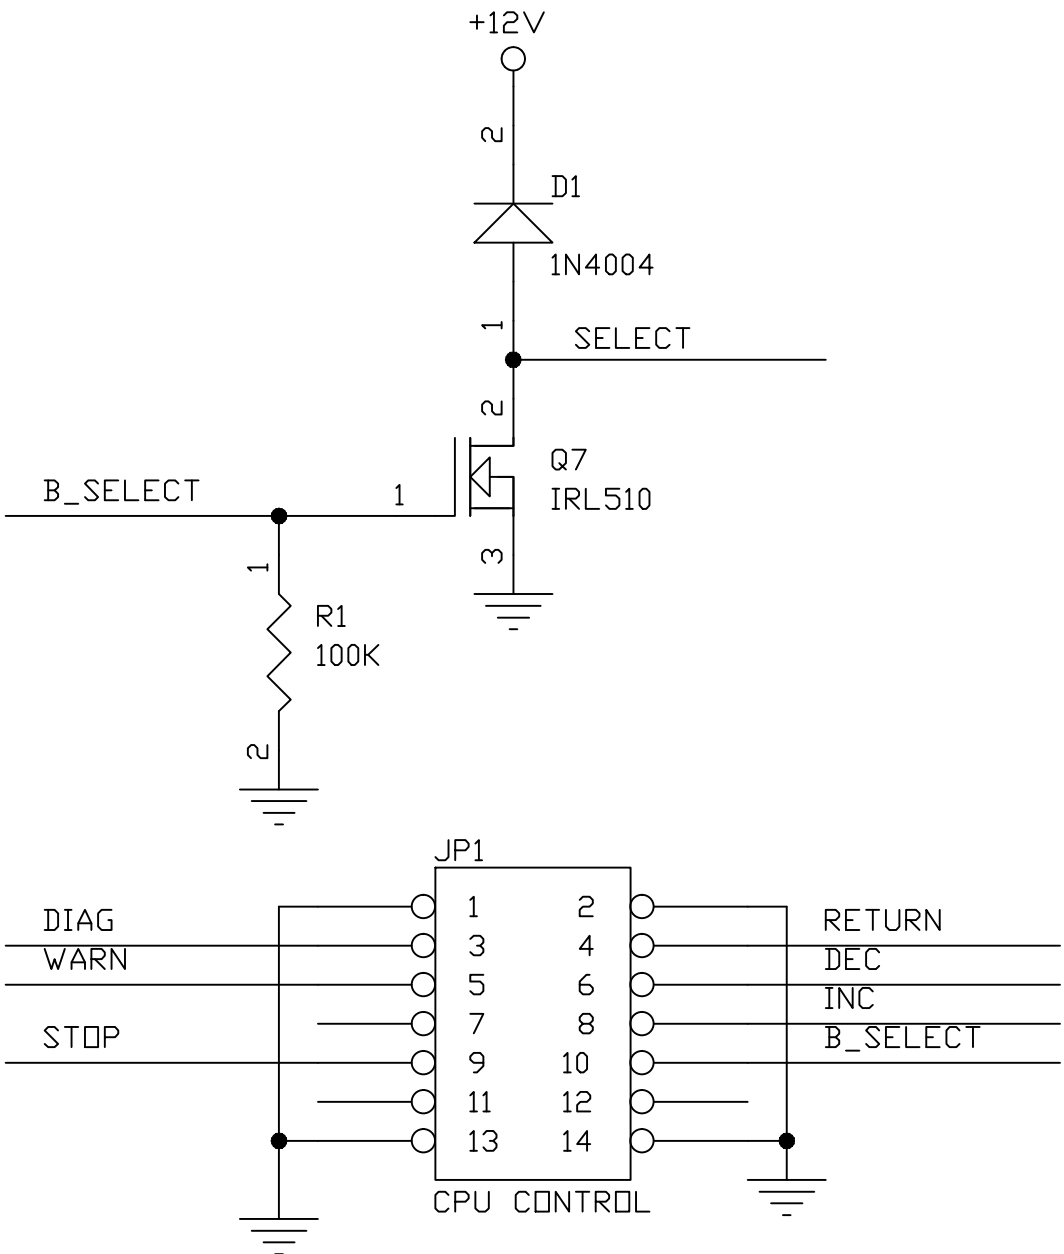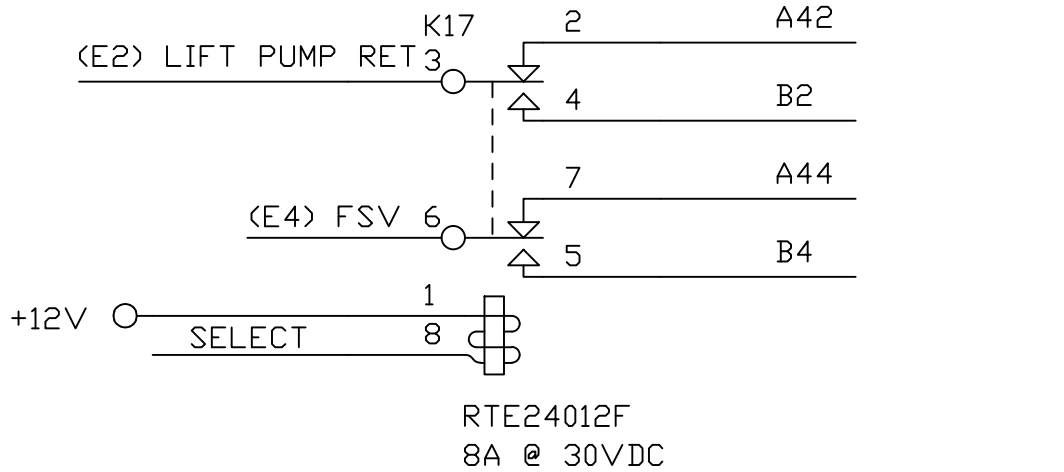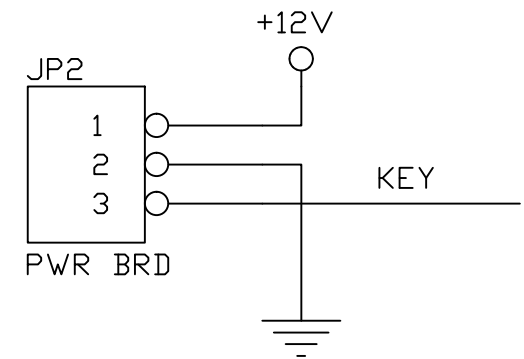

ABBREVIATIONS: FFA = FRONT FUELING ACTUATOR
FTA = FRONT TIMING ACTUATOR
RTA = REAR TIMING ACTUATOR
RFA = REAR FUELING ACTUATOR
FSV = FUEL SHUTOFF VALVE
IMT = INTAKE MANIFOLD TEMP
IMP = INTAKE MANIFOLD PRESS

