


CFP5E/CFP7E



**Fire
Power**

SERIES

Operation & Maintenance Manual Fire Pump Drive Engines

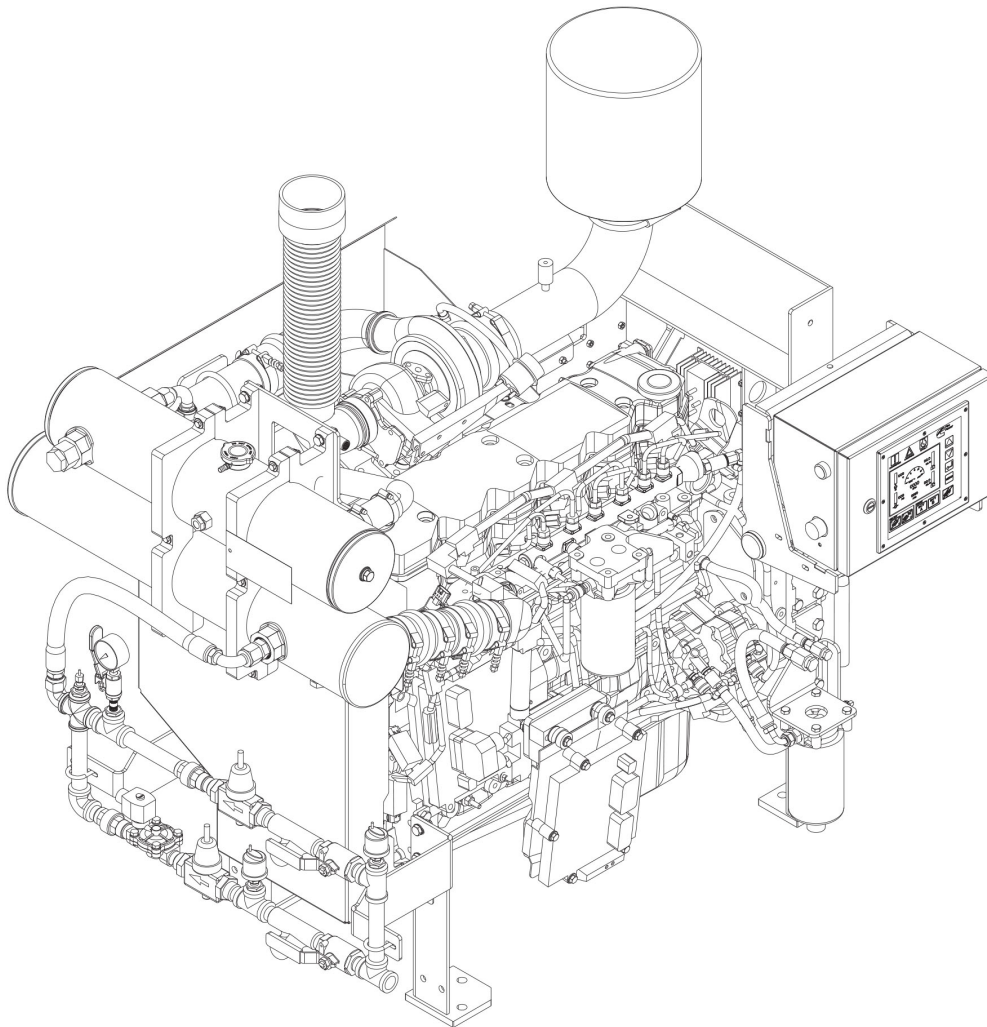



This manual contains proprietary information to equipment produced by Cummins Fire Power or Cummins Inc. and is being supplied solely for the purpose of operating, maintaining, and servicing the fire pump drive engine purchased from Cummins Fire Power.

© Copyright 2016, Cummins Inc.



**Fire
Power**

Cummins Fire Power Limited Warranty

Fire Pump Package

This limited warranty applies to all Cummins Fire Power (hereinafter referred to as "Cummins Fire Power" branded fire pump driver and associated accessories (hereinafter referred to as "Product"). This warranty covers any failures of the Product, under normal use and service, which result from a defect in material or factory workmanship.

Warranty Period:

The warranty start date for stationary Product is the date of initial start up, demonstration or 18 months after factory ship date, whichever is sooner.

Base Warranty Duration (whichever occurs first): 2 years/2000 hours.

Cummins Fire Power Responsibilities:

In the event of a failure of the Product during the warranty period due to defects in material or workmanship, Cummins Fire Power will only be responsible for the following costs:

- All parts and labor required to repair the Product.
- Reasonable travel expenses to and from the Product site location.
- Maintenance items that are contaminated or damaged by a warrantable failure.

Owner Responsibilities:

The owner will be responsible for the following:

- Notifying Cummins Fire Power distributor or dealer within 30 days of the discovery of failure.
- Installing, operating, commissioning and maintaining the Product in accordance with Cummins Fire Power's published policies and guidelines.
- Providing evidence for date of commissioning.
- Providing sufficient access to and reasonable ability to remove the Product from the installation in the event of a warrantable failure.

In addition, the owner will be responsible for:

- Incremental costs and expenses associated with Product removal and reinstallation resulting from difficult or non-standard installations.
- Costs associated with Fire Watch Protection during Product being repaired.
- Costs associated with labor overtime and premium shipping requested by the owner.
- All downtime expenses, fines, all applicable taxes, and other losses resulting from a warrantable failure.

Limitations:

This limited warranty does not cover Product failures resulting from:

- Inappropriate use relative to designated power rating or application guidelines.
- Normal wear and tear, negligence, accidents or misuse.
- Improper and/or unauthorized installation.
- Lack of maintenance or unauthorized repair.
- Noncompliance with any Cummins Fire Power published guideline or policy.
- Use of improper or contaminated fuels, coolants or lubricants.
- Improper storage before and after commissioning.
- Owner's delay in making Product available after notification of potential Product problem.
- Replacement parts and accessories not authorized by Cummins Fire Power.
- Owner or operator abuse or neglect such as: operation without adequate coolant or lubricants; over-fueling; over-speeding; lack of maintenance to lubricating, cooling or air intake systems; late servicing and maintenance; improper storage, starting, warm-up, run-in or shutdown practices, or for progressive damage resulting from a defective warning device.
- Damage to parts, fixtures, housings, attachments and accessory items that are not part of the fire pump package.



**Fire
Power**

Limitations (cont.):

This limited warranty does not apply to:

- Costs of maintenance, adjustments, installation, commissioning or start-up.
- Starting batteries and enclosures.
- Components added to the Product after shipment from Cummins Fire Power.
- Block heaters are warranted for 1 year from date in service

Please contact your local Cummins NPower Distributor for clarification concerning these limitations.

Extended Warranty

Cummins Inc offers several levels of Extended Warranty Coverage (**Base Engine Only**). Please contact your local Cummins Distributor for details.

Cummins Fire Power Right to Failed Components:

Failed components claimed under warranty remain the property of Cummins Fire Power. Cummins Fire Power has the right to reclaim any failed component that has been replaced under warranty.

THE WARRANTIES SET FORTH HEREIN ARE THE SOLE WARRANTIES MADE BY CUMMINS FIRE POWER IN REGARD TO THE PRODUCT. CUMMINS FIRE POWER MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, OR OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT IS CUMMINS FIRE POWER LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

This limited warranty shall be enforced to the maximum extent permitted by applicable law. This limited warranty gives the owner specific rights that may vary from state to state or from jurisdiction to jurisdiction.



Table of Contents

Section 1 - Safety

1.1 Introduction	1-1
1.2 General Safety Precautions	1-1
1.3 Use of Advisory and Cautionary Statements	1-1
1.3.1 Advisory Statements	1-1
1.3.2 Cautionary Statements	1-2

Section 2 - Description

2.1 Introduction	2-1
2.2 Fire Pump Digital Panel (FPDP)	2-1
2.3 Fire Pump Controller	2-1
2.4 Air Intake System	2-4
2.5 Cooling Water System	2-5
2.6 Fuel Supply and Drain	2-5
2.7 High Pressure Common Rail (HPCR) Fuel System	2-7
2.8 Engine Oil System	2-7
2.9 Exhaust System	2-8

Section 3 - Installation

3.1 Introduction	3-1
3.2 Receiving and Handling	3-1
3.3 Site Preparation	3-1
3.4 Drive Shaft Installation	3-1
3.5 Fuel Supply Installation	3-2
3.6 Cooling Water Supply Installation	3-3
3.7 Battery Installation	3-4
3.8 Signal and Control Installation	3-5
3.9 Coolant System Preparation	3-6
3.10 Charge Air Cooler (CAC) Inspection	3-7
3.11 Lubricating Oil System Preparation	3-7
3.12 Variable Speed Pressure Limiting Control (VSPLC) Preparation	3-7
3.13 Pre-Start Inspections	3-7
3.14 Engine Monitoring	3-8
3.15 Field Acceptance Testing	3-8

Section 4 - Controls

4.1 Fire Pump Digital Panel (FPDP)	4-1
4.1.1 Warning Lamp	4-1
4.1.2 Fault Indicator Lamp	4-1
4.1.3 Scroll UP and DOWN Buttons	4-1
4.1.4 ENTER Button	4-1
4.1.5 MENU Button	4-1
4.1.6 Overspeed RESET/STOP Switch	4-1
4.1.7 Battery "A" and "B" Voltmeters	4-2
4.1.8 Tachometer	4-2
4.1.9 Hour Meter	4-2

Table of Contents

4.1.10	ECM A/B Selector Switch and Indicator Lamps - Applicable on Electronic Engines	4-2
4.1.11	Crank Battery A and B Momentary Start Buttons	4-2
4.1.12	Automatic or Manual Mode of Operation Indicator	4-2
4.1.13	Coolant Temperature Gauge	4-2
4.1.14	Engine Oil Pressure Gauge	4-2
4.1.15	Engine Overspeed Warning Lamp	4-2
4.1.16	ECM Fault Code Lamps - Applicable on Electronic Engines	4-2
4.1.17	Engine STOP Button	4-3
4.1.18	Engine Communications Port	4-3
4.1.19	Contractor Access Port	4-3
4.1.20	Engine ECM Power Supply	4-3
4.1.21	Engine Harness Connection	4-3
4.2	Electronic Control Module (ECM) - Applicable on Electronic Engines	4-3

Section 5 - Operation

5.1	Introduction	5-1
5.2	Starting and Stopping Procedures	5-1
5.2.1	Local Starting/Stopping Procedure	5-1
5.2.2	Emergency Starting/Stopping Procedure	5-1
5.3	Fire Pump Digital Panel (FPDP) Screens and Adjustments	5-2
5.3.1	Engine Setup Screen	5-3
5.3.2	Overspeed Test Screen	5-3
5.3.3	Press ENTER.Parameter Units Screen	5-4
5.3.4	Display Settings Screen	5-4
5.3.5	Analog Values Screen	5-4
5.3.6	Autoswitch Screen	5-5
5.4	Active Fault Codes Display	5-5
5.5	Variable Speed Pressure Limiting Control (VSPLC) Adjustments	5-5

Section 6 - Maintenance

6.1	Introduction	6-1
6.2	Engine Operation Reports	6-1
6.3	Weekly Maintenance	6-4
6.3.1	General	6-4
6.3.2	Air Cleaner Filter and Piping	6-4
6.3.3	Cooling System	6-4
6.3.4	Engine Oil System	6-5
6.3.5	Fuel System	6-6
6.3.6	Engine Exhaust System	6-6
6.3.7	Electrical Supply and Controls	6-6
6.3.8	Crankcase Ventilation Hose	6-6
6.3.9	Cooling Water Strainers	6-6
6.3.10	Batteries	6-7
6.3.11	Engine Test Run	6-7
6.3.12	Engine Operation Checks	6-8
6.3.12.1	Crank Termination Set Point	6-8
6.3.12.2	Engine Speed Calibration	6-8
6.3.13	Engine Coolant Heater	6-9
6.4	Annual Maintenance	6-9
6.4.1	Electrical Components	6-9
6.4.2	Turbocharger Mounting Nuts	6-9
6.4.3	Engine Supports	6-10
6.4.4	Fuel Pumps and Filters	6-10

Table of Contents

6.4.5 Engine Oil and Filter	6-11
6.4.6 Drive Shaft	6-12
6.4.7 Coolant Pump/Alternator Belt	6-12
6.4.8 Raw Water Zinc Anode	6-13
6.4.9 Heat Exchanger	6-14
6.4.10 Turbocharger	6-14
6.5 Every Two Years	6-14
6.5.1 Coolant Pump	6-14
6.5.2 Cooling System	6-14
6.6 Every Four Years	6-16
6.6.1 Coolant Thermostat Removal/Installation	6-17
6.6.2 Coolant Pump/Alternator Belt Replacement	6-17
6.6.3 Charge Air Cooler (CAC) Heat Exchanger Cleaning	6-18

Section 7 - Troubleshooting

7.1 Introduction	7-1
7.2 Engine Will Not Start	7-2
7.3 Engine Cranks But Will Not Start	7-3
7.4 Engine Starts But Continues to Crank	7-5
7.5 Engine Will Not Stop	7-6
7.6 Low Battery Voltage	7-7
7.7 Fault Code Chart	7-8

Section 8 - Component Parts and Assemblies

8.1 Ordering Parts	8-1
8.2 Routine Service and Parts	8-1
8.3 Emergency Repairs and Technical Service	8-1
8.4 Recommended Spare Parts Inventory	8-1
CFP5E Engine Data Sheet	8-2
CFP7E Engine Data Sheet	8-5
Torque Table	8-8
8.5 Assembly Drawings	8-10

Table of Contents



Section 1 - Safety

1.1 Introduction

Cummins Fire Power engine manuals should be considered part of the equipment. Keep the manuals with the equipment. If the equipment is traded or sold, give the manuals to the new owner.

All personnel responsible for operation and maintenance of the equipment should read and thoroughly understand this manual.

1.2 General Safety Precautions

Read and understand all of the safety precautions and warnings before performing any repair. Special safety precautions are included in the procedures when they apply. This list contains the general safety precautions that **must** be followed to provide personal safety:

- Perform a walk around inspection and alert all area personnel that the equipment will be starting before manual operation.
- Do not operate faulty or damaged equipment. Ensure that all hoses, pipe connections, clamps and guards are in place and securely fastened. Electrical components should be kept in good working condition and repaired immediately by qualified personnel.
- After performing maintenance, remove all tools and foreign materials and reinstall and securely fasten ALL guards, covers and protective devices.
- Exposed in-running belt nips can cause severe personal injury or dismemberment. Ensure that guards are in place and securely fastened before operation.
- Rotating drive shafts can lacerate, dismember or cause strangulation. Keep hands, body parts, long hair, or loose-fitting clothing clear at all times.
- Never attempt to manually clean a machine while it is operating or in standby mode.
- Never open ports on tanks or piping while the engine is operating. Contact with pressurized agents can cause severe personal injury.
- Relieve all pressure in the air, oil, and the cooling systems before any lines, fittings, or related items are removed or disconnected.
- Engine fuel is flammable when in contact with electrical spark or flame sources. Remove all sources of spark or flame from the work area.
- Always use the same fastener part number (or equivalent) when replacing fasteners.
- Some state and federal agencies in the United States have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Dispose of waste oil in accordance with applicable requirements.

1.3 Use of Advisory and Cautionary Statements

1.3.1 Advisory Statements

Advisory statements are used throughout this manual call attention to special information and correct operating procedures. Throughout this manual, these Advisory Statements are delineated by the terms "NOTE" and "IMPORTANT" in uppercase letters:

NOTE: *A general advisory statement relating to equipment operation and maintenance procedures*

IMPORTANT: *A specific advisory statement intended to prevent damage to the equipment or associated components.*

1.3.2 Cautionary Statements

Cautionary Statements highlight particular safety precautions pertaining to personal injury and/or damage to the equipment. Cautionary Statements are always preceded by the following symbols:



WARNING

Indicates the presence of a hazard which CAN cause severe personal injury.



CAUTION

Indicates the presence of a hazard which CAN cause personal injury, or cause equipment damage.



Section 2 - Description

2.1 Introduction

This manual contains information for the correct operation and maintenance of a Cummins fire pump drive engine. Read and follow all safety instructions in [Section 1 - Safety](#). Keep this manual with the equipment. If the equipment is traded or sold, give the manual to the new owner.

Cummins fire pump drive engines have been designed and tested in accordance with National Fire Protection Association (NFPA) 20 guidelines.

No deviations are permitted without prior written approval. These engines are to be used only for fire protection applications. [Figure 2-1](#) and [Figure 2-2](#) provide visual descriptions of the engine components for this fire pump drive engine.

NOTE: Refer to the *Engine Data Sheet* in [Section 8 - Component Parts and Assemblies](#) for emission levels.

Cummins Fire Power, Cummins NPower, and Cummins Inc. reserve the right to make changes at any time. If any differences are found between an engine and the information in this manual, contact the local Cummins Authorized Repair Location.

The latest technology and the highest quality components were used to produce this engine. Cummins fire pump drive engines as packaged units (engine and accessories) have been approved by Factory Mutual (FM) Approvals and listed by Underwriters Laboratories (UL), Inc. and Underwriters Laboratories of Canada (ULC). When replacement parts are needed, we recommend using only genuine Cummins or ReCon[®] exchange parts.

WARNING

Injury may result and warranty is voided if fuel rate, revolutions per minute (RPM), or altitudes exceed published maximum values for this model and application.

2.2 Fire Pump Digital Panel (FPDP)

The Fire Pump Digital Panel (FPDP) is mounted on the left hand side (or right hand side - optional) on the flywheel end of the engine and contains controls for starting the engine, monitoring engine performance, and controlling fire pump drive engine operation. [Section 4 - Controls](#) illustrates the FPDP in detail.


Each engine is equipped with an electronic overspeed control which activates the fuel pump solenoid valve or the Engine Control Module (ECM) ignition to shut off the engine when the RPM exceeds a preset limit of 115% of rated speed. The overspeed control senses engine speed during the start cycle and stops the starting motor cranking cycle.

All Cummins fire pump drive engines are shipped from the factory adjusted to the requested operating speed (in RPM). Final operating speed adjustment must be made during the in-service inspection to obtain the required operating speed specified by the pump manufacturer.

2.3 Fire Pump Controller

The fire pump controller starts the engine automatically when a remote fire demand signal is initiated and automatically shuts down the engine when the fire demand signal is discontinued. The engine may also be started locally in the **MANUAL** mode and shut down using the FPDP **STOP** button. The fire pump controller is not supplied by Cummins Fire Power or Cummins Inc.


Description

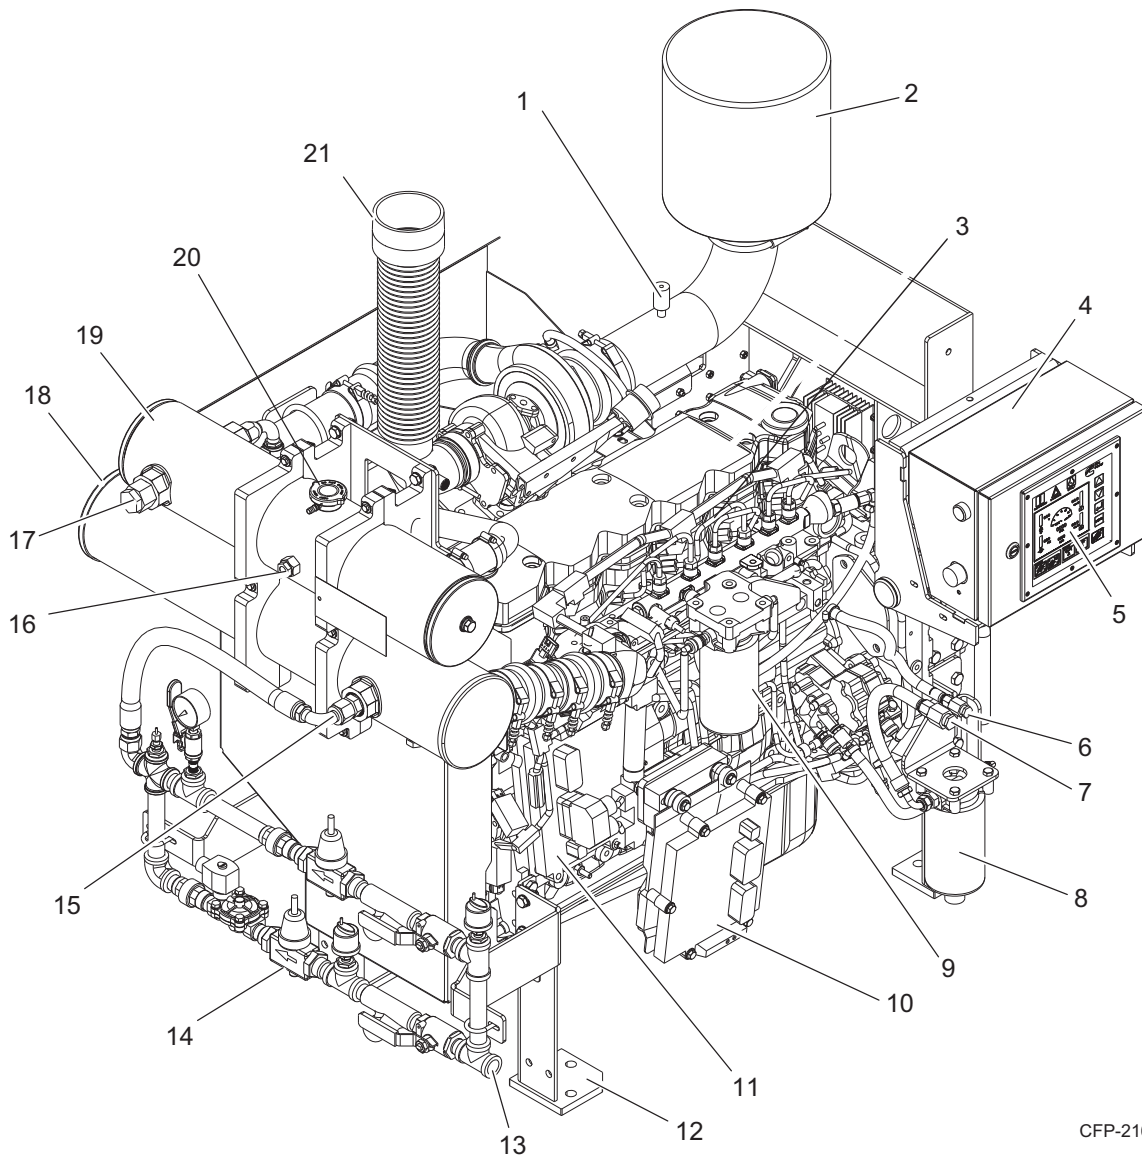

CFP-216

- | | |
|---|--|
| 1. Air Cleaner Service Indicator | 11. Electronic Control Module (ECM) A |
| 2. Air Cleaner Assembly | 12. Engine Supports |
| 3. High Pressure Common Rail (HPCR) Fuel System | 13. Cooling Water Inlet |
| 4. Terminal Box (inside the FPDP) | 14. Cooling Water Manifold |
| 5. Fire Pump Digital Panel (FPDP) | 15. Cooling Water Inlet (standard) |
| 6. Fuel Return Line | 16. Coolant Level Sight Gauge |
| 7. Fuel Supply Line | 17. Cooling Water Outlet |
| 8. Fuel Pre-Filter/Water Separator | 18. Charge Air Cooler (CAC) Heat Exchanger |
| 9. Primary Fuel Filter | 19. Coolant Heat Exchanger/Expansion Tank |
| 10. Electronic Control Module (ECM) B | 20. Coolant Pressure/Fill Cap |
| | 21. Exhaust Flex Connection |

Figure 2-1 Engine Components - Fire Pump Digital Panel (FPDP) Side (CFP7E shown)

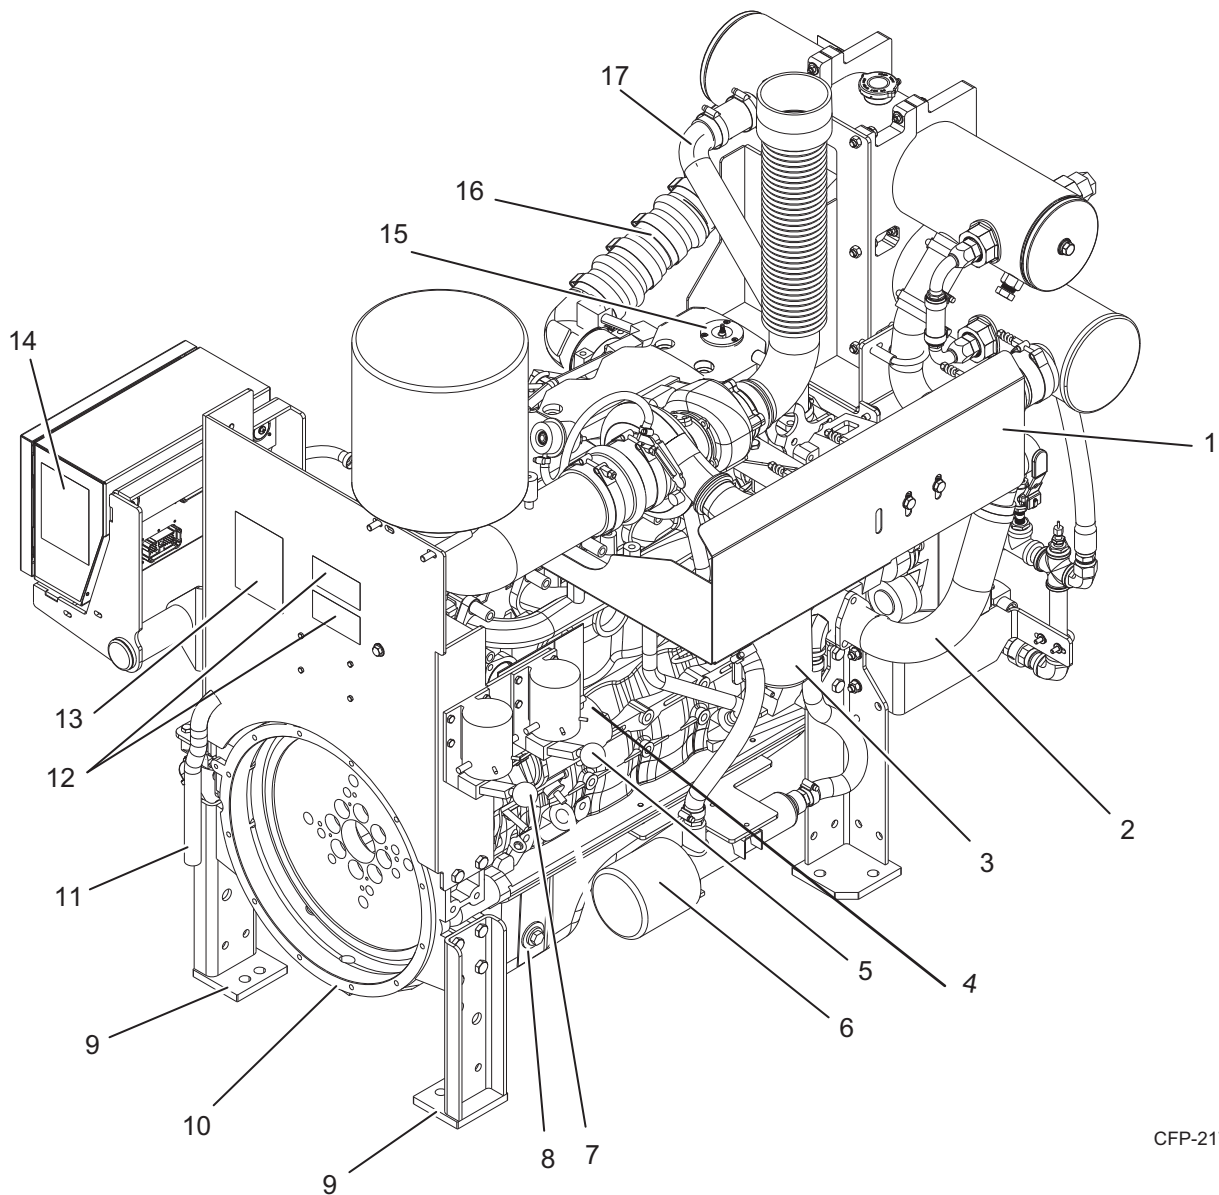

CFP-217

- | | |
|--------------------------------|------------------------------------|
| 1. Manifold Heat Shield | 10. Flywheel Housing |
| 2. Lower Coolant Hose/Tube | 11. Crankcase Ventilation Hose |
| 3. Engine Oil Filter | 12. Engine Speed Setting Decals |
| 4. Starter Motor | 13. Engine Serial Number Decal |
| 5. Battery Starter Contactor B | 14. Manual Start Instruction Decal |
| 6. Engine Coolant Heater | 15. Engine Oil Fill Port |
| 7. Battery Starter Contactor A | 16. Charge Air Cooler (CAC) Hose |
| 8. Engine Oil Pan/Drain | 17. Upper Coolant Hose |
| 9. Engine Supports | |


Figure 2-2 Engine Components - Turbocharger Side (CFP7E shown)

Description

2.4 Air Intake System

The air intake system supplies combustion air to the fire pump drive engine cylinders. The air filters prevent particulate matter from entering the air intake.

Figure 2-3 shows how the combustion air is drawn into the system. The turbocharger directs the air through the Charge Air Cooler (CAC) heat exchanger for cooling before entering the cylinders.

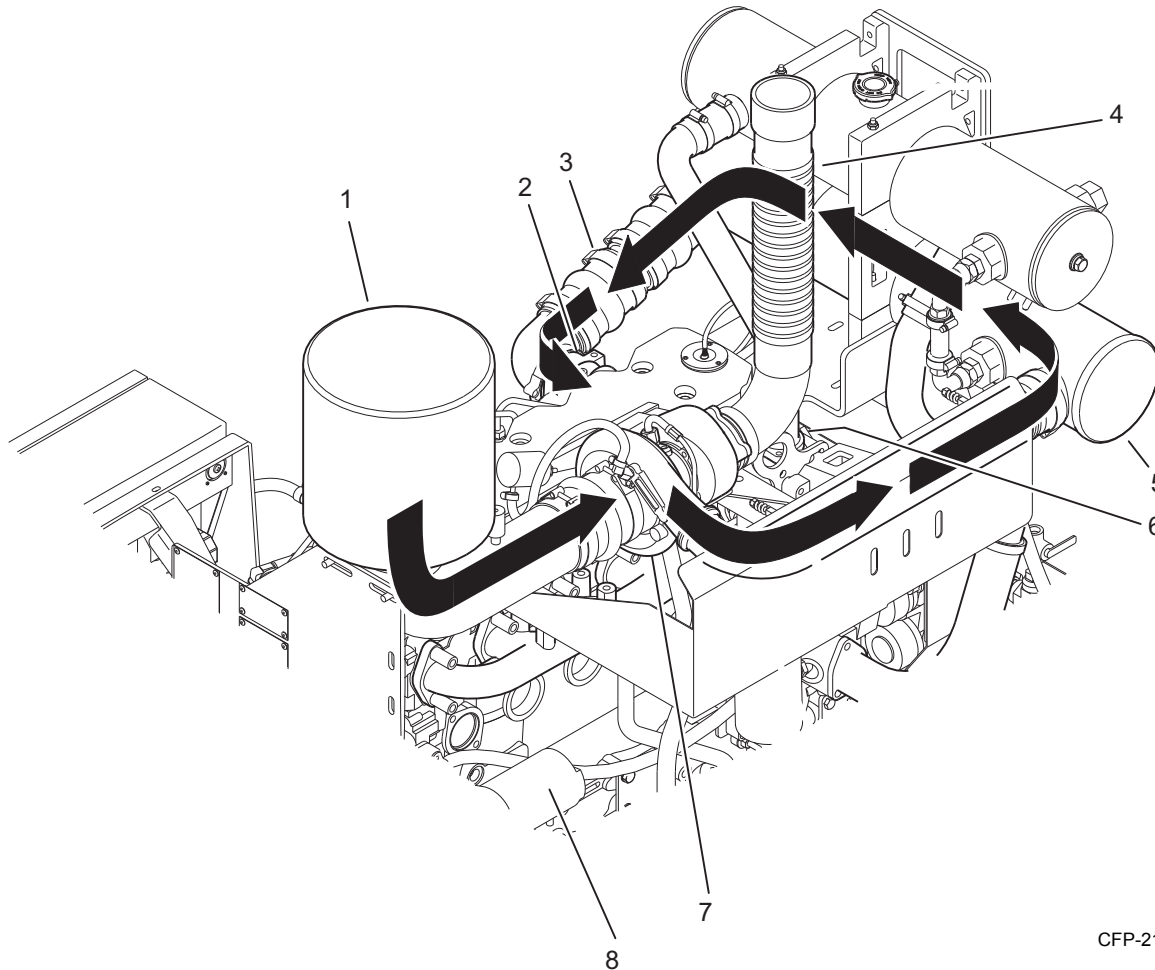

- | | |
|---|---|
| 1. Air Cleaner Assembly (intake) | 5. Charge Air Cooler (CAC) Heat Exchanger |
| 2. Combustion Air Intake Manifold | 6. Thermostat Housing |
| 3. Charge Air Cooler (CAC) Outlet Hose/Pipe | 7. Turbocharger |
| 4. Exhaust Flex Connection | 8. Starter |


Figure 2-3 Engine Air Intake and Charge Air Cooling Flow Diagram (typical)

2.5 Cooling Water System

Figure 2-4 illustrates a typical cooling water manifold and Figure 2-5 shows the path of water through the engine cooling system. Water entering the cooling system through the cooling water inlet first circulates through the CAC heat exchanger, cooling the compressed air from the turbocharger outlet ducting. The cooled combustion air exits the CAC outlet duct to the engine air intake manifold.

NOTE: The cooling water supply must be immediately available when the engine is started.

The cooling water from the CAC heat exchanger then passes through the engine coolant heat exchanger. The cooling water exits the coolant heat exchanger through a discharge connection.

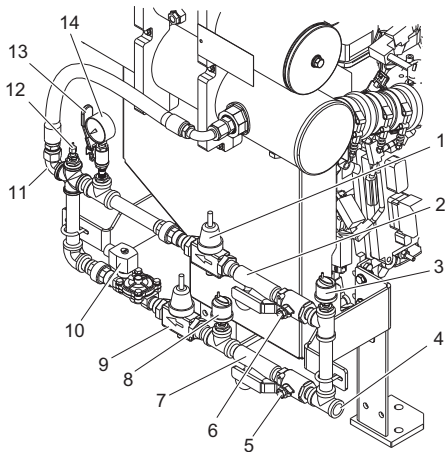

CFP-101

1. Bypass Water Pressure Regulator
2. Bypass Water Strainer
3. Pre Strainer Pressure Sensor
4. Cooling Water Inlet
5. Normal Water Inlet Valve
6. Bypass Water Inlet Valve
7. Normal Water Strainer
8. Post Strainer Pressure Sensor
9. Normal Water Pressure Regulator
10. Normal Water Solenoid Valve
11. Outlet to Heat Exchanger
12. Temperature Sensor
13. Pressure Gauge Isolation Valve
14. Water Supply Pressure Gauge

Figure 2-4 Cooling Water Manifold (typical)

IMPORTANT: Cooling water piping will be supplied by Cummins Fire Power as shown in the drawings in Section 8 - Component Parts and Assemblies. Refer to NFPA 20 for installation requirements.

When the cooling water piping is installed:

1. Adjust both pressure regulator set points of the cooling water manifold before operating the pump.
2. Ensure that the bypass line (the upper line) is closed.
3. Ensure that the normal water inlet line valve is open. The lower line with the solenoid valve is the normal inlet line.
4. Ensure that the pressure gauge isolation valve is open.

IMPORTANT: Monitor the oil pressure and coolant temperature gauges frequently. Refer to Lubricating Oil System Specifications or Cooling System Specifications in the Engine Data Sheet in Section 8 - Component Parts and Assemblies for recommended operating pressures and temperatures. Shut off the engine if any pressure or temperature does not meet the specifications.

NOTE: Maximum engine coolant temperature should not exceed the temperature listed on the Engine Data Sheet found in Section 8 - Component Parts and Assemblies. The coolant expansion pressure/fill cap must meet the minimum pressure of 10 kPa (15 psi).

The engine coolant system contains a mixture of at least 50% antifreeze and 50% water. The coolant level should be maintained so it is visible in the coolant level sight gauge.




CAUTION

Continuous operation with low coolant temperature (below 70 °C [158 °F]) or high coolant temperature (above 107 °C [225 °F]) can damage the engine. Verify the cooling water pressure and flow to maintain a consistent operating temperature.

2.6 Fuel Supply and Drain

The fuel supply and return connections are centrally located on the FPDP side. Refer to the Engine Data Sheet in Section 8 - Component Parts and Assemblies for the maximum allowable fuel tank supply locations above the fuel pump.

Description

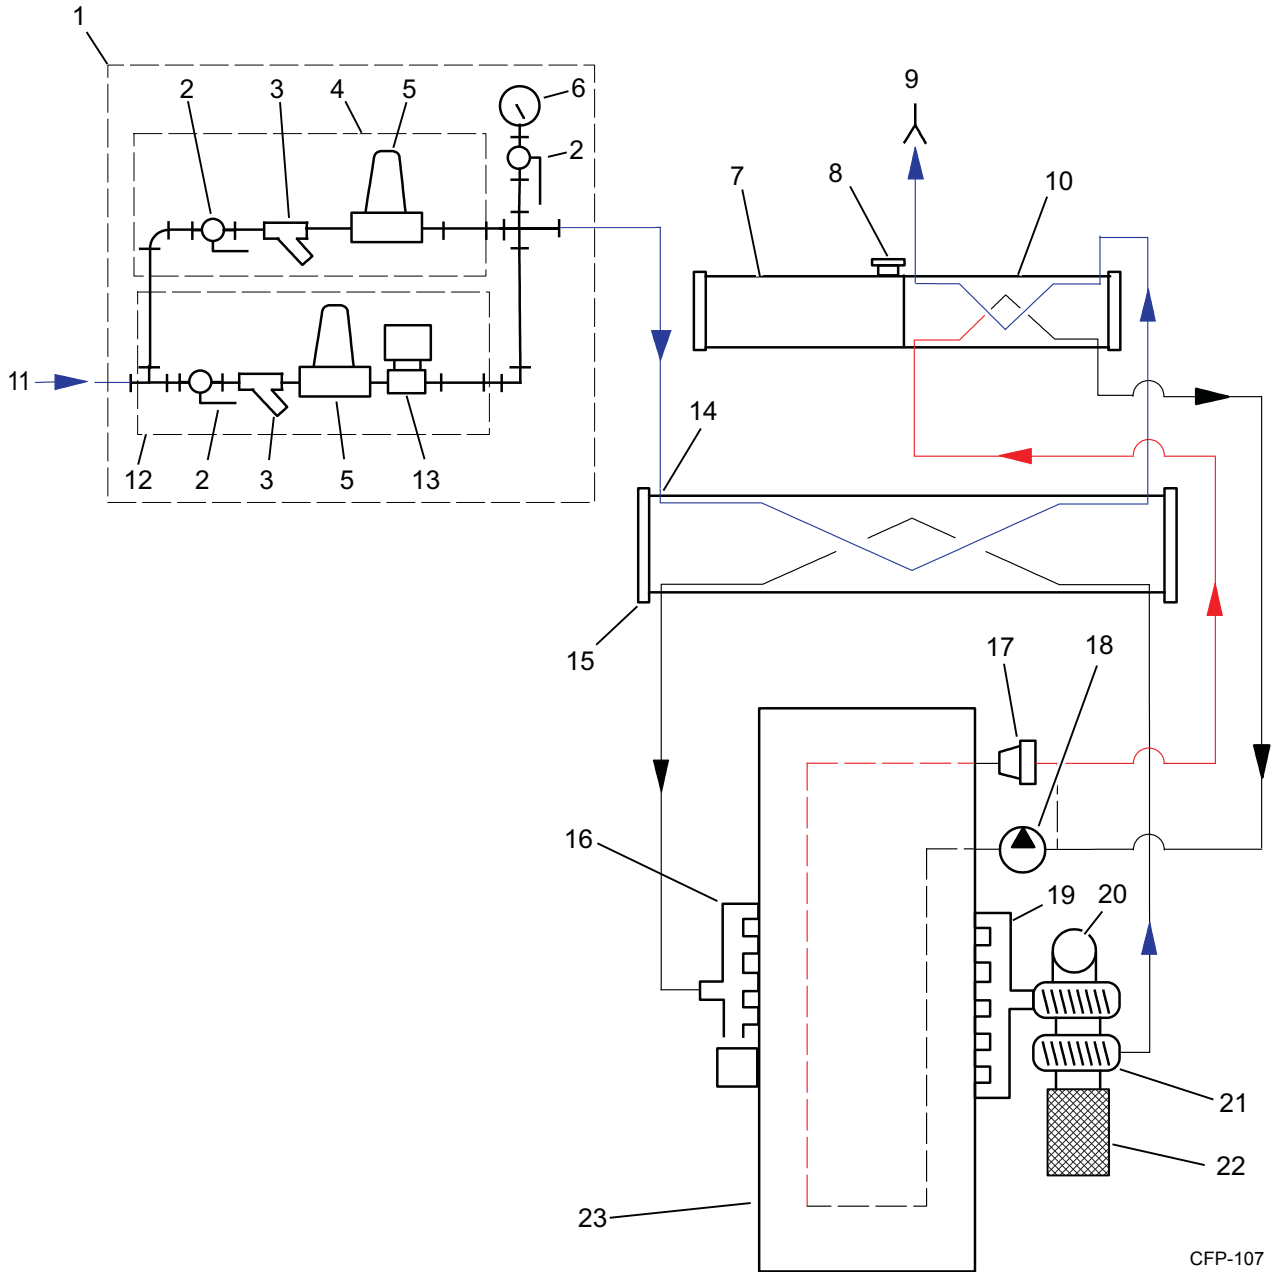

- | | |
|-------------------------------------|--|
| 1. Cooling Water Manifold | 13. Solenoid Valve |
| 2. Manual Shut-off Valve | 14. Supply Water |
| 3. Cooling Water Strainer | 15. Charge Air Cooler (CAC)/Heat Exchanger |
| 4. Cooling Water - Bypass Loop | 16. Combustion Air Intake Manifold |
| 5. Cooling Water Pressure Regulator | 17. Thermostat |
| 6. Cooling Water Pressure Gauge | 18. Coolant Pump |
| 7. Coolant Expansion Tank | 19. Exhaust Manifold |
| 8. Coolant Pressure/Fill Cap | 20. Exhaust Flex Connection |
| 9. Return Water Connection | 21. Turbocharger |
| 10. Coolant Heat Exchanger | 22. Air Filter |
| 11. Supply Water Connection | 23. Engine Block |
| 12. Cooling Water - Normal Loop | |

Figure 2-5 Engine Cooling System Flow Diagram (Typical)

2.7 High Pressure Common Rail (HPCR) Fuel System

The fire pump drive engine is equipped with an electronic fuel system that delivers precise fuel quantities with precise injection timing at injection pressures up to 24,000 psi (1600 BAR). The system consists of a high pressure pump that supplies a common fuel rail and accumulator manifold, feeding 6 high-pressure electronic controlled injectors which provide precise fuel metering and timing. The system is controlled by the Engine Control Module (ECM) for fueling and timing based on temperature, altitude, pressure, and throttle position. Refer to [Figure 2-1](#).



WARNING


With the High Pressure Common Rail (HPCR) fuel system, manually priming the fuel system is not

required and should not be performed.

2.8 Engine Oil System

[Figure 2-6](#) illustrates how the engine oil system lubricates moving internal engine parts (pistons, piston arms, valves, cam shafts, shafts, and bearings). The oil pump circulates oil from the oil pan, through the oil filter, and into engine areas where friction may develop. Refer to the Cummins Engine Operation and Maintenance Manual for additional information.

NOTE: Typically engine oil has been added during manufacture and testing procedures; however, shipping restrictions can affect whether the oil is maintained in the engine or drained for shipping. As shown in [Figure 2-7](#), check the oil level at the dipstick. Add oil as necessary to bring the oil level to the H (high) mark on the dipstick.

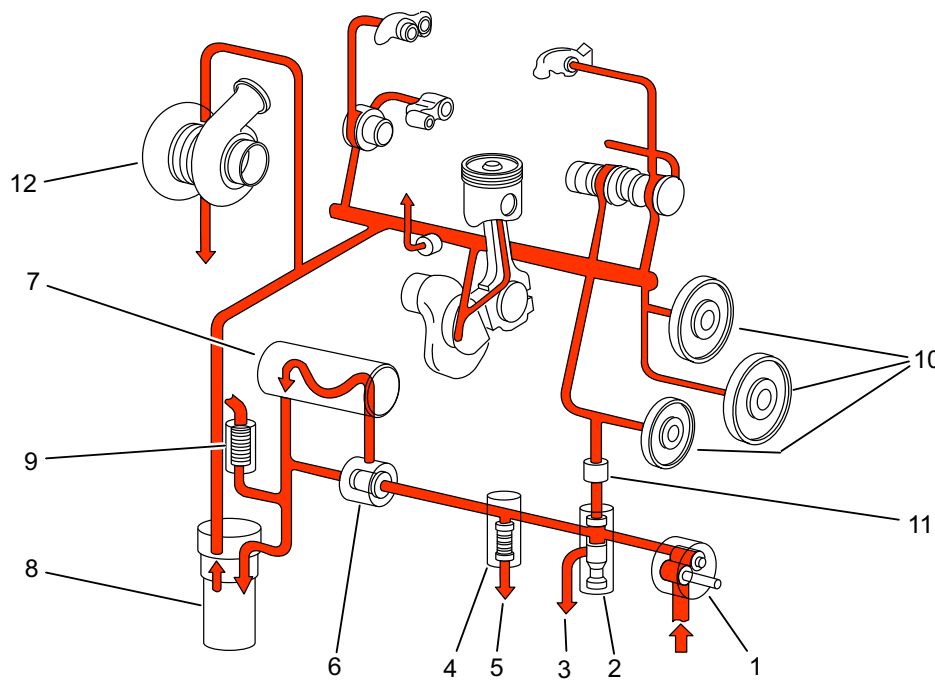


- | | |
|-------------------------------|---------------------------|
| 1. Oil Pump | 7. Oil Cooler |
| 2. Pressure Regulator Valve | 8. Combination Oil Filter |
| 3. Oil Return to Pan | 9. Filter Bypass Gears |
| 4. High Pressure Relief Valve | 10. Idler Gears |
| 5. Oil Return to Pan | 11. Viscosity Sensor |
| 6. Oil Thermostat | 12. Turbocharger |

Figure 2-6 Engine Lubricating Oil System Flow Diagram (Typical)

CFP-010

Description

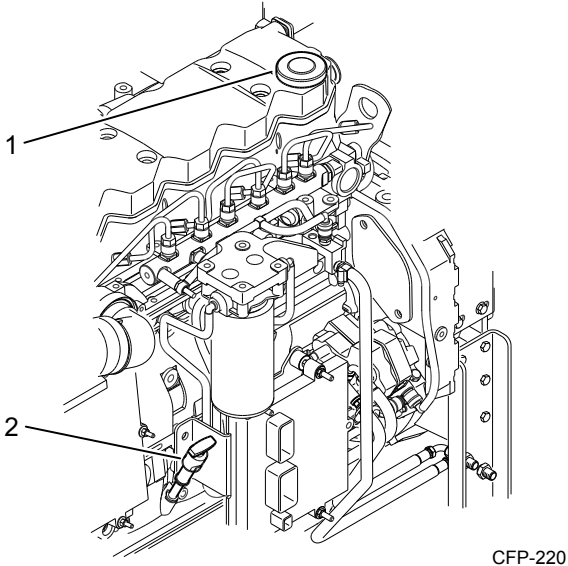


CFP-220

1. Engine Oil Fill Port
2. Engine Oil Level Dipstick

Figure 2-7 Engine Oil Level Dipstick and Fill Port

2.9 Exhaust System

Figure 2-8 shows how the exhaust system removes engine exhaust from the cylinders after the combustion process. The exhaust discharges from the exhaust manifold, passes through (drives) the turbocharger, and exits through the exhaust connection.

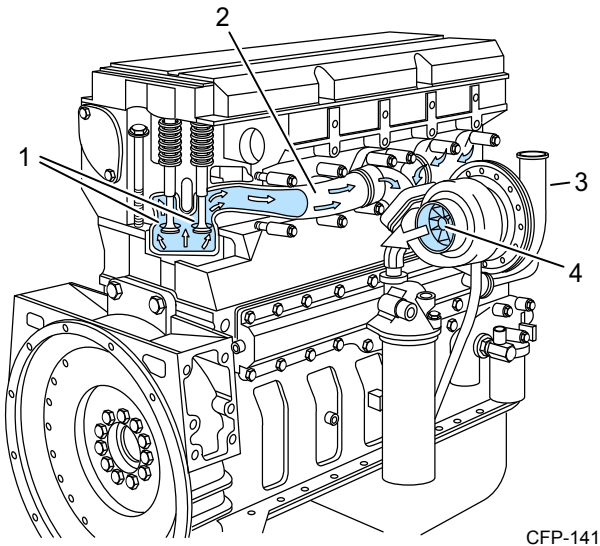

CFP-141

1. Exhaust Valve Ports
2. Engine Exhaust Manifold
3. Combustion Air to Charge Air Cooler
4. Turbocharger Turbine

Figure 2-8 Exhaust Flow Diagram (Typical)



Section 3 - Installation

3.1 Introduction

This section provides instructions for the initial installation, adjustment, and testing of the Cummins fire pump drive engine. Appropriate portions of this section should be used when returning the engine to operation after overhaul or major maintenance.

3.2 Receiving and Handling

Cummins Fire Power fire pump drive engines are pre-assembled and tested before shipment. Parts not shipped attached to the engine are sometimes shipped individually. The equipment was thoroughly inspected and prepared for shipping before it was turned over to the carrier. Upon receipt of the fire pump drive engine from the shipper:

1. Inspect the equipment for damage that may have occurred in shipping; and
2. Check each item carefully against the shipping manifest or bill of lading.

3.3 Site Preparation

The site should be clean and relatively level. Clear the proposed equipment area of overhanging obstructions and obstacles protruding from the floor.

CAUTION

Avoid installation in a dusty or dirty environment. Provide adequate physical protection from other physical damage as may be present in the specific location.

3.4 Drive Shaft Installation

Drive shaft installation should be done by trained technicians familiar with local, state, and federal codes and regulations.

Refer to National Fire Protection Association (NFPA) 20 for installation and applicable local code requirements and NFPA 25 for inspection, testing, and maintenance requirements.


Follow these steps to install the drive shaft:

CAUTION

Ensure that the lifting device is capable of safely lifting the weight of the engine or the combined weight of the assembled pump base, drive line, and pump. Do not use the engine lifting points for assembly!

1. Ensure that the engine and pump are correctly aligned.
 - a. Ensure that the engine position is centered on the frame side to side within $\pm .76$ mm (.03 in) by measuring outside of the frame side to the engine support leg mounting pad. (Compare the two front engine supports and two back engine supports.)
 - b. As shown in [Figure 3-1](#), align the engine center line to the pump center line within $\pm .76$ mm (.03 in).
 - c. Ensure that the pump center line to the engine crankshaft center line (in vertical plane) is $2^\circ \pm 1^\circ$.
 - d. Ensure that the drive shaft mounting flanges are parallel.
2. As illustrated in [Figure 3-2](#), lubricate the grease fittings on the drive shaft universal joint.
3. Check that the fire pump drive engine is properly installed per the pump manufacturer's specifications.

Installation

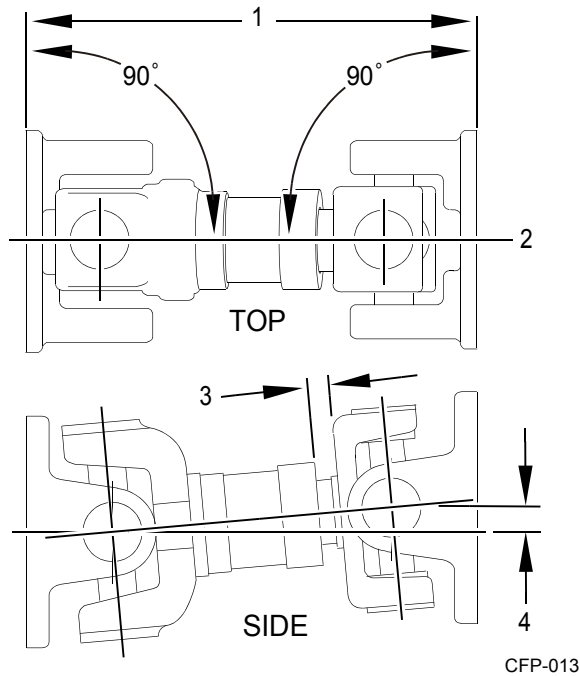

1. Planes must be parallel
2. Align both mounting center lines to $\pm .76$ mm (.03 in)
3. Distance to equal half of total travel
4. $2^\circ \pm 1^\circ$

Figure 3-1 Drive Shaft Alignment

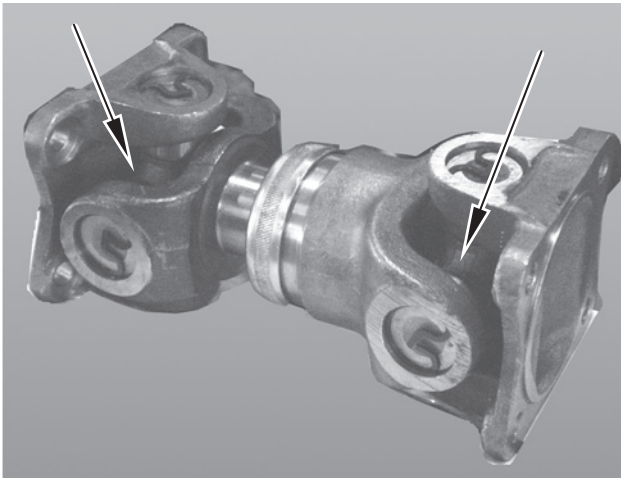


Figure 3-2 Drive Shaft Universal Joint Grease Fittings

NOTE: Cummins Fire Power or Cummins Inc. recommends using a good quality semi-synthetic, molybdenum-fortified National Lubricating Grease Institute (NLGI) #2 lithium complex grease.

NOTE: Some lubrication loss may occur during transport and storage. It is recommended that the drive shaft be re-lubricated upon installation.

3.5 Fuel Supply Installation

The following sections outline proper installation and connection of the fuel supply.

NOTE: It is the responsibility of the customer to provide and install a properly-rated fuel tank per NFPA 20 guidelines.

To properly install a fuel supply, follow these instructions:

1. Install an elevated no. 2 diesel fuel tank or other fuel supply arrangement which is compatible with American Society of Testing and Materials (ASTM) no. 2 diesel fuel specifications.

NOTE: The fuel supply line at the fuel tank must be higher than the fuel intake port on the engine fuel filter. Ensure that the fuel system is installed in a safe and effective manner.

2. Size the fuel tank for the maximum expected full-load engine operation period with the initial fuel level at the minimum level for refueling.
3. Install a fuel return line and route this line to the bottom of the fuel tank in order to minimize the return head.
4. Install a fuel supply line to the fire pump drive engine.

NOTE: For fuel line specifications, refer to the Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

NOTE: DO NOT use copper or galvanized pipe for the fuel return or supply lines.

The fire pump drive engine fuel system has been primed during manufacturing and test procedures. The engine is equipped with an engine driven (gear) fuel pump.

An optional fuel pre-filter and a fuel filter/water separator is integrated into the fuel delivery system of the fire pump drive engine. To ensure that the filter/separator is free of water, open the fuel filter/water separator drain at the bottom of the filter and drain the fuel into a container until no water is present. Dispose

of the contaminated fuel in accordance with local environmental regulations.

CAUTION

Due to the precise tolerances of diesel injection systems, it is extremely important that the fuel be kept clean and free of dirt or water. Dirt or water in the system can cause severe damage to both the fuel pump and the fuel injectors.

WARNING

Do not mix gasoline, alcohol, gasohol, ethanol, or methanol with diesel fuel. This mixture will cause severe engine damage or explosion.

CAUTION

Use ONLY no. 2 diesel (ASTM no. 2D) fuel. Any adjustment to compensate for reduced performance with a fuel system using alternate fuel is not warrantable.

3.6 Cooling Water Supply Installation

IMPORTANT: *The cooling water supply must be immediately available when the engine is started. Ensure that the supply line valves are in the OPEN position.*

NOTE: *The velocity of the cooling water should be as great as possible without exceeding the maximum allowable pressure shown in the Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).*

To install the cooling water supply:

1. Provide a cooling water discharge line at the outlet of the engine coolant heat exchanger and provide a cooling water supply line to the cooling water inlet per the Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

NOTE: *The cooling water outlet piping from the heat exchanger should be one pipe size larger than the supply piping.*

2. Check the pressure regulator setting on the cooling loop with water flowing through the heat exchanger. The cooling loop is supplied by Cummins Fire Power; both water pressure regulators have been set at 207 kPa (30 psi) (or slightly less) water pressure during manufacture and testing.

IMPORTANT: *The manual water valves for the automatic loop should remain OPEN at ALL times. The manual valves for the bypass loop should be CLOSED during automatic (pump controller) operation. When running, the engine should stabilize between temperatures identified on the Engine Data Sheet. The flow rate may need to be adjusted to maintain the desired engine temperature.*

NOTE: *Excessively cold (4 °C to 23 °C [40 °F to 75 °F]) cooling water flow can cause condensation inside the charge air cooler.*

IMPORTANT: *Continuous operation with low coolant temperature (below 70 °C [158 °F]) or high coolant temperature (above 107 °C [225 °F]) can damage the engine.*

3. Adjust the cooling water based on the water flow rather than the water pressure. The flow is dependent on the cooling water temperature. Refer to the Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#) for details.
4. To measure the water flow, use an appropriately-sized container to measure the amount of water and the elapsed time of the water to flow from the discharge pipe and then formulate the calculations:

Flow rate = container size/ time to fill container.

Example:

Time to fill a 20 gallon container = 15 seconds.

20 gallons divided by 15 seconds = 1.33 gallons per second.

Multiply by 60 seconds = 80 gallons per minute (gpm) (FLOW RATE)

5. Adjust both pressure regulators to a pressure that will provide a flow rate at or above the specifications listed in the Engine Data Sheet.

CAUTION

When the cooling water piping is installed, adjust both of the pressure regulator set points before operating the pump. Damage to the heat exchanger may occur from improperly regulated cooling water supply pressure.

Installation

3.7 Battery Installation

Redundant sets of batteries must be supplied for the required operating voltage. The minimum recommended Society of Automotive Engineers (SAE) reserve capacity (RC) and SAE cold cranking ampere (CCA) values for a particular engine can be found on the Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#). RC and CCA definitions can be found in SAE Standard J537. Refer to NFPA 20 for additional battery installation information.

WARNING
Battery electrolyte (sulfuric acid) is highly caustic and can burn clothing and skin. Wear impervious neoprene gloves and safety goggles, or a full face shield, when working with the batteries.

CAUTION
DO NOT connect battery charging cables to any electronic control system component. This can damage the electronic control system.

IMPORTANT: Batteries must meet the requirement listed in the electrical system specifications. Batteries may be supplied by Cummins Fire Power or Cummins Inc. as an option, or may be supplied by the customer.

To properly install the batteries:

1. As shown in [Figure 3-3](#) or [Figure 3-4](#), install the Battery Cable Kit or equivalent customer-supplied wiring. Install battery sets in a well-ventilated or otherwise protected location.

WARNING
Batteries can emit explosive gases during charging. Always ventilate the compartment before servicing the batteries. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

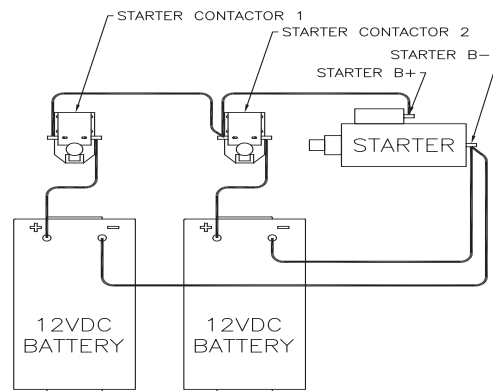


Figure 3-3 Series Battery Connection 12 VDC

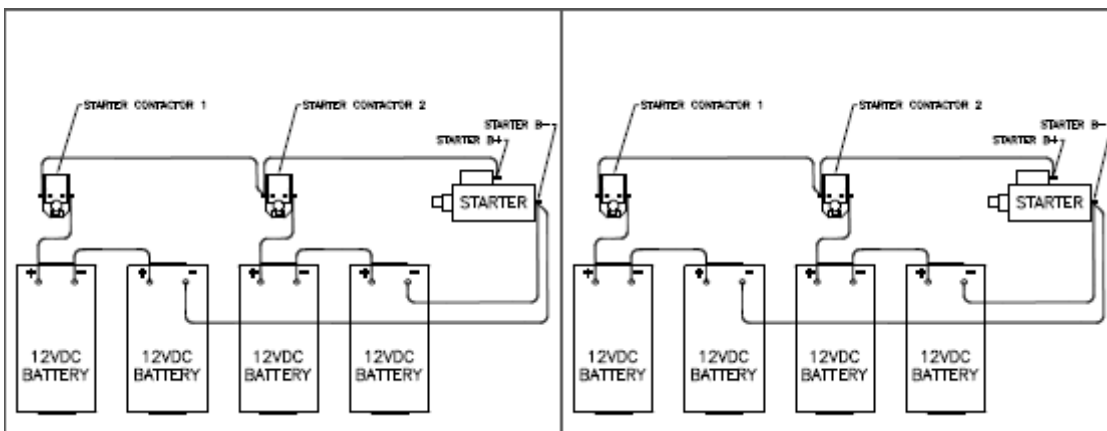


Figure 3-4 Series Battery Connection 24 VDC

2. Provide adequate room for servicing or replacing the batteries. Provide protection from extremes of temperature and weather.
3. Locate the batteries near the engine or increase the size of the conductors as required by applicable codes. Ensure that the batteries are configured properly for 12 - or 24 - VDC standard operations.
4. Check the battery cables and connections.

NOTE: Coat the terminals with petroleum jelly to prevent corrosion. Install the cables and tighten the battery connections.

3.8 Signal and Control Installation

The fire pump controller wires must be connected to the terminal blocks (TBs) on the FPDP Interface Terminal Strip (shown in Figure 3-5). To complete the signal and control installation:

1. Ensure that the fire pump controller is properly installed and configured per the manufacturer's instructions.
2. Complete the fire pump controller wiring (customer-supplied) per the manufacturer's instructions.
3. Ensure electrical continuity and adequate insulation resistance for the installed wiring.
4. The TBs between the fire pump controller and the FPDP Interface Strip are standard UL and FM controller terminals and follow a direct one-to-one correspondence (some TBs are optional):
 - a. TB-1 [**Run Solenoid Circuit**]: This power source is necessary for fire pump operations while in the **AUTO** mode.
 - b. TB-2 [**Crank Termination Switch**]: This signal is present when the engine is running. This signal indicates that the engine has started and that the crank command from the fire pump controller should stop immediately.
 - c. TB-3 [**Overspeed Switch**]: This signal is present when the overspeed control module has operated. If this event occurs, the fire pump drive engine will stop.

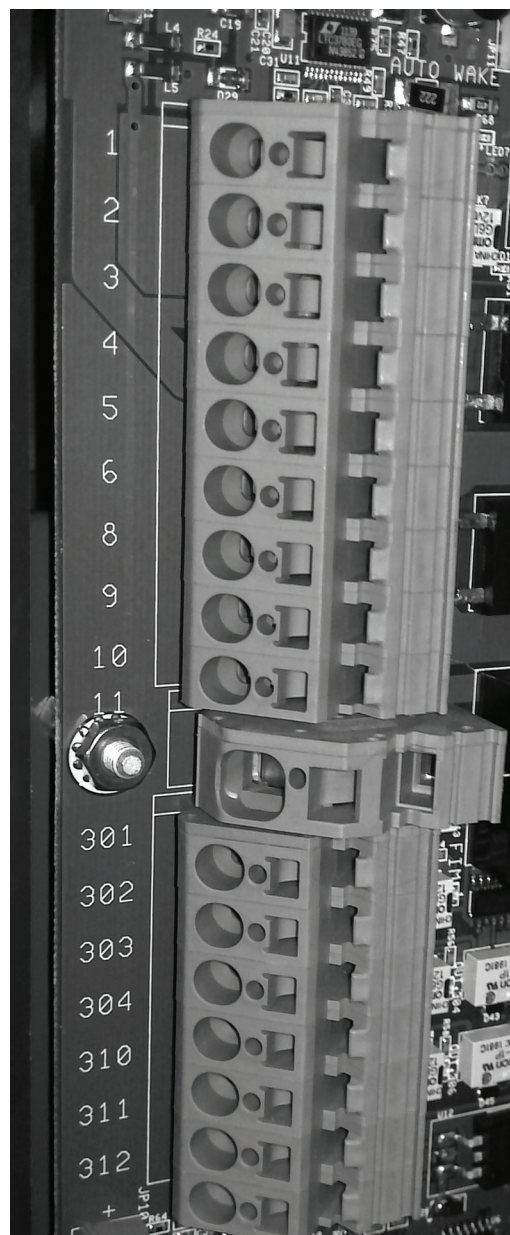


Figure 3-5 FPDP Interface Terminal Strip

- d. TB-4 [**Low Lubricant Pressure Switch**]: This zero VDC grounded signal is present when the oil pressure has dropped below the 83 ± 13 kPa (12 ± 2 psi) set point.
- e. TB-5 [**High Engine Temperature Signal**]: This zero VDC grounded signal is activated when the engine is running and the coolant temperature is at or above 93 °C (200 °F). The alarm will deactivate when the engine is

Installation

running and the coolant temperature drops below 88 °C (190 °F).

- f. TB-6 [**Battery One Positive**]: The fire pump controller senses Battery A charge state and charges Battery A through this heavy gauge wire.
- g. TB-8 [**Battery Two Positive**]: The fire pump controller senses Battery B charge state and charges Battery B through this heavy gauge wire.
- h. TB-9 [**Main Battery Contactor One Coil or Battery Relay One Coil**]: The battery positive signal is driven from the fire pump controller to contactor A when desiring to crank from Battery A. Current in this circuit shall not exceed 10A continuous.
- i. TB-10 [**Main Battery Contactor Two Coil or Battery Relay Two Coil**]: The battery positive signal is driven from the fire pump controller to contactor B when desiring to crank from Battery B. Current in this circuit shall not exceed 10A continuous.
- j. TB-11: Connect the common ground and battery negative for both Battery A and Battery B from between the fire pump controller and engine. This is not intended to create a fully isolated battery negative or ground system. Current in this circuit shall not exceed 20A continuous.

NOTE: *Terminals 301 through 312 shall be electrically isolated from the ECM.*

- k. TB-301 [**Electronic Control Module Switch**]: Battery negative signal driven from the FPDP when the engine is operating on Engine Control Module (ECM) B.
- l. TB-302 [**Fuel Injection Malfunction**]: Battery negative signal driven from the FPDP when either of the ECMs triggers a fault code which can affect performance of the Fuel Injection System. See [Section 7 - Troubleshooting](#) for possible fault causes and solutions.
- m. TB-303 [**Electronic Control Module Warning**]: Battery negative signal driven

from the FPDP when a single ECM has failed.

- n. TB-304 [**Electronic Control Module Failure**]: Battery negative signal driven from the FPDP when both ECMs have failed.
- o. TB-310 [**Raw Water High Inlet Temperature**]: Battery negative signal driven from the FPDP when high raw water temperature is sensed.
- p. TB-311 [**Clogged Raw Water Coolant Loop Strainer**] - *not applicable on radiator-cooled models*: Battery negative signal driven from the FPDP when the raw water supply restriction is sensed.
- q. TB-312 [**Low Engine Temperature Signal**]: Battery negative signal driven from an engine temperature switch when engine coolant reaches or falls below 43.3 ± 2.78 °C (110 ± 5 °F). The signal will be removed when the coolant temperature reaches or exceeds 60 ± 2.78 °C (140 ± 5 °F).

5. Provide the initial charge on the redundant batteries per the battery charger's instructions.
6. Check that both voltmeters on the FPDP indicate the approximate battery voltage. Both sets of batteries can be used for starting the engine in the event that one set is low.

3.9 Coolant System Preparation

The fire pump drive engine cooling and lubrication system was initially filled during manufacture and testing. To properly prepare the coolant system:



CAUTION

Ensure that all coolant systems have been filled to the proper level before operation by checking the coolant level sight gauge on the heat exchanger.

1. Inspect the engine coolant hoses and hose clamps and ensure that all coolant hoses and clamps are properly installed and water tight.
2. Ensure that the engine coolant heater maintains an engine coolant temperature of 49 °C (120 °F) or above.

3. Ensure that coolant is present in the engine coolant heater before plugging the heater element into a dedicated circuit.

! WARNING

Do not remove the pressure/fill cap from a hot engine. Wait until the coolant temperature is below 50 °C (122 °F) before removing the pressure/fill cap. Heated coolant spray or steam can cause personal injury.

3.10 Charge Air Cooler (CAC) Inspection

The charge air cooler (CAC) system reduces the temperature of the compressed combustion air from the turbocharger before entering the air intake manifold.

Inspect the CAC piping and hoses for loose/missing hose clamps, hose punctures, leaking manifold seals, or corrosion. Torque the hose clamps to the recommended torque value. Refer to the Engine Data Sheet in [Section 8 - Component Parts and Assemblies](#).

3.11 Lubricating Oil System Preparation

The fire pump drive engine and turbocharger were initially lubricated during manufacture and testing. To prepare the lubricating oil system for operation:

1. Check the oil level using the dip stick before operating the fire pump drive engine.
2. Fill the oil fill port to the “H” mark on the dipstick with lubricating oil.

NOTE: Do not use special “break-in” lubricating oils for new or rebuilt Cummins engines. Use the same type of oil during the “break-in” as used during normal operation.

! CAUTION

Some regulatory and shipping restrictions may require that all lubricants, fuels, and coolants be drained for transport. Ensure that all cooling and lubrication systems have been filled to the proper level before operation.

NOTE: Using multi-viscosity lubricating oil can improve oil consumption control and improve engine cranking in cold temperatures while maintaining lubri-

cation at high operating temperatures. Cummins Inc. recommends Premium Blue® 15W-40 oil for most climates.

! CAUTION

Ensure that all cooling and lubrication systems have been filled to the proper level before operation.

3.12 Variable Speed Pressure Limiting Control (VSPLC) Preparation

As shown in [Figure 3-6](#), to prepare the fire pump drive engine for VSPLC capability, connect a 1/2 inch (12.7 mm) nominal size inside diameter pressure sensing line to the transducer located under the FPDP and the other end to between the pump discharge flange and the discharge check valve.

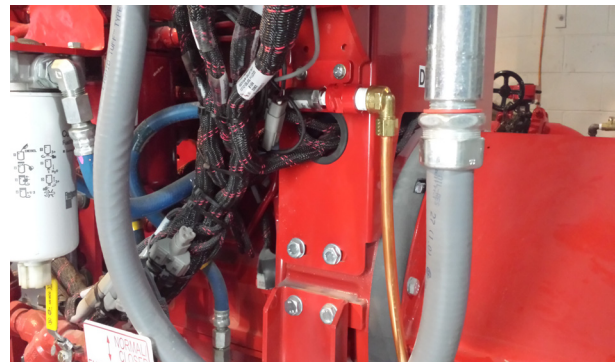


Figure 3-6 Connection of the Hose to the VSPLC Transducer.

3.13 Pre-Start Inspections

Prior to starting the fire pump drive engine for the first time, perform a visual inspection:

1. Check that there is no apparent damage and that all components are installed.
2. Check that the drive belt is properly installed.
3. Check that all hoses and tubes are properly installed.
4. Check that all electrical connections are properly installed.

Installation

5. Check that the fire pump drive engine is properly installed per the pump manufacturer's instructions, is correctly aligned, and is free to rotate.
6. Lubricate the grease fittings on the auxillary drive shaft.

NOTE: Use the same type of oil as used in normal operation. Cummins Inc. recommends Premium Blue® 15W-40 oil for most climates.

After completing preliminary set-up procedures, perform the engine start test as outlined in detail in [Section 5 - Operation](#).

WARNING

Before operating the equipment, complete all safety checks, remove all tools and foreign objects from the equipment, and ensure that all guards are in place and securely fastened. Alert area personnel that the equipment will be starting. Unintentional equipment start-up or contact with exposed or moving components can cause personal injury or equipment damage.

CAUTION

If the oil pressure is not displayed on the gauge or if the low oil pressure message is displayed within fifteen seconds, STOP THE ENGINE IMMEDIATELY! Continued operation without proper lubrication will cause engine damage.

3.14 Engine Monitoring

When the engine starts, it is important to monitor the displays:

1. Immediately check that water flow is established through the coolant heat exchanger. The water flow should be established immediately, but some delay may occur before the flow exits the heat exchanger drain connection.

NOTE: Ensure that cooling water is flowing through the heat exchanger and the water pressure shown on the local pressure gauge is no more than 414 kPa (60 psi). The minimum cooling water flow rate is identified in the [Engine Data Sheet](#) in [Section 8 - Component Parts and Assemblies](#).

2. Ensure that the engine operating temperature stabilizes between applicable ranges as identi-

fied in the [Engine Data Sheet](#) in [Section 8 - Component Parts and Assemblies](#).

NOTE: If the temperature does not stabilize, stop the engine and refer to **Coolant Temperature Above Normal** or **Coolant Temperature Below Normal (Engine Running)** in [Section 7 - Troubleshooting](#).

3. Operate the engine for eight to ten minutes.
4. Inspect the engine for leaks, unusual noises, or other indications of incorrect operation.
5. Shut off the engine by pressing and holding the overspeed **RESET/STOP** switch.
6. Shortly after the engine stops, check that the water flow stops automatically.
7. Correct any problems found during the inspection before proceeding.
8. Check the engine lubricating oil level at the dip stick. Add oil, if necessary.
9. Check the coolant expansion tank level. Add coolant, if necessary.
10. Check the cooling water strainers. Clean the strainers according to the maintenance schedule in [Section 6 - Maintenance](#).
11. Perform engine speed control and safety system tests per the instructions in [Section 5 - Operation](#).

3.15 Field Acceptance Testing

The required installation tests are outlined in the NFPA 20 Standards and shall be performed to validate automatic and manual operational requirements for field acceptance testing.

WARNING

Do not disconnect or connect the pressure transducer while the engine is connected to an active battery charging source.

In the event that you have a VSPLC engine and need to disable the VSPLC capability, be sure to:

1. Shut the engine down;

2. Disconnect the battery chargers; and
3. Unplug the pressure transducer by disconnecting the three-position Deutsch connector labeled VSP;

You can then reconnect the battery chargers, run your tests and evaluate the system as needed.

To enable the VSPLC capability again:

1. Shut the engine down;
2. Disconnect the battery chargers;
3. Plug in the pressure transducer by connecting the three-position Deutsch connector labeled VSP; and

Connect the battery chargers.

This page is intentionally left blank.

Section 4 - Controls

4.1 Fire Pump Digital Panel (FPDP)

The Fire Pump Digital Panel (FPDP) shown in [Figure 4-1](#) controls starting and monitoring engine performance, as well as the fire pump drive engine operation. In MANUAL mode, the panel remains active as long as battery power is available. In AUTO mode, the panel is active when battery power is present on Terminal Block (TB) -1, otherwise it goes into STANDBY mode after thirty minutes of no battery voltage on TB-1.

4.1.1 Warning Lamp

The Warning Lamp (1) illuminates (yellow) in the event that the Electronic Control Module (ECM) has sensed a non-mission disabling fault.

4.1.2 Fault Indicator Lamp

The Fault Indicator Lamp (2) indicates Fuel Injection Malfunction (FIM) and illuminates (red) in the event that the ECM has detected a fuel injection fault or primary sensor fault.

The FPDP also sends a ground signal to TB-302, which sends a signal to set off an alarm on the fire pump controller to indicate a FIM.

4.1.3 Scroll UP and DOWN Buttons

The scroll buttons are used to scroll UP (4) or DOWN (5) when inside the FPDP menus.

4.1.4 ENTER Button

Press the ENTER button (6) when making selections in the FPDP menu screen.


4.1.5 MENU Button

Press the MENU button (7) on the FPDP display to open the menu options.

4.1.6 Overspeed RESET/STOP Switch

The overspeed RESET/STOP switch (8) is used to shut off the engine at the FPDP. Momentarily pressing the switch removes the key switch for thirty seconds.

Pressing the Overspeed RESET/STOP Switch after correcting an engine overspeed shutdown resets the overspeed control module, allowing subsequent restarts of the fire pump drive engine.

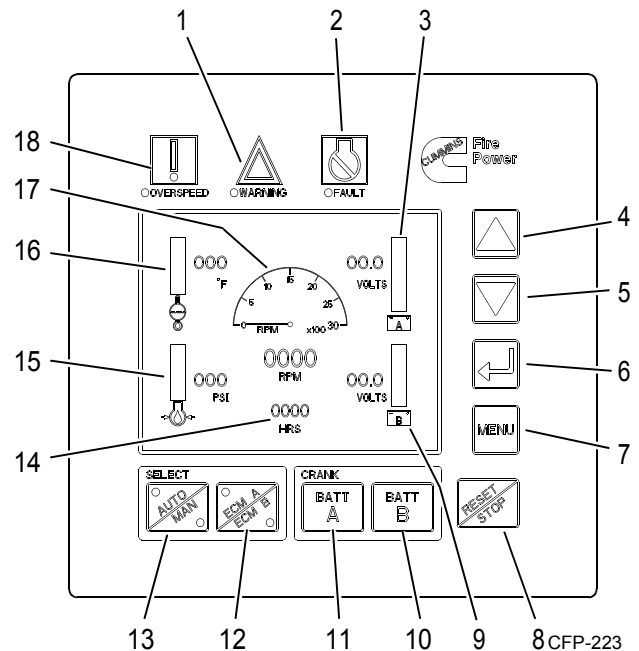

1. Warning Lamp
2. Fault Indicator Lamp
3. Battery "A" Voltmeter
4. Scroll UP Button
5. Scroll DOWN Button
6. ENTER Button
7. MENU Button
8. Overspeed RESET/STOP Switch
9. Battery "B" Voltmeter
10. Crank Battery B Momentary Start Button
11. Crank Battery A Momentary Start Button
12. ECM A/B Selector Switch & Indicator Lamps
13. AUTO/MAN Mode Switch & Indicator Lamps
14. Hour Meter
15. Engine Oil Pressure Gauge
16. Coolant Temperature Gauge
17. Tachometer
18. Engine Overspeed Warning Lamp

Figure 4-1 Fire Pump Digital Panel (FPDP)

Controls

4.1.7 Battery “A” and “B” Voltmeters

The Battery “A” (3) and Battery “B” (9) Voltmeters display the charge status - or Voltage Direct Current (VDC) - of the relative battery connections.

4.1.8 Tachometer

The Tachometer (17) displays the engine speed in revolutions per minute (RPM) whenever the engine is operating.

4.1.9 Hour Meter

The Hour Meter (14) maintains a running total of the hours of operation (run time).

4.1.10 ECM A/B Selector Switch and Indicator Lamps - Applicable on Electronic Engines

The ECM A/B selector switch and indicator lamps (12) illuminate in yellow, indicating which ECM is being used to control the engine.

If ECM A (normal position) is selected, ECM A is controlling the engine.

If ECM B (alternate position) is selected, ECM B is controlling the engine, and the FPDP will send a ground signal to TB-301, which will send a signal to set off an alarm on the fire pump controller to indicate that the engine is operating on the alternate ECM.

4.1.11 Crank Battery A and B Momentary Start Buttons

The Crank Battery A (11) and Crank Battery B (10) momentary start buttons initiate an immediate engine start (momentary start) using the selected A or B crank battery.

Crank A energizes battery contactor A and Crank B energizes battery contactor B, depending on which one is selected.

Both Crank A and Crank B buttons can be energized at the same time in the event both batteries are weak.

4.1.12 Automatic or Manual Mode of Operation Indicator

The AUTO/MAN mode switch and indicator lamps (13) show whether the engine starts and is controlled by the operator (MANUAL) or by an automatic signal from the fire pump controller (AUTO). The lamp (yellow) is illuminated on which mode is selected.

The MANUAL mode is typically used for engine setup, testing, and emergency and maintenance procedures.

The AUTO mode is used to start the engine by the fire pump controller. In the AUTO mode, the fire pump drive engine shuts down upon loss of signal power from the fire pump controller.

4.1.13 Coolant Temperature Gauge

The Coolant Temperature Gauge (16) displays the engine coolant temperature in degrees Fahrenheit.

4.1.14 Engine Oil Pressure Gauge

The Engine Oil Pressure Gauge (15) displays the engine oil pressure in pounds per square inch (PSI). This gauge is independent of the low oil pressure alarm.

4.1.15 Engine Overspeed Warning Lamp

The overspeed control module monitors engine speed. If the engine RPM exceed 115% rated speed, the Engine Overspeed Warning Lamp (18) is illuminated (yellow).

The FPDP will send a power signal to TB-3, which will send a signal to set off an alarm on the fire pump controller, indicating that an overspeed condition has occurred.

The FPDP will automatically switch to MANUAL mode and will shut the engine down. After the overspeed has been reset by using the RESET/STOP switch on the FPDP, the engine operation will revert to the original AUTO mode position.

NOTE: *The engine will not be allowed to restart automatically from the fire pump controller until the FPDP is reset.*

4.1.16 ECM Fault Code Lamps - Applicable on Electronic Engines

The amber engine warning lamp and the red engine shutdown lamp alert the operator of an engine malfunction:

- An illuminated amber lamp indicates an engine malfunction that requires timely operator attention.
- An illuminated red lamp indicates an engine malfunction that requires immediate and decisive operator response.

A three- or four-digit diagnostic fault code will display on the FPDP which can then be used to help describe the engine malfunction. Refer to the Fault Code Chart in [Section 7 - Troubleshooting](#).

4.1.17 Engine STOP Button

The Engine STOP Button is located on the left side of the FPDP enclosure and is used to stop the operation of the engine in either manual or automatic mode. The button must be pressed and held until the engine has shut down.

4.1.18 Engine Communications Port

The Engine Communications Port plug-in is located on the left side of the FPDP enclosure and is used for the communications connection port for Cummins Insite™.

NOTE: *Insite™ is a Cummins Inc. computer software tool used to monitor or report engine performance criteria.*

4.1.19 Contractor Access Port

The contractor access knock-out is located on the lower side of the FPDP enclosure. This is the only 25.4 cm (1 in) knock-out provided for the installing contractor to connect the fire pump controller to the FPDP.

IMPORTANT: *If this port is not used for the installation, all warranty on the fire pump drive engine will be void.*

4.1.20 Engine ECM Power Supply

The Engine ECM Power Supply plug-in is located on the lower side of the FPDP enclosure. The power supply port supplies unswitched battery power to both ECM A and ECM B.

4.1.21 Engine Harness Connection

Located on the lower side of the FPDP, the Engine Harness Connection plug-in connects the panel to the

power source, start contactors, magnetic pick-up, alternator, and other engine-related functions controlled by the FPDP.

4.2 Electronic Control Module (ECM) - Applicable on Electronic Engines

The ECM is an electronically operated fuel control system that also provides many operator and vehicle or equipment features. It processes all of the inputs and sends commands to the fuel system vehicle and engine control devices. The base functions of the control system include fueling and timing control, limiting the engine speed operating range between the low- and high-idle set points, and reducing exhaust emissions while optimizing engine performance.

The ECM uses inputs from the operator and its sensors to determine the fueling and timing required to operate at the desired engine speed.

The ECM performs diagnostic tests on most of its circuits and will activate a fault code if a problem is detected in one of these circuits. Along with the fault code identifying the problem, a snapshot of the engine's operating parameters at the time of fault activation is also stored in memory. Some fault codes will cause a diagnostic lamp to activate to signal the driver.

The ECM also communicates with service tools and some other controllers.



CAUTION

Normally, Cummins engines with ECMs have derate and shutdown protection calibrated into the ECM. However, when the ECM on a Cummins engine has no derate or shutdown protection, the engine will run to destruction. Therefore, preventive maintenance is essential.

Controls

This page is intentionally left blank.



Section 5 - Operation

5.1 Introduction

This section outlines general operating information for starting and stopping the fire pump drive engine, as well as instructions for navigating the menu screens of the Fire Pump Digital Panel (FPDP). This manual is provided for your specific equipment and should be considered a part of that equipment. All personnel responsible for the operation and maintenance of the equipment should read and thoroughly understand this manual.



WARNING

Before preparing the equipment for normal service, complete all safety checks, remove all tools and foreign objects from the equipment, ensure all guards are in place and securely fastened, and alert area personnel that the equipment will be starting.

5.2 Starting and Stopping Procedures

By default, the fire pump will turn on automatically in the event of low system water pressure. The engine will continue to operate as long as the RUN signal is present. When the RUN signal is terminated by the fire pump controller, the engine will stop.

For testing purposes, the fire pump drive engine can be turned on and off locally using the buttons on the FPDP (see [Figure 4-1](#)). If the engine fails to start automatically in the event of a fire emergency, follow the Emergency Starting/Stopping Procedure outlined in [Section 5.2.2](#).

5.2.1 Local Starting/Stopping Procedure

To start the engine locally from the FPDP:

1. Press the AUTO/MAN mode switch on the FPDP to place the engine in MANUAL mode.
2. Press either the CRANK BATT A or CRANK BATT B button to start the engine.

The engine may be stopped locally by pressing the RESET/STOP button on the FPDP or by holding down the red ENGINE STOP button on the left side of the FPDP.

5.2.2 Emergency Starting/Stopping Procedure

The engine will start automatically in the event of a fire emergency. However, if it fails to start automatically, the engine can be started locally. The following procedure outlines an emergency manual mode electrical start:

1. As shown in [Figure 5-1](#), open the water bypass valves in the cooling water supply piping or the emergency cooling supply.

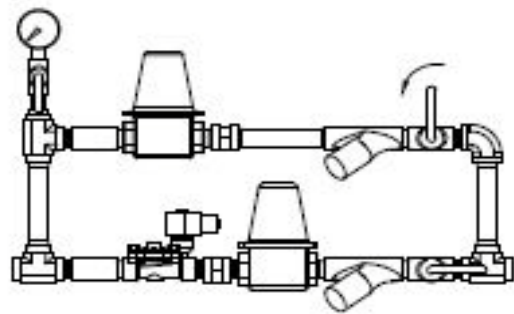


Figure 5-1 Fire Pump Drive Engine Bypass Valve

2. Verify that water is being discharged.
3. Press the AUTO/MAN mode switch on the FPDP to place the engine in MANUAL mode.
4. As shown in [Figure 5-2](#), open the FPDP panel door and slide the keyswitch override to the “UP” position. Verify that the green LED next to the override switch is lit.

Operation

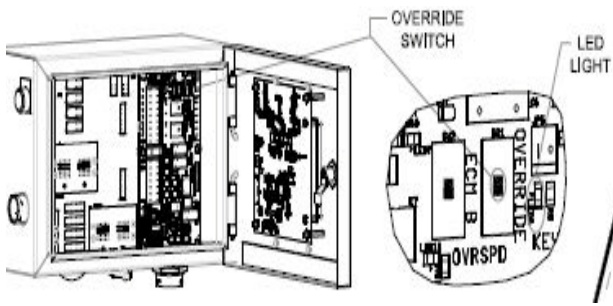


Figure 5-2 FPDP Override Switch

CAUTION

To prevent damage to the starter, do not engage the starting motor more than fifteen seconds. Wait fifteen seconds between each attempt to start, up to six attempts.

5. As shown in [Figure 5-3](#), press downward on either the Battery A or Battery B contactor lever to start the engine.
 - a. If crank contactor lever A does not engage the starter, repeat using crank contactor lever B.
 - b. Release the contactor lever immediately after the engine starts.


IMPORTANT: If the engine does not start after three attempts, check the fuel supply system. Absence of blue or white exhaust smoke during cranking indicates that no fuel is being delivered.

6. Check that the engine starts and operates at the rated speed.

NOTE: Engine oil pressure must be indicated on the gauge within fifteen seconds after starting.

The engine may be stopped locally by pressing the RESET/STOP button on the FPDP or by holding down the red ENGINE STOP button on the left side of the FPDP.

IMPORTANT: Do not switch to the alternate Electronic Control Module (ECM) while the engine is running.

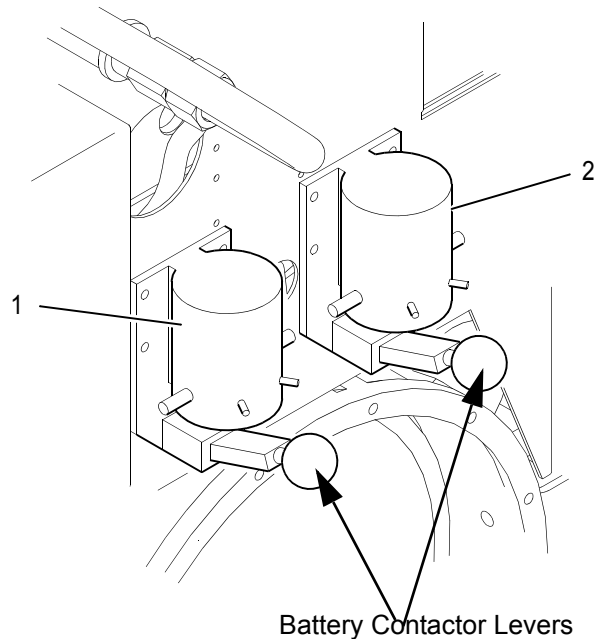

1. Battery A Starter Contactor
2. Battery B Starter Contactor

Figure 5-3 Manual Starter Contactor

5.3 Fire Pump Digital Panel (FPDP) Screens and Adjustments

As shown in [Figure 5-4](#), the FPDP User Interface Screen (main screen) shows the fire pump drive engine tachometer, coolant temperature, oil pressure, Battery A voltage, Battery B voltage, hour meter, and fault codes (when present). The “MORE \wedge V” indicator at the top right of the screen signals the user to toggle the UP or DOWN buttons to switch easily between the FPDP User Interface Screen and the Analog Values Screen (see Section 5.3.6).


NOTE: Electronic engines display J1939 tachometer, engine temperature, and oil pressure. Mechanical engines display parameters via sensors added by Cummins Fire Power.

NOTE: When the key switch is not on, the coolant temperature defaults to “0 °F” (or “-18 °C”) and the oil pressure defaults to “0 PSI” (or “0 kPa”).



Figure 5-4 FPDP User Interface Screen (Typical)

If the operator presses the MENU button from the FPDP User Interface Screen, the Main Menu Screen appears as shown in Figure 5-5.

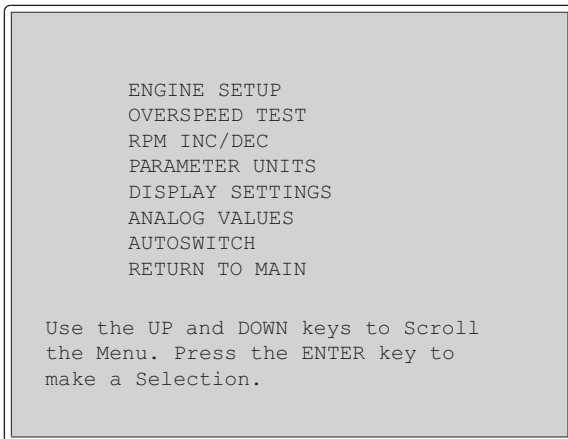

CFP-224

Figure 5-5 Main Menu Screen (Typical)

This list shows the menu options for further operator input and monitoring of engine parameters. To reach any one of these submenu screens, use the UP or DOWN buttons to highlight a desired screen and then press ENTER.

5.3.1 Engine Setup Screen

As shown in Figure 5-6, the Engine Setup screen is password protected and for Cummins Fire Power internal use only.


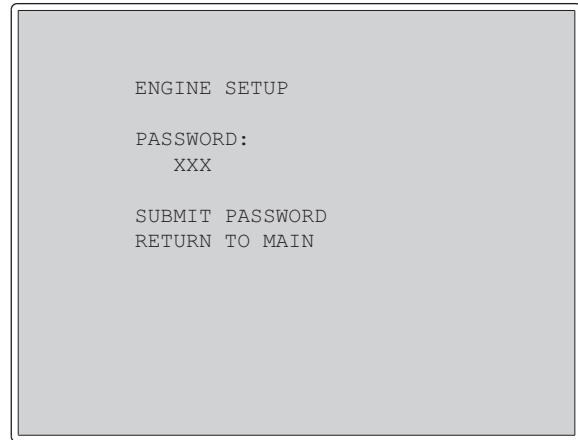


Figure 5-6 Engine Setup Screen (Typical)

5.3.2 Overspeed Test Screen

Figure 5-7 shows the Overspeed Test Screen. To simulate an overspeed for engine speed models above 2250 RPM or for instances when over-pressurizing of sprinkler systems can cause damage:

1. Using the DOWN/UP arrow buttons, toggle down to highlight "SIMULATE OVERSPEED".
2. Press ENTER.

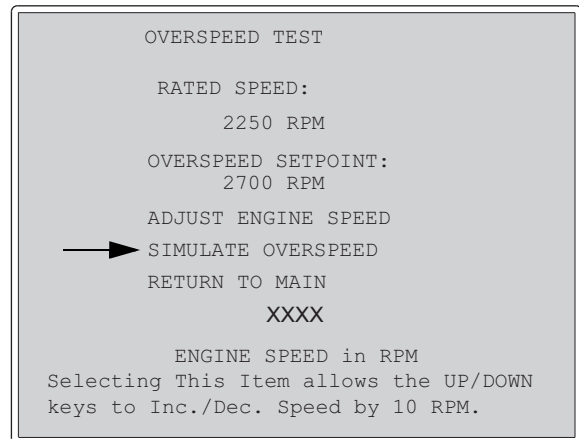


CFP-225

Figure 5-7 Overspeed Test Screen (Example)

Operation

3. A six-second timer will begin a countdown at the bottom of the screen and all buttons will be locked out, except for RESET/STOP.
4. The simulation test temporarily lowers the FPDP overspeed setpoint to below the engine speed. Upon completion of the overspeed simulation, the FPDP reverts back to its previous operating parameters.

The RPM INC/DEC Screen shown in [Figure 5-8](#) allows the operator to make on-site adjustments by incrementing or decrementing the engine operating speed for electronic engines.

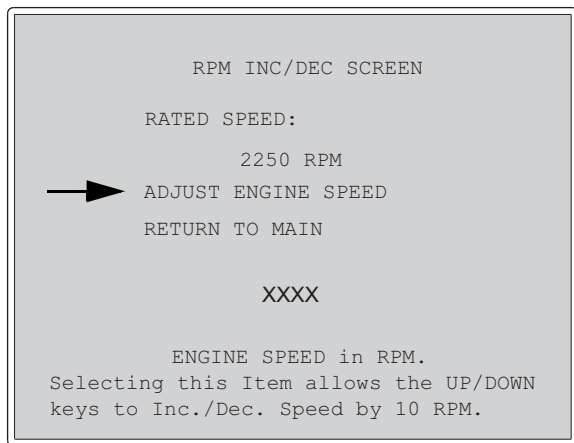

CFP-226

Figure 5-8 Electronic RPM INC/DEC Screen (Typical)

The engine operating speed was factory set during manufacturing and test procedures. If the speed does not match the engine RPM shown on the factory setting plate, follow these steps to adjust the speed setting:

1. Using the DOWN/UP arrow buttons, toggle down to highlight "ADJUST ENGINE SPEED".
2. Press ENTER.
3. Press the UP or DOWN arrow to increment the engine speed to match the field setting plate. Each increment is ten RPMs.

5.3.3 Press ENTER. Parameter Units Screen

The Parameter Units Screen shown in [Figure 5-9](#) allows the operator to select Imperial or Metric units. The default units of measure are degrees in Fahrenheit and pounds per square inch (PSI).


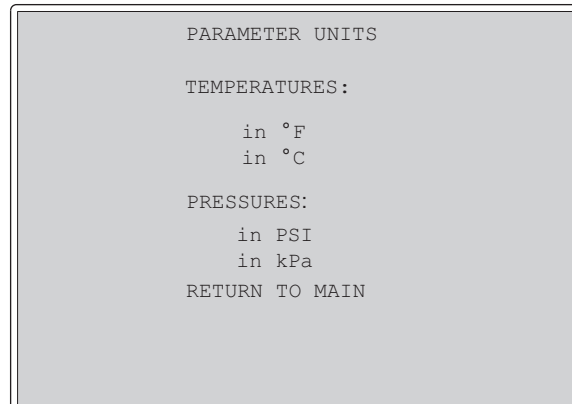


Figure 5-9 Parameter Units Screen (Typical)

5.3.4 Display Settings Screen

The Display Settings Screen (shown in [Figure 5-10](#)) enables adjustments to the backlight and contrast for optimal viewing in varying lighting environments. The version number of the FPDP software will also be indicated on this screen.

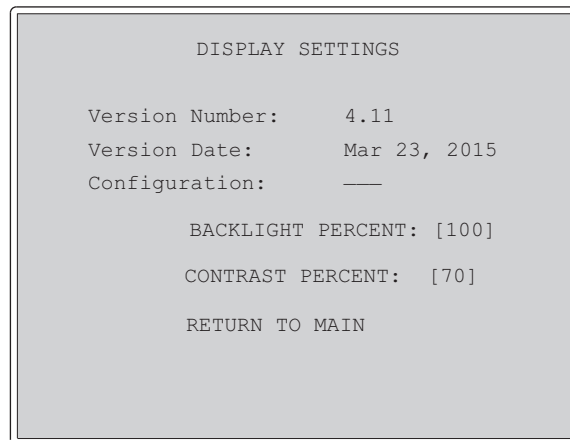

CFP-228

Figure 5-10 Display Settings Screen (Typical)

5.3.5 Analog Values Screen

The Analog Values Screen shown in [Figure 5-11](#) provides analog output values for battery voltages, engine speed, water temperature, oil pressure, exhaust temperature, cooling loop temperature, cooling loop differential pressure, and hours of operation. The Analog Values Screen may be accessed either by toggling down and selecting ANALOG VALUES from the Main Menu Screen ([Figure 5-5](#)) or by using the UP and DOWN buttons from the FPDP User Interface Screen ([Figure 5-4](#)).

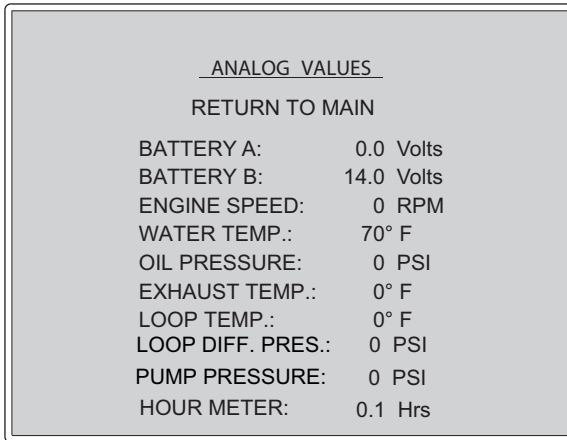


Figure 5-11 Analog Values Screen (Typical)

NOTE: The choice of Metric or Imperial values is made using the Parameter Units screen.

NOTE: For exhaust temperature values less than 93 °C (200 °F) or not monitored, the value will be displayed as 0°. For oil temperature values less than 24 °C (75 °F) or not monitored, the value will be displayed as 0°.

5.3.6 Autoswitch Screen

The National Fire Protection Association (NFPA) 20 Standard, as well as Underwriters Laboratories (UL) and Factory Mutual (FM) Standards, requires redundancy for fire safety systems. If the autoswitch is **enabled** and the selected ECM fails to start, the fire pump drive engine will automatically switch to the other ECM and restart. As shown in [Figure 5-12](#), the Autoswitch Setting Screen allows the operator to disable or enable this autoswitch capability.

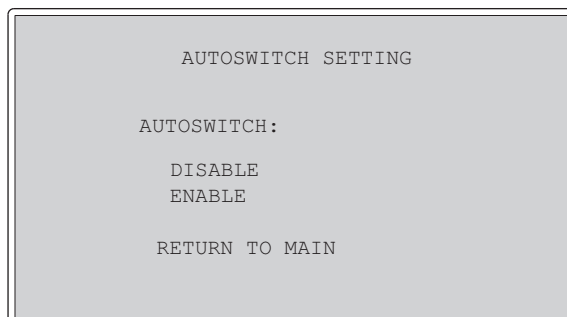


Figure 5-12 Autoswitch Screen (Typical)

5.4 Active Fault Codes Display

Operation irregularities are displayed as fault codes on the bottom of the User Interface Screen of the FPDP (see [Figure 5-13](#)). For a complete listing of Fault Codes and their meanings, see [Section 7 - Troubleshooting](#).

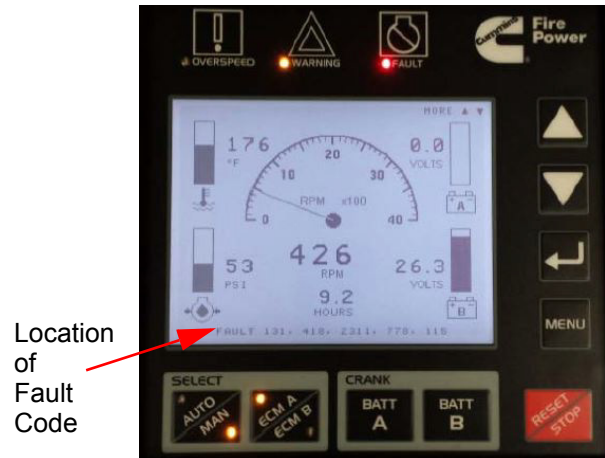


Figure 5-13 Fault Code Display

5.5 Variable Speed Pressure Limiting Control (VSPLC) Adjustments

VSPLC systems are designed to maintain a constant pump discharge pressure by varying the speed of the engine. The FPDP monitors pump discharge pressure with a pressure transducer and commands engine speed accordingly to maintain the pressure set point desired by the user. Pump discharge pressure is displayed on the Analog Values Screen ([Figure 5-11](#)) of the FPDP. As the pump discharge pressure exceeds the set point, the engine will begin to reduce speed (which reduces system pressure) and try to maintain the set point. In the event that the FPDP experiences a loss of the pressure signal, the engine will default to the rated speed.

All associated control loop parameters, including the pressure set point, are password protected such that they are not field adjustable. A Cummins representative must make and approve any changes to the VSPLC driver.

This page is intentionally left blank.



Section 6 - Maintenance

6.1 Introduction

Before performing maintenance procedures, read and understand [Section 1 - Safety](#) of this manual. Improper performance or lack of critical information could result in personal injury or equipment damage.

Cummins encourages our customers to perform maintenance and repairs whenever necessary. However, servicing complex components within the normal warranty period may void the Cummins warranty and any specified warranty extended by the manufacturer of Original Equipment Manufacturer (OEM) products. See the [Warranty Information](#) section at the beginning of this manual.

Maintenance procedures should be performed by skilled technicians who are familiar with the equipment, local regulations, and service procedures for fire pump drive engine and pump systems. Improper maintenance can damage the engine or the fire pump drive engine, or cause severe personal injury.

The National Fire Protection Association (NFPA) 25 Standard outlines the maintenance tests to be performed to validate automatic and manual operational requirements for field acceptance testing.

Cummins recommends that the engine be maintained according to the Cummins Operation and Maintenance Manual for that engine family.

NOTE: *If your engine is equipped with a component or accessory not manufactured by Cummins Inc, refer to the component manufacturer's vendor supplied literature for specific maintenance recommendations.*

6.2 Engine Operation Reports

The engine must always be maintained in top mechanical condition. The maintenance department requires regular running reports to include the following:

- Low engine oil pressure.
- Engine surge.
- Erratic operation or frequent shutdowns.
- Any warning lamps flashing or staying illuminated.
- Abnormal coolant or oil temperature.
- Unusual engine noise or vibration.
- Excessive smoke.
- Excessive use of coolant, fuel, or engine oil.
- Any fluid leaks.
- Loose, worn, or damaged parts.

The weekly running report also helps to make provisions for more extensive maintenance, as the reports indicate the necessity.

The Fault Codes displayed on the Fire Pump Digital Panel (FPDP) assist in recording operation irregularities. See [Section 7 - Troubleshooting](#) for a listing of Fault Codes.

Maintenance Chart

Task	Period	Page
Weekly Maintenance		
6.3.1 General	Weekly	6-4
6.3.2 Air Cleaner Filter and Piping	Weekly	6-4
6.3.3 Cooling System	Weekly	6-4
6.3.4 Engine Oil System	Weekly	6-5
6.3.5 Fuel System	Weekly	6-6
6.3.6 Engine Exhaust System	Weekly	6-6
6.3.7 Electrical Supply and Controls	Weekly	6-6
6.3.8 Crankcase Ventilation Hose	Weekly	6-6
6.3.9 Cooling Water Strainers	Weekly	6-7
6.3.10 Batteries	Weekly	6-7
6.3.11 Engine Test Run	Weekly	6-8
6.3.12 Engine Operation Checks	Weekly	6-8
6.3.13 Engine Coolant Heater	Weekly	6-9
Annual Maintenance		
6.4.1 Electrical Components	Annually	6-9
6.4.2 Turbocharger Mounting Nuts	Annually	6-9
6.4.3 Engine Supports	Annually	6-10
6.4.4 Fuel Pumps and Filters	per Cummins Engine Operation and Maintenance Manual	6-10
6.4.5 Engine Oil and Filter	per Cummins Engine Operation and Maintenance Manual	6-11
6.4.6 Drive Shaft	Annually	6-12
6.4.7 Coolant Pump/Alternator Belt	Annually	6-12
6.4.8 Raw Water Zinc Anode	Annually	6-13
6.4.9 Heat Exchanger	Annually	6-13
6.4.10 Turbocharger	Annually	6-14
Every 2 Years or 2000 Hours		
6.5.1 Coolant Pump	2 Years	6-14
6.5.2 Cooling System	2 Years	6-14
Every 4 Years or 5000 Hours		
6.6.1 Coolant Thermostat Removal/Installation	4 Years	6-17
6.6.2 Coolant Pump/Alternator Belt Replacement	4 Years	6-17
6.6.3 Charge Air Cooler (CAC) Heat Exchanger	4 Years	6-18

NOTE: All maintenance and inspections intervals are accumulative. When performing annual maintenance, also perform maintenance listed under daily, weekly, monthly, and three month intervals.

Maintenance Record Form

Table 6-1.

Engine Serial Number:			Engine Model:		
Owner's Name:			Equipment Name/Number:		
Date	Hours or Time Interval	Actual Hours	Check Performance	Performed By	Comments

Maintenance

6.3 Weekly Maintenance

When the engine is running, be alert for mechanical problems that could create unsafe or hazardous conditions.

6.3.1 General

Each week, a general walk-around inspection should include the following areas:

1. Check fluid levels before starting the engine. Check oil pressure and coolant temperatures frequently. Most engine problems give an early warning.
2. Look and listen for changes in engine performance, sound, or appearance that will indicate that service or repair is needed. Be alert for misfires, vibration, excessive exhaust smoke, loss of power, or increases in oil or fuel consumption.
3. Check the engine appearance for excessive heat, wiring short circuits, excessive end-play, vibrations, excessive wear, excessive abrasion, damaged electrical wiring, or loose electrical wiring.
4. Check the engine for odors of diesel fuel, burning rubber, electrical system failure, exhaust fumes, or smoke.



WARNING

Engine fuel is highly flammable and represents an extreme hazard for fire or explosion when exposed to electrical sparks or open flame. Clean up spilled fuel immediately. Keep sources of electrical spark or open flame away from a fuel source.

6.3.2 Air Cleaner Filter and Piping

The frequency of cleaning or replacing the air cleaner filter element is determined by the conditions in which the engine operates. On a weekly basis, perform the following inspections:

1. Visually inspect the air intake filter and piping daily for blockage, damage to piping, loose clamps, or punctures that can allow debris to enter the engine. If there is a blockage, the service indicator will be activated. Refer to [Figure 2-2](#).

NOTE: Turbocharged engines must be operated at rated revolutions per minute (RPM) and full load to check maximum intake air restriction.

NOTE: Cummins recommends using an air cleaner filter element as listed on the [Engine Data Sheet in Section 8 - Component Parts and Assemblies](#).



CAUTION

Never operate the engine without an air cleaner. Intake air must be filtered to prevent dirt and debris from entering the engine and causing premature wear. Dirt or foreign objects could cause engine damage.

- a. If the red indicator flag is at the raised position in the window, clean or replace the air filter per the manufacturer's recommendation as required. Do not remove the felt washer from the indicator. The felt washer absorbs moisture.
- b. After the air cleaner has been serviced, push the flag in to reset the service indicator.

IMPORTANT: See the [Engine Data Sheet in Section 8 - Component Parts and Assemblies](#) for maximum intake air restriction.

2. Check for corrosion under the clamps and hoses of the intake system piping. Corrosion can allow corrosive products and dirt to enter the intake system. Disassemble and clean as required.
3. Replace any damaged air filter or hoses and tighten loose clamps, as necessary, to prevent the air system from leaking. Torque hose clamps to the recommended torque value. Refer to the torque chart in [Section 8 - Component Parts and Assemblies](#).

6.3.3 Cooling System



CAUTION

Do not remove a coolant pressure/fill cap from a hot engine. Shut down the engine and wait until the coolant temperature is below 50 °C (120 °F) before removing the pressure cap. Heated coolant spray or steam can cause severe personal injury.

On a weekly basis, perform the following inspections on the cooling system:

1. Inspect the cooling water piping, coolant heat exchanger tanks, charge air cooling system, engine coolant hoses, and hose clamps for loose fittings, leaks, damage, and corrosion.
 - a. Tighten the hose clamps as necessary.
 - b. Check for cracks, holes, or other damage. Repair or replace as necessary.

CAUTION

Never use a sealing additive to stop leaks in the cooling system. This can result in cooling system plugging and inadequate coolant flow, causing the engine to overheat.

2. With the coolant expansion tank at ambient temperature, press down, unscrew, and remove the pressure cap as shown in [Figure 2-1](#).
 - a. Ensure that the coolant level is visible by checking the coolant level sight gauge.
 - b. Add coolant, as required. **DO NOT OVER-FILL!**

NOTE: Supplemental engine coolant should be a mixture of 50% ethylene glycol antifreeze and 50% water to avoid engine damage.

3. Check the antifreeze concentration at least six times a year or whenever coolant is added to the cooling system by using a refractometer.
4. Drain a small amount of coolant from the return line petcock and inspect the coolant for excessive rust or particulate matter. Change the coolant more frequently if particles are present.

CAUTION

Do not mix coolant brands or chemical solutions, as this could damage the cooling system. Keep a record of the coolant concentration and manufacturer with the engine maintenance records.

5. Check for soft, overly-pliant hoses, oxidation, and loose hose clamps. Torque hose clamps to the recommended torque value. Refer to the torque chart in [Section 8 - Component Parts and](#)

[Assemblies](#). Replace damaged hoses and clamps as required.

6. Check the heat exchanger for leaks, damage, and dirt buildup. Clean and repair as required.


6.3.4 Engine Oil System

WARNING

Perform the specific checks in this section only after the engine is fully stopped. Unless tests require engine operation, disconnect the battery leads from the batteries (negative terminal first). Contact with exposed or moving components can cause severe personal injury.

Inspect the engine oil system on a weekly basis following these steps:

1. For accurate dipstick readings, shut off the engine and wait approximately ten minutes to allow the oil in the upper portions of the engine to drain back into the crankcase.
2. As shown in [Figure 6-1](#), check the oil level at the engine dipstick.

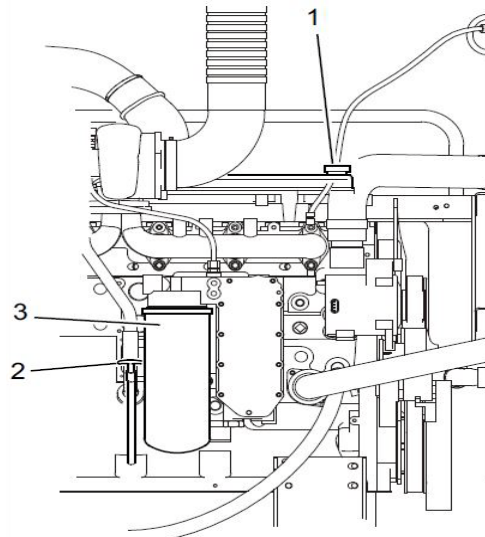

CFP-046

1. Oil Fill Port (on valve cover)
2. Oil Level Dipstick
3. Engine Oil Filter

Figure 6-1 Oil Level Dipstick

- a. If the oil level is greater than the high mark (H), drain the excess oil and recheck the level.

Maintenance

- b. If the oil level is consistently below normal after a fill, check for leaks, loose or damaged gaskets, or oil in the coolant system. If the oil level is below the low mark (L), add the equivalent type oil.

NOTE: Cummins recommends using Premium Blue S.A.E. 15W-40 Multi-viscosity Lubricating Oil or equivalent.

6.3.5 Fuel System



WARNING

Engine fuel is highly flammable and represents an extreme hazard for fire or explosion when exposed to electrical sparks or open flame. Clean up spilled fuel immediately. Keep sources of electrical spark or open flame away from a fuel source.

To inspect the fuel system:

1. Shut off the engine.
2. Inspect the fuel supply line, return line, filter and fittings for cracks or abrasions.
 - a. Ensure the lines are not rubbing against anything that could damage the fuel system hoses. Repair any leaks or alter line routing to eliminate wear immediately.
 - b. Relieve fuel line pressure by carefully loosening the fuel inlet line.

NOTE: Refer to the [Engine Data Sheet in Section 8 - Component Parts and Assemblies](#) for Cummins recommended replacement components.

6.3.6 Engine Exhaust System

With the engine operating, inspect the entire exhaust system: exhaust manifold, exhaust flex pipe, muffler, and piping.

Check for leaks at all connections, welds, gaskets, and joints. Make sure that the exhaust pipes are not heating surrounding areas excessively. Repair any leaks immediately.

6.3.7 Electrical Supply and Controls

Check the terminals on the starting batteries for clean and tight connections. Loose or corroded connections create resistance which can hinder starting. Inspect the FPDP harness connections to be sure they are secure.

6.3.8 Crankcase Ventilation Hose

Inspect the crankcase ventilation hose for wear, damage, sludge, blockage, or dirt buildup (refer to [Figure 2-1](#)). Clean the ventilation hose, if obstructed or blocked. Replace a worn or damaged hose.

6.3.9 Cooling Water Strainers


As shown in [Figure 6-2](#), the (two) cooling water strainers should be cleaned weekly to remove sediment.

To clean the normal line strainer, ensure that the normal line valves are closed and the bypass line valves are open.

To clean the bypass line strainer, ensure that the bypass line valves are closed and the normal line valves are open.

For each cooling water strainer:

1. Remove the plug.
2. Inspect and remove any debris.
3. Install the strainer plugs.
4. When finished, open the normal line valves and close the bypass line valves for normal operation.

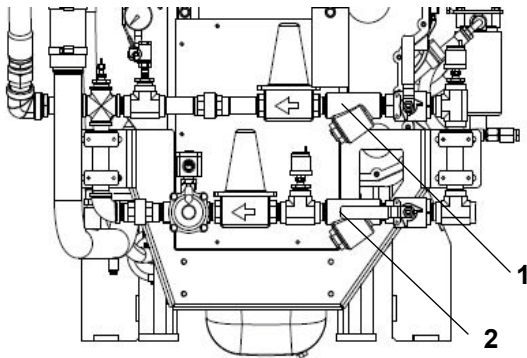

1. Bypass Water Line Strainer
2. Normal Water Line Strainer

Figure 6-2 Cooling Water Strainer (typical)

6.3.10 Batteries

CAUTION

Batteries can emit explosive gases during charging. To reduce the possibility of personal injury, always ventilate the battery compartment before servicing the batteries.

CAUTION

To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

For proper weekly maintenance of the batteries:

1. Keep the batteries clean by wiping them with a damp cloth whenever dirt appears excessive.
2. Use a battery hydrometer to check the specific gravity of the electrolyte in each battery cell. A fully-charged battery will have a specific gravity of 1.260. Charge the battery if the specific gravity reading is below 1.215.
3. Check the battery wiring and cable connections for loose, corroded, worn, or damaged cables. Check both connectors at the alternator, battery connections, and engine grounding lug (near the starter motor).

- a. If the battery cables are corroded, remove the battery cable clamps, starting with the negative (-) battery cable.
- b. Use a fine emery cloth or a wire brush to clean the cable clamps and battery cables. The metal should be shiny.
- c. Wash the battery terminals with a solution of baking soda and water (2 oz (1/4 cup) baking soda to 0.94 liter (1 qt) of water).
- d. Be careful to prevent the solution from entering the battery cells, and flush the batteries with clean water when done.
- e. After cleaning the connections, coat the terminals with a light application of petroleum jelly.
- f. Reinstall and tighten the cable clamps.

WARNING

Battery electrolyte (sulfuric acid) is highly caustic and can burn clothing and skin, or cause blindness. Wear protective clothing, impervious neoprene gloves, safety goggles, or full-face shield when working with the batteries.

4. Check the electrolyte level in the batteries monthly. If low, fill the battery cells to the bottom of the filler neck with distilled water.
5. Check for continuity between terminals using a digital multimeter or other test equipment. Also check the insulation resistance to ground. Correct any electrical faults.
6. Reinstall the battery cables; attach the negative (-) battery cable last.

6.3.11 Engine Test Run

Start the engine at least once a week for a minimum of thirty minutes with as much load as possible. Periods of no-load operation should be held to a minimum, because unburned fuel tends to accumulate in the exhaust system. Refer to the operating instructions in [Section 5 - Operation](#).

Check that the engine starts and operates at the recommended fire pump drive engine speed specification and inspect the following:

Maintenance

1. Check that the engine oil pressure is indicated on the gauge within fifteen seconds after starting.
2. Check that the engine has attained a normal running temperature after running the engine for a minimum of thirty minutes.
3. Observe that the engine is operating at the proper operating speed. (If the engine is not operating at the proper speed, see Section [6.3.12 Engine Operation Checks](#).)
4. Check for unusual engine noise. Listen for any unusual engine noise which can indicate that service is required.
5. Ensure that the oil pressure is greater than 69 kPa (10 psi).
6. Check that the coolant temperature is between 70 °C (158 °F) and 107 °C (225 °F).
7. Check that both battery voltmeters indicate 12 VDC for standard or 24 VDC for optional operating systems.
8. Check that the air filter service indicator has not popped-up, indicating an air filter blockage. Replace the air filter as required.

End the test run by pressing and holding the over-speed RESET/STOP switch until the engine stops.

6.3.12 Engine Operation Checks

The following service inspections ensure that the engine starts and operates properly under normal conditions.



WARNING

Before equipment operation, ALL guards, covers, and protective devices MUST BE in place and securely fastened. Serious personal injury could result from contact with exposed or moving components.

6.3.12.1 Crank Termination Set Point

The speed switch crank termination set point is factory-set at 600 RPM and should not be changed from this value.

6.3.12.2 Engine Speed Calibration

If the speed does not match the engine RPM shown on the factory settings plate, calibrate the correct speed using the controls on the FPDP:

1. Set the ECM to “ECM A”.
2. Start the engine locally from the FPDP:
 - a. Press the AUTO/MAN mode switch on the FPDP to place the engine in MANUAL mode.
 - b. Press either the CRANK BATT A or CRANK BATT B button to start the engine.
3. Check to verify that the engine starts and accelerates to the speed set point listed on the factory settings plate.
4. Monitor the engine speed on the tachometer. Record the observed engine speed.
5. If the speed does not match the engine RPM shown on the factory setting plate, follow these steps to adjust the speed setting:
 - a. As shown in [Figure 6-3](#), using the DOWN/UP arrow buttons, toggle down to highlight “ADJUST ENGINE SPEED”.
 - b. Press ENTER.
 - c. Press the UP or DOWN arrow to increment the engine speed to match the field setting plate. Each increment is ten RPMs.

NOTE: Press ENTER. *This screen appears but does not function for mechanical engines.*

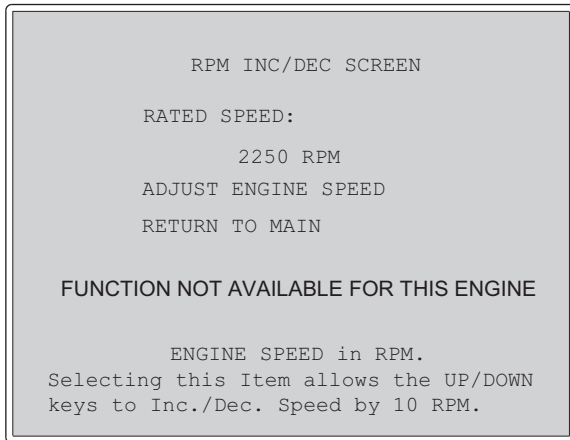


Figure 6-3 RPM INC/DEC Screen (Typical)

6. Stop the engine.
7. Start the engine.
8. Observe that the engine starts and accelerates to the rated speed set point.
9. The engine speed set point calibration is required for both the ECM A and ECM B subsystems.
10. Repeat steps 2 through 6 while the ECM selector switch is set to "ECM B".

IMPORTANT: *Never switch from ECM A to ECM B while the engine is running.*

6.3.13 Engine Coolant Heater

NOTE: *Perform this inspection procedure twenty-four hours after shutting off the engine.*

The engine coolant heater must maintain an engine coolant temperature of 49 °C (120 °F) or above. The engine block must be warm to the touch in the water jacket areas (see [Figure 2-2](#)).

If the heater does not appear to be working correctly, contact a Cummins Authorized Repair Location.

6.4 Annual Maintenance

All checks or inspections listed under previous maintenance intervals must also be performed at the time of the annual maintenance, in addition to those listed *only* under the annual maintenance interval.

6.4.1 Electrical Components



CAUTION

AVOID SERVICING complex components such as: printed circuit boards, programmable controllers, and ECMs not specifically authorized by Cummins Inc. Contact a Cummins Authorized Repair Location before performing any extensive maintenance.



CAUTION

To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

The electrical components of the fire pump drive engine must be thoroughly inspected on an annual basis. Remove the battery terminal cables, starting with the negative (-) cable first and check the following:


1. Inspect the electrical wiring harness, electrical terminal connections, and electrical plug-ins for secure, clean electrical contacts, worn or damaged insulation, burnt wires, broken wires, and loose connections (see [Figure 2-1](#)).
 - a. Clean and tighten any loose electrical connections.
 - b. Repair or replace worn, damaged, burnt, or poorly insulated wiring immediately. Refer to [Section 8 - Component Parts and Assemblies](#).

IMPORTANT: *Refer to the vendor-supplied literature for recommended maintenance procedures.*

2. Inspect the function of all gauges, voltmeters, switches, and warning lamps on the FPDP. Replace the FPDP if any are not functioning properly.
3. Reinstall the battery cables; attach the negative (-) battery cable last.

6.4.2 Turbocharger Mounting Nuts

As shown in [Figure 6-4](#), check the turbocharger mounting nuts and torque the mounting nuts to the recommended torque value as specified in [Section 8 - Component Parts and Assemblies](#).

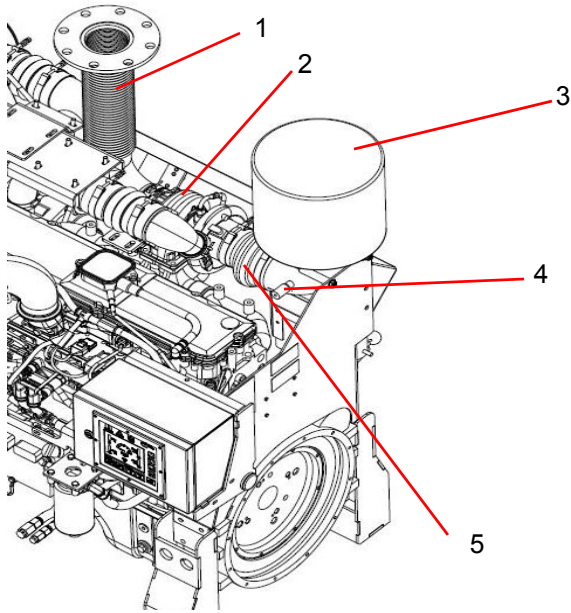

1. Exhaust Flex Connection
2. Turbocharger
3. Air Cleaner/Filter
4. Service Indicator
5. Air Cleaner Piping

Figure 6-4 Turbocharger (typical)

6.4.3 Engine Supports

CAUTION

Loose engine mount bolts or damaged brackets can cause engine misalignment or excessive vibration. These conditions can cause engine or pump damage.

Refer to [Figure 2-1](#) for the location of the engine supports and inspect all engine supports for cracks or loose hardware. Check the torque on the engine support mounting capscrews. Torque the engine support mounting cap screws to the support bracket. Refer to the torque table in [Section 8 - Component Parts and Assemblies](#) for recommended torque values.

6.4.4 Fuel Pumps and Filters

As shown in [Figure 6-5](#), inspect the fuel injection pump mounting nuts (including the support bracket) for loose or damaged hardware. Inspect the fuel line hoses and fuel filters for wear, damage, loose fittings, and leaks. Repair or replace damaged hoses and filters as required.

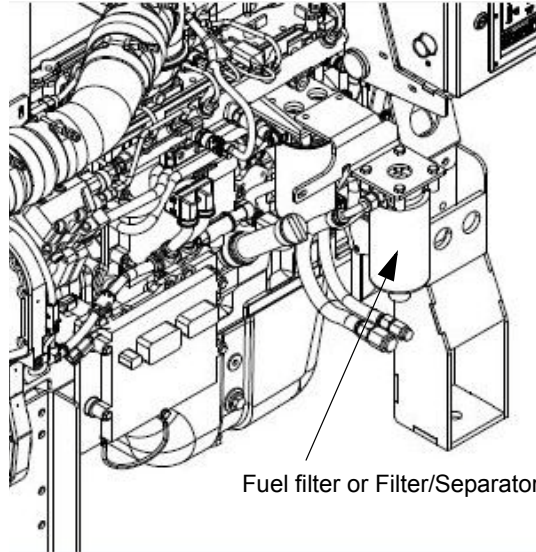


Figure 6-5 Fuel Pumps (typical)

WARNING

Engine fuel is highly flammable and represents an extreme hazard for fire or explosion when exposed to electrical sparks or open flame. Clean up spilled fuel immediately. Keep sources of electrical spark or open flame away from a fuel source.

WARNING

Do not open the fuel filter/water separator drain valve or dismantle the fuel lines on the high-pressure fuel system with the engine running. High pressure fuel spray from an operating engine can cause serious personal injury or fire hazard.

To change the fuel filters:

1. Shut off the engine.
2. Close any fuel valves (if equipped) to prevent fuel from draining or siphoning.
3. Clean the area around the fuel filter or fuel/water separator heads.

NOTE: Refer to the [Engine Data Sheet](#) in [Section 8 - Component Parts and Assemblies](#) for filter replacement recommendations.

4. Remove the spent filter canisters using a filter wrench.

5. Clean the filter mounting head surfaces of sludge buildup and foreign particles. Ensure mating gasket surfaces are clean.
6. Lubricate the gasket seals with clean SAE 15W-40 lubricating oil.
7. Center the filter ring on the threaded mounting nipple. Screw the filter canister onto the mounting flange until the gasket is snug against the mounting flange, then tighten an additional 1/4 turn.
8. Open the fuel supply valves (if equipped).

CAUTION

Mechanical over-tightening can distort the threads or damage the filter element seal.

9. Press either the CRANK BATT A or CRANK BATT B button to start the engine to allow the fuel to flow through the system.
10. Depress the contactor switch for up to fifteen seconds or until the engine starts. Repeat up to three times, if necessary.

CAUTION

To prevent damage to the starter, do not engage the starting motor more than fifteen seconds. Wait fifteen seconds between each start attempt.

IMPORTANT: *If the engine does not start after three attempts, check the fuel supply system. Absence of blue or white exhaust smoke during cranking indicates no fuel is being delivered.*

NOTE: *Engines used in fire pumps or standby service are expected to immediately accelerate from crank to full load.*

6.4.5 Engine Oil and Filter

Engine oil becomes contaminated and essential oil additives are depleted with use. The amount of contamination is related to the total amount of fuel and oil consumed. Change the oil at least once annually.

NOTE: *For composite oil pans, always use a new sealing washer on the oil drain plug. Hold the external locking nut in place while tightening the oil drain plug.*

IMPORTANT: *If the engine oil is drained from the oil pan to make an engine repair, new oil must be used.*


WARNING

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin. Some state and federal agencies have determined that used engine oil can be carcinogenic. Prolonged, repeated contact can cause skin disorders or other bodily injury. Wash thoroughly after contact. Avoid inhalation of vapors and ingestion of used engine oil. Dispose of the oil in accordance with local environmental regulations.

To change the oil and filter to remove the contaminants suspended in the oil:

1. Operate the engine until the coolant temperature reaches 70 °C (158 °F). Shut the engine off.
2. Place an appropriate container under the oil pan drain plug. Refer to the [Engine Data Sheet](#) in [Section 8 - Component Parts and Assemblies](#) for oil pan capacity.
3. Remove the oil drain plug and drain the oil immediately to make sure all the oil and suspended contaminants are removed from the engine.
4. Remove the oil filter (see [Figure 6-6](#)) following these steps:
 - a. Clean the area around the engine oil filter canister. Use a filter wrench to remove the filter.
 - b. Remove and discard the O-ring seal if it has remained attached to the mounting flange. Clean the filter mounting flange with a clean lint-free cloth.
 - c. Apply a light film of 15W-40 lubricating oil to the replacement filter gasket before installing the filter.
5. Fill the oil filter with a high-quality 15W-40 multi-viscosity lubricating oil, such as Premium Blue[®], or its equivalent.

Maintenance

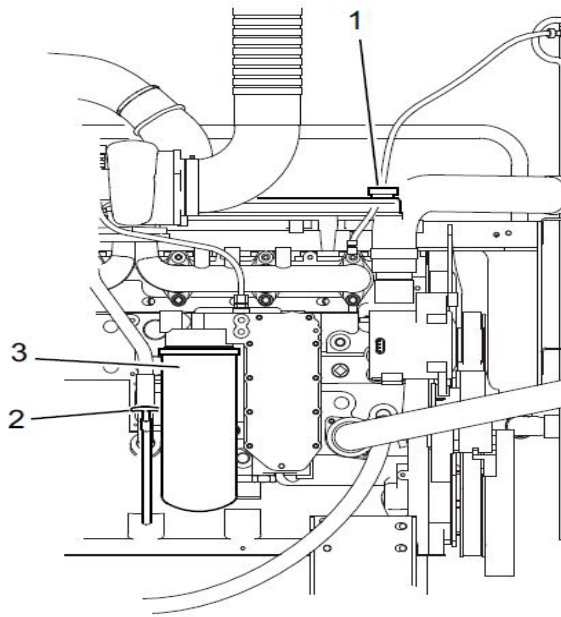

1. Oil Fill Port (on valve cover)
2. Oil Level Dipstick
3. Engine Oil Filter

Figure 6-6 Oil Filter and Oil Level Dipstick (Typical)

6. Center the filter ring on the threaded mounting nipple. Screw the filter canister onto the mounting flange until the gasket is snug against the mounting flange. Then tighten an additional 1/4 turn.

CAUTION

Mechanical over-tightening can distort the threads or damage the filter element seal.

NOTE: Cummins recommends using oil filter replacement parts as outlined in the [Engine Data Sheet in Section 8 - Component Parts and Assemblies](#).

7. Check and clean the oil pan drain plug threads and sealing surface. Install the oil pan drain plug. Torque the plug according to the Torque Chart in [Section 8 - Component Parts and Assemblies](#).
8. Fill the engine to the proper level with clean, high quality 15W-40 oil at the fill port.

CAUTION

If no oil pressure is noted within fifteen seconds after the engine is started, shut down the engine to reduce the possibility of internal damage.

9. Restart the engine and let it run for approximately one to two minutes.
10. Stop the engine.
11. Wait approximately fifteen minutes to let the oil drain from the upper parts of the engine.
12. Check the oil level again. Add oil as necessary to bring the oil level to the H (high) mark on the dipstick.

6.4.6 Drive Shaft

It is recommended that proper lubrication to drive shafts be completed on a regular schedule according to these steps:

1. Remove the drive shaft guards.
2. Wipe the grease fittings and grease gun nozzle with a clean cloth to avoid contamination.
3. Add grease to the drive shaft universal joint grease fittings (see [Figure 3-2](#)).
4. Wipe excess grease from the grease fittings.


NOTE: Cummins Inc recommends using a good quality semi-synthetic, molybdenum-fortified NLGI #2 lithium complex grease which protects from -47 to 204 °C (-54 to 400 °F).

6.4.7 Coolant Pump/Alternator Belt

On some engine models, the pump and alternator belt drives both the pump and alternator.

To inspect the coolant pump and the alternator belt:

1. Press the AUTO/MAN button on the FPDP to place the fire pump drive engine in MANUAL operation.
2. Disconnect both batteries at their terminals. Remove the negative (-) cable first.
3. Remove the belt guard capscrews and the belt guard. Set aside for re-installation (see [Figure 6-7](#)).

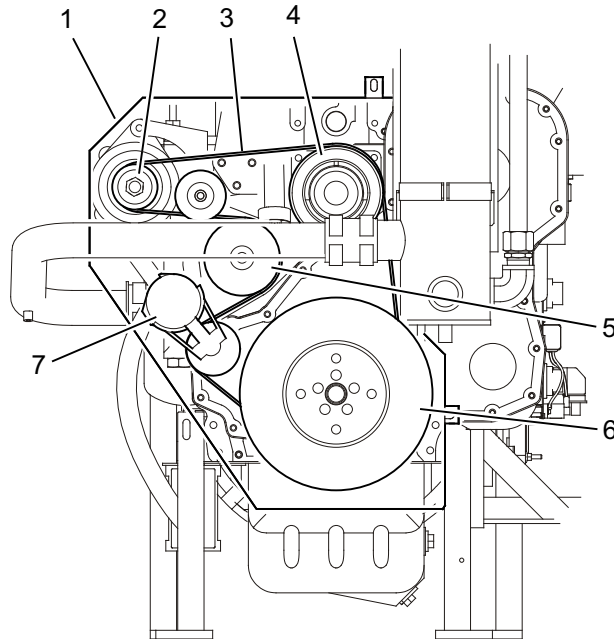

1. Belt Guard
2. Alternator Pulley
3. Drive Belt
4. Idler Pulley
5. Coolant Pump Pulley
6. Balancer Pulley
7. Belt Tensioner

Figure 6-7 Coolant Pump/Alternator Belt (typical)

4. Visually inspect the belt for frayed, worn, missing pieces, or cracked belt surfaces. Check the belt for intersecting cracks.

CAUTION

Belt damage can be caused by: incorrect tension, incorrect size or length, pulley misalignment, incorrect installation, severe operating environment, and/or oil or grease on the belt or pulley.

NOTE: Transverse cracks (across the belt width) are acceptable. Longitudinal cracks (direction of belt length) that intersect with transverse cracks are not acceptable. Replace the belt if it is cracked, frayed, or damaged.

5. If the belt condition is acceptable, check the belt tension. There are two ways to check the belt condition:

NOTE: Belts with glazed or shiny surfaces indicate belt slippage. Correctly installed and tensioned belts will show even pulley and belt wear.

CAUTION

Disconnect the batteries (negative cable first) before performing service on the fire pump drive engine or on any of its controls.

- a. Use the Cummins belt tension gauge (Part Number 3822524) to measure the drive belt tension in the center span of the belt between the idler and alternator pulleys. Ensure that the belt tension is set to the specifications outlined in the Engine Operation Manual.
 - b. Use the deflection method and measure the belt tension in the center span of the belt between the alternator and idler pulleys. If the belt deflection is more than one belt thickness per foot of pulley center-to-center distance, adjust the belt tension.
6. Reinstall the battery cables; attach the negative (-) battery cable last.

6.4.8 Raw Water Zinc Anode

The zinc anode (see [Figure 6-8](#)) acts as a raw water filter and must be checked for erosion and replaced, when necessary. If the anode has eroded more than fifty percent, it must be replaced.

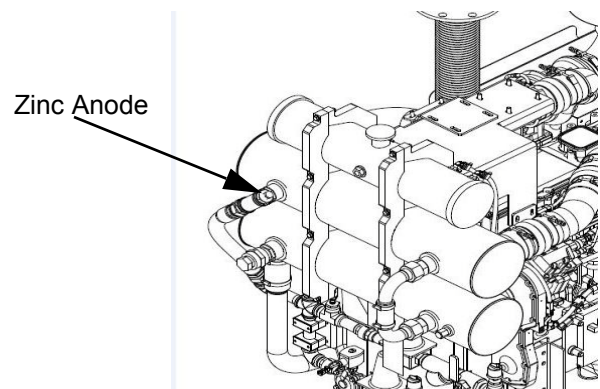


Figure 6-8 Raw Water Zinc Anode (typical)

6.4.9 Heat Exchanger

If internal leakage in the heat exchanger is suspected, a heat exchanger pressure test may be performed prior to removal from the engine.

Maintenance

NOTE: Use Teflon™ tape or other pipe sealant when installing the test setup in order to prevent leaks.

NOTE: The size of fittings required on the water outlets and inlets are listed on the [Engine Data Sheet](#) in [Section 8 - Component Parts and Assemblies](#).

To test the heat exchanger pressure:

1. Install an adapter at the cooling water outlet of the heat exchanger.
2. Install a pressure test setup with 689 kPa (100 psi) pressure gauge at the cooling water inlet to the heat exchanger.
3. Apply air pressure at 414 kPa (60 psi).
 - a. Isolate the pressure source and monitor the pressure gauge for five minutes.
 - b. There should be no change in pressure for the duration of the test.
4. After testing, release the pressure. Remove the tubing adapters, plug, and test equipment.
5. If leakage is detected, the heat exchanger must be replaced.

6.4.10 Turbocharger

As shown in [Figure 6-4](#), follow these steps to thoroughly inspect the turbocharger:

1. Visually inspect the air intake filter and piping according to the steps outlined in [Section 6.3.2](#).

NOTE: Turbocharged engines must be operated at rated revolutions per minute (RPM) and full load to check maximum intake air restriction.

NOTE: Cummins recommends using an air cleaner filter element as listed on the [Engine Data Sheet](#) in [Section 8 - Component Parts and Assemblies](#).

CAUTION

Never operate the engine without an air cleaner. Intake air must be filtered to prevent dirt and debris from entering the engine and causing premature wear. Dirt or foreign objects could cause engine damage.

2. Remove the air intake and exhaust piping from the turbocharger.
3. Inspect the turbocharger turbine wheel for cracks in the housing or turbine blades, missing blades, mechanical binding, eccentric motion, or excessive end-play.
4. Replace the turbocharger if damage, excessive end-play, binding, wear, or eccentric motion is found. Contact a Cummins Authorized Repair Location for replacement.

IMPORTANT: The turbocharger must be removed for replacement or rebuild if the clearance is beyond the limits, the housing is cracked, or the turbine wheel is damaged.

5. Reinstall the air intake filter and exhaust piping. Tighten the clamps. Torque loosened clamps to the recommended torque value. Refer to the torque table in [Section 8 - Component Parts and Assemblies](#).

6.5 Every Two Years

All checks or inspections listed under daily or previous maintenance intervals must also be performed at this time, in addition to those listed under this maintenance interval.

6.5.1 Coolant Pump

Inspect the coolant pump for eccentric motion, mechanical binding, excessive end play, seal damage, and excessive grease or coolant leakage around the pump shaft.

Replace with a new or rebuilt pre-lubricated unit, as necessary. Contact a Cummins Authorized Repair Location for replacement.

6.5.2 Cooling System

[Figure 6-9](#) illustrates the cooling system. The cooling system must be clean to work properly. If the system shows excessive mineral buildup, particulate matter, scale, oxidation, or oil contamination, drain and flush the cooling system. If the coolant is excessively dirty or is mixed with oil, contact a Cummins Authorized Repair Facility.

WARNING

Do not remove the pressure/fill cap from a hot engine. Shut down the engine and wait until the

coolant temperature is below 50 °C (120 °F) before removing the pressure cap. Heated coolant spray or steam can cause severe personal injury.


1. Press the AUTO/MAN button on the FPDP to place the fire pump drive engine in MANUAL operation.
2. Disconnect both batteries at their terminals. Remove the negative (-) cable first.
3. Press down, unscrew, and remove the coolant expansion tank pressure/fill cap. The cap must be removed to allow air to vent the cooling system during the draining process.
4. Disconnect the engine coolant heater power supply before draining the cooling system.
5. Place a container that will hold at least 57 liters (15 gal) of liquid under the coolant drain valve.
6. Ensure that the coolant filter shut-off valves are OPEN.
7. Open the drain petcock on the lower coolant tube, allowing the coolant to drain into the waste container.
8. When the system is empty, move the container under the engine coolant heater.
9. Disconnect either end of the engine heater coolant hose and drain the engine heater.

CAUTION

Coolant is toxic. Avoid prolonged and repeated skin contact with used antifreeze - wash thoroughly after contact. Prolonged, repeated contact can cause skin disorders. Dispose of waste antifreeze in accordance with local environmental regulations.

10. Flush with clean fresh water or heavy-duty heat exchanger cleaner. Follow the manufacturer's directions on the product container.

NOTE: Some cooling system cleaners or commercial solvents require a soapy water rinse after use. Follow the directions on the cleaning solution or solvent.

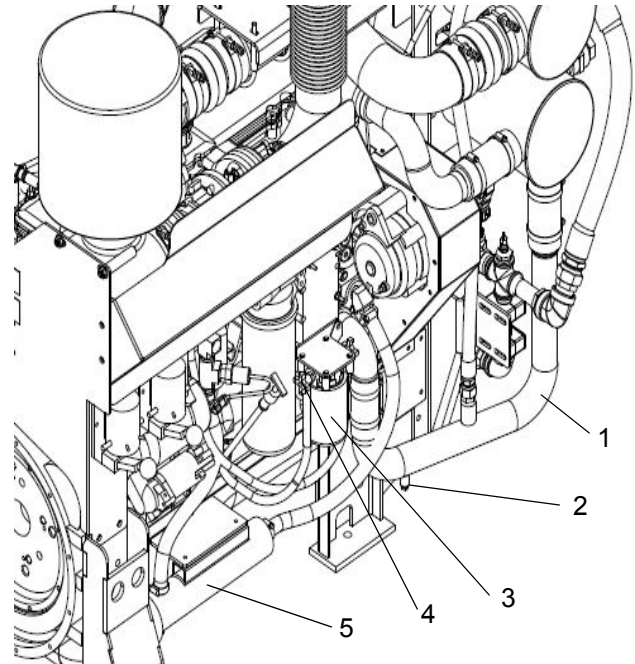

1. Lower Coolant Tube
2. Coolant Drain Petcock
3. Coolant Filter
4. Coolant Filter Shut-off Valve
5. Engine Coolant Heater

Figure 6-9 Engine Coolant Drain

CAUTION

Over-concentration of antifreeze or use of high-silicate antifreeze can damage the engine. Do not use more than 50% antifreeze in the mixture unless additional freeze protection is required. Antifreeze at 68% concentration provides the maximum freeze protection, and must never be exceeded under any condition. Antifreeze protection decreases above 68%.

11. When the flushing water has fully drained, use a filter wrench to remove the water coolant filter from the filter housing.
 - a. Clean the filter housing gasket mount of dirt buildup, oxidation, or particulate matter with a clean cloth.
 - b. Coat the replacement filter gasket with a light coating of 15W-40 lubrication oil.
12. Center the filter ring on the threaded mounting nipple. Screw the filter canister onto the mounting flange until the gasket is snug against the

Maintenance

mounting flange, then tighten an additional 1/4 turn. If using a soapy water solution, flush again with clear water. Allow time for the water to fully drain.

CAUTION

Mechanical over-tightening can distort the threads or damage the filter element seal.

NOTE: Recommendations on filter replacements and fill rates can be found on the [Engine Data Sheet in Section 8 - Component Parts and Assemblies](#).

13. Reconnect the engine heater coolant hose and close the drain petcock on the lower coolant tube.

NOTE: During filling, air must be vented from the engine coolant passages. The air vents through the coolant filler port. The fill rate can be found in the [Engine Data Sheet in Section 8 - Component Parts and Assemblies](#).

14. Fill the coolant tanks with the proper antifreeze. Use a mixture of 50% water and 50% ethylene-glycol base or propylene-glycol antifreeze (or pre-mixed solution) to protect the engine to -37 °C (-34 °F) year-around.

CAUTION

Use soft or distilled water in the coolant mixture. Contaminants in hard water neutralize the corrosion inhibitor components. Water must not exceed 300-ppm hardness or contain more than 100 ppm of either chloride or sulfate.

CAUTION

Never use a sealing additive to stop leaks in the cooling system. This can result in cooling system blockage or restricted coolant flow, causing the engine to overheat.

NOTE: Cummins Inc. recommends using Fleetguard® ES COMPLEAT™ Ethylene-Glycol (EG) or Fleetguard® Propylene-Glycol (PG) Plus™ Anti-freeze/Coolants. Both products are available in concentrated or pre-mixed formulations. Use a 50% concentration level (40% to 60% range) of ethylene-

glycol or propylene-glycol and Supplemental Coolant Additive (SCA) required for wet-sleeved engines in most climates. Contact your local Cummins Authorized Repair Location for additional information.

Table 6-2.

Ethylene-Glycol	Propylene-Glycol
40% = -23 °C (-10 °F)	40% = -21 °C (-6 °F)
50% = -37 °C (-34 °F)	50% = -33 °C (-27 °F)
60% = -54 °C (-65 °F)	60% = -54 °C (-65 °F)
68% = -71 °C (-96 °F)	68% = -63 °C (-82 °F)

CAUTION

The system must be filled properly to prevent air locks. During filling, air must be vented from the engine coolant passages.

15. Check the condition of the pressure/fill cap.
 - a. If the pressure/fill cap seal is worn, damaged, missing, or the pressure spring is damaged or shows signs of sticking, replace the filler cap.
 - b. Re-install the expansion tank fill cap.
16. Re-install the heater wiring.
17. Reinstall the battery cables; attach the negative (-) battery cable last.
18. Operate the engine until it reaches a temperature of 82 °C (180 °F), and check for coolant leaks.
19. Ensure that the coolant level is just below the fill neck and that the coolant heater is reconnected.

6.6 Every Four Years

All maintenance checks and inspections listed in previous maintenance intervals must also be performed at this time.

Cummins recommends performing maintenance on valve lash settings.

CAUTION

Disconnect both batteries (negative cable first) before performing service on the fire pump drive engine or on any of its controls. Wear safety glasses when disconnecting batteries!

CAUTION

Valve lash maintenance should be performed by a skilled technician. Improper maintenance can damage the engine or cause severe personal injury. Contact your local Cummins Authorized Repair Location before performing any extensive maintenance.

6.6.1 Coolant Thermostat Removal/Installation

The thermostat regulates the temperature of the engine coolant circulating through the engine cooling system. Refer to the Engine Manual for complete instructions.

CAUTION


Always use the correct thermostat, and never operate the engine without a thermostat installed. The engine can overheat if operated without a thermostat because the path of least resistance for the coolant is through the bypass to the pump inlet.

1. Remove the upper coolant hose clamps and upper coolant hose at the thermostat housing.
2. Remove the (2) thermostat housing flange cap screws and the thermostat flange (see [Figure 6-10](#)).
3. Remove the thermostat and gasket from the housing.
4. Clean the housing flange faces of dirt buildup, oxidation, and sludge.
5. If still in good condition, re-install the thermostat in the housing.

IMPORTANT: *Inspect the seal on the thermostat housing flange surface and - if damaged or cracked - apply a new seal.*

NOTE: *Recommendations on thermostat replacement components can be found on the [Engine Data Sheet](#) in [Section 8 - Component Parts and Assemblies](#).*

6. Replace the thermostat flange and cap screws.

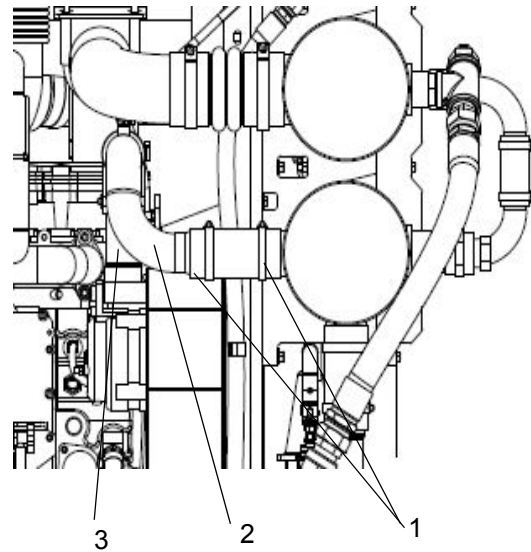

1. Hose Clamps
2. Upper Coolant Hose
3. Thermostat Housing

Figure 6-10 Thermostat Housing (typical)

6.6.2 Coolant Pump/Alternator Belt Replacement

Referring to [Figure 6-7](#), replace the coolant pump/alternator belt if it is cracked, frayed, or has pieces of material missing.

1. Remove the belt guard.
2. Use a 3/8" drive ratchet or breaker bar to rotate the tensioner arm away from the belt and remove the belt.
3. Check the belt tensioner cap screw torque. For recommended torque values, refer to the torque table in [Section 8 - Component Parts and Assemblies](#).
4. Check the tensioner arm, pulley, and stops for cracks. If any cracks are noticed, the tensioner must be replaced.
5. Verify that the tensioner arm stop is not in contact with the spring casing stop. If either stop is touching, the tensioner must be replaced.
6. Inspect the tensioner for evidence of the tensioner arm contacting the tensioner cap.

If there is evidence of the two areas making contact, the pivot tube bushing has failed and the tensioner must be replaced.

Maintenance

7. Check the tensioner bearing.
 - a. Rotate the belt tensioner pulley. The pulley should spin freely with no mechanical binding, eccentric motion, or excessive end-play.
 - b. If the arm rotates with mechanical binding, eccentric movement, or excessive end play, replace the tensioner.
8. Inspect the clearance between the tensioner spring case and the tensioner arm for uneven bearing wear.

If the clearance exceeds 3 mm (0.12 in) at any point, the tensioner must be replaced as a complete assembly. Contact a Cummins Authorized Repair Location for replacement.

NOTE: Experience has shown that tensioners generally will show a larger clearance gap near the lower portion of the spring case, resulting in the upper portion rubbing against the tensioner arm. Always replace the belt when a tensioner is replaced.

9. After checking the torque, use a 3/8" drive ratchet or breaker bar to rotate the tensioner slowly away from the area of belt contact.
10. Install the replacement drive belt.

CAUTION

To prevent pulley or belt damage, do not roll a belt over the pulley or pry it on with a tool. Move the tensioner arm away from the belt area before installing the drive belt.

11. Check the location of the drive belt on the belt tensioner pulley. The belt should be centered on, or centered close to, the middle of the pulley.
12. Reinstall the belt guard.

CAUTION

Unaligned belts, either too far forward or backward, can cause belt wear, belt roll-off failures or increase uneven tensioner bushing wear.

6.6.3 Charge Air Cooler (CAC) Heat Exchanger Cleaning

The CAC heat exchanger should be removed and cleaned internally at least once every four years.

1. Press the AUTO/MAN button on the FPDP to place the fire pump drive engine in MANUAL operation.

2. Disconnect both batteries at their terminals. Remove the negative (-) cable first.
3. Shut off the manual cooling water and bypass water hand valves on the cooling loop water supply.
4. Open the coolant filter shut-off valve.
5. Drain the coolant system per the instructions in Section 6.5.2
6. When the tanks are empty, disconnect the inlet and outlet piping from the CAC tubing to the heat exchanger (see Figure 2-1).
7. Disconnect the cooling water inlet and outlet fittings from the charge air heat exchanger and the coolant heat exchanger.

WARNING

Do not use caustic cleaners to clean the CAC as these types of cleaners cause damage to the CAC. Follow the directions provided by the cleaning solution manufacturer.

WARNING

Cleaning chemicals may be caustic and cause skin irritation. Follow the instructions on cleaning containers. Wear protective clothing, eye wear, and rubber gloves when working with cleaning solutions. Dispose of solvents and cleaning solutions properly.

8. Remove the heat exchanger mounting bracket bolts from the mounting bracket and set aside for later reuse.
9. Provide support for the heat exchanger in order to avoid dropping it. Remove the charge air heat exchanger from the mounting plates.
10. Flush the CAC internally with cleaning solution in the opposite direction of normal air flow.
11. Shake the CAC and lightly tap on the tank ends with a rubber mallet to dislodge trapped debris. Continue flushing until all debris or oil is removed.



CAUTION

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

12. After the CAC has been thoroughly cleaned of all oil and debris with solvent, wash the CAC internally with hot, soapy water to remove the remaining solvent.
13. Rinse thoroughly with clean water.
14. Blow compressed air into the CAC in the opposite direction of normal air flow until the CAC is dry internally.
15. Depending on the condition of the heat exchanger, perform the pressure test outlined in Section [6.4.10](#).
16. Reassemble the coolant heat exchangers, coolant tubing, clamps, and cooling water lines per the instructions outlined in Section 6.5.2.
17. Provide support for the coolant heat exchanger assembly in order to avoid dropping it.
18. Position the heat exchanger assembly on the engine's mounting bracket and hand-tighten the mounting bolts (see [Figure 2-1](#) and [Figure 2-2](#)).
19. Align the cooling loop assembly with the required hose connections and hand tighten the hose clamp fasteners.
20. Reinstall all water supply and drain fittings. Use Teflon™ pipe tape to prevent leaks. Torque the hose clamp screws to the recommended torque value. Refer to the torque table in [Section 8 - Component Parts and Assemblies](#).
21. When the heat exchanger cooling assembly is secured, re-tighten the mounting bracket fasteners, hose clamps, and cooling water lines according to the Torque Chart in [Section 8 - Component Parts and Assemblies](#).
22. Open the cooling loop cooling water supply manual valves and check for leaks.
23. Reinstall the battery cables; attach the negative (-) battery cable last.
24. After completing and inspecting all service work, start the engine and check for air leaks, loose clamps, and blowby.

Maintenance

This page is intentionally left blank.



Section 7 - Troubleshooting

7.1 Introduction

The following information is intended as a guide for some common non-technical equipment problems. The first part of this section includes troubleshooting charts that cross-reference the problem, the possible cause, and the solution. The second section includes complete Fault Code charts outlining a numerical listing of fault codes and their descriptions.

Many problems can be resolved using corrective maintenance, adjustment, or minor repair. Refer to the vendor supplied literature, electrical schematics, and mechanical prints for additional information.

For engine-related issues, refer to the engine Operation and Maintenance Manual or contact the Cummins Customer Assistance Center at 1-800-DIESELS (1-800-343-7357).

WARNING

*The status checks should be performed **ONLY** by a qualified technician. Contact with exposed electrical components could cause extreme personal injury or death.*

CAUTION

AVOID SERVICING complex components such as: printed circuit boards, programmable controllers, and ECMs not specifically authorized by Cummins Inc. Contact the Cummins Fire Power Customer Service Department toll free at 1-800-343-7357 before performing any extensive maintenance.


CAUTION

Never climb or stand on the equipment frame, guards, or enclosures. Contact with exposed or moving components can cause personal injury or equipment damage.

Troubleshooting


7.2 Engine Will Not Start

**SYMPTOM:
ENGINE DOES NOT CRANK ON BATTERY
A OR BATTERY B FROM THE PUMP
CONTROLLER**

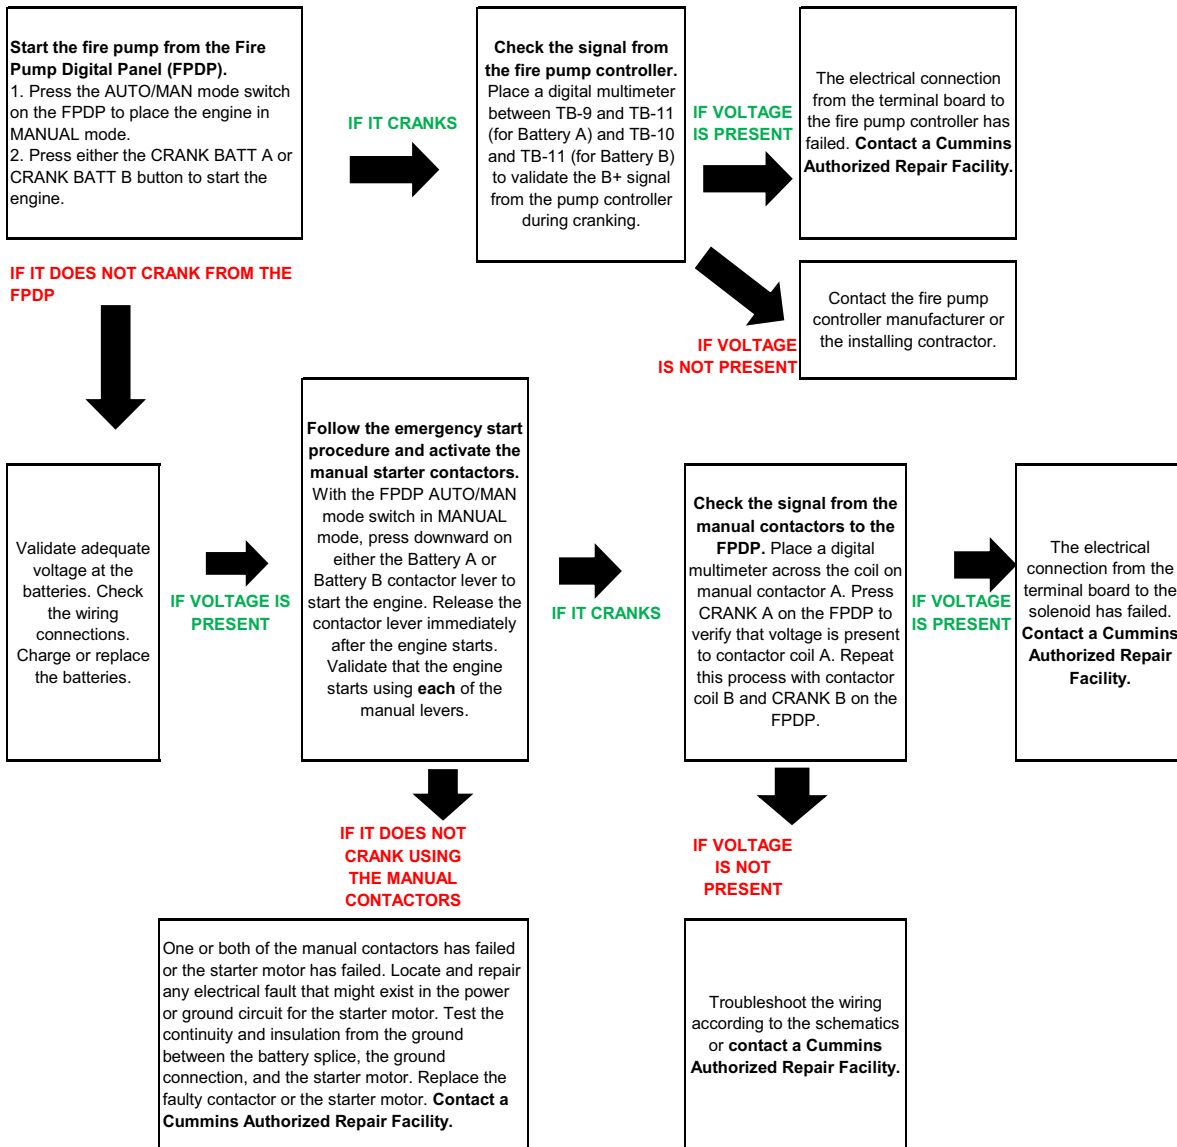


7.3 Engine Cranks But Will Not Start

SYMPTOM:
ENGINE CRANKS FROM THE PUMP CONTROLLER, BUT WILL NOT START (NO EXHAUST SMOKE)

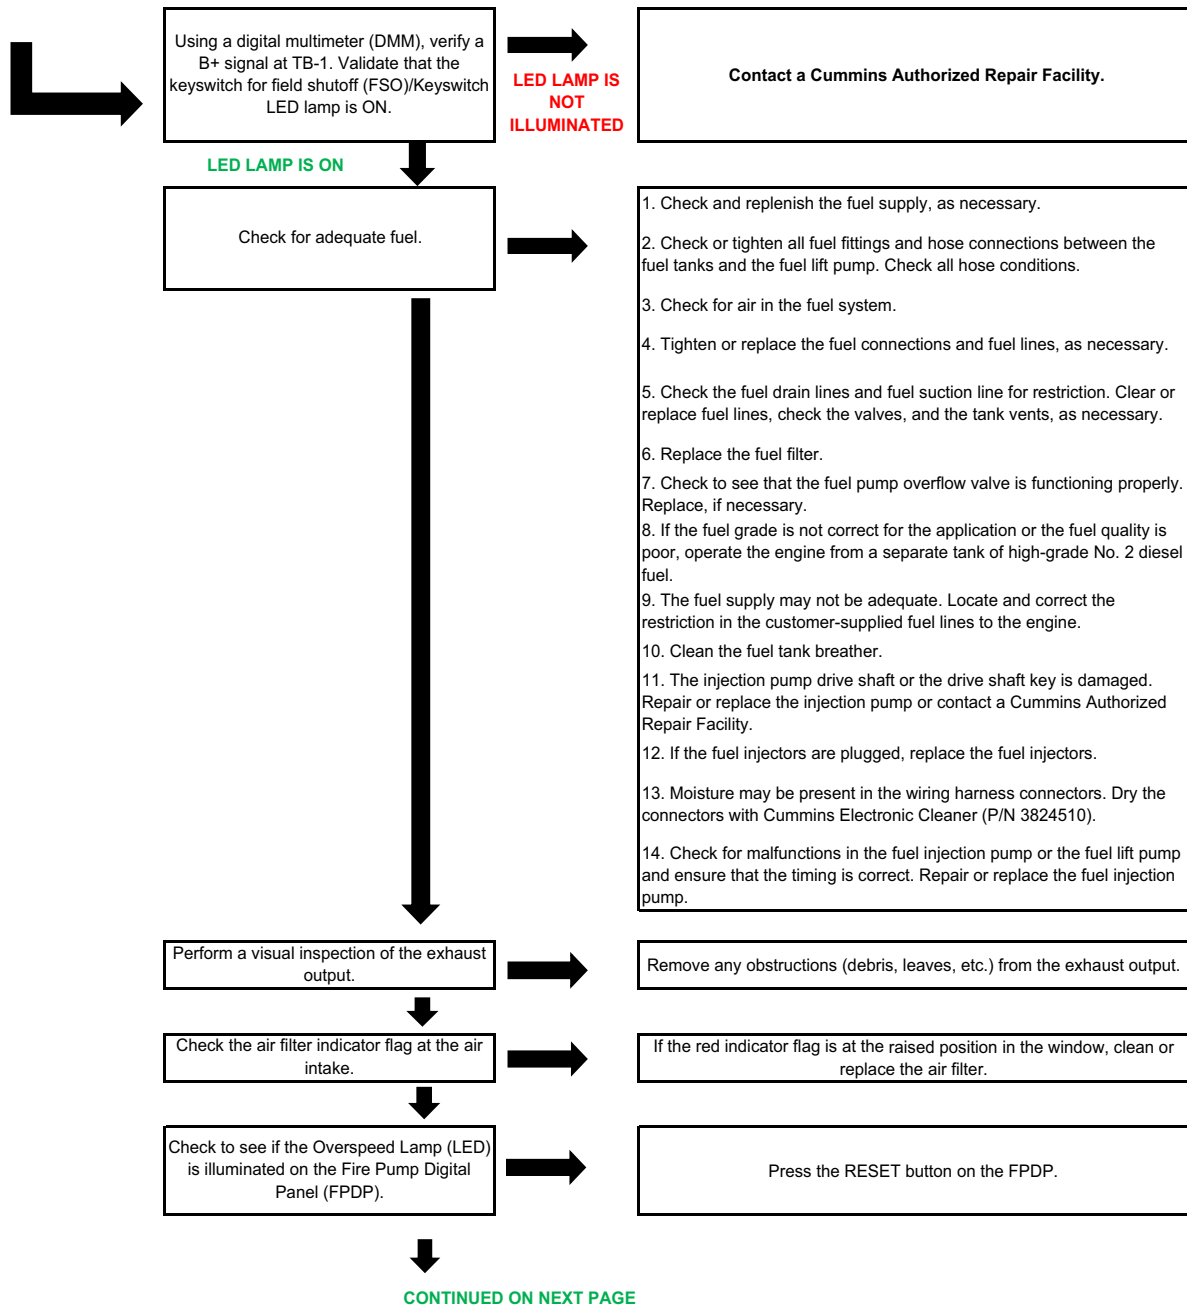

Troubleshooting


Engine Cranks But Will Not Start (continued)

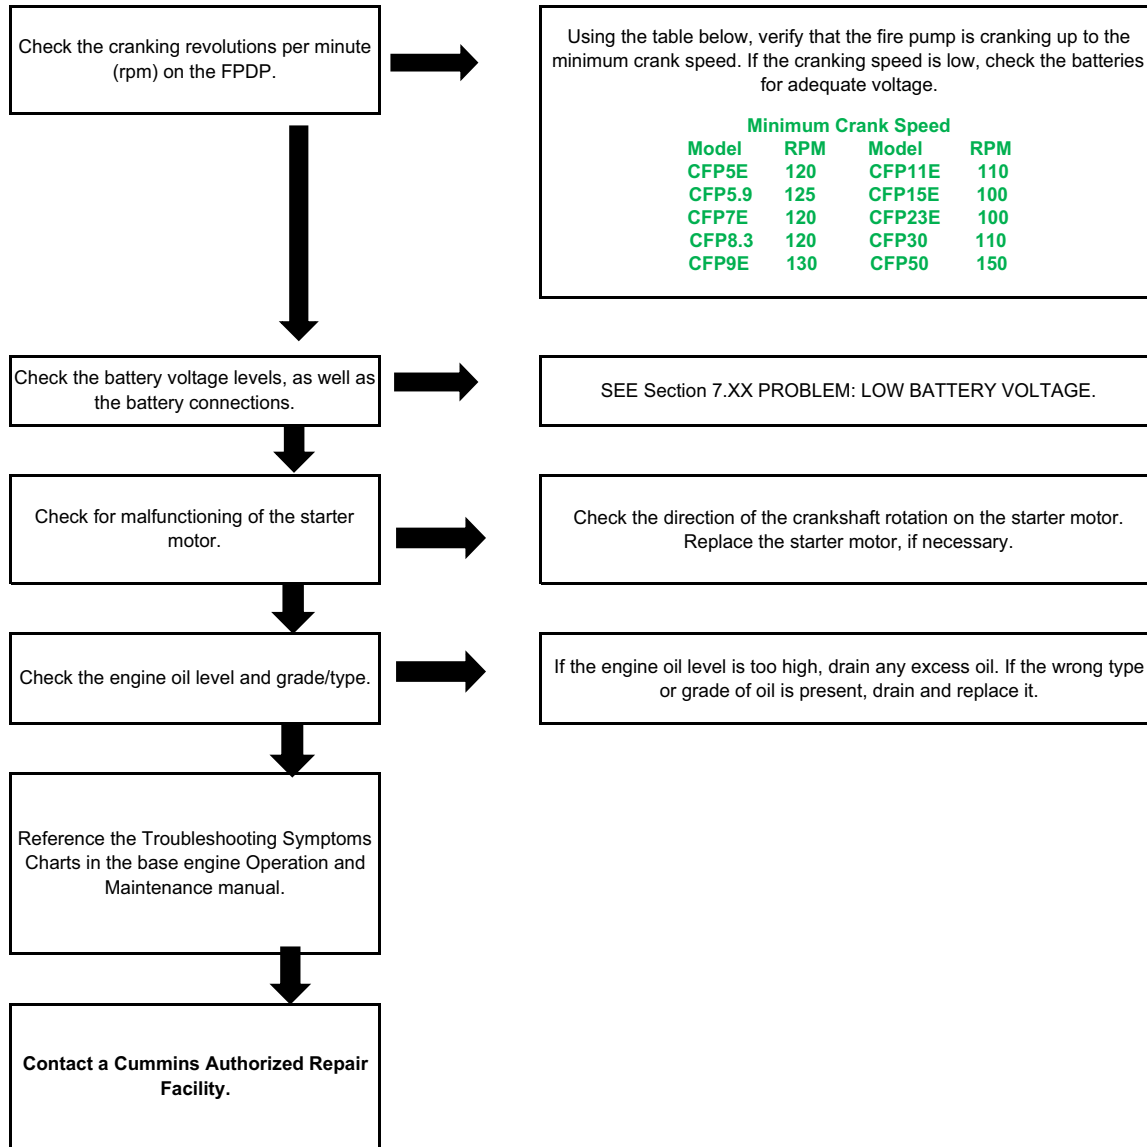

7.4 Engine Starts But Continues to Crank

STOP THE ENGINE AT THE FIRE PUMP CONTROLLER (PLACE THE CONTROLLER IN THE OFF POSITION) AND TROUBLESHOOT FROM THE FIRE PUMP DRIVE ENGINE:


PRIOR TO MAKING A SERVICE CALL, PERFORM A VISUAL INSPECTION:

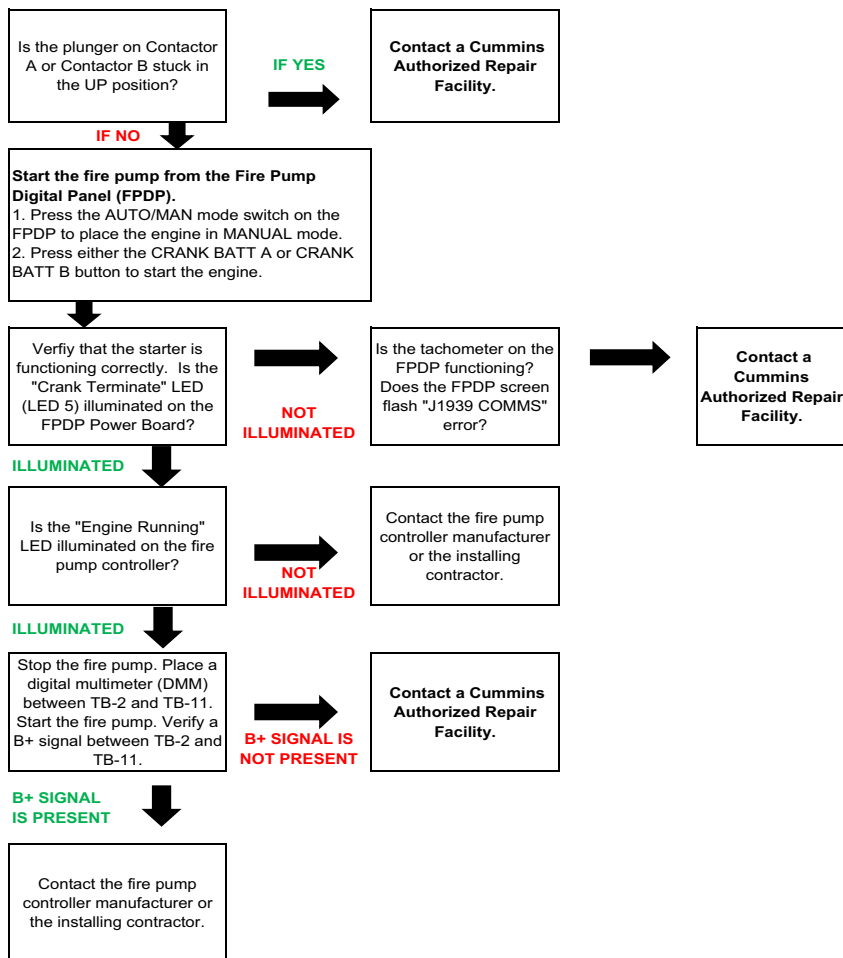


Troubleshooting

7.5 Engine Will Not Stop

TO STOP THE ENGINE:

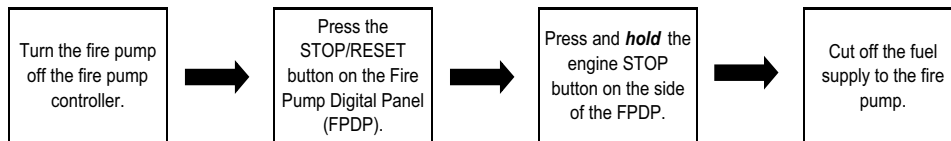


TO TROUBLESHOOT THIS PROBLEM, ONCE THE FIRE PUMP HAS STOPPED:

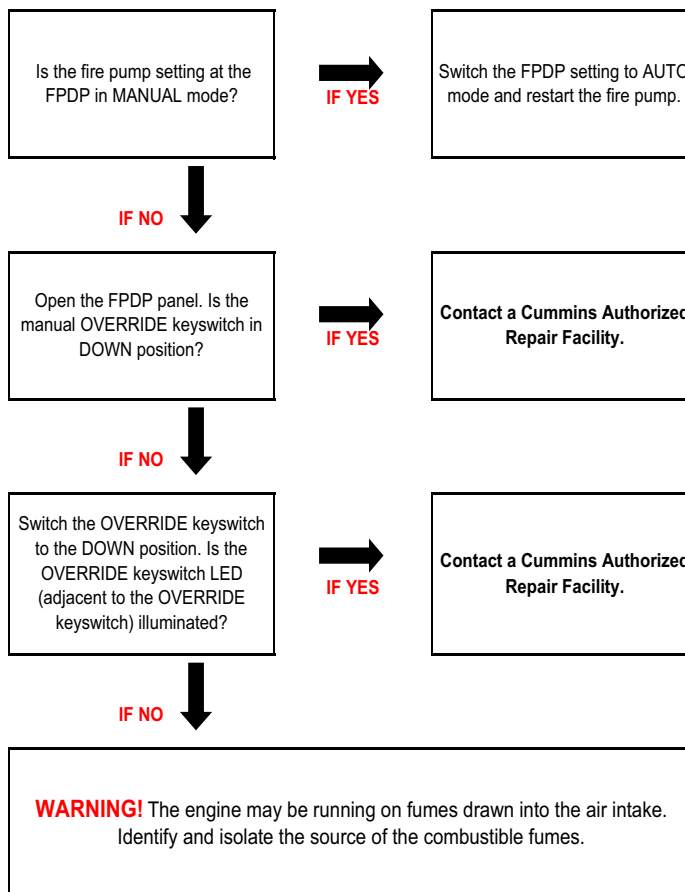

7.6 Low Battery Voltage

SYMPTOM: The Fire Pump Digital Panel (FPDP) will momentarily "blink" upon starting or the fire pump drive engine is slow to crank. There is a high probability that the engine will not start.

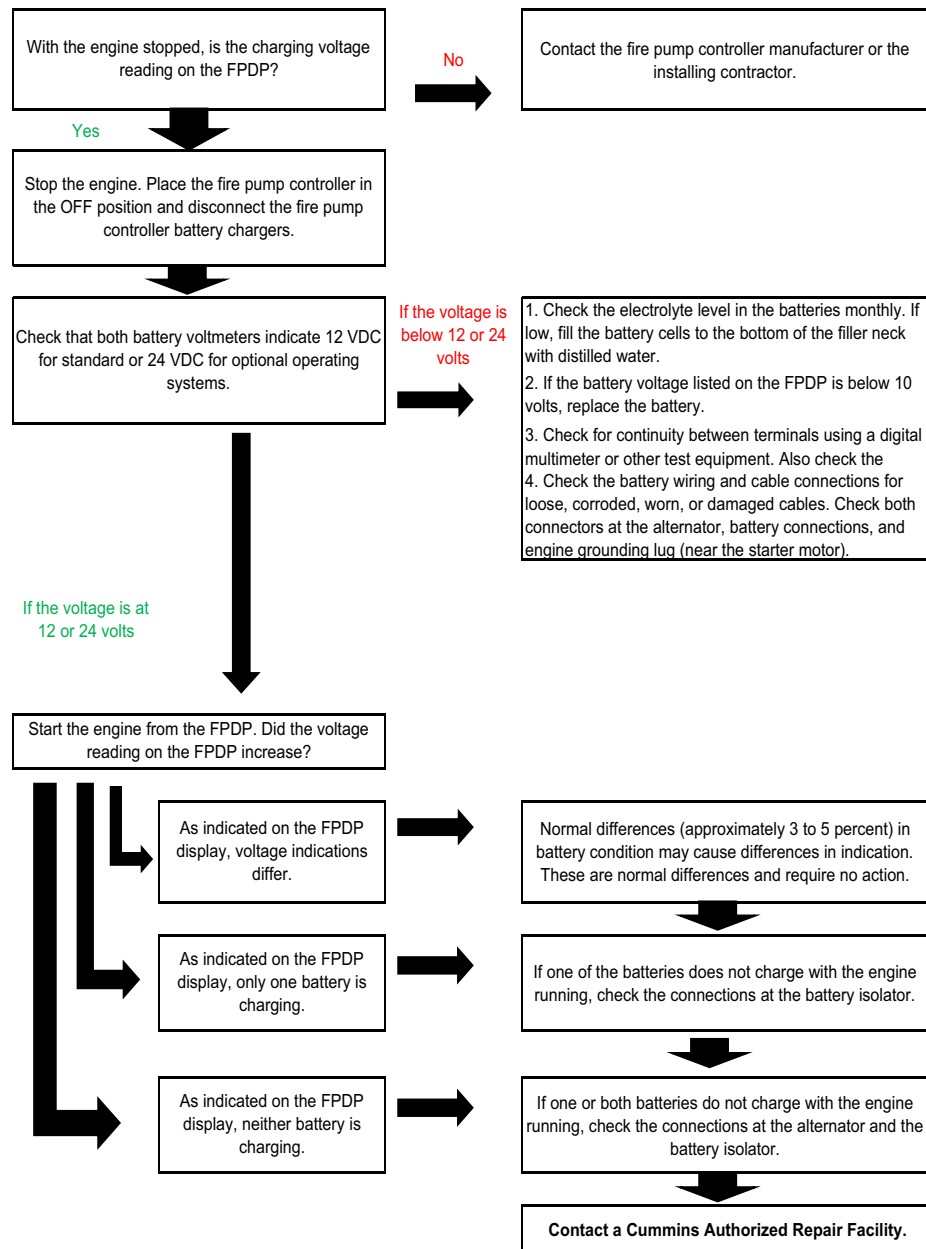

Troubleshooting

7.7 Fault Code Chart

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
111 (Red)	629 12	Controller #1	Engine Control Module Critical Internal Failure - Bad Intelligent Device or Component
115 (Red)	612 2	System Diagnostic Code #2	Engine Speed/Position Sensor Circuit - Lost Both of Two Signals from the Magnetic Pickup Sensor - Data Erratic, Intermittent, or Incorrect
122 (Yellow)	102 3	Boost Pressure	Intake Manifold Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
123 (Yellow)	102 4	Boost Pressure	Intake Manifold Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
124 (Yellow)	102 16	Boost Pressure	Intake Manifold 1 Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
131 (Red)	91 3	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor Circuit - Voltage Above Normal or Shorted to High Source
132 (Red)	91 4	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor Circuit - Voltage Below Normal or Shorted to Low Source
133 (Red)	974 3	Remote Accelerator	Remote Accelerator Pedal or Level Position Sensor Circuit - Voltage Above Normal or Shorted to High Source
134 (Red)	974 4	Remote Accelerator	Remote Accelerator Pedal or Level Position Sensor Circuit - Voltage Below Normal or Shorted to Low Source
135 (Yellow)	100 3	Engine Oil Pressure	Oil Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source
141 (Yellow)	100 4	Engine Oil Pressure	Oil Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
143 (Yellow)	100 18	Engine Oil Pressure	Oil Pressure Low - Data Valid but Below Normal Operational Range - Moderately Severe Level
144 (Yellow)	110 3	Engine Coolant Temperature	Coolant Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
145 (Yellow)	110 4	Engine Coolant Temperature	Coolant Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
146 (Yellow)	110 16	Engine Coolant Temperature	Coolant Temperature High - Data Valid but Above Normal Operational Range - Moderately Severe Level
147 (Red)	91 1	Accelerator Pedal Position	Accelerator Pedal or Level Position Sensor Circuit - Abnormal Frequency, Pulse Width, or Period
148 (Red)	91 0	Accelerator Pedal Position	Accelerator Pedal or Level Position Sensor Circuit - Abnormal Frequency, Pulse Width, or Period
151 (Red)	110 0	Engine Coolant Temperature	Coolant Temperature Low - Data Valid but Above Normal Operational Range - Most Severe Level
153 (Yellow)	105 3	Intake Manifold #1 Temperature	Intake Manifold Air Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
154 (Yellow)	105 4	Intake Manifold #1 Temperature	Intake Manifold Air Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
155 (Red)	105 0	Intake Manifold #1 Temperature	Intake Manifold Air Temperature High - Data Valid but Above Normal Operational Range - Most Severe Level
187 (Yellow)	3510 4	5 Volts DC Supply	Sensor Supply Voltage #2 Circuit - Voltage Below Normal or Shorted to Low Source

Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
195 (Yellow)	111 3	Coolant Level	Coolant Level Sensor Circuit - Voltage Above Normal or Shorted to High Source
196 (Yellow)	111 4	Coolant Level	Coolant Level Sensor Circuit - Voltage Below Normal or Shorted to Low Source
197 (Yellow)	111 18	Coolant Level	Coolant Level - Data Valid but Below Normal Operational Range - Moderately Severe Level
199 (Yellow)	1661 4	Engine Automatic Start Lamp	Engine Automatic Start Lamp Driver Circuit - Voltage Above Normal or Shorted to High Source
211 (None)	1484 31	J1939 Error	Additional Auxiliary Diagnostic Codes Logged - Condition Exists
212 (Yellow)	175 3	Oil Temperature	Engine Oil Temperature Sensor #1 Circuit - Voltage Above Normal or Shorted to High Source
213 (Yellow)	175 4	Oil Temperature	Engine Oil Temperature Sensor #1 Circuit - Voltage Below Normal or Shorted to Low Source
214 (Red)	175 0	Oil Temperature	Engine Oil Temperature - Data Valid but Above Normal Operational Range - Most Severe Level
221 (Yellow)	108 3	Barometric Pressure	Barometric Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
222 (Yellow)	108 4	Barometric Pressure	Barometric Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
227 (Yellow)	3510 3	5 Volts DC Supply	Sensor Supply Voltage #2 Circuit - Voltage Above Normal or Shorted to High Source
231 (Yellow)	109 3	Coolant Pressure	Coolant Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
232 (Yellow)	109 4	Coolant Pressure	Coolant Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
233 (Yellow)	109 18	Coolant Pressure	Coolant Pressure - Data Valid but Below Normal Operational Range - Moderately Severe Level
234 (Red)	190 0	Engine Speed	Engine Speed High - Data Valid but Above Normal Operational Range - Most Severe Level
235 (Red)	111 1	Coolant Level	Coolant Level Low - Data Valid but Below Normal Operational Range - Most Severe Level
237 (Yellow)	644 2	External Speed Input	External Speed Input (Multiple Unit Synchronization) - Data Erratic, Intermittent, or Incorrect
238 (Yellow)	3511 4	System Diagnostic Code #1	Sensor Supply Voltage #3 Circuit - Voltage Below Normal or Shorted to Low Source
239 (Yellow)	3511 3	System Diagnostic Code #2	Sensor Supply Voltage #3 Circuit - Voltage Above Normal or Shorted to High Source
241 (Yellow)	84 2	Wheel-based Vehicle Speed	Vehicle Speed Sensor Circuit - Data Erratic, Intermittent, or Incorrect
242 (Yellow)	84 10	Wheel-based Vehicle Speed	Vehicle Speed Sensor Circuit - Tampering has been Detected - Abnormal Rate of Change
244 (Yellow)	623 4	Red Stop Lamp	Red Stop Lamp Driver Circuit - Voltage Below Normal, or Shorted to Low Source
245 (Yellow)	647 4	Fan Clutch Output Device Driver	Fan Control Circuit - Voltage Below Normal or Shorted to Low Source
249 (Yellow)	171 3	Ambient Air Temperature	Ambient Air Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source

Troubleshooting

Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
256 (Yellow)	171 4	Ambient Air Temperature	Ambient Air Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
261 (Yellow)	174 16	Fuel Temperature	Engine Fuel Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
263 (Yellow)	174 3	Fuel Temperature	Engine Fuel Temperature Sensor #1 Circuit - Voltage Above Normal or Shorted to High Source
265 (Yellow)	174 4	Fuel Temperature	Engine Fuel Temperature Sensor #1 Circuit - Voltage Below Normal or Shorted to Low Source
268 (Yellow)	94 2	Fuel Delivery Pressure	Fuel Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
271 (Yellow)	1347 4	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve Circuit - Voltage Below Normal or Shorted to Low Source
272 (Yellow)	1347 3	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve Circuit - Voltage Above Normal or Shorted to High Source
281 (Yellow)	1347 7	Fuel Pump Pressurizing Assembly #1	High Fuel Pressure Solenoid Valve #1 - Mechanical System Not Responding Properly or Out of Adjustment
284 (Yellow)	1043 4	Internal Sensor Voltage Supply	Engine Speed/Position Sensor (Crankshaft) Supply Voltage Circuit - Voltage Below Normal or Shorted to Low Source
285 (Yellow)	639 9	SAE J1939 Datalink	SAE J1939 Multiplexing PGN Timeout Error - Abnormal Update Rate
286 (Yellow)	639 13	SAE J1939 Datalink	SAE J1939 Multiplexing Configuration Error - Out of Calibration
287 (Red)	91 19	Accelerator Pedal Position	SAE J1939 Multiplexing Accelerator Pedal or Level Sensor System Error - Received Network Data in Error
288 (Red)	974 19	Remote Accelerator	SAE J1939 Multiplexing Remote Accelerator Pedal or Level Data Error - Received Network Data in Error
292 (Red)	441 14	Auxiliary Temperature 1	Auxiliary Temperature Sensor Input #1 - Special Instructions
293 (Yellow)	441 3	OEM Temperature	Auxiliary Temperature Sensor Input #1 Circuit - Voltage Above Normal or Shorted to High Source
294 (Yellow)	441 4	OEM Temperature	Auxiliary Temperature Sensor Input #1 Circuit - Voltage Below Normal or Shorted to Low Source
295 (Yellow)	108 2	Barometric Pressure	Barometric Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
296 (Red)	1388 14	Auxiliary Pressure	Auxiliary Pressure Sensor Input #1 - Special Instructions
297 (Yellow)	1388 3	Auxiliary Pressure	Auxiliary Pressure Sensor Input #2 Circuit - Voltage Above Normal or Shorted to High Source
298 (Yellow)	1388 4	Auxiliary Pressure	Auxiliary Pressure Sensor Input #2 Circuit - Voltage Below Normal or Shorted to Low Source
319 Maint.	251 2	Real Time Clock Power	Real Time Clock Power Interrupt - Data Erratic, Intermittent, or Incorrect
322 (Yellow)	651 5	Injector Cylinder #1	Injector Solenoid Cylinder #1 Circuit - Current Below Normal or Open Circuit
323 (Yellow)	655 5	Injector Cylinder #5	Injector Solenoid Cylinder #5 Circuit - Current Below Normal or Open Circuit
324 (Yellow)	653 5	Injector Cylinder #3	Injector Solenoid Cylinder #3 Circuit - Current Below Normal or Open Circuit

Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
325 (Yellow)	656 5	Injector Cylinder #6	Injector Solenoid Cylinder #6 Circuit - Current Below Normal or Open Circuit
331 (Yellow)	652 5	Injector Cylinder #2	Injector Solenoid Cylinder #2 Circuit - Current Below Normal or Open Circuit
332 (Yellow)	654 5	Injector Cylinder #4	Injector Solenoid Cylinder #4 Circuit - Current Below Normal or Open Circuit
334 (Yellow)	110 2	Engine Coolant Temperature	Coolant Temperature Sensor Circuit - Data Erratic, Intermittent, or Incorrect
338 (Yellow)	1267 3	Vehicle Accessories Relay Driver	Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Above Normal or Shorted to High Source
339 (Yellow)	1267 4	Vehicle Accessories Relay Driver	Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Below Normal or Shorted to Low Source
341 (Yellow)	630 2	Calibration Memory	Engine Control Module Data Lost - Data Erratic, Intermittent, or Incorrect
342 (Red)	630 13	Calibration Memory	Electronic Calibration Code Incompatibility - Out of Calibration
343 (Yellow)	629 12	Controller #1	Engine Control Module Warning Internal Hardware Failure - Bad Intelligent Device or Component
349 (Yellow)	191 16	Transmission Output Shaft Speed	Transmission Output Shaft Speed - Data Valid but Above Normal Operational Range - Moderately Severe Level
351 (Yellow)	627 12	Controller #1	Injector Power Supply - Bad Intelligent Device or Component
352 (Yellow)	3509 4	5 Volts DC Supply	Sensor Supply Voltage #1 Circuit - Voltage Below Normal or Shorted to Low Source
386 (Yellow)	3509 3	5 Volts DC Supply	Sensor Supply Voltage #1 Circuit - Voltage Above Normal or Shorted to High Source
415 (Red)	100 1	Engine Oil Pressure	Oil Pressure Low - Data Valid but Below Normal Operational Range - Most Severe Level
418 Maint.	97 15	Water in Fuel Indicator	Water in Fuel Indicator High - Data Valid but Above Normal Operational Range - Least Severe Level
422 (Yellow)	111 2	Coolant Level	Coolant Level - Data Erratic, Intermittent, or Incorrect
425 (Yellow)	175 2	Oil Temperature	Engine Oil Temperature - Data Erratic, Intermittent, or Incorrect
428 (Yellow)	97 3	Water in Fuel Indicator	Water in Fuel Sensor Circuit - Voltage Above Normal or Shorted to High Source
429 (Yellow)	97 4	Water in Fuel Indicator	Water in Fuel Sensor Circuit - Voltage Below Normal or Shorted to Low Source
431 (Yellow)	558 2	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Data Erratic, Intermittent, or Incorrect
432 (Red)	558 13	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Out of Calibration
435 (Yellow)	100 2	Engine Oil Pressure	Oil Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect
441 (Yellow)	168 18	Electrical Potential (Voltage)	Battery #1 Voltage Low - Data Valid but Below Normal Operational Range - Moderately Severe Level
442 (Yellow)	168 16	Electrical Potential (Voltage)	Battery #1 Voltage High - Data Valid but Above Normal Operational Range - Moderately Severe Level

Troubleshooting

Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
449 (Red)	157 0	Injector Metering Rail #1 Pressure	Fuel Pressure High - Data Valid but Above Normal Operational Range - Moderately Severe Level
451 (Yellow)	157 3	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
452 (Yellow)	157 4	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
488 (Yellow)	105 16	Intake Manifold	Intake Manifold #1 Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
489 (Yellow)	191 18	Transmission Output Shaft Speed	Transmission Output Shaft Speed - Data Valid but Below Normal Operational Range - Moderately Severe Level
497 (Yellow)	1377 2	Switch Circuit	Multiple Unit Synchronization Switch Circuit - Data Erratic, Intermittent, or Incorrect
523 (Yellow)	611 2	System Diagnostic Code #1	OEM Intermediate (PTO) Speed Switch Validation - Data Erratic, Intermittent, or Incorrect
527 (Yellow)	702 3	Circuit - Voltage	Auxiliary Input/Output #2 Circuit - Voltage Above Normal, or Shorted to High Source
528 (Yellow)	93 2	Switch - Data	Auxiliary Alternate Torque Validation Switch - Data Erratic, Intermittent, or Incorrect
529 (Yellow)	703 3	Circuit - Voltage	Auxiliary Input/Output #3 Circuit - Voltage Above Normal or Shorted to High Source
546 (Yellow)	94 3	Fuel Delivery Pressure	Fuel Delivery Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
547 (Yellow)	94 4	Fuel Delivery Pressure	Fuel Delivery Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
551 (Yellow)	558 4	Accelerator Pedal Low Idle Switch	Accelerator Pedal or Lever Idle Validation Circuit - Voltage Below Normal or Shorted to Low Source
553 (Yellow)	157 16	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure High - Data Valid but Above Normal Operational Range - Moderately Severe Level
554 (Yellow)	157 2	Injector Metering Rail #1 Pressure	Fuel Pressure Sensor Error - Data Erratic, Intermittent, or Incorrect
559 (Yellow)	157 18	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure High - Data Valid but Below Normal Operational Range - Moderately Severe Level
584 (Yellow)	677 3	Starter Solenoid Lockout Relay Driver Circuit	Starter Relay Circuit - Voltage Above Normal or Shorted to High Source
585 (Yellow)	677 4	Starter Solenoid Lockout Relay Driver Circuit	Starter Relay Circuit - Voltage Below Normal or Shorted to Low Source
595 (Yellow)	103 16	Turbocharger #1 Speed	Turbocharger #1 Speed High - Data Valid but Above Normal Operational Range - Moderately Severe Level
596 (Yellow)	167 16	Alternate Potential (voltage)	Electrical Charging System Voltage High - Data Valid but Above Normal Operational Range - Moderately Severe Level
597 (Yellow)	167 18	Alternate Potential (voltage)	Electrical Charging System Voltage High - Data Valid but Below Normal Operational Range - Moderately Severe Level
598 (Red)	167 1	Alternate Potential (voltage)	Electrical Charging System Voltage High - Data Valid but Below Normal Operational Range - Most Severe Level
599 (Red)	640 14	Engine External Protection Input	Auxiliary Commanded Dual Output Shutdown - Special Instructions
649 Maint.	1378 31	Engine Oil Change Interval	Change Lubricating Oil and Filter - Condition Exists
687 (Yellow)	103 18	Turbocharger #1 Speed	Turbocharger #1 Speed Low - Data Valid but Below Normal Operational Range - Moderately Severe Level

Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
689 (Yellow)	190 2	Engine Speed	Primary Engine Speed Sensor Error - Data Erratic, Intermittent, or Incorrect
691 (Yellow)	1172 3	Turbocharger #1 Compressor Inlet Temp	Turbocharger #1 Compressor Inlet Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
692 (Yellow)	1172 4	Turbocharger #1 Compressor Inlet Temp	Turbocharger #1 Compressor Inlet Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
697 (Yellow)	1136 3	Sensor Circuit - Voltage	ECM Internal Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
698 (Yellow)	1136 4	Sensor Circuit - Voltage	ECM Internal Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
719 (Yellow)	22 3	Crankcase Pressure	Extended Crankcase Blow-by Pressure Circuit - Voltage Above Normal or Shorted to High Source
729 (Yellow)	22 4	Crankcase Pressure	Extended Crankcase Blow-by Pressure Circuit - Voltage Below Normal or Shorted to Low Source
731 (Yellow)	723 7	Engine Speed Sensor #2	Engine Speed/Position #2 Mechanical Misalignment Between Camshaft and Crankshaft Sensors - Mechanical System not Responding Properly or Out of Adjustment
757 (Yellow)	2802 31	Electronic Control Module	Electronic Control Module Data Lost - Condition Exists
778 (Yellow)	723 2	Engine Speed Sensor #2	Engine Speed Sensor (Camshaft) Error - Data Erratic, Intermittent, or Incorrect
779 (Yellow)	703 11	Auxiliary Equipment Sensor Input	Warning Auxiliary Equipment Sensor Input #3 (OEM Switch) - Root Cause Not Known
951 (None)	166 2	Cylinder Power	Cylinder Power Imbalance Between Cylinders - Data Erratic, Intermittent, or Incorrect
1117 (None)	627 2	Power Supply	Power Lost with Ignition On - Data Erratic, Intermittent, or Incorrect
1139 (Yellow)	651 7	Injector Cylinder #1	Injector Cylinder #1 - Mechanical System Not Responding Properly or Out of Adjustment
1141 (Yellow)	652 7	Injector Cylinder #2	Injector Cylinder #2 - Mechanical System Not Responding Properly or Out of Adjustment
1142 (Yellow)	653 7	Injector Cylinder #3	Injector Cylinder #3 - Mechanical System Not Responding Properly or Out of Adjustment
1143 (Yellow)	654 7	Injector Cylinder #4	Injector Cylinder #4 - Mechanical System Not Responding Properly or Out of Adjustment
1144 (Yellow)	655 7	Injector Cylinder #5	Injector Cylinder #5 - Mechanical System Not Responding Properly or Out of Adjustment
1145 (Yellow)	656 7	Injector Cylinder #6	Injector Cylinder #6 - Mechanical System Not Responding Properly or Out of Adjustment
1239 (Yellow)	2623 3	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor #2 Circuit - Voltage Above Normal or Shorted to High Source
1241 (Yellow)	2623 4	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor #2 Circuit - Voltage Below Normal or Shorted to Low Source
1242 (Red)	91 2	Accelerator Pedal Position	Accelerator Pedal or Lever Position Sensor #1 and #2 - Data Erratic, Intermittent, or Incorrect
1256 (Yellow)	1563 2	Control Module Identification Input State	Control Module Identification Input State Error - Data Erratic, Intermittent, or Incorrect
1257 (Red)	1563 2	Control Module Identification Input State	Control Module Identification Input State Error - Data Erratic, Intermittent, or Incorrect
1852 (Yellow)	97 16	Water in Fuel Indicator	Water in Fuel Indicator - Data Valid but Above Normal Operational Range - Moderately Severe Level

Troubleshooting

Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
1911 (Yellow)	157 0	Injector Metering Rail	Injector Metering Rail #1 Pressure - Data Valid but Above Normal Operational Range - Most Severe Level
2111 (Yellow)	52 3	Coolant Temperature	Coolant Temperature #2 Sensor Circuit - Voltage Above Normal or Shorted to High Source
2112 (Yellow)	52 4	Coolant Temperature	Coolant Temperature #2 Sensor Circuit - Voltage Below Normal or Shorted to Low Source
2113 (Yellow)	52 16	Coolant Temperature	Coolant Temperature #2 - Data Valid but Above Normal Operational Range - Moderately Severe Level
2114 (Red)	52 0	Coolant Temperature	Coolant Temperature #2 - Data Valid but Above Normal Operational Range - Most Severe Level
2115 (Yellow)	2981 3	Coolant Pressure	Coolant Pressure #2 Circuit - Voltage Above Normal or Shorted to High Source
2116 (Yellow)	2981 4	Coolant Pressure	Coolant Pressure #2 Circuit - Voltage Below Normal or Shorted to Low Source
2117 (Yellow)	2981 18	Coolant Pressure	Coolant Pressure #2 - Data Valid but Below Normal Operational Range - Moderately Severe Level
2182 (Yellow)	1072 3	Engine Brake Output #1	Engine Brake Actuator Driver #1 Circuit - Voltage Above Normal or Shorted to High Source
2183 (Yellow)	1072 4	Engine Brake Output #1	Engine Brake Actuator Driver #1 Circuit - Voltage Below Normal or Shorted to Low Source
2185 (Yellow)	3512 3	System Diagnostic Code #1	Sensor Supply Voltage #4 Circuit - Voltage Above Normal or Shorted to High Source
2186 (Yellow)	3512 4	System Diagnostic Code #1	Sensor Supply Voltage #4 Circuit - Voltage Below Normal or Shorted to Low Source
2195 (Yellow)	703 14	Auxiliary Equipment Sensor	Auxiliary Equipment Sensor Input #3 Engine Protection Critical - Special Instructions
2215 (Yellow)	94 18	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Below Normal Operational Range - Moderately Severe Level
2216 (Yellow)	94 1	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
2217 (Yellow)	630 31	Calibration Memory	ECM Program Memory (RAM) Corruption - Condition Exists
2249 (Yellow)	157 1	Injector Metering Rail #1 Pressure	Injector Metering Rail #1 Pressure - Data Valid but Below Normal Operational Range - Most Severe Level
2261 Maint.	94 15	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Above Normal Operational Range - Least Severe Level
2262 Maint.	94 17	Fuel Delivery Pressure	Fuel Pump Delivery Pressure - Data Valid but Below Normal Operational Range - Least Severe Level
2263 (Yellow)	1800 16	Battery Temperature	Battery Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level
2264 (Yellow)	1800 18	Battery Temperature	Battery Temperature - Data Valid but Below Normal Operational Range - Moderately Severe Level
2265 (Yellow)	1075 3	Electric Lift Pump for Engine Fuel	Fuel Priming Pump Control Signal Circuit - Voltage Above Normal or Shorted to High Source
2266 (Yellow)	1075 4	Electric Lift Pump for Engine Fuel	Fuel Priming Pump Control Signal Circuit - Voltage Below Normal or Shorted to Low Source
2292 (Yellow)	611 16	Fuel Inlet Meter Device	Fuel Inlet Meter Device - Data Valid but Above Normal Operational Range - Moderately Severe Level
2293 (Yellow)	611 18	Fuel Inlet Meter Device	Fuel Inlet Meter Device Flow Demand Lower Than Expected - Data Valid but Below Normal Operational Range - Moderately Severe Level

Fault Code Chart (Continued)

FAULT CODE (LAMP)	SPN FMI	J1939 SPN DESCRIPTION	Cummins DESCRIPTION
2311 (Yellow)	633 31	Fuel Control Valve #1	Fueling Actuator #1 Circuit Error - Condition Exists
2321 (None)	190 2	Engine Speed	Engine Speed/Position Sensor #1 - Data Erratic, Intermittent, or Incorrect
2322 (None)	723 2	Engine Speed Sensor #2	Engine Speed/Position Sensor #2 - Data Erratic, Intermittent, or Incorrect
2345 (Yellow)	103 10	Turbocharger #1 Speed	Turbocharger Speed Invalid Rate of Change Detected - Abnormal Rate of Change
2346 (None)	2789 15	System Diagnostic Code #1	Turbocharger Turbine Inlet Temperature (calculated) - Data Valid but Above Normal Operational Range - Least Severe Level
2347 (None)	2790 15	System Diagnostic Code #1	Turbocharger Turbine Outlet Temperature (calculated) - Data Valid but Above Normal Operational Range - Least Severe Level
2363 (Yellow)	1073 4	Engine Compression Brake Output #2	Engine Brake Actuator Circuit #2 - Voltage Below Normal, or Shorted to Low Source
2365 (Yellow)	1112 4	Engine Brake Output #3	Engine Brake Actuator Driver Output #3 Circuit - Voltage Below Normal or Shorted to Low Source
2367 (Yellow)	1073 3	Engine Compression Brake Output #2	Engine Brake Actuator Circuit #2 - Voltage Above Normal or Shorted to High Source
2368 (Yellow)	1112 3	Engine Brake Output #3	Engine Brake Actuator Driver Output #3 Circuit - Voltage Above Normal or Shorted to High Source
2372 (Yellow)	95 16	Engine Fuel Filter Differential Pressure	Fuel Filter Differential Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level
2373 (Yellow)	1209 3	Exhaust Gas Pressure	Exhaust Gas Pressure Sensor Circuit - Voltage Above Normal or Shorted to High Source
2374 (Yellow)	1209 4	Exhaust Gas Pressure	Exhaust Gas Pressure Sensor Circuit - Voltage Below Normal or Shorted to Low Source
2375 (Yellow)	412 3	Exhaust Gas Recirculation Temperature	Exhaust Gas Recirculation Temperature Sensor Circuit - Voltage Above Normal or Shorted to High Source
2376 (Yellow)	412 4	Exhaust Gas Recirculation Temperature	Exhaust Gas Recirculation Temperature Sensor Circuit - Voltage Below Normal or Shorted to Low Source
2377 (Yellow)	647 3	Fan Clutch Output Device Driver	Fan Control Circuit - Voltage Above Normal or Shorted to High Source
2425 (None)	730 4	Intake Air Heater #2	Intake Air Heater #2 Circuit - Voltage Below Normal or Shorted to Low Source
2426 (None)	730 3	Intake Air Heater #2	Intake Air Heater #2 Circuit - Voltage Above Normal or Shorted to High Source
2555 (Yellow)	729 3	Intake Air Heater Driver #1	Intake Air Heater #1 Circuit - Voltage Above Normal or Shorted to High Source
2556 (Yellow)	729 4	Intake Air Heater Driver #1	Intake Air Heater #1 Circuit - Voltage Below Normal or Shorted to Low Source
2557 (Yellow)	697 3	Auxiliary PWM Driver #1	Auxiliary PWM Driver #1 - Voltage Above Normal or Shorted to High Source
2558 (Yellow)	697 4	Auxiliary PWM Driver #1	Auxiliary PWM Driver #1 - Voltage Below Normal or Shorted to Low Source
2963 (None)	110 15	Engine Coolant Temperature	Engine Coolant Temperature High - Data Valid but Above Normal Operational Range - Least Severe Level
2973 (Yellow)	102 2	Boost Pressure	Intake Manifold Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect

This page is intentionally left blank.



Section 8 - Component Parts and Assemblies

8.1 Ordering Parts

Replacement parts for the Cummins Inc. equipment are manufactured to the same quality standards and specifications as the original equipment. Unapproved substitution may result in poor performance, reduced service life, lost production, or unsafe operation.

Cummins Inc. relies on the best and most cost effective shipping methods, unless specific instructions or requirements are requested by the customer. When ordering parts, please be prepared to provide the following information.

- Model and serial number.
- Part description by name or number.
- Quantity required.
- Purchase order number.

NOTE: *A purchase order number is desirable, even if the part(s) are supplied on a Returned Goods Authorization (RGA) issue number. A purchase order number helps Cummins and its customer track the parts and necessary credits.*

8.2 Routine Service and Parts

Personnel at Cummins Authorized Repair Locations can assist you with the correct operation and service of your engine. Cummins has a worldwide service network of more than 5,000 Distributors and Dealers who have been trained to provide sound advice, expert service, and complete parts support.

Check the telephone directory yellow pages or refer to the directory in this section for the nearest Cummins Authorized Repair Location.

8.3 Emergency Repairs and Technical Service

The Cummins Customer Assistance Center provides a 24-hour, toll free telephone number to aid in technical and emergency service when a Cummins Authorized Repair Location cannot be reached or is unable to resolve an issue with a Cummins product.

If assistance is required, call Toll-Free: 1-800-DIESELS (1-800-343-7357). Includes all 50 states, Bermuda, Puerto Rico, Virgin Islands, and the Bahamas.

Outside of North America contact your Regional Office. Telephone numbers and addresses are listed in the International Directory.

Refer also to the Cummins Inc. web site at www.cummins.com.

8.4 Recommended Spare Parts Inventory

To minimize downtime and increase productivity, Cummins Inc. recommends maintaining a stock of spare parts critical to uninterrupted engine operation. Shipping costs can be lower using ground transportation rather than overnight or next day air freight. For this reason, Cummins Inc. can provide a list of recommended spare parts. Contact a Cummins Authorized Repair Location for additional information.

CFP5E Engine Data Sheet (Continued)

Exhaust System

Max. Back Pressure Imposed by Complete Exhaust System in in. H ₂ O (kPa)	40.8	(10.2)
Exhaust Pipe Size Normally Acceptable - in. (mm)	4.0	(102)

Noise Emissions

Top.....	90.2	dBa
Right Side.....	92.1	dBa
Left Side.....	93.7	dBa
Front.....	93.0	dBa
Exhaust.....	112.1	dBa

The noise emission values are estimated sound pressure levels at 3.3 ft. (1 m.).

Fuel Supply / Drain System

RPM

	1470	1760	1900	2100	2350	2600
CFP5E-F50 Fuel Rate Gal/hr (L/hr)	5.7 (21.4)	6.6 (25.2)	7.0 (26.6)	7.8 (29.4)	8.3 (31.3)	8.3 (31.6)
CFP5E-F40 Fuel Rate Gal/hr (L/hr)	5.7 (21.4)	6.3 (24.0)	6.7 (25.4)	7.2 (27.4)	7.9 (29.9)	7.9 (30.1)
CFP5E-F30 Fuel Rate Gal/hr (L/hr)	5.2 (19.7)	6.1 (23.0)	6.3 (23.8)	6.7 (25.2)	7.2 (27.2)	7.3 (27.5)
CFP5E-F20 Fuel Rate Gal/hr (L/hr)	4.7 (17.8)	5.5 (20.9)	5.7 (21.6)	6.0 (24.7)	6.5 (24.7)	6.6 (25.0)
CFP5E-F10 Fuel Rate Gal/hr (L/hr)	4.2 (15.9)	4.9 (18.5)	5.1 (19.3)	5.4 (20.4)	5.8 (21.9)	5.9 (22.2)

Fuel Type	Number 2 Diesel Only	
Minimum Supply Line Size - in. (mm)	0.5	(12.70)
Minimum Drain Line Size - in. (mm)	0.375	(9.53)
Maximum Fuel Height above C/L Fuel Pump in (m)	360	(9.1)
Recommended Fuel Filter - Primary	Fleetguard (Cummins).....	FF5612 (4989106)
- Secondary	FS1212	(3308638)
Maximum Restriction @ Lift Pump-Inlet - With Clean Filter - in. Hg (mm Hg)	5.0	(127)
Maximum Restriction @ Lift Pump-Inlet - With Dirty Filter - in. Hg (mm Hg)	10.0	(254)
Maximum Return Line Restriction - Without Check Valves - in. Hg (mm Hg)	5.9	(150)
Minimum Fuel Tank Vent Capability - ft ³ /hr (m ³ /hr)	7.1	(0.21)
Maximum Fuel Temperature @ Lift Pump Inlet - °F (°C)	160	(71)

Starting and Electrical System

12V

24V

Min. Recommended Batt. Capacity - Cold Soak at 0°F (-18°C) or Above		
* Engine Only - Cold Cranking Amperes - (CCA)	1300	900
* Engine Only - Reserve Capacity - Minutes	430	430
Battery Cable Size (Maximum Cable Length Not to Exceed 5 ft. [1.5 m] AWG)	00	00
Maximum Resistance of Starting Circuit - Ohms	0.001	0.001
Typical Cranking Speed - RPM	130	130
Alternator (Standard), Internally Regulated - Ampere	95	45
Wiring for Automatic Starting (Negative Ground)	Standard	
Reference Wiring Diagram	16260	
* Based on FM requirement for a minimum of 900 CCA and 430 Reserve Capacity Minutes		

Performance Data

All data is based on the engine operating with fuel system, water pump, lubricating oil pump, air cleaner, and alternator; not included are compressor, fan, optional equipment, and driven components. Data is based on operation at SAE standard J1394 conditions of 300 ft. (91.4 m) altitude, 29.61 in. (752 mm) Hg dry barometer, and 77 °F (25 °C) intake air temperature, using No.2 diesel or a fuel corresponding to ASTM-D2.

Altitude Above Which Output Should be Limited - ft. (m)	300	(91.4)
Correction Factor per 1000 ft. (305 m) above Altitude Limit	3%	
Temperature Above Which Output Should be Limited - °F (°C)	77	(25)
Correction Factor per 10 °F (11 °C) Above Temperature Limit	1%	(2%)

Exhaust Emissions (EPA Tier T3)

See emissions data available for this rating on the Cummins Fire Power website www.cumminsfirepower.com.

CFP5E Engine Data Sheet (Continued)

FM-approved and UL-listed Ratings for CFP5E-F10, F20, F30, F40, F50

Engine Speed - RPM	1470	1760	1900	2100	2350	2600
CFP5E-F10 Output - BHP (kW)	84 (63)	95 (71)	98 (73)	101 (75)	105 (78)	104 (78)
Ventilation Air Required - CFM (litre/sec)	208 (98)	295 (139)	325 (153)	363 (171)	402 (190)	442 (209)
Exhaust Gas Flow - CFM (litre/sec)	520 (245)	670 (316)	711 (336)	774 (365)	862 (407)	905 (427)
Exhaust Gas Temperature - °F (°C)	869 (465)	777 (414)	761 (405)	756 (402)	786 (419)	825 (441)
Heat Rejection to Coolant BTU/min. (kW) ...	1833 (32)	2100 (37)	2167 (38)	2367 (42)	2656 (47)	2789 (49)
Heat Rejection to Ambient BTU/min (kW) ...	825 (14)	868 (15)	930 (16)	993 (17)	973 (17)	954 (17)
CFP5E-F20 Output - BHP (kW)	94 (70)	107 (80)	110 (82)	113 (84)	118 (88)	117 (87)
Ventilation Air Required - CFM (litre/sec)	222 (105)	305 (144)	336 (159)	369 (174)	403 (190)	443 (209)
Exhaust Gas Flow - CFM (litre/sec)	561 (265)	689 (325)	754 (356)	822 (388)	907 (428)	952 (450)
Exhaust Gas Temperature - °F (°C)	890 (477)	800 (427)	799 (426)	810 (432)	851 (455)	894 (479)
Heat Rejection to Coolant BTU/min. (kW) ...	2009 (35)	2193 (39)	2364 (42)	2580 (45)	2889 (51)	3033 (53)
Heat Rejection to Ambient BTU/min (kW) ...	851 (15)	894 (16)	959 (17)	1024 (18)	1004 (18)	983 (17)
CFP5E-F30 Output - BHP (kW)	104 (78)	118 (88)	121 (90)	125 (93)	130 (97)	129 (96)
Ventilation Air Required - CFM (litre/sec)	230 (109)	306 (144)	336 (159)	369 (174)	403 (190)	443 (209)
Exhaust Gas Flow - CFM (litre/sec)	587 (277)	700 (330)	763 (360)	836 (395)	927 (438)	973 (459)
Exhaust Gas Temperature - °F (°C)	909 (487)	812 (433)	816 (436)	834 (446)	883 (473)	927 (497)
Heat Rejection to Coolant BTU/min. (kW) ...	2138 (38)	2291 (40)	2456 (43)	2680 (47)	3033 (53)	3185 (56)
Heat Rejection to Ambient BTU/min (kW) ...	877 (15)	922 (16)	989 (17)	1056 (19)	1035 (18)	1014 (18)
CFP5E-F40 Output - BHP (kW)	113 (84)	123 (92)	129 (96)	136 (101)	143 (107)	141 (105)
Ventilation Air Required - CFM (litre/sec)	235 (111)	308 (145)	336 (159)	368 (174)	402 (190)	442 (209)
Exhaust Gas Flow - CFM (litre/sec)	607 (287)	706 (333)	766 (362)	840 (396)	930 (439)	977 (461)
Exhaust Gas Temperature - °F (°C)	923 (495)	817 (436)	822 (439)	845 (452)	889 (476)	933 (501)
Heat Rejection to Coolant BTU/min. (kW) ...	2247 (39)	2343 (41)	2507 (44)	2775 (49)	3129 (55)	3285 (58)
Heat Rejection to Ambient BTU/min (kW) ...	904 (16)	951 (17)	1019 (18)	1088 (19)	1174 (21)	1226 (22)
CFP5E-F50 Output - BHP (kW)	113 (84)	129 (96)	135 (101)	146 (109)	150 (112)	148 (110)
Ventilation Air Required - CFM (litre/sec)	235 (111)	312 (147)	335 (158)	366 (173)	401 (189)	441 (208)
Exhaust Gas Flow - CFM (litre/sec)	607 (287)	718 (339)	775 (366)	843 (398)	932 (440)	979 (462)
Exhaust Gas Temperature - °F (°C)	923 (495)	826 (441)	838 (448)	855 (457)	895 (479)	940 (504)
Heat Rejection to Coolant BTU/min. (kW) ...	2247 (39)	2410 (42)	2603 (46)	2867 (50)	3171 (56)	3330 (59)
Heat Rejection to Ambient BTU/min (kW) ...	904 (16)	980 (17)	1051 (18)	1122 (20)	1211 (21)	1264 (22)

All Data is Subject to Change Without Notice.

Engineering Manager: *Mike Dawson*

Component Parts and Assemblies

CFP7E Engine Data Sheet (Continued)

Exhaust System

Max. Back Pressure Imposed by Complete Exhaust System in in. H ₂ O (kPa)	40.8	(10.2)
Exhaust Pipe Size Normally Acceptable - in. (mm)	4.0	(102)

Noise Emissions

Top.....	92.5 dBa
Right Side.....	94.3 dBa
Left Side.....	93.8 dBa
Front.....	92.1 dBa
Exhaust.....	114.2 dBa

The noise emission values are estimated sound pressure levels at 3.3 ft. (1 m.).

Fuel Supply / Drain System

Fuel Consumption	1470	1760	1900	2100	2350	2600
CFP7E-F60 Gal/hr (L/hr)	11.3 (42.7)	12.9 (48.9)	12.0 (45.5)	12.8 (48.4)	13.1 (49.6)	14.0 (53.1)
CFP7E-F50 Gal/hr (L/hr)	10.6 (40.1)	12.1 (46.0)	11.3 (42.8)	12.0 (45.4)	12.4 (46.8)	13.2 (49.9)
CFP7E-F40 Gal/hr (L/hr)	9.9 (37.6)	11.4 (43.0)	10.6 (40.0)	11.3 (42.6)	11.6 (43.8)	12.3 (46.7)
CFP7E-F30 Gal/hr (L/hr)	9.1 (34.6)	10.6 (40.1)	9.8 (37.3)	10.5 (40.7)	10.8 (40.7)	11.5 (43.5)
CFP7E-F20 Gal/hr (L/hr)	8.6 (32.5)	9.8 (37.2)	9.1 (34.5)	9.7 (36.7)	10.0 (37.9)	10.6 (40.3)
CFP7E-F10 Gal/hr (L/hr)	7.9 (29.9)	9.0 (34.2)	9.2 (31.8)	9.0 (33.9)	9.2 (34.8)	9.8 (37.1)

Fuel Type	Number 2 Diesel Only
Minimum Supply Line Size - in. (mm)	0.5 (12.70)
Minimum Drain Line Size - in. (mm)	0.375 (9.53)
Maximum Fuel Height above C/L Fuel Pump in (m)	360 (9.1)
Recommended Fuel Filter	Primary..... Fleetguard (Cummins)..... FF5612 (4989106)
.....	Secondary..... FS1212 (3308638)
Maximum Restriction @ Lift Pump-Inlet - With Clean Filter - in. Hg (mm Hg)	5.0 (127)
Maximum Restriction @ Lift Pump-Inlet - With Dirty Filter - in. Hg (mm Hg)	10.0 (254)
Maximum Return Line Restriction - Without Check Valves - in. Hg (mm Hg)	5.9 (150)
Minimum Fuel Tank Vent Capability - ft ³ /hr (m ³ /hr)	7.1 (0.21)
Maximum Fuel Temperature @ Lift Pump Inlet - °F (°C)	158 (70)

Starting and Electrical System

	12V	24V
Min. Recommended Batt. Capacity - Cold Soak at 0°F (-18°C) or Above		
Engine Only - Cold Cranking Amperes - (CCA)	1400	900
Engine Only - Reserve Capacity - Minutes	430	430
Battery Cable Size (Maximum Cable Length Not to Exceed 5 ft. [1.5 m] AWG)	2/0	2/0
Maximum Resistance of Starting Circuit - Ohms	0.001	0.002
Typical Cranking Speed - RPM	120	120
Alternator (Standard), Internally Regulated - Ampere	95	70
Wiring for Automatic Starting (Negative Ground)	Standard	
Reference Wiring Diagram	16260	

Performance Data

All data is based on the engine operating with fuel system, water pump, lubricating oil pump, air cleaner, and alternator; not included are compressor, fan, optional equipment, and driven components. Data is based on operation at SAE standard J1394 conditions of 300 ft. (91.4 m) altitude, 29.61 in. (752 mm) Hg dry barometer, and 77 °F (25 °C) intake air temperature, using No.2 diesel or a fuel corresponding to ASTM-D2.

Altitude Above Which Output Should be Limited - ft. (m)	300	(91.4)
Correction Factor per 1000 ft. (305 m) above Altitude Limit	3%	
Temperature Above Which Output Should be Limited - °F (°C)	77	(25)
Correction Factor per 10 °F (11 °C) Above Temperature Limit	1%	(2%)

Exhaust Emissions (EPA Tier T3)

See emissions data available for this rating on the Cummins Fire Power website www.cumminsfirepower.com.

CFP7E Engine Data Sheet (Continued)

FM-approved and UL-listed Ratings for CFP7E-F10, F20, F30, F40, F50, F60

Engine Speed - RPM	1470	1760	1900	2100	2350	2600
CFP7E-F10 Output - BHP (kW) .	153 (114)	175 (130)	162 (121)	171 (128)	172 (128)	174 (130)
Ventilation Air CFM (litre/sec) ...	386 (182)	450 (212)	472 (223)	558 (263)	616 (291)	678 (320)
Exhaust Flow - CFM (litre/sec) ..	937 (442)	1061 (501)	1079 (509)	1255 (592)	1375 (649)	1513 (714)
Exhaust Temp.- °F (°C)	906 (486)	821 (438)	781 (416)	795 (424)	805 (429)	886 (474)
Heat Rejection						
To Coolant BTU/min. (kW)	3259 (57)	3521 (62)	3232 (57)	3698 (65)	4126 (73)	4539 (80)
To Ambient BTU/min (kW)	936 (16)	996 (18)	1083 (19)	1170 (21)	1146 (20)	1123 (20)
CFP7E-F20 Output - BHP (kW) .	166 (124)	190 (142)	176 (131)	185 (138)	187 (139)	189 (141)
Ventilation Air CFM (litre/sec) ...	396 (187)	467 (220)	486 (229)	562 (265)	621 (293)	683 (322)
Exhaust Flow - CFM (litre/sec) ..	994 (469)	1121 (529)	1134 (535)	1286 (607)	1422 (671)	1564 (738)
Exhaust Temp.- °F (°C)	922 (494)	848 (453)	801 (427)	821 (438)	840 (449)	924 (496)
Heat Rejection						
To Coolant BTU/min. (kW)	3486 (61)	3745 (66)	3523 (62)	3877 (68)	4343 (76)	4777 (84)
To Ambient BTU/min (kW)	965 (17)	1027 (18)	1116 (20)	1206 (21)	1182 (21)	1158 (20)
CFP7E-F30 Output - BHP (kW) .	177 (132)	205 (153)	190 (142)	200 (149)	201 (150)	204 (152)
Ventilation Air CFM (litre/sec) ...	403 (190)	480 (227)	502 (237)	567 (268)	627 (296)	690 (326)
Exhaust Flow - CFM (litre/sec) ..	1026 (484)	1174 (554)	1180 (557)	1305 (616)	1468 (693)	1615 (762)
Exhaust Temp.- °F (°C)	939 (504)	879 (471)	828 (442)	836 (447)	872 (467)	959 (515)
Heat Rejection						
To Coolant BTU/min. (kW)	3622 (64)	3978 (70)	3757 (66)	4043 (71)	4533 (80)	4986 (88)
To Ambient BTU/min (kW)	995 (17)	1059 (19)	1151 (20)	1243 (22)	1218 (21)	1194 (21)
CFP7E-F40 Output - BHP (kW) .	192 (143)	220 (164)	204 (152)	215 (160)	216 (161)	219 (163)
Ventilation Air CFM (litre/sec) ...	435 (205)	487 (230)	511 (241)	571 (270)	629 (297)	692 (327)
Exhaust Flow - CFM (litre/sec) ..	1055 (498)	1219 (575)	1218 (575)	1363 (643)	1500 (708)	1650 (779)
Exhaust Temp.- °F (°C)	954 (512)	911 (488)	853 (456)	874 (468)	897 (481)	987 (530)
Heat Rejection						
To Coolant BTU/min. (kW)	3803 (67)	4186 (74)	3926 (69)	4263 (75)	4707 (83)	5178 (91)
To Ambient BTU/min (kW)	1026 (18)	1091 (19)	1186 (21)	1282 (23)	1256 (22)	1231 (22)
CFP7E-F50 Output - BHP (kW) .	205 (153)	235 (175)	218 (163)	229 (171)	231 (172)	234 (174)
Ventilation Air CFM (litre/sec) ...	457 (216)	511 (241)	519 (245)	576 (272)	634 (299)	697 (329)
Exhaust Flow - CFM (litre/sec) ..	1117 (527)	1280 (604)	1263 (596)	1390 (656)	1538 (726)	1692 (799)
Exhaust Temp.- °F (°C)	978 (526)	957 (514)	887 (475)	902 (483)	925 (496)	1018 (548)
Heat Rejection						
To Coolant BTU/min. (kW)	4031 (71)	4395 (77)	4165 (73)	4447 (78)	4895 (86)	5385 (95)
To Ambient BTU/min (kW)	1057 (19)	1125 (20)	1223 (21)	1321 (23)	1444 (25)	1517 (27)
CFP7E-F60 Output - BHP (kW) .	218 (163)	250 (186)	232 (173)	244 (182)	245 (183)	249 (186)
Ventilation Air CFM (litre/sec) ...	480 (226)	537 (253)	524 (247)	580 (274)	636 (300)	700 (330)
Exhaust Flow - CFM (litre/sec) ..	1194 (564)	1344 (634)	1297 (612)	1439 (679)	1557 (735)	1713 (808)
Exhaust Temp.- °F (°C) #	1012 (544)	1004 (540)	913 (489)	934 (501)	939 (504)	1033 (556)
Heat Rejection						
To Coolant BTU/min. (kW)	4291 (75)	4615 (81)	4367 (77)	4672 (82)	4997 (88)	5497 (97)
To Ambient BTU/min (kW)	1090 (19)	1160 (20)	1261 (22)	1362 (24)	1488 (26)	1564 (27)

All Data is Subject to Change Without Notice.

Engineering Manager: *Mike Dawson*

Torque Table

Cap Screw Markings and Torque Values



Always use a cap screw of the same measurement and strength as the cap screw being replaced. Using the wrong cap screws can result in engine damage.

Always use the torque values listed in the following tables when specific torque values are not available.

When the ft-lb value is less than 10, convert the ft-lb value to in-lb to obtain a better torque with an in-lb torque wrench. Example: 6 ft-lb equals 72 in-lb.

Metric Cap Screw Identification

Sample:	M8-1.25 x 25		
Value:	M8	1.25	X 25
Meaning:	Major thread diameter in millimeters	Distance between threads in millimeters	Length in millimeters

Metric Cap Screw Head Markings

Metric cap screws and nuts are identified by the grade number stamped on the head of the cap screw or on the surface of the nuts.

Commercial Steel Class	8.8	10.9	12.9
Caps Screw Head Markings			

US Customary Cap Screw Identification

Sample:	5/16 x 18 x 1-1/2		
Value:	5/16	18	1-1/2
Meaning:	Major thread diameter in inches	Number of threads per inch	Length in inches

U.S. Customary Cap Screw Head Markings

U.S. Customary cap screws are identified by radial lines stamped on the head of the cap screw.

SAE Grade 5 w/ three lines	SAE Grade 8

Metric Cap Screw Torque Values (lubricated threads)

Class:	8.8				10.9				12.9			
Diameter	Cast Iron		Aluminum		Cast Iron		Aluminum		Cast Iron		Aluminum	
mm	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb
6	9	5	7	4	13	10	7	4	14	9	7	4
7	14	9	11	7	18	14	11	7	23	18	11	7
8	23	17	18	14	33	25	18	14	40	29	18	14
10	45	33	30	25	65	50	30	25	70	50	30	25
12	80	60	55	40	115	85	55	40	125	95	55	40
14	125	90	90	65	180	133	90	65	195	145	90	65
16	195	140	140	100	280	200	140	100	290	210	140	100
18	280	200	180	135	390	285	180	135	400	290	180	135
20	400	290	—	—	550	400	—	—	—	—	—	—

U.S. Customary Cap Screw Torque Values (lubricated threads)

Grade:	SAE Grade 5				SAE Grade 8			
Cap Screw Body Size	Cast Iron		Aluminum		Cast Iron		Aluminum	
	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb	N•m	ft-lb
1/4-20	9	7	8	6	15	11	8	6
1/4-28	12	9	9	7	18	13	9	7
5/16-18	20	15	16	12	30	22	16	12
5/16-24	23	17	19	14	33	24	19	14
3/8-16	40	30	25	20	55	40	25	20
3/8-24	40	30	35	25	60	45	35	25
7/16-14	60	45	45	35	90	65	45	35
7/16-20	65	50	55	40	95	70	55	40
1/2-13	95	70	75	55	130	95	75	55
1/2-20	100	75	80	60	150	110	80	60
9/16-12	135	100	110	80	190	140	110	80
9/16-18	150	110	115	85	210	155	115	85
5/8-11	180	135	150	110	255	190	150	110
5/8-18	210	155	160	120	290	215	160	120
3/4-10	325	240	255	190	460	340	255	190
3/4-16	365	270	285	210	515	380	285	210
7/8-9	490	360	380	280	745	550	380	280
7/8-14	530	390	420	310	825	610	420	310
1-8	720	530	570	420	1100	820	570	420
1-14	800	590	650	480	1200	890	650	480

Component Parts and Assemblies

8.5 Assembly Drawings

The most current revisions to these drawings and related documents are accessible at: <http://www.cumminsfirepower.com/products.html>.

Description	Drawing No.	Revision Level	Change date
General Layout, Fire Pump, CFP5E	26721	A	3/16
General Layout, Fire Pump, CFP7E	26725	A	3/16
Drawing, Installation, Fire Pump, CFP5E	26105	E	6/15
Drawing, Installation, Fire Pump, CFP7E	26109	D	8/15
Options, Engine, Industrial, CFP5E	13211	E	
Options, Engine, Industrial, CFP7E	13208	E	
Valve Cover CFP5E	13772	-	
Valve Cover CFP7E	13849	A	
Assembly, Engine Mounting CFP5E Isolated	13847	G	5/15
Assembly, Heat Exchanger CFP5E	A042A395	A	
Assembly, Heat Exchanger CFP7E	16746	D	
Assembly, Air Intake CFP5E	A042A396	B	
Assembly, Air Intake CFP7E	A042A392	A	
Assembly, Coolant Heater, CFP5E	24231	D	
Assembly, Coolant Heater, CFP7E	24239	B	8/15
Assembly, Fuel Pre-Filter CFP5E/7E	A042A386	A	
Option, Fuel Rail CFP5E	14202	A	
Option, Fuel Rail CFP7E	14197	A	
Assembly, Sensor Package, CFP5E	15389	H	
Assembly, Sensor Package, CFP7E	15390	G	5/15
Assembly, Secondary ECM CFP5E/7E	13309	E	
Assembly, Control Panel Mounting	21249	-	
Assembly, All Components Top-level:			
Assembly, Panel, Digital Electronic	22791	A	
Assembly, Harness, CFP5E	23924	D	
Assembly, Harness, CFP7E	23928	E	
Cables, Battery Contactors, Electronic Engines	24234	B	
Battery Contactors 12V	8824-12	A	
Kit, Fuel Lines CFP5E	15203	C	
Kit, Fuel Lines CFP7E	15206	D	4/16
Misc. Piping, Raw Water Cooling Loop CFP5E	26132	D	
Misc. Piping, Raw Water Cooling Loop CFP7E	26261	C	3/16
Assembly, Raw Water Cooling Loop, 3/4" Vertical	21511	A	
Assembly, Raw Water Cooling Loop, 3/4" Horizontal 12V	21509	B	
Assembly, Raw Water Cooling Loop, 3/4" Horizontal 24V	21510	B	
Misc. Piping, Cooling Loop, Sea Water	A042B480	B	3/16
Assembly, Sea Water Cooling Loop, 3/4" Vertical	21512	B	
Assembly, Sea Water Cooling Loop, 3/4" Horizontal 12V	21438	C	
Assembly, Sea Water Cooling Loop, 3/4" Horizontal 24V	21439	C	
Assembly, Stub-Shaft, SAE #3, 2.25" QSB, QSC, 4B, 6B, 6C	8619	D	
Schematic, Control Panel, Electronic	16260	D	
Assembly, VSPLC (FM-approved option)	A042E428	-	4/15








CFP5E CONNECTION INFORMATION

SAE #3	FLYWHEEL HOUSING
1/2" NPT	FUEL INLET
3/8" NPT	FUEL OUTLET
3/4" NPT	RAW WATER INLET
1" NPT	RAW WATER DISCHARGE
120 / 240 VAC	COOLANT HEATER (1500WATTS)
3" DIA NPT, CUFF, OR FLANGE	EXHAUST CONNECTION
1/2" NPT	VSPLC CONNECTION

- NOTES:
 1. ALL PLUMBING MUST BE SUPPORTED AND/OR ISOLATED SO THAT NO WEIGHT OR STRESS IS APPLIED TO ANY ENGINE COMPONENT.
 2. REFER TO ENGINE DATA SHEET FOR CUSTOMER CONNECTION RECOMMENDATIONS.
 3. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.

LEGEND AND DATUM IDENTIFIER

SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	UJOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

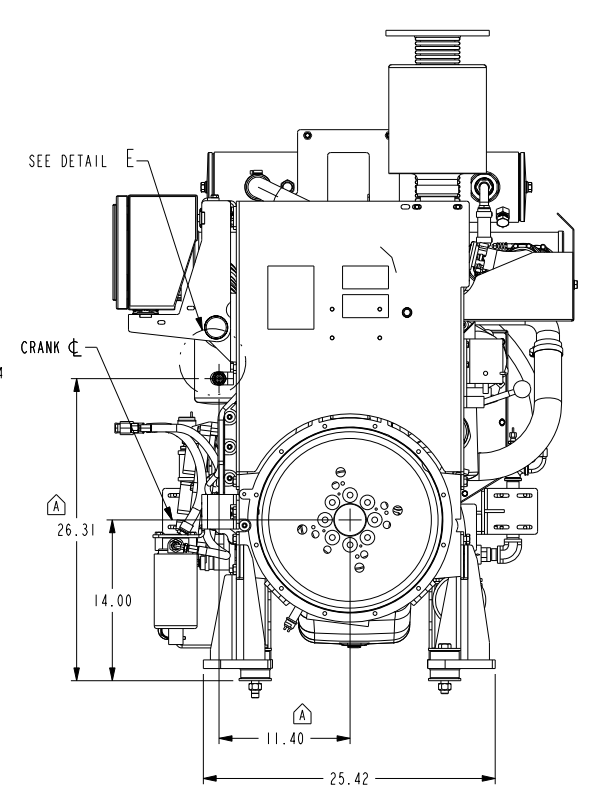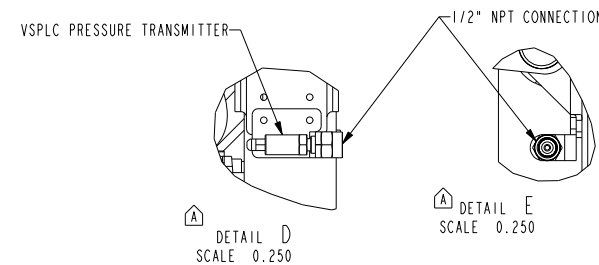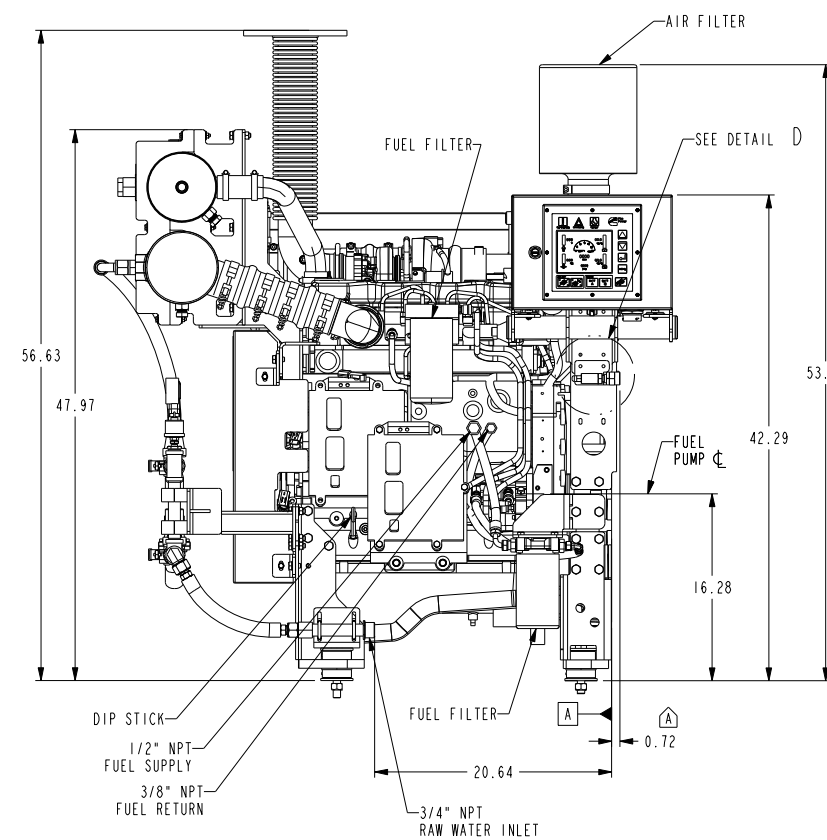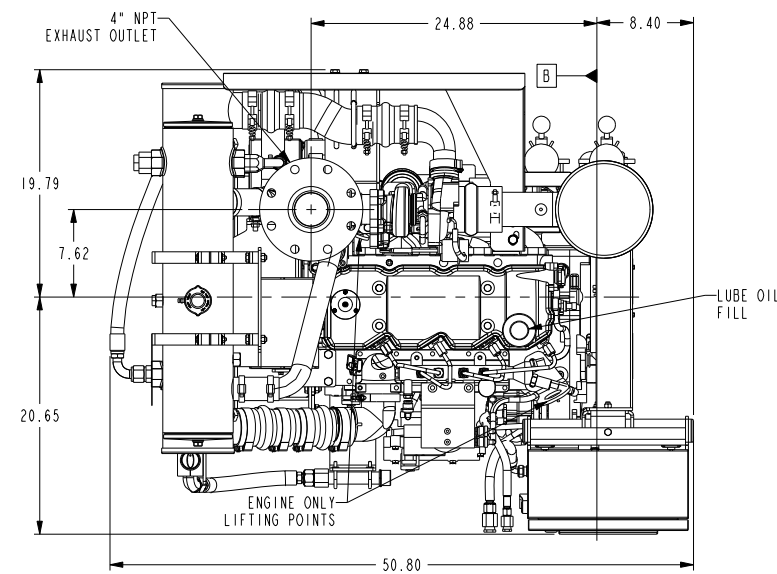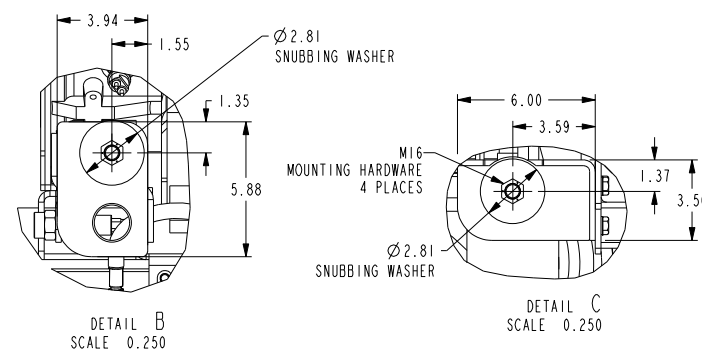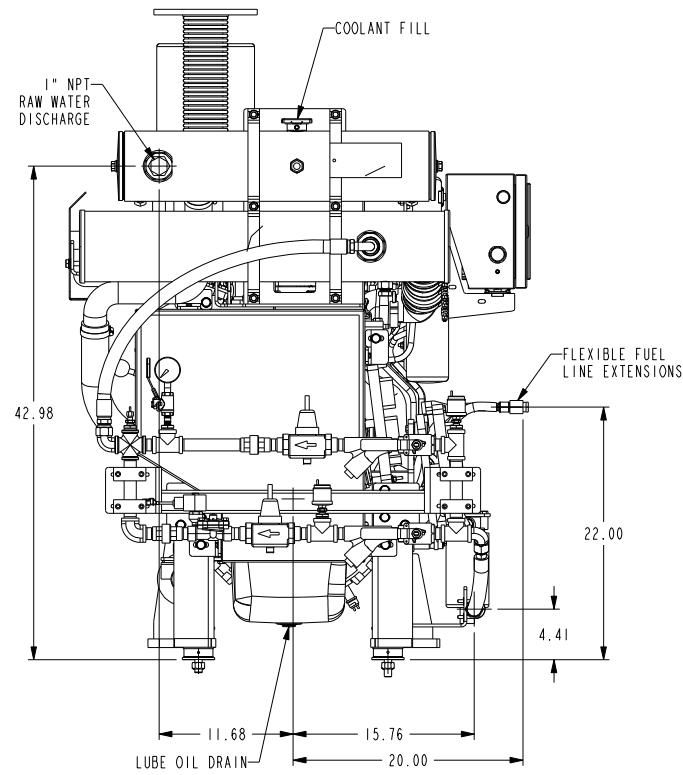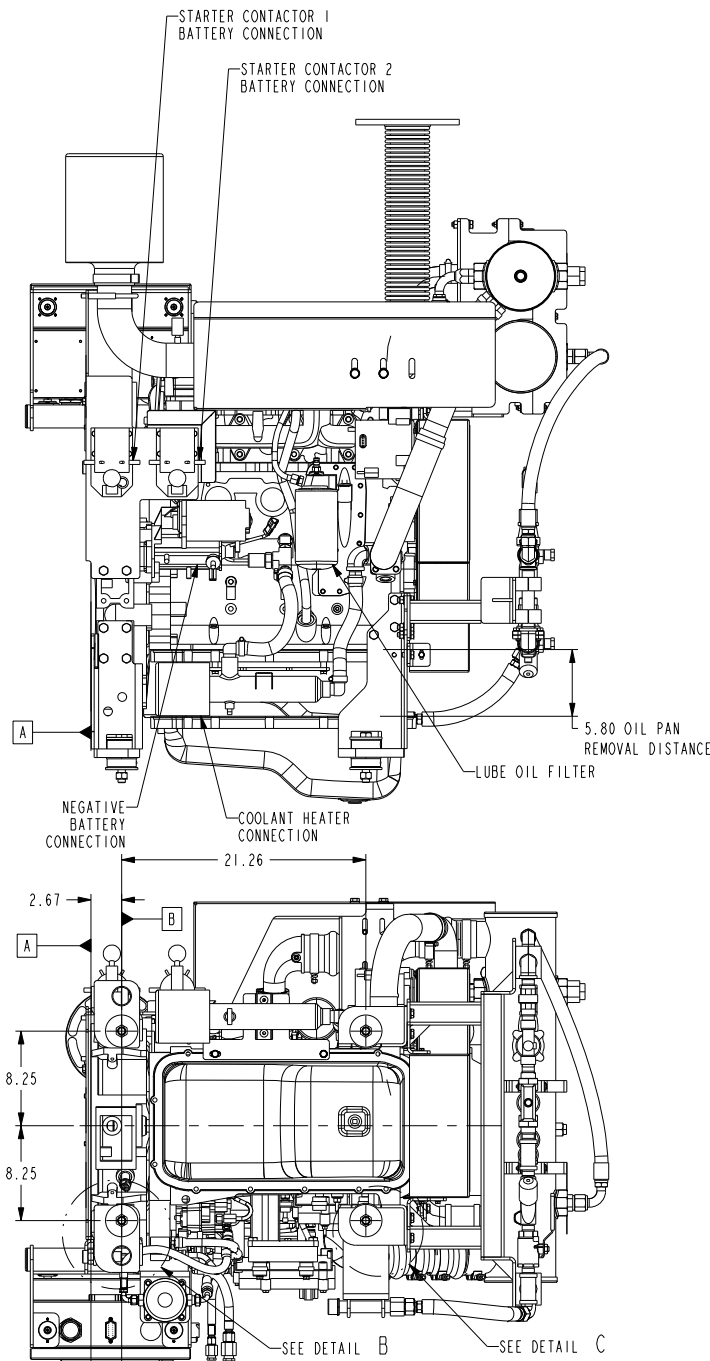

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is loaned to the recipient for use only for the purposes intended. All rights are reserved. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, without the prior written permission of Cummins Fire Power LLC. If you are not an authorized user, you are notified that any use of this document, in whole or in part, is strictly prohibited. If you are an authorized user, you are notified that any use of this document, in whole or in part, is strictly prohibited. If you are an authorized user, you are notified that any use of this document, in whole or in part, is strictly prohibited.

Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BLUEBERRY ROAD
 WHITE BEAR LAKE, WI
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND SUPPORT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

GENERAL ARRANGEMENT
 CFP5E-F10/20/30/40/50

DRAWN BY: PBS
 DATE: 23OCT2013

INIT ECO: 2013-662

DWG UNITS: IN/LB/S
 SCALE: 0.125

EST WEIGHT:




SHEET 1 OF 4
 DRAWING NO: 26721

2016-237	ADDED VSPLC DETAILS	PBS	21MAR2016
ECO	DESCRIPTION OF REVISION	REV BY	DATE

LEGEND AND DATUM IDENTIFIER

SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS

DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	UJOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

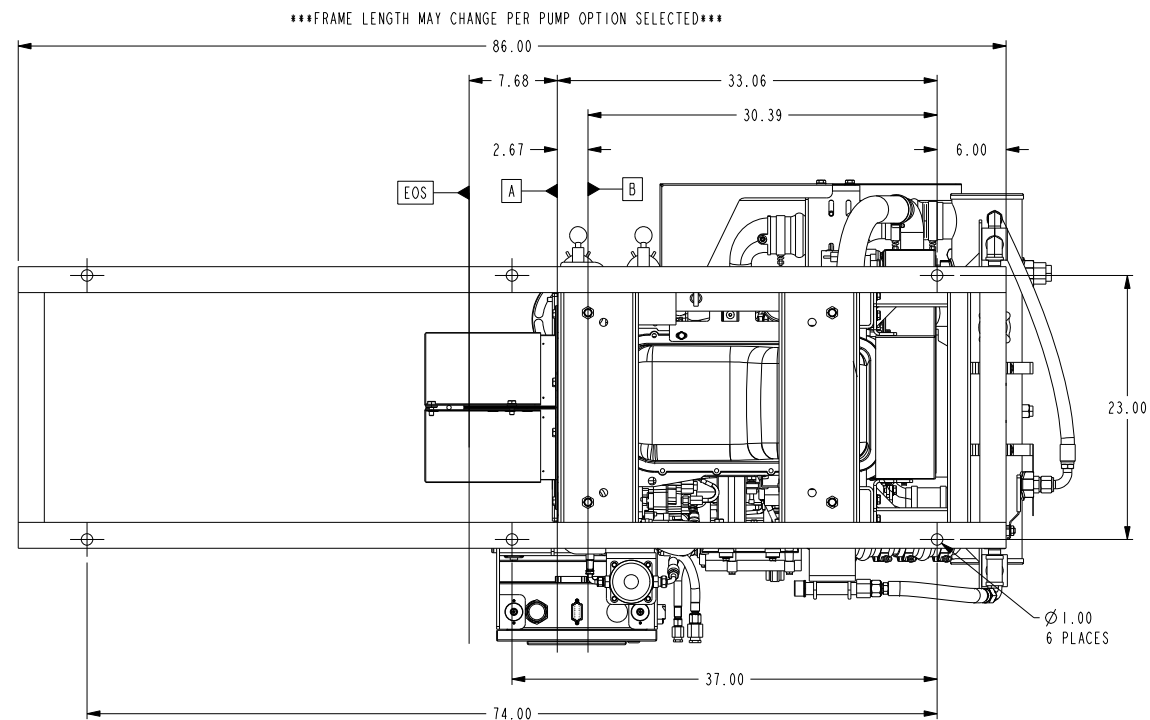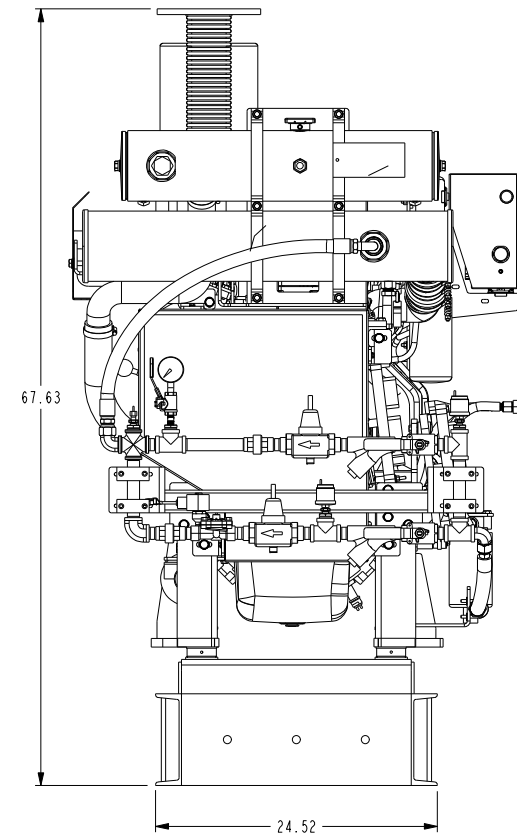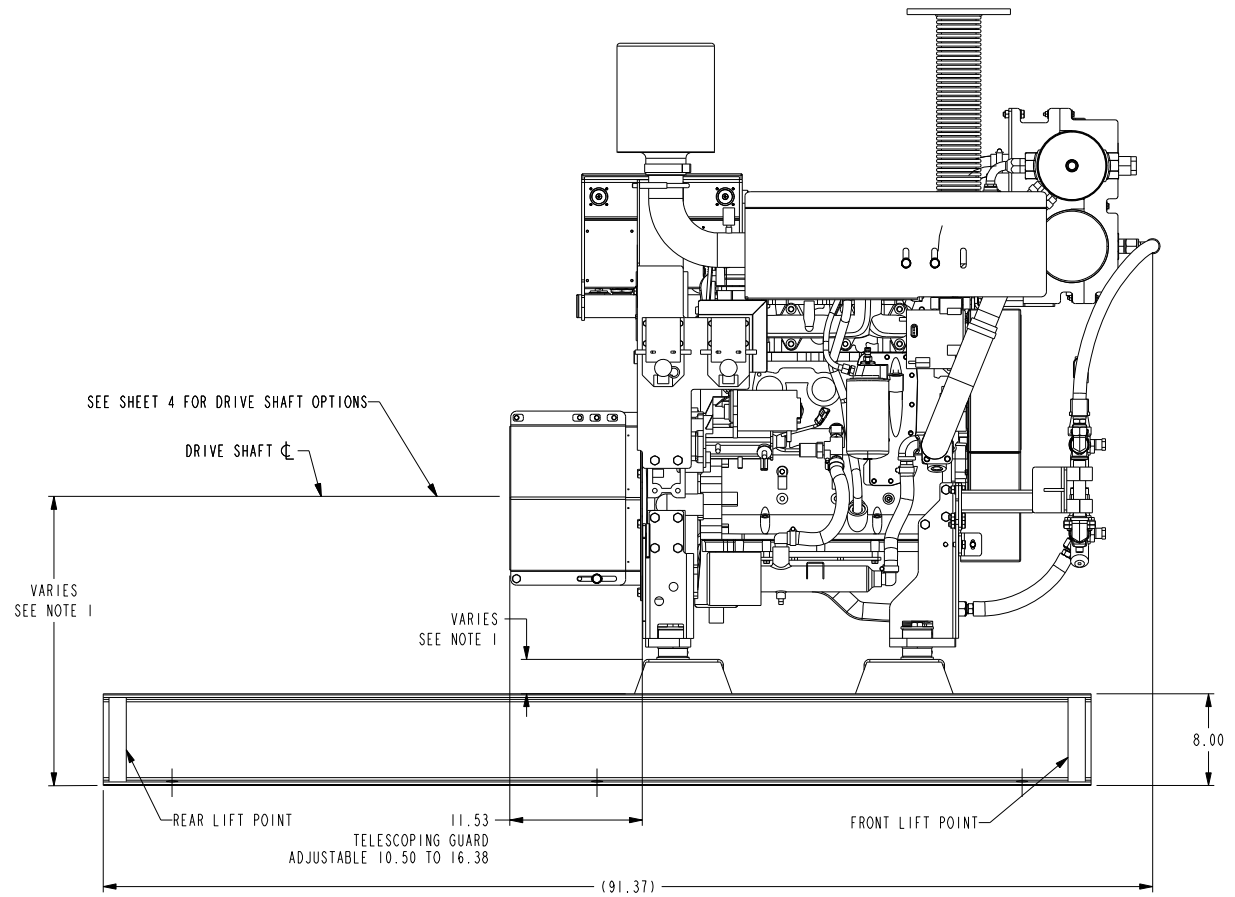




- NOTES:
1. RISER HEIGHT VARIES TO ACCOMMODATE CUSTOMER SUPPLIED PUMPS
 2. REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
 3. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.
 4. REFERENCE SHEET 1 FOR BASE FIRE PUMP INTERFACE

<small>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is loaned to the recipient for use only for the intended purpose. It is not to be distributed, copied, or otherwise used for any other purpose without the express written consent of Cummins Fire Power LLC. If you are not an intended recipient, you should not disseminate, distribute or copy this document. If you have received this document in error, please notify the person whose name is listed on the cover sheet. This document is intended only for the individual named. If you are not the named individual you should not disseminate, distribute or copy this document. If you are not the named individual you should not disseminate, distribute or copy this document. If you are not the named individual you should not disseminate, distribute or copy this document. If you are not the named individual you should not disseminate, distribute or copy this document.</small>			CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUECKLE ROAD WHITE BEAR LAKE, WI WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE: FINISHED DIMENSIONS $\pm .015$		GENERAL ARRANGEMENT CFPSE-F10/20/30/40/50	DWG UNITS: IN/LB/S SCALE: 0.125 EST WEIGHT:	DRAWN BY: PBS DATE: 23OCT2013 SHEET 2 OF 4 DRAWING NO: 26721

A	2016-237	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	21MAR2016
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

LEGEND AND DATUM IDENTIFIER






SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	UJOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

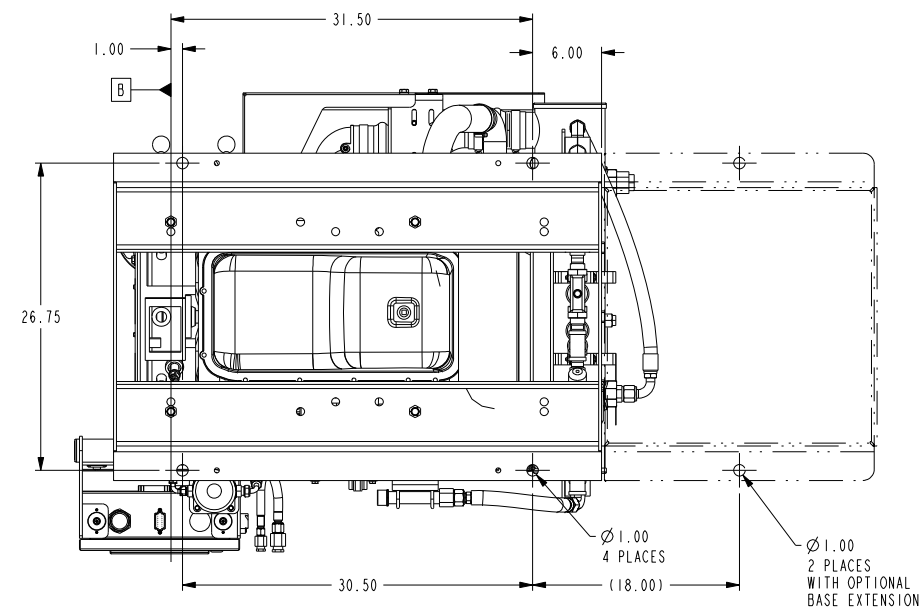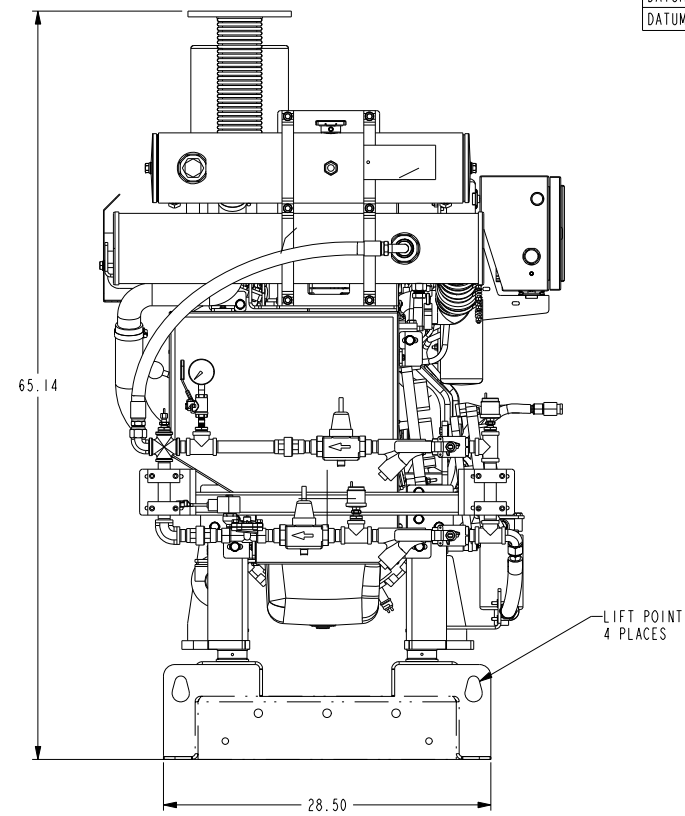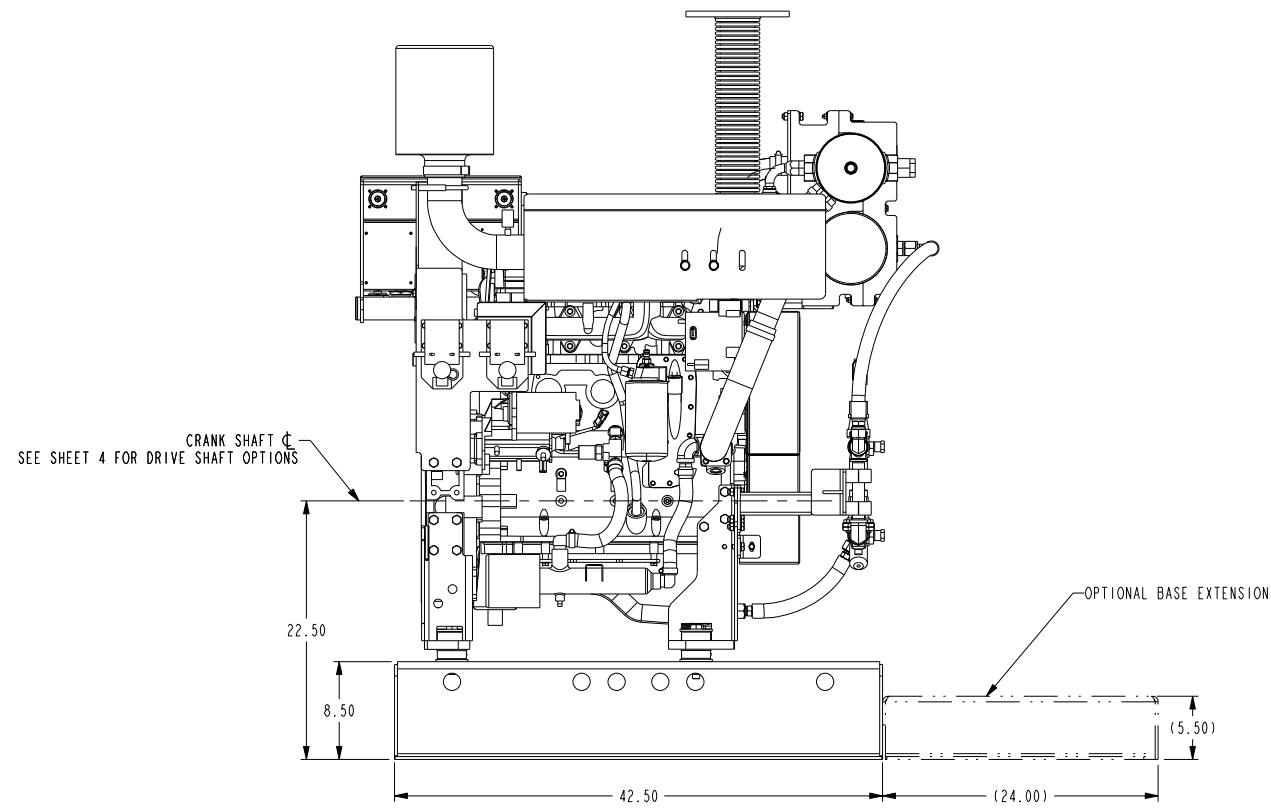

- NOTES:
1. TORSIONAL ANALYSIS IS REQUIRED FOR VERTICAL TURBINE INSTALLATION
 2. REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
 3. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.
 4. REFERENCE SHEET 1 FOR BASE FIRE PUMP INTERFACE

<small>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is loaned to the recipient for use only for the project and for the purpose of the design. It is not to be distributed, copied, or otherwise used for any other purpose without the express written consent of Cummins Fire Power LLC. If you are not an authorized recipient, you should not disseminate, distribute, or otherwise use this information. If you are an authorized recipient, you should not disseminate, distribute, or otherwise use this information without the express written consent of Cummins Fire Power LLC. If you are not an authorized recipient, you should not disseminate, distribute, or otherwise use this information without the express written consent of Cummins Fire Power LLC.</small>			CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUECKLE ROAD WHITE BEAR LAKE, WI WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND OFFICE CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE: FINISHED DIMENSIONS ± .015 MACHINED SURFACES ± .010 CAST SURFACES ± .030 HOLE DIMENSIONS ± .010 HOLE LOCATIONS ± .010 HOLE ANGLES ± .010				
GENERAL ARRANGEMENT CFPSE-F10/20/30/40/50		DWG UNITS: IN/LB/S DRAWN BY: PBS DATE: 23OCT2013		
SCALE: 0.125 EST WEIGHT:		SHEET 3 OF 4 DRAWING NO: 26721		

A	2016-237	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	21MAR2016
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

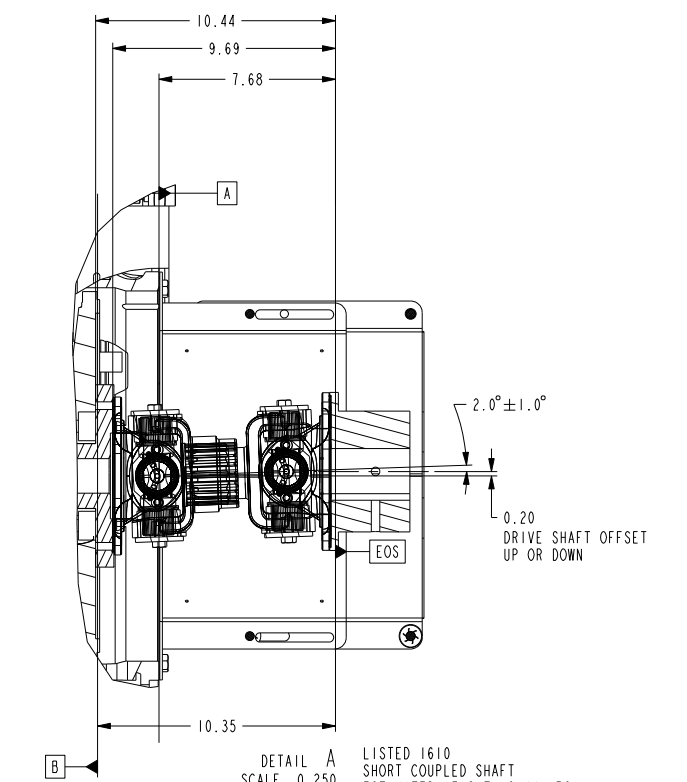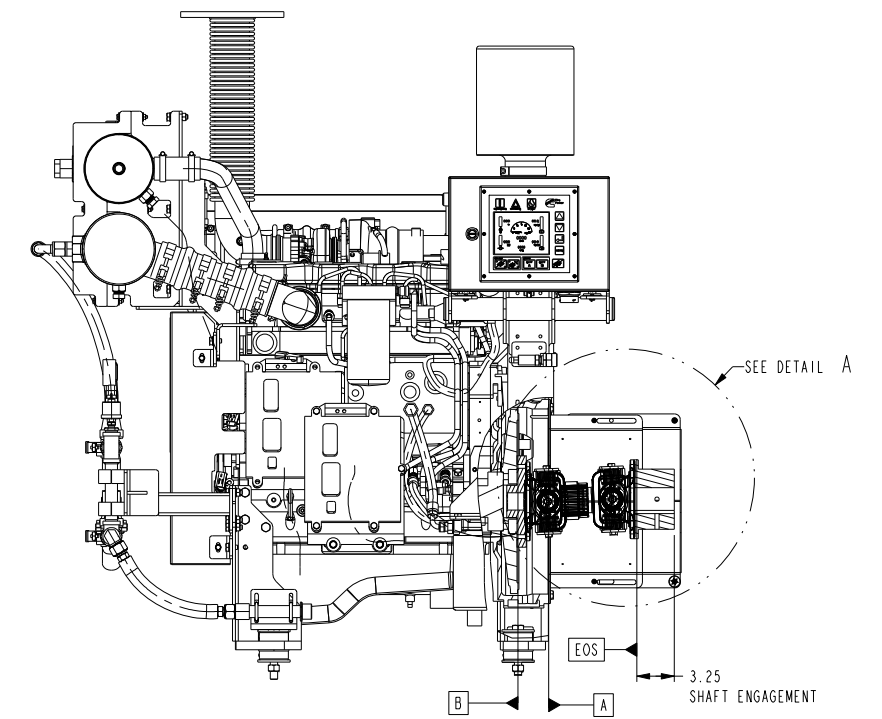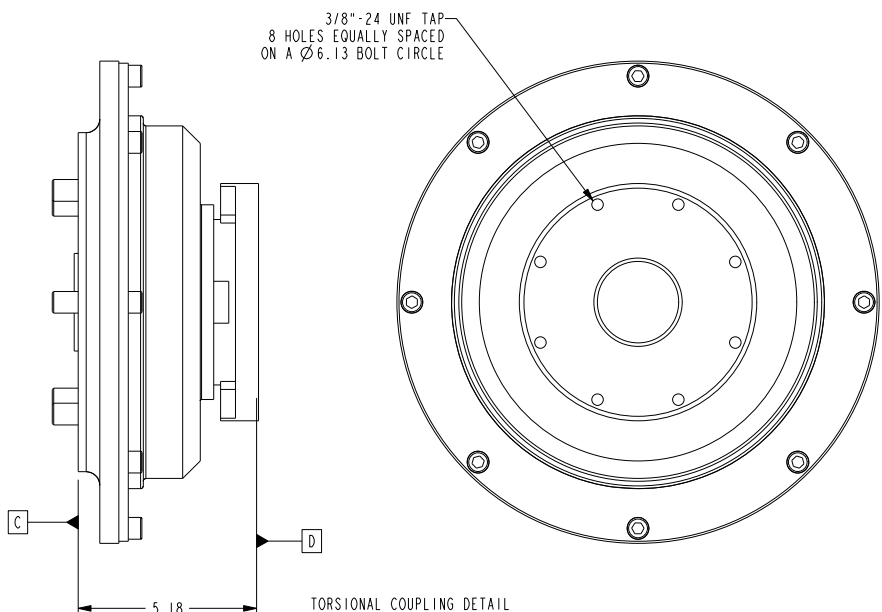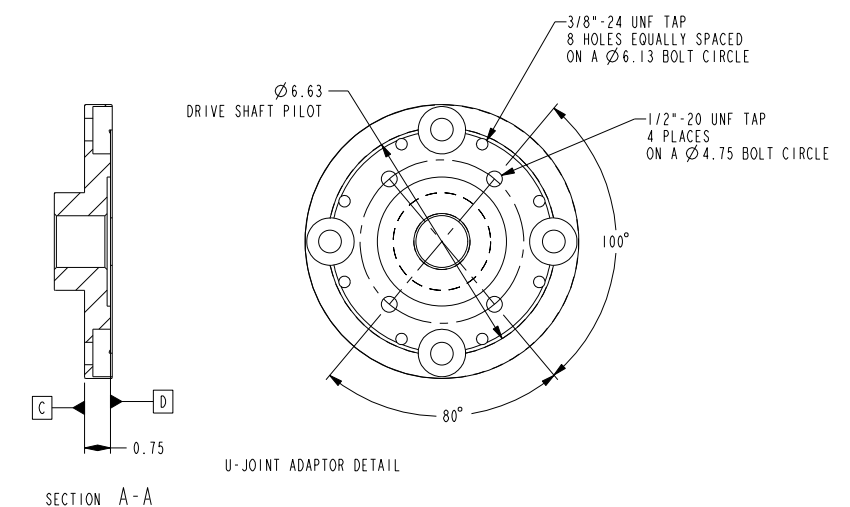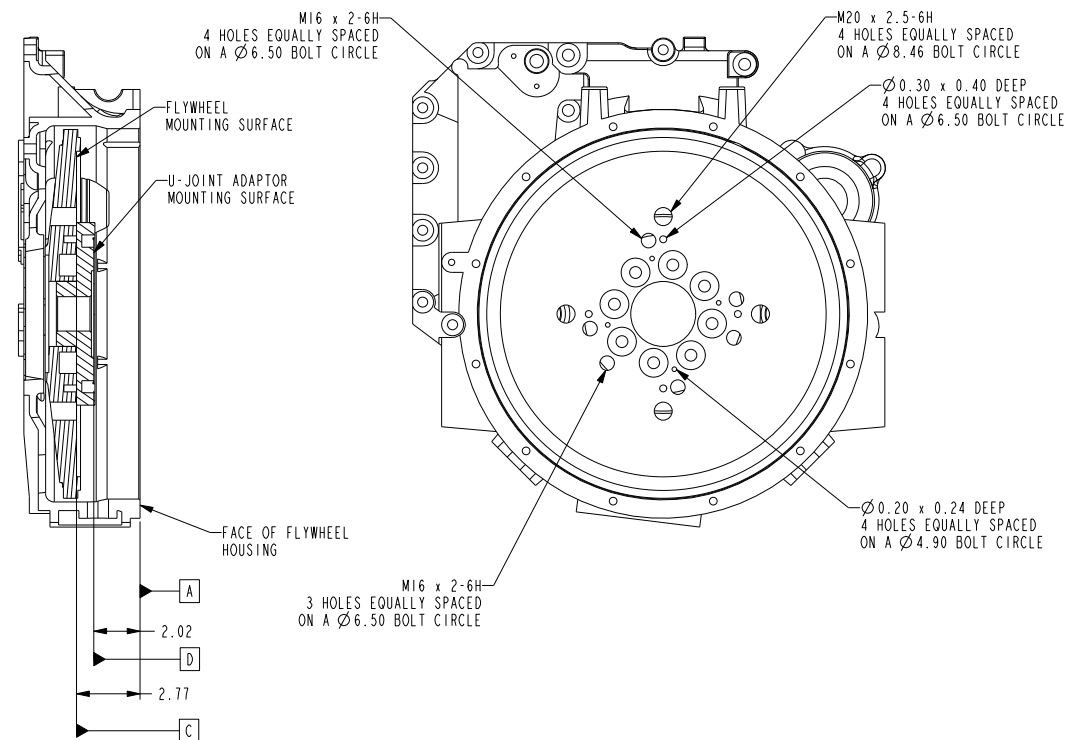

LEGEND AND DATUM IDENTIFIER	
SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	UJOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

ENGINE MODELS	CFP DRIVE SHAFT MATRIX					
	CFP RATING WITH MULTIPLE SHAFTS					
	RPM	RPM	RPM	RPM	RPM	RPM
CPF5E-F10	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT
CPF5E-F20	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT
CPF5E-F30	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT
CPF5E-F40	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT
CPF5E-F50	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT

- NOTES:
- TORSIONAL ANALYSIS IS REQUIRED FOR VERTICAL TURBINE INSTALLATION
 - REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
 - DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.
 - REFERENCE SHEET 1 FOR BASE FIRE PUMP INTERFACE

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
± 0.005	± 0.005	IN/LB/S	MM/KG

DATE: 23OCT2013

DRAWN BY: PBS

INIT ECO: 2013-662

DATE: 21MAR2016

REV BY: ECO

DESCRIPTION OF REVISION

SCALE: 0.125

EST WEIGHT:

SHEET 4 OF 4

DRAWING NO: 26721

REV	DATE	DESCRIPTION OF REVISION	REV BY	DATE
A	2016-237	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	21MAR2016
ECO				

Fire Power

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUECKLE ROAD
WHITE BEAR LAKE, WI
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN










CFP5E CONNECTION INFORMATION

SAE #3	FLYWHEEL HOUSING
1/2" NPT	FUEL INLET
3/8" NPT	FUEL OUTLET
3/4" NPT	RAW WATER INLET
1" NPT	RAW WATER DISCHARGE
120 / 240 VAC	COOLANT HEATER (1500WATTS)
3" DIA NPT, CUFF, OR FLANGE	EXHAUST CONNECTION
1/2" NPT	VSPLC CONNECTION

NOTES:
 1. ALL PLUMBING MUST BE SUPPORTED AND/OR ISOLATED SO THAT NO WEIGHT OR STRESS IS APPLIED TO ANY ENGINE COMPONENT.
 2. REFER TO ENGINE DATA SHEET FOR CUSTOMER CONNECTION RECOMMENDATIONS.
 3. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.

LEGEND AND DATUM IDENTIFIER

SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	U-JOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

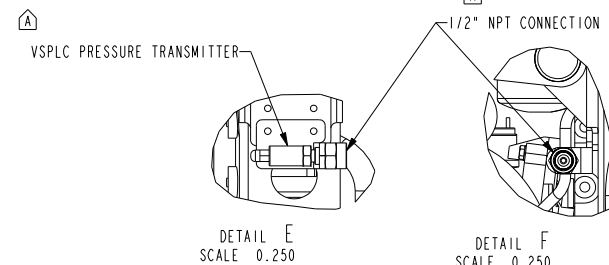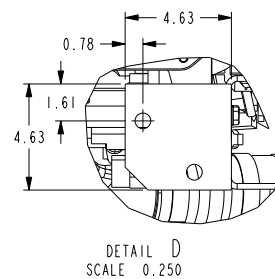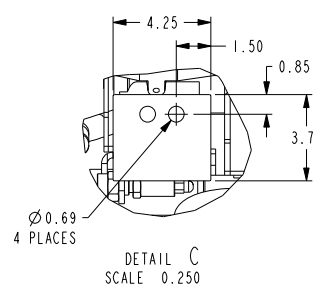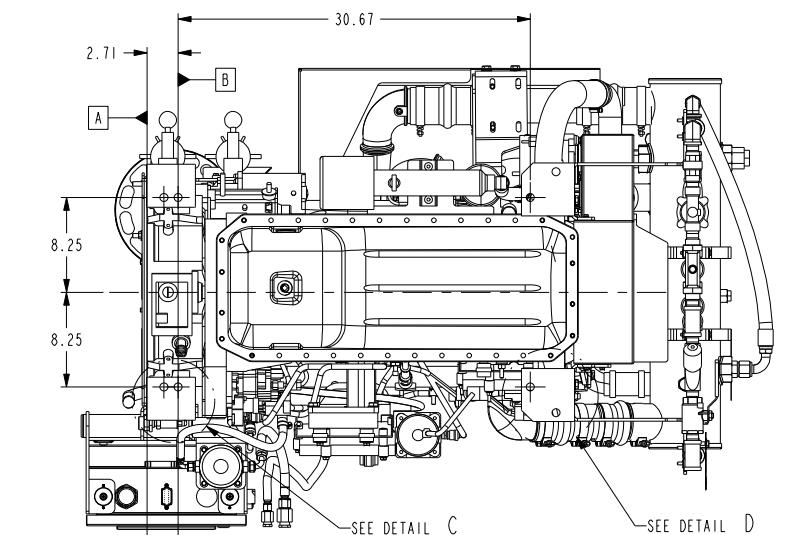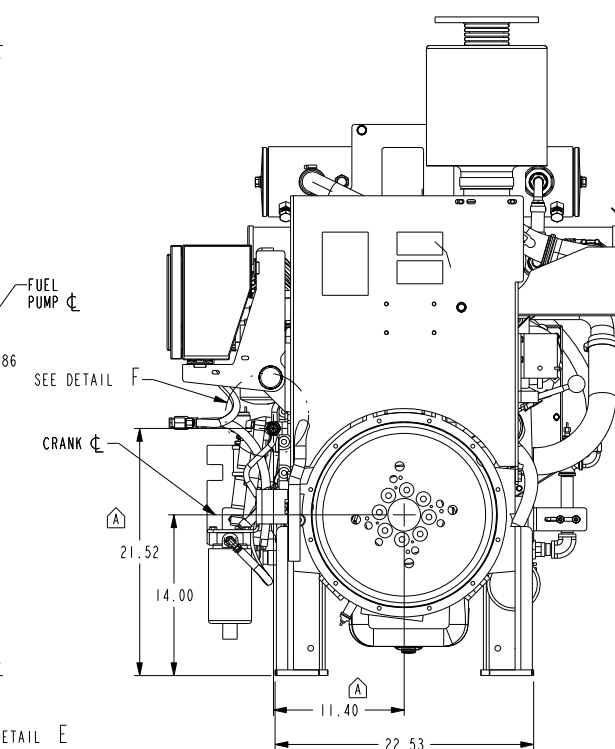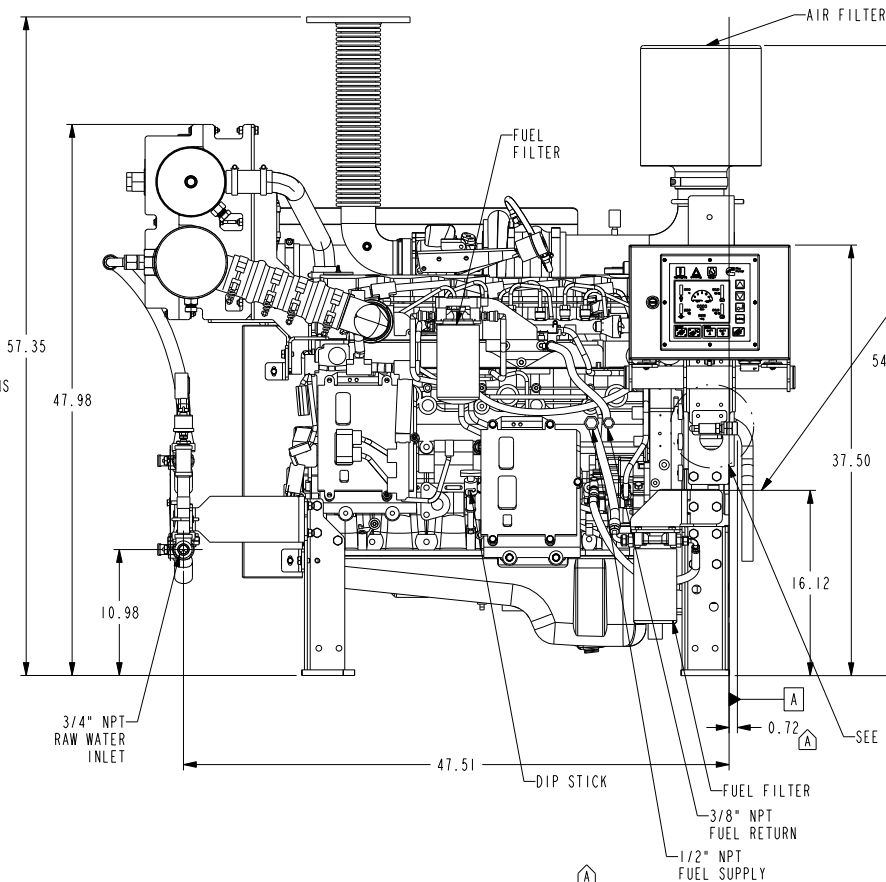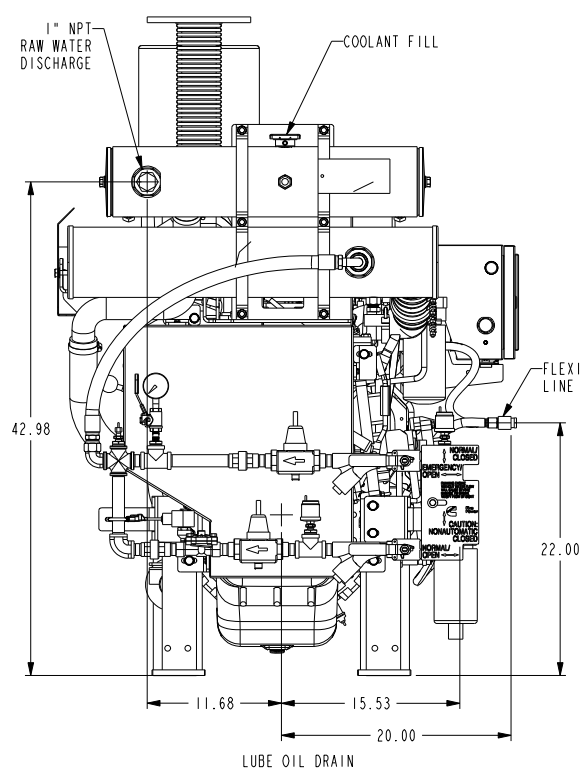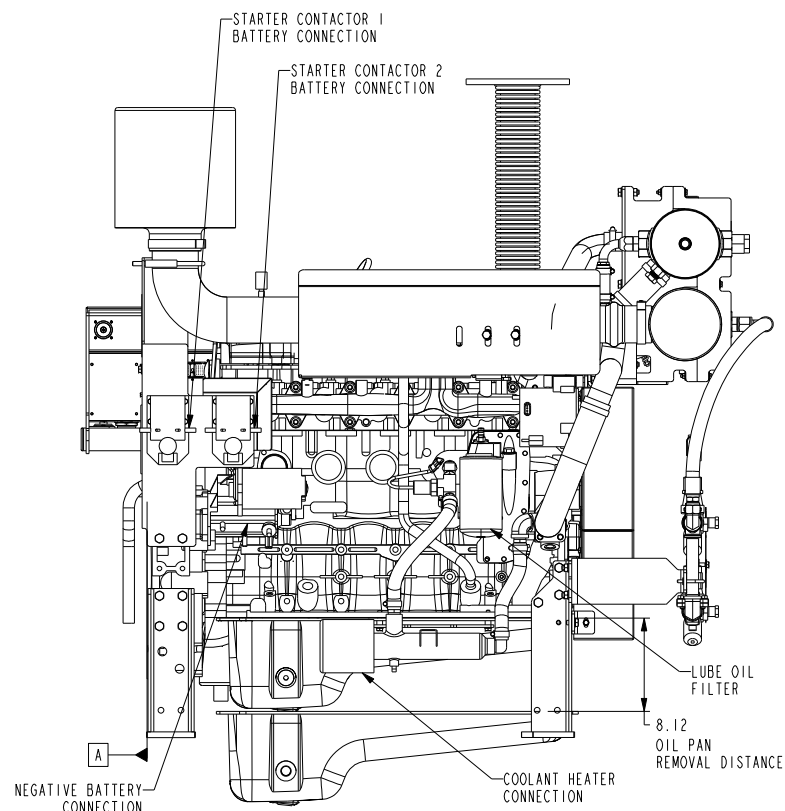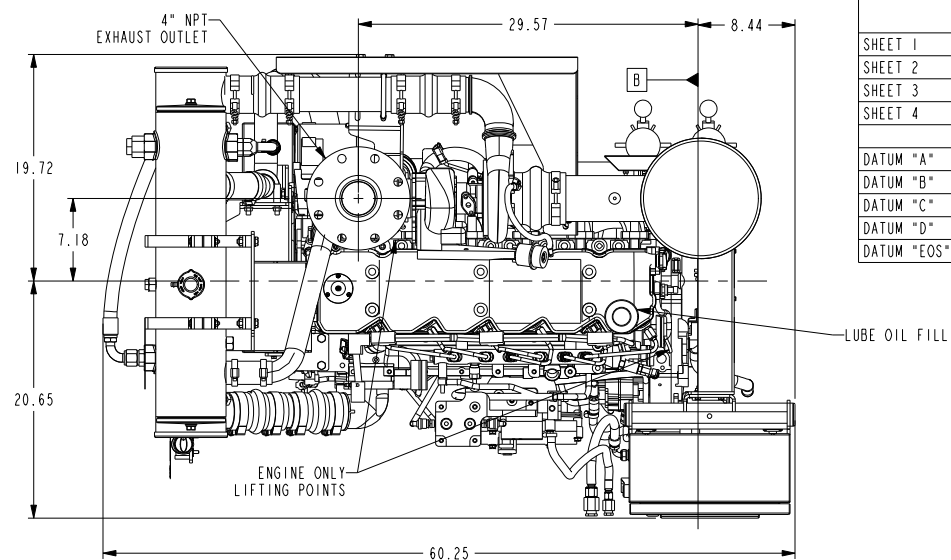

This document contains confidential and trade secret information. It is the property of Cummins Fire Power LLC and is loaned to the recipient for use only for the purpose intended. All rights are reserved. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Cummins Fire Power LLC. If you are not an authorized user, you should not have received this document. If you have received this document in error, please notify Cummins Fire Power LLC immediately. All other rights reserved. ©2013 Cummins Fire Power LLC

Fire Power CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BLUEBERRY ROAD
 WHITE BEAR LAKE, WI
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND SUPPORT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

GENERAL ARRANGEMENT
 CFP7E-F10/F20/F30/F40/F50/F60

DRAWN BY: PBS DATE: 06NOV2013
 PRO-ENGINEER INIT ECO: 2013-662




DWG UNITS: IN/LB/S SCALE: 0.125 SHEET 1 OF 4
 EST WEIGHT: DRAWING NO: 26725

REV	2016-237	ADDED VSPLC DETAILS	PBS	21MAR2016
ECO		DESCRIPTION OF REVISION	REV BY	DATE

LEGEND AND DATUM IDENTIFIER

SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS

DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	U-JOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

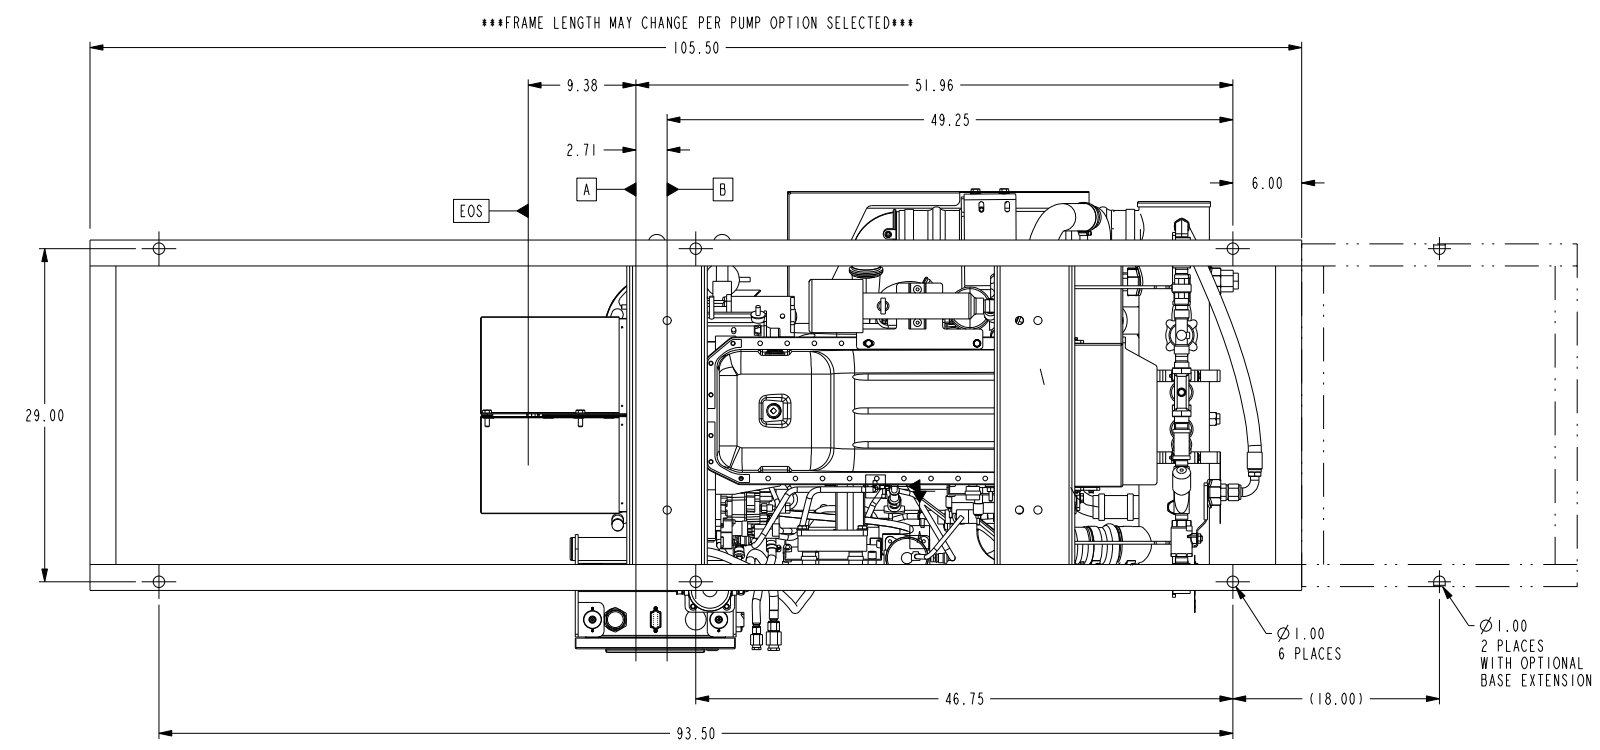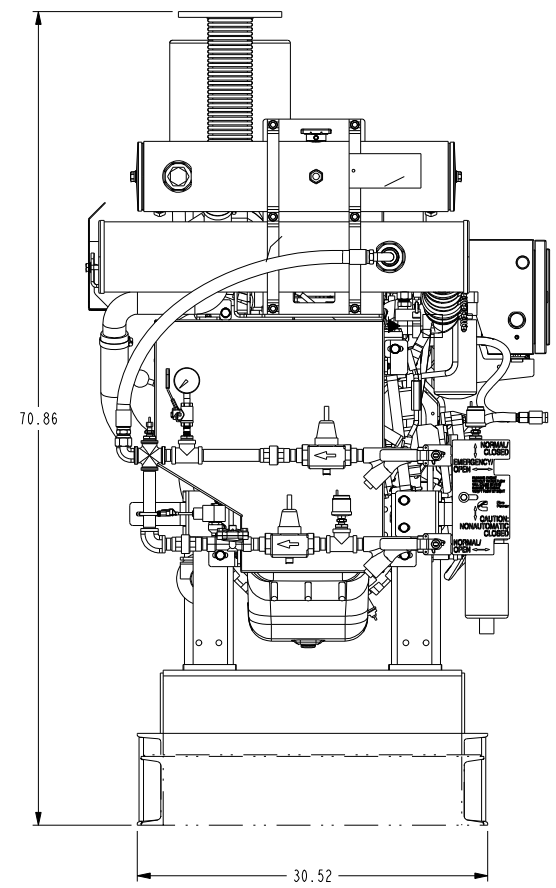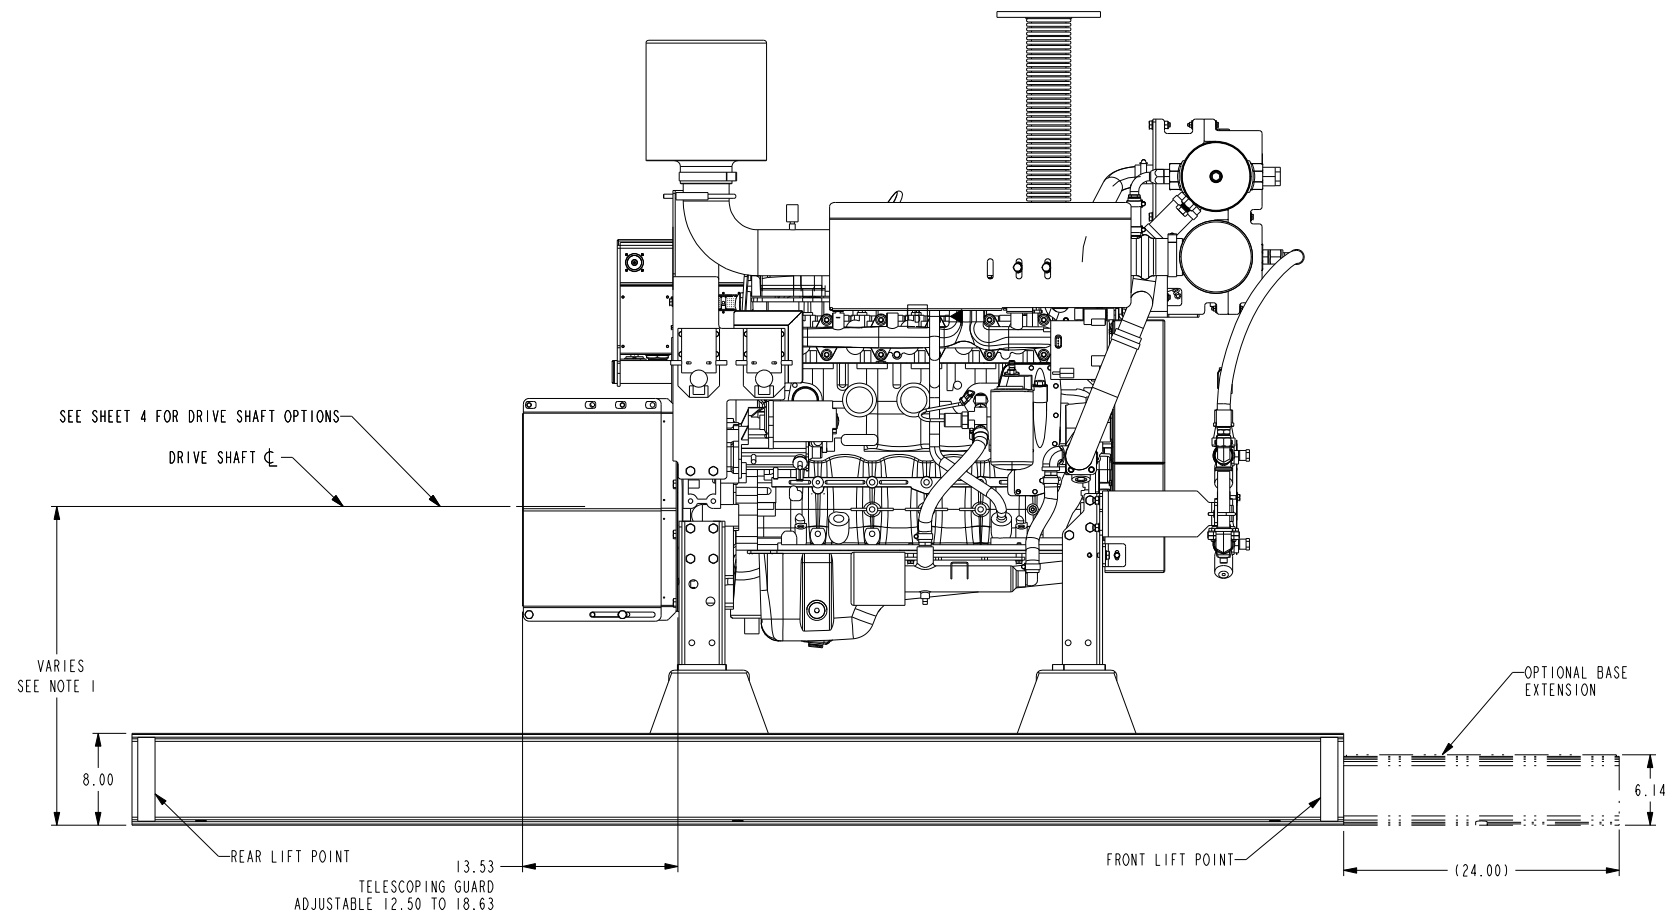

- NOTES:
1. RISER HEIGHT VARIES TO ACCOMMODATE CUSTOMER SUPPLIED PUMPS
 2. REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
 3. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.
 4. REFERENCE SHEET 1 FOR BASE FIRE PUMP INTERFACE




<small>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is loaned to the recipient for use only for the intended purpose. It is not to be distributed, copied, or otherwise used without the express written consent of Cummins Fire Power LLC. If you are not an intended recipient, you should not disseminate, distribute or take any action in reliance on the information herein. If you have received this document in error, please notify the sender immediately by e-mail at firepower@cummins.com and delete this document from your system. All rights reserved. Cummins Fire Power LLC</small>		<p>CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BLUEBERRY ROAD WHITE BEAR LAKE, WI WWW.CUMMINSFIREPOWER.COM</p>	<p>CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</p>
<p>GENERAL ARRANGEMENT C/PTE-F10/F20/F30/F40/F50/F60</p>			
<p>DWG UNITS: IN/LB/S</p>		<p>DRAWN BY: PBS</p>	<p>DATE: 06NOV2013</p>
<p>EST WEIGHT:</p>		<p>PRO-ENGINEER</p>	<p>INIT ECO: 2013-662</p>
<p>SCALE: 0.125</p>		<p>SHEET 2 OF 4</p>	<p>DRAWING NO: 26725</p>

A	2016-237	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	21MAR2016
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

LEGEND AND DATUM IDENTIFIER

SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS

DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	U-JOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

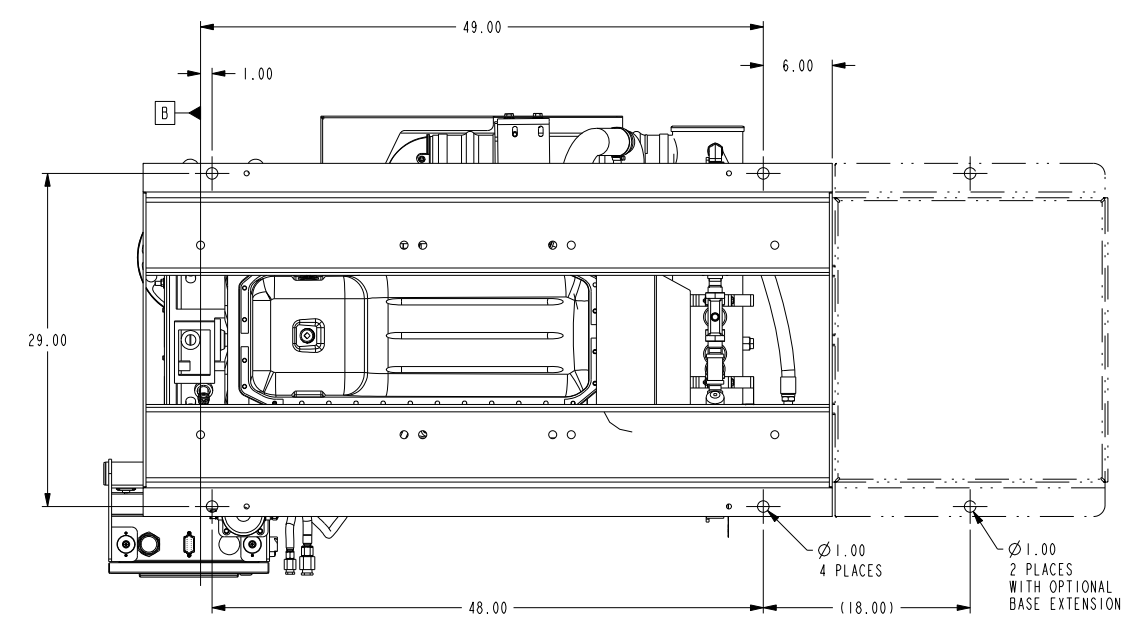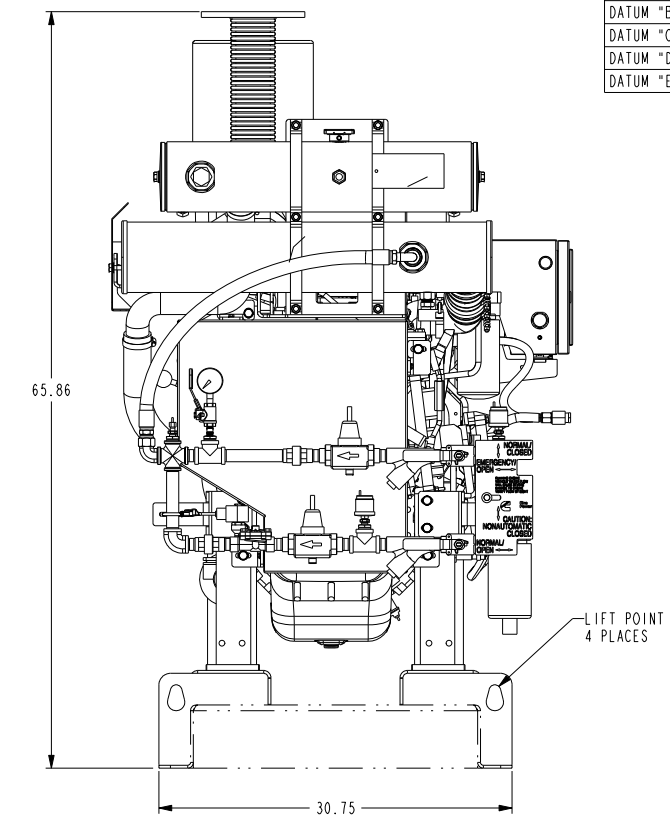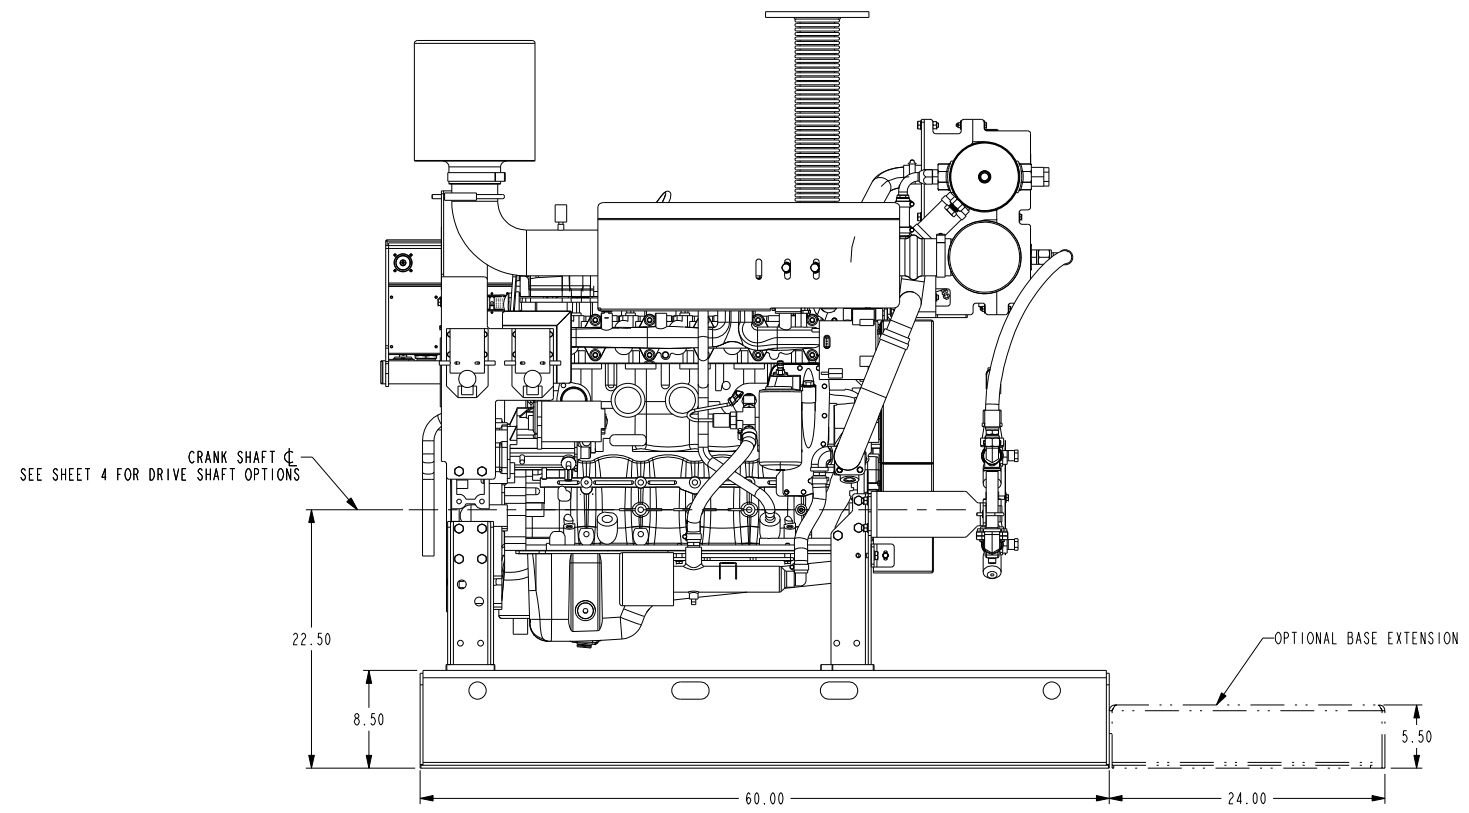



- NOTES:
1. TORSIONAL ANALYSIS IS REQUIRED FOR VERTICAL TURBINE INSTALLATION
 2. REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
 3. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE.
 4. REFERENCE SHEET 1 FOR BASE FIRE PUMP INTERFACE

<small>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is loaned to the recipient for use only for the project for which it is intended. It is not to be distributed, copied, or otherwise used for any other purpose without the express written consent of Cummins Fire Power LLC. If you are not an intended recipient, you should not disseminate, distribute or copy this document. If you have received this document in error, please notify the project manager at the address below. This notice and its contents shall not be construed as an offer, a solicitation of an offer, or any other form of contract. Cummins Fire Power LLC and its subsidiaries, affiliates, agents, and licensors do not warrant the accuracy, reliability, or completeness of the information contained herein. ©2013 Cummins Fire Power LLC</small>			CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BLUEBELL ROAD WHITE BEAR LAKE, WI WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE: FINISHED DIMENSIONS ± .015 SURFACES ± .015 ANGULAR DIMENSIONS ± .1°		GENERAL ARRANGEMENT CFPTE-F10/F20/F30/F40/F50/F60	DWG UNITS: IN/LB/S SCALE: 0.125 EST WEIGHT:	DRAWN BY: PBS PRO-ENGINEER SHEET 3 OF 4 DATE: 06NOV2013 INIT ECO: 2013-662 DRAWING NO: 26725






A	2016-237	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	21MAR2016
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

U-JOINT ADAPTER FOR 1610 DRIVE SHAFT



U-JOINT ADAPTER FOR 1710/1810 DRIVE SHAFT

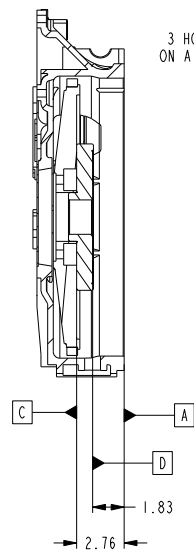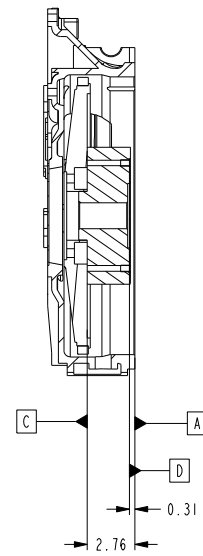



M16 x 2-6H
3 HOLES EQUALLY SPACED
ON A Ø6.50 BOLT CIRCLE

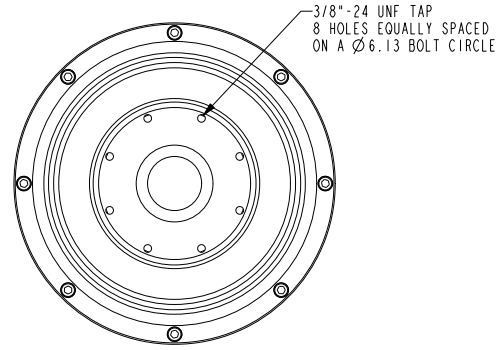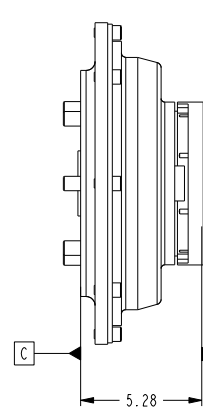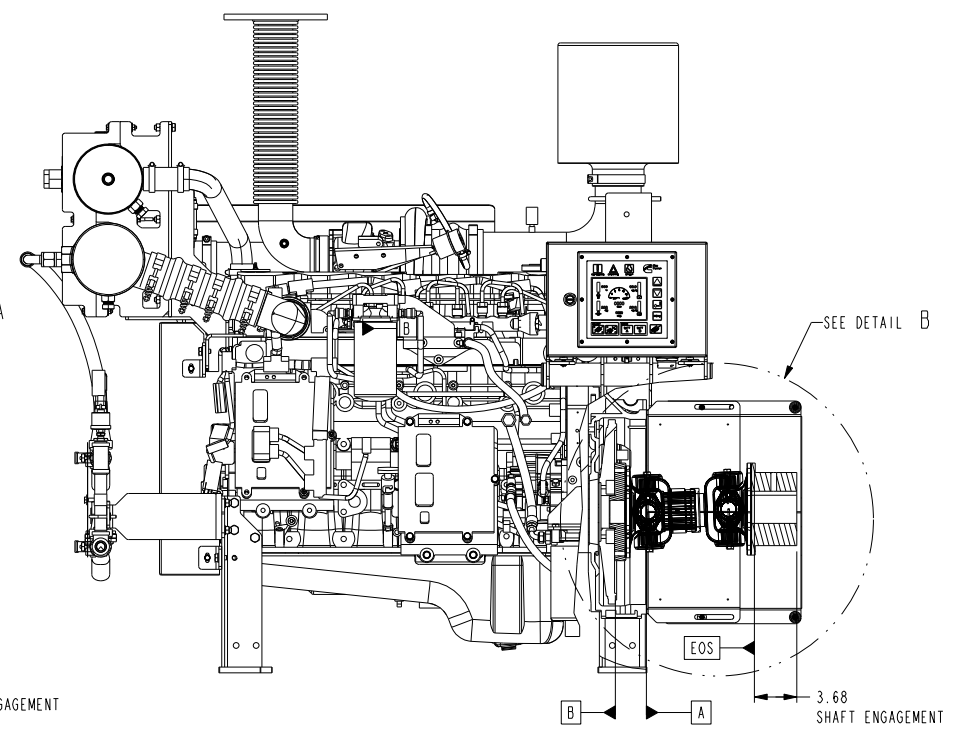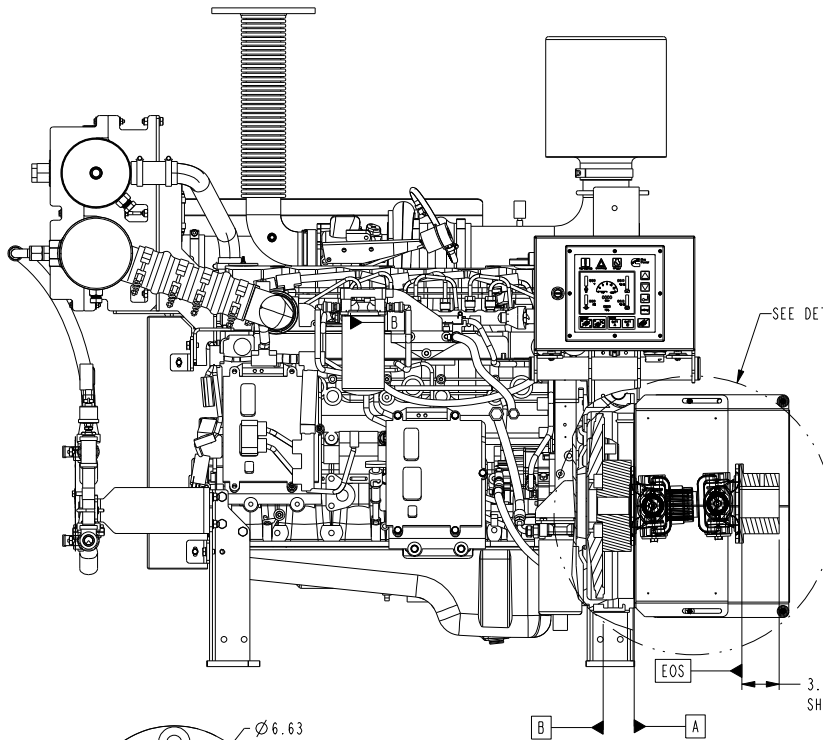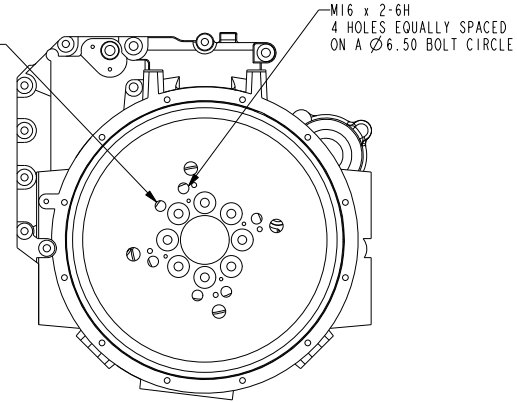


TORSIONAL COUPLING FOR 1610 DRIVE SHAFT

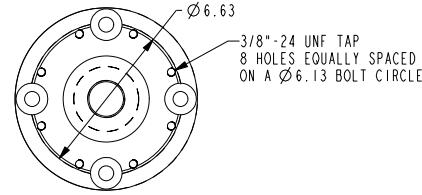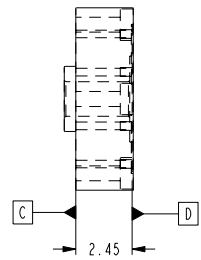

U-JOINT ADAPTER FOR 1610 DRIVE SHAFT

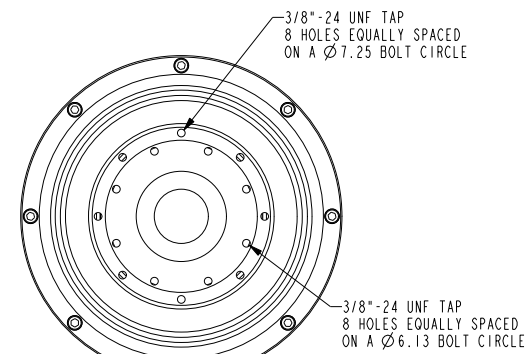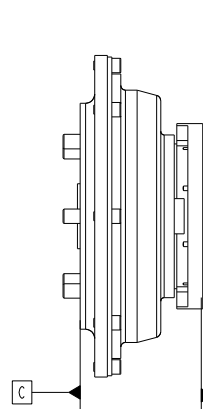


TORSIONAL COUPLING FOR 1610/1710 DRIVE SHAFT

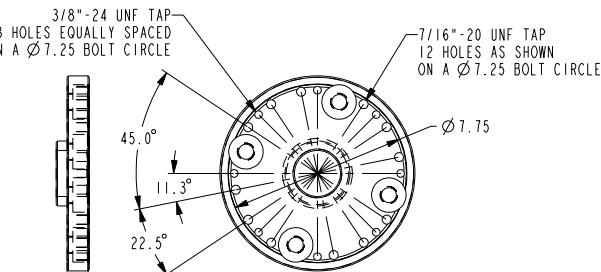


3/8"-24 UNF TAP
8 HOLES EQUALLY SPACED
ON A Ø7.25 BOLT CIRCLE

7/16"-20 UNF TAP
12 HOLES AS SHOWN
ON A Ø7.25 BOLT CIRCLE

U-JOINT ADAPTER FOR 1710/1810 DRIVE SHAFT

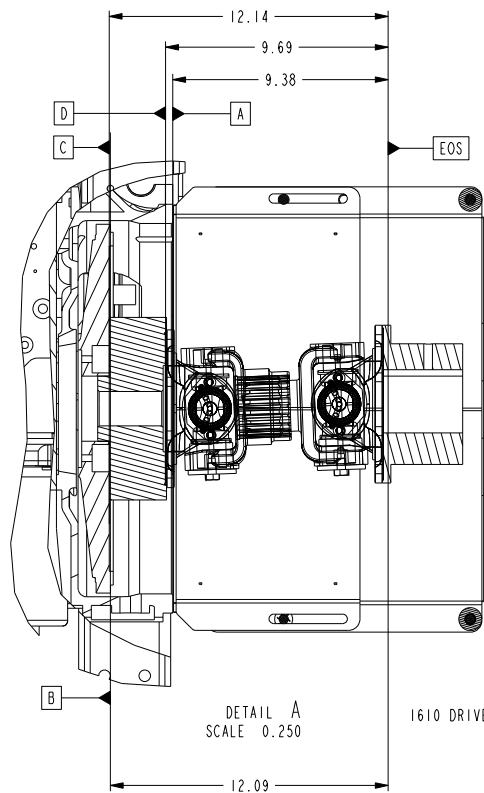

DETAIL A
SCALE 0.250
1610 DRIVE SHAFT

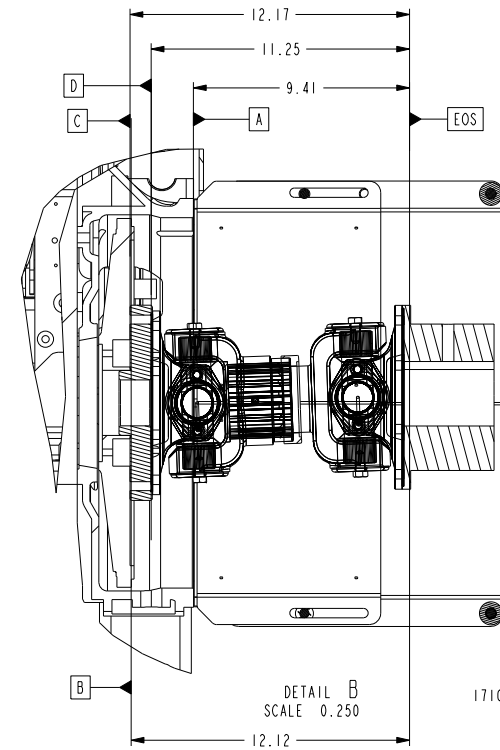

DETAIL B
SCALE 0.250
1710 DRIVE SHAFT

LEGEND AND DATUM IDENTIFIER

SHEET 1	INSTALLATION DRAWING
SHEET 2	GENERAL ARRANGEMENT - HORIZONTAL SPLIT CASE PUMP BASE OPTION
SHEET 3	GENERAL ARRANGEMENT - VERTICAL TURBINE PUMP BASE OPTION
SHEET 4	DRIVE LINE OPTIONS
DATUM "A"	FACE OF FLYWHEEL HOUSING
DATUM "B"	REAR LEG BOLT LOCATION
DATUM "C"	FLYWHEEL MOUNTING SURFACE
DATUM "D"	U-JOINT ADAPTER MOUNTING SURFACE
DATUM "EOS"	END OF PUMP SHAFT

ENGINE MODELS	CFP DRIVE SHAFT MATRIX					
	CFP F-RATING WITH MULTIPLE SHAFTS					
	RPM 1470	RPM 1760	RPM 1900	RPM 2100	RPM 2350	RPM 2600
CPF7E-F10	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT
CPF7E-F20	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT
CPF7E-F30	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT
CPF7E-F40	1710 SHAFT	1710 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT
CPF7E-F50	1710 SHAFT	1710 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT
CPF7E-F60	1710 SHAFT	1710 SHAFT	1710 SHAFT	1610 SHAFT	1610 SHAFT	1610 SHAFT

- NOTES:
 1. TORSIONAL ANALYSIS IS REQUIRED FOR VERTICAL TURBINE INSTALLATION
 2. REFERENCE OWNERS MANUAL FOR DRIVE SHAFT ALIGNMENT SPECS
 3. DRAWING SUBJECT TO CHANGE WITH OUT NOTICE
 4. REFERENCE SHEET 1 FOR BASE FIRE PUMP INTERFACE

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± 1°
 FINISH PROJECTION

Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUECKLE ROAD
 WHITE BEAR LAKE, WI
 WWW.CUMMINSFIREPOWER.COM



CUSTOM DESIGN AND OPTIMIZATION
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

GENERAL ARRANGEMENT
 CFP7E-F10/F20/F30/F40/F50/F60
 DRAWN BY: PBS
 PRO-ENGINEER
 DATE: 06NOV2013
 INIT ECO: 2013-662
 SHEET 4 OF 4
 DRAWING NO: 26725




A	2016-237	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	21MAR2016
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

SCALE: 0.125
 EST WEIGHT:

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	EXHAUST, 90° HALF MARMON, 3" TURBO OUT, 4" 125LB ANSI FLANGE	8550_04
2	1	ASSEMBLY, ECM & MOUNTING, CFP5E & CFP7E	13309
3	1	ASSEMBLY, ENGINE MOUNTING, ISOLATED, CFP5E	13847
4	1	KIT, FUEL LINES, CFP5E, F10/20/30/40/50 - EXT ONLY	15203
5	1	KIT, SENSOR & ADAPTERS, CFP5E	15389
6	1	ASSEMBLY, CONTROL PANEL MOUNTING, CFP POWER UNITS	21249
7	1	COOLING LOOP, 3/4" .12V, RAW WATER	21509
8	1	KIT, WIRE HARNESS, CFP5E	23924
9	1	ASSEMBLY, ACC. REAR MTG, CFP5E	24230
10	1	HEATER, COOLANT, ASSEMBLY, CFP5E	24231
11	1	ASSEMBLY, MISC PIPING, CFP5E	26132
12	1	CONTROL ASSEMBLY, FPDP ELECTRONIC CARBON STEEL	26764
13	1	ASSEMBLY, 12VDC ENGINE, CFP5E-F10/20/30/40/50	26766
14	1	ASSEMBLY, FUEL PREFILTER, CFP7E	A042A386
15	1	ASSEMBLY, HEAT EXCHANGERS, CFP5E	A042A395
16	1	ASSEMBLY, AIR CLEANER, CFP5E	A042A396
17	1	ASSEMBLY, GUARDING, CFP5E	A042E666
18	2	CONTACTOR, MANUAL OVERRIDE, 12V, PN:535-0127, FIREPUMP	8824-12
19	1	CABLES, BATTERY, CFP5E, 7E, 9E, 11E	24234
20	1	PAINT, SPRAY BOMB, CUMMINS RED	A15730-A12
21	1	PLUG, 1/4 NPT, STEEL	LTL-SCSP14

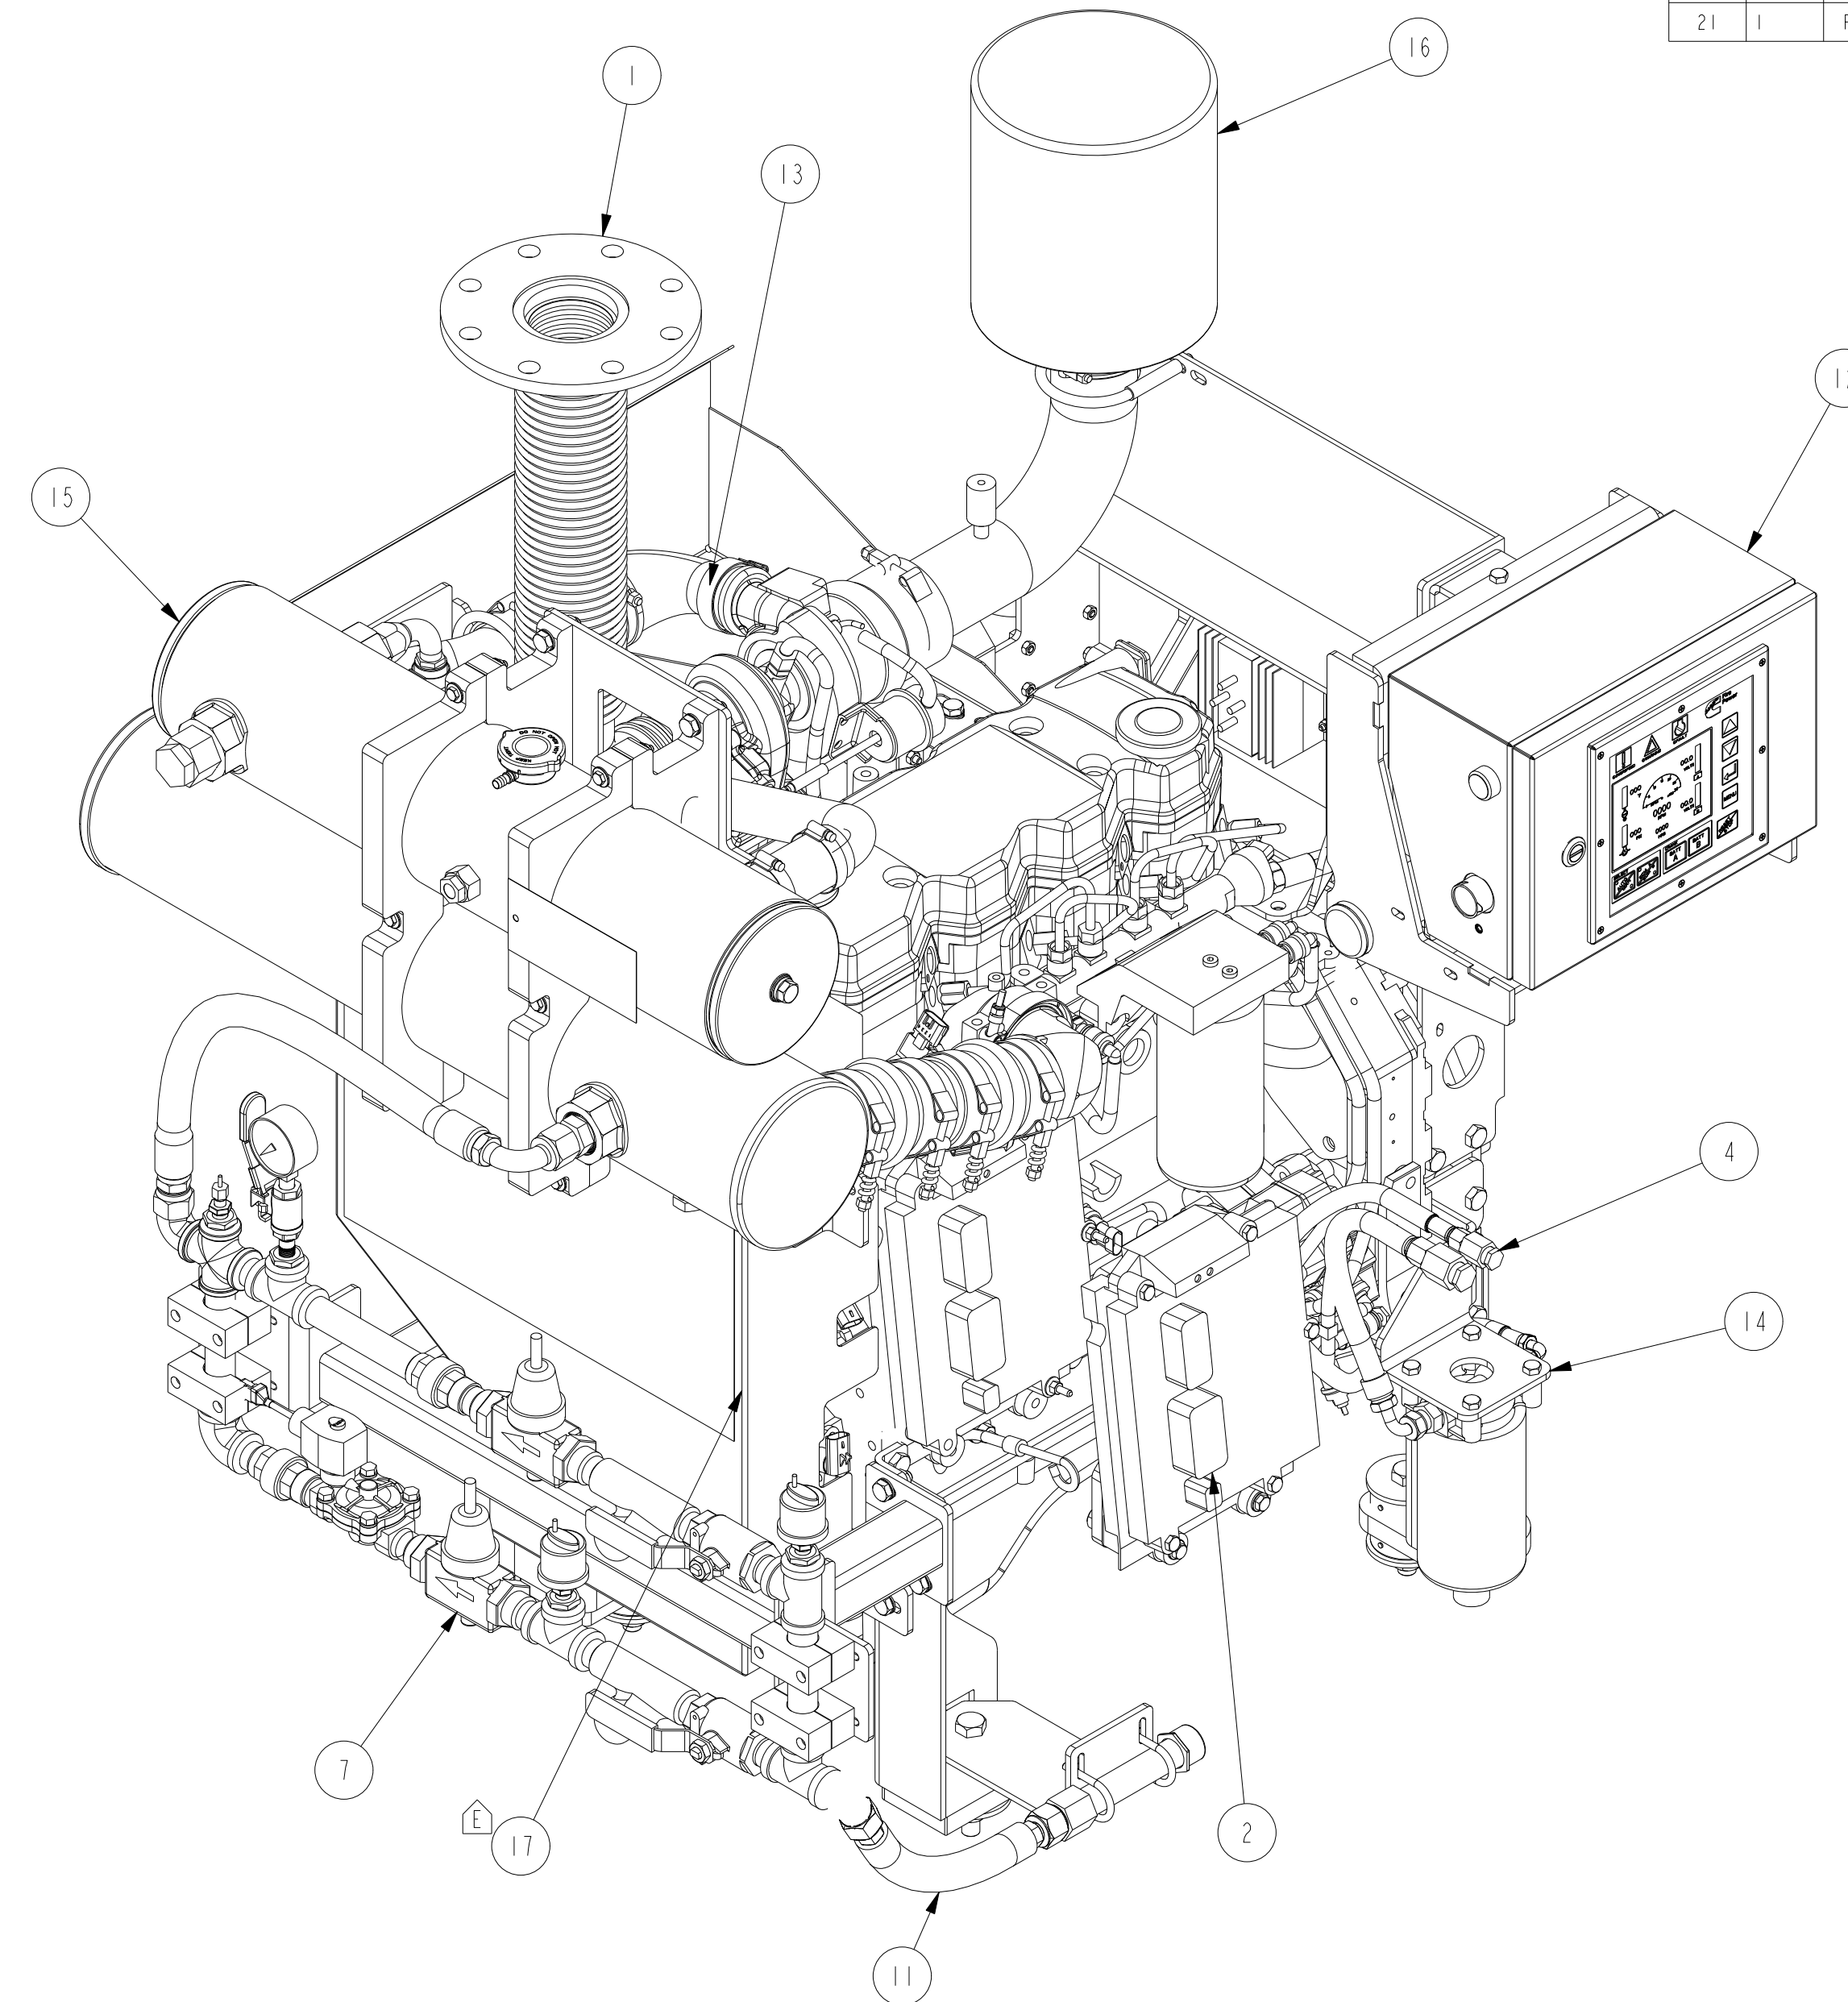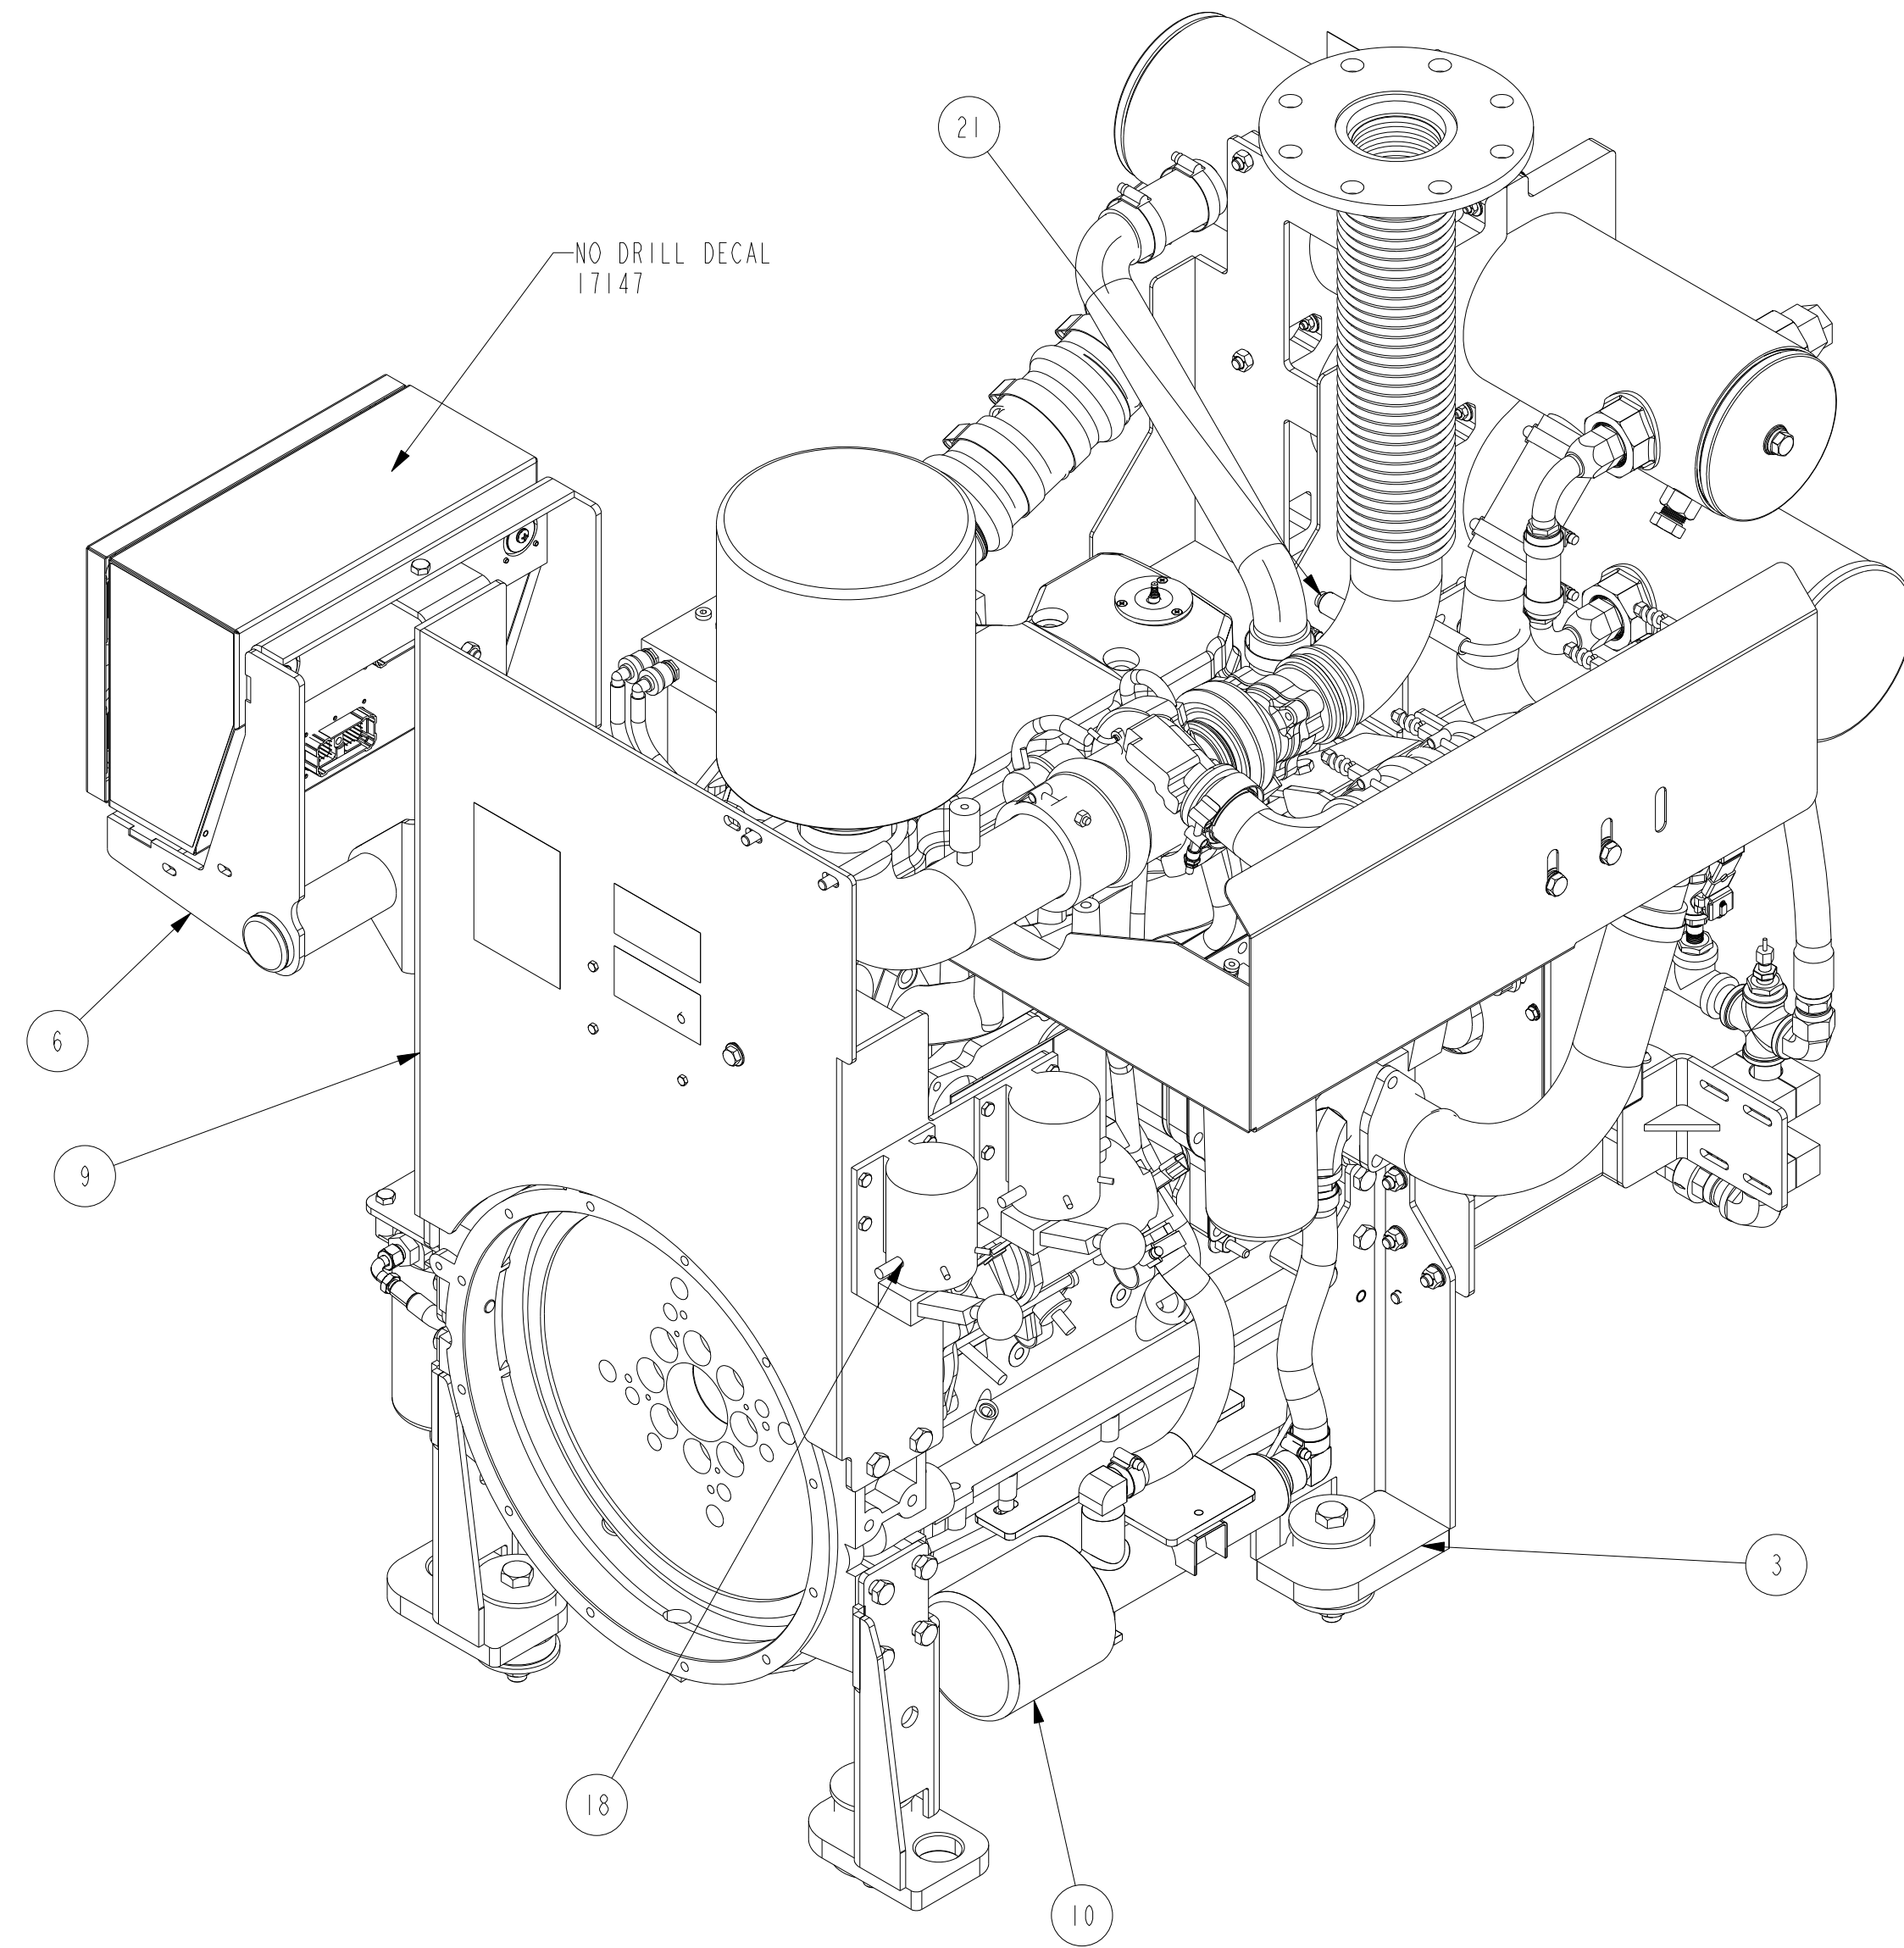

E	2015-347	DELETED: A042B968 ADDED: A042E666	PBS	09 JUN 2015	<p>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. It is not to be distributed, copied, or otherwise used without the express written permission of Cummins Fire Power LLC. If you are not an authorized user, you are notified that any use of this document is strictly prohibited. If you are an authorized user, you are notified that any use of this document is strictly prohibited. If you are not an authorized user, you are notified that any use of this document is strictly prohibited. If you are an authorized user, you are notified that any use of this document is strictly prohibited.</p>		<p>CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERLE ROAD WHITE SEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM</p>	<p>CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN</p>																																					
D	2014-503	DELETED: A042A394 ADDED: A042B968	PBS	17 JUL 2014																																									
C	2014-239	UPDATED PER COOLING LOOP BRACKET	PBS	20 MAY 2014																																									
B	2014-076	DELETED: 16745, 8550-10, 13211, 13319, 13348, 13772, 14202, 16746, 9757, 15496, 24808, 16825, 89545K, FS1212, 16889, 22791, 142784, 133042000, A042A311, CC2743, LTL-SCP146627, 15416, 14399 ADDED, A042A394, 8550-04, A042A395, A042A396, 26766	PBS	07 FEB 2014																																									
A	2014-056	ITEM A042A311 WAS 15749	GVD	29 JAN 2014	<p>UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:</p> <table border="1"> <tr> <th>ANGULAR DIMENSIONS</th> <th>±</th> <th>MACHINED SURFACES</th> <th>IMPERIAL UNITS</th> <th>METRIC UNITS</th> </tr> <tr> <td></td> <td></td> <td></td> <td>1/16"</td> <td>0.25</td> </tr> <tr> <td></td> <td></td> <td></td> <td>1/32"</td> <td>0.125</td> </tr> <tr> <td></td> <td></td> <td></td> <td>1/64"</td> <td>0.0625</td> </tr> <tr> <td></td> <td></td> <td></td> <td>3/128"</td> <td>0.03125</td> </tr> <tr> <td></td> <td></td> <td></td> <td>1/256"</td> <td>0.015625</td> </tr> <tr> <td></td> <td></td> <td></td> <td>1/512"</td> <td>0.0078125</td> </tr> <tr> <td></td> <td></td> <td></td> <td>1/1024"</td> <td>0.00390625</td> </tr> </table>	ANGULAR DIMENSIONS	±	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS				1/16"	0.25				1/32"	0.125				1/64"	0.0625				3/128"	0.03125				1/256"	0.015625				1/512"	0.0078125				1/1024"	0.00390625
ANGULAR DIMENSIONS	±	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS																																									
			1/16"	0.25																																									
			1/32"	0.125																																									
			1/64"	0.0625																																									
			3/128"	0.03125																																									
			1/256"	0.015625																																									
			1/512"	0.0078125																																									
			1/1024"	0.00390625																																									
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE	<p>ASSEMBLY, FIRE PUMP CFP5E-F10/20/30/40/50</p> <p>DWG UNITS: IN/LB/S SCALE: 0.188 EST WEIGHT:</p> <p>DRAWN BY: PBS DATE: 08AUG2013 SHEET 1 OF 3 DRAWING NO: 26105</p>																																								

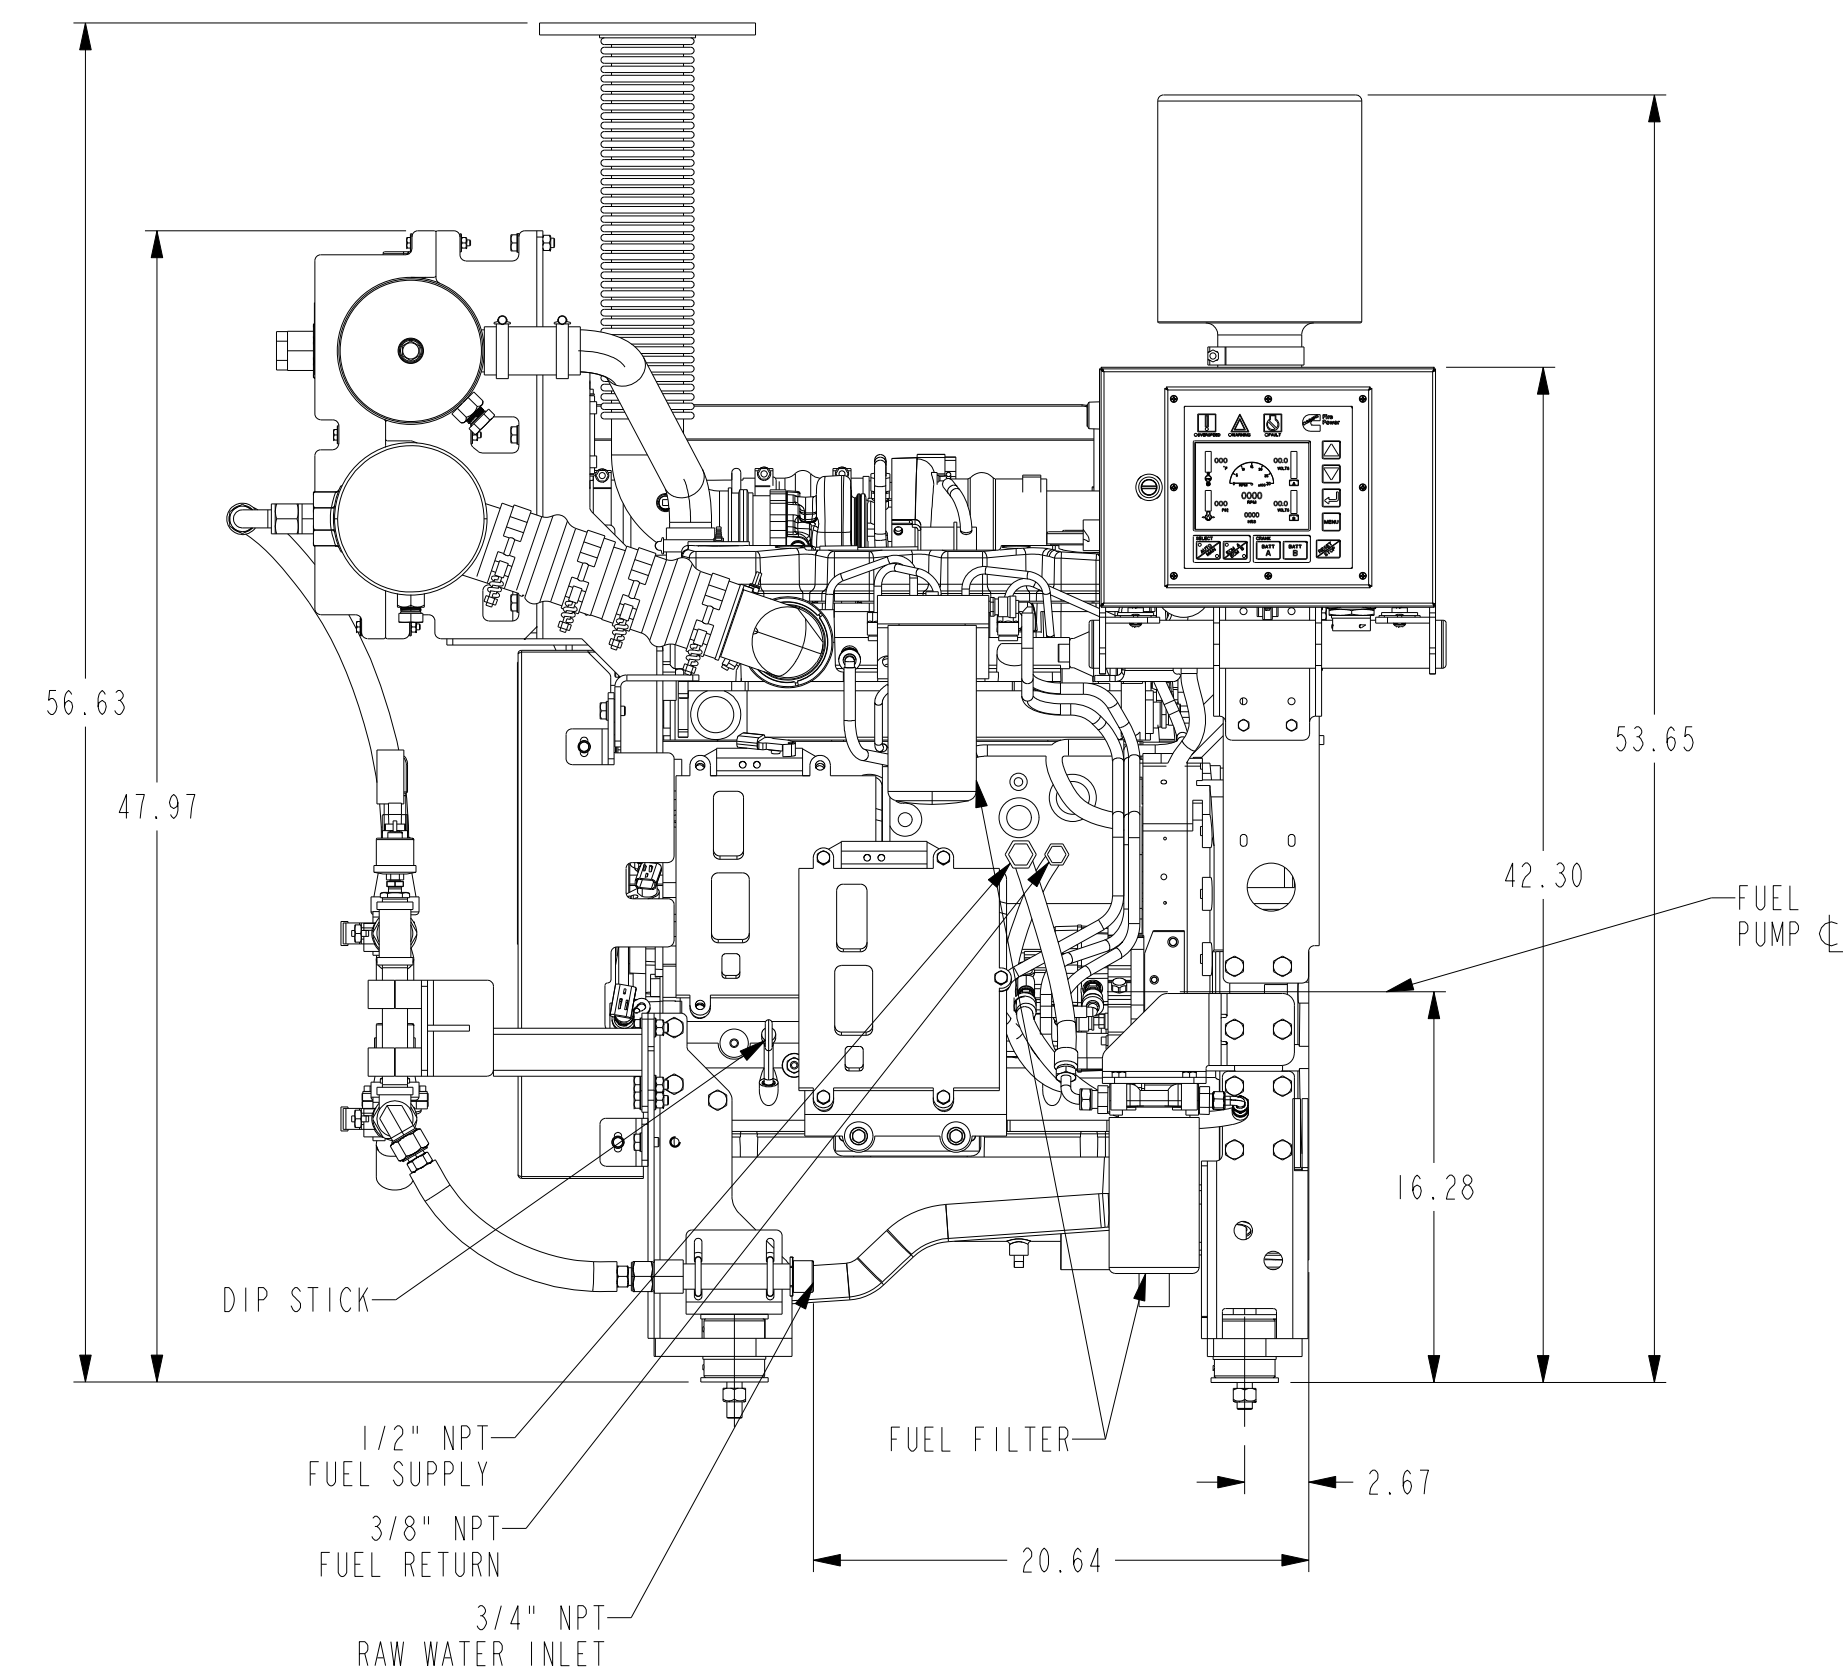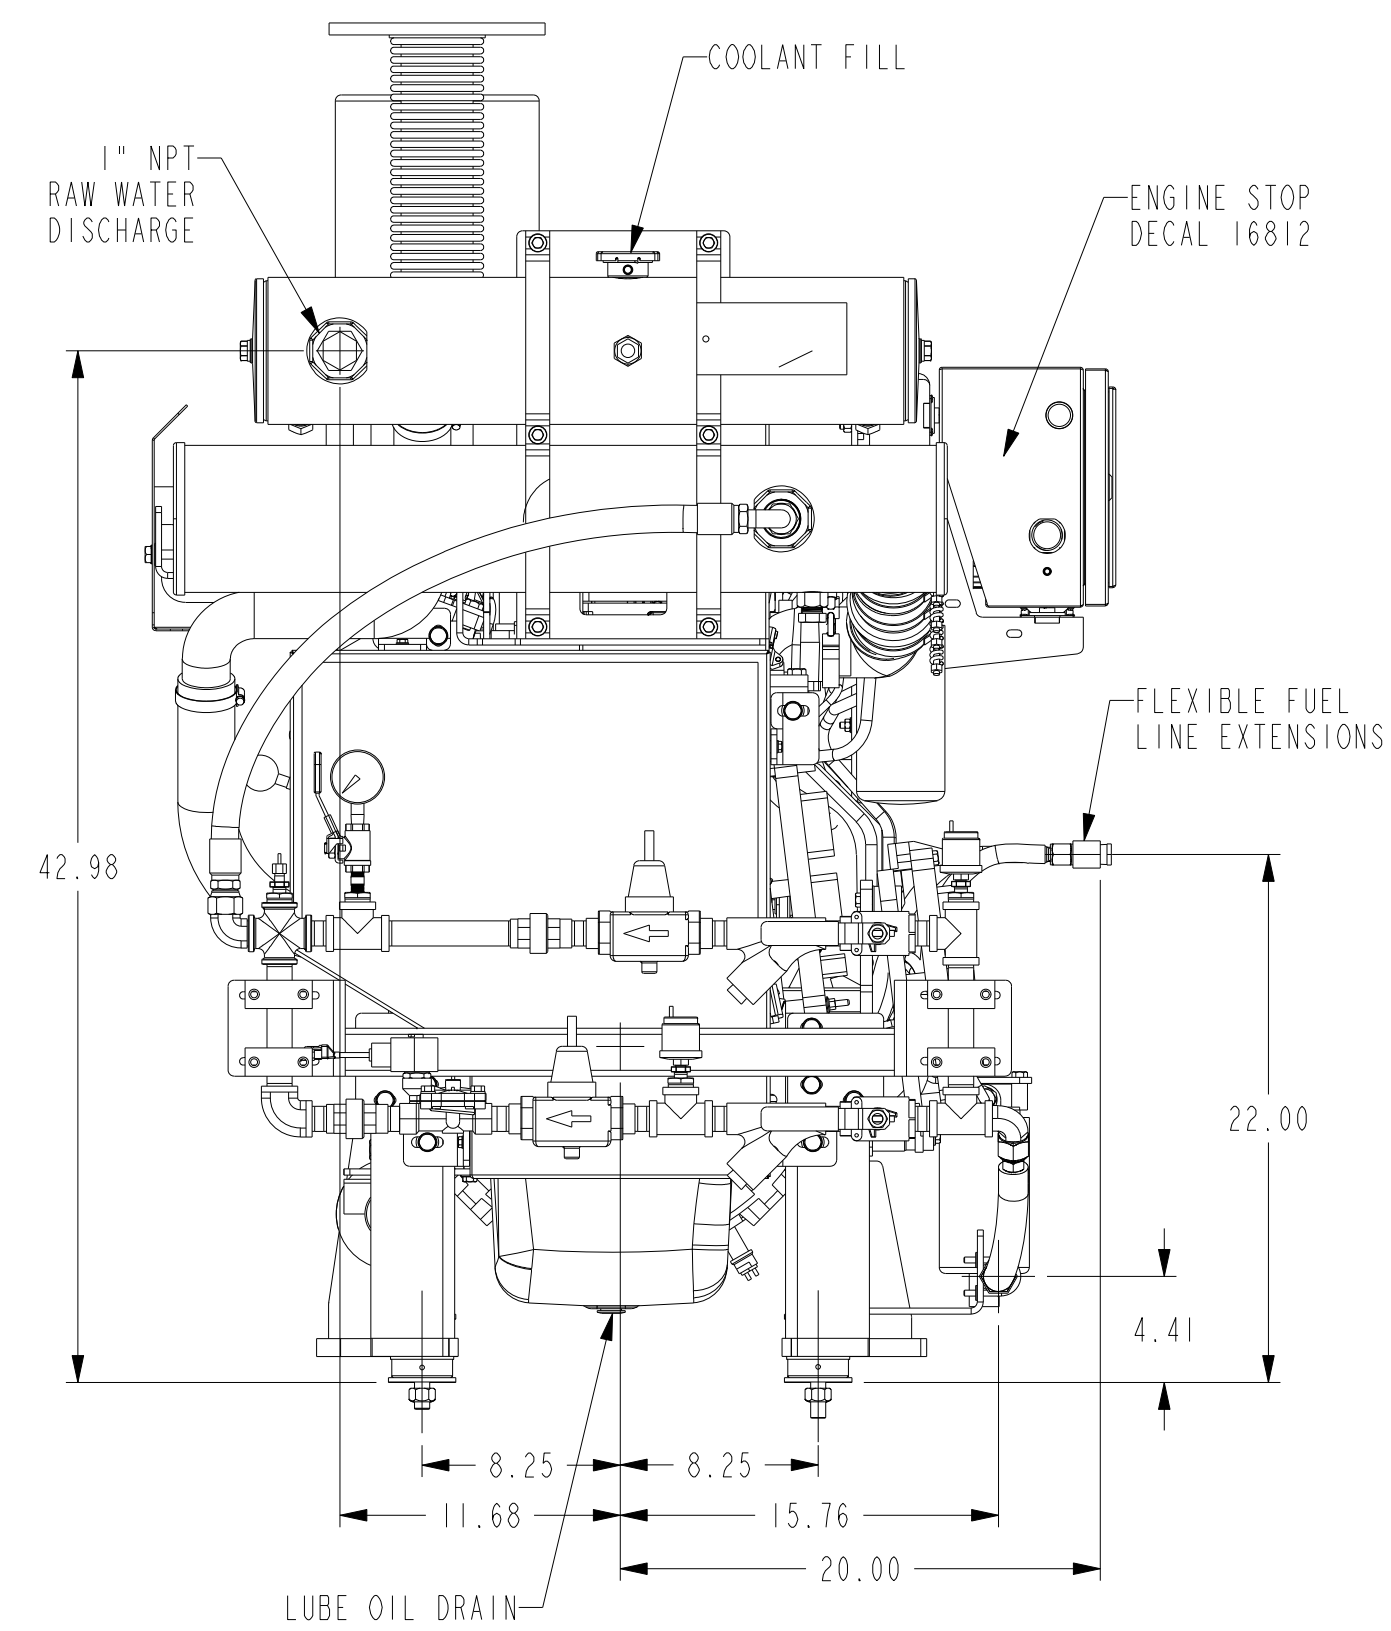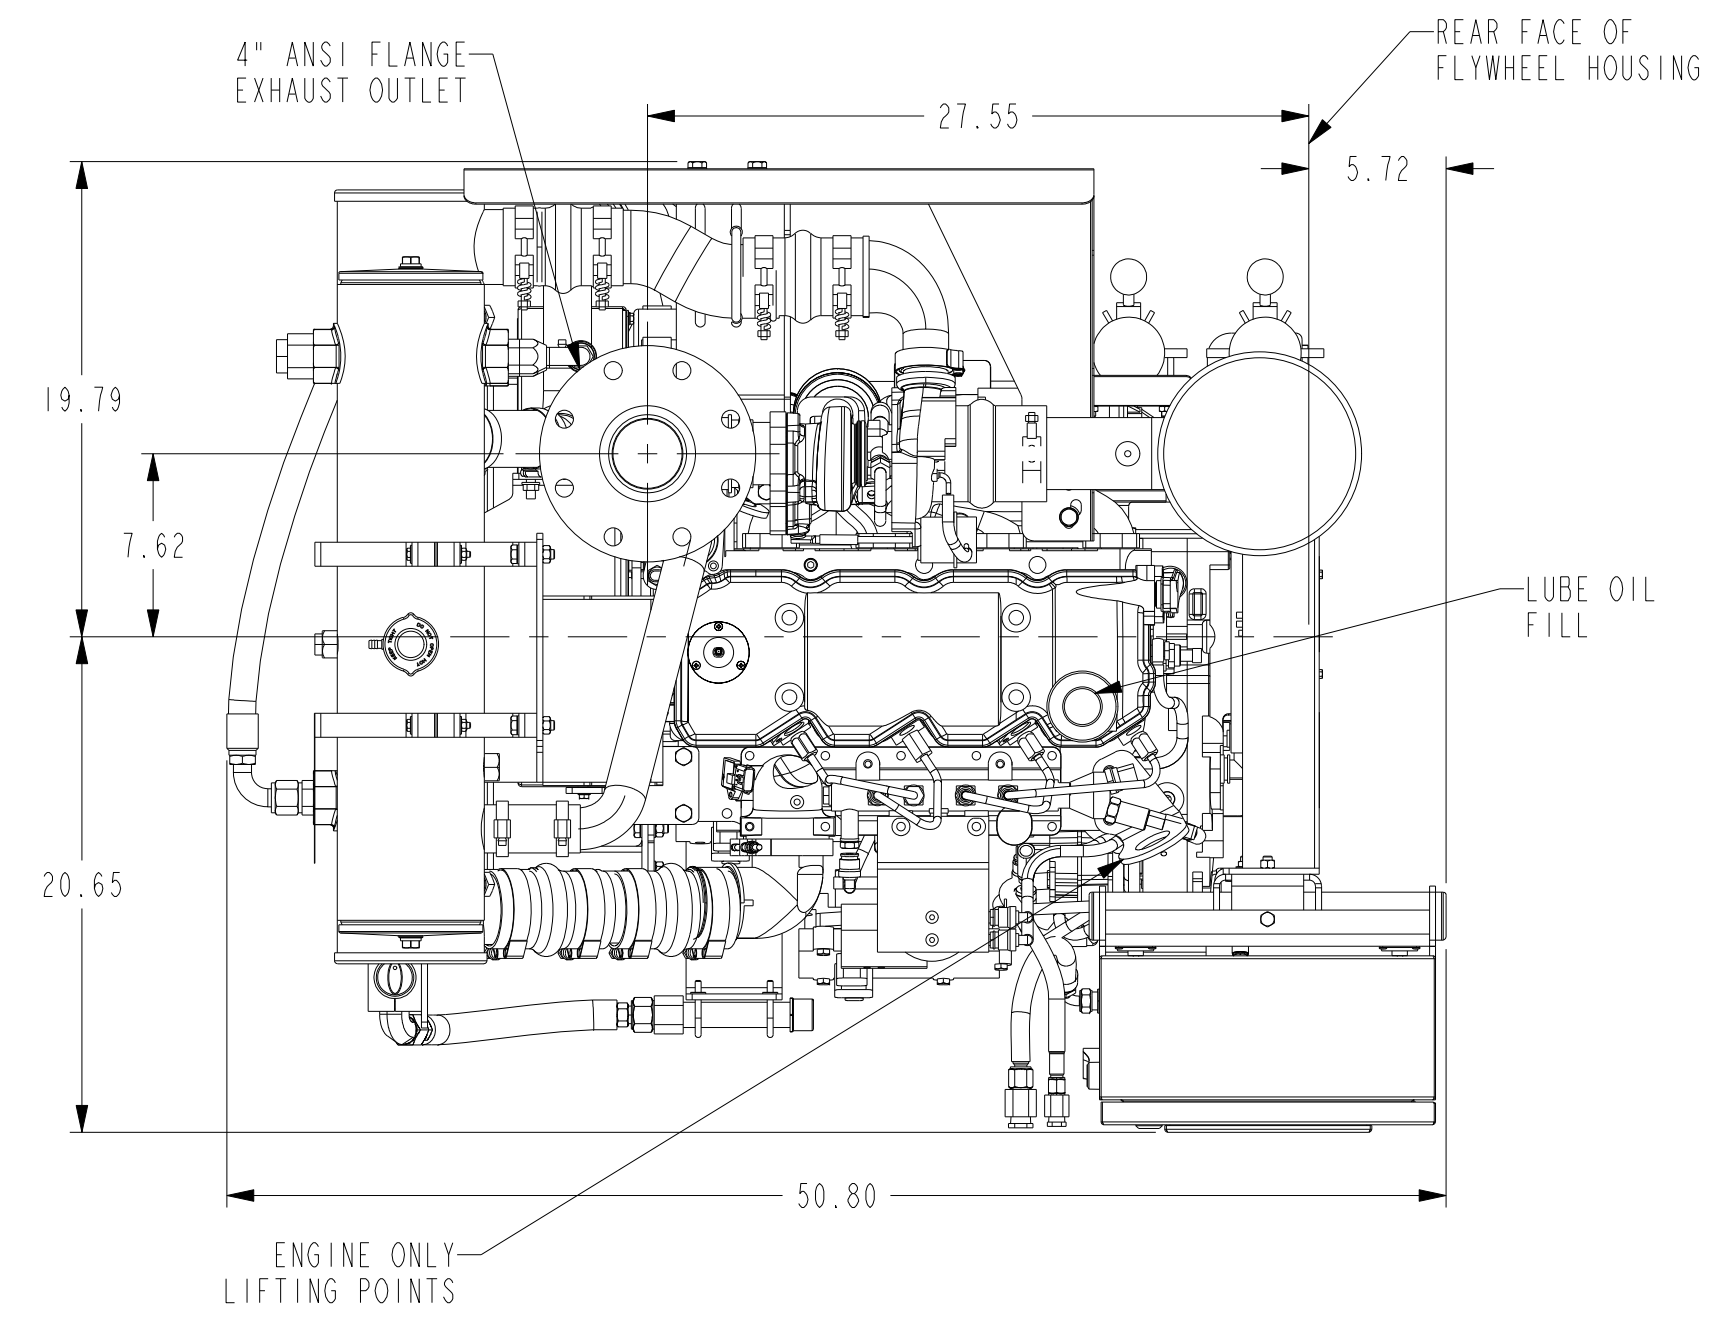

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. It is not to be distributed, copied, or otherwise used without the express written permission of Cummins Fire Power LLC. If you are not an authorized user, you should not have received this document. If you have received this document in error, please notify the sender immediately. If you are an authorized user, you should not disseminate this document or its contents to other personnel who do not have a need to know. The document is your property, and you are responsible for its use. If you have any questions, please contact the sender. © 2013 Cummins Fire Power LLC.




	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUREAU ROAD WHITE SEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPGRADE CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	ASSEMBLY, FIRE PUMP CFP5E-F10/20/30/40/50	

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:

ANGULAR DIMENSIONS ±	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
± 0.005	± 0.005	± 0.005	± 0.005

DWG UNITS: IN/LB/S	DRAWN BY: PBS	DATE: 08AUG2013
SCALE: 0.125	PRO-ENGINEER	INIT ECO: 2013-458
EST WEIGHT:	SHEET 2 OF 3	DRAWING NO: 26105

REV	DATE	DESCRIPTION OF REVISION	REV BY	DATE
E	2015-347	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	09JUN2015
REV	ECO	DESCRIPTION OF REVISION		

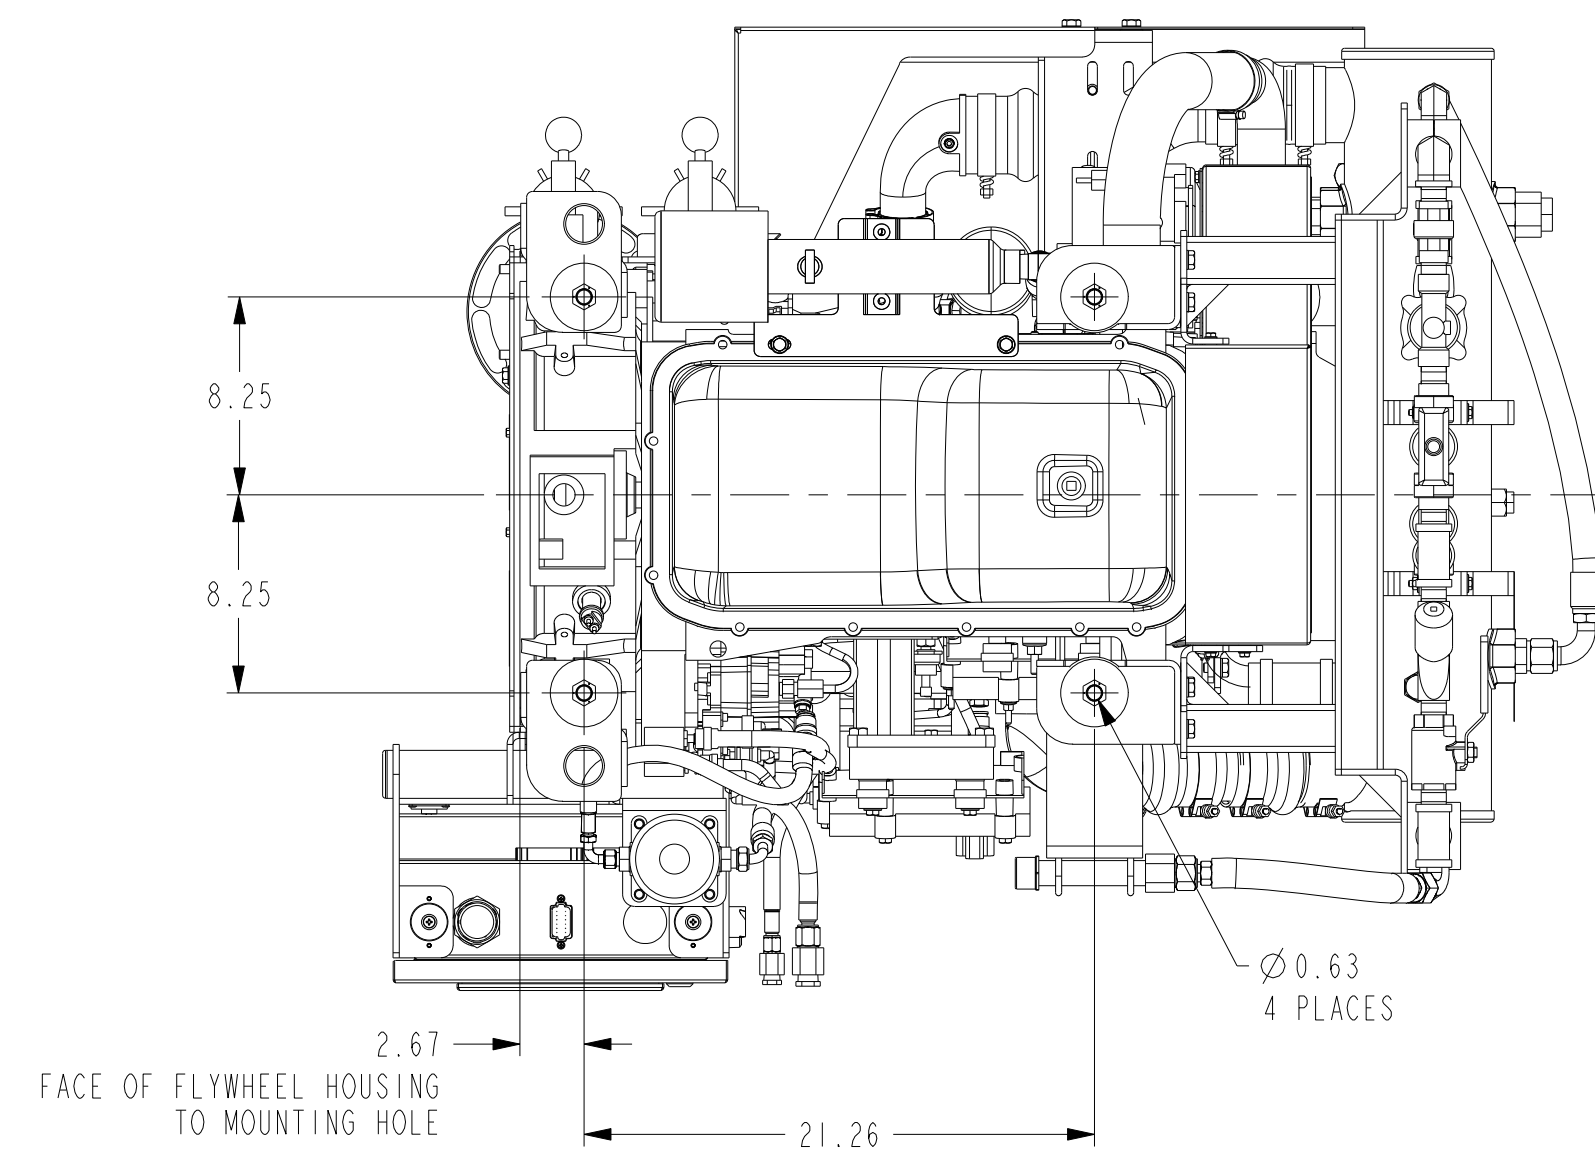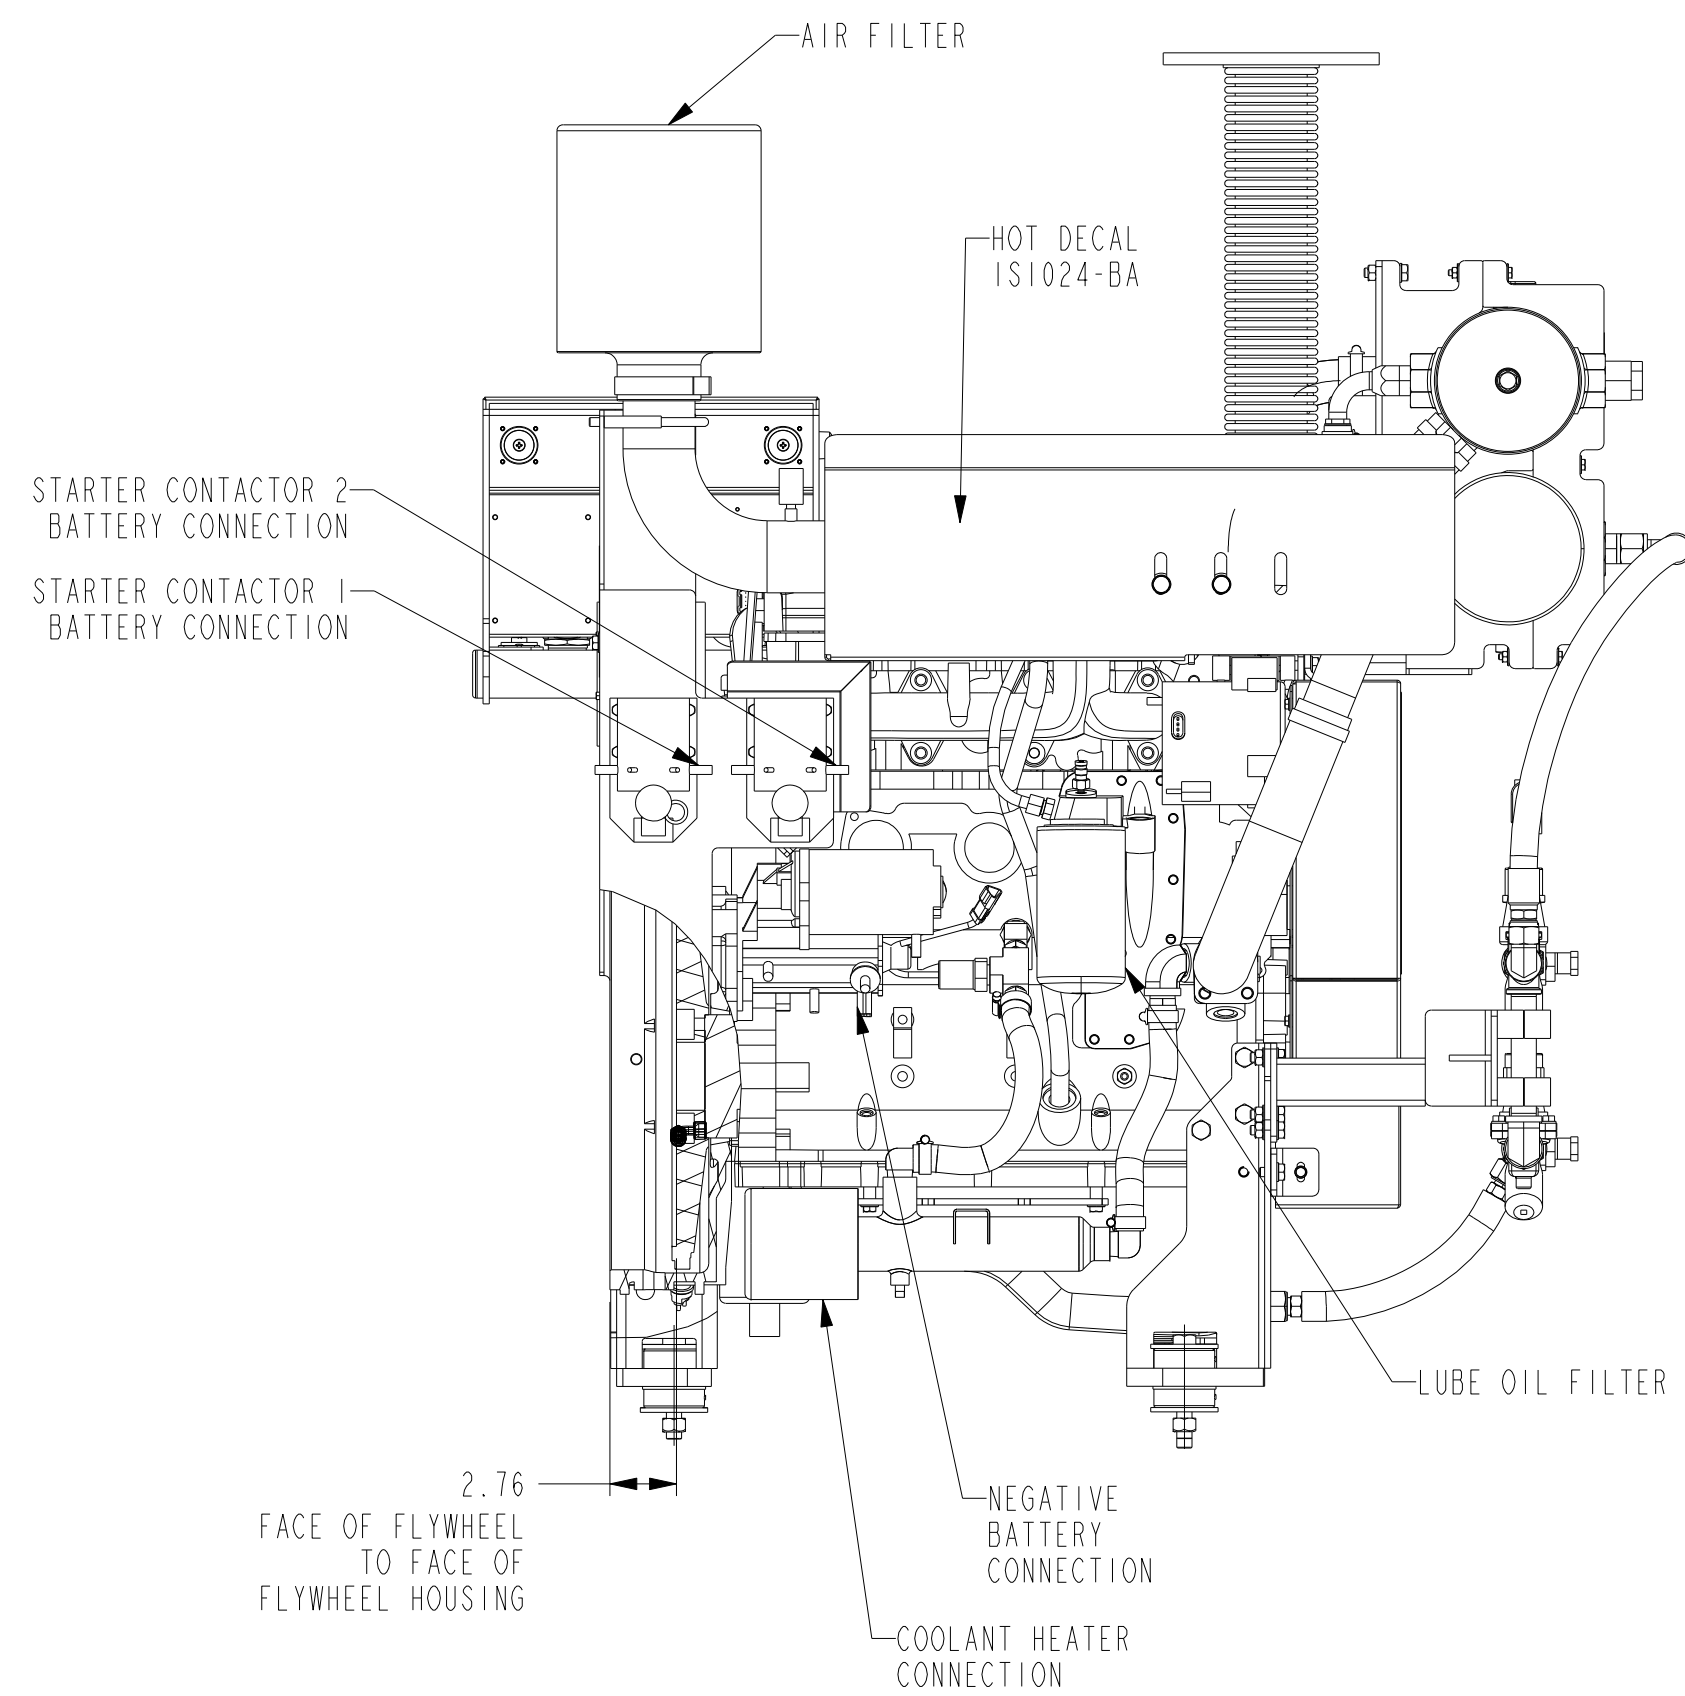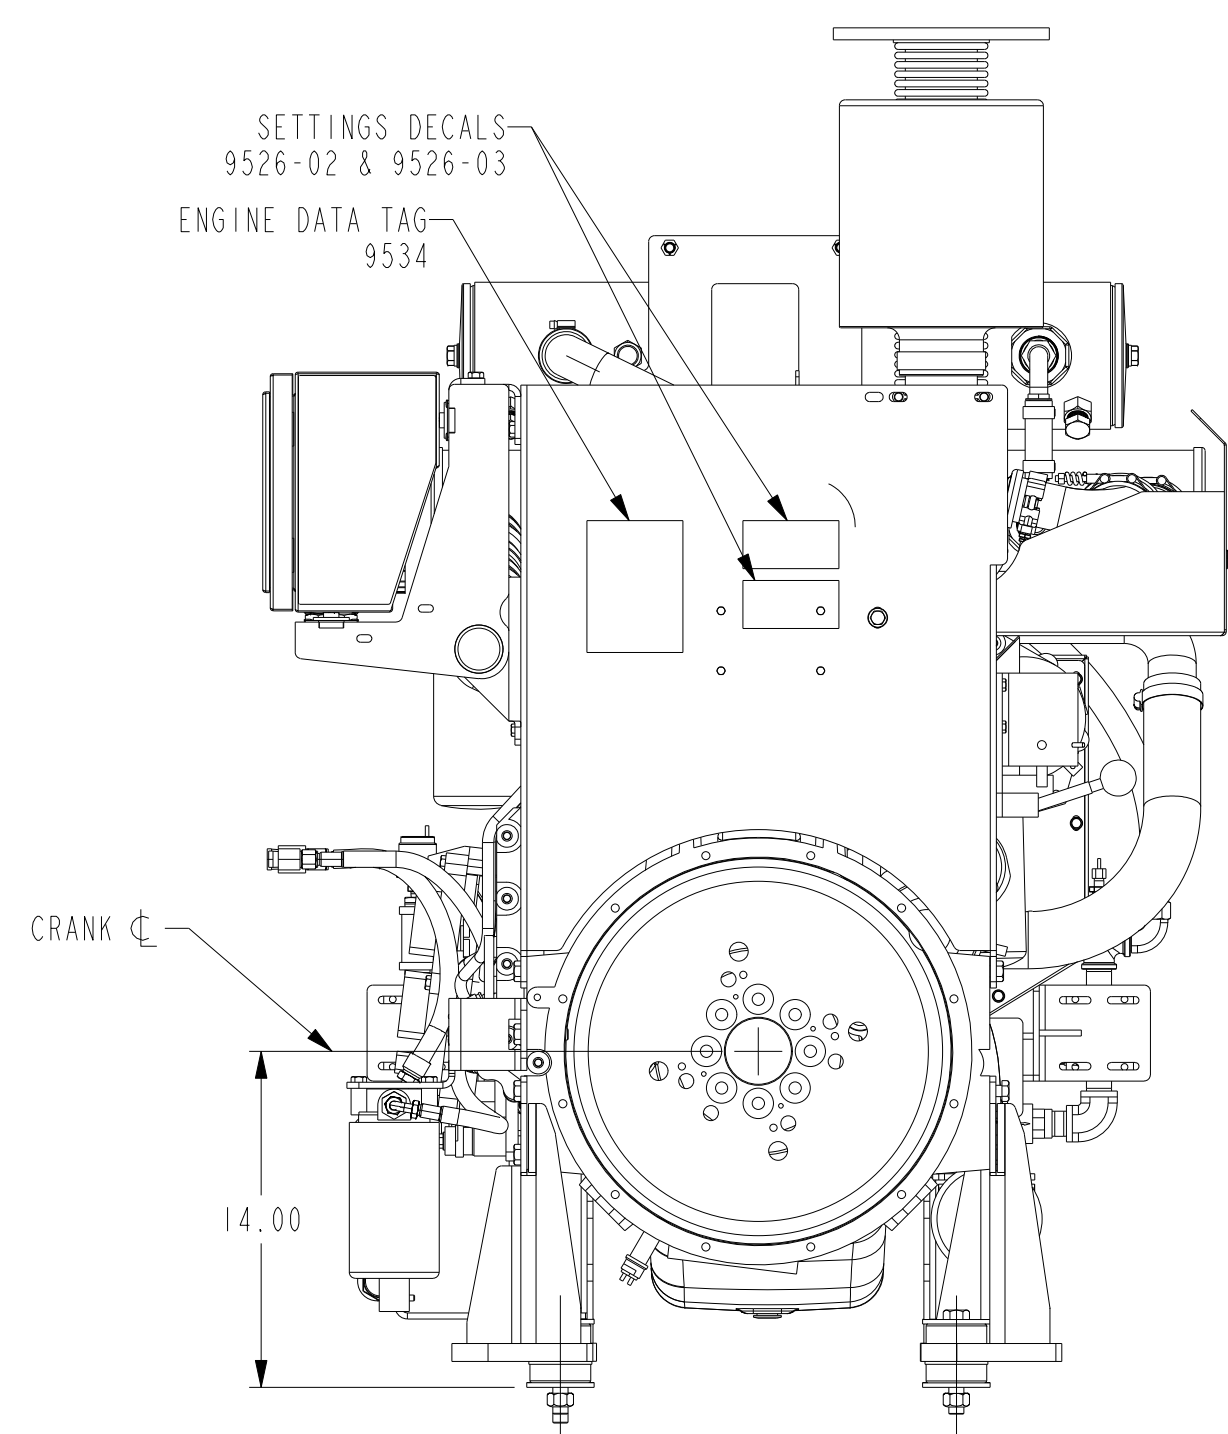

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, without the prior written permission of Cummins Fire Power LLC. If you are not an authorized user, you are notified that any unauthorized use of this document is strictly prohibited. If you are an authorized user, you are notified that you are responsible for the security of this document and for its use. If you are an authorized user, you are notified that you are responsible for the security of this document and for its use. If you are an authorized user, you are notified that you are responsible for the security of this document and for its use.

Cummins Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUREAU ROAD
 WHITE SEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM


CUSTOM DESIGN AND UPGRADE CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± 1°
 THIRD ANGLE PROJECTION



MACHINED SURFACES
 METRIC UNITS
 IMPERIAL UNITS
 DWG UNITS: IN/LB/S
 SCALE: 0.125
 EST WEIGHT:

ASSEMBLY, FIRE PUMP
 CFP5E-F10/20/30/40/50
 DRAWN BY: PBS
 DATE: 08AUG2013
 PRO-ENGINEER
 SHEET 3 OF 3
 DRAWING NO: 26105

REV	DATE	DESCRIPTION OF REVISION	REV BY	DATE
E	2015-347	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	09JUN2015
ECO				

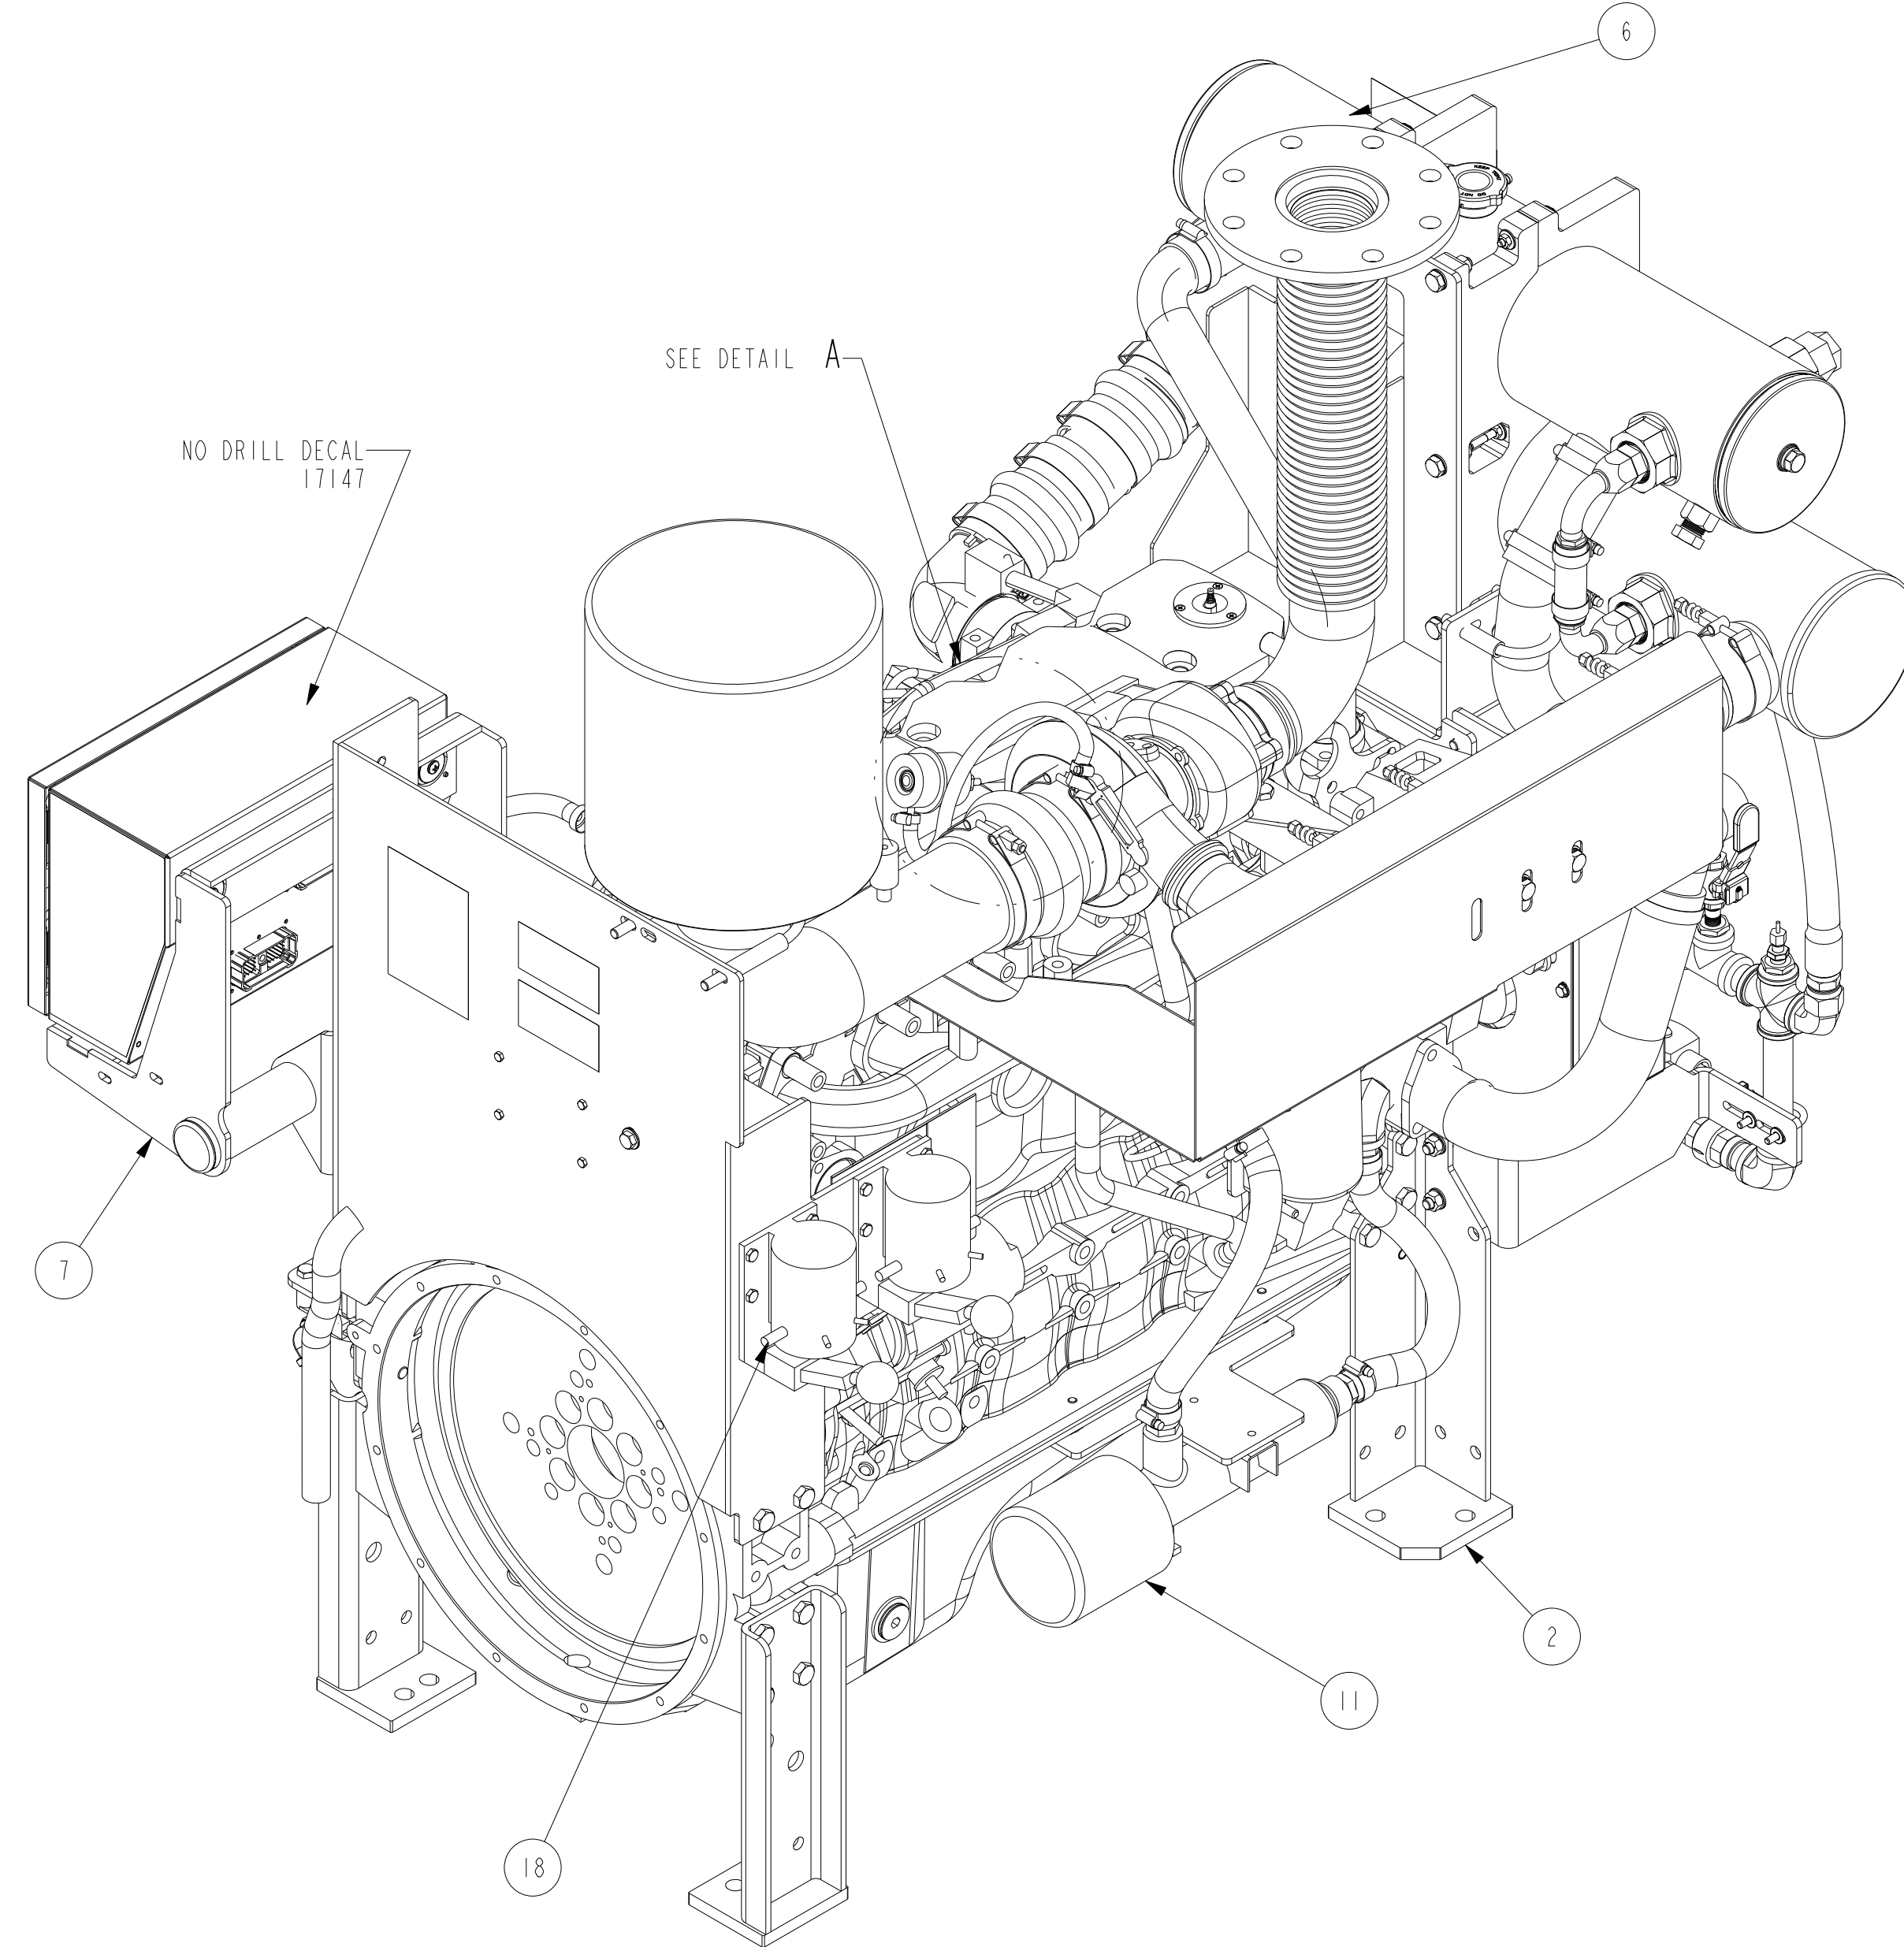

DETAIL A
SCALE 0.250

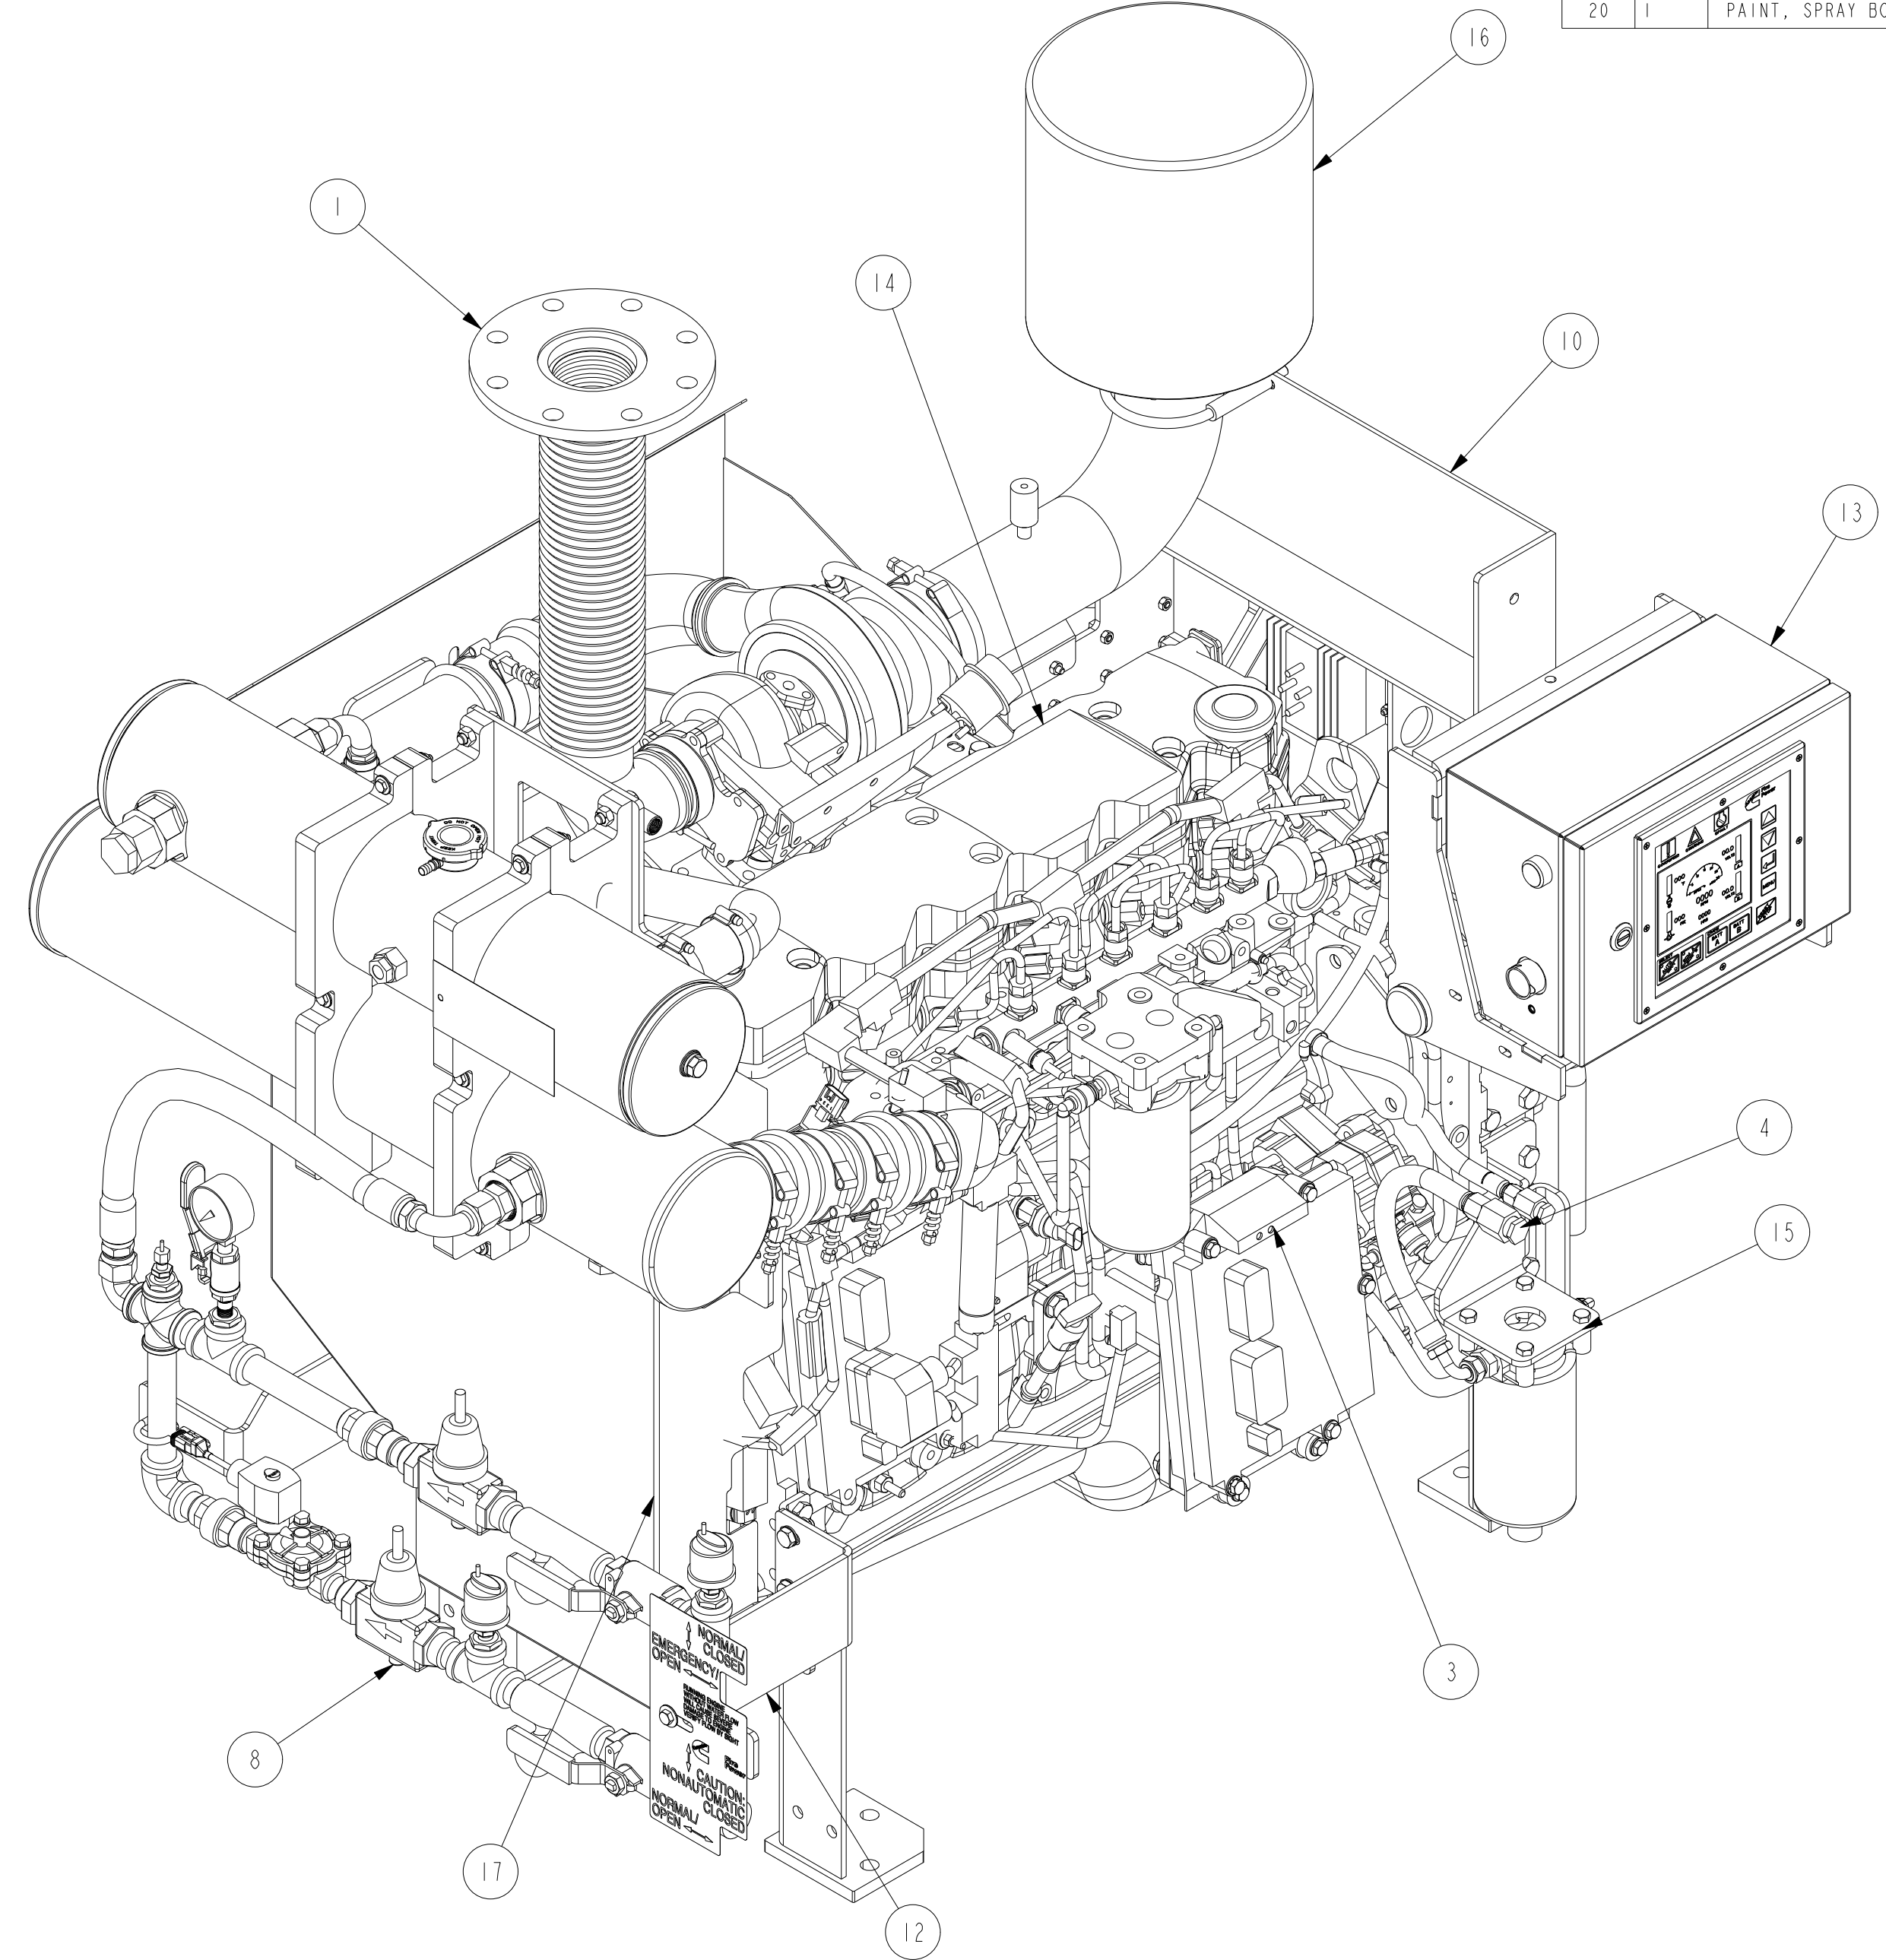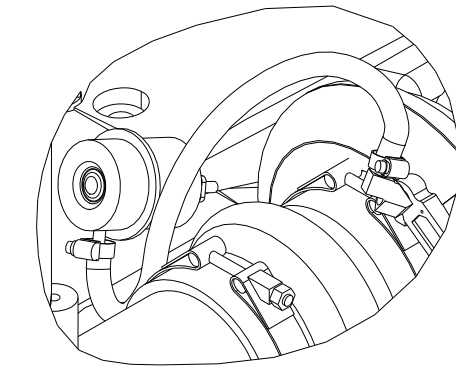

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	EXHAUST, 90° HALF MARMON, 3" TURBO OUT, 4" 125LB ANSI FLANGE	8550_04
2	1	ASSEMBLY, ENGINE SUPPORT, CFP7E	12905
3	1	ASSEMBLY, ECM & MOUNTING, CFP7E	13309
4	1	KIT, FUEL LINES, CFP7E, F10/20/30/40/50/60 - EXT ONLY	15206
5	1	KIT, SENSORS & ADAPTERS, CFP7E	15390
6	1	ASSEMBLY, HEAT EXCHANGERS, CFP7E	16746
7	1	ASSEMBLY, CONTROL PANEL MOUNTING, CFP POWER UNITS	21249
8	1	COOLING LOOP, 3/4" .12V, RAW WATER	21509
9	1	KIT, WIRE HARNESS, CFP7E	23928
10	1	ASSEMBLY, ACC. REAR MTG, CFP7E	24235
11	1	ASSEMBLY, COOLANT HEATER, CFP7E	24239
12	1	ASSEMBLY, MISC PIPING, CFP7E	26261
13	1	CONTROL ASSEMBLY, FPDP ELECTRONIC CARBON STEEL	26764
14	1	ASSEMBLY, 12VDC ENGINE, CFP7E-F10/20/30/40/50/60	26771
15	1	ASSEMBLY, FUEL PREFILTER, CFP7E	A042A386
16	1	ASSEMBLY, AIR CLEANER, CFP7E	A042A392
17	1	ASSEMBLY, GUARDING, CFP7E	A042E673
18	2	CONTACTOR, MANUAL OVERRIDE, 12V, PN:535-0127, FIREPUMP	8824-12
19	1	CABLES, BATTERY, CFP5E, 7E, 9E, 11E	24234
20	1	PAINT, SPRAY BOMB, CUMMINS RED	A15730-A12

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
D	2015-347	DELETE: A042B971 ADDED: A042E673	PBS	09JUN2015
C	2014-503	DELETE: 16745 ADDED: A042B971	PBS	17JUL2014
B	2014-076	DELETE: 16825, 13254, 13208, 13849, 14197, 24808, 14396, 14992-04, 142784, FS1212, LTL-CCV1317, 9757, 15416, 89545R, CC2743, 22791, 16889, 15130, 15749, 12532-2-2, 133042000, 8550-10, 13308, 13348 ADDED: 26771, 26764, 8824-12, 8550-04, A042A386, A042A392	PBS	06FEB2014
A	2014-056	ITEM A042A311 WAS 15749	GVD	29JAN2014

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ±1°
 THIRD ANGLE PROJECTION
 SURFACES: MACHINED SURFACES: ±0.005 IN / ±0.127 MM
 UNMACHINED SURFACES: ±0.010 IN / ±0.254 MM
 HOLE DIMENSIONS: ±0.005 IN / ±0.127 MM
 HOLE DIMENSIONS: ±0.010 IN / ±0.254 MM

Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUREAU ROAD
 WHITE SEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM




ASSEMBLY, FIREPUMP
 CFP7E-F10/20/30/40/50/60

DWG UNITS: IN/LB/S
 SCALE: 0.188
 EST WEIGHT: 42238.628

PRO-ENGINEER

DRAWN BY: PBS
 SHEET 1 OF 3

DATE: 16AUG2013
 INIT ECO: 2013475
 DRAWING NO: 26109

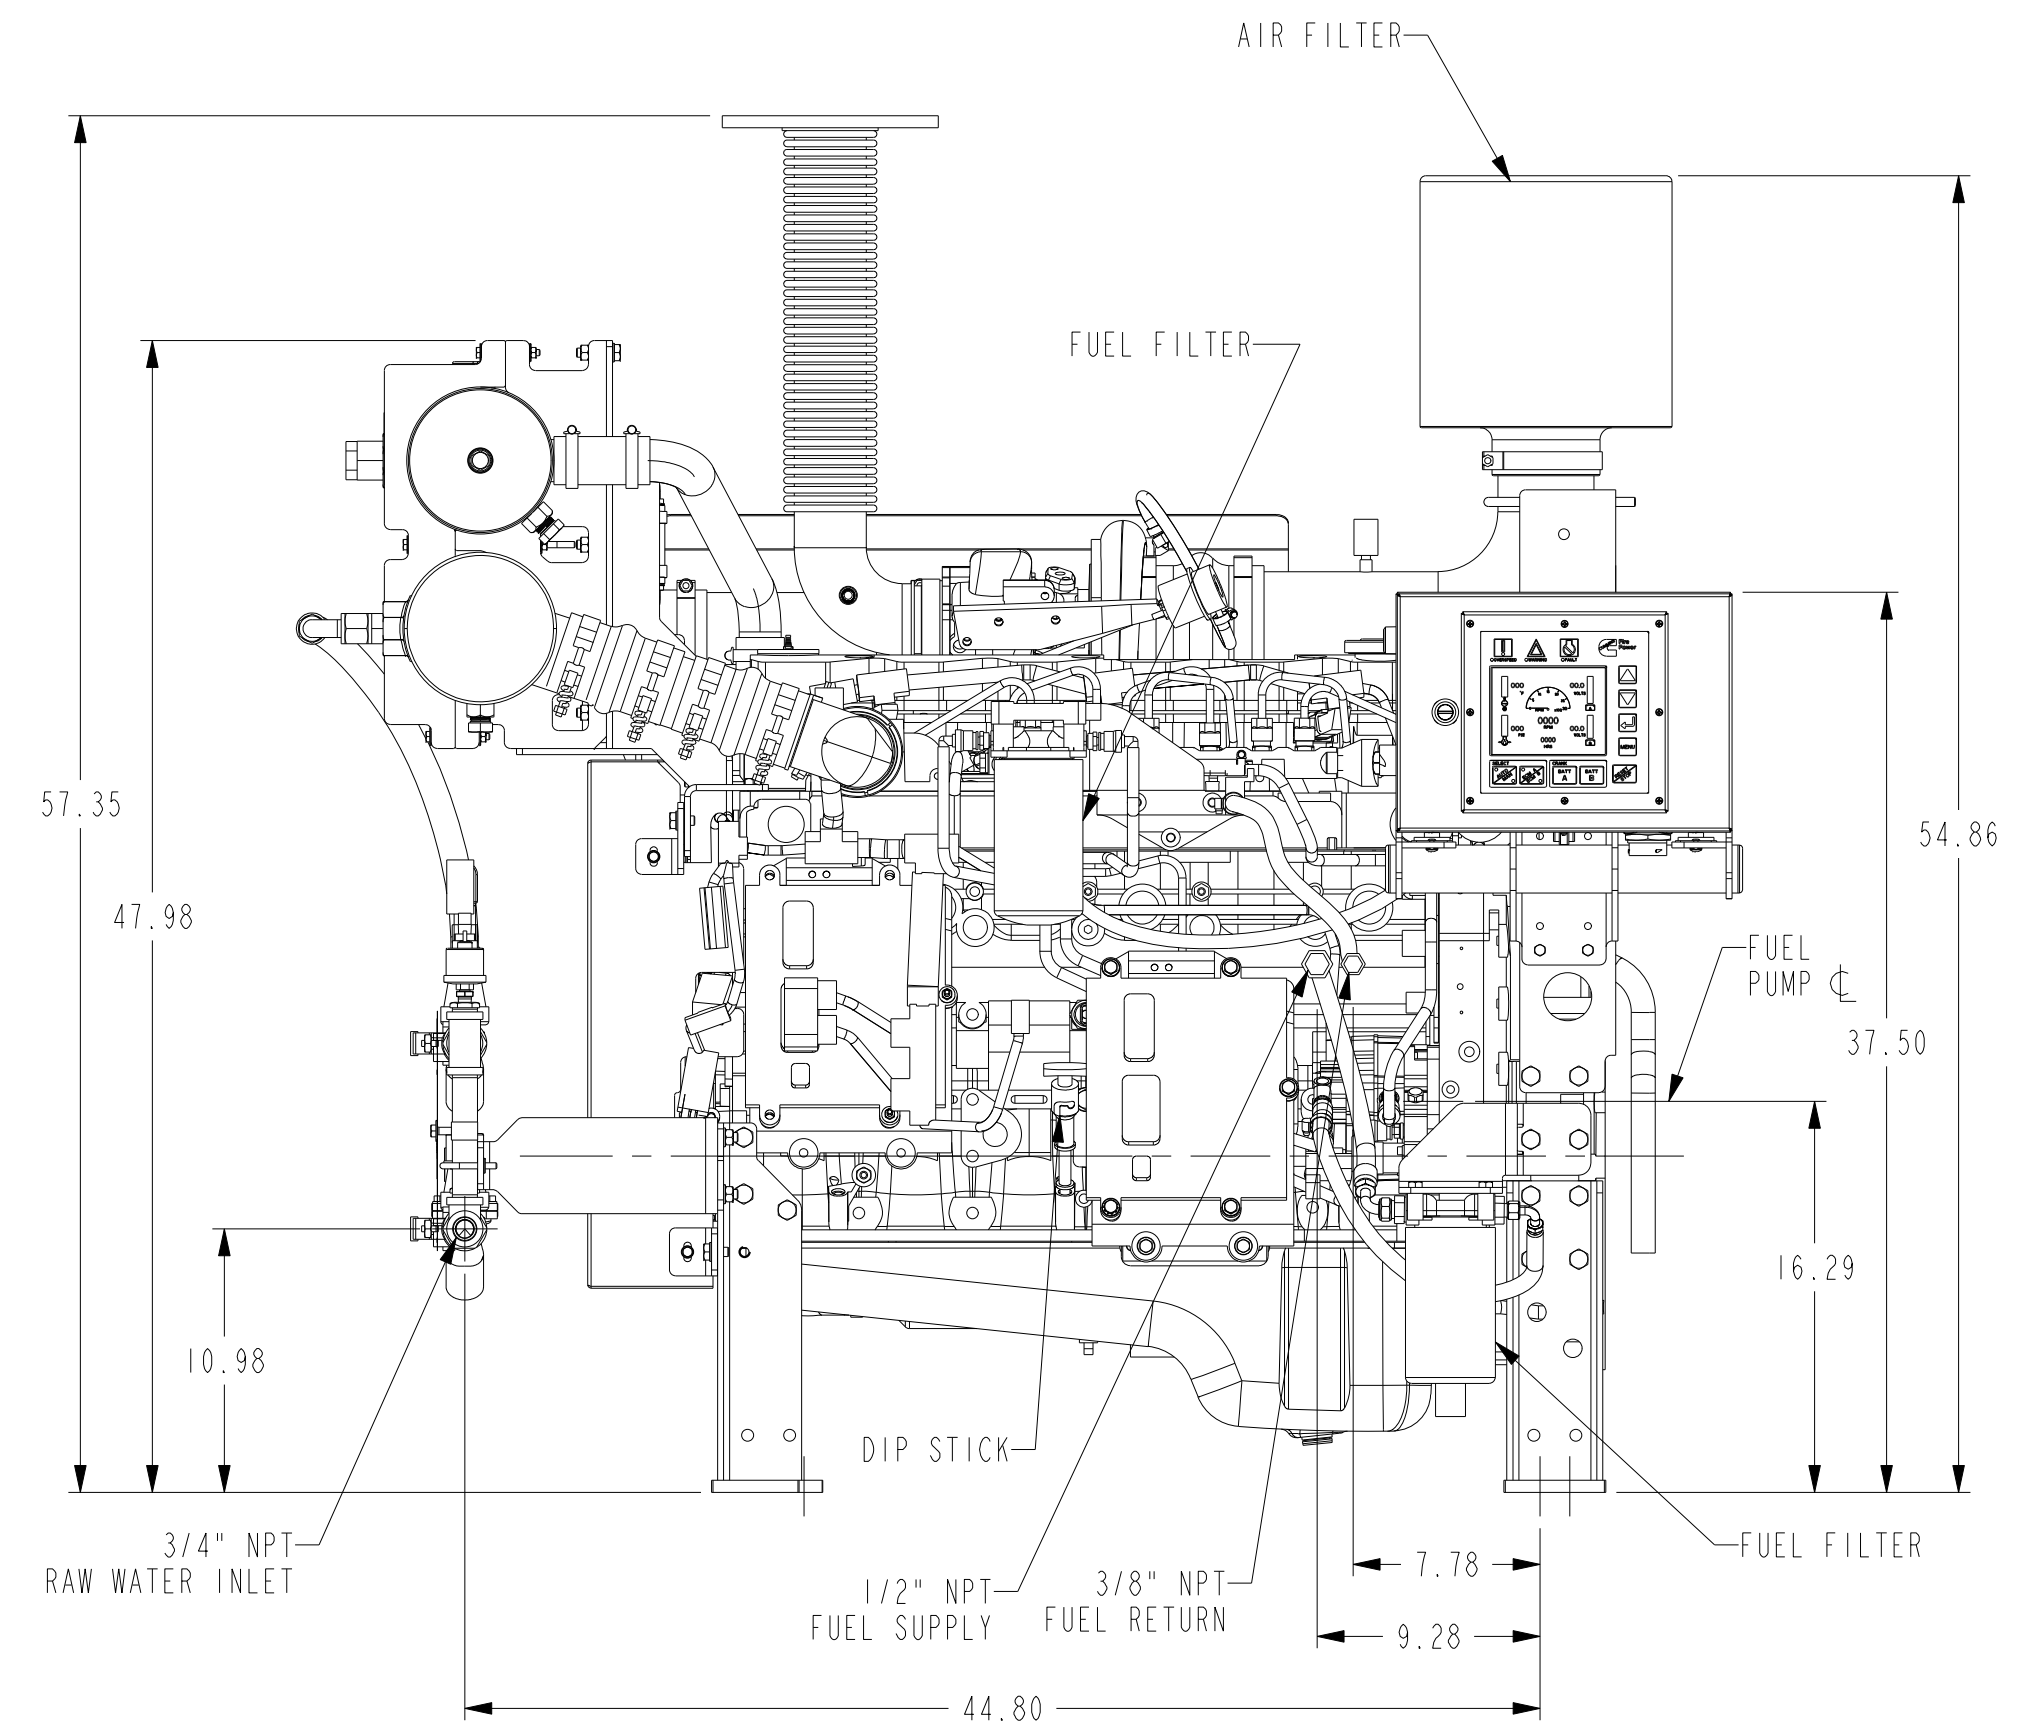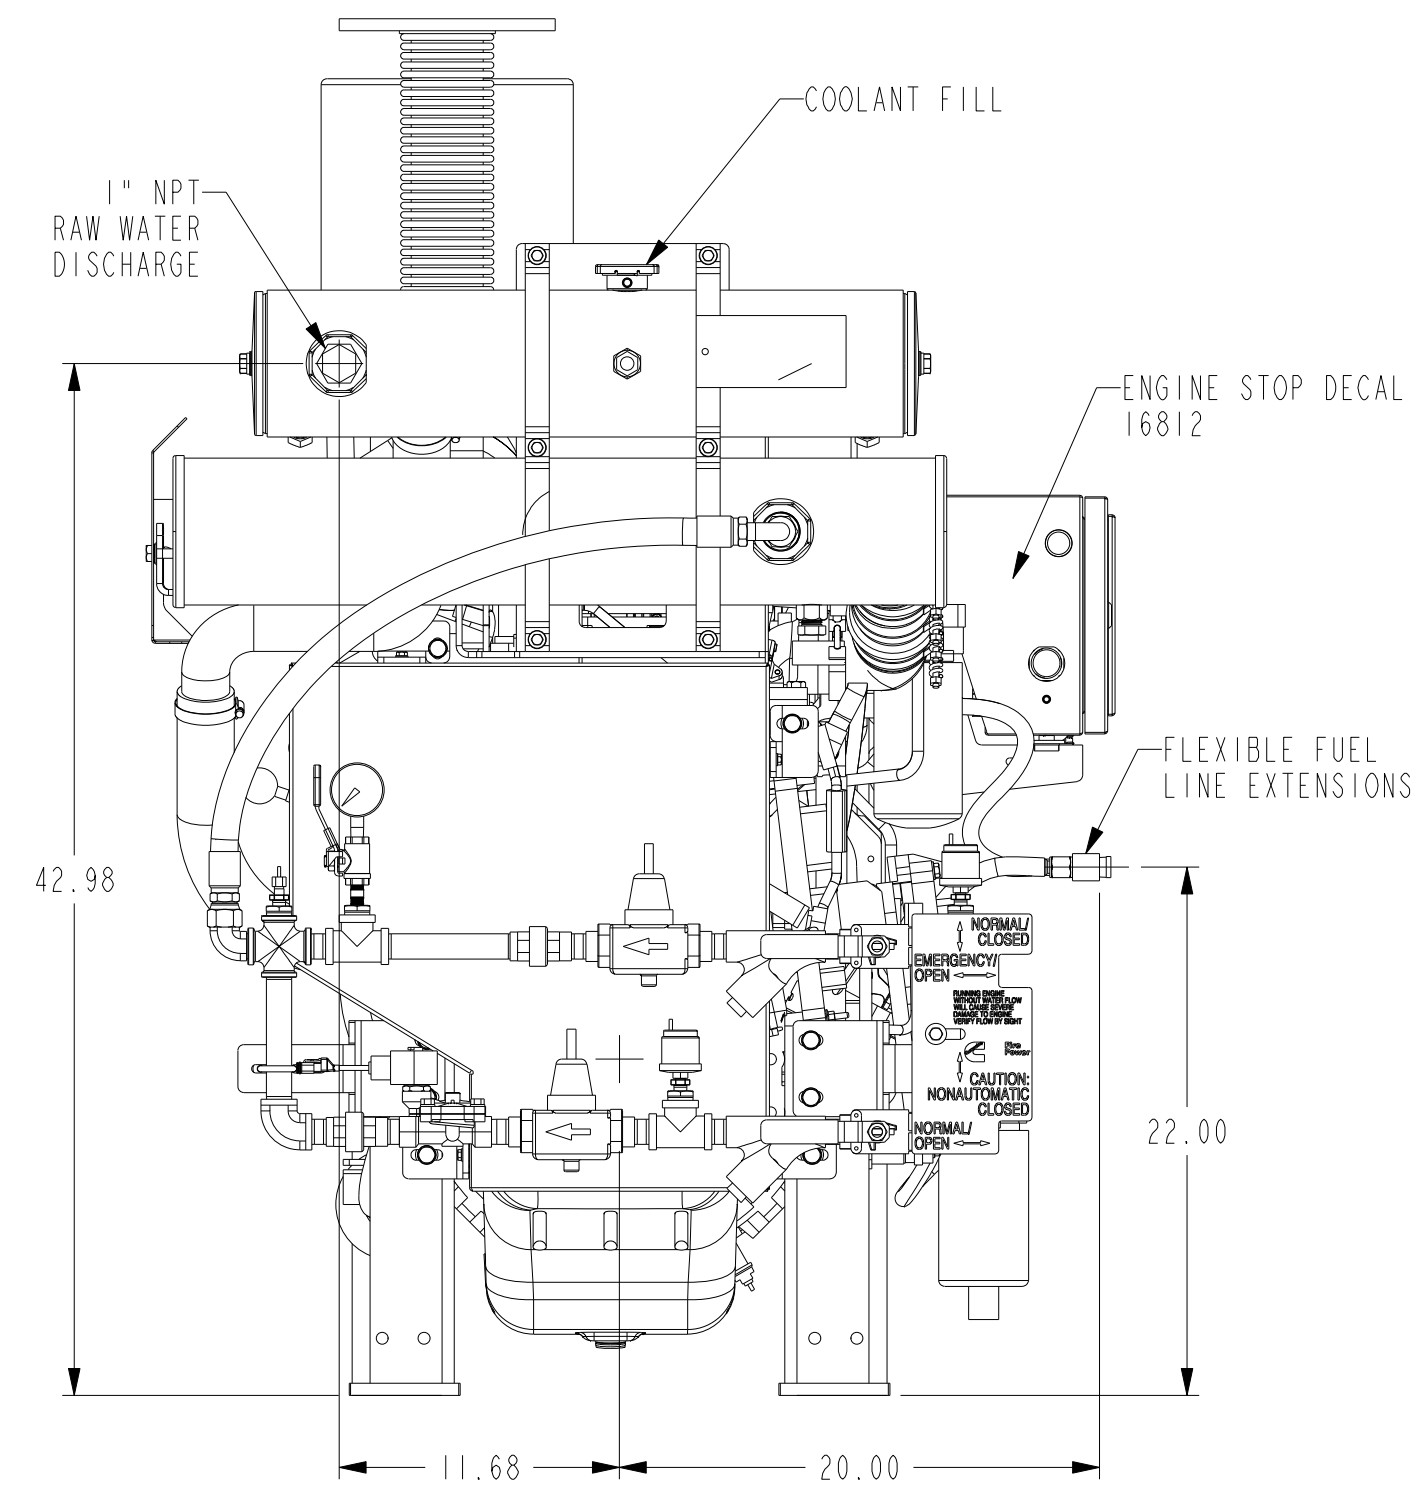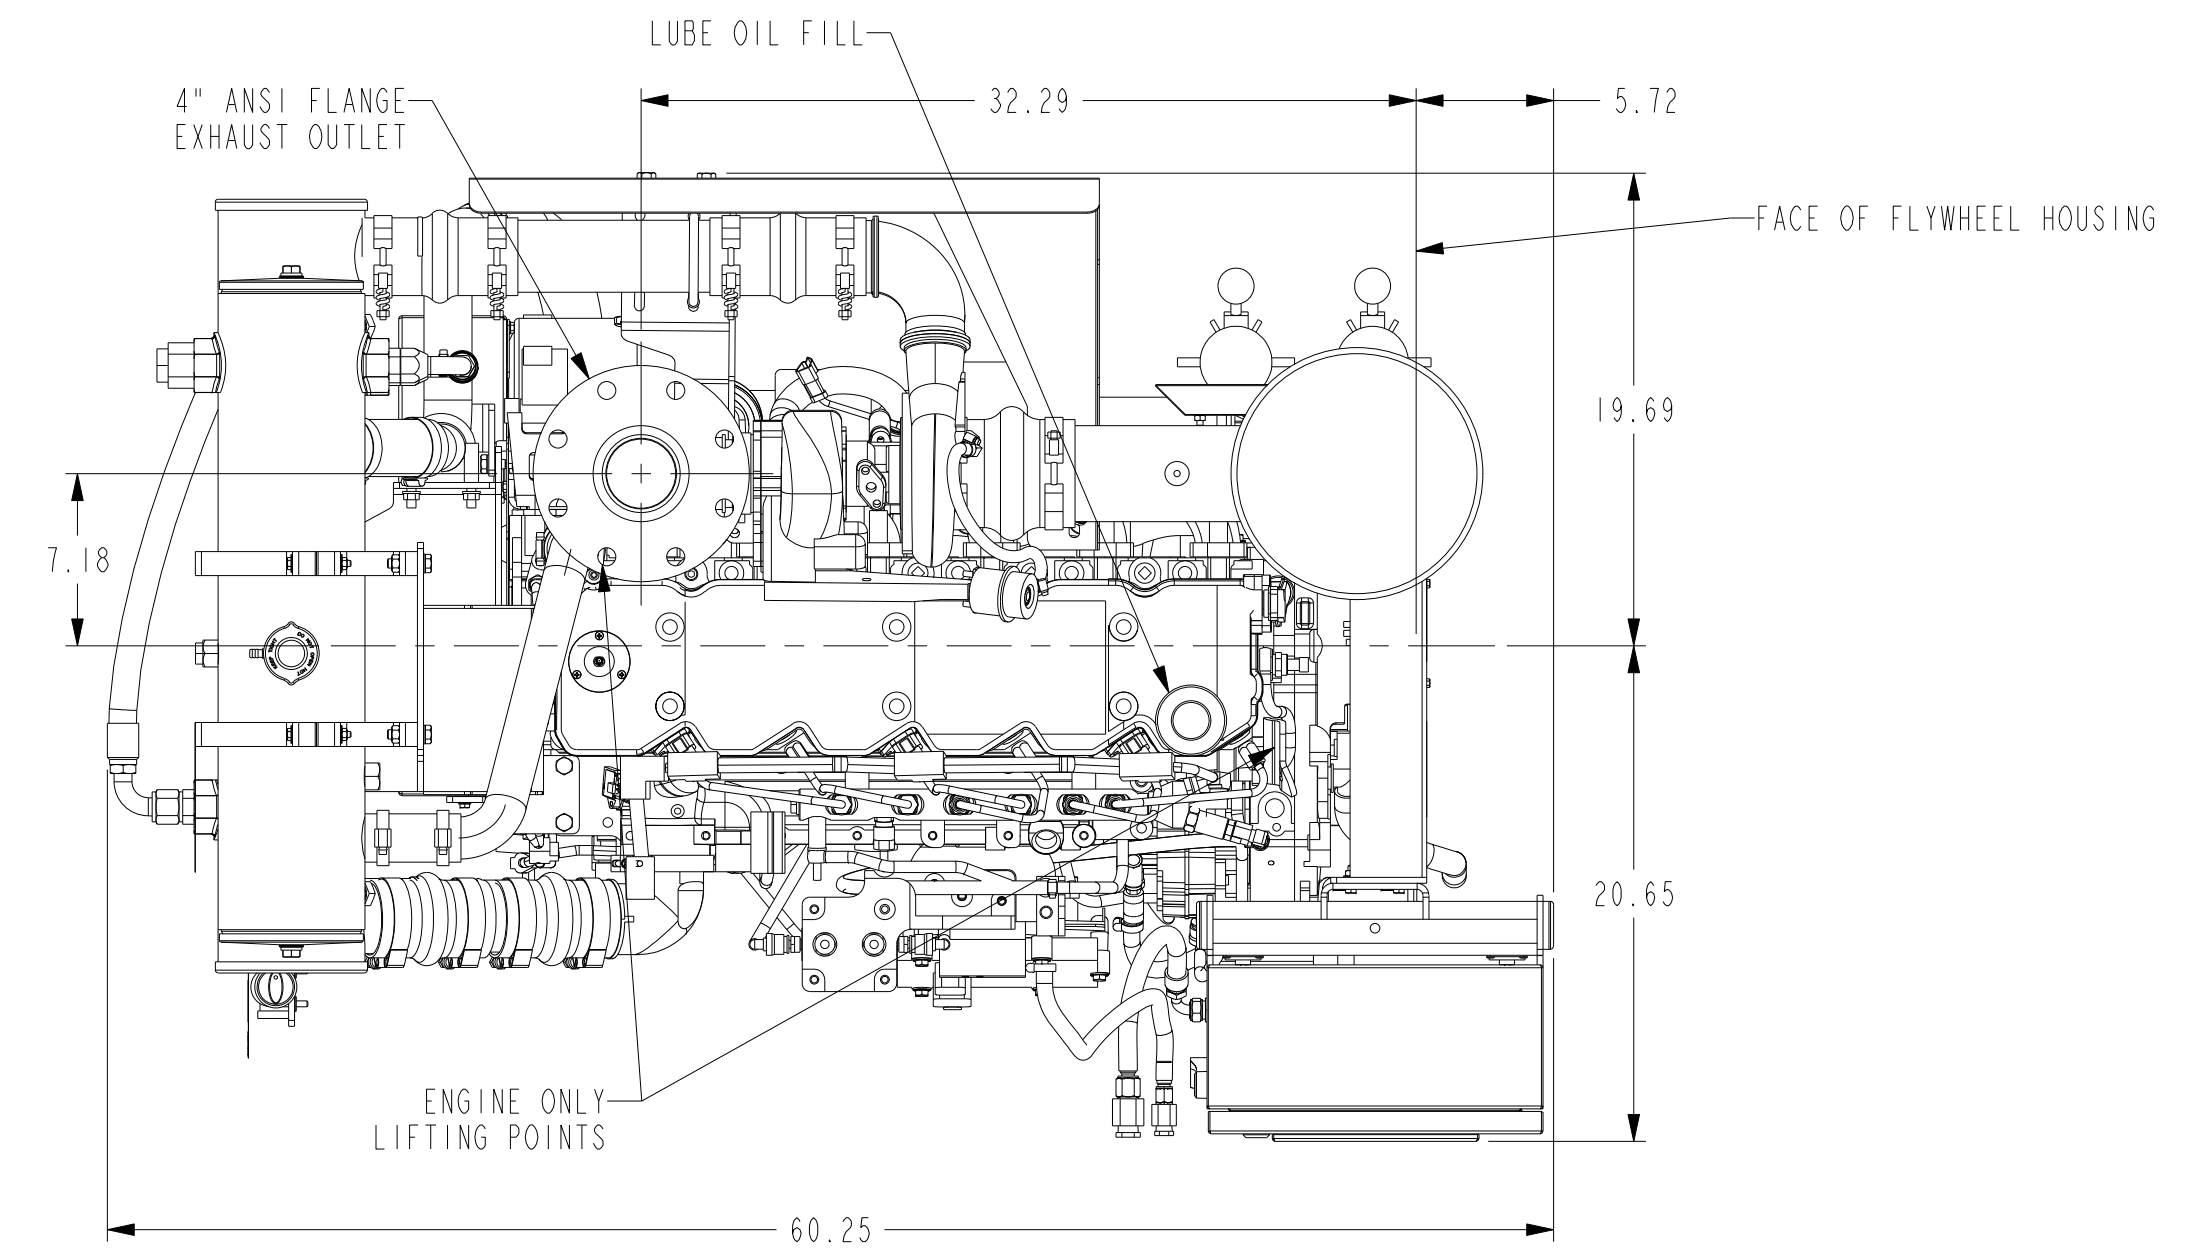





This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes stated herein. It is not to be distributed, copied, or otherwise used in any way without the express written consent of Cummins Fire Power LLC. If you are not an authorized user, you should not have received this document. If you have received this document in error, you should notify the sender immediately. This document is not to be used for any other purpose than that for which it was prepared. The user assumes all liability for any damage or injury resulting from the use of this document. © 2013 Cummins Fire Power LLC. All rights reserved.

	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUEHALE ROAD WHITE SEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPGRADE CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	ASSEMBLY, FIREPUMP CFPT7E-F10/20/30/40/50/60	

DWG UNITS: IN/LB/S	DRAWN BY: PBS	DATE: 16AUG2013
SCALE: 0.125	PRO-ENGINEER	INIT: ECO
EST WEIGHT: 42238.628	SHEET 2 OF 3	DRAWING NO: 26109

D	2015-347	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	09JUN2015
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

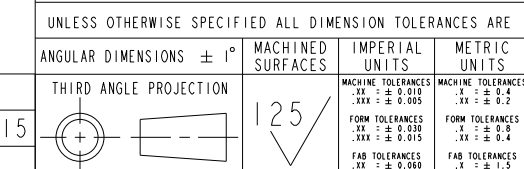

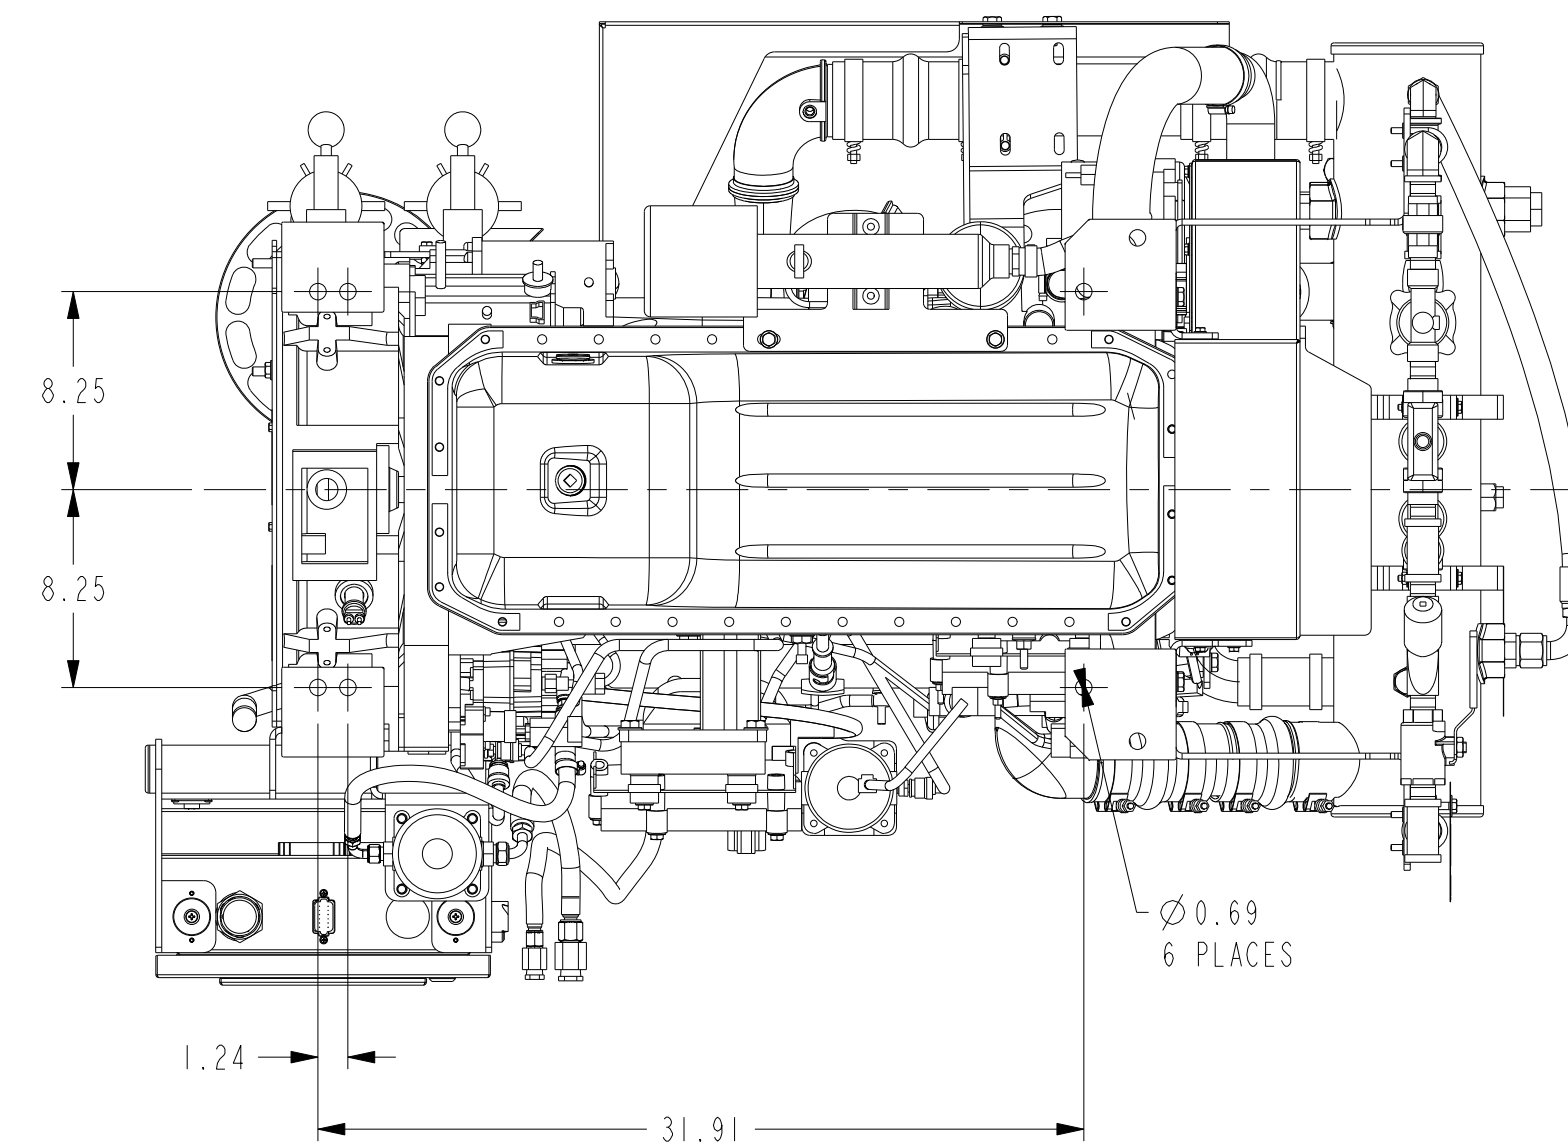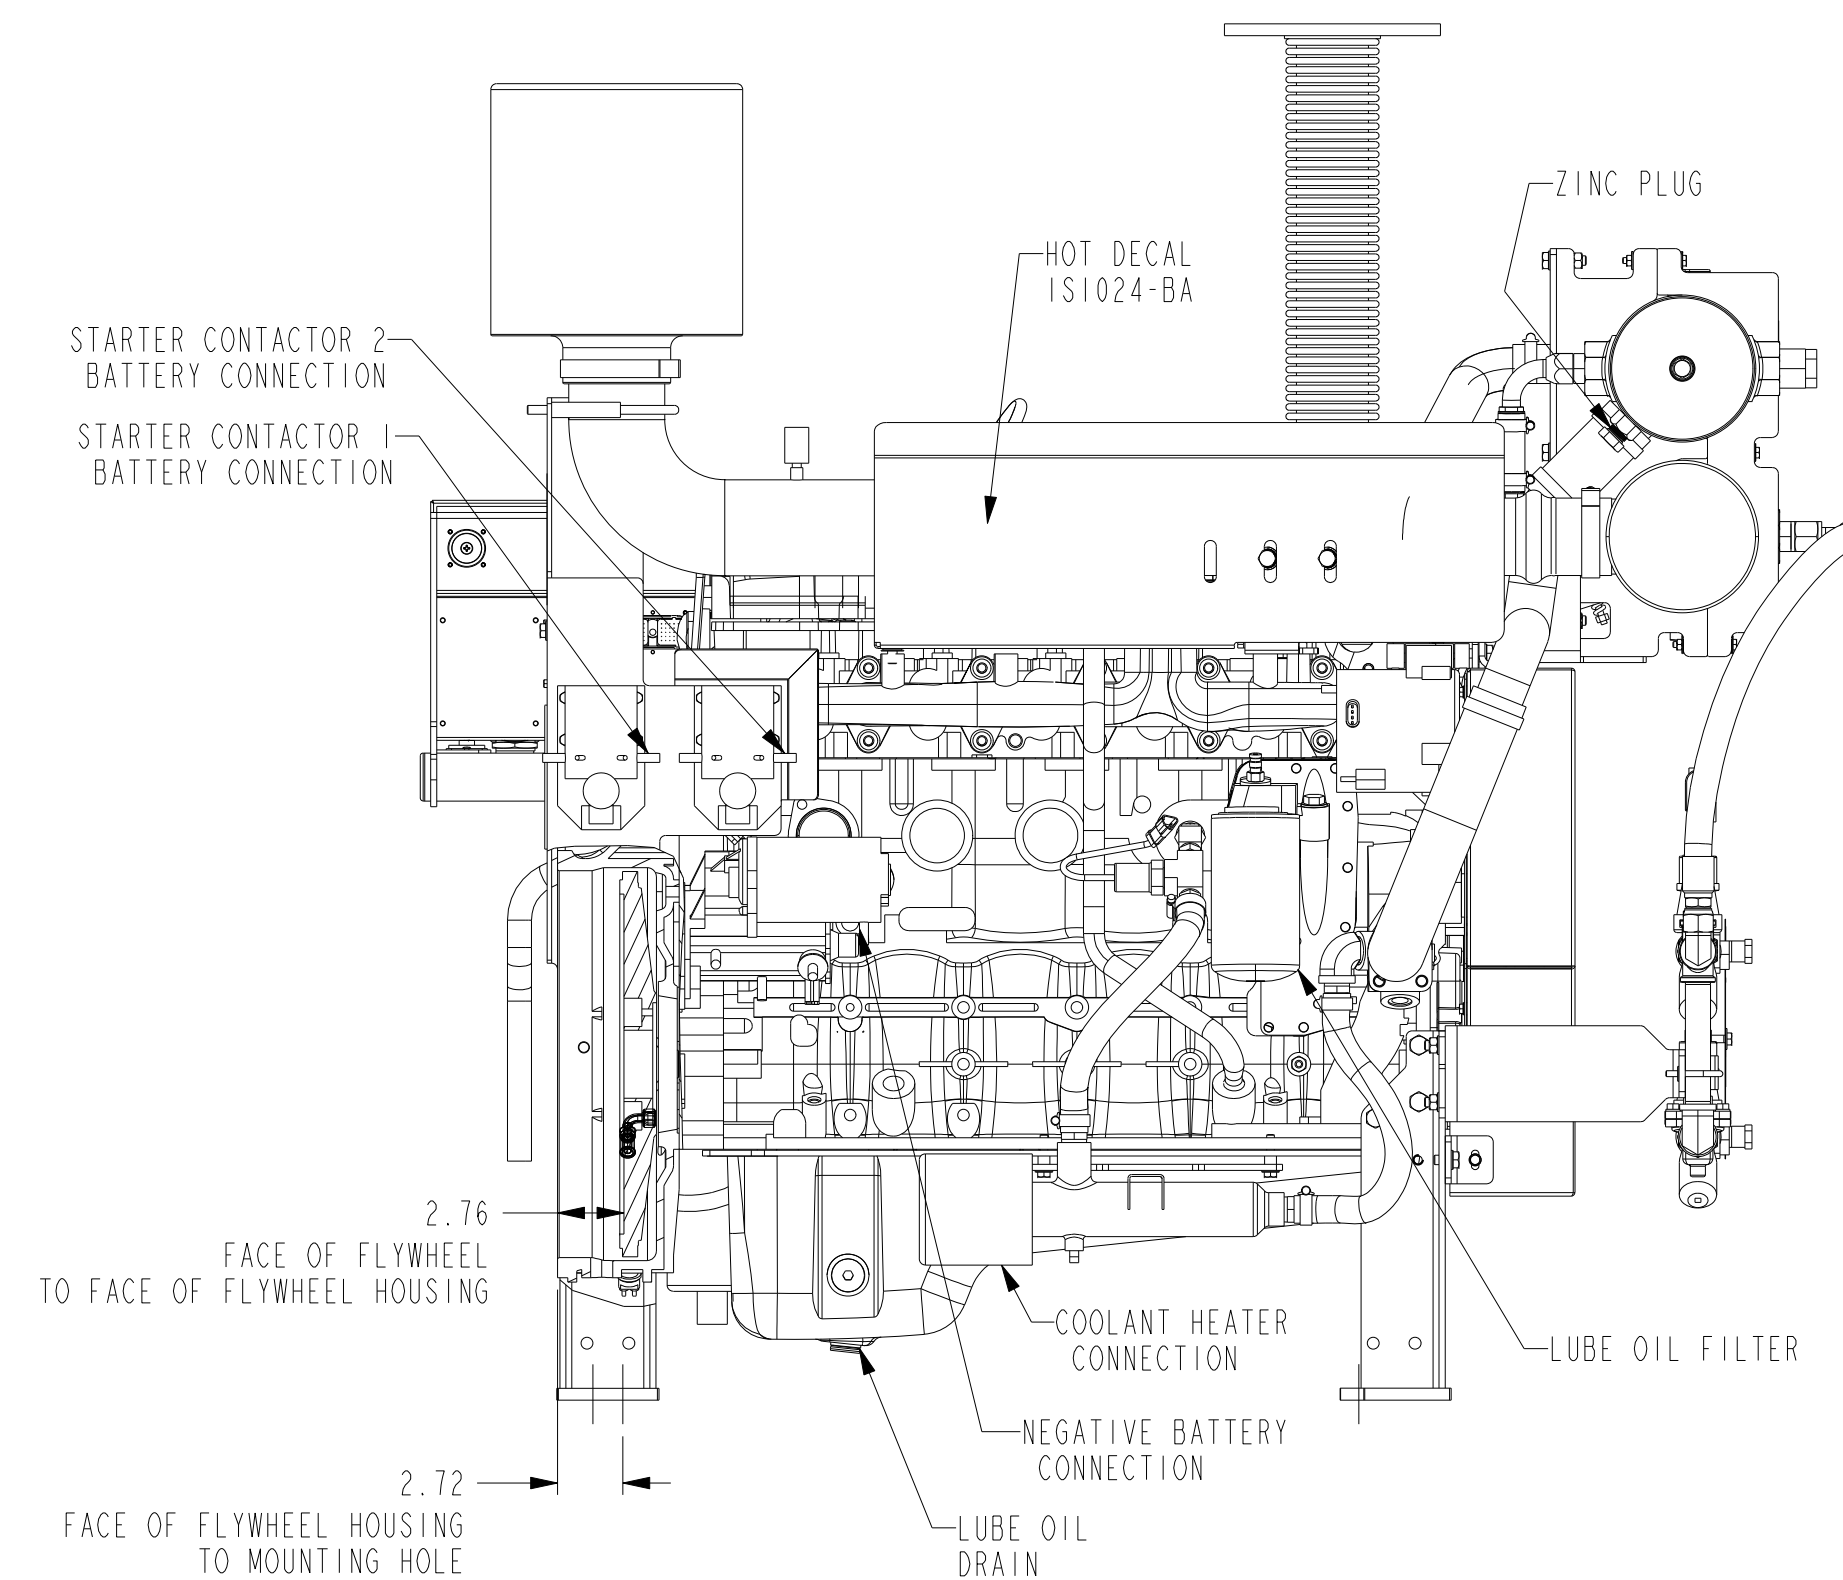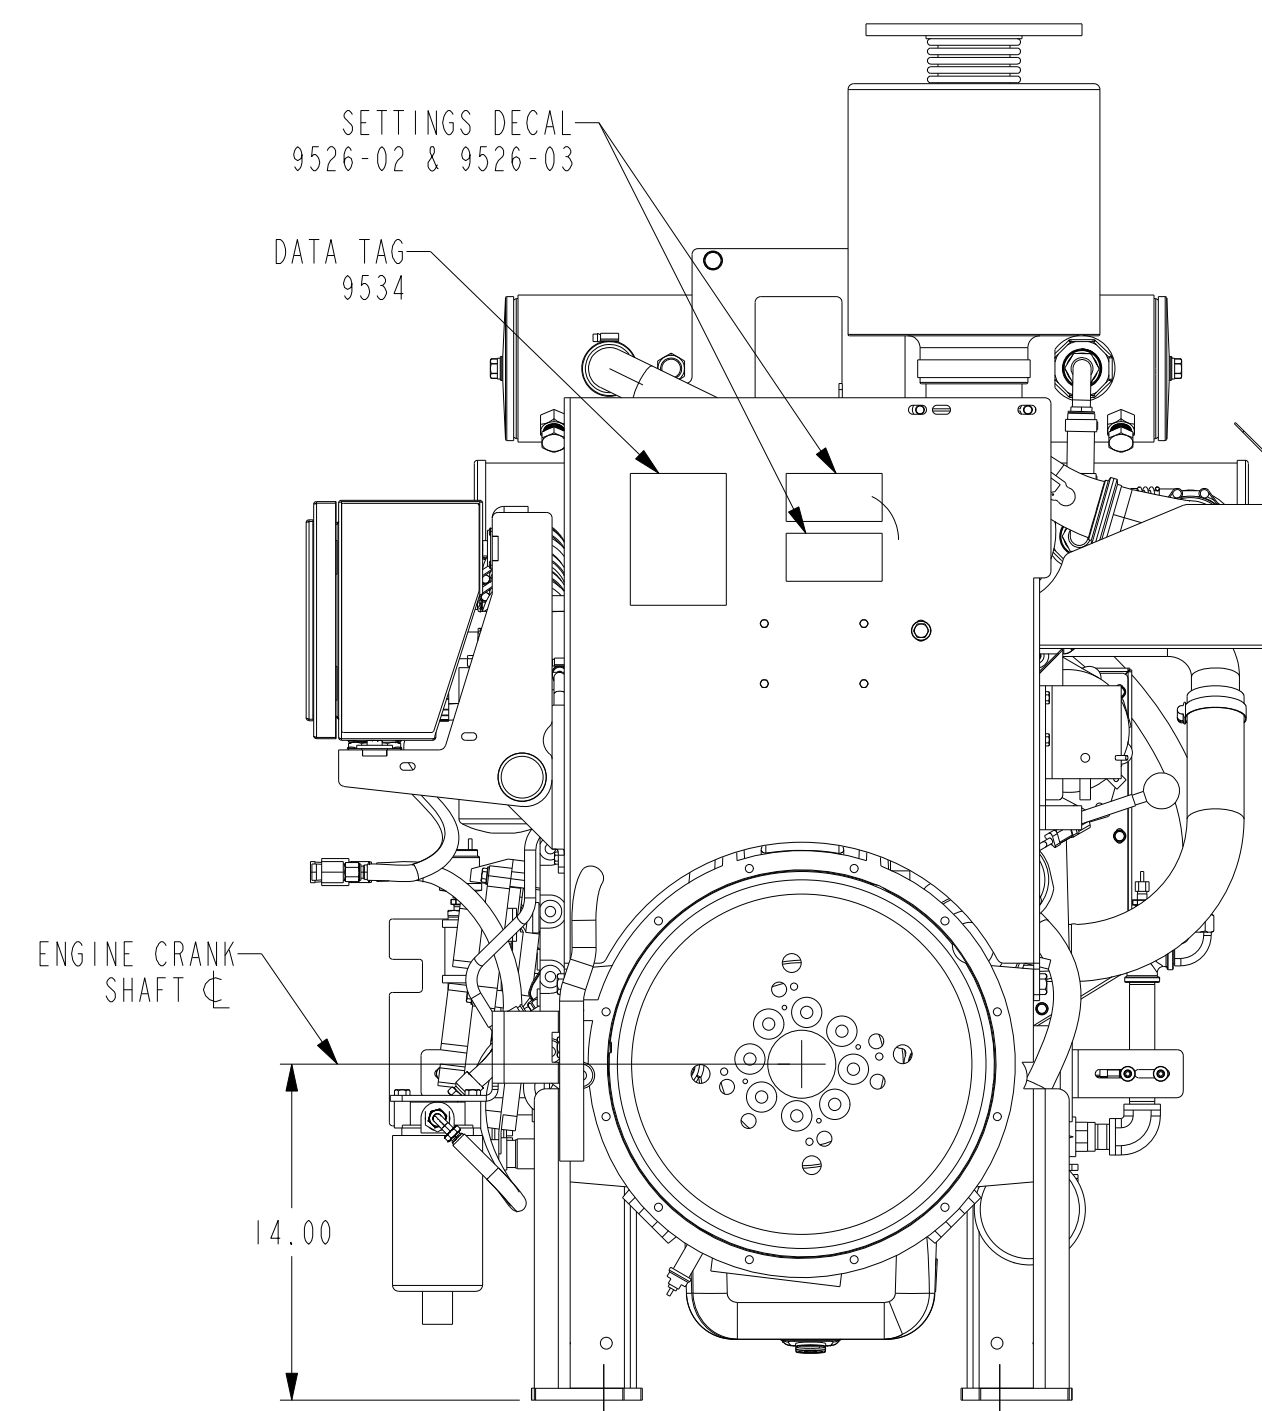

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes stated herein. It is to be returned to the originator upon completion of the project. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Cummins Fire Power LLC. All rights reserved. © 2013 Cummins Fire Power LLC. All other rights reserved.

Cummins Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUREAU ROAD
 WHITE SEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
 AND UPGRADE CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN


ASSEMBLY, FIREPUMP
 CFP7E-F10/20/30/40/50/60

DWG UNITS: IN/LB/S
 SCALE: 0.125
 EST WEIGHT: 42238.628

DRAWN BY: PBS
PRO-ENGINEER
 SHEET 3 OF 3


DATE: 16AUG2013
 INIT ECO: 2013475
 DRAWING NO: 26109

REV	DESCRIPTION OF REVISION	REV BY	DATE
D	2015-347 SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	09JUN2015
ECO			

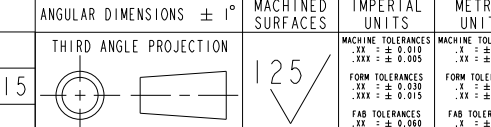

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE
 ANGULAR DIMENSIONS ± 1°
 MACHINED SURFACES ± 0.005
 IMPERIAL UNITS
 METRIC UNITS
 125
 30

ENGINE ASSEMBLY
 QSB 4.5 L
 FIREPUMP CONFIGURATION
 FIRE 45 QSB4.5 BASE ENGINE

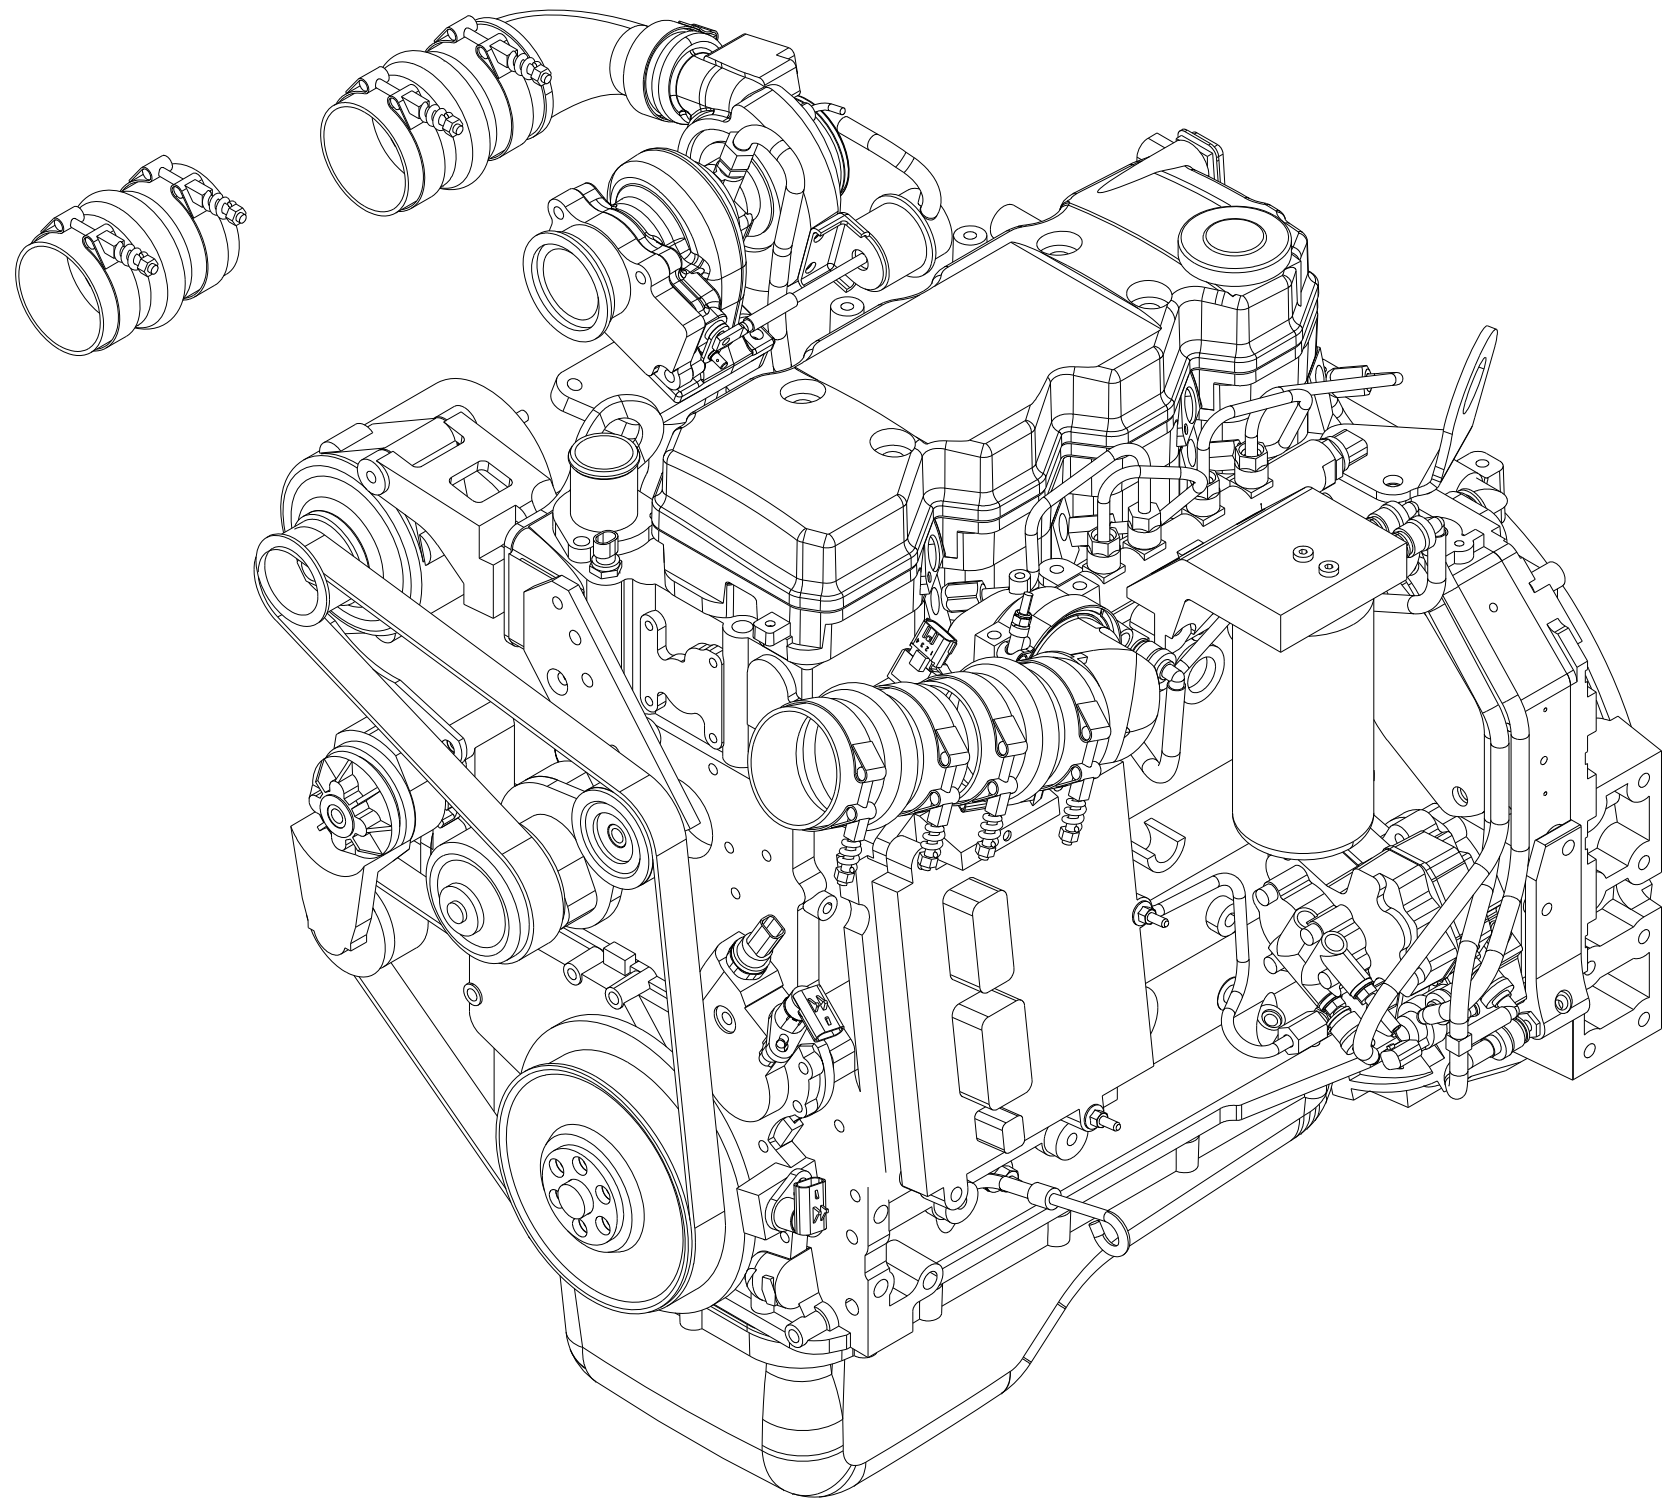

E	AP90116	APPROVAL AGENCY		LA 9110	ARRANGEMENT, LIFTING
	BR 9191	BREATHER, CRANKCASE		LF 9136	FILTER, FULL FLOW OIL
	CH 9093	AID, COOLANT HEATER STARTING		LG 9998	GAUGE, OIL LEVEL
	DL 9253	LOCATION, FUEL DRAIN		LO 9015	OIL, LUBRICATING
	DO92738	SOFTWARE, CUSTOMER INTERFACE		OB 9169	ARRANGEMENT, OIL FILL
	DR 9020	DRIVE, REAR GEAR TRAIN		OP 9454	PAN, OIL
	EE 9242	ALTERNATOR		RP 9045	VENT, ENGINE COOLANT
	EH 9472	MOUNTING, ALTERNATOR		SK 9003	ARRANGEMENT, SHIPPING
	FA 9330	FAN DRIVE		SS 9591	PAINT
	FF 9674	LOCATION, FUEL FILTER		ST 9383	MOTOR, STARTING
	FH 9469	HOUSING, FLYWHEEL		SV 9001	VOLTAGE, ENGINE OPERATING
	FI 9099	FITTING, FUEL INLET		TB91170	ARRANGEMENT, TURBO CHARGER
	FR93662	RATING, FUEL		TK 9036	COOLER, TORQUE CONVERTER OIL
	FW 9829	FLYWHEEL		VC 9310	ARRANGEMENT, VALVE COVER
	HC 9040	PLUMBING, CABIN HEATER		WI 9179	CONNECTION, WATER INLET
	IC 9480	CONNECTION, AIR INTAKE	D	WO 9143	CONNECTION, WATER OUTLET
	IT 9087	CONNECTION, AIR TRANSFER		XS 9254	CONNECTION, EXHAUST OUTLET
	LT 9366	LITERATURE		IC 9288	CONNECTION, HOSES, CAC

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUERKLE ROAD
 WHITE BEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
 AND UPFIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

ASSEMBLY, ENGINE, QSB4.5


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	125	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2
		FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
		FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8

DWG UNITS:	DRAWN BY: MAC	DATE: 10-SEP-09
	PRO-ENGINEER	INIT ECO:
SCALE: 0.200	SHEET 1 OF 1	DRAWING NO: 13211
EST WEIGHT: 0.000		

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
E	2014-679	ENGINE SPEC UPDATED	JJW	29SEP2014
D	2010-367	UPDATED WO OPTION	S DUBICK	04AUG2010

ENGINE ASSEMBLY
 QSB 6.7L
 FIREPUMP CONFIGURATION
 FIRE 46 QSB6.7 BASE ENGINE

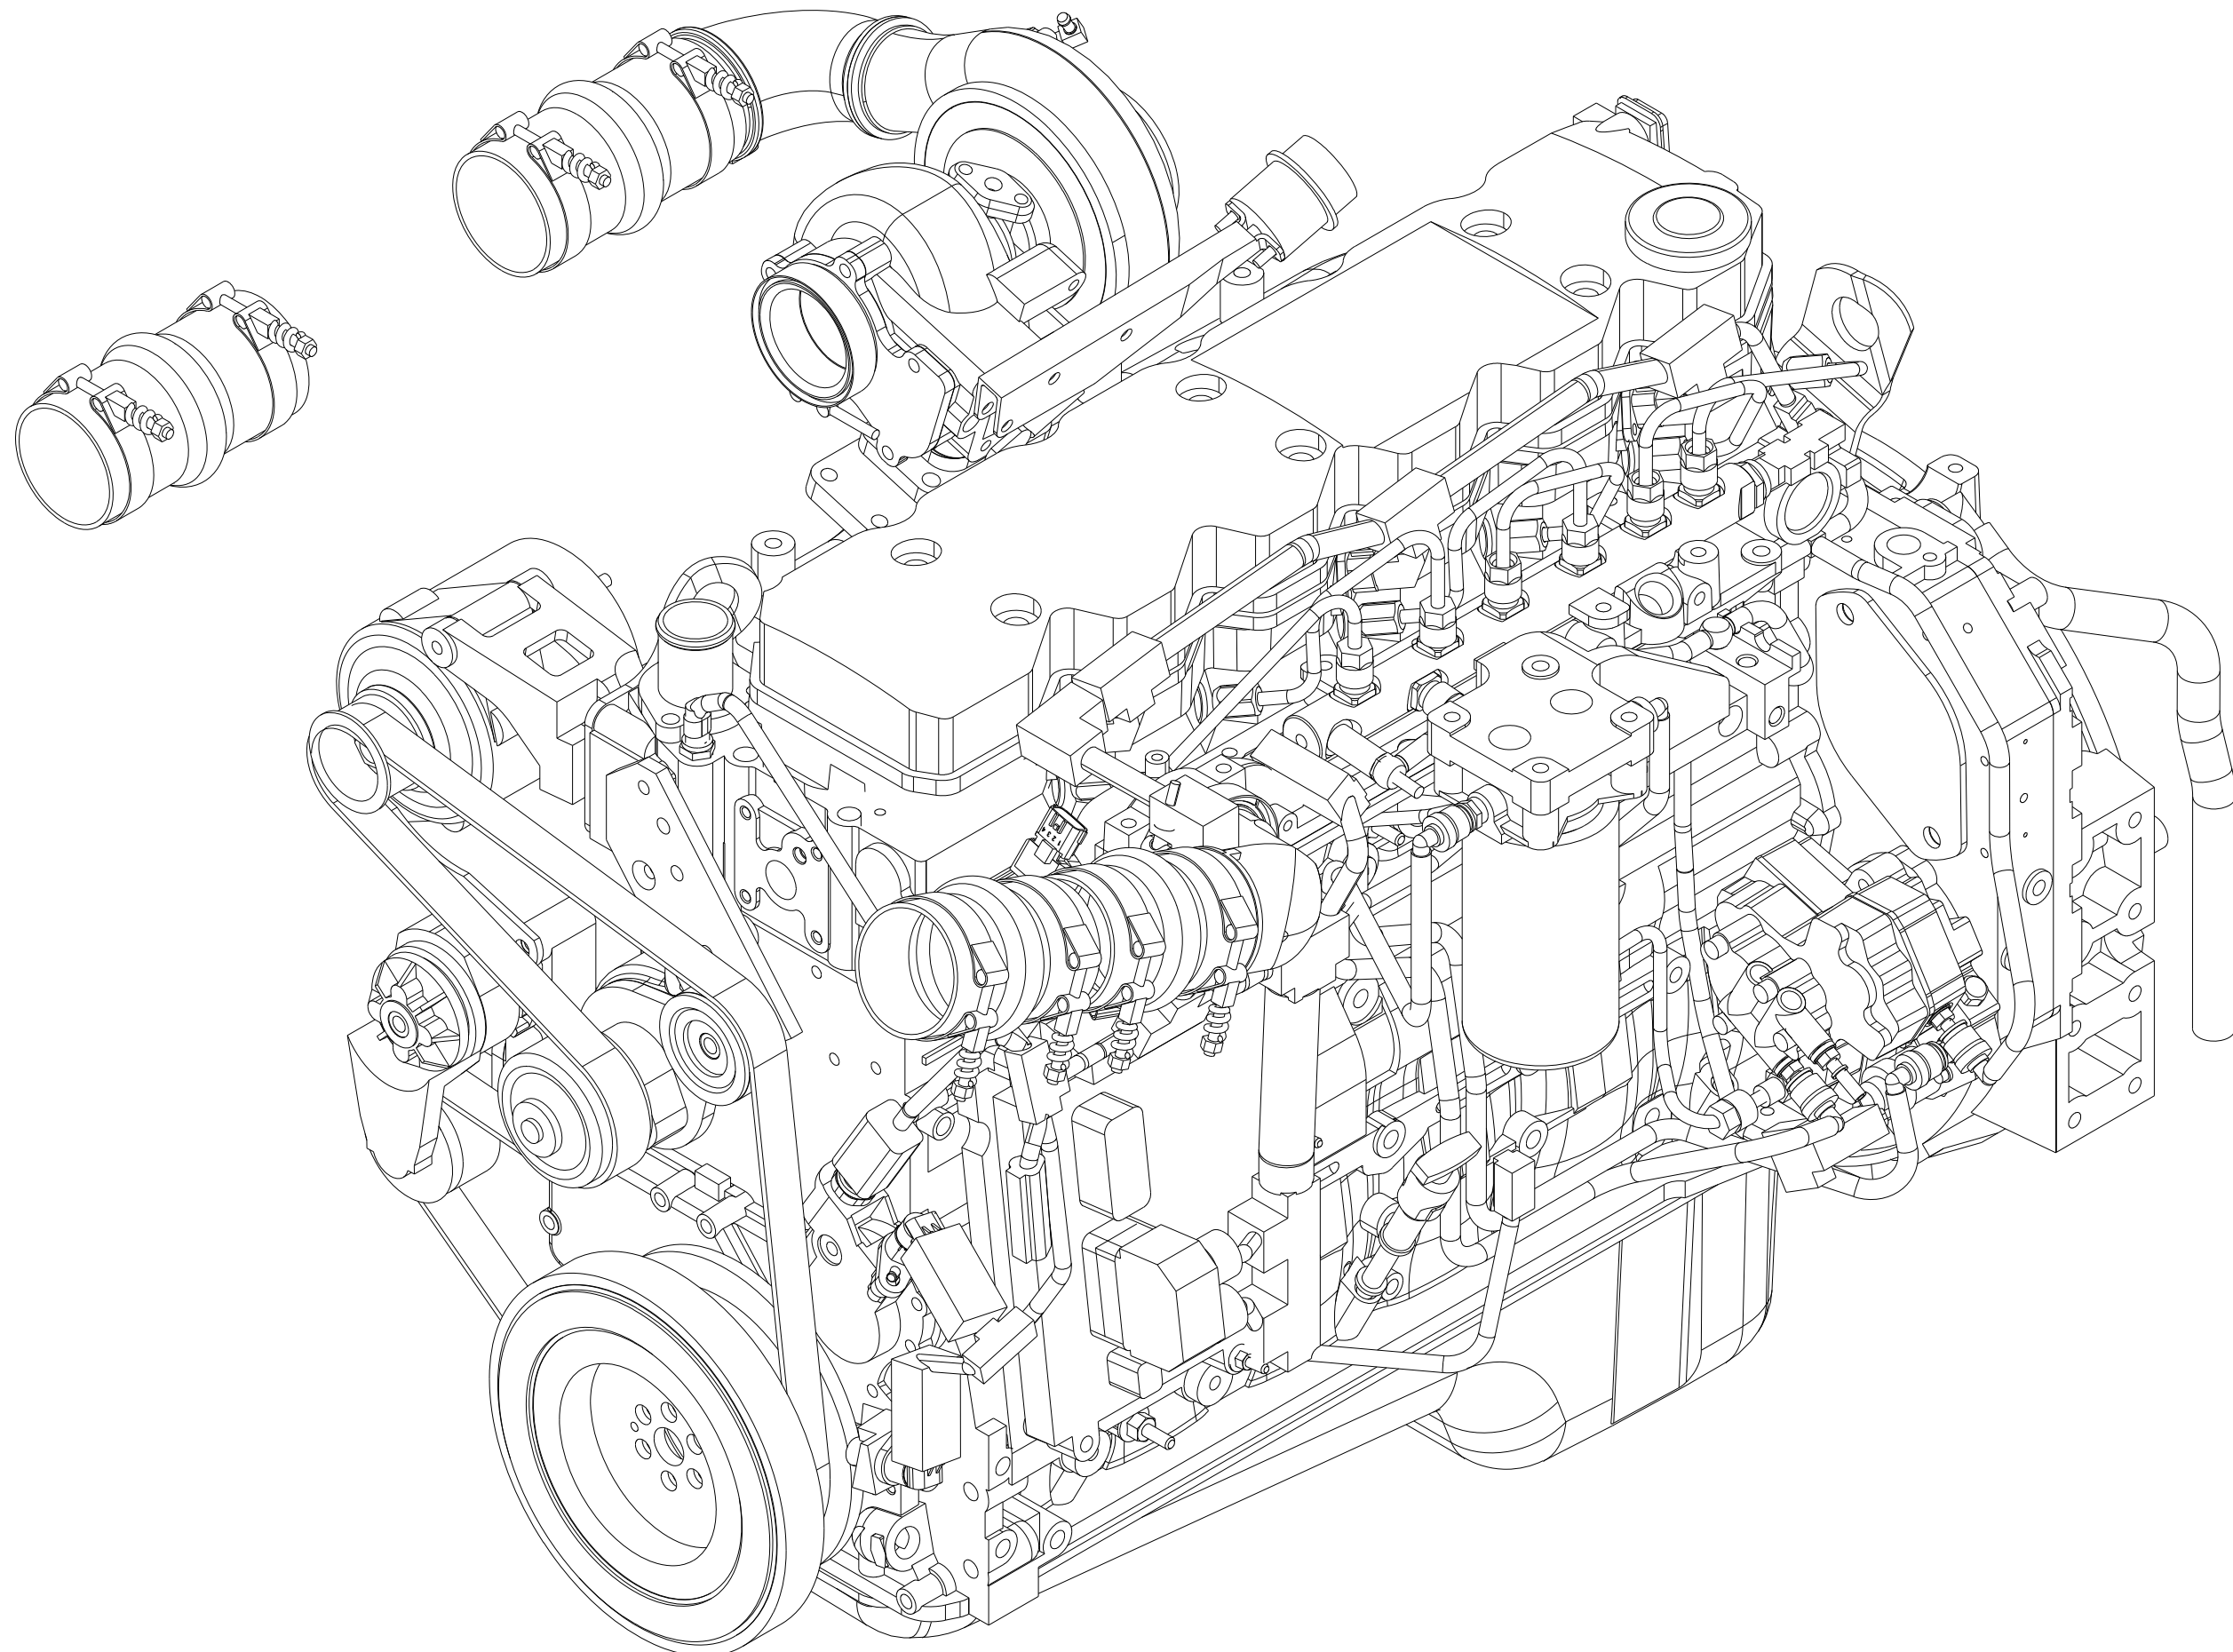

E D C

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	LOCATION, FUEL DRAIN	DL9197
2	1	DRIVE, FAN, -	FA9330
3	1	RATING, FUEL, -	FR91422
4	1	HOSE CONNECTIONS, CAC	IC9288
5	1	OIL, LUBRICATING	LO9015
6	1	ARRANGEMENT, SHIPPING	SK9003
7	1	PAINT	SS9591
8	1	VOLTAGE, ENGINE OPERATING	SV9001
9	1	APPROVAL, AGENCY	AP90116
10	1	CRANKCASE, BREATHER, -	BR9191
11	1	AID, COO HEATER STARTING, _	CH9070
12	1	SOFTWARE, CUS INTERFACE	DO92867
13	1	DRIVE, REAR GEAR TRAIN	DR9020
14	1	ALTERNATOR, _	EE9242
15	1	MOUNTING, ALTERNATOR, _	EH9472
16	1	FUEL FILTER, -	FF9541
17	1	HOUSING, FLYWHEEL	FH9469
18	1	FLYWHEEL	FW9829
19	1	CABIN HEATER PLUMBING	HC9026
20	1	AIR INTAKE CONNECTION	IC9480
21	1	AIR TRANSFER CONNECTION, -	IT9039
22	1	LIFTING PROVISIONS, ARRANGEMENT	LA9145
23	1	FILTER, OIL, FULL FLOW	LF9136
24	1	OIL LEVEL, GAUGE	LG9992
25	1	LITERATURE	LT9366
26	1	OIL PAN, SUMP LOCATION: REAR	OP9656
27	1	LEVER, ROCKER, _	RL9765
28	1	VENT, ENGINE COOLANT	RP9045
29	1	MOTOR, STARTING, _	ST9383
30	1	ARRANGEMENT, TURBOCHARGER, _	TB91125
31	1	COOLER, TOR CONVERTER OIL	TK9036
32	1	ARRANGEMENT, VALVE COVER	VC9305
33	1	CONNECTION, WATER INLET	WI9179
34	1	CONNECTION, WATER OUTLET	WO9143
35	1	CONNECTION, EXHAUST	XS9254

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	ASSEMBLY, ENGINE QSB6.7	

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
E	2014-679	UPDATED ENGINE SPEC	JJW	29SEP2014
D	2010-367	UPDATE WO SPEC	S DUBICK	04AUG2010
C	2010-317	ADDED IC 9288	S DUBICK	19JUL2010





UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
		XXX ± 0.005	XXX ± 0.1
		LOW TOLERANCES XXX ± 0.002	LOW TOLERANCES XXX ± 0.05
		FAB TOLERANCES XXX ± 0.005	FAB TOLERANCES XXX ± 0.1

THIRD ANGLE PROJECTION

DWG UNITS: IN/LB/S	DRAWN BY: MAC	DATE: 23JAN2009
SCALE: 0.250	PRO-ENGINEER	INIT ECO:
EST WEIGHT: 818.000	SHEET 1 OF 1	DRAWING NO: 13208

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY, MODIFIED VALVE COVER, CFP_5E	13852
2	1	SWITCH, PROXIMITY, 2M CABLE, 12-24V	12865
3	1	WASHER, PRESSURE SEALING WASHER, -	13769

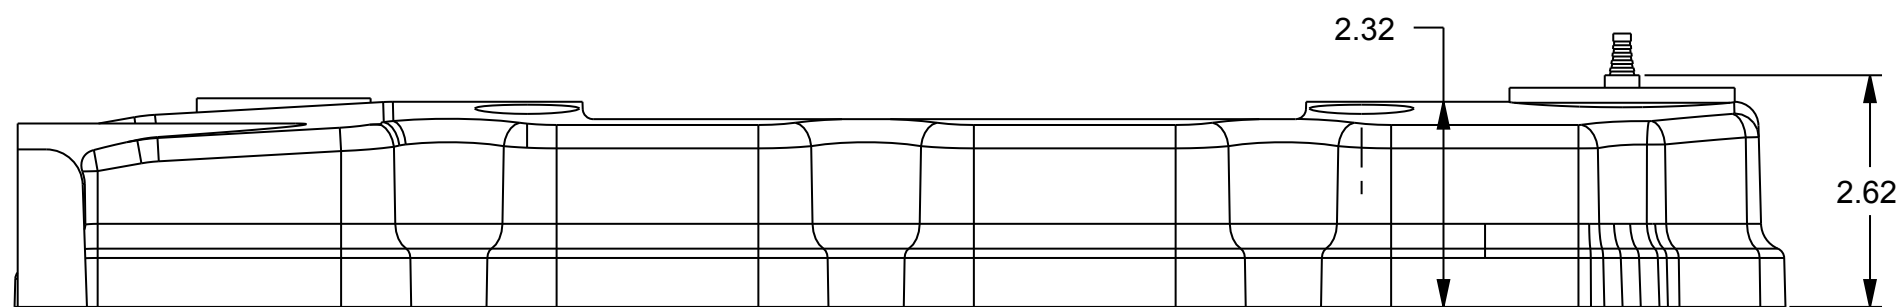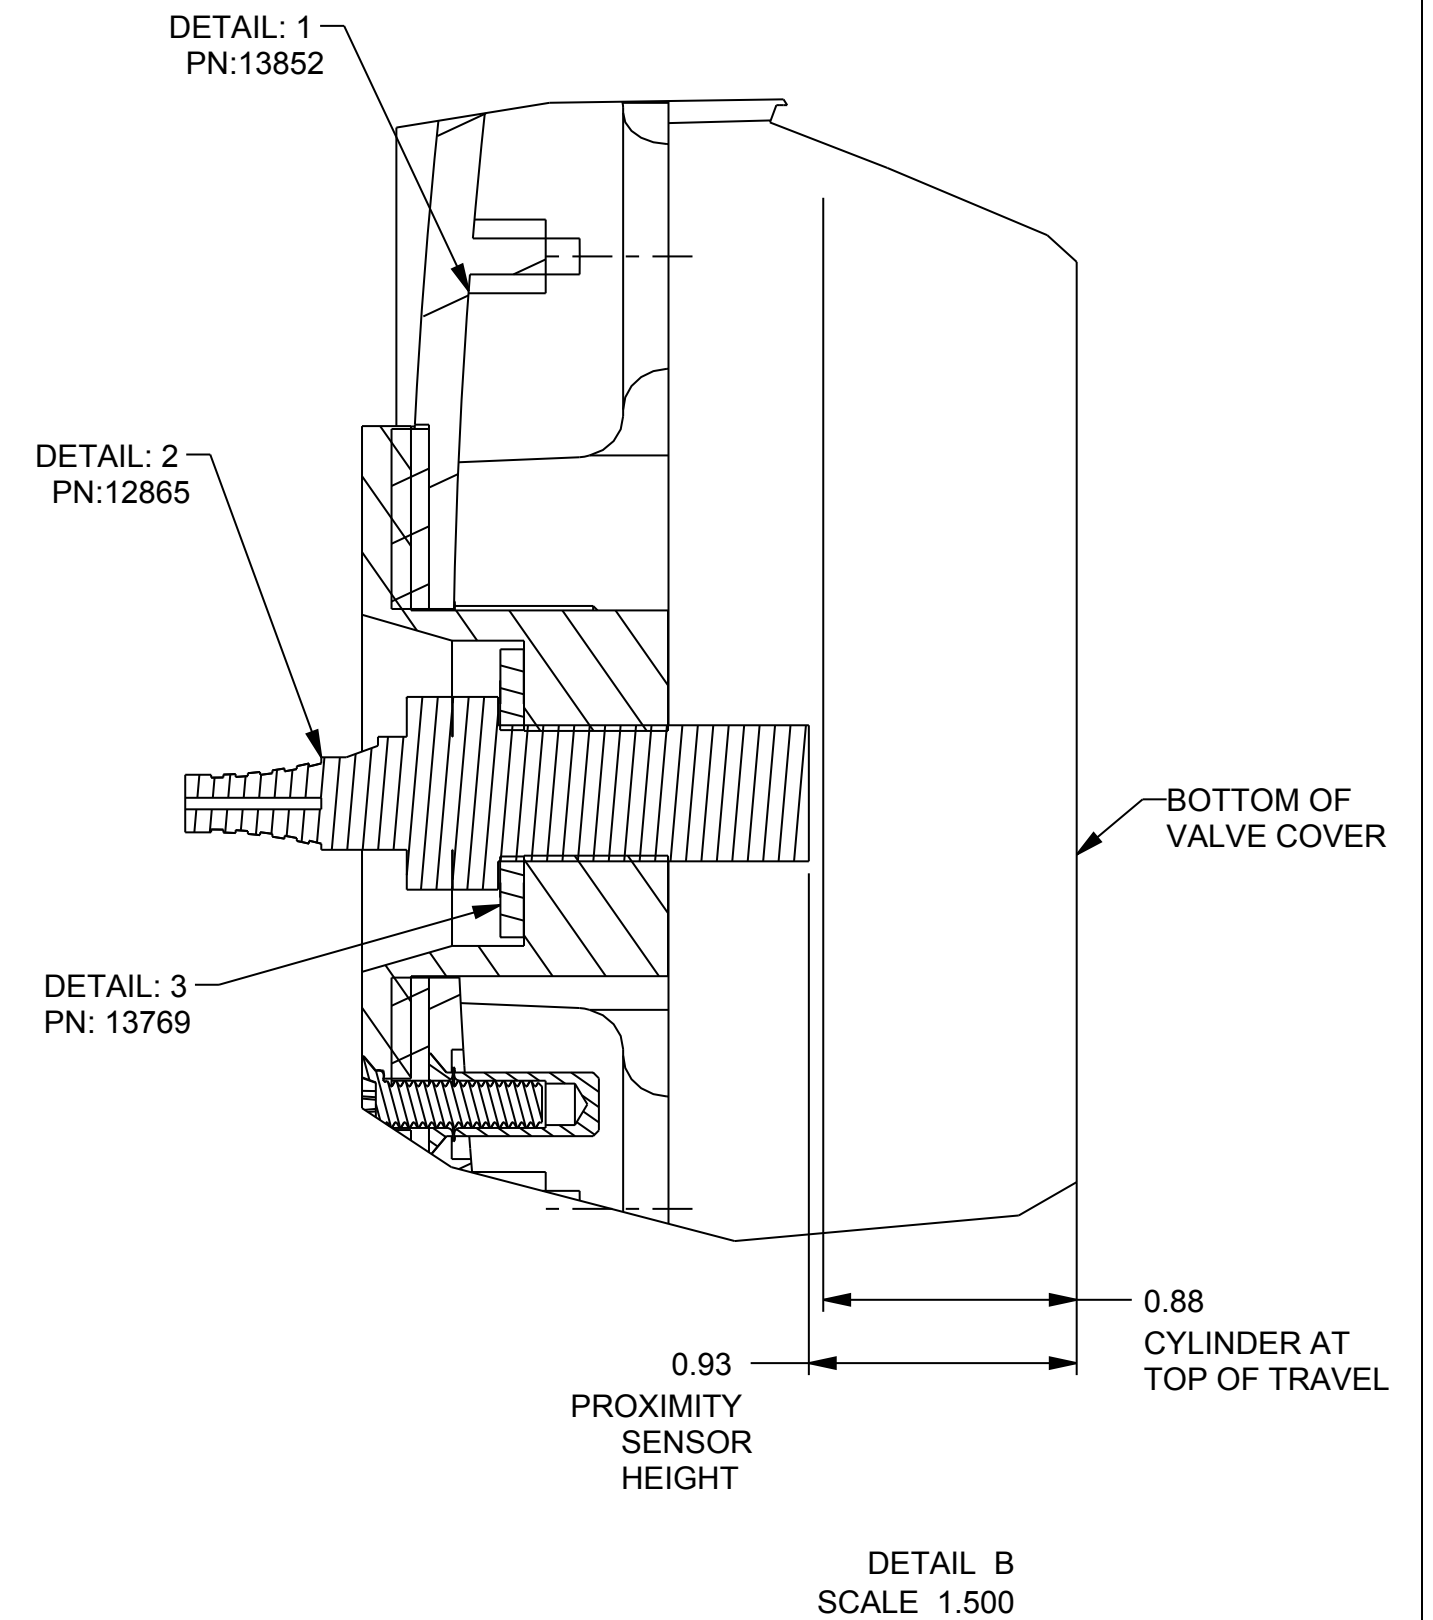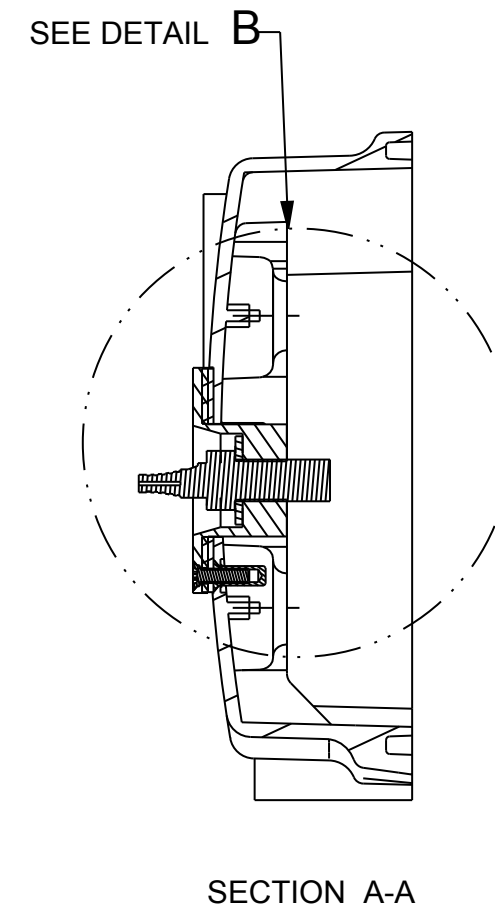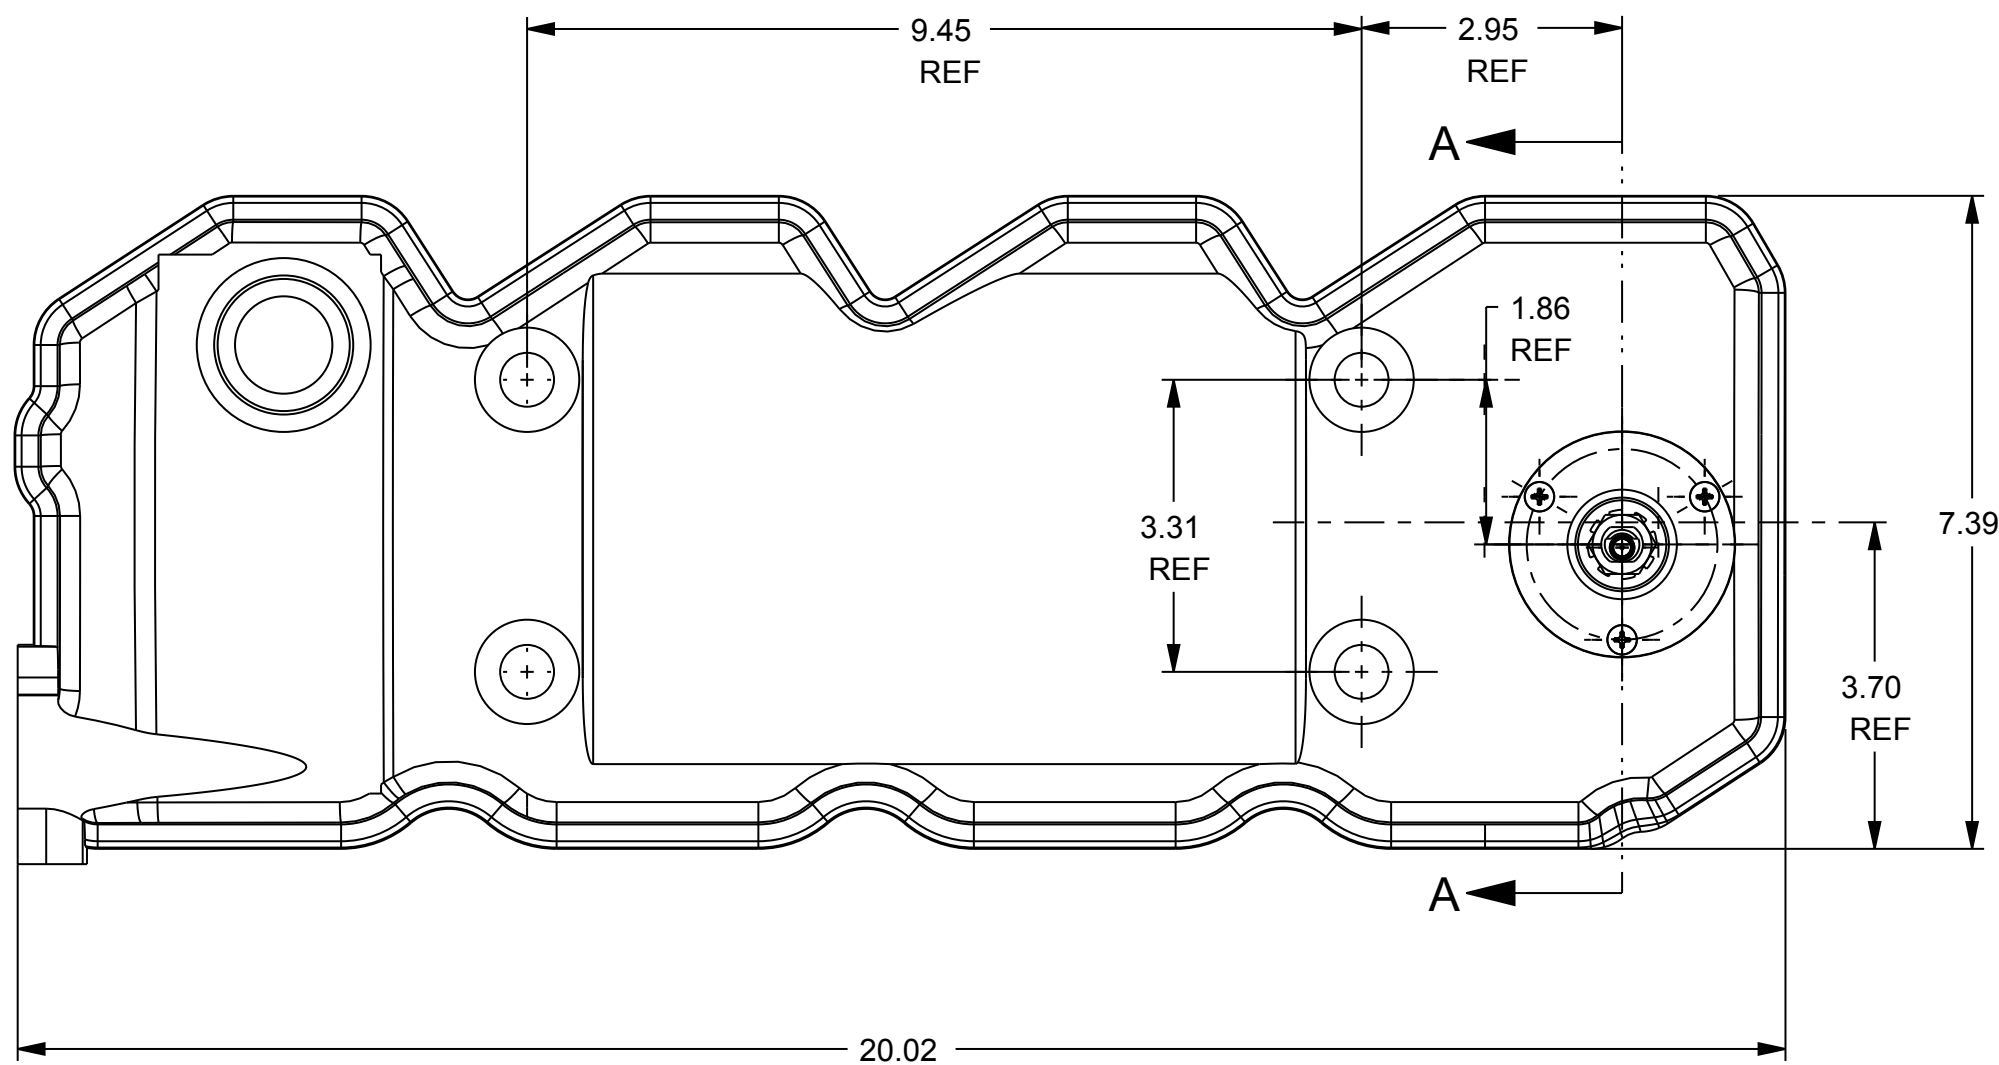

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC.



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BLUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN



UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:

ANGULAR DIMENSIONS ±° IMPERIAL UNITS METRIC UNITS



THIRD ANGLE PROJECTION	IMPERIAL UNITS	METRIC UNITS
	MACHINE TOLERANCES XX+/- .010	MACHINE TOLERANCES XX+/- .02
	FORM TOLERANCES XX+/- .010	FORM TOLERANCES XX+/- .02
	FAB TOLERANCES XX+/- .005	FAB TOLERANCES XX+/- .05
	ASSEMBLY TOLERANCES XX+/- .005	ASSEMBLY TOLERANCES XX+/- .05

ASSEMBLY, VALVE COVER PROXIMITY LOCATION CFP_5E		DATE: 12-16-2008
DWG UNITS: IN/LB/S	DRAWN BY: MAC PRO-ENGINEER	REF DRWG: _
SCALE: 0.460	SHEET 1 OF 1	DRAWING NO: 13772
EST WEIGHT: 25572.168		

REV	ENF	DESCRIPTION OF REVISION	REV BY	DATE
A				

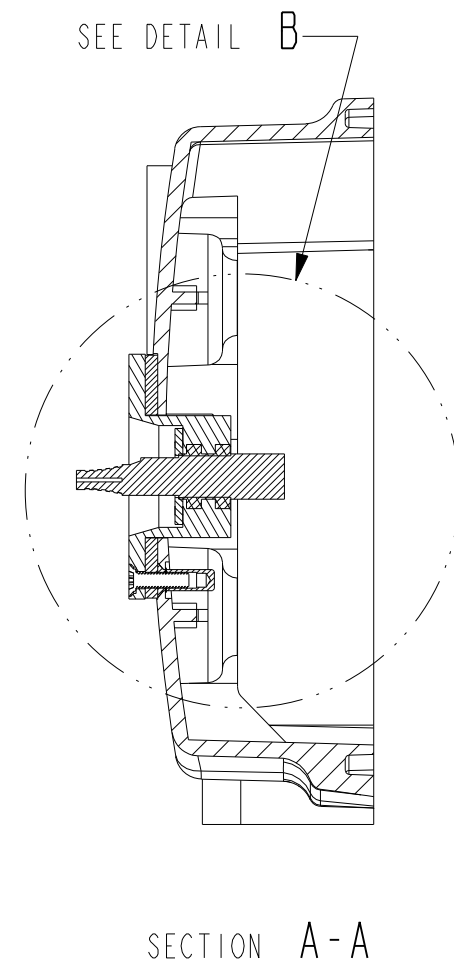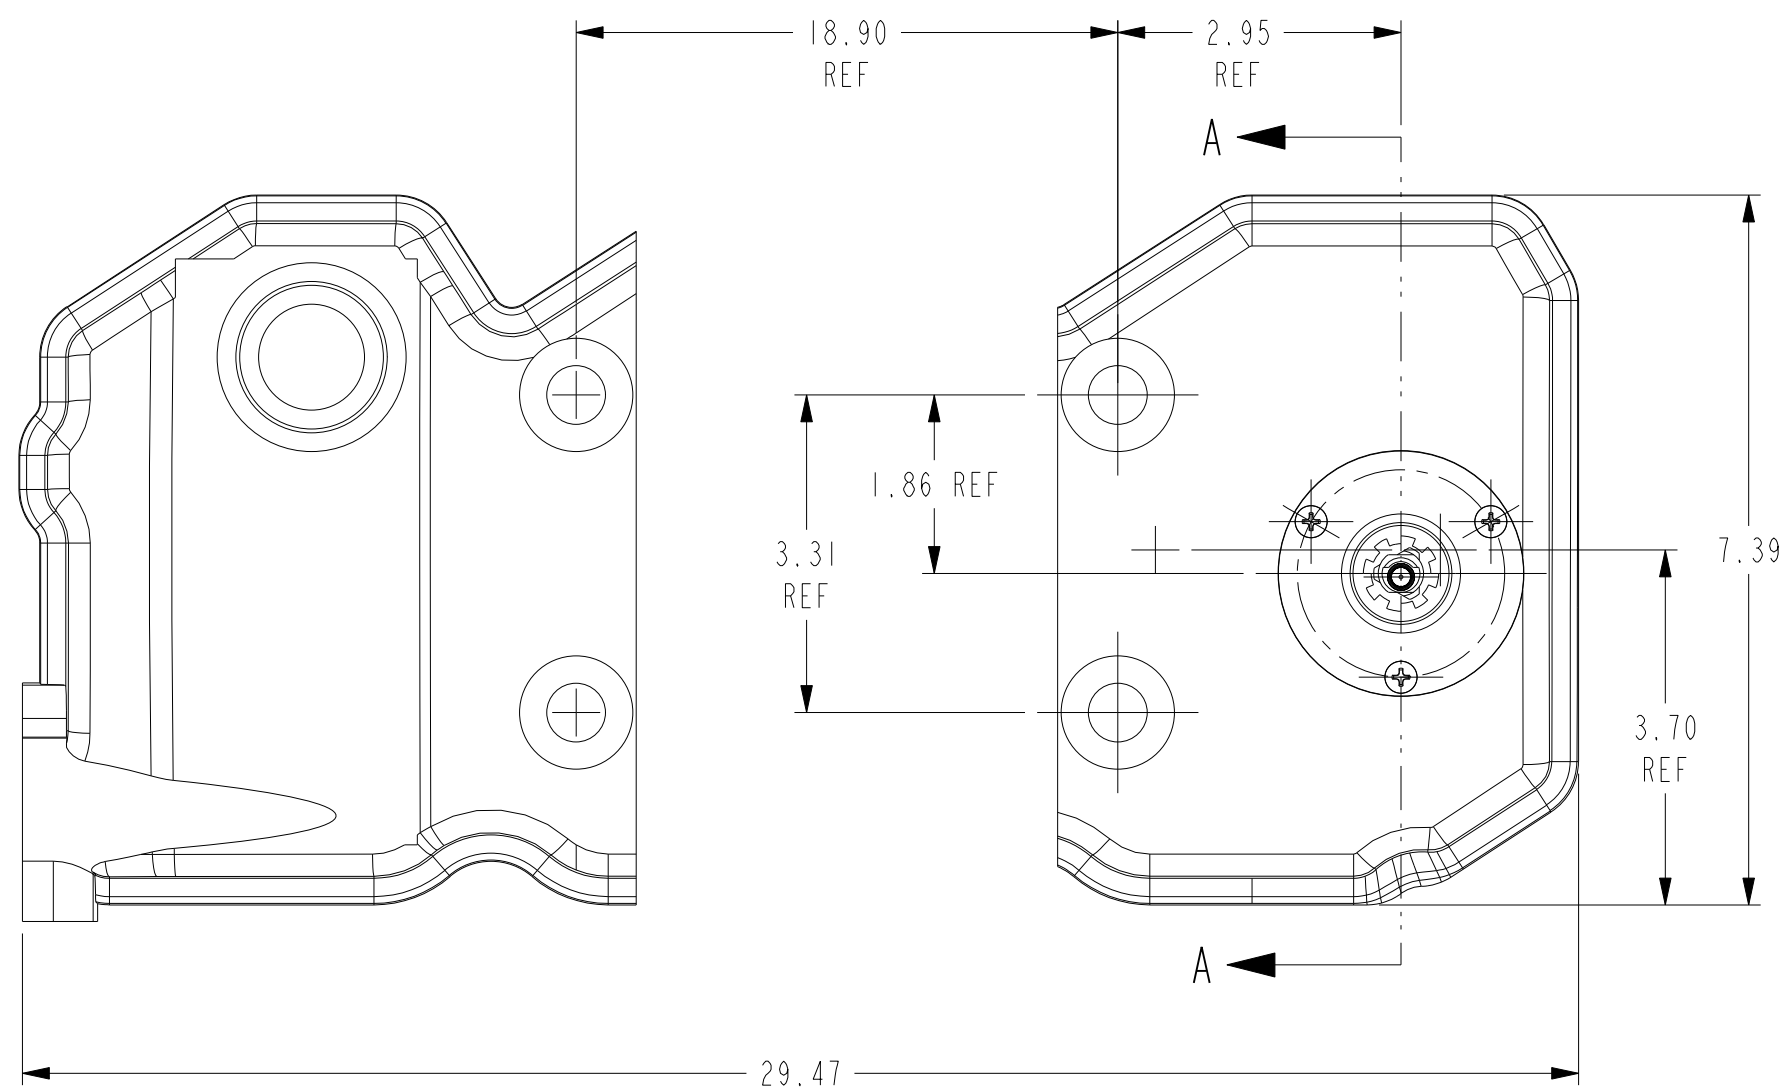


BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSEMBLY, MODIFIED VALVE COVER - CFP_7E, _	13853
2	1	SWITCH, PROXIMITY, 2M CABLE, 12-24V	12865
3	1	WASHER, PRESSURE SEALING WASHER, -	13769

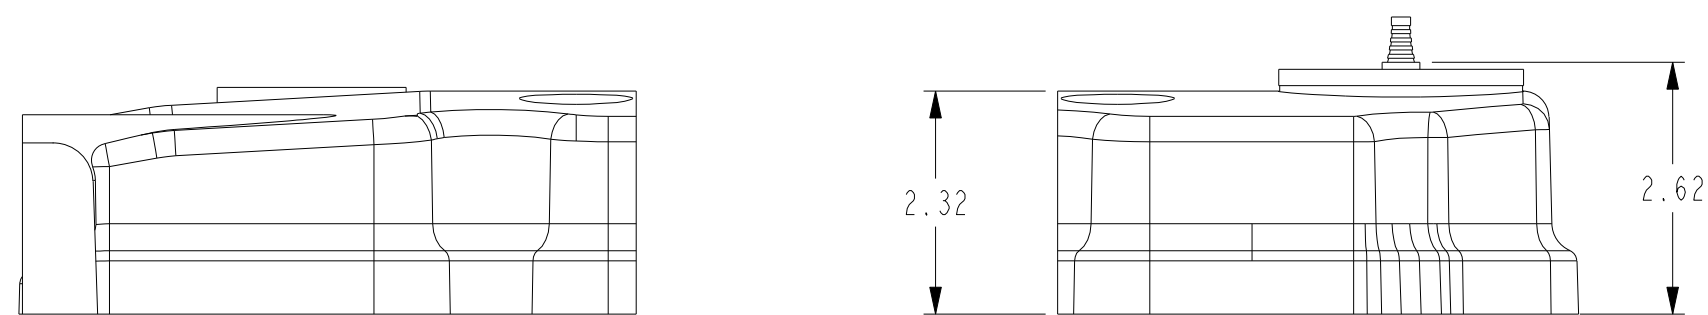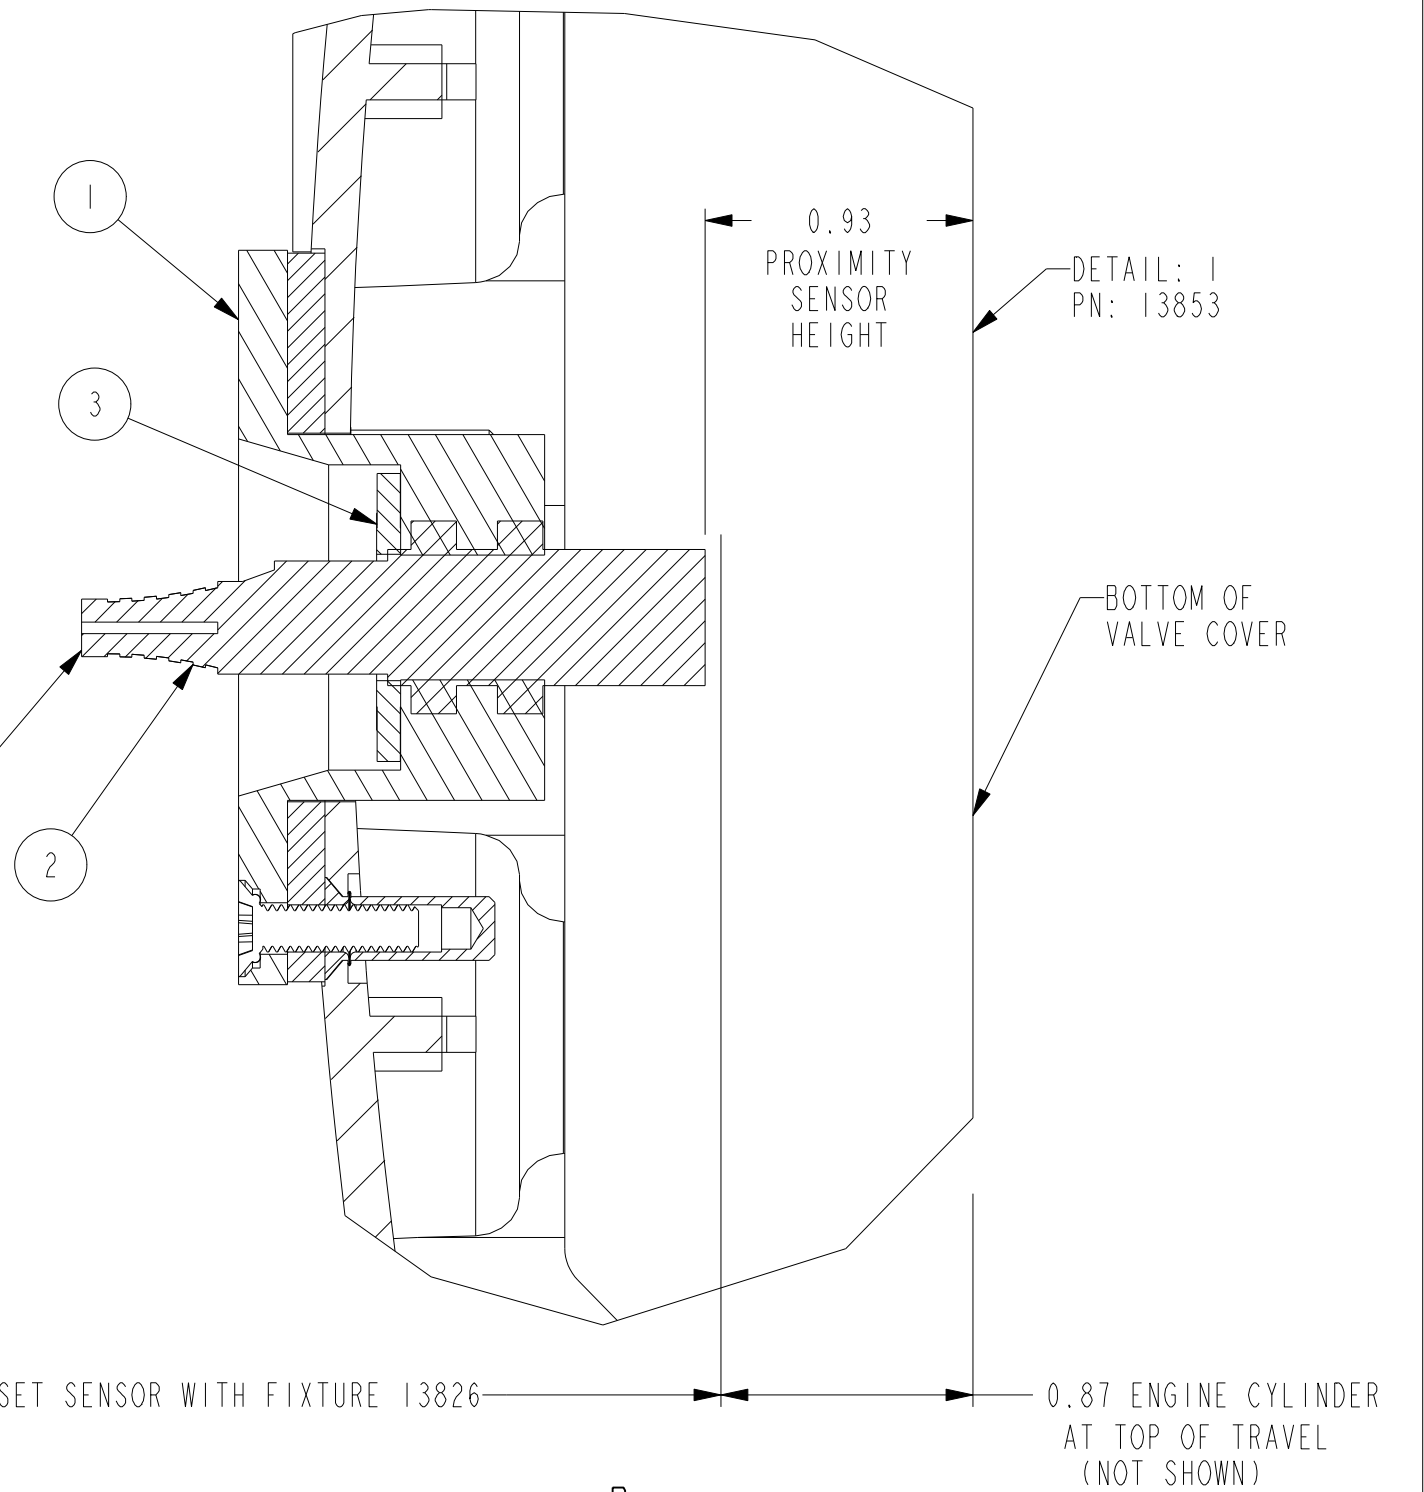


REMOVE DATA PLATE FROM ON ENGINE VALVE COVER WITH HOT KNIFE. RE-APPLY TO MODIFIED VALVE COVER WITH VHB TAPE CFP# 15115

TIE OFF SENSOR WIRE TO RELIEVE STRESS ON CONNECTION

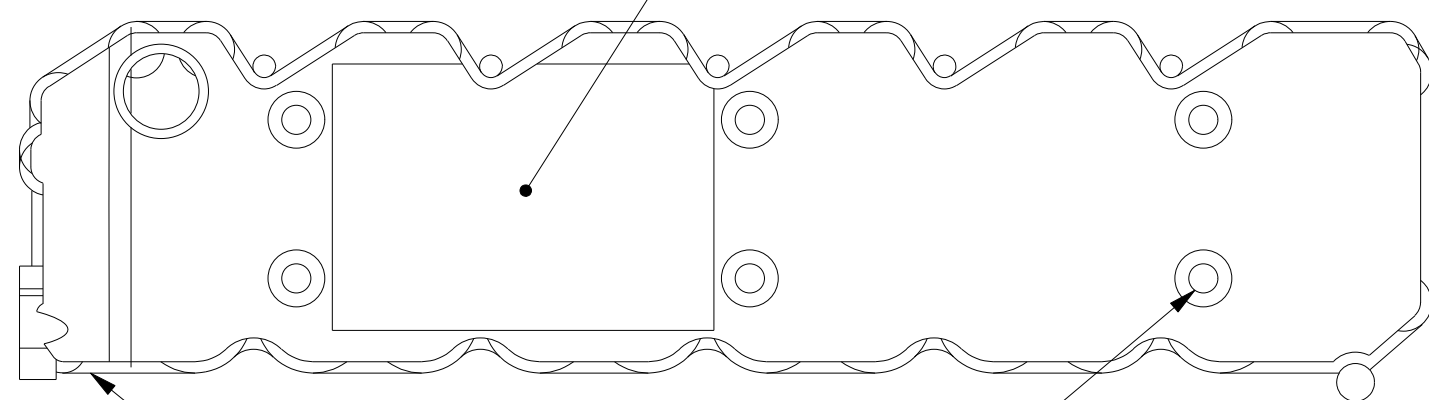

DO NOT REUSE TOP NUTS
RE-USE VALVE COVER GASKET

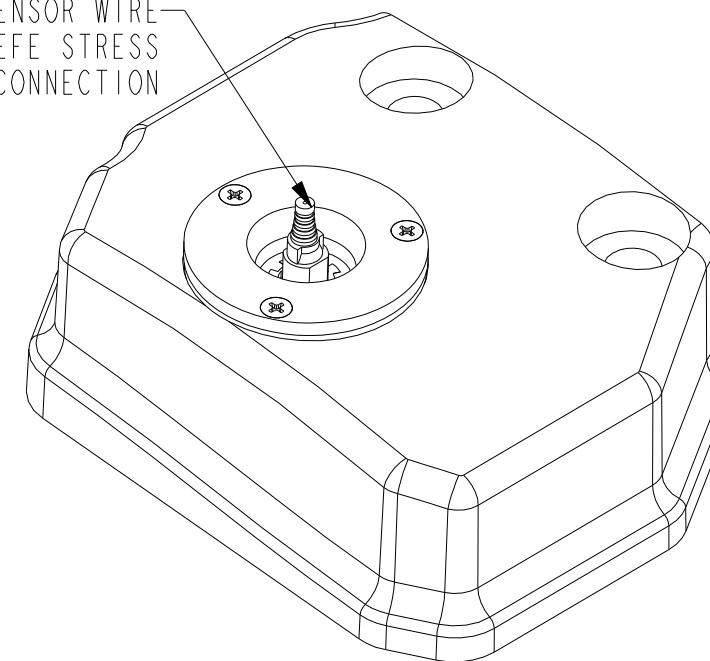

***SET SENSOR WITH FIXTURE 13826

DETAIL B
SCALE 1.500

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will not use the document or any copy thereof or the confidential or trade secret information therein. It shall copy the document, shall not disclose to others either the document or the confidential or trade secret information therein, and it shall upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. ©2008 Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUEKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPGIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1° IMPERIAL UNITS METRIC UNITS

THIRD ANGLE PROJECTION	MACHINE TOLERANCES FRACTIONS ± 0.005 DECIMALS ± 0.010 FIB TOLERANCES ± 0.005	MACHINE TOLERANCES FRACTIONS ± 0.010 DECIMALS ± 0.020 FIB TOLERANCES ± 0.010
------------------------	--	--

ASSEMBLY, VALVE COVER
PROXIMITY LOCATION CFP_7E

DWG UNITS:
IN/LB/S

DRAWN BY: MAC
PRO-ENGINEER



DATE: 12-16-2008

SCALE: 0.500
EST WEIGHT: 16.160


SHEET
1 OF 1

REF DRWG:
13849






REV	DESCRIPTION OF REVISION	REV BY	DATE
A	2009-249 ADDED NOTES AND FIXTURE PART NUMBER	DAN	11-JUN-09
ENF			

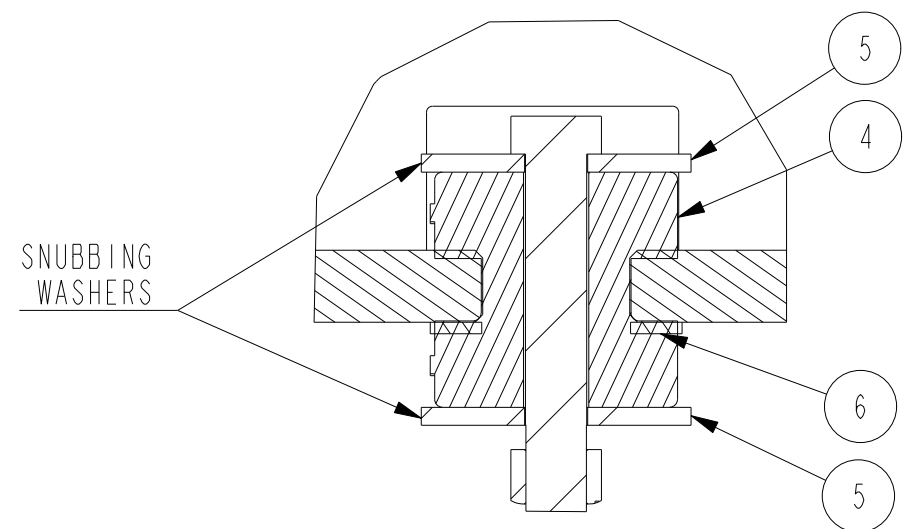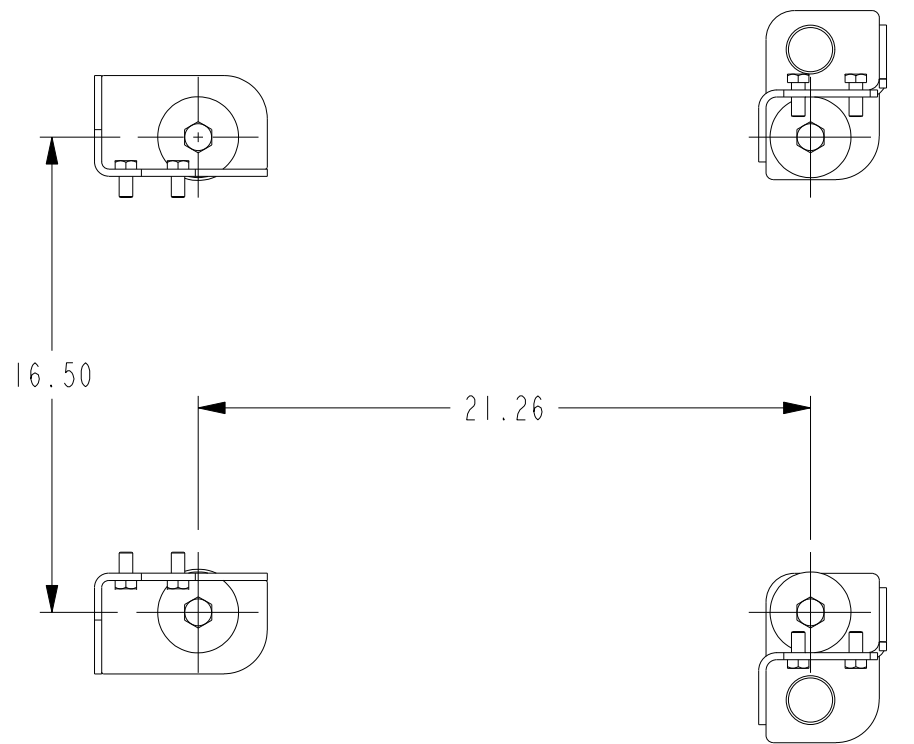

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	LEG, ENGINE REAR, ISOLATED CFP5E	13344
2	1	LEG, ENGINE FRONT LH, ISOLATED CFP5E	14349
3	1	LEG, ENGINE FRONT RH, ISOLATED CFP5E	14350
4	4	ISOLATOR, TECH PRODUCTS #60035, FIREPUMP	13340
E 5	8	WASHER, SNUBBING, TECH PRODUCTS 0183	13598
6	4	SHIM, ISOLATED, LEG, FIREPUMP	14348
7	4	NUT, HEX, PT, M16-2.00	20140-M16
8	10	SCREW, HH, M12-1.75x25	20312-025
9	4	SCREW, HH, M12-1.75x30	20312-030
10	3	SCREW, HH, M16-2.00x100	20316-100
11	1	SCREW, HH, M16-2.00x110	20316-110

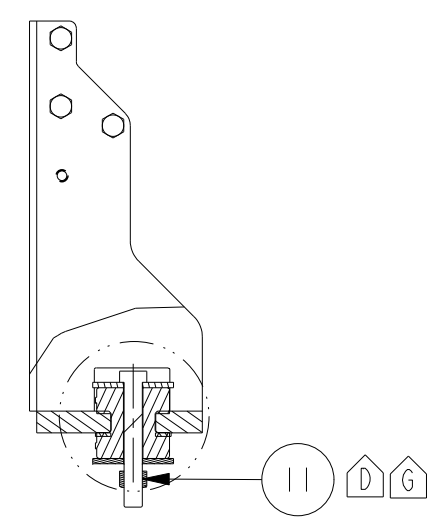

SECTION A-A

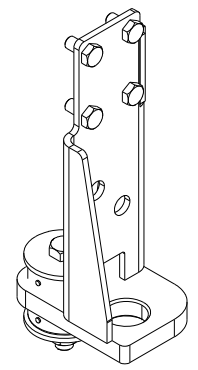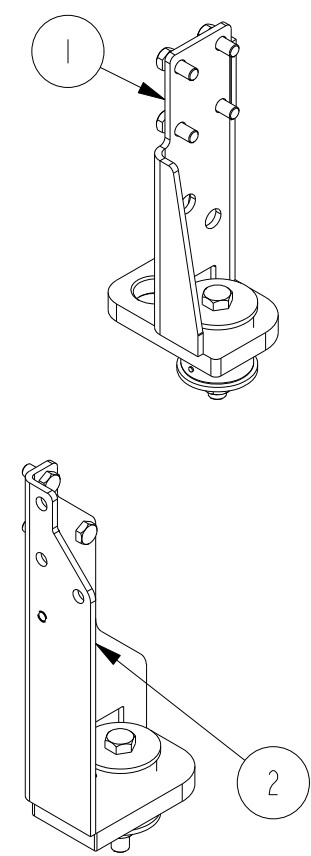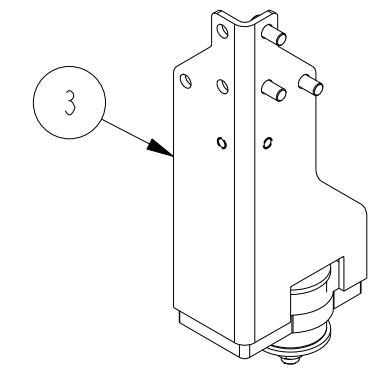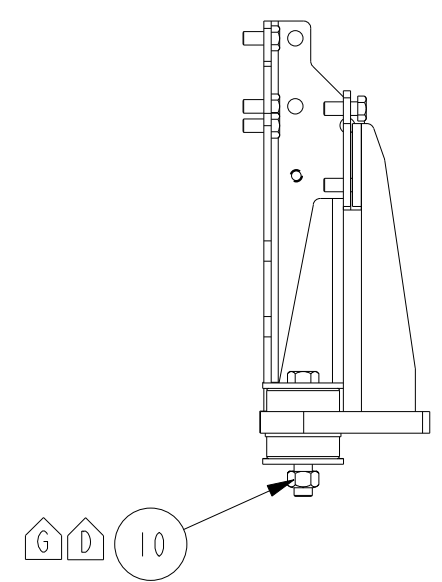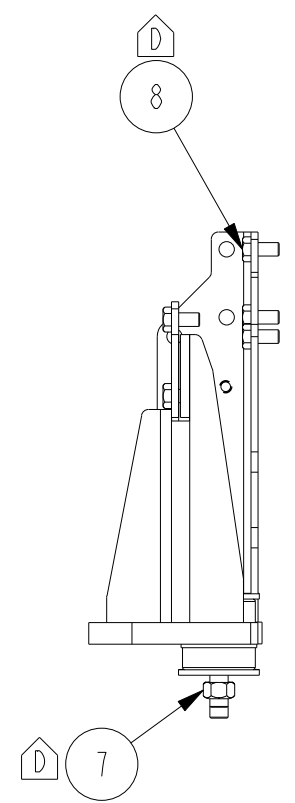

ITEM #6 LEG SHIM MUST BE INSTALLED ON EACH LEG

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
G	2015-306	DELETED: 20316-090, ADDED 20316-110 20316-100 WAS QTY 1	PBS	12MAY2015
F	2014-076	DELETED: 14370	PBS	06FEB2014
E	2011-275	CREATE NUMBER AND ADD SNUBBING WASHERS.	S DUBICK	29-AUG-11
D	2011-054	ADD FASTENERS PER SIX SIGMA	S DUBICK	26-APR-11
C	2011-043	REV PER COMPONENTS, ADDED SECTION VIEW.	S DUBICK	01-FEB-11

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°




THIRD ANGLE PROJECTION

MACHINED SURFACES

125

MACHINE TOLERANCES	IMPERIAL UNITS	METRIC UNITS
.XX ± 0.010	.1 ± 0.4	.1 ± 0.2
.XXX ± 0.005	.1 ± 0.4	.1 ± 0.2
FORM TOLERANCES	IMPERIAL UNITS	METRIC UNITS
.XX ± 0.010	.1 ± 0.4	.1 ± 0.2
.XXX ± 0.005	.1 ± 0.4	.1 ± 0.2
FAB TOLERANCES	IMPERIAL UNITS	METRIC UNITS
.XX ± 0.010	.1 ± 0.4	.1 ± 0.2
.XXX ± 0.005	.1 ± 0.4	.1 ± 0.2

	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM		CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	ASSEMBLY, ENGINE MOUNTING ISOLATED, CFP5E		
DWG UNITS: IN/LB/S	DRAWN BY: MAC PRO-ENGINEER	DATE: 11-05-2008 INIT ECO:	
SCALE: 0.150 EST WEIGHT: 64.732	SHEET 1 OF 1	DRAWING NO: 13847	

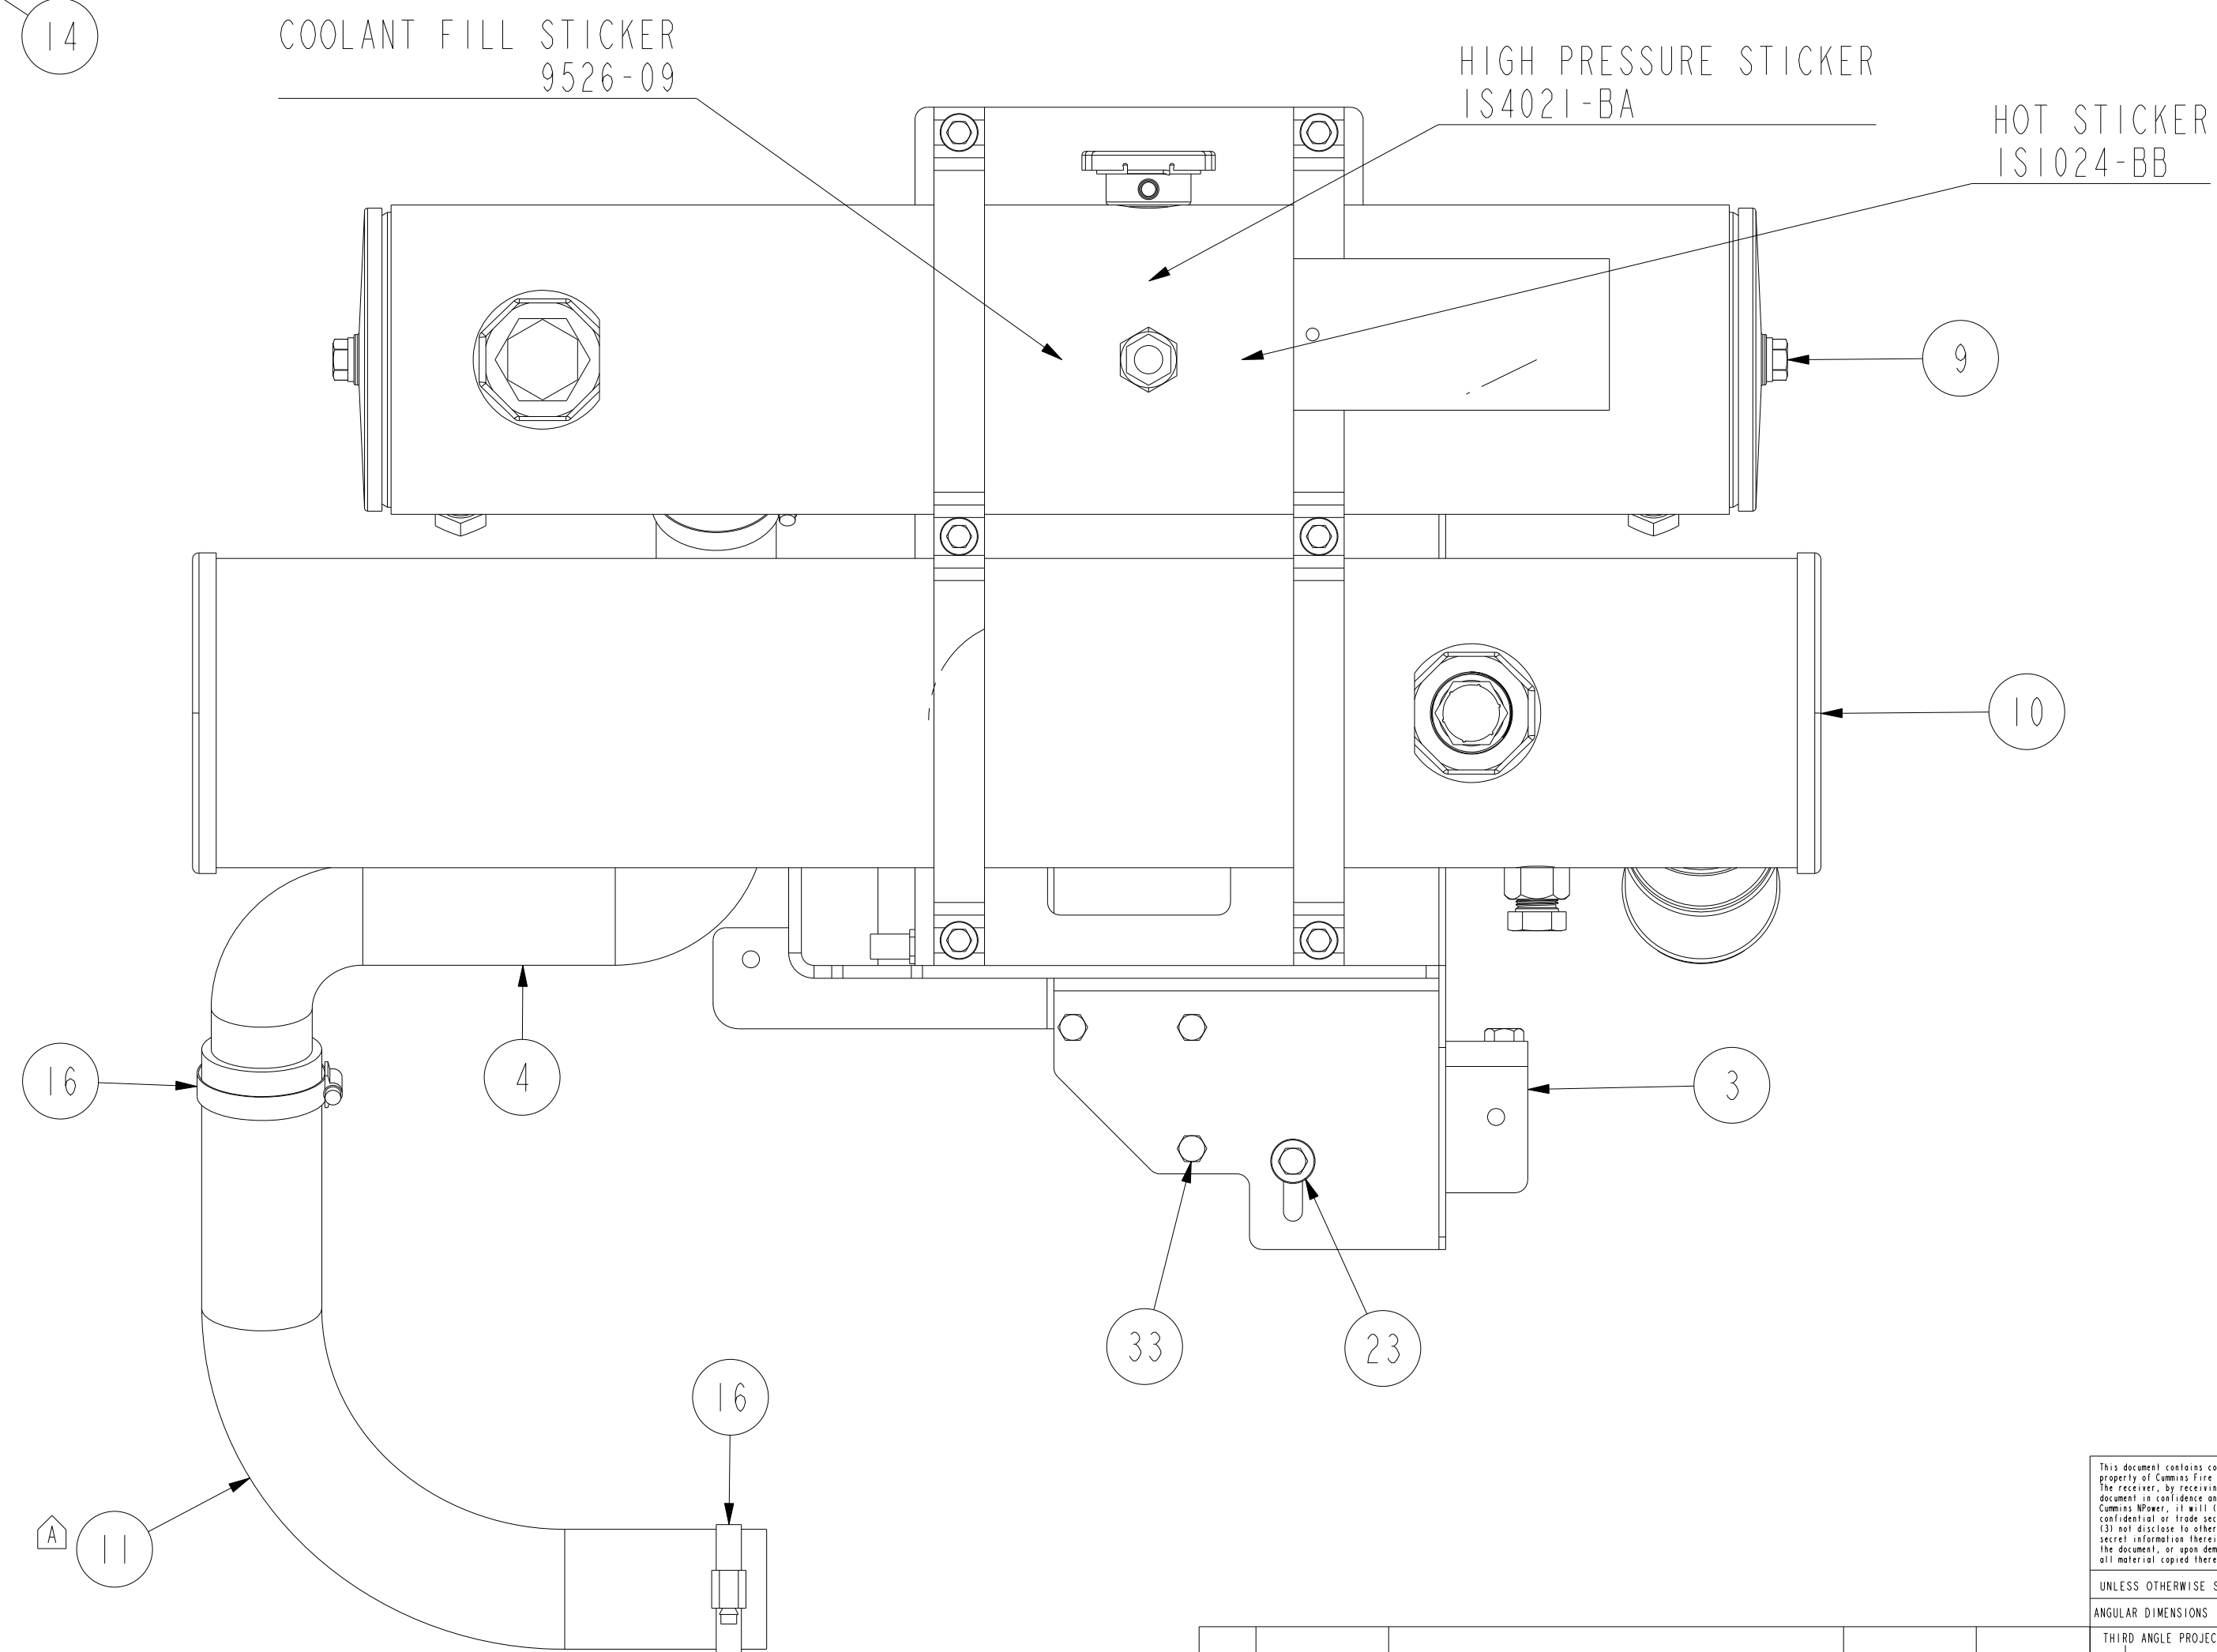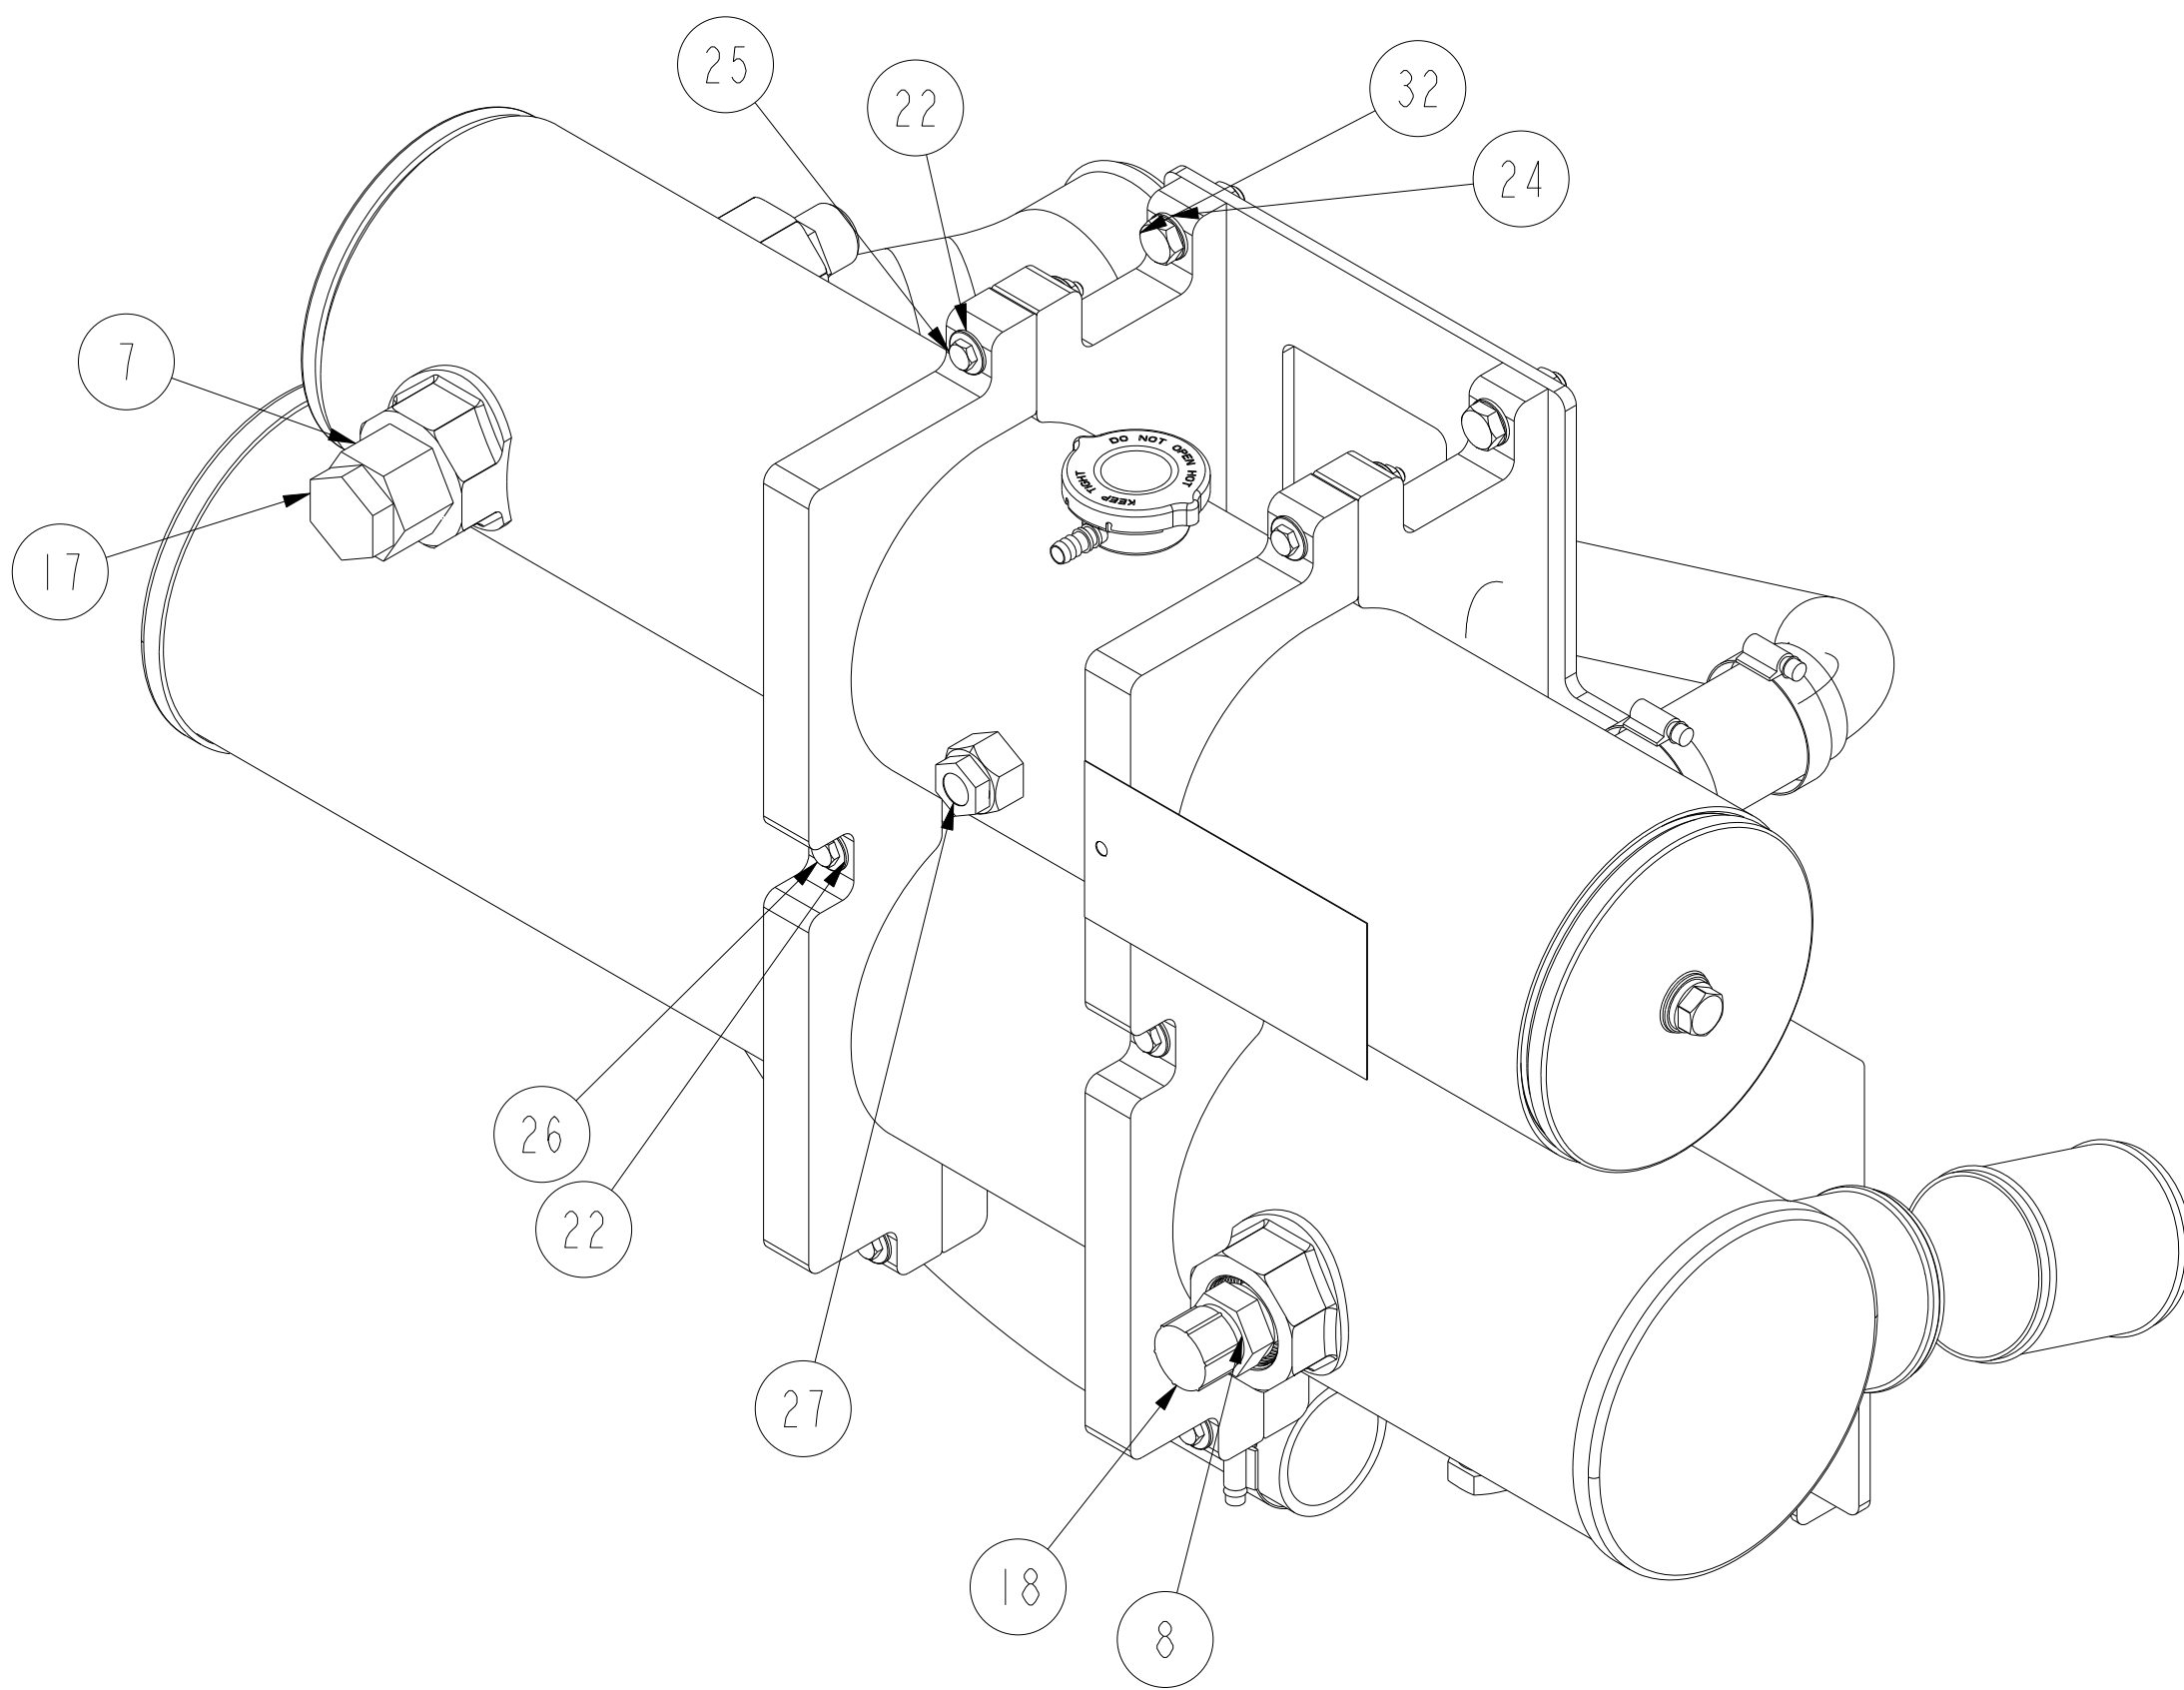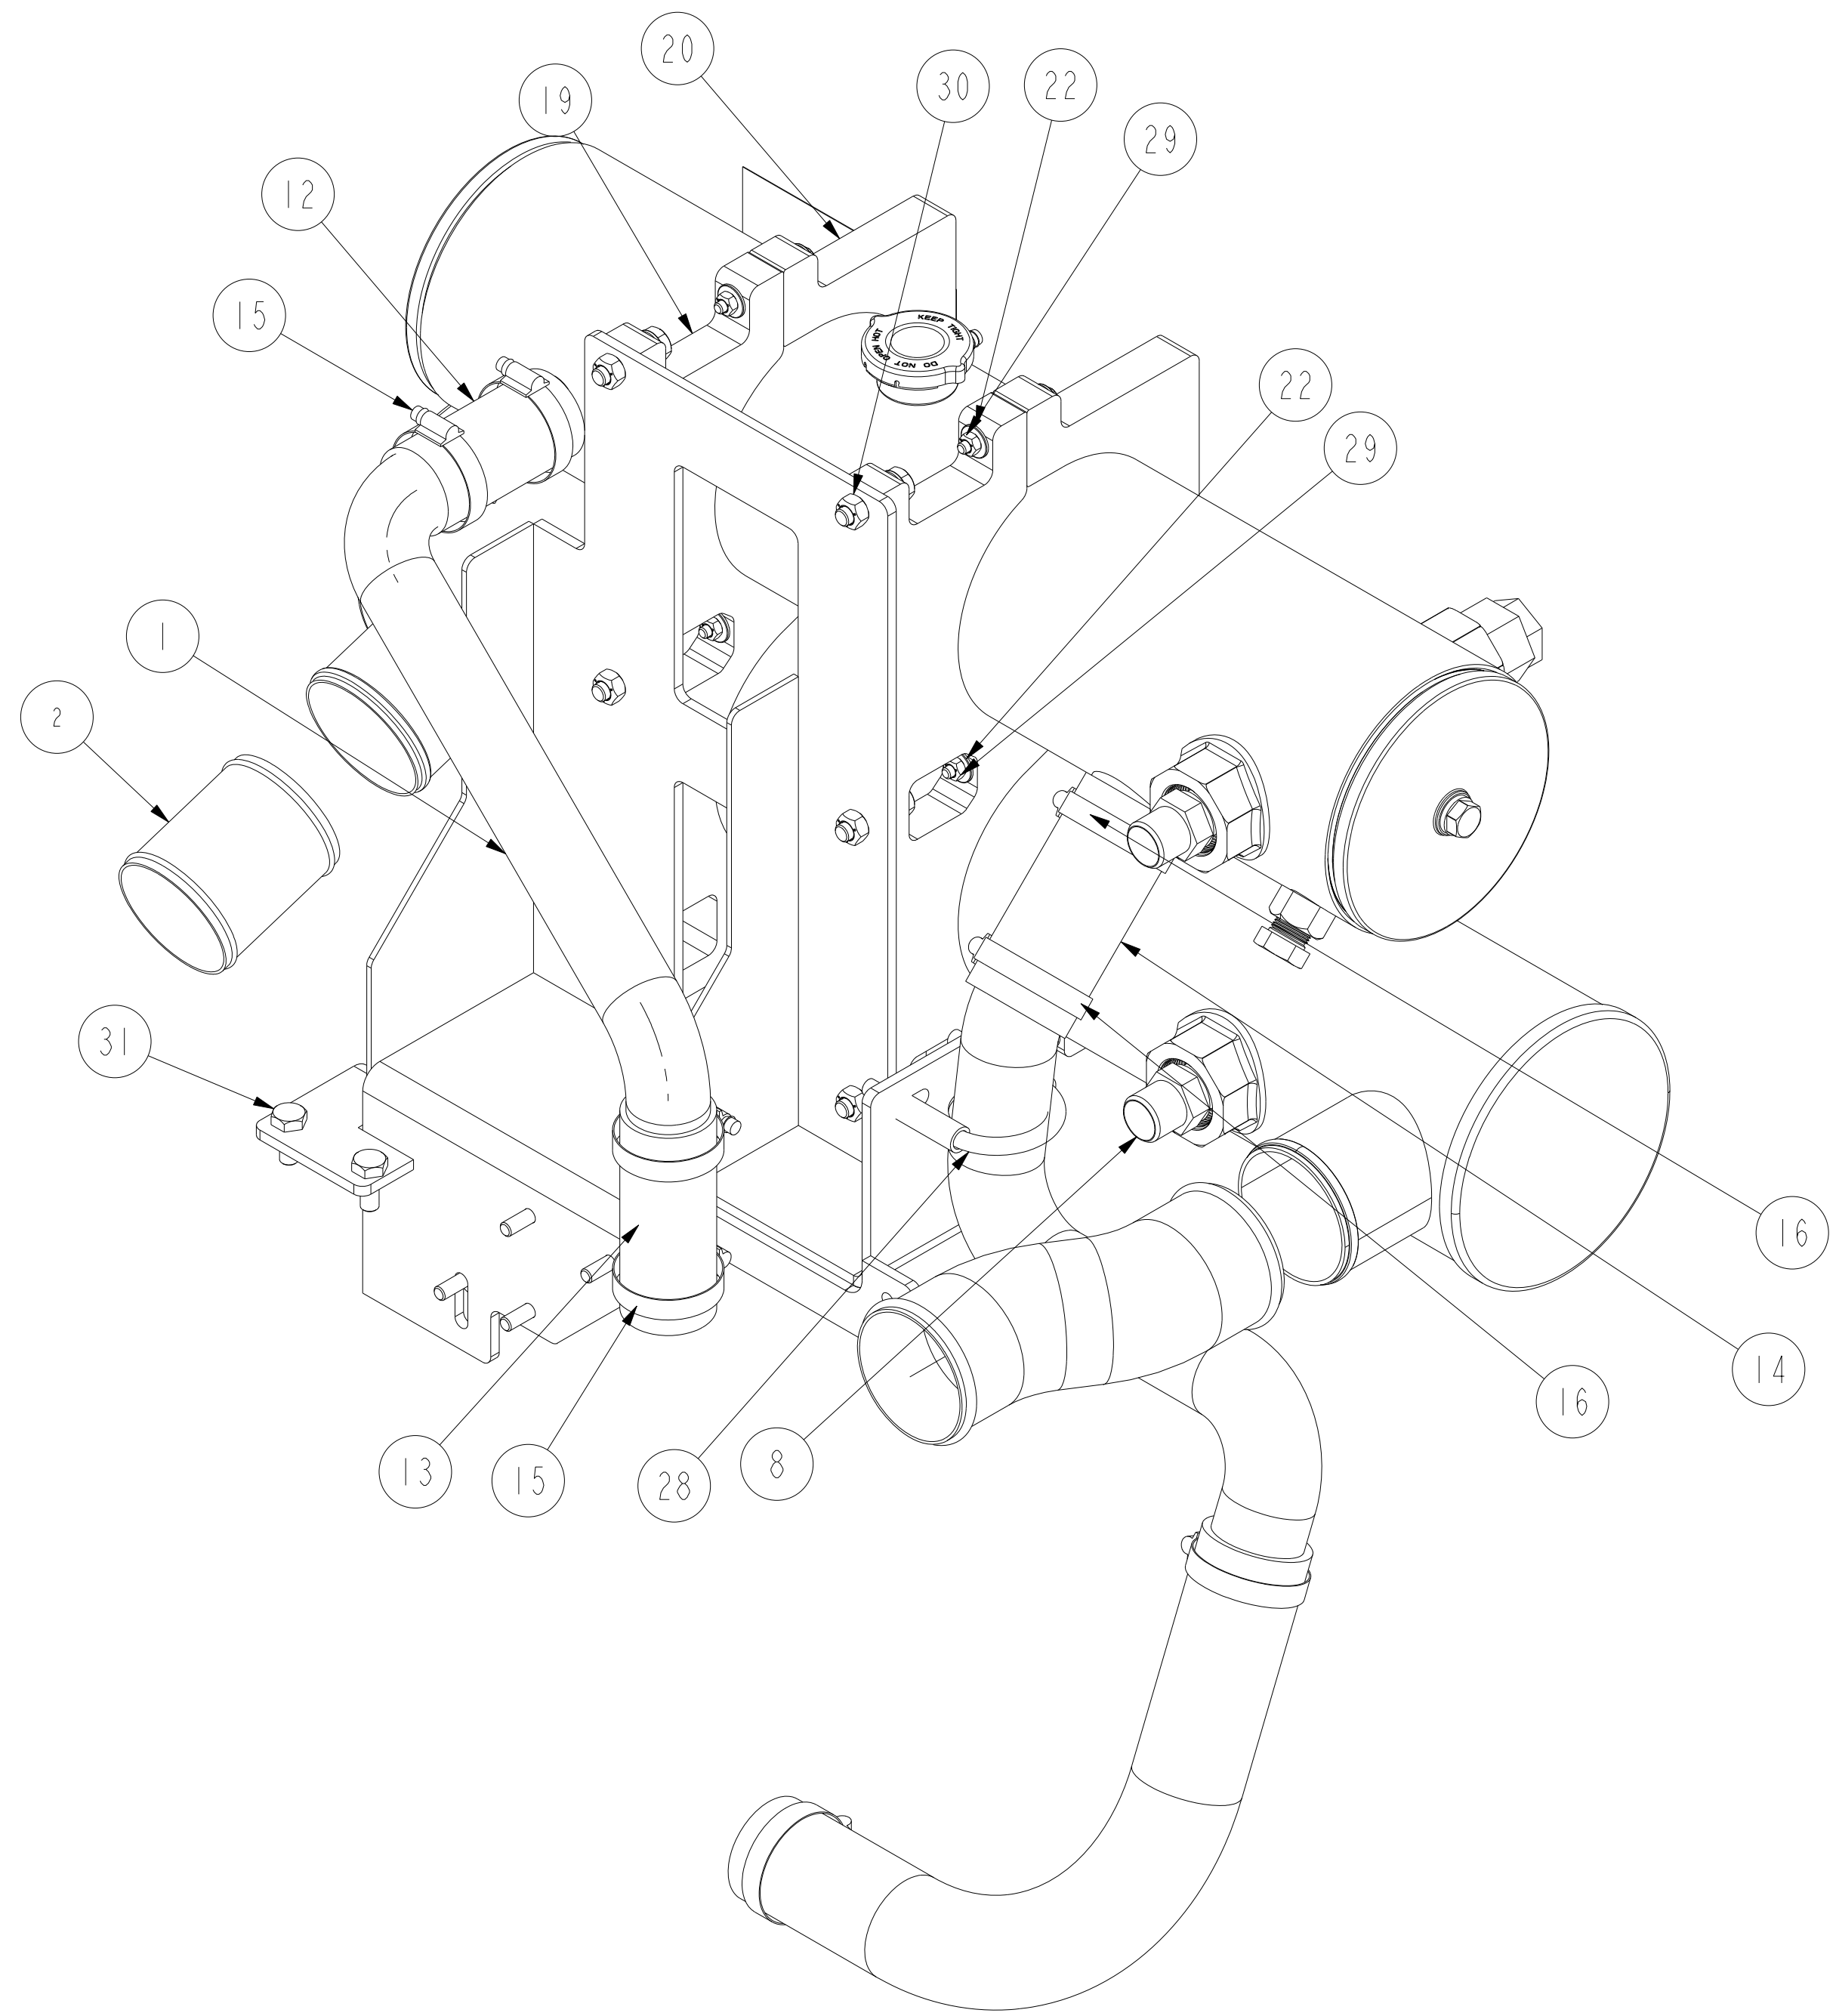

BILL OF MATERIAL			DESCRIPTION	PART NUMBER
ITEM	QTY			
1	1	PIPE, WATER OUTLET, FIRE PUMP	13305	
2	1	TUBE, CAC INTAKE CONNECTION, CFP5E / 7E	13348	
3	1	BRACKET, HEAT EXCHANGER MOUNTING, CFP5E/7E	16725	
4	1	PIPE, WATER INLET, FIRE PUMP	A042A659	
5	1	TUBE, CAC OUTPUT, CFP5E	A042A665	
6	3	COOLANT, FC EG PM, 1 GALLON	CC2743	
7	1	FTG, STR, -16 ORB X -16 FNMPT	12171-16-16	
8	3	FTG, STR, -12 JIC X -12 ORB	12235-12-12	
9	1	HEAT EXCHANGER, 6" DIAMETER, 2-PASS W/ INTEGRAL TOP TANK	13243	
10	1	COOLER, CHARGE AIR, 6" DIAMETER, 1-PASS W/ WATER DRAIN	13244	
11	1	HOSE, 90° SWEEP, 2" I.D.	21379	
12	1	HOSE, COOLANT, DAYCO 77175GL, 1-3/4" I.D. x 4.00"	14129.001	
13	1	HOSE, COOLANT, DAYCO 77175GL, 1-3/4" I.D. x 5.00"	14129.002	
14	1	HOSE, COOLANT, DAYCO 77200GL, 2.00" I.D. x 5.00"	14131.002	
15	4	CLAMP, WORM, 1.31 - 2.25	14990-28	
16	4	CLAMP, WORM, 1.56 - 2.50	14990-32	
17	1	PLUG, NPT, PLASTIC, -16 (1") NPT	15255-16	
18	1	CAPLUG, PLASTIC, JIC FEMALE, 1-1/16-12	16660-12	
19	2	PLATE, HEAT EXCHANGER MOUNTING, CFP5E/7E	16726	
20	2	PLATE, HEAT EXCHANGER MOUNTING, CFP5E/7E	16727	
21	1	TAG, ENGINE WEIGHT	16825	
22	12	WASHER, FLAT, 0.25	20000-025	
23	1	WASHER, FLAT, 0.31	20000-031	
24	6	WASHER, FLAT, M10	20020-M10	
25	4	SCREW, HH, 0.25-20x2.50	20225-250	
26	2	SCREW, HH, 0.25-20x6.00	20225-600	
27	1	SIGHT GLASS, 1/2" NPT	3277K34	
28	1	CLAMP, U-BOLT, 2" OD PIPE	89541K	
29	6	NUT, HEX, PT, .25-20	20130-025	
30	6	NUT, HEX, PT, M10-1.50	20140-M10	
31	2	SCREW, HH, M10-1.50x25	20310-025	
32	6	SCREW, HH, M10-1.50x40	20310-040	
33	4	SCREW, HH, M8-1.25x25	20308-025	
30	4	HOSE, 5/16" OVERFLOW	27003	

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. It is not to be distributed, copied, or otherwise used without the express written permission of Cummins Fire Power LLC. If you are not an authorized user, you should not use this document. If you are an authorized user, you should not use this document for any other purpose. If you are not an authorized user, you should not use this document. If you are an authorized user, you should not use this document for any other purpose. If you are not an authorized user, you should not use this document. If you are an authorized user, you should not use this document for any other purpose.

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± .1°
 THIRD ANGLE PROJECTION

MACHINED SURFACES: .005"
 IMPERIAL UNITS: IN/LB/S
 METRIC UNITS: MM/KG

125

DWG UNITS: IN/LB/S
 SCALE: 0.333
 EST WEIGHT: 60.836

ASSEMBLY, HEAT EXCHANGERS
 CFP5E

PRO-ENGINEER

DRAWN BY: PBS
 DATE: 06FEB2014


INIT ECO: 2014-076

SHEET 1 OF 2
 DRAWING NO: A042A395

Cummins Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUREAU ROAD
 WHITE SEAR LAKE, WI
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
 AND UPGRADE CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

REV	DATE	DESCRIPTION OF REVISION	REV BY	DATE
A	2014-324	21379 WAS 13529	PBS	13MAY2014
ECO				

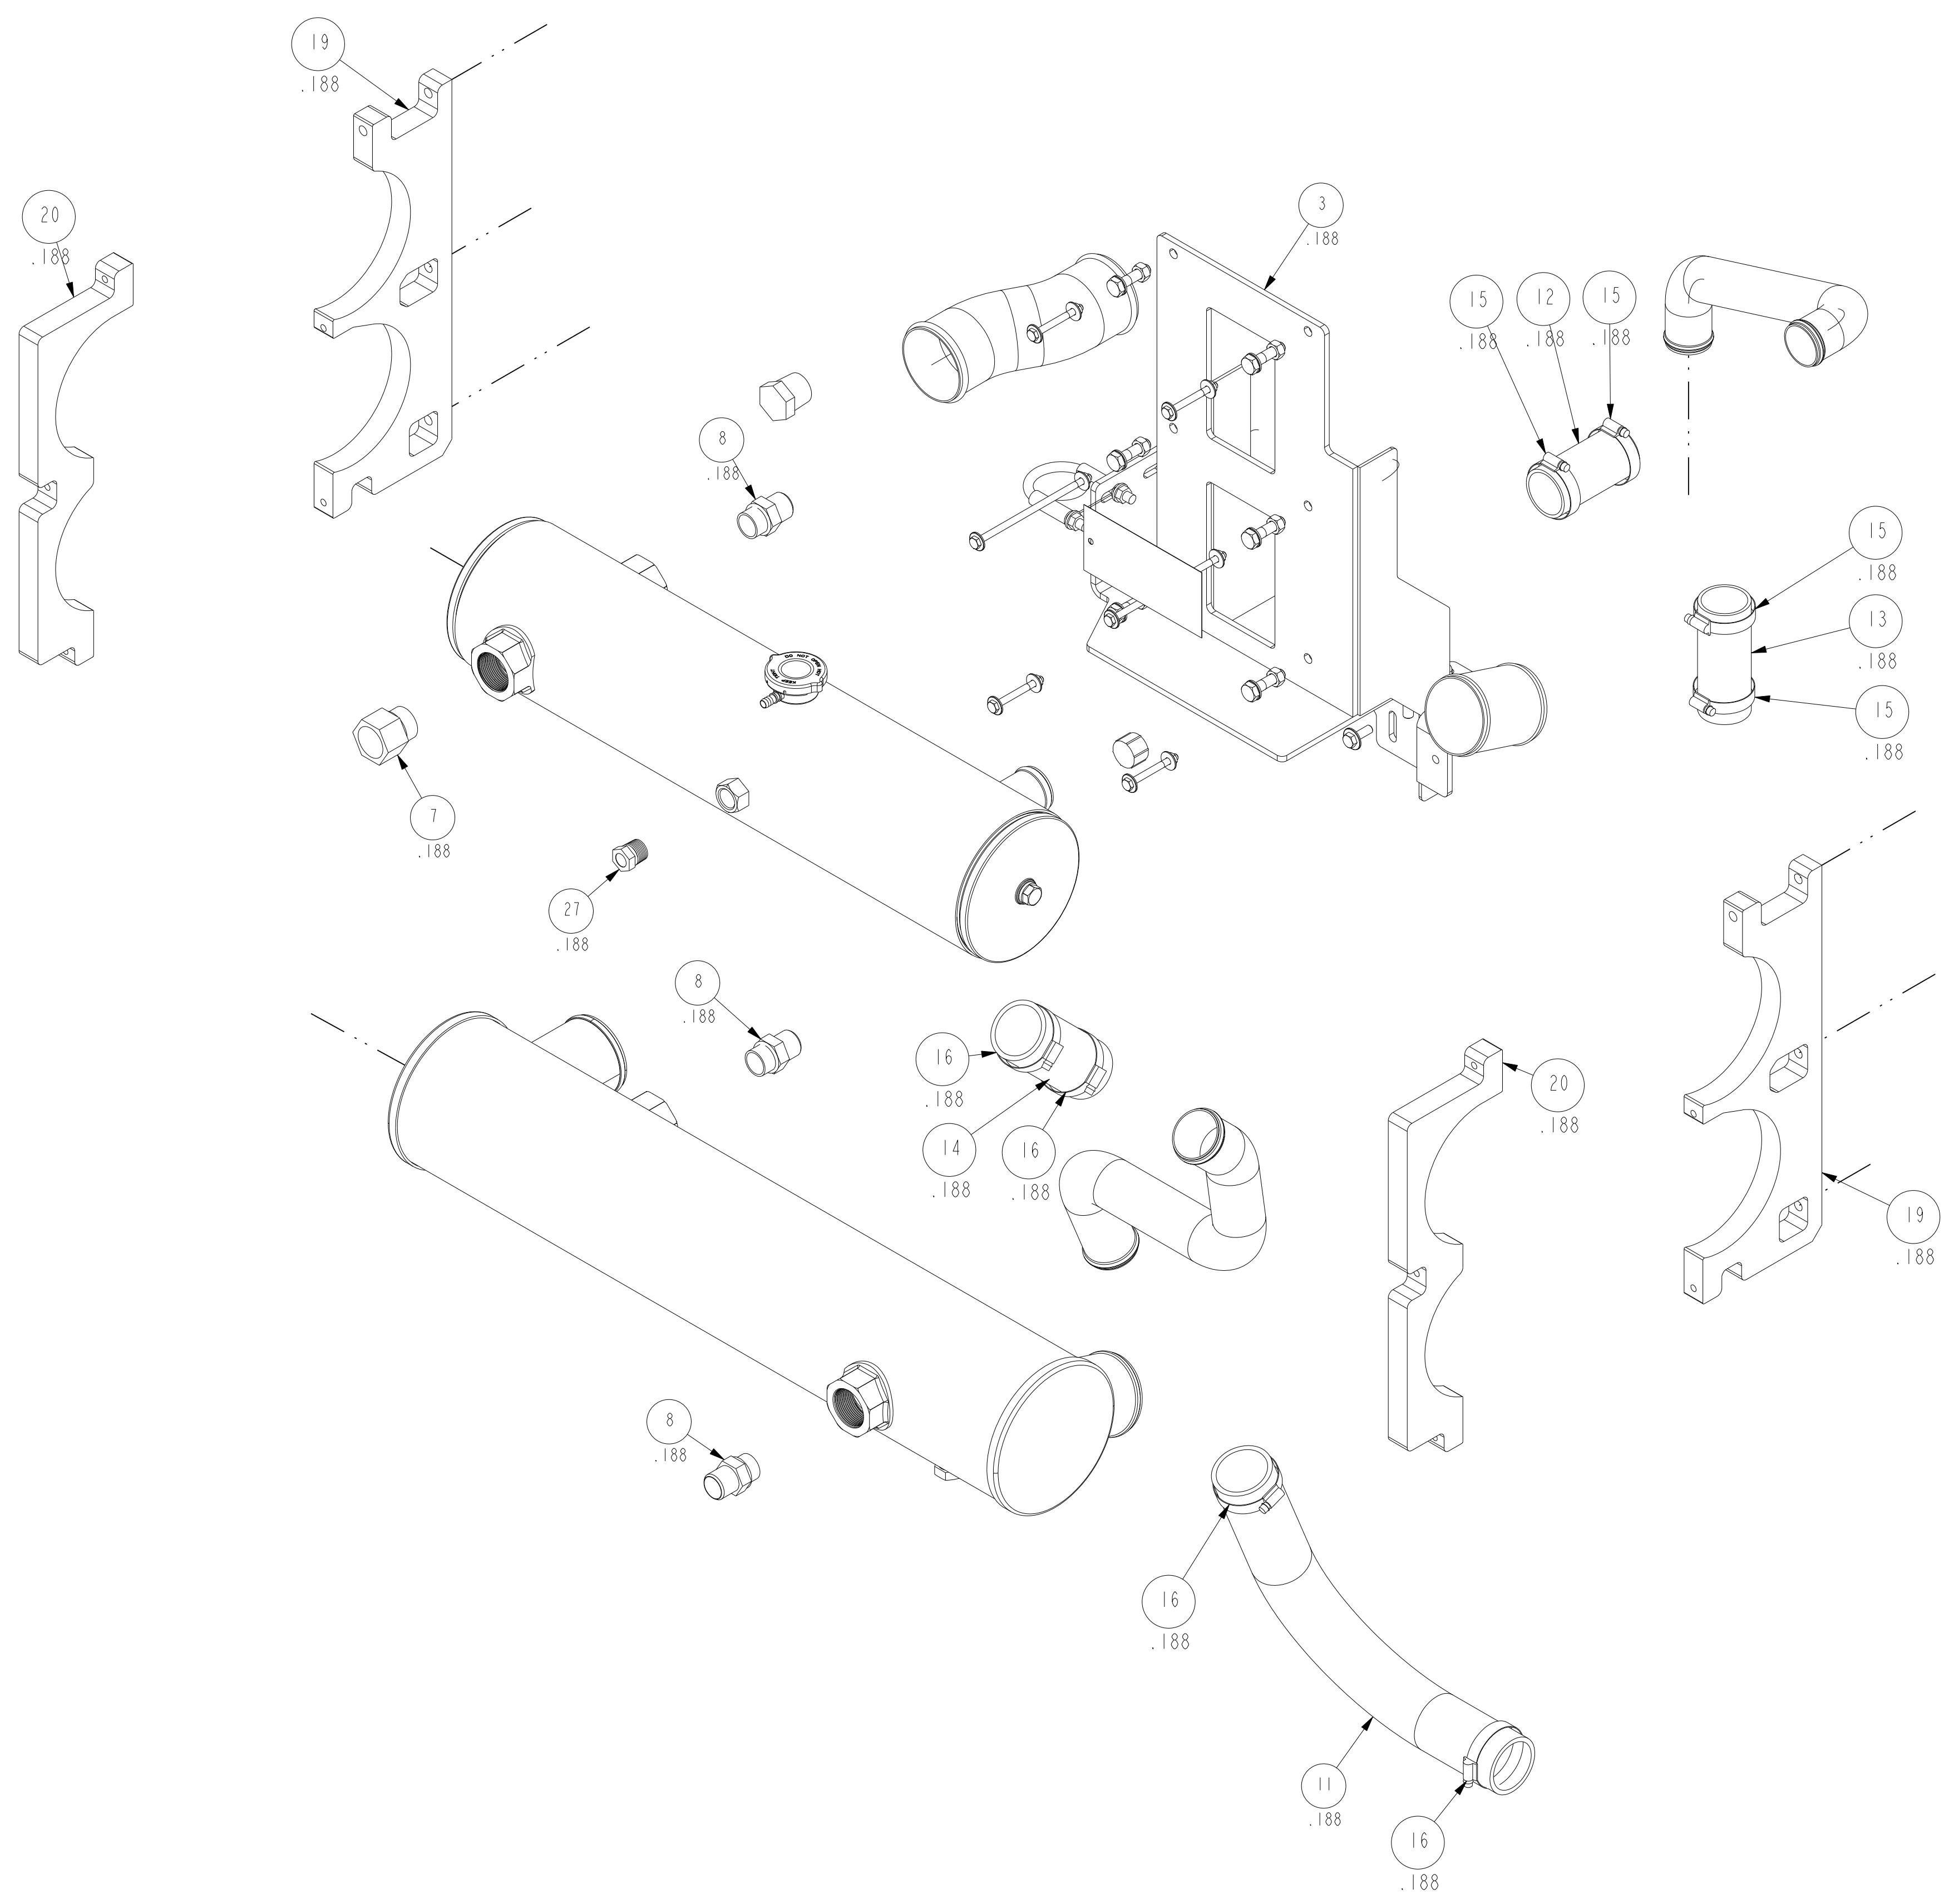

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	PIPE, WATER OUTLET, FIRE PUMP	13305
2	1	TUBE, CAC INTAKE CONNECTION, CFP5E / 7E	13348
3	1	BRACKET, HEAT EXCHANGER MOUNTING, CFP5E/7E	16725
4	1	PIPE, WATER INLET, FIRE PUMP	A042A659
5	1	TUBE, CAC OUTPUT, CFP5E	A042A665
6	A/R	COOLANT, FC EG PM, 1 GALLON	CC2743
7	1	FTG. STR, -16 ORB X -16 FMNPT	12171-16-16
8	3	FTG. STR, -12 JIC X -12 ORB	12235-12-12
9	1	HEAT EXCHANGER, 6" DIAMETER, 2-PASS W/ INTEGRAL TOP TANK	13243
10	1	COOLER, CHARGE AIR, 6" DIAMETER, 1-PASS W/ WATER DRAIN	13244
11	1	HOSE, 90° SWEEP, 2" I.D.	21379
12	1	HOSE, COOLANT, DAYCO 77175GL, 1-3/4" I.D. x 4.00"	14129.001
13	1	HOSE, COOLANT, DAYCO 77175GL, 1-3/4" I.D. x 5.00"	14129.002
14	1	HOSE, COOLANT, DAYCO 77200GL, 2.00" I.D. x 5.00"	14131.002
15	4	CLAMP, WORM, 1.31 - 2.25	14990-28
16	4	CLAMP, WORM, 1.56 - 2.50	14990-32
17	1	PLUG, NPT, PLASTIC, -16 (1") NPT	15255-16
18	1	CAPLUG, PLASTIC, JIC FEMALE, 1-1/16-12	16660-12
19	2	PLATE, HEAT EXCHANGER MOUNTING, CFP5E/7E	16726
20	2	PLATE, HEAT EXCHANGER MOUNTING, CFP5E/7E	16727
21	1	TAG, ENGINE WEIGHT	16825
22	12	WASHER, FLAT, 0.25	20000-025
23	1	WASHER, FLAT, 0.31	20000-031
24	6	WASHER, FLAT, M10	20020-M10
25	4	SCREW, HH, 0.25-20x2.50	20225-250
26	2	SCREW, HH, 0.25-20x6.00	20225-600
27	1	SIGHT GLASS, 1/2" NPT	3277K34
28	1	CLAMP, U-BOLT, 2" OD PIPE	89541K
29	6	NUT, HEX, PT, .25-20	20130-025
30	6	NUT, HEX, PT, M10-1.50	20140-M10
31	2	SCREW, HH, M10-1.50x25	20310-025
32	6	SCREW, HH, M10-1.50x40	20310-040
33	4	SCREW, HH, M8-1.25x25	20308-025

This document contains confidential and trade secret information, or the property of Cummins Fire Power LLC, and is to be used only for the purposes stated herein. It is to be kept confidential and not disclosed to any other person without the prior written consent of Cummins Fire Power LLC. If you are not an authorized recipient, you should not disseminate, distribute, or otherwise use this document. If you are an authorized recipient, you should not disseminate, distribute, or otherwise use this document without the prior written consent of Cummins Fire Power LLC. If you are not an authorized recipient, you should not disseminate, distribute, or otherwise use this document without the prior written consent of Cummins Fire Power LLC.

Cummins Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUENALE ROAD
 WHITE SEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND UPGIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

ASSEMBLY, HEAT EXCHANGERS
 CFP5E

ANGULAR DIMENSIONS ± 1°
 THIRD ANGLE PROJECTION

IMPERIAL UNITS: INCHES
 METRIC UNITS: MILLIMETERS


DWG UNITS: IN/LB/S
 SCALE: 0.200
 EST WEIGHT: 60.836

DRAWN BY: PBS
 DATE: 06FEB2014

INIT: ECO: 2014-076

SHEET 2 OF 2
 DRAWING NO: A042A395

REV	ECO	2014-324	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	13MAY2014
			DESCRIPTION OF REVISION	REV BY	DATE

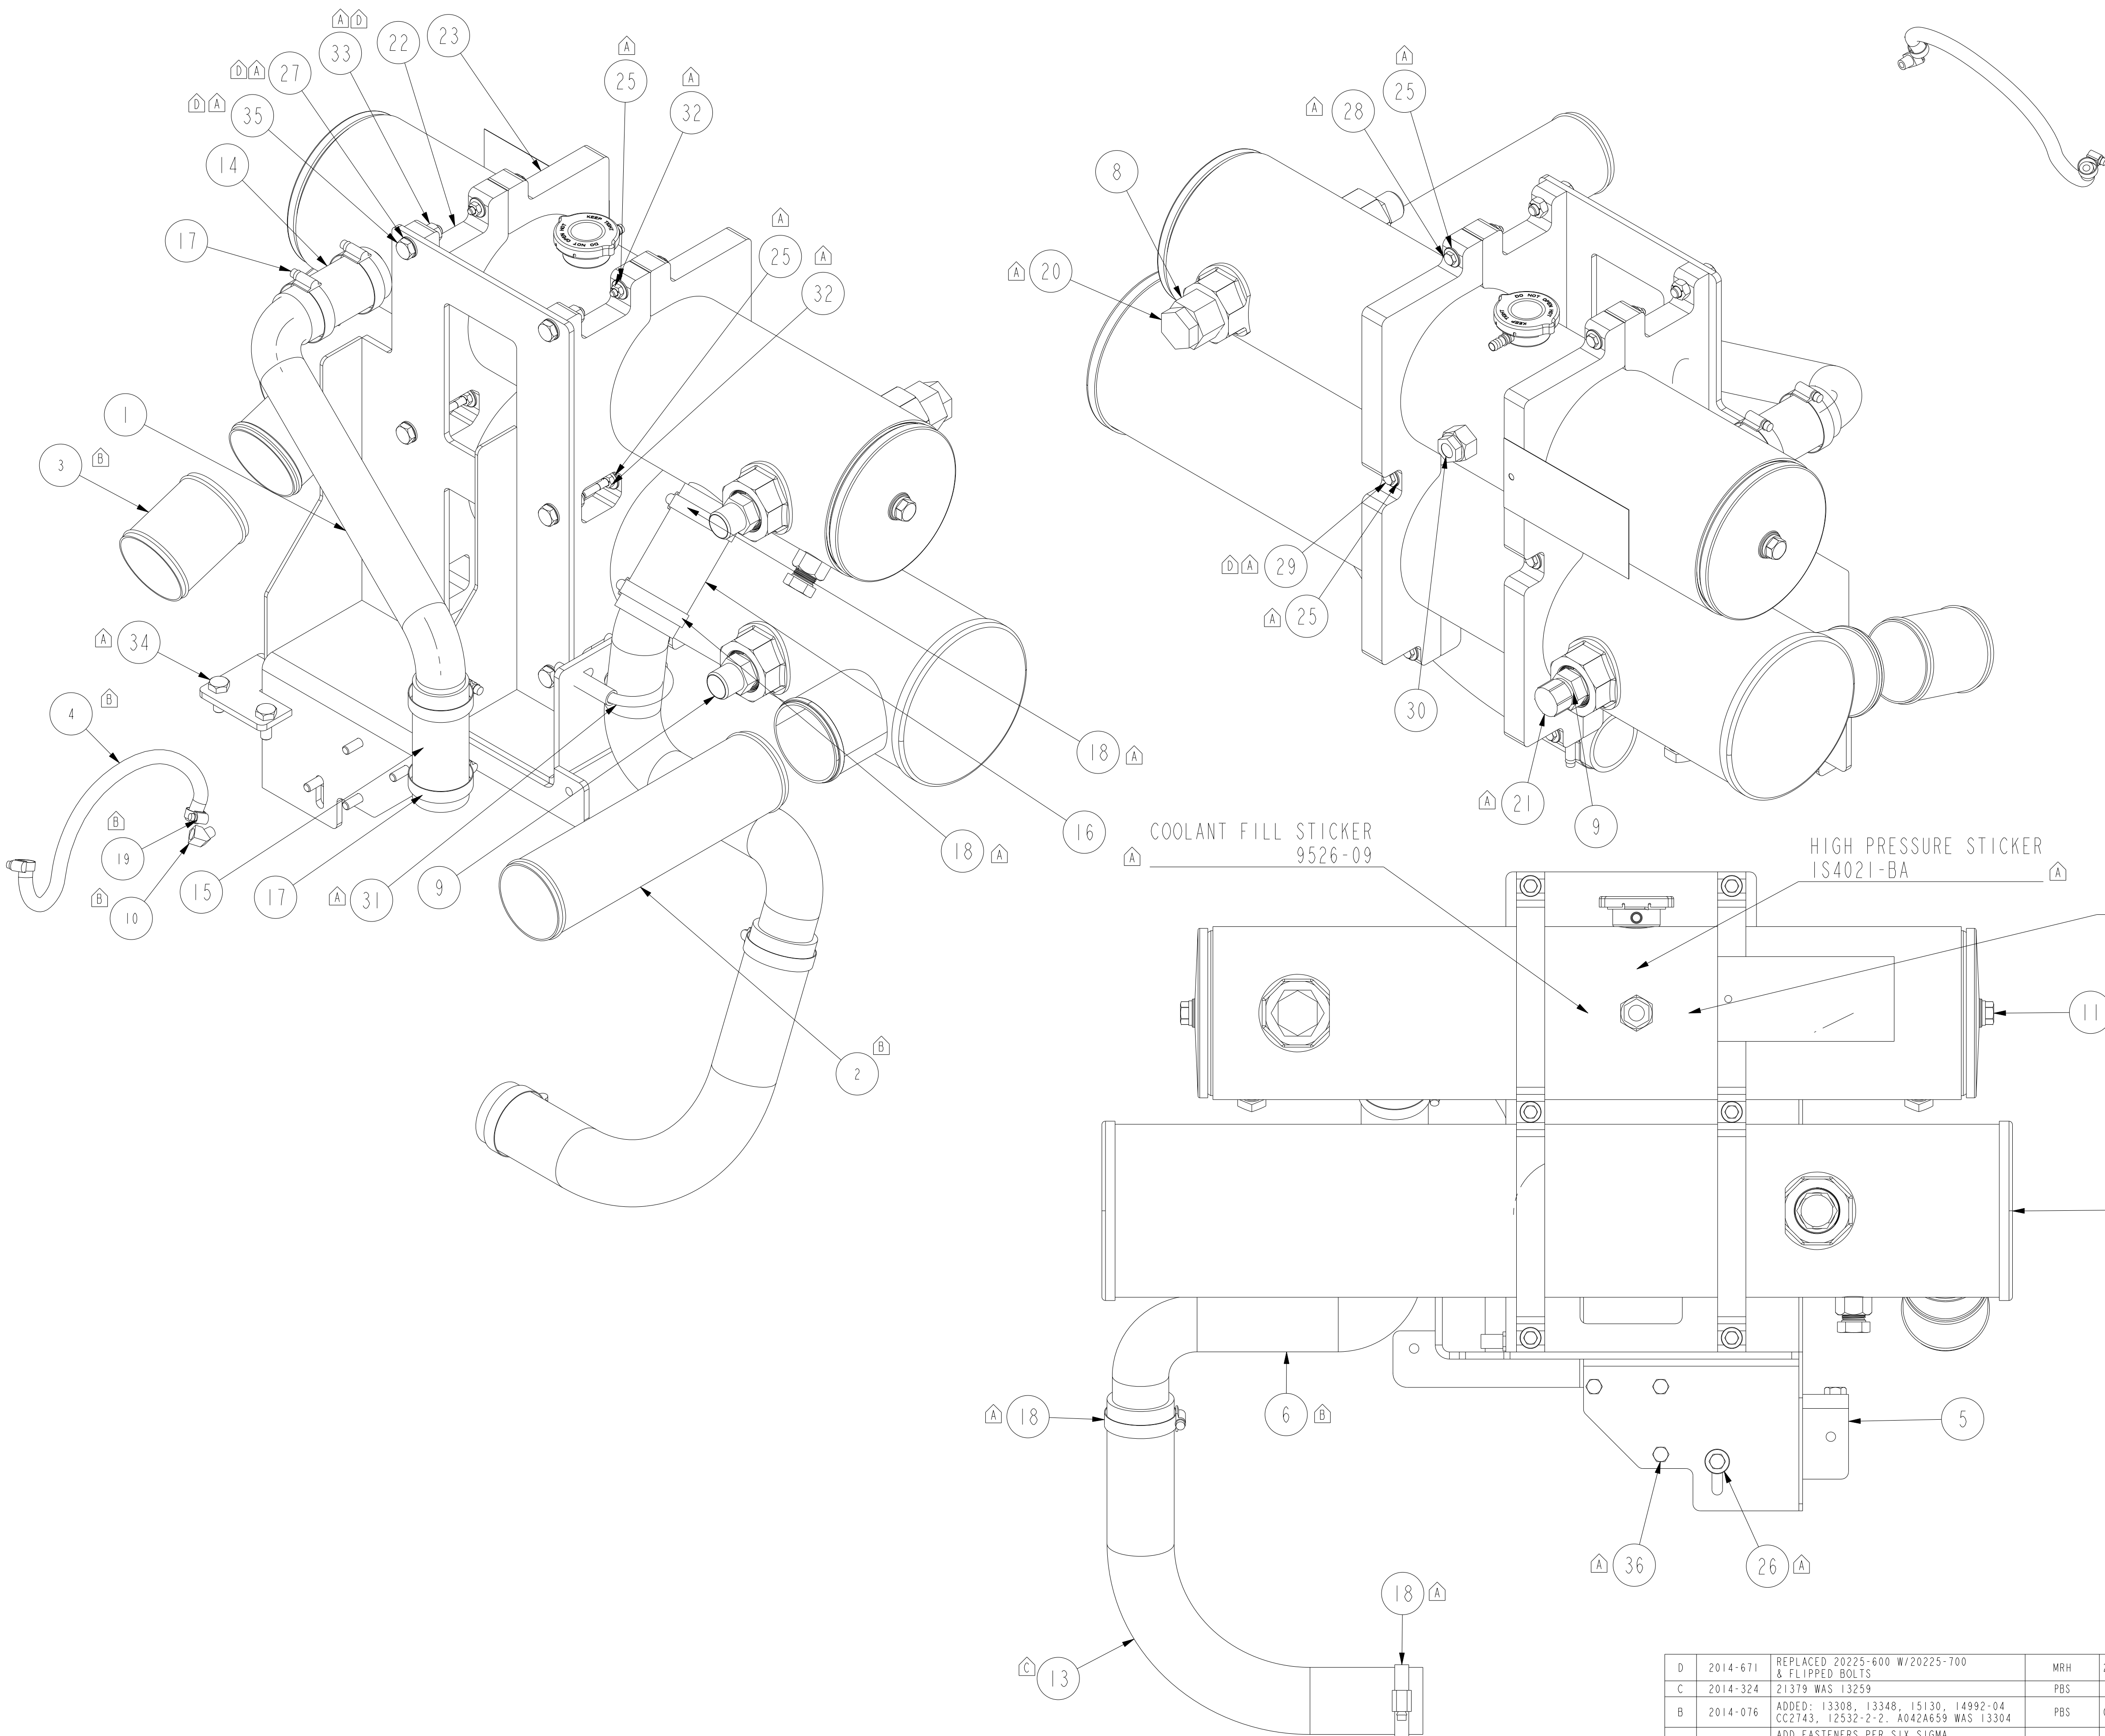

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	PIPE, WATER OUTLET, FIRE PUMP	13305
2	1	TUBE, CAC OUTPUT , CFP7E	13308
3	1	TUBE, CAC INTAKE CONNECTION, CFP5E / 7E	13348
4	1	HOSE, VENT LINE, PARKER 801, 1/4" ID X 13" LG	15130
5	1	BRACKET, HEAT EXCHANGER MOUNTING, CFP5E/7E	16725
6	1	PIPE, WATER INLET, FIRE PUMP	A042A659
7	3	COOLANT, FC EG PM, 1 GALLON	CC2743
8	1	FTG, STR, -16 ORB X -16 FMNPT	12171-16-16
9	3	FTG, STR, -12 JIC X -12 ORB	12235-12-12
10	1	ELB, 45 DEG, -2 NPT X -2 FMNPT	12532-2-2
11	1	HEAT EXCHANGER, 6" DIAMETER, 2-PASS W/ INTEGRAL TOP TANK	13243
12	1	COOLER, CHARGE AIR, 6" DIAMETER, 1-PASS W/ WATER DRAIN	13244
13	1	HOSE, 90° SWEEP, 2" I.D.	21379
14	1	HOSE, COOLANT, DAYCO 77175GL, 1-3/4" I.D. x 4.00"	14129.001
15	1	HOSE, COOLANT, DAYCO 77175GL, 1-3/4" I.D. x 5.00"	14129.002
16	1	HOSE, COOLANT, DAYCO 77200GL, 2.00" I.D. x 5.00"	14131.002
17	4	CLAMP, WORM, 1.31 - 2.25	14990-28
18	4	CLAMP, WORM, 1.56 - 2.50	14990-32
19	2	CLAMP, WORM, .25 - .63	14992-04
20	1	PLUG, NPT, PLASTIC, -16 (1") NPT	15255-16
21	1	CAPLUG, PLASTIC, JIC FEMALE, 1-1/16-12	16660-12
22	2	PLATE, HEAT EXCHANGER MOUNTING, CFP5E/7E	16726
23	2	PLATE, HEAT EXCHANGER MOUNTING, CFP5E/7E	16727
24	1	TAG, ENGINE WEIGHT	16825
25	12	WASHER, FLAT, 0.25	20000-025
26	1	WASHER, FLAT, 0.31	20000-031
27	6	WASHER, FLAT, M10	20020-M10
28	4	SCREW, HH, 0.25-20x2.50	20225-250
29	2	SCREW, HH, 0.25-20x7.00	20225-700
30	1	SIGHT GLASS, 1/2" NPT	3277K34
31	1	CLAMP, U-BOLT, 2" OD PIPE	89541K
32	6	NUT, HEX, PT, .25-20	20130-025
33	6	NUT, HEX, PT, M10-1.50	20140-M10
34	2	SCREW, HH, M10-1.50x25	20310-025
35	6	SCREW, HH, M10-1.50x40	20310-040
36	4	SCREW, HH, M8-1.25x25	20308-025
30	4	HOSE, 5/16" OVERFLOW	27003


COOLANT FILL STICKER
9526-09

HIGH PRESSURE STICKER
IS4021-BA

HOT STICKER
IS1024-BB

REF 13246

D	2014-671	REPLACED 20225-600 W/20225-700 & FLIPPED BOLTS	MRH	24SEP2014			UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE: ANGULAR DIMENSIONS ± .1° SURFACES: MACHINED SURFACES: .0005" UNMACHINED SURFACES: .0015" HOLE DIMENSIONS: .0005" HOLE DIMENSIONS: .0015" HOLE DIMENSIONS: .0025" HOLE DIMENSIONS: .0050" HOLE DIMENSIONS: .0100" HOLE DIMENSIONS: .0150" HOLE DIMENSIONS: .0200" HOLE DIMENSIONS: .0300" HOLE DIMENSIONS: .0400" HOLE DIMENSIONS: .0500" HOLE DIMENSIONS: .0600" HOLE DIMENSIONS: .0700" HOLE DIMENSIONS: .0800" HOLE DIMENSIONS: .0900" HOLE DIMENSIONS: .1000" HOLE DIMENSIONS: .1200" HOLE DIMENSIONS: .1500" HOLE DIMENSIONS: .2000" HOLE DIMENSIONS: .2500" HOLE DIMENSIONS: .3000" HOLE DIMENSIONS: .4000" HOLE DIMENSIONS: .5000" HOLE DIMENSIONS: .6000" HOLE DIMENSIONS: .7000" HOLE DIMENSIONS: .8000" HOLE DIMENSIONS: .9000" HOLE DIMENSIONS: 1.0000"	ASSEMBLY, HEAT EXCHANGERS CFP7E	DWG UNITS: IN/LB/S SCALE: 0.333 EST WEIGHT: 60.836	DRAWN BY: DAN PRO-ENGINEER SHEET 1 OF 2 DATE: 02-MAR-10 INIT ECO: 2010-087	CUSTOM DESIGN AND UPGIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
C	2014-324	21379 WAS 13259	PBS	13MAY2014							
B	2014-076	ADDED: 13308, 13348, 15130, 14992-04, CC2743, 12532-2-2, A042A659 WAS 13304	PBS	05FEB2014							
A	2011-054	ADD FASTENERS PER SIX SIGMA UPDATE COMPONENTS	S DUBICK	28-APR-11							
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE							

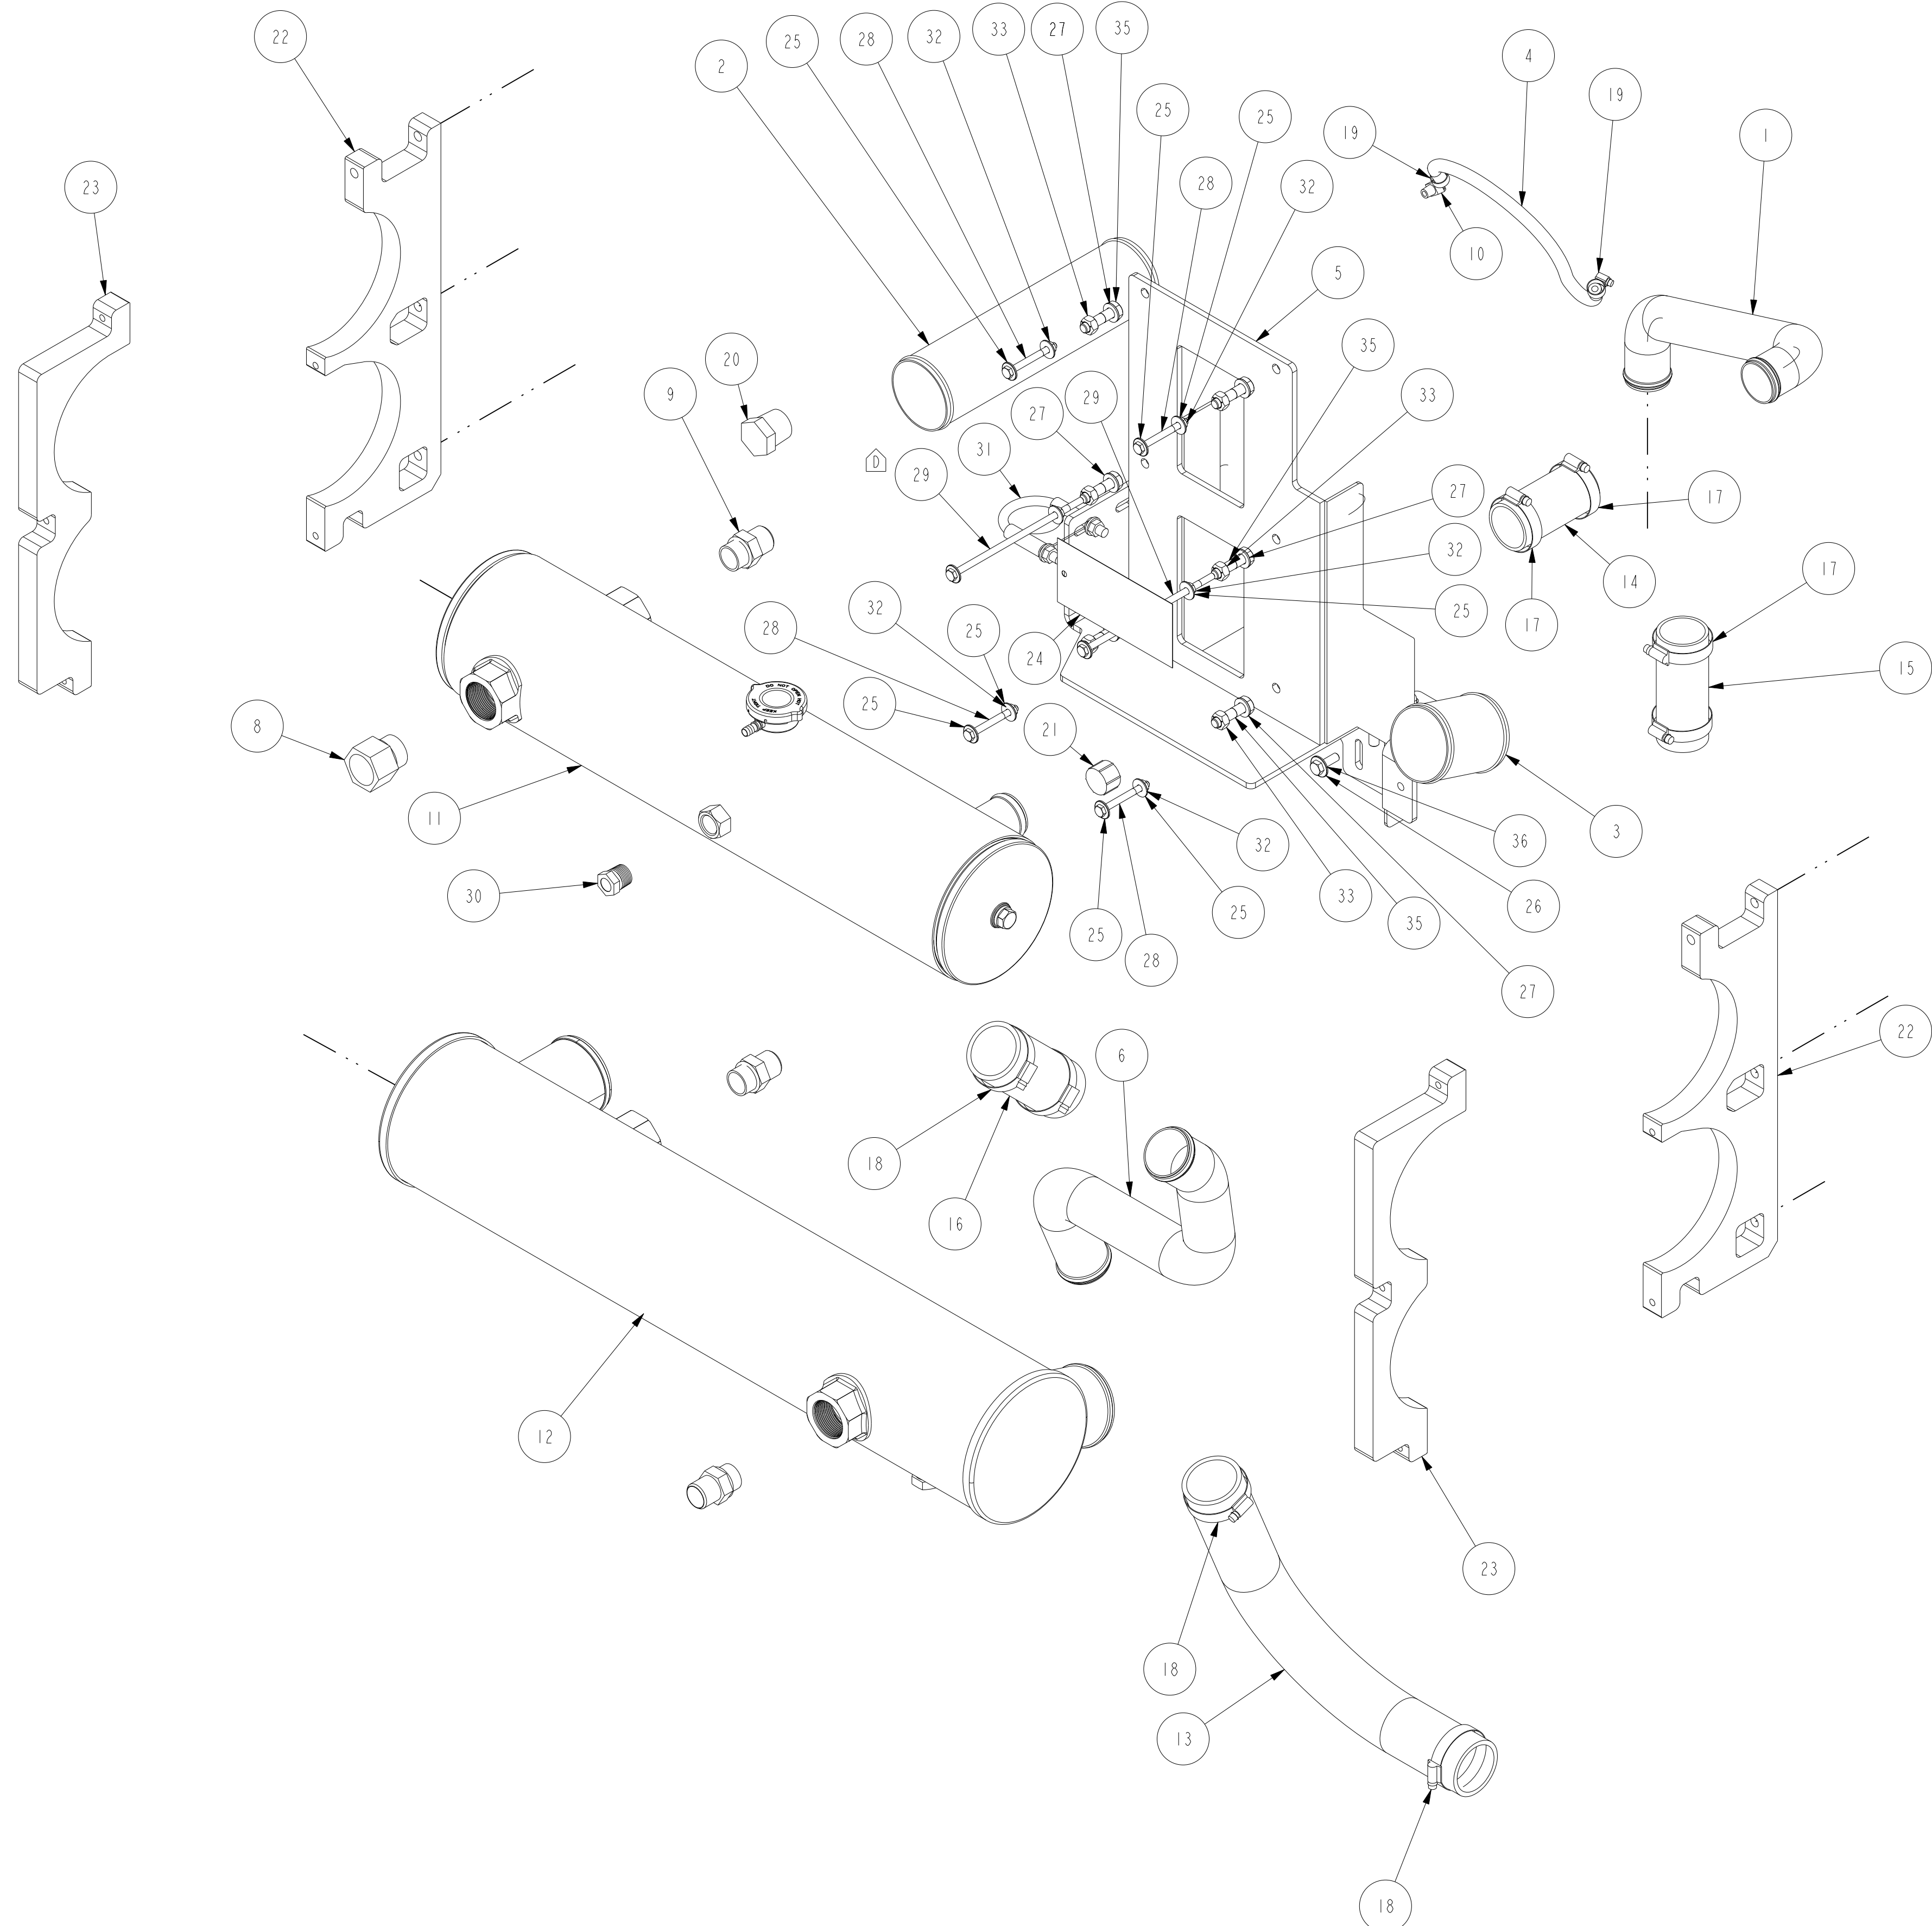

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	PIPE, WATER OUTLET, FIRE PUMP	13305
2	1	TUBE, CAC OUTPUT, CFP7E	13308
3	1	TUBE, CAC INTAKE CONNECTION, CFP5E / 7E	13348
4	1	HOSE, VENT LINE, PARKER 801, 1/4" ID X 13" LG	15130
5	1	BRACKET, HEAT EXCHANGER MOUNTING, CFP5E/7E	16725
6	1	PIPE, WATER INLET, FIRE PUMP	A042A659
7	A/R	COOLANT, FC EG PM, 1 GALLON	CC2743
8	1	FTG, STR, -16 ORB X -16 FMNPT	12171-16-16
9	3	FTG, STR, -12 JIC X -12 ORB	12235-12-12
10	1	ELB, 45 DEG, -2 NPT X -2 FMNPT	12532-2-2
11	1	HEAT EXCHANGER, 6" DIAMETER, 2-PASS W/ INTEGRAL TOP TANK	13243
12	1	COOLER, CHARGE AIR, 6" DIAMETER, 1-PASS W/ WATER DRAIN	13244
13	1	HOSE, 90° SWEEP, 2" I.D.	21379
14	1	HOSE, COOLANT, DAYCO 77175GL, 1-3/4" I.D. x 4.00"	14129_001
15	1	HOSE, COOLANT, DAYCO 77175GL, 1-3/4" I.D. x 5.00"	14129_002
16	1	HOSE, COOLANT, DAYCO 77200GL, 2.00" I.D. x 5.00"	14131_002
17	4	CLAMP, WORM, 1.31 - 2.25	14990-28
18	4	CLAMP, WORM, 1.56 - 2.50	14990-32
19	2	CLAMP, WORM, .25 - .63	14992-04
20	1	PLUG, NPT, PLASTIC, -16 (1") NPT	15255-16
21	1	CAPLUG, PLASTIC, JIC FEMALE, 1-1/16-12	16660-12
22	2	PLATE, HEAT EXCHANGER MOUNTING, CFP5E/7E	16727
23	2	PLATE, HEAT EXCHANGER MOUNTING, CFP5E/7E	16727
24	1	TAG, ENGINE WEIGHT	16825
25	12	WASHER, FLAT, 0.25	20000-025
26	1	WASHER, FLAT, 0.31	20000-031
27	6	WASHER, FLAT, M10	20020-M10
28	4	SCREW, HH, 0.25-20x2.50	20225-250
29	2	SCREW, HH, 0.25-20x7.00	20225-700
30	1	SIGHT GLASS, 1/2" NPT	3277K34
31	1	CLAMP, U-BOLT, 2" OD PIPE	89541K
32	6	NUT, HEX, PT, .25-20	20130-025
33	6	NUT, HEX, PT, M10-1.50	20140-M10
34	2	SCREW, HH, M10-1.50x25	20310-025
35	6	SCREW, HH, M10-1.50x40	20310-040
36	4	SCREW, HH, M8-1.25x25	20308-025

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes stated herein. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Cummins Fire Power LLC. All rights reserved. Cummins Fire Power LLC, 1600 DuRoi Road, White Bear Lake, MN 55127. WWW.CUMMINSFIREPOWER.COM


Cummins Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 DUROI ROAD
 WHITE BEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND UPGIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± 1°
 THIRD ANGLE PROJECTION
 MACHINED SURFACES: IMPERIAL UNITS: 0.005 IN/LB/S; METRIC UNITS: 0.125 MM/25.4 IN

ASSEMBLY, HEAT EXCHANGERS CFP7E
 DWG UNITS: IN/LB/S
 SCALE: 0.200
 EST WEIGHT: 60.836
 DRAWN BY: DAN
 PRO-ENGINEER
 SHEET 2 OF 2
 DATE: 02-MAR-10
 INIT ECO: 2010-087
 DRAWING NO: 16746

D	2014-671	SEE SHEET 1 FOR LATEST REVISION DETAILS	MRH	24SEP2014
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

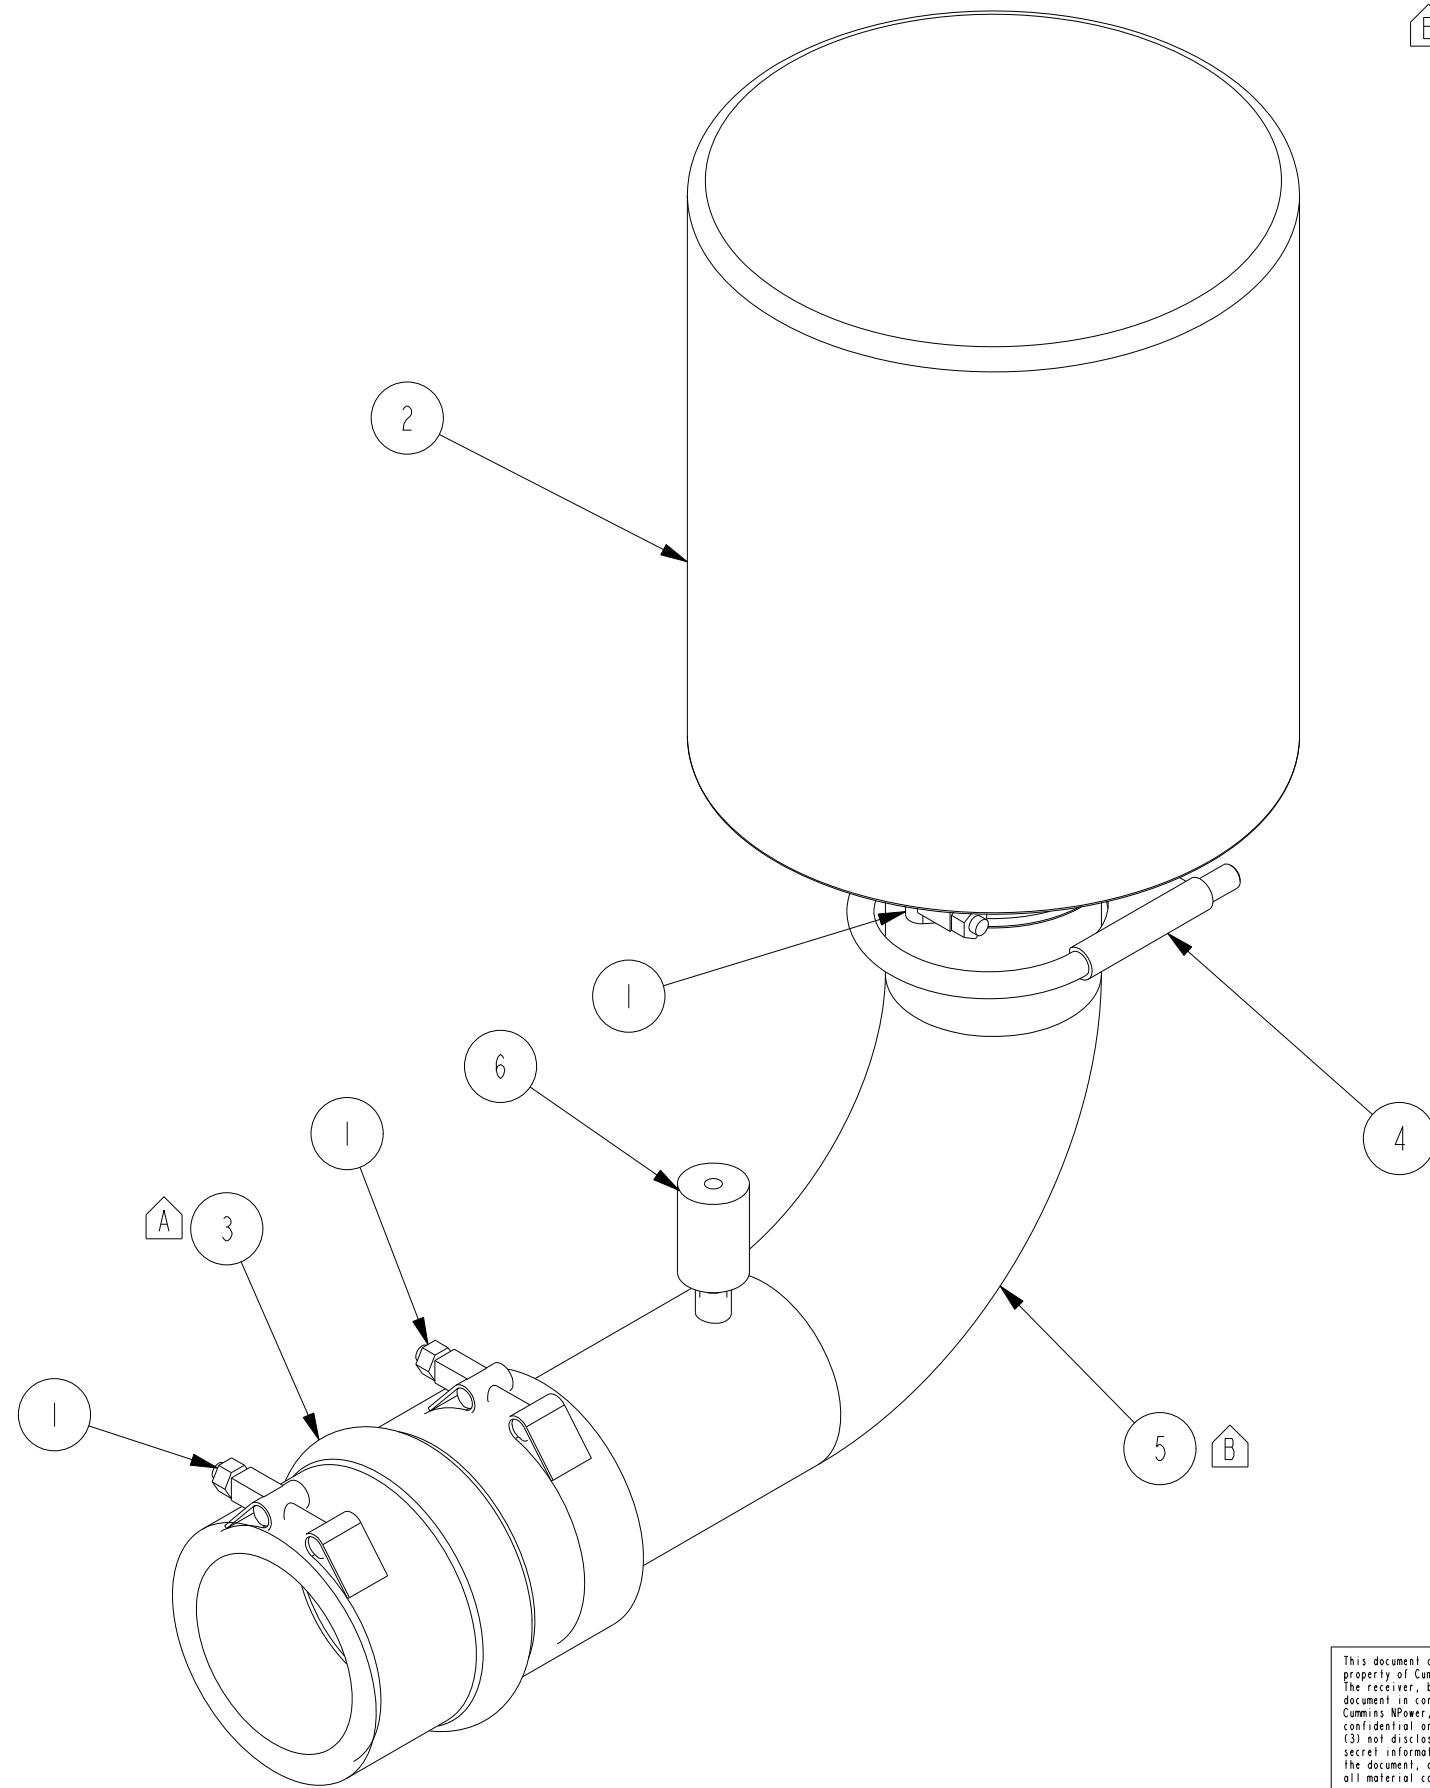

B A

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	3	CLAMP, T-BOLT, 3.28-3.59	13164-0350
2	1	AIR CLEANER, 3" CONNECTION, CF# AH1107 OR EQUAL	15607
3	1	COUPLING, RUBBER, 3", CUMMINS FILTRATION, HOSE	3316606S
4	1	CLAMP, U-BOLT, GUILLOTINE, 3.00"	89545K
5	1	TUBE, AIR INTAKE	A042A663
6	1	RESTRICTION INDICATOR, 1/8" NPT	RAX00-2352

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM


CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE			
ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	125	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2
		FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
		FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8
ASSEMBLY, AIR CLEANER CFP5E		DWG UNITS: IN/LB/S	DATE: 06FEB2014
SCALE: 0.375		DRAWN BY: PBS	INIT ECO: 2014-076
EST WEIGHT: 42238.628		PRO-ENGINEER	
SHEET 1 OF 1		DRAWING NO: A042A396	

B	2014-786	UPDATED A042A663 WAS 15417	MRH	11NOV2014
A	2014-360	OMIT 89833K, ADD 3316606S	MRH	22MAY2014
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

BILL OF MATERIAL

ITEM	QTY	DESCRIPTION	PART NUMBER
1	3	CLAMP, T-BOLT, 4.28-4.59	13164-0450
2	1	AIR CLEANER, 4" CONNECTION, CF# AH1196 OR EQUAL	15609
3	1	HUMP HOSE, 4.0"DIA, -	3316608S
4	1	CLAMP, U-BOLT, GUILLOTINE, 4.00", PLATED	89548K
5	1	TUBE, AIR INTAKE	A042A658
6	1	RESTRICTION INDICATOR, 1/8" NPT	RAX00-2352

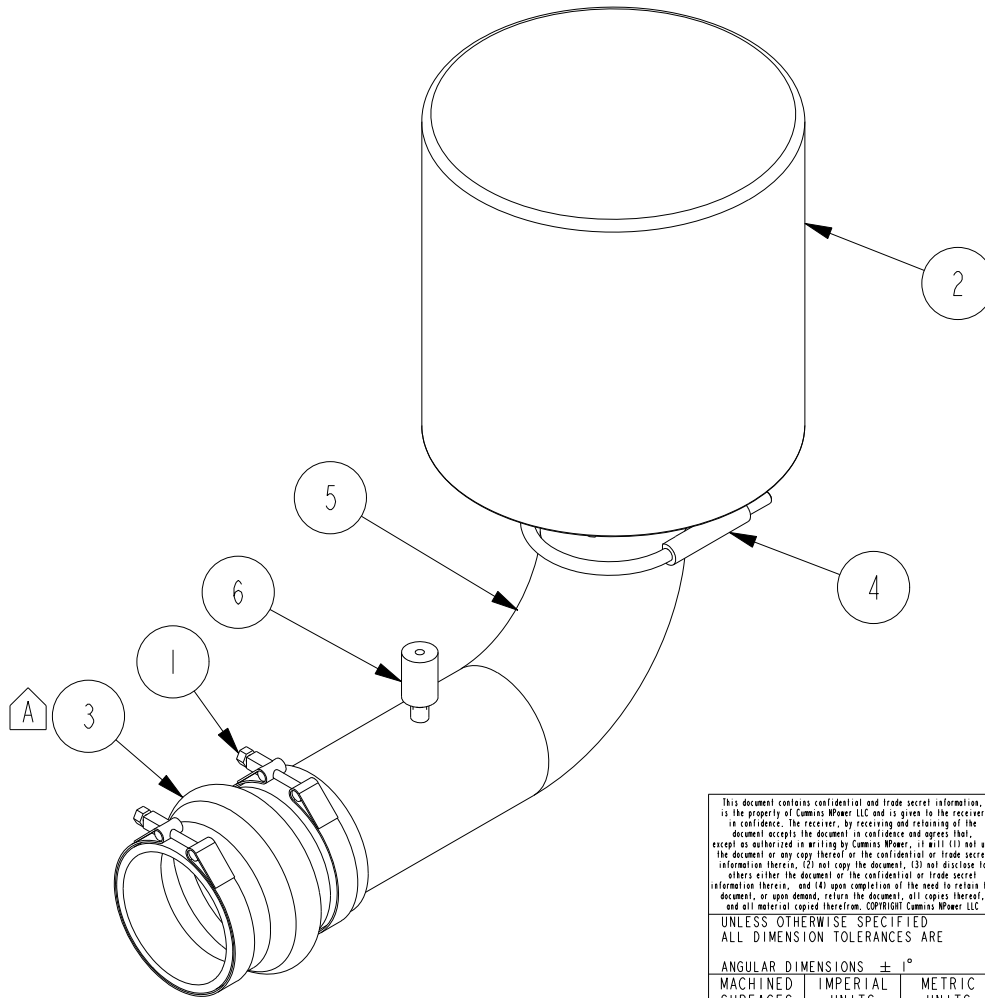

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN


UNLESS OTHERWISE SPECIFIED
ALL DIMENSION TOLERANCES ARE
ANGULAR DIMENSIONS $\pm 1^\circ$

MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
125	MACHINE TOLERANCES X ± 0.06 XX ± 0.010 XXX ± 0.001	MACHINE TOLERANCES X ± 1.5 XX ± 0.5 XXX ± 0.05
	WELD TOLERANCES X ± 0.25 XX ± 0.12 XXX ± 0.06	WELDED TOLERANCES X ± 5 XX ± 3 XXX ± 1.50

ASSEMBLY, AIR CLEANER
CFP7E

DWG UNITS: IN/LB/S	DRAWN BY: PBS PRO-ENGINEER	DATE: 05FEB2014 INIT ECO: 2014-076
EST WEIGHT: 42238.628	SHEET 1 OF 1	DRAWING NO: A042A392
SCALE: 0.190		

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
A	2014-360	OMIT 89835K, ADD 3316608S	MRH	23MAY2014

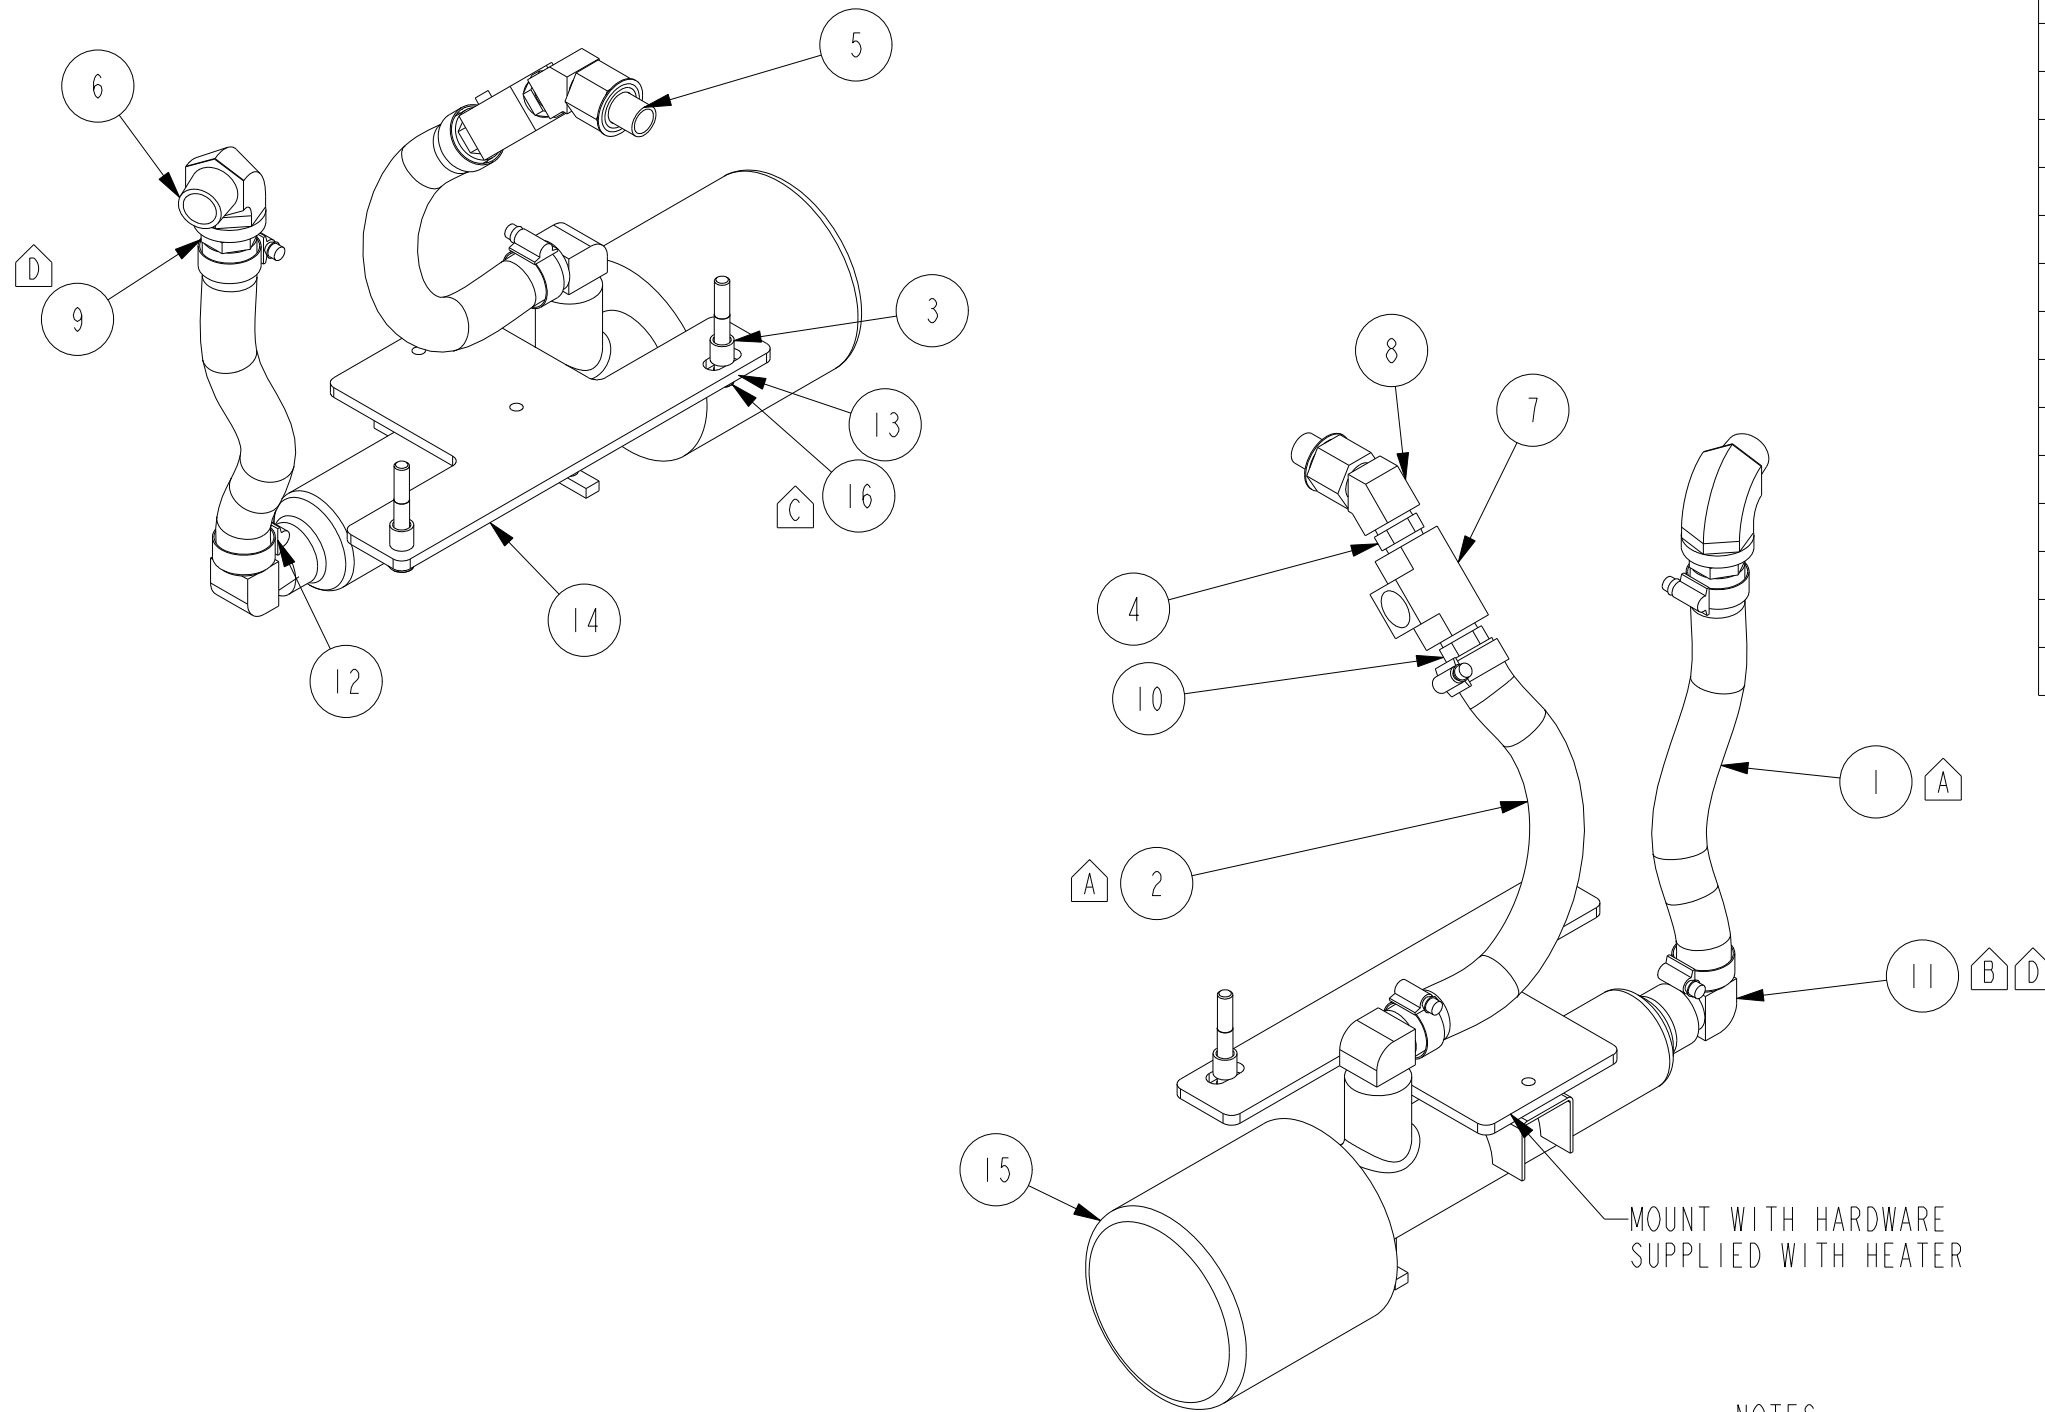

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, HEATER, 3/4" ID x 15.00"	80242GL
2	1	HOSE, HEATER, 3/4" ID x 11.00"	80242GL
3	2	SPACER, 0.5 OD X 0.38 ID X 0.50 LG	9618
4	1	NIPP, HEX, -8 NPT X -8 NPT	12164-8-8
5	1	FTG, STR, M18 ORR X -8 FNPT	12181-M18-8
6	1	ELB, 90 DEG, -12 NPT X -12 FMNPT	12195-12-12
7	1	TEE, UNION, -8 NPT	12531-8
8	1	ELB, 45 DEG, -8 NPT X -8 FMNPT	12532-8-8
9	1	FTG, STR, -12 BEAD X -12 NPT	12545-12-12
10	1	FTG, STR, -12 BEAD X -8 NPT	12545-12-8
11	2	ELB, 90 DEG, -12 BEAD X -12 NPT	12547-12-12
12	4	CLAMP, WORM, .88 - 1.25	14990-12
13	2	WASHER, FLAT, M8	20020-M8
14	1	BRACKET, COOLANT HEATER MOUNTING, CFP5E	24233
15	1	HEATER, COOLANT, 1500W, 120/240VAC	24238
16	2	SCREW, HH, M8-1.25x60	20308-060

- NOTES:
 1. ATTACH HOSE TO HEATER WITH OUT RADIAL TWIST
 2. APPLY THREAD SEALANT ON ALL NPT THREADS


D	2015-019	12545-12-12 WAS QTY 2 12547-12-12 WAS QTY 1	PBS	09JAN2015
C	2014-839	20308-060 WAS 20308-040	PBS	09DEC2014
B	2014-402	OMIT (1) 12545-12-12, ADDED (1) 12547-12-12	MRH	06JUN2014
A	2014-057	80242GL REPLACED 14194	S DUBICK	13-FEB-14
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	HEATER, COOLANT, ASSEMBLY CFP5E	

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE			
ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	125	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2
		FORM TOLERANCES .XX ± 0.010 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
		FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8

DWG UNITS: IN/LB/S	DRAWN BY: PBS PRO-ENGINEER	DATE: 16JAN2013 INIT ECO: 2013-013
SCALE: 0.250	SHEET 1 OF 1	DRAWING NO: 24231
EST WEIGHT: 13.846		

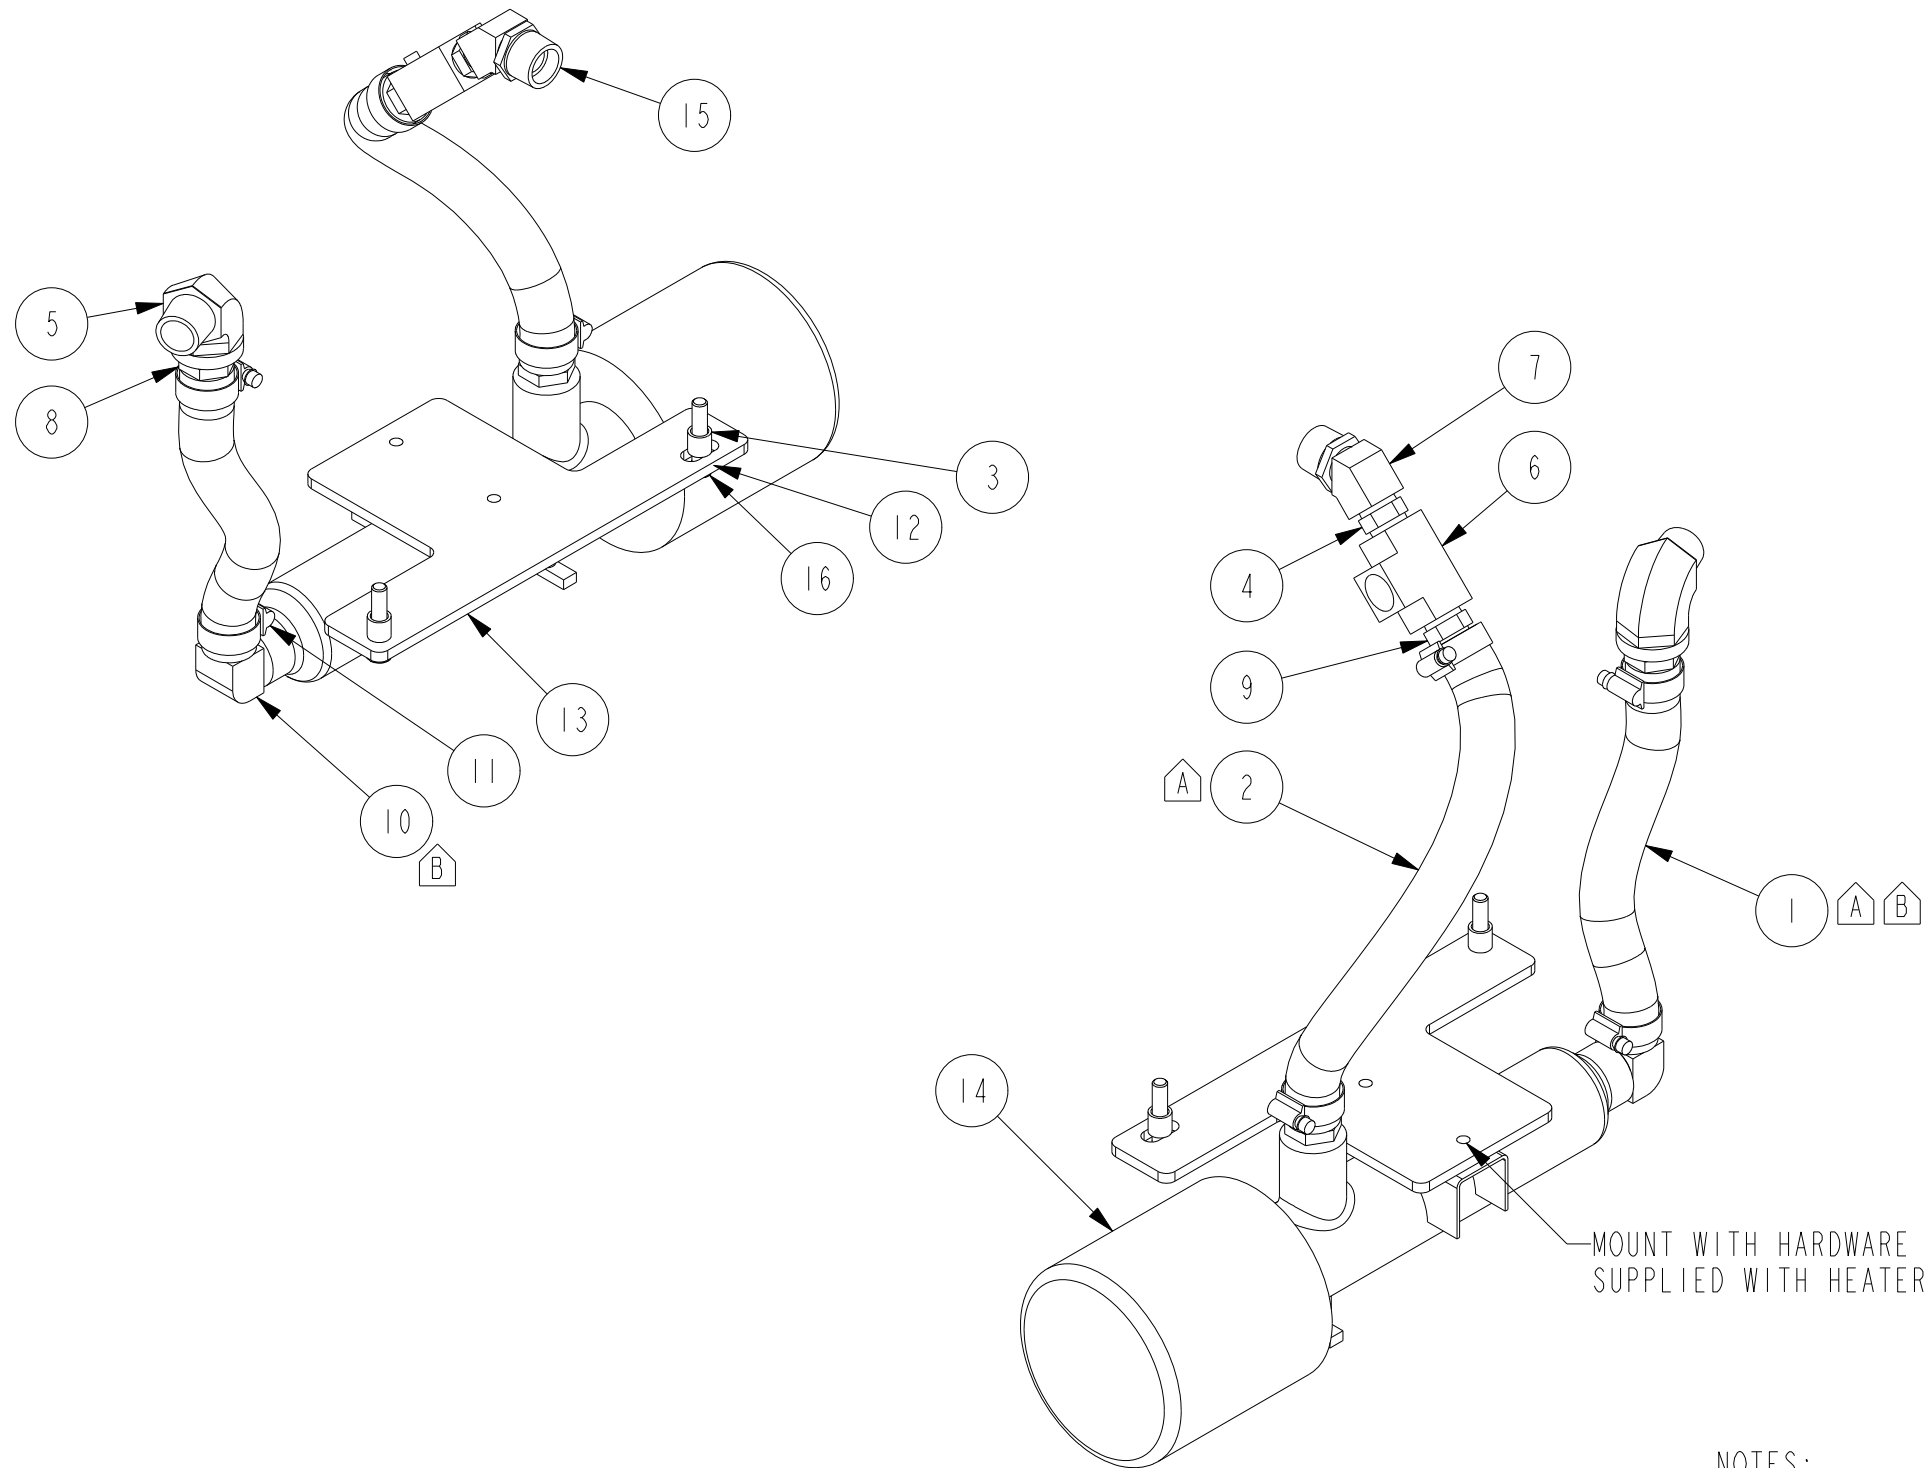

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, SILICONE HEATER, 3/4" ID x 10.00"	80242GL
2	1	HOSE, SILICONE HEATER, 3/4" ID x 13.00"	80242GL
3	2	SPACER, 0.5 OD X 0.38 ID X 0.50 LG	9618
4	1	NIPP, HEX, -8 NPT X -8 NPT	12164-8-8
5	1	ELB, 90 DEG, -12 NPT X -12 FMNPT	12195-12-12
6	1	TEE, UNION, -8 NPT	12531-8
7	1	ELB, 45 DEG, -8 NPT X -8 FMNPT	12532-8-8
8	2	FTG, STR, -12 BEAD X -12 NPT	12545-12-12
9	1	FTG, STR, -12 BEAD X -8 NPT	12545-12-8
10	1	ELB, 90 DEG, -12 BEAD X -12 NPT	12547-12-12
11	4	CLAMP, WORM, .88 - 1.25	14990-12
12	2	WASHER, FLAT, M8	20020-M8
13	1	BRACKET, COOLANT HEATER MOUNTING, CFP5E/7E	24233
14	1	HEATER, COOLANT, 1500W, 120/240VAC	24238
15	1	BUSHING, 1/2" x 3/4" NPT	LTL-SRB3412
16	2	SCREW, HH, M8-1.25x40	20308-040

- NOTES:
 1. ATTACH HOSE TO HEATER WITH OUT RADIAL TWIST
 2. APPLY THREAD SEALANT ON ALL NPT THREADS

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUERKLE ROAD
 WHITE BEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM


CUSTOM DESIGN
 AND UPFIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE				ASSEMBLY, COOLANT HEATER CFP7E	
ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS	DWG UNITS: IN/LB/S	DRAWN BY: PBS
THIRD ANGLE PROJECTION	125	MACHINE TOLERANCES .XX = ± 0.010 .XXX = ± 0.005	MACHINE TOLERANCES .X = ± 0.4 .XX = ± 0.2	SCALE: 0.250	PRO-ENGINEER
		FORM TOLERANCES .XX = ± 0.030 .XXX = ± 0.015	FORM TOLERANCES .X = ± 0.8 .XX = ± 0.4	EST WEIGHT: 13.846	SHEET 1 OF 1
		FAB TOLERANCES .XX = ± 0.060 .XXX = ± 0.030	FAB TOLERANCES .X = ± 1.5 .XX = ± 0.8		DATE: 16JAN2013 INIT ECO: 2013-013

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
B	2015-486	12547-12-12 REPLACED 12545-12-12 AND 80242GL 10" REPLACED 14"	KMS	07AUG2015
A	2014-057	80242GL REPLACED 14194	SD	07FEB2014

BILL OF MATERIAL

ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	BRACKET, FUEL PREFILTER, CFP5E	14370
2	4	SCREW,HH, 0.38-16x1.00	20238-100
3	1	FILTER HEAD, CUMMINS	142784-S
4	1	FILTER, FUEL	FS1212
5	2	SCREW,HH, M12-1.75x50	SCREW_HH_M12-175_50

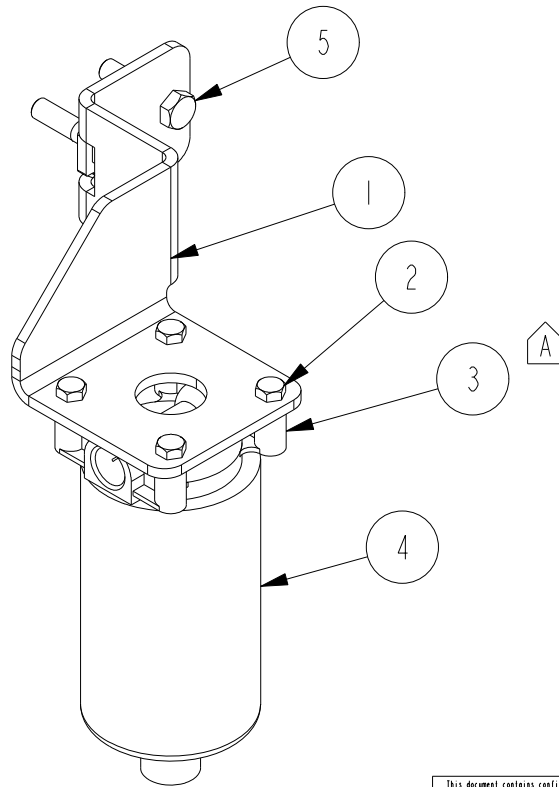

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining the document, accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED
ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°


MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
125	MACHINE TOLERANCES	MACHINE TOLERANCES
	.X ± 0.06	X ± 1.5
	.XX ± 0.010	XX ± 0.25
	.XXX ± 0.001	XXX ± 0.05
	WELD TOLERANCES	WELDED TOLERANCES
	.X ± 0.25	X ± 5
	.XX ± 0.12	XX ± 3
	.XXX ± 0.06	XXX ± 1.50

ASSEMBLY, FUEL PREFILTER
CFP7E




DWG UNITS: IN/LB/S	DRAWN BY: PBS PRO-ENGINEER	DATE: 05FEB2014 INIT ECO: 2014-076
EST WEIGHT: 42238.628	SHEET 1 OF 1	DRAWING NO: A042A386
SCALE: 0.250		

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
A	2014-239	142784-S WAS 142784	PBS	16APR2014

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
A 1	1	PLUG, COMMON RAIL FUEL CONNECTION, M20-1.5	13998
2	1	ADAPTER, "Y"-COMMON RAIL FUEL CONNECTION, M18-1.5 X M18-1.5	14198
3	1	VALVE, PRESSURE RELIEF,	3947799
A 4	1	CAP SCREW, M12 X 1.50 X 16MM LONG	91180A743

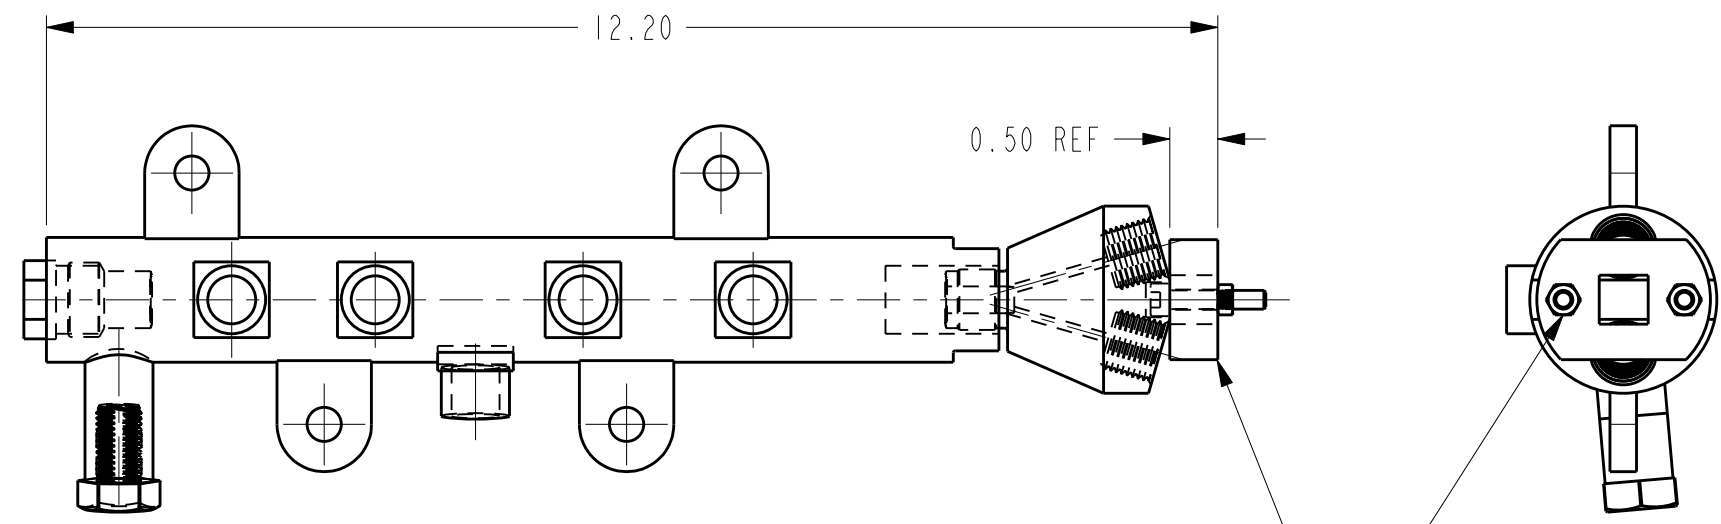

USE PN: 14201
TORQUE ADAPTER "Y" DETAIL: 1
TO 75 FT/LB

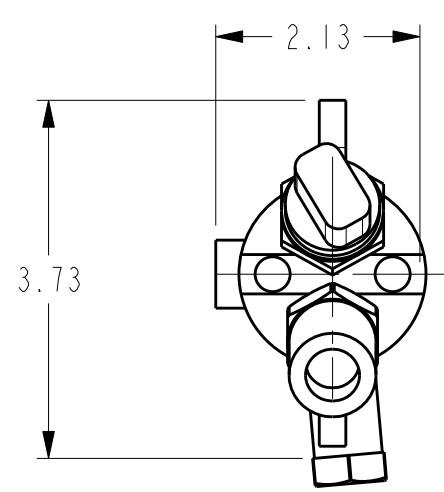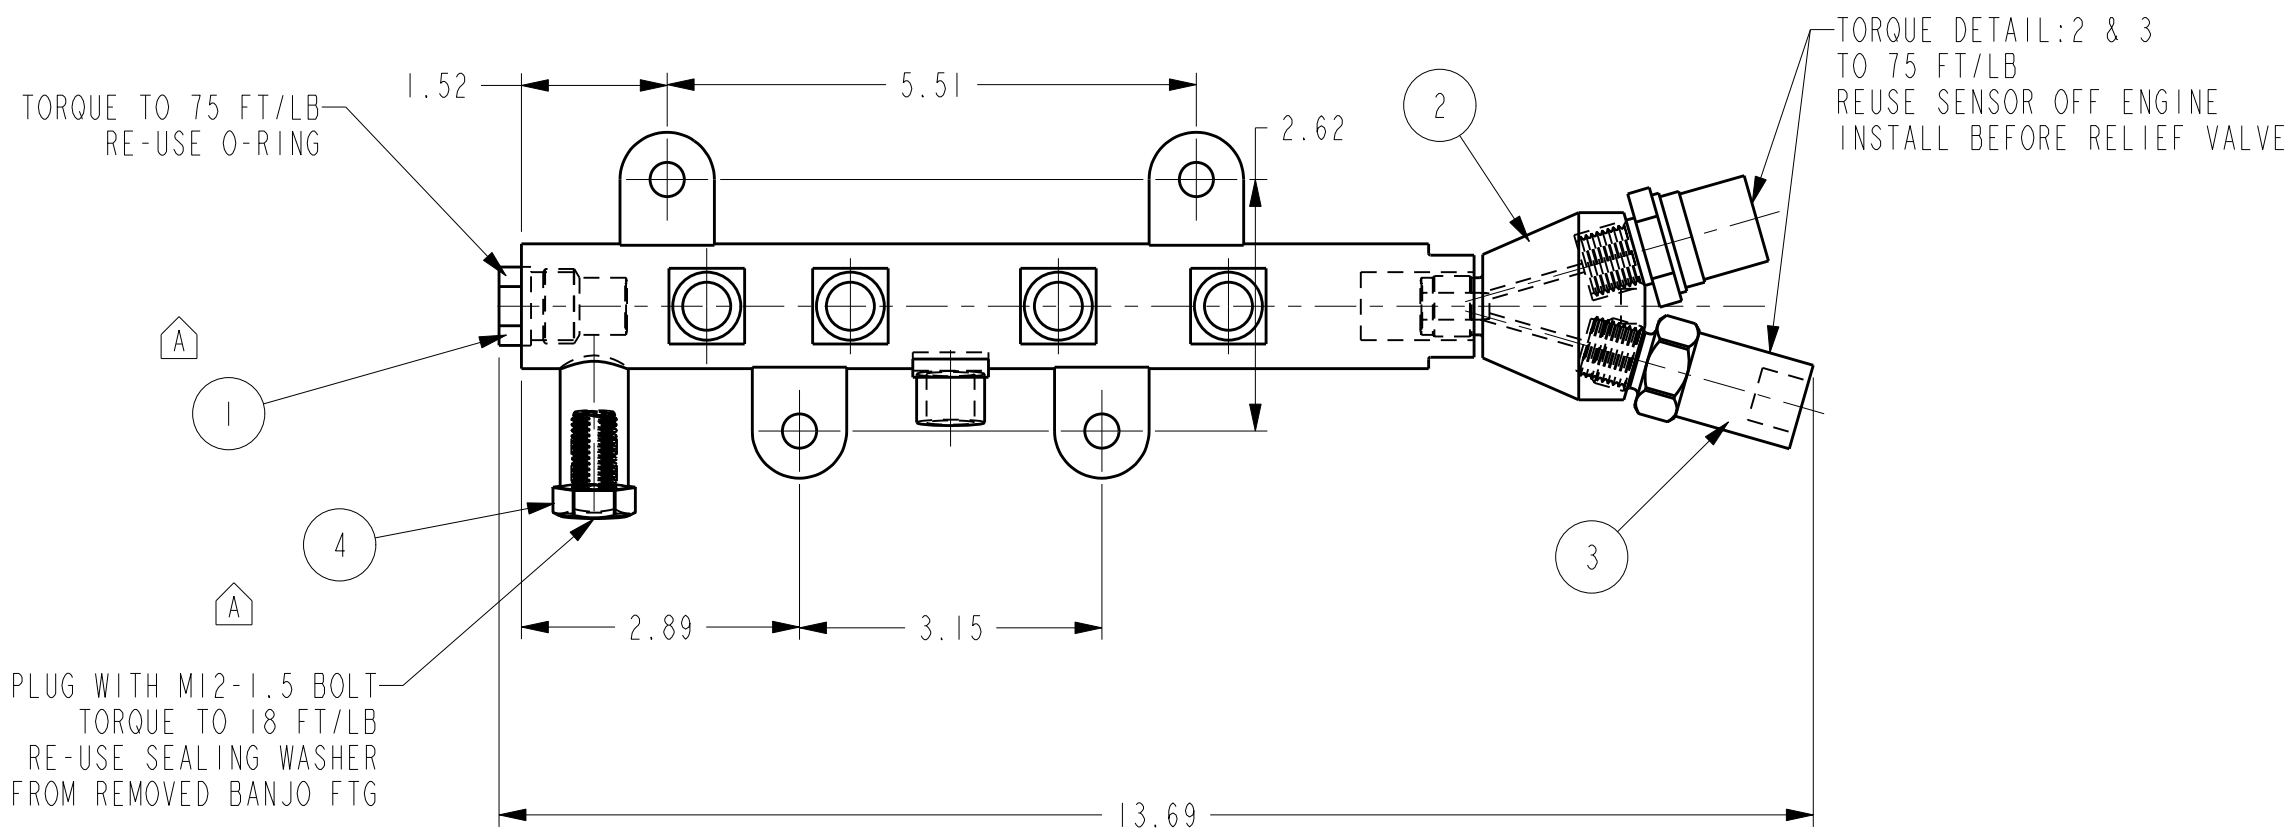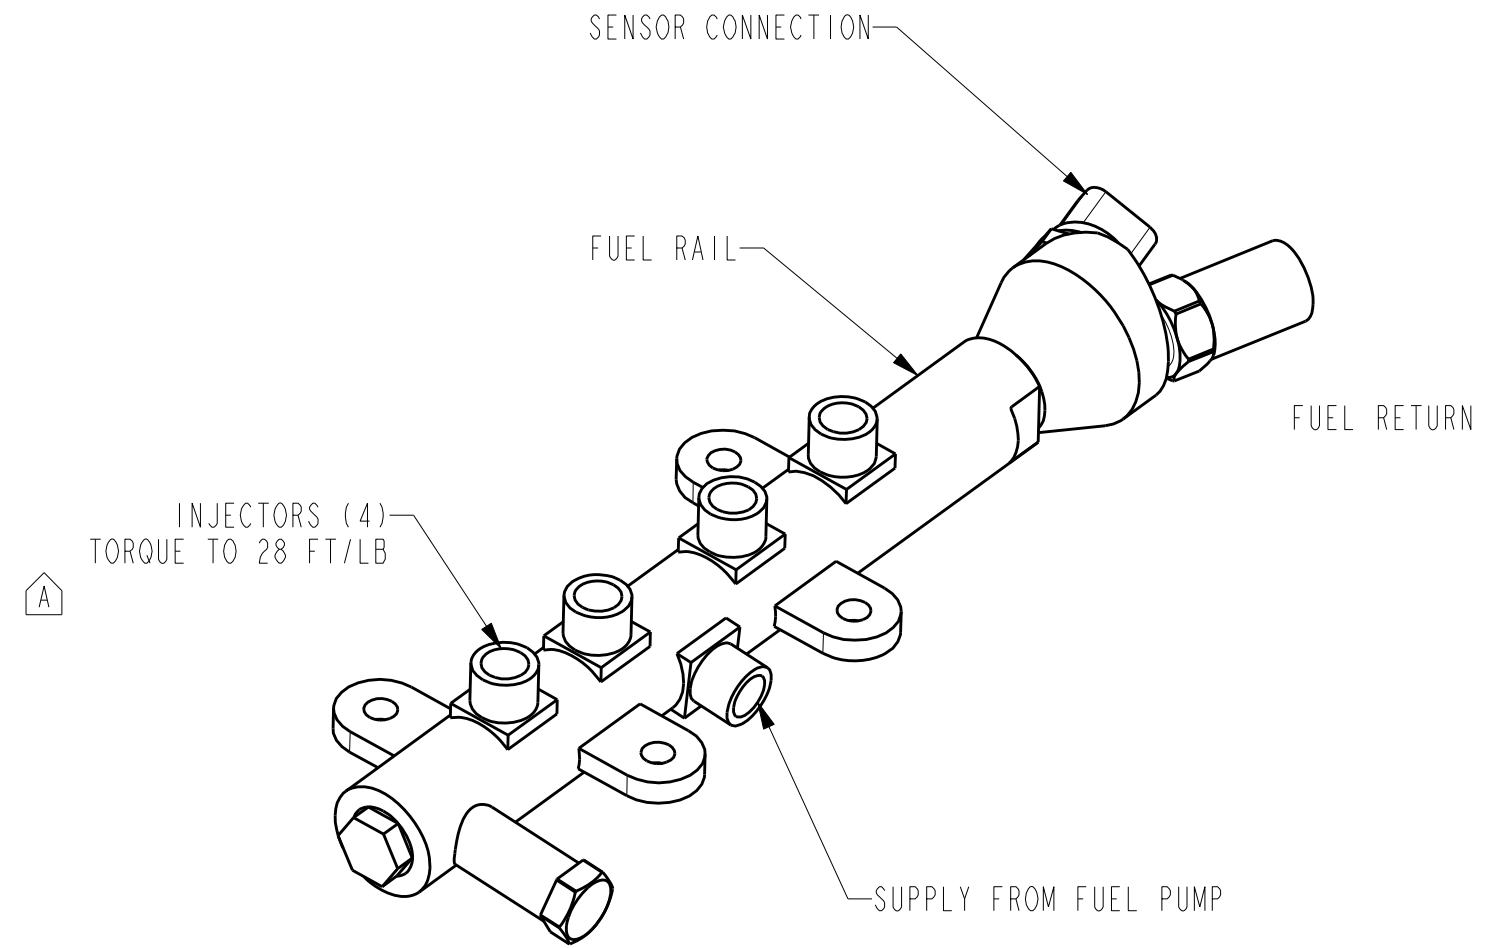

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will not use the document or any copy thereof or the confidential or trade secret information therein. It will not copy the document, disclose to others either the document or the confidential or trade secret information therein, and it will upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. ©COPYRIGHT Cummins Fire Power LLC

Fire Power
CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN


ASSEMBLY, FUEL RAIL MODIFICATION
FIREPUMP, CFP5E

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS	± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION		MACHINE TOLERANCES FRACTIONS ± .005 DECIMALS ± .00125 FAB TOLERANCES ± .005	MACHINE TOLERANCES FRACTIONS ± .005 DECIMALS ± .00125 FAB TOLERANCES ± .005



DWG UNITS: IN/LB/S	DRAWN BY: MAC PRO-ENGINEER	DATE: 01-07-2009
SCALE: 0.500	SHEET 1 OF 1	INIT ECO:
EST WEIGHT: 42238.628		DRAWING NO: 14202

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
A	2010-127	ADDED PLUG & BOLT. ADDED TORQUE	DAN	23-MAR-10

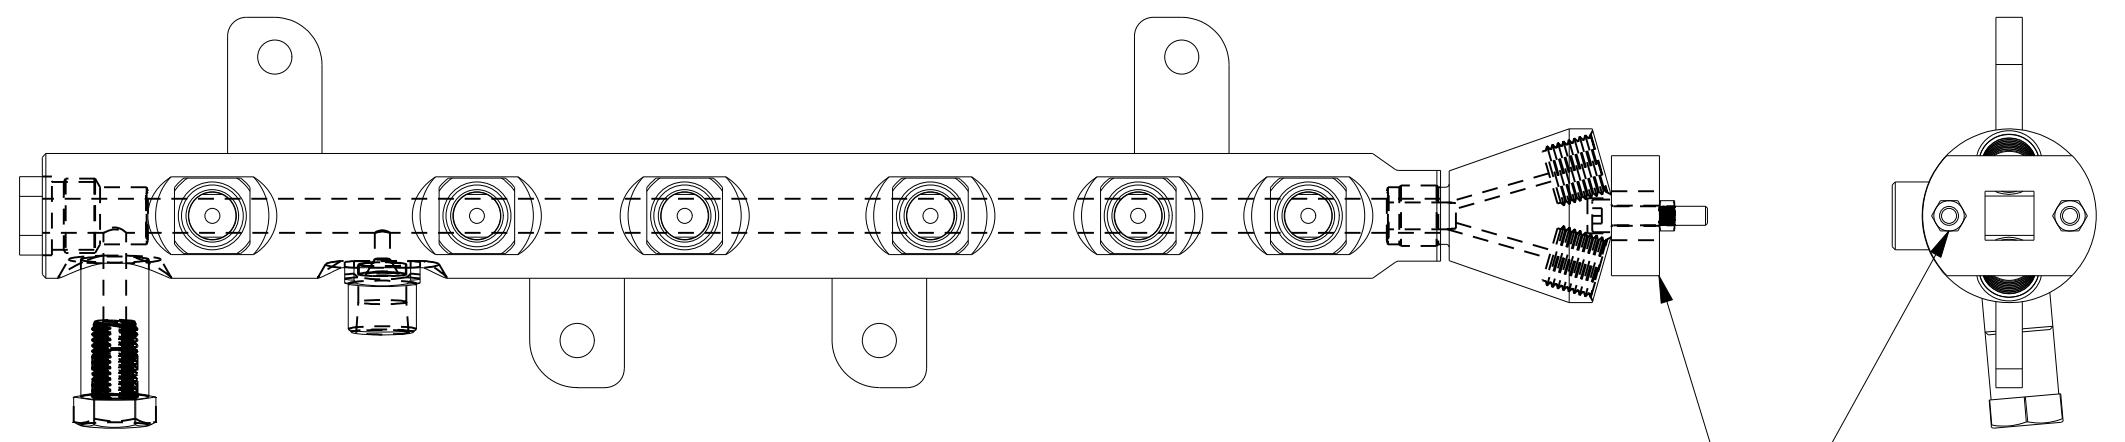

USE TOOL No. 14201
TORQUE "Y" ADAPTER "Y"
TO 75 FT/LB

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	PLUG, COMMON RAIL FUEL CONNECTION, M20-1.5	13998
2	1	ADAPTER, "Y"-COMMON RAIL FUEL CONNECTION, M18-1.5 X M18-1.5	14198
3	1	VALVE, PRESSURE RELIEF,	3947799
4	1	CAP SCREW, M12 X 1.50 X 16MM LONG	91180A743

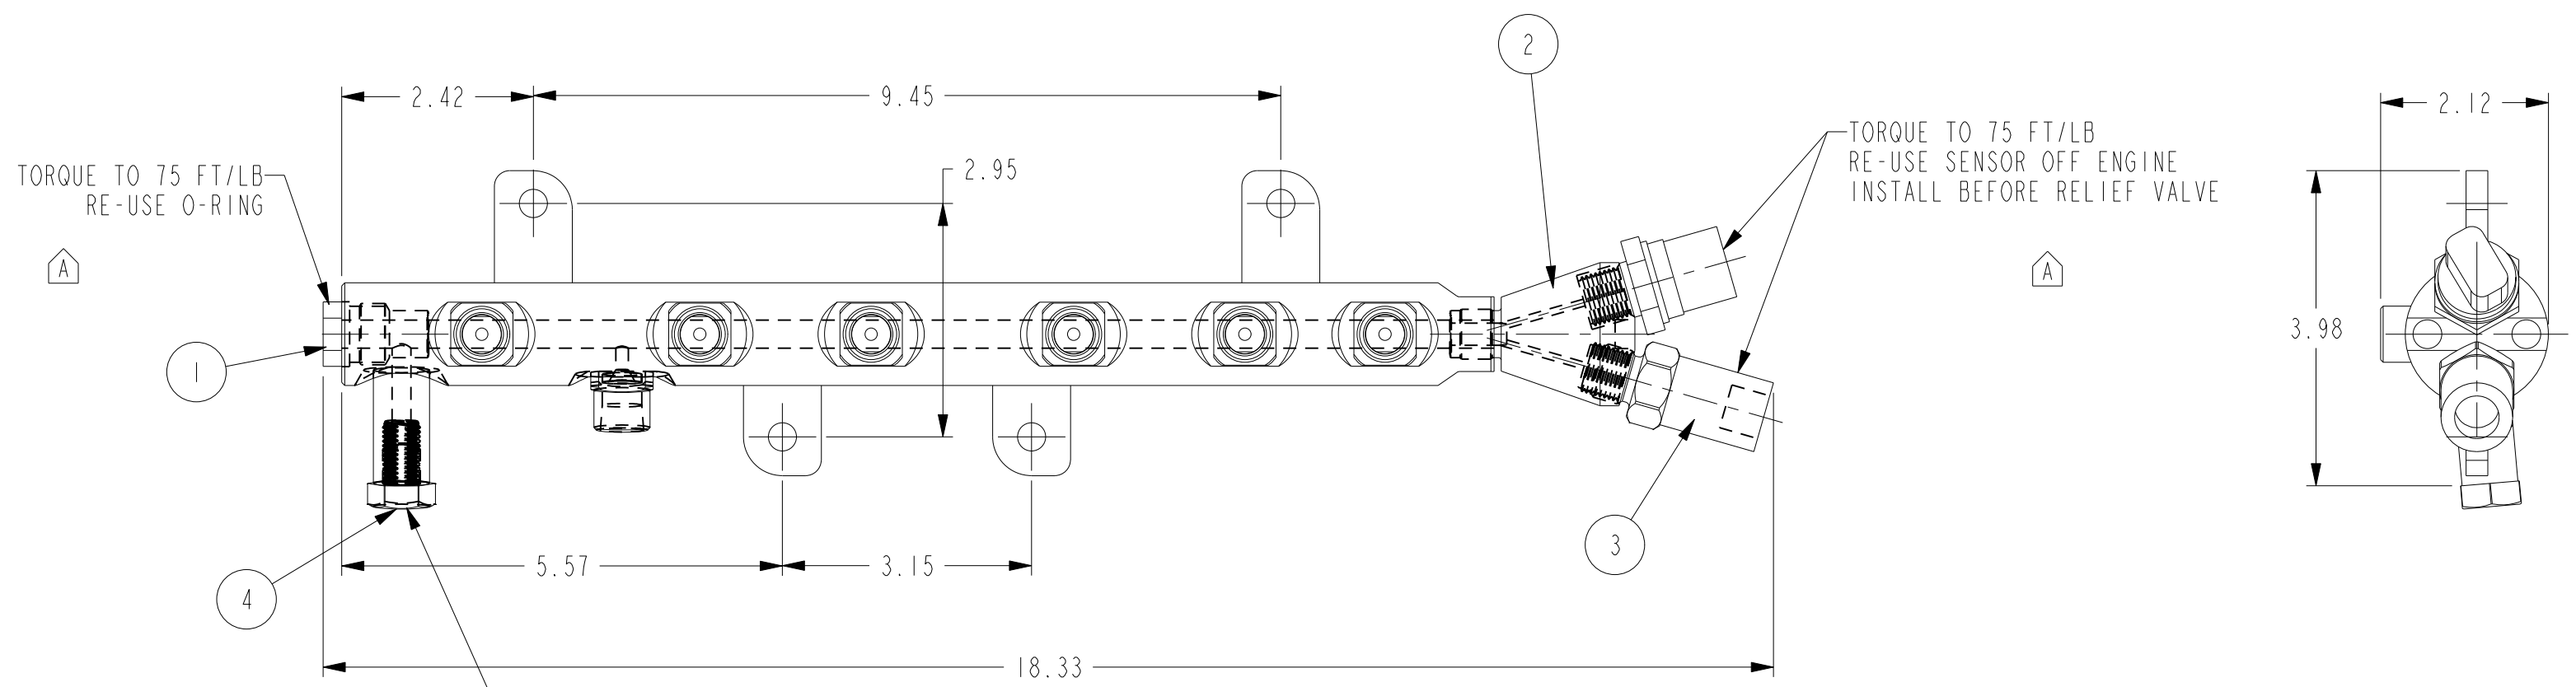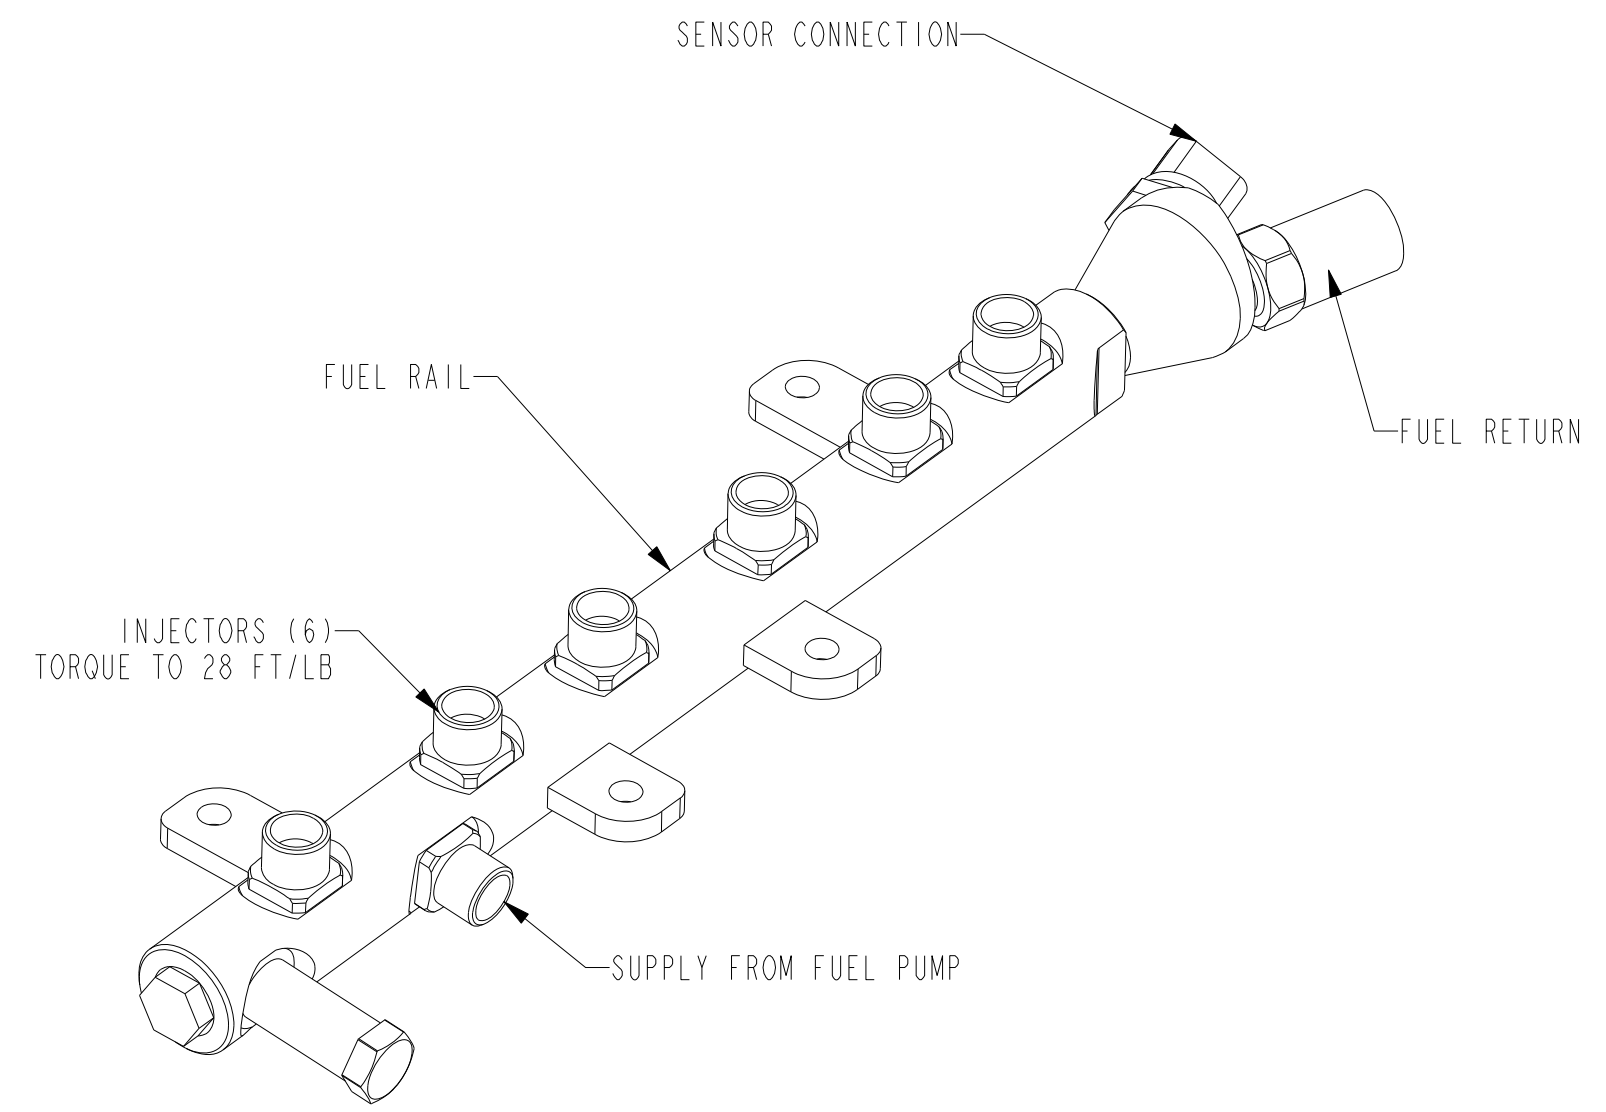

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will not use the document or any copy thereof or the confidential or trade secret information therein. It will not copy the document, disclose the document or its contents to others either the confidential or trade secret information therein, and it will upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. ©2009 Cummins Fire Power LLC

Cummins Fire Power
CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUEKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

ASSEMBLY, FUEL RAIL MODIFICATION
FIREPUMP, CFP7E



DWG UNITS: IN/LB/S
SCALE: 0.500
EST WEIGHT: 42238.628

DRAWN BY: MAC
PRO-ENGINEER

DATE: 01-07-2009
REF DRWG:

SHEET 1 OF 1
DRAWING NO: 14197

REV	DESCRIPTION OF REVISION	REV BY	DATE
A	2009-249 REMOVED RE-USED PARTS FROM BOM. ADDED NOTES	DAN	11-JUN-09
ENF			

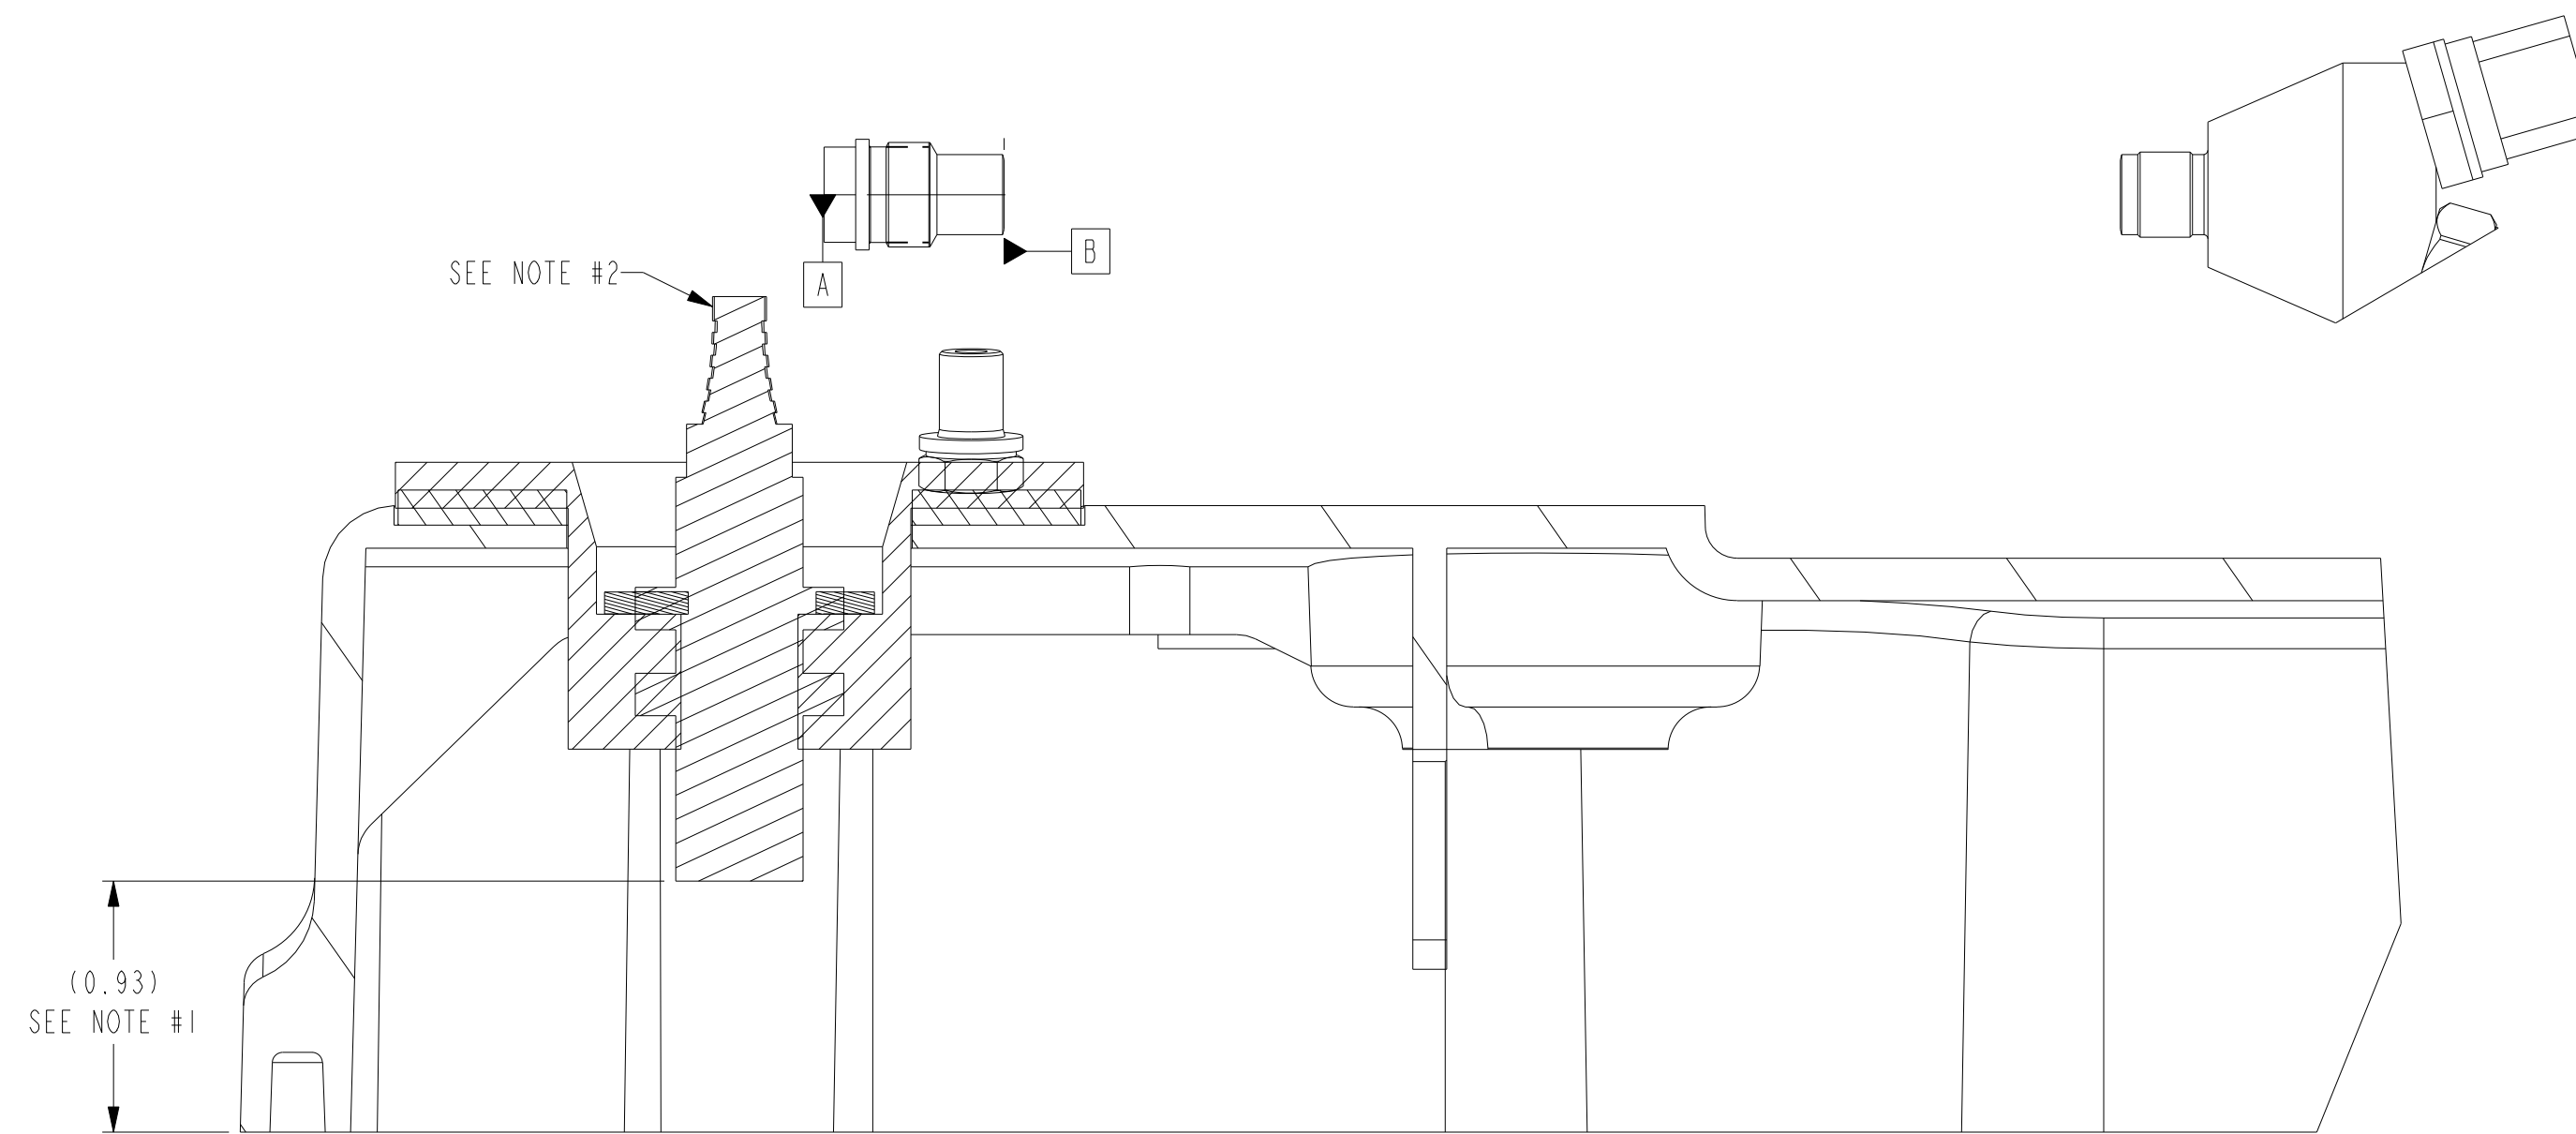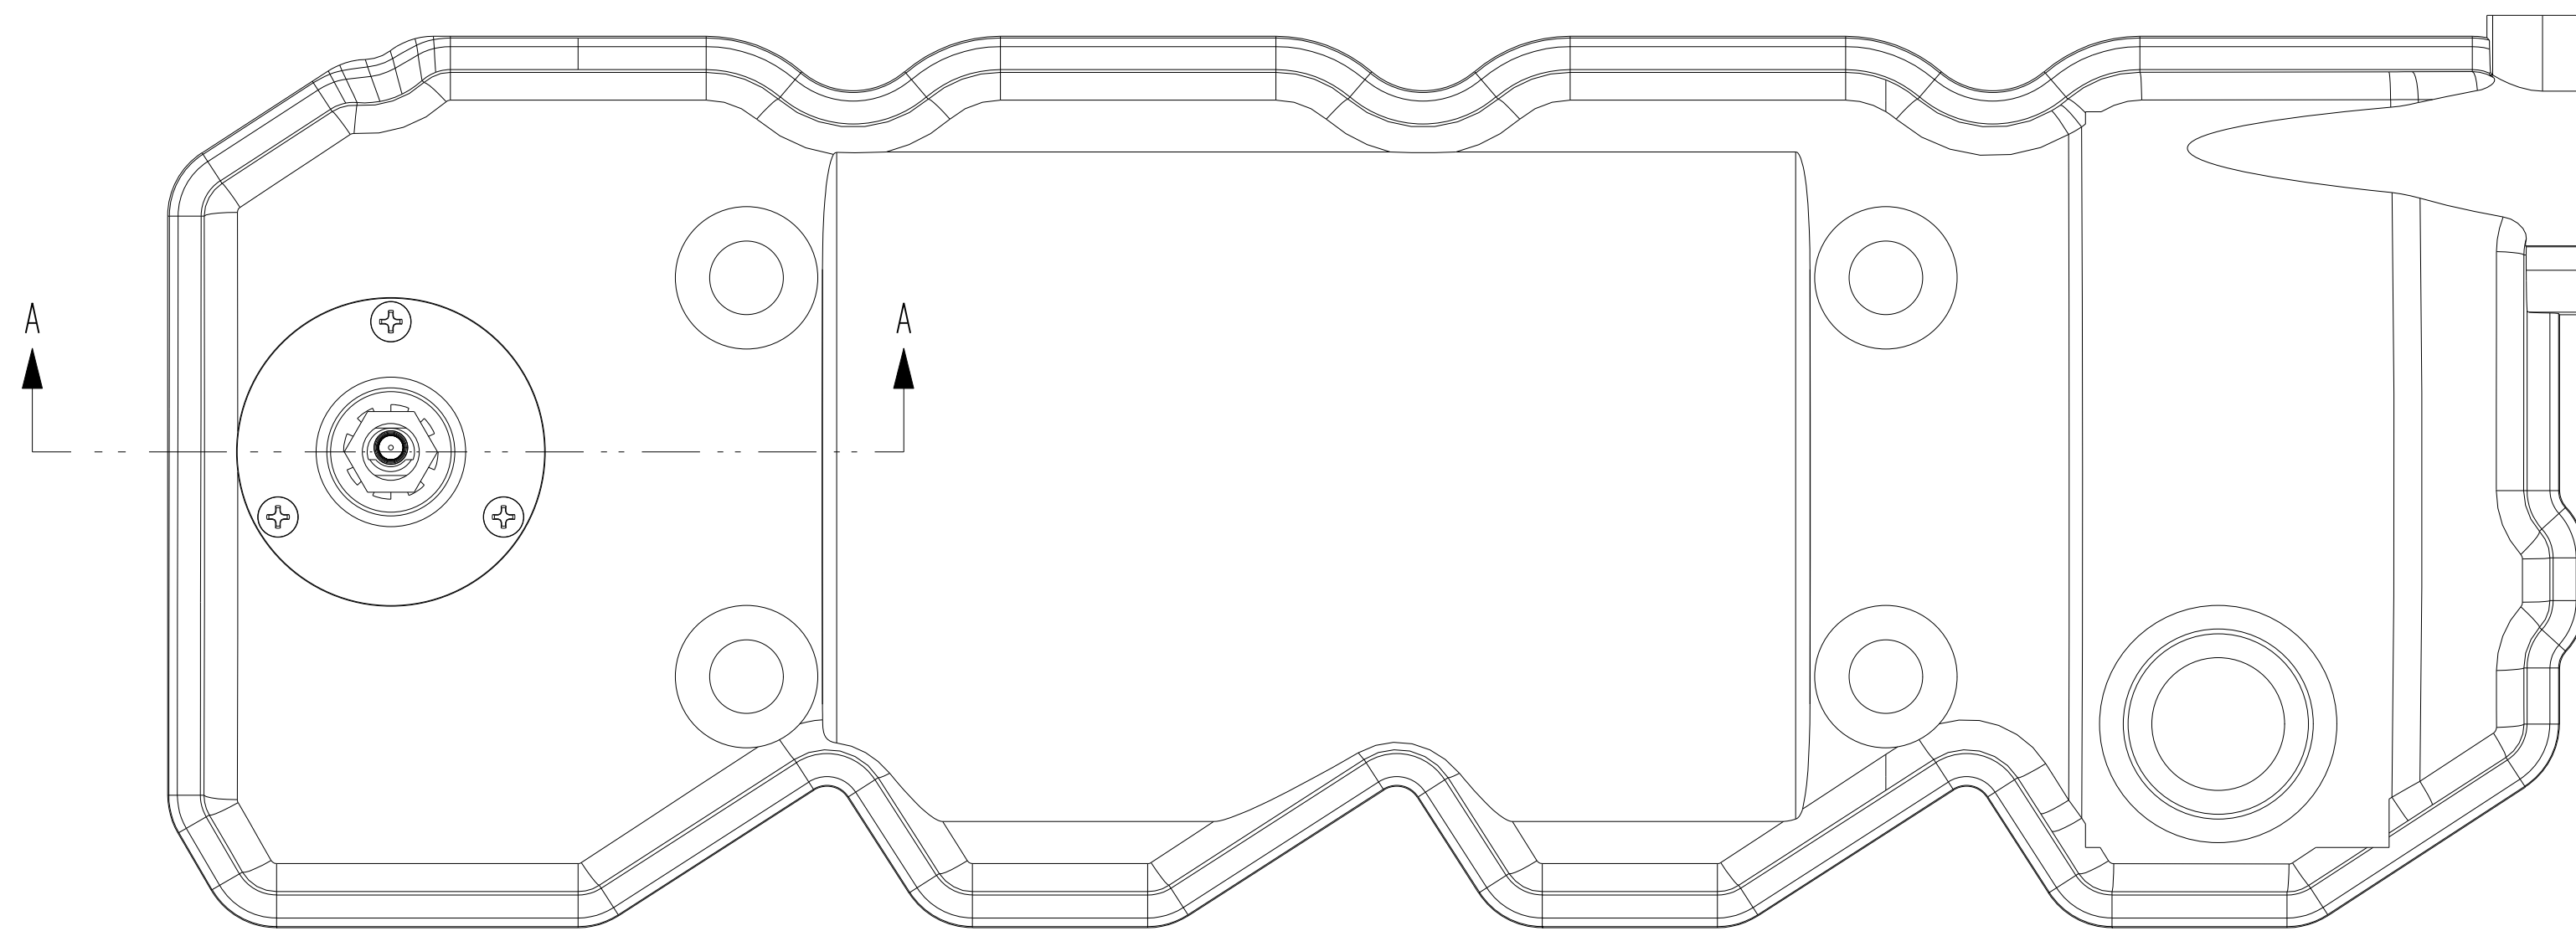

SECTION A-A
SCALE 1:500

- NOTES:
1. USE TOOL 13826 TO SET PROXIMITY SENSOR (12865) HEIGHT
 2. USE SOCKET THAT IS MODIFIED TO ACCOMMODATE SENSOR WIRES
 3. RE-USE VALVE COVER GASKET AND HARDWARE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be held in strict confidence. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Cummins Fire Power LLC. If you are not an intended recipient of this document, you should not disseminate, distribute or take any action in reliance on the contents hereof. If you have received this document in error, please notify the sender immediately by e-mail at ecor@cumminsfirepower.com or by phone at 1-800-368-7273. Cummins Fire Power LLC

Cummins Fire Power
CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUREAU ROAD
WHITE SEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPGRADE CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN


KIT, SENSOR & ADAPTERS
CFPSE

DWG UNITS: IN/LB/S
SCALE: 0.750
EST WEIGHT: 3.182


DRAWN BY: MAC
PRO-ENGINEER
SHEET 2 OF 2

DATE: 26AUG2009
INIT ECO:
DRAWING NO: 15389


REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

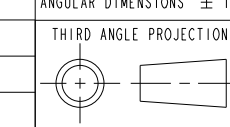

125°
THIRD ANGLE PROJECTION

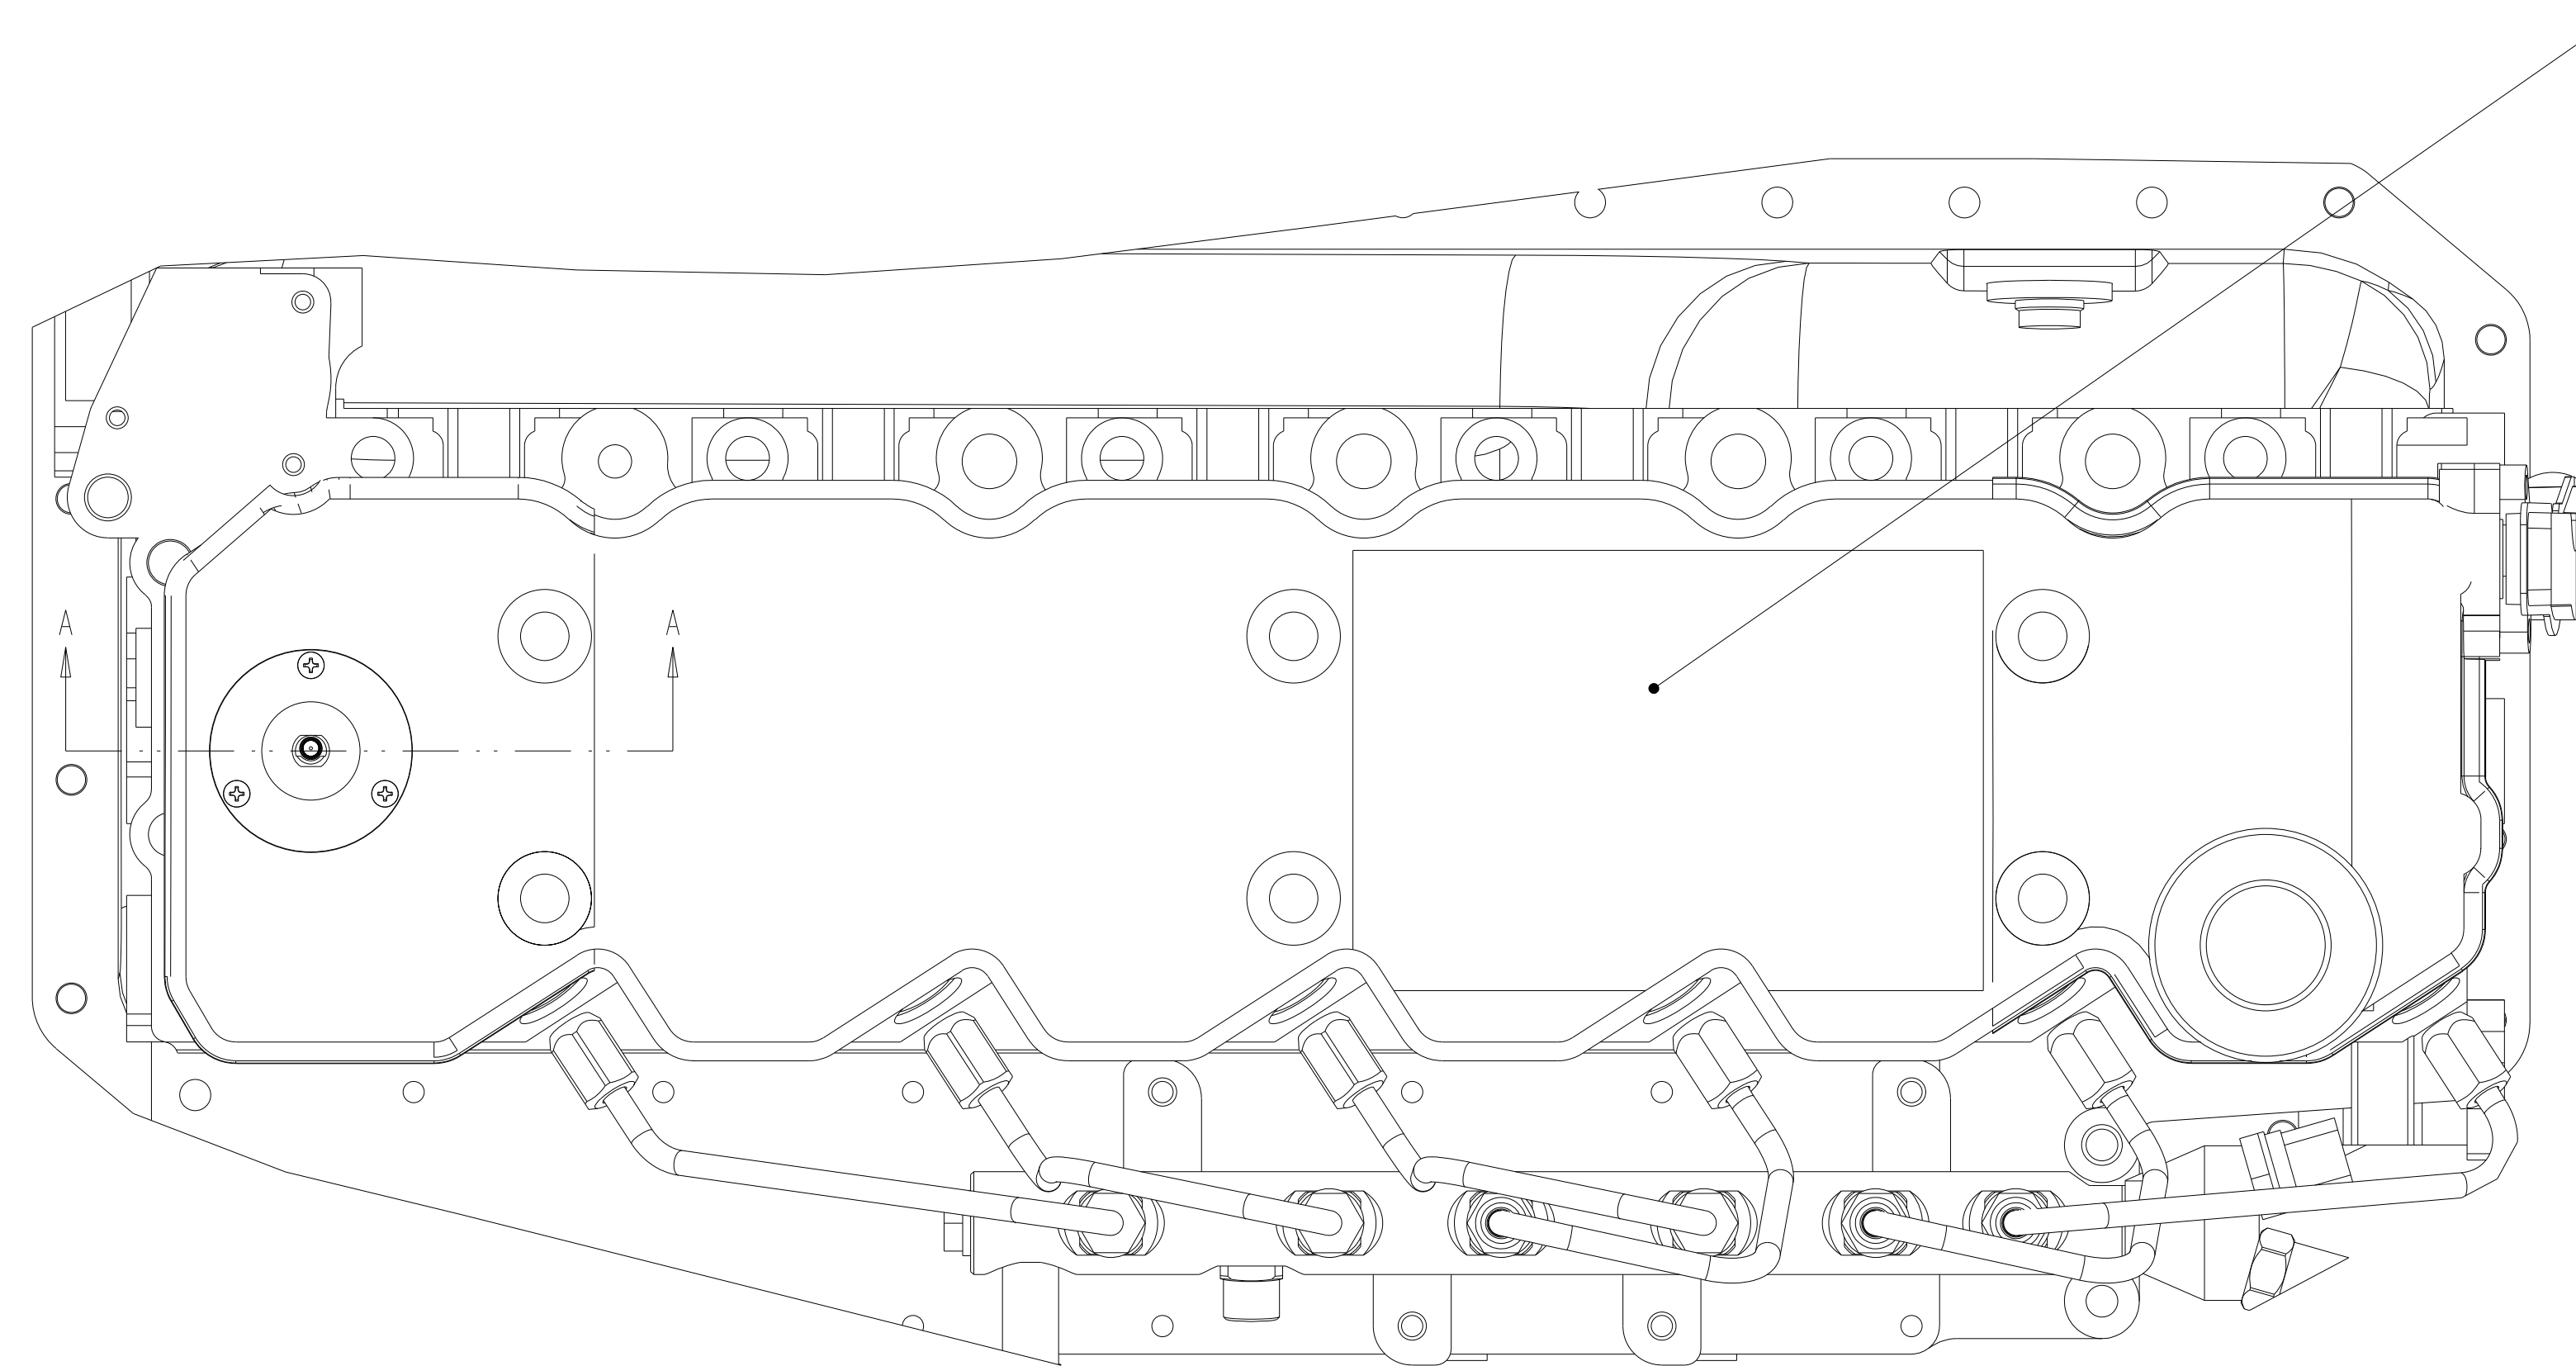

REMOVE DATA PLATE FROM ON ENGINE VALVE COVER WITH HOT KNIFE. RE-APPLY TO MODIFIED VALVE COVER WITH VHB TAPE CNP P/N 15115.

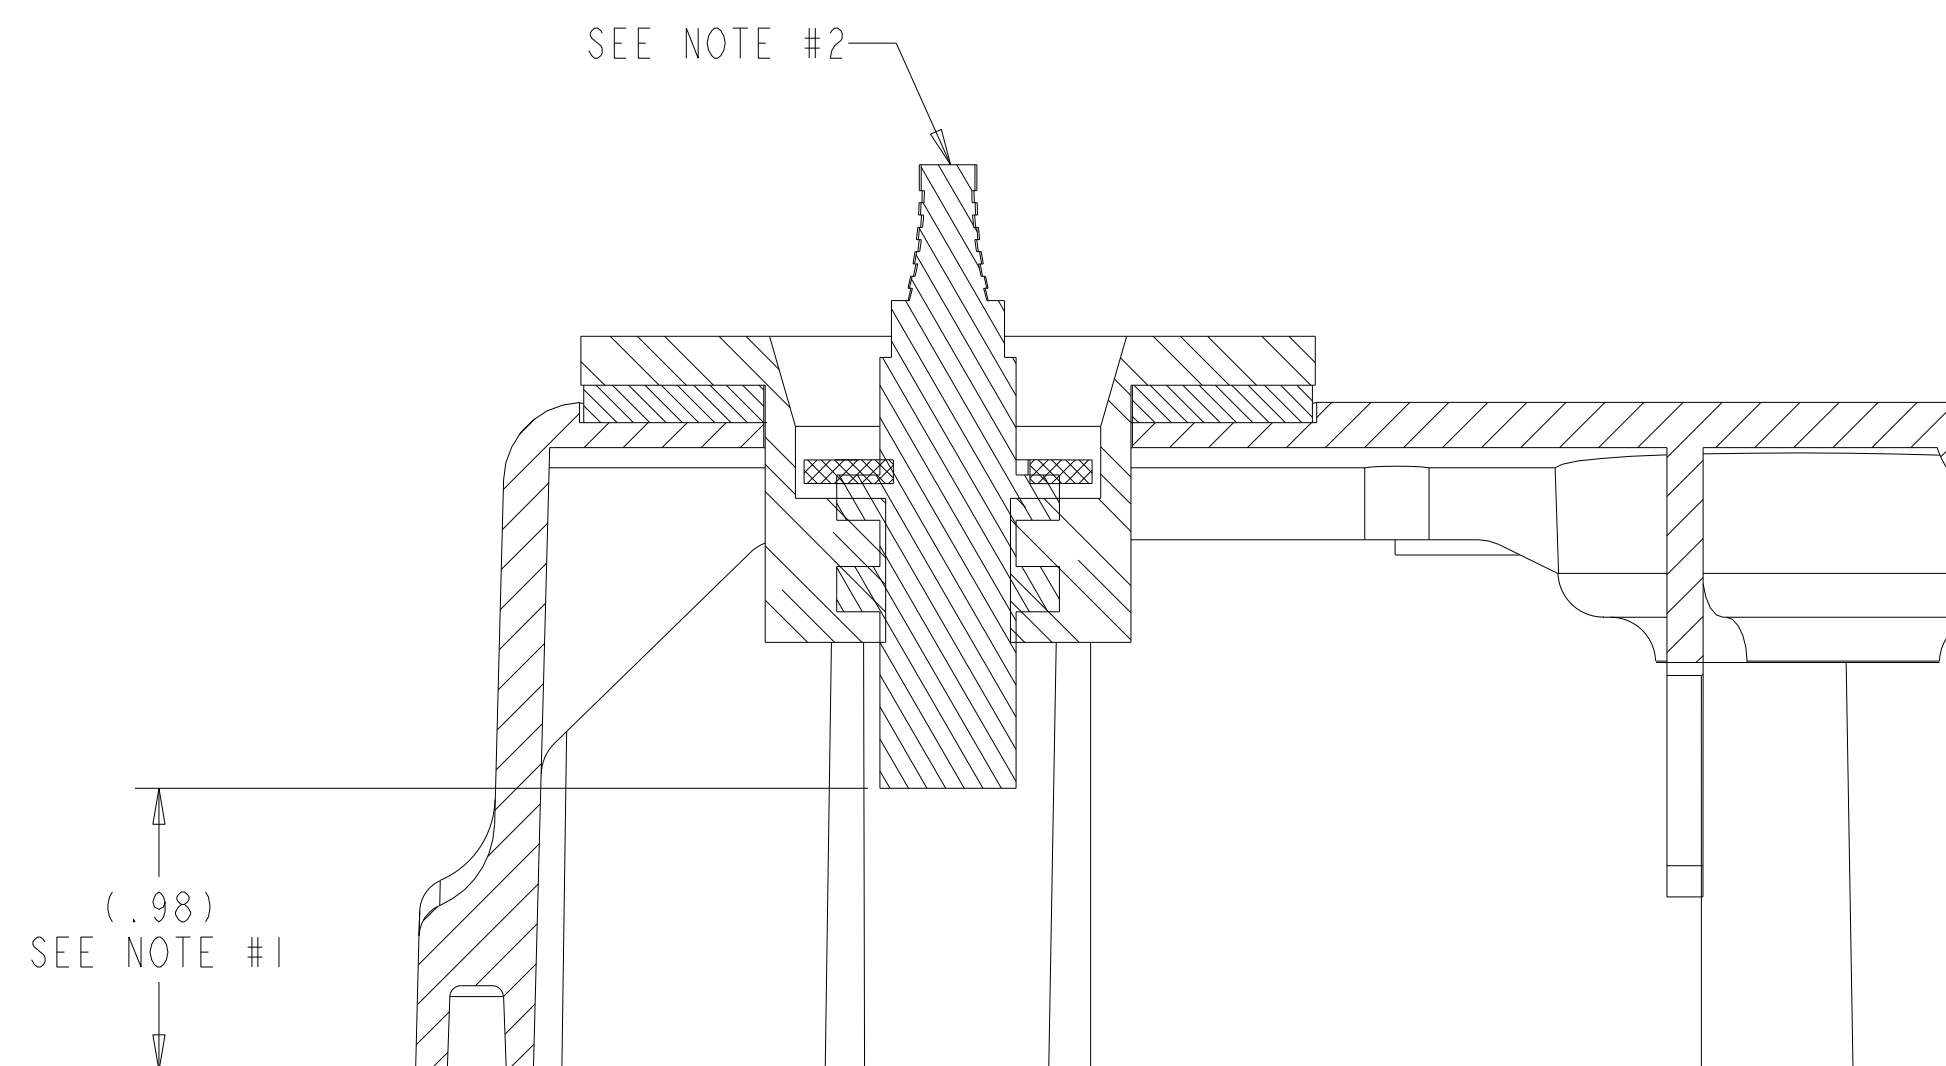

SECTION A-A
SCALE 1.500

- NOTES:
- USE TOOL 13826 TO SET PROXIMITY SENSOR (12865) HEIGHT
 - USE SOCKET THAT IS MODIFIED TO ACCOMMODATE SENSOR WIRES
 - RE-USE VALVE COVER GASKET AND HARDWARE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is not to be released, in any manner, to any third party without the prior written consent of Cummins Fire Power LLC. If you are not an intended recipient, you should not disseminate, distribute or copy this document. If you have received this document by mistake, please notify the sender immediately by e-mail at firepower@cummins.com. All rights reserved. Cummins Fire Power LLC. © 2015

Cummins Fire Power
CORPORATE OFFICE
1600 BUREAU ROAD
WHITE SEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUMMINS FIRE POWER LLC
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:

ANGULAR DIMENSIONS ± 1° MACHINED SURFACES ± 0.005

THIRD ANGLE PROJECTION

IMPERIAL UNITS IN/LB/S

METRIC UNITS MM/KG/S

KIT, SENSORS & ADAPTERS
CFPT7E

DWG UNITS: IN/LB/S

SCALE: 0.500

EST WEIGHT: 0.001

PRO-ENGINEER


SHEET 2 OF 2

DATE: 26AUG2009





INIT ECO:

DRAWING NO: 15390

REV	DATE	DESCRIPTION OF REVISION	REV BY	DATE
G	2015-308	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	18MAY2015
ECO				

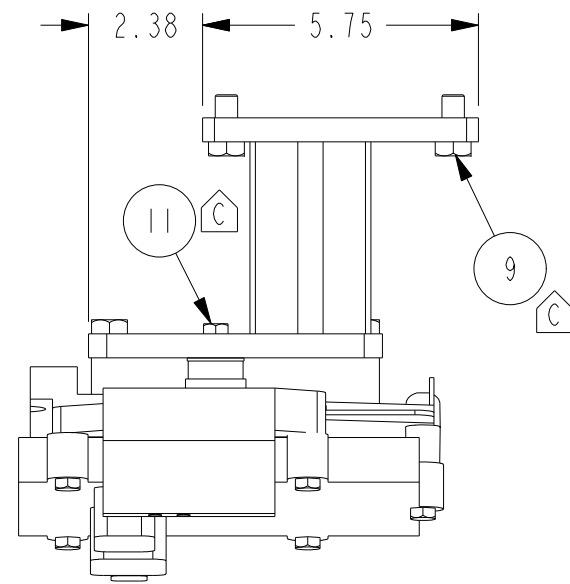

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	BRACKET, ECM MOUNTING, CFP5E & CFP7E	13310
2	1	STAND OFF, ECM, 103mm BOLT PATTERN	14392
E	3	GROUND STRAP, 1/4" WIDE, 12" HOLE CENTERS	15197
4	2	WASHER, FLAT, M8	20020-M8
5	3	ISOLATOR, VIBRATION, CUMMINS	3955219
6	3	ISOLATOR, VIBRATION, CUMMINS	3955220
D	7	ECM MODULE, CUMMINS, #4921776	12726
C	8	BRACKET, ETR CNT MODULE	5309216
C	9	SCREW, HH, M12-1.75x25	20312-025
C	10	SCREW, HH, M8-1.25x35	20308-035
C	11	SCREW, HH, M8-1.25x40	20308-040

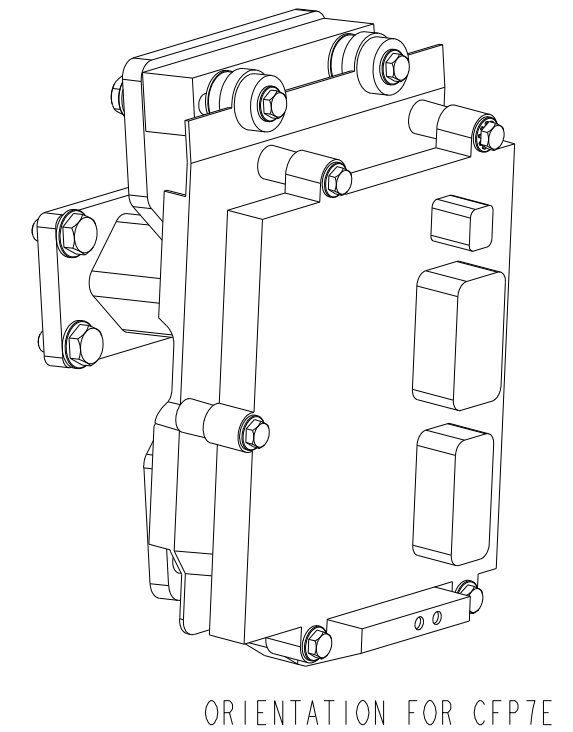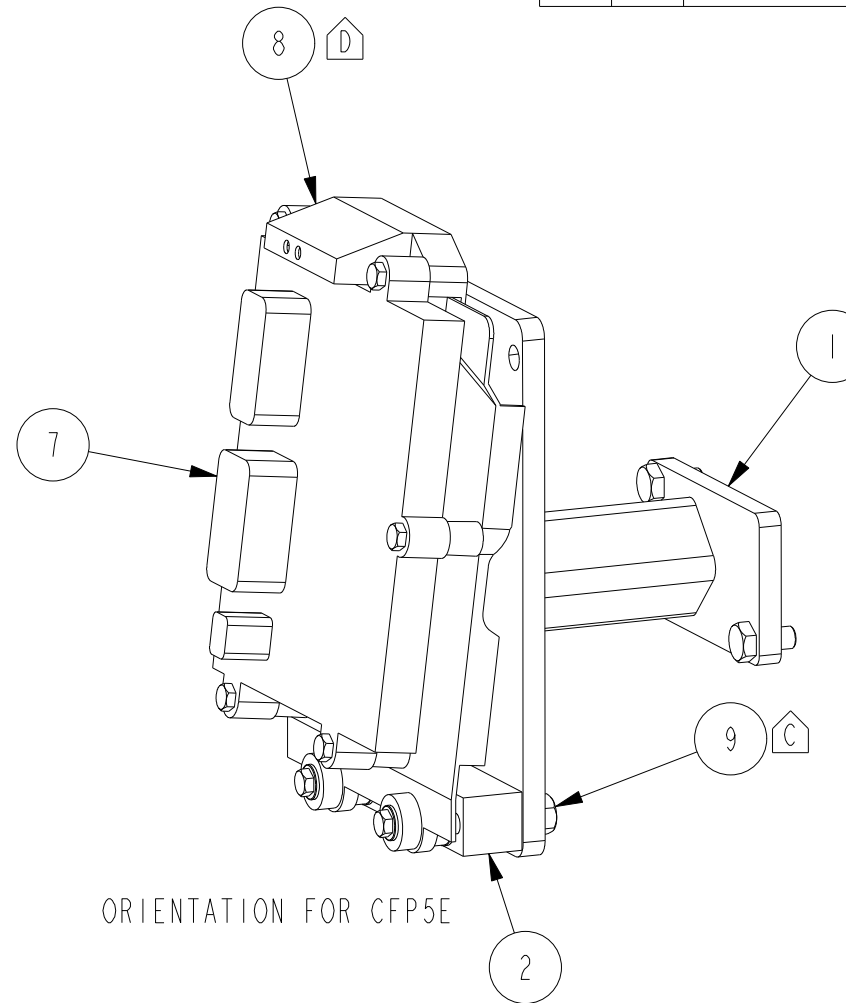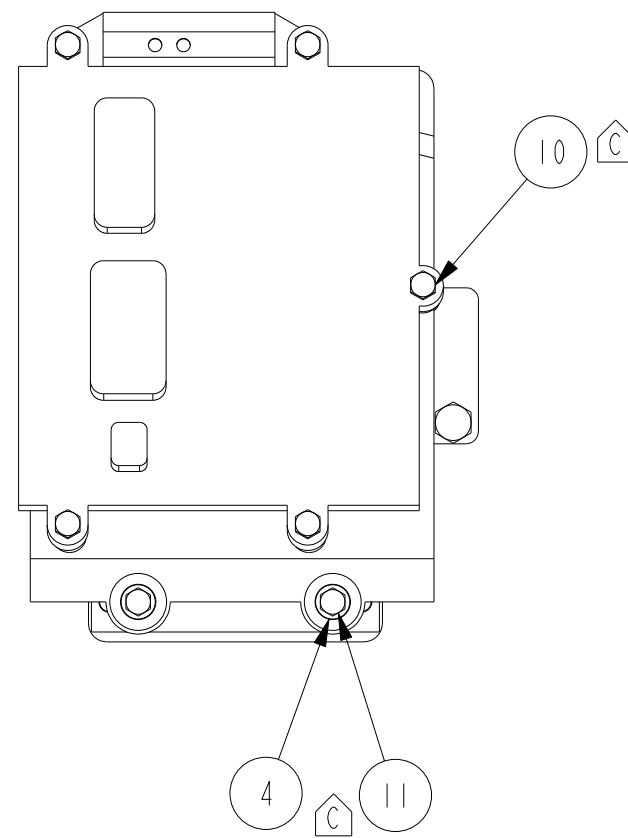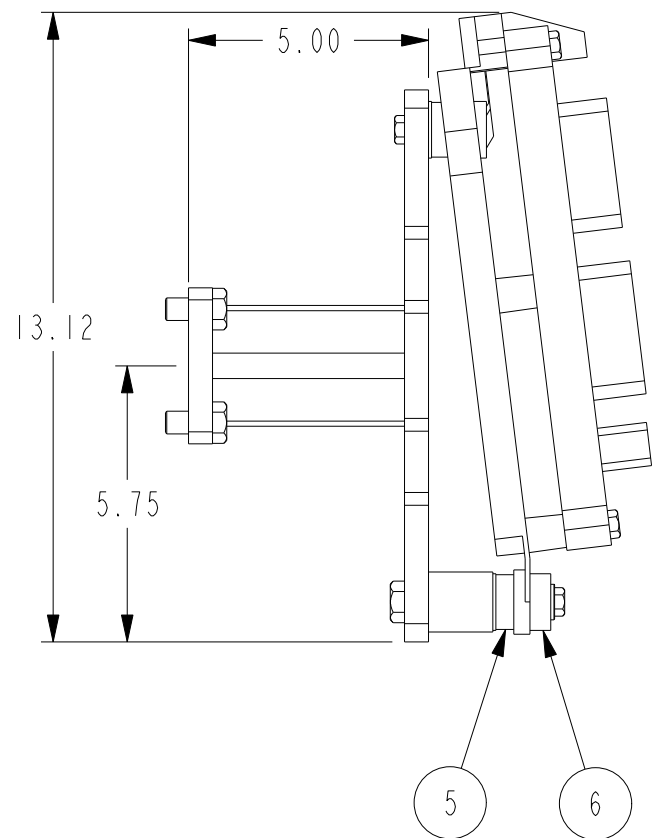

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM



CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE			
ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	125	MACHINE TOLERANCES .XX = ± 0.010 .XXX = ± 0.005	MACHINE TOLERANCES .X = ± 0.4 .XX = ± 0.2
		FORM TOLERANCES .XX = ± 0.030 .XXX = ± 0.015	FORM TOLERANCES .X = ± 0.8 .XX = ± 0.4
		FAB TOLERANCES .XX = ± 0.060 .XXX = ± 0.030	FAB TOLERANCES .X = ± 1.5 .XX = ± 0.8
DWG UNITS: IN/LB/S		DRAWN BY: MAC	
SCALE: 0.250		DATE: 12-09-2008	
EST WEIGHT: 25.926		INIT ECO:	
SHEET 1 OF 1		DRAWING NO: 13309	

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
E	2014-615	ADDED 15197	JJW	29AUG2014
D	2014-401	OMIT 4993966, ADDED 5309216	MRH	06JUN2014
C	2011-054	ADD FASTENERS PER SIX SIGMA	S DUBICK	29-APR-11

BILL OF MATERIAL

ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	MOUNT, OPERATOR STATION, CFP CONTROL PANEL	22318
2	2	ISOLATOR, PLATE MOUNT, 3 LB (YELLOW MARK)	15400
3	2	ISOLATOR, PLATE MOUNT, 6 LB (RED MARK)	15412
4	12	RIVET, ALUMINUM, STEEL SHANK, 0.156 DIA, 0.25-0.38 GRIP	15414
5	2	FENDER WASHER, 0.281 X 1.25	15421
6	4	SCREW, SELF LOCKING, 0.25-20 X 1.00, PH OR BH	15422

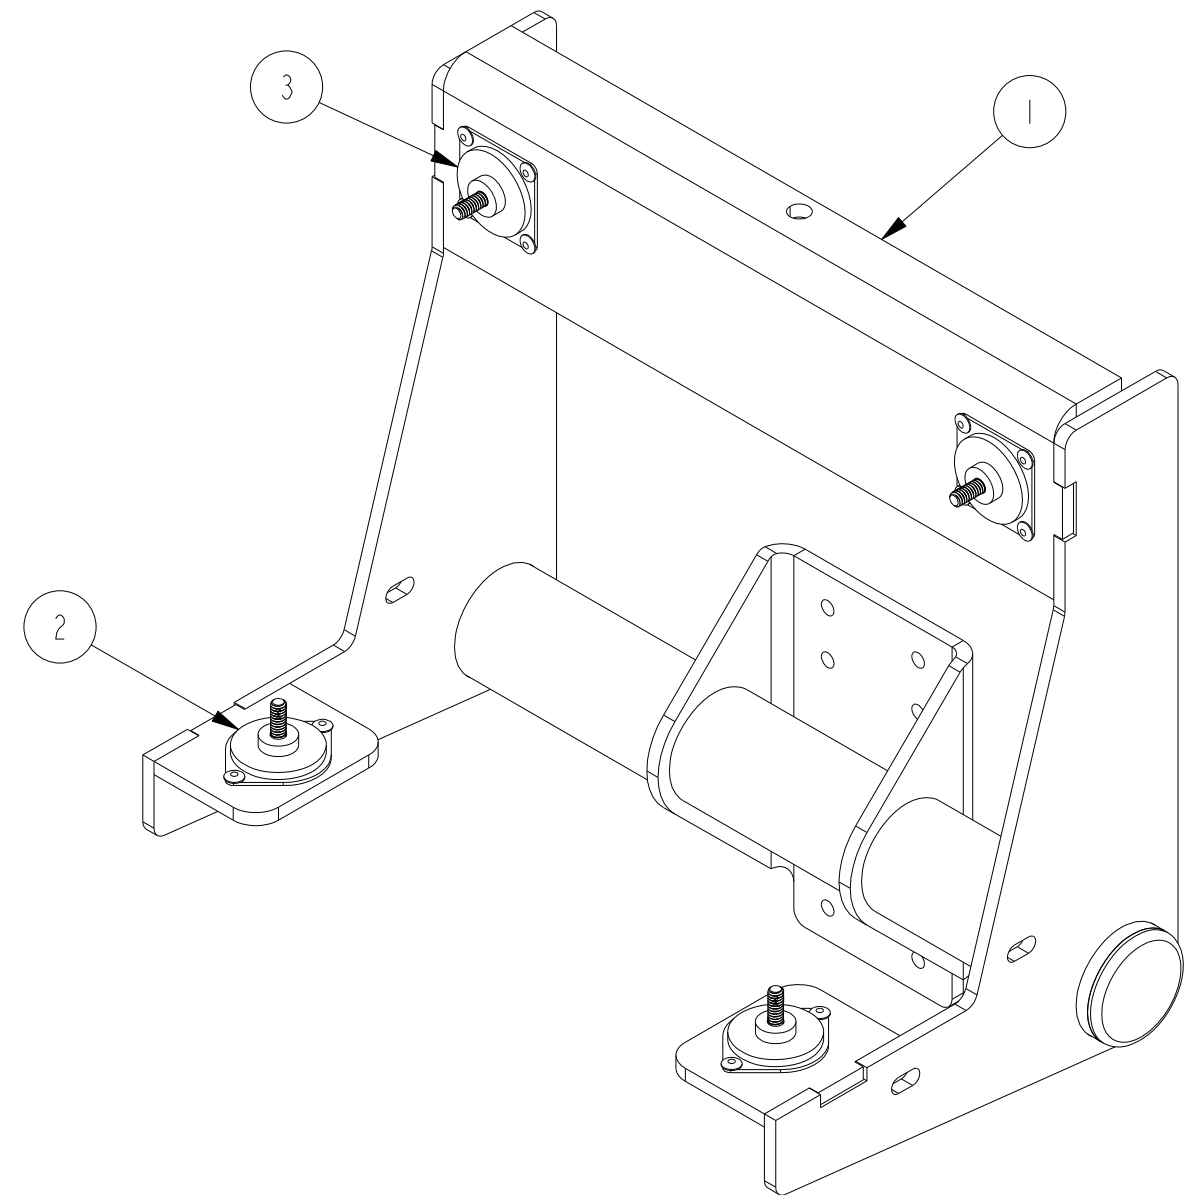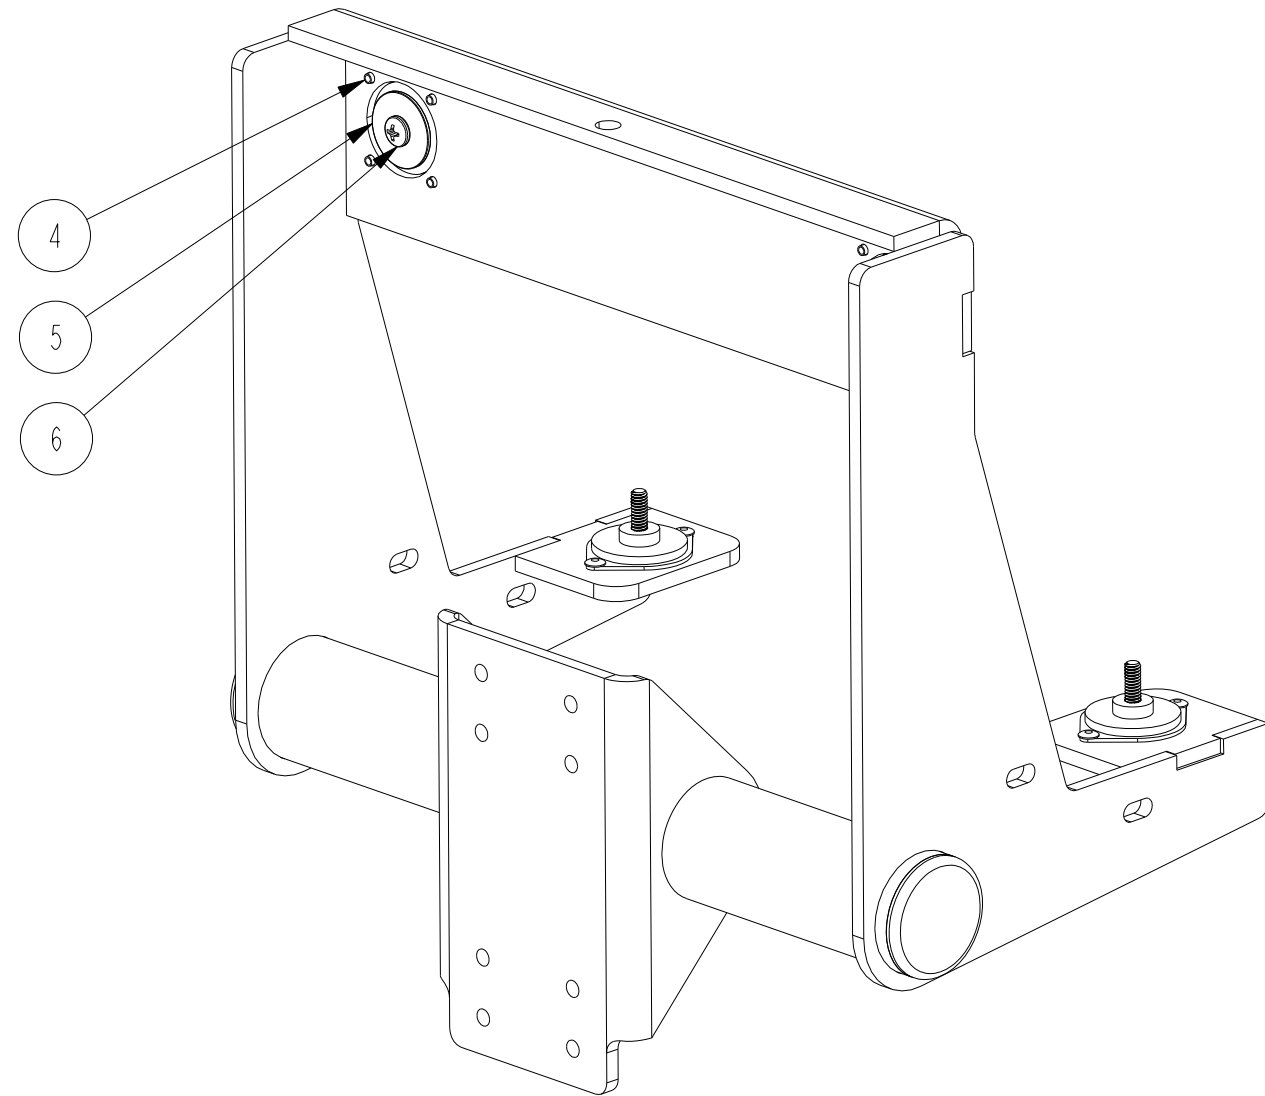

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN




UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	125	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2
		FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
		FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8

ASSEMBLY, CONTROL PANEL MOUNTING
CFP POWER UNITS







DWG UNITS: IN/LB/S	DRAWN BY: S DUBICK PRO-ENGINEER	DATE: 26-SEP-12 INIT ECO: 2012-392
SCALE: 0.333	SHEET 1 OF 1	DRAWING NO: 21249
EST WEIGHT: 16.439		

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

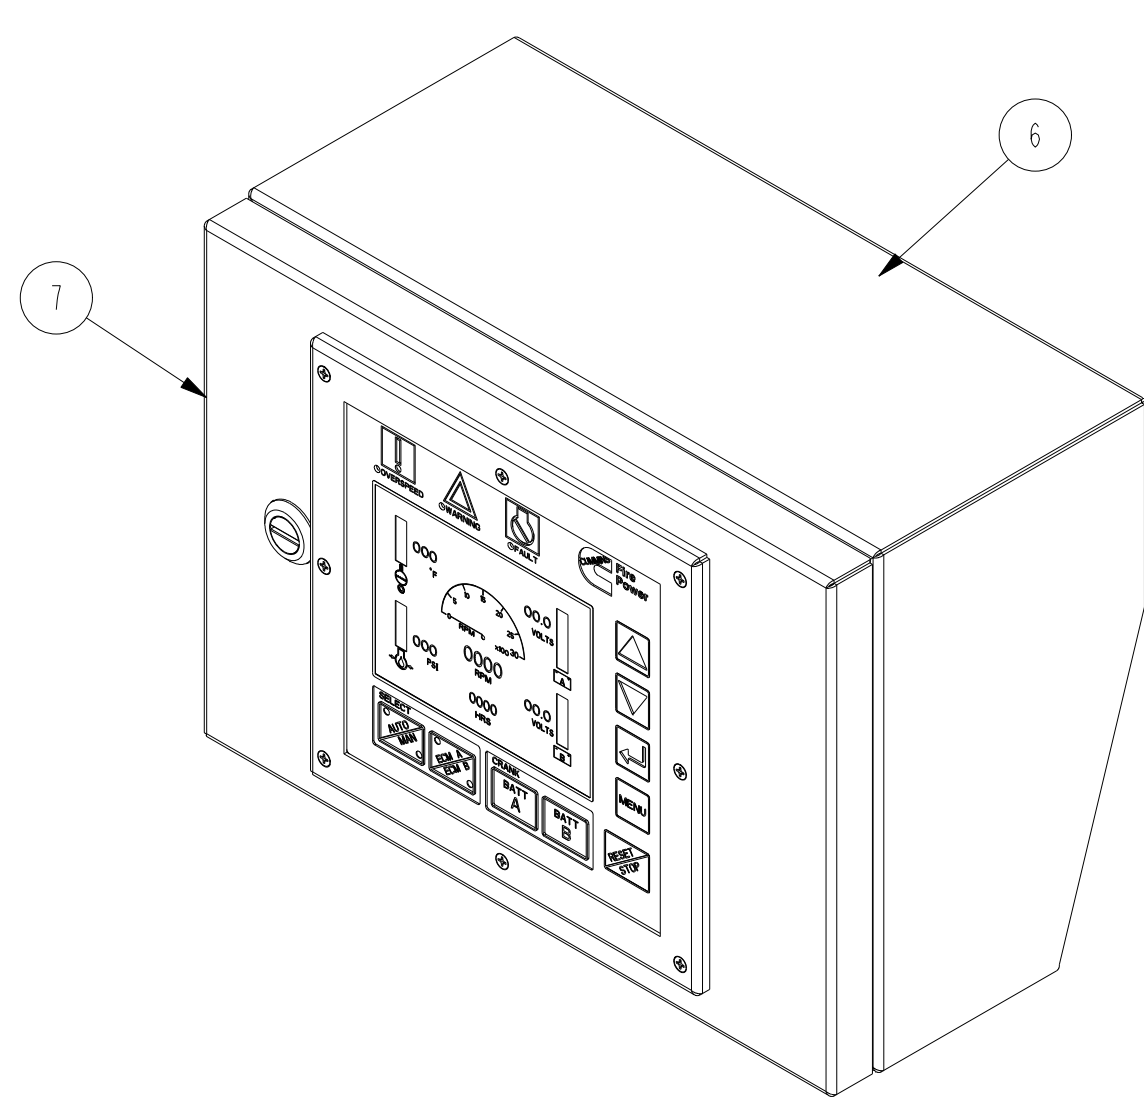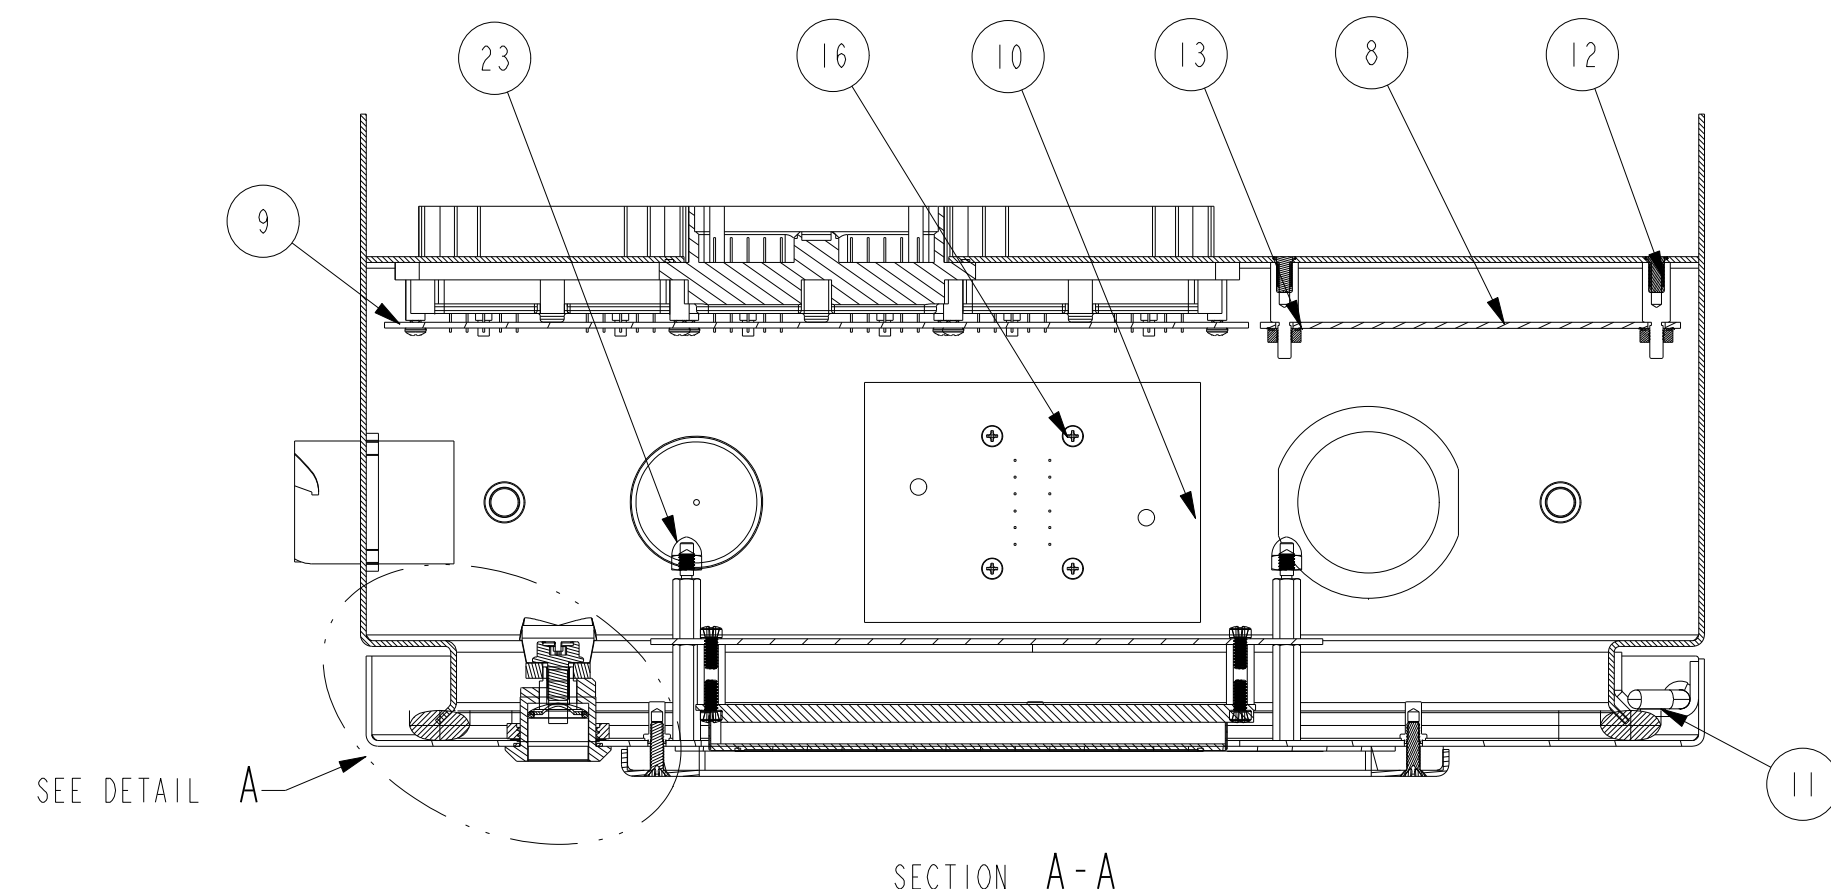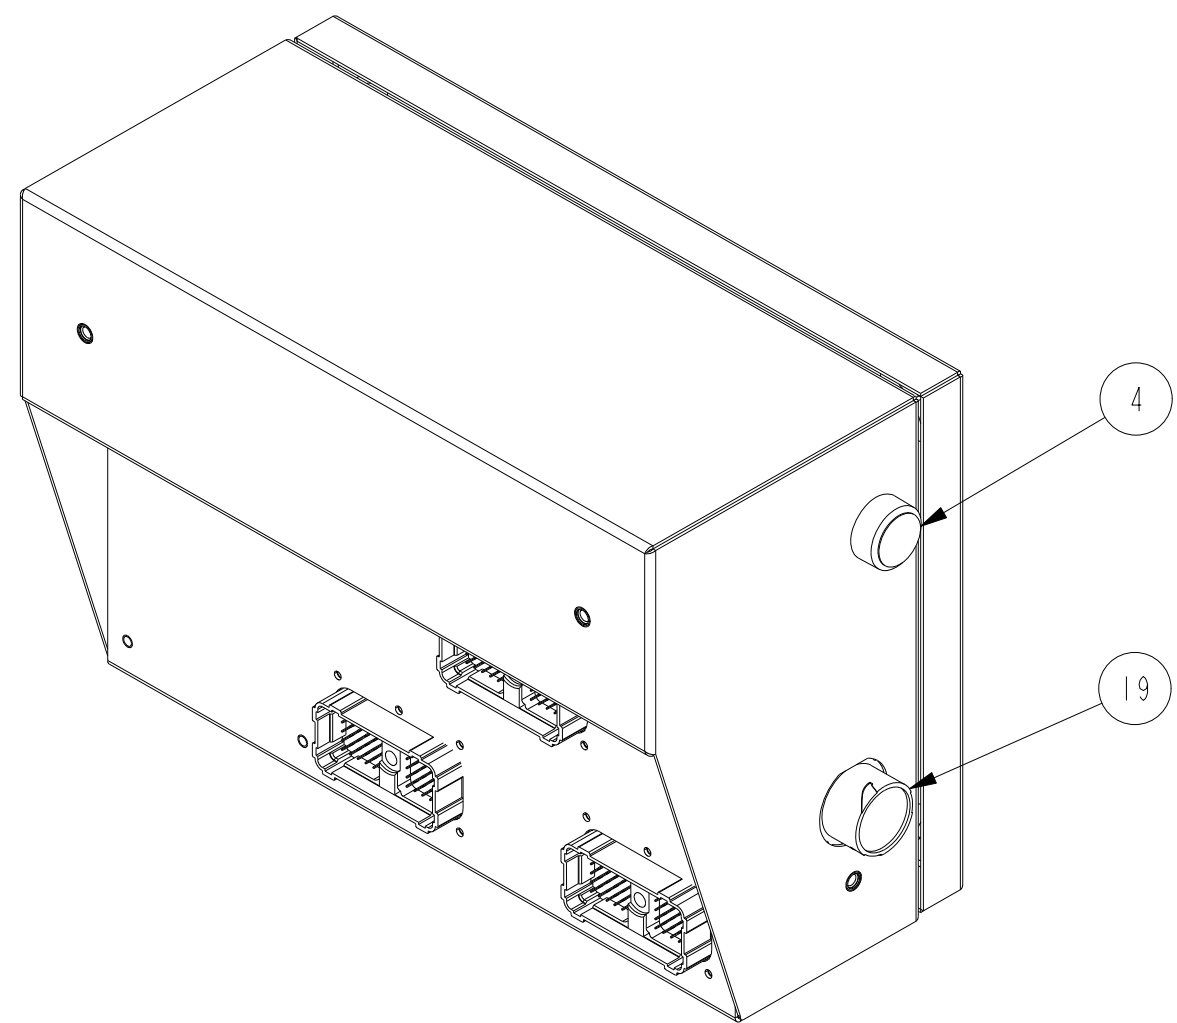

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	ASSY,BULKHEAD WIRING, DIGITAL PANEL, BULKHEAD TO POWER PCB	15156
2	1	CABLE, DIGITAL PANEL, POWER PCB TO DISPLAY PCB	15157
3	1	CABLE, DIGITAL PANEL, POWER PCB TO ECM SWITCH PCB	15158
4	1	ASSY, WIRING, DIGITAL PANEL, ENGINE STOP SWITCH	15160
5	1	DIAGNOSTICS, DIGITAL PANEL, RECEPTACLE AND CABLE	15161
6	1	WELDMT, DIGITAL PANEL, BOX, ELECTRONIC	15569
7	1	ASSEMBLY, DOOR, CONTROL PANEL	15575
8	1	POWER PCB, DIGITAL PANEL, ELECTRONIC	15153
9	1	SWITCH PCB, DIGITAL PANEL, MODULE, ECM	15154
10	1	POWER MODULE ECM, DIGITAL PANEL, ELECTRONIC	15155
11	2	HINGE, ASSEMBLY W/PIN, MILD STEEL, EMKA 1069-U2	15573.02
12	9	STANDOFF HEX M/F, 8-32, ALUM, .63"L	15579
13	9	NUT, 8-32, W/TOOTH WASHER, ZNC -PLTD	15582
14	2	WASHER, 5/32" I.D x 5/16" O.D. x .02TR, STNL STL	15588
15	2	SCREW, 6-19 x 3/8"L, FH PHILIPS HD, STNL STL	15590
16	16	SCREW, 1/4"-20 SELF TAPPING, STNL STL	15591
17	1	RECEPTACLE, W/FLANGE 50 PIN, BLACK, CRC SERIES, DEUTSCH, DRC22-50P01	15593
18	1	RECEPTACLE, PCB MOUNT, 12 PINS STRAIGHT DT-SERIES, DEUTSCH, DT15-12P	15594
19	1	CONNECTOR, RECEPTACLE SQ. FLANGE HD10 SERIES, DEUTSCH, HD10-9-1939P	15596
20	1	RECEPTACLE, W/FLANGE 50 PIN, BLACK, CRC SERIES, DEUTSCH, DRC22-50P03	15599
21	1	PLUG, LIQUID TIGHT, HEYCO, 3837	15645
22	1	RECEPTACLE, W/FLANGE 50 PIN, BLACK, CRC SERIES, DEUTSCH, DRC22-50P02	15657
23	4	NUT, ACORN, SELF-LOCKING, 8-32, 18-8 STNL STL	17149

*** BOM IS FOR REFERENCE ONLY ***

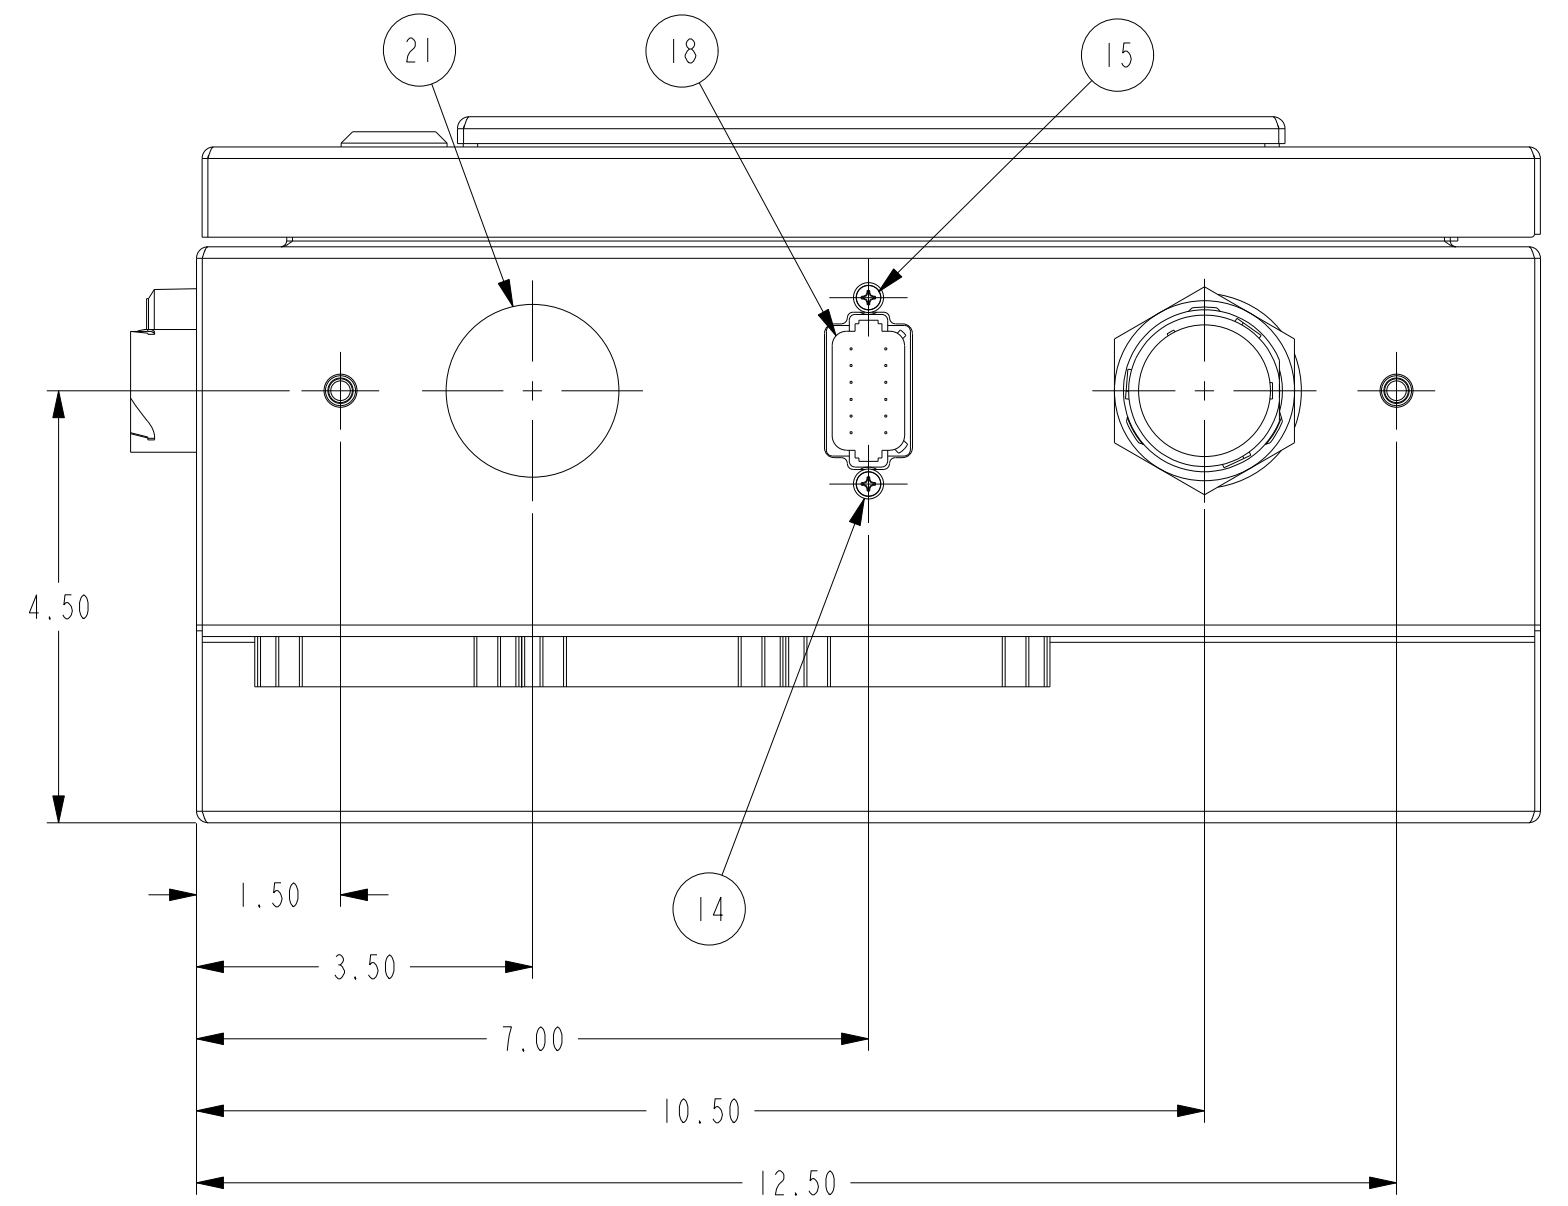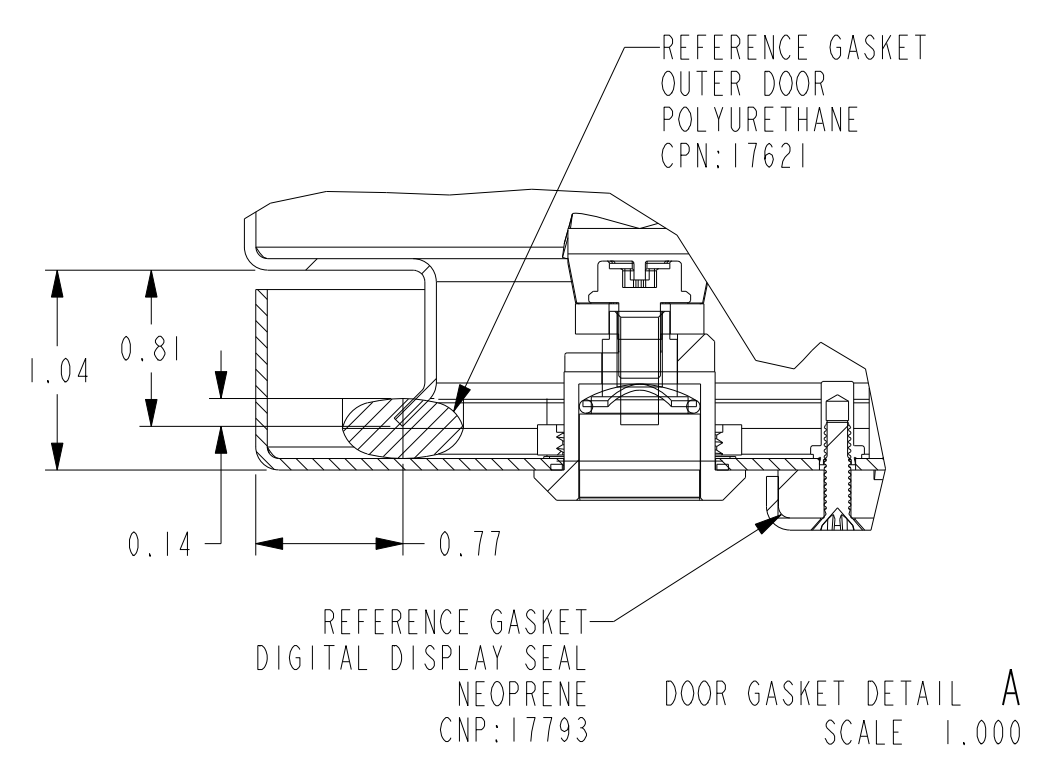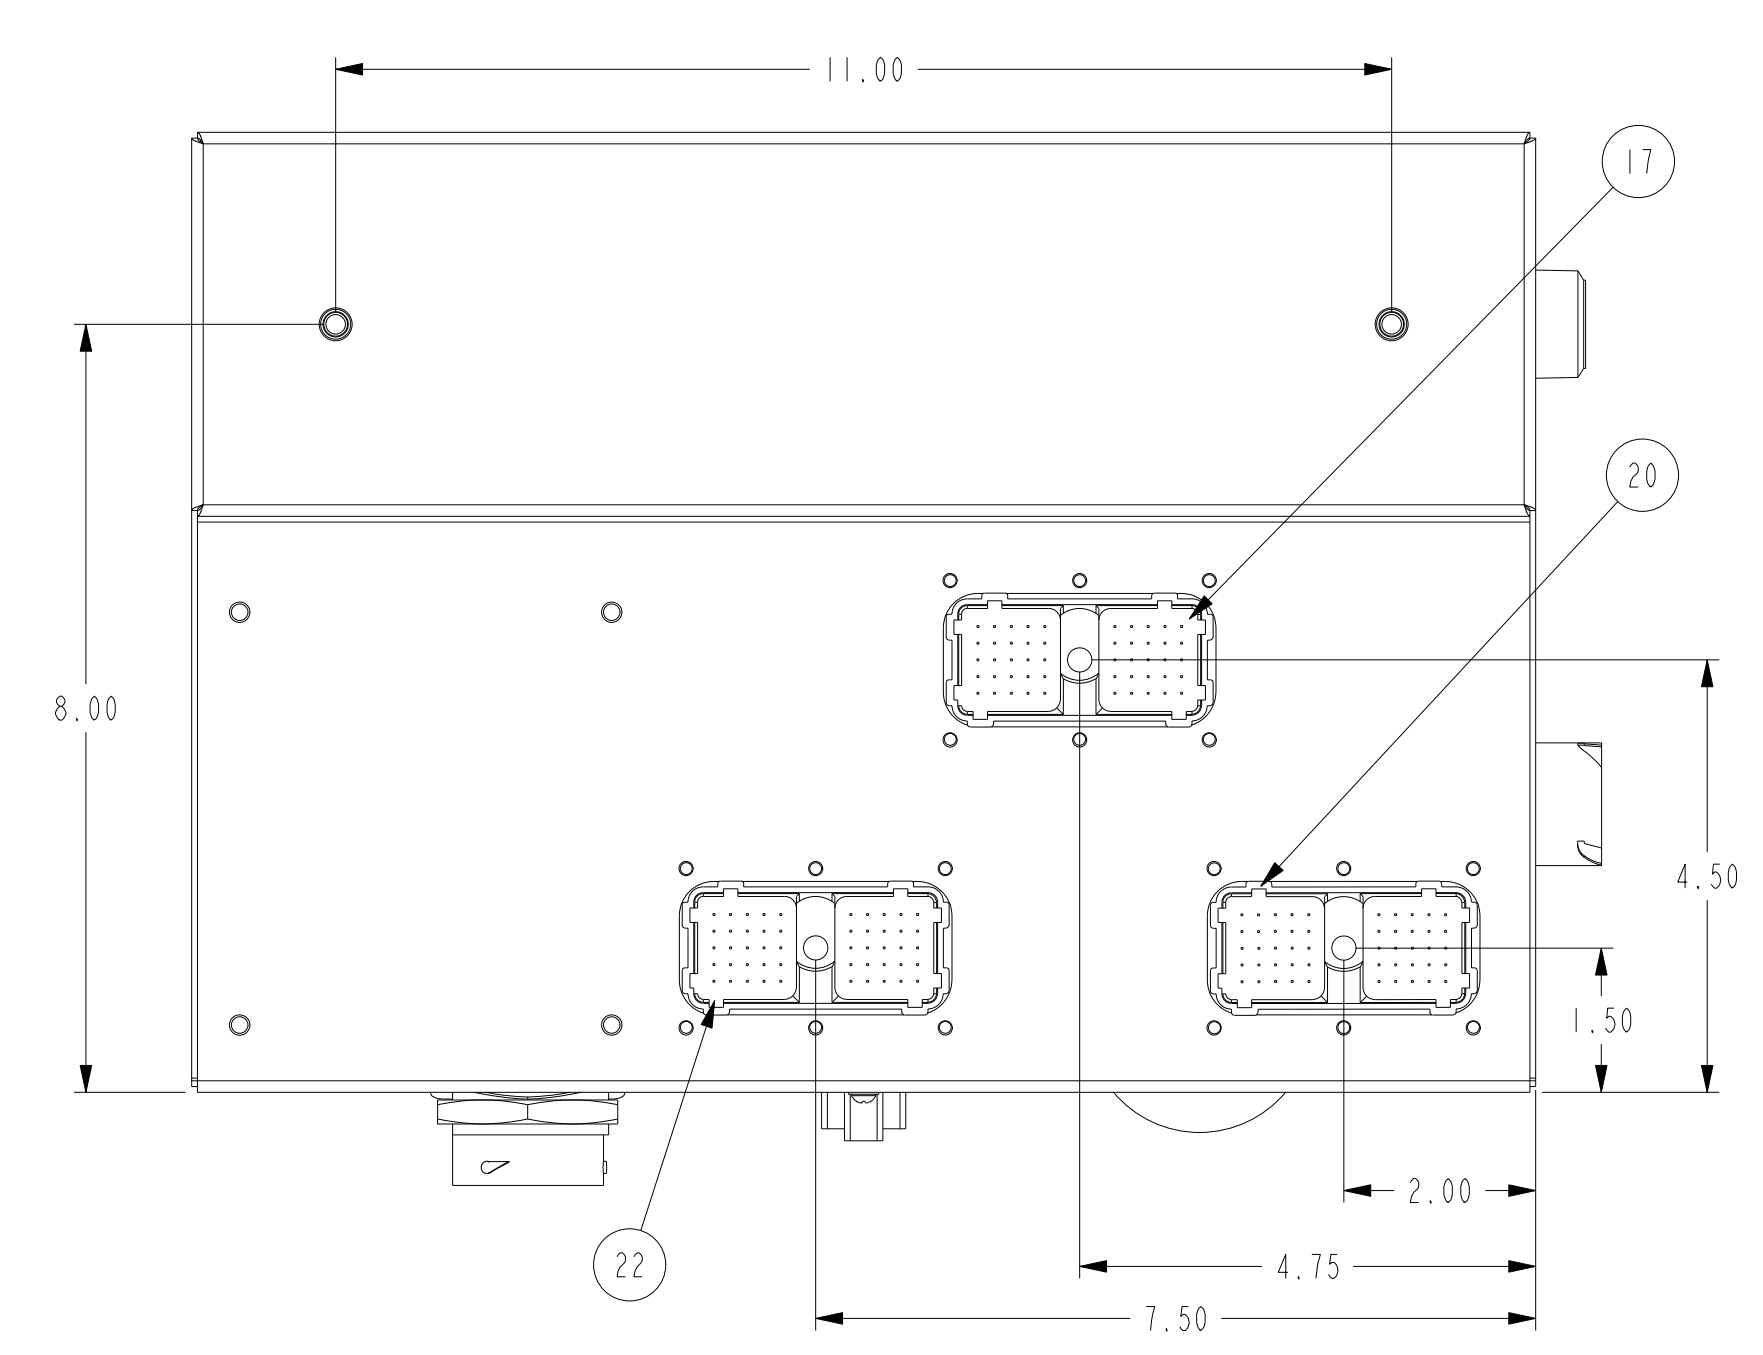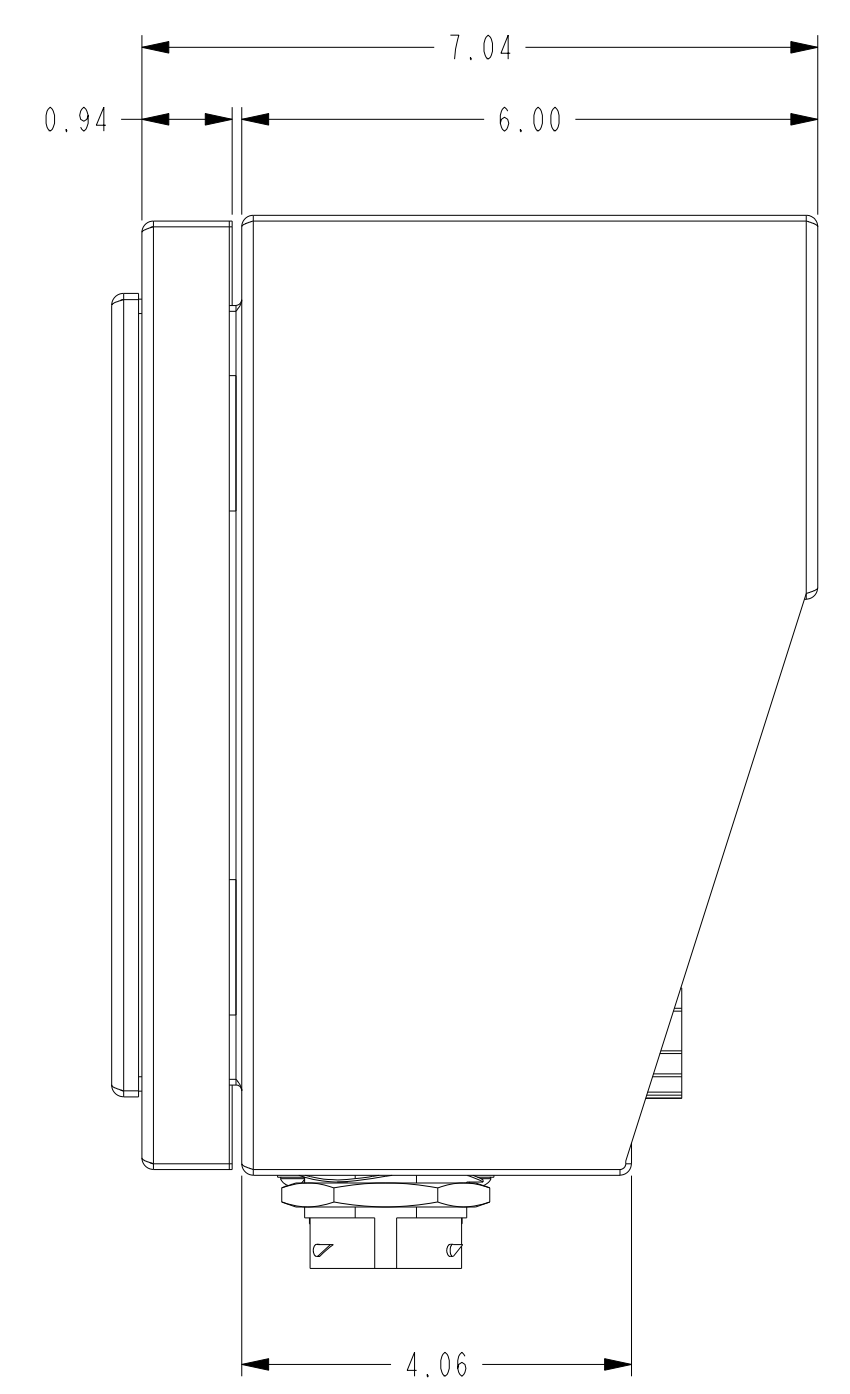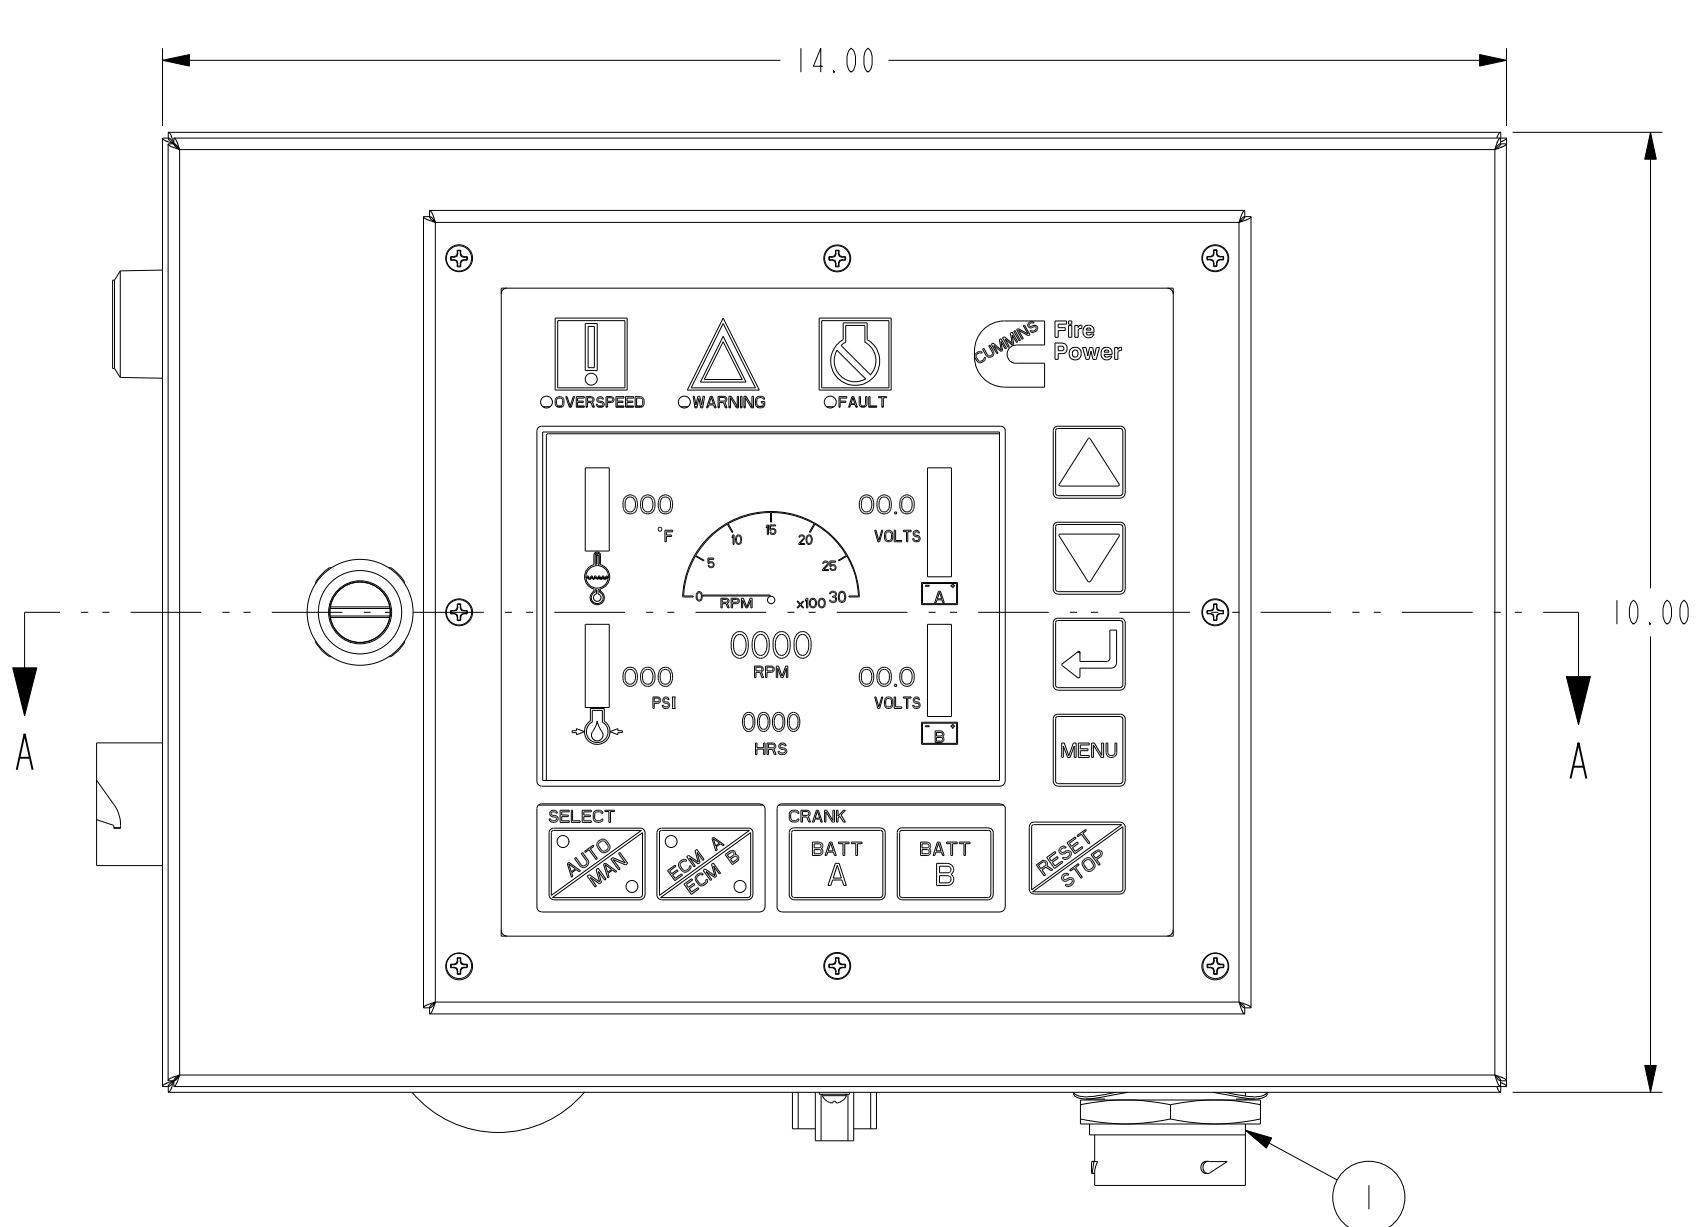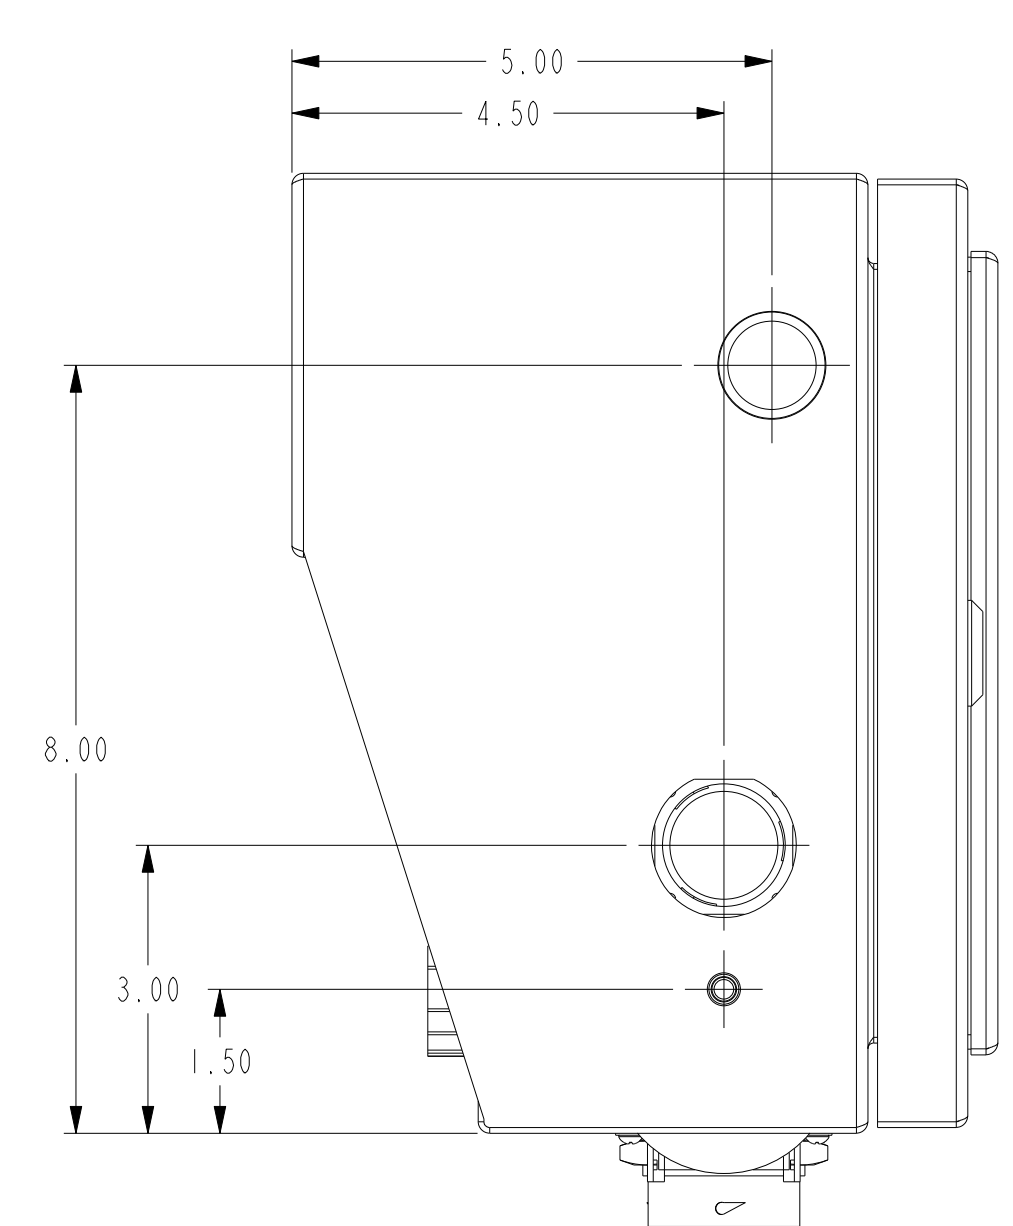

- NOTES:
1. TYPE 4X INDOOR USE CONSTRUCTION
2. UPDATED SOFTWARE

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
ANGULAR DIMENSIONS ± 1°
MACHINED SURFACES: METRIC UNITS: ± 0.125
THIRD ANGLE PROJECTION
IMPERIAL UNITS: ± 0.005
MATERIAL SURFACES: METRIC UNITS: ± 0.125
THIRD ANGLE PROJECTION
IMPERIAL UNITS: ± 0.005

ASSEMBLY, DIGITAL CONTROL PANEL
ELECTRONIC C/P ENGINES

DWG UNITS: IN/LB/S
SCALE: 0.500
EST WEIGHT: 28.994

DRAWN BY: S DUBICK
PRO-ENGINEER
SHEET 1 OF 1

DATE: 21-SEP-12
INIT ECO: 2012-348
DRAWING NO: 22791

REV	DATE	DESCRIPTION OF REVISION	REV BY	DATE
A	2015-001	UPDATED PER DETAILS	PBS	02JAN2014
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

KIT INCLUDES

- A

1) 15222 HARNESS, WIRE, SENSOR AND ACTUATOR
- C

B

2) 15223 HARNESS, WIRE, ECM A
- B

3) 15224 HARNESS, WIRE, ECM B
- A

4) 23017 HARNESS, WIRE, POWER
- D

C

B


A


5) 23925 HARNESS, WIRE, INTERFACE

D	2014-867	HARNESS 23925 ADDED VARIABLE SPEED SEALING PLUG	BG	23DEC2014
C	2014-780	HARNESS 23925 ADJUSTED LENGTHS PER MANUFACTURING REQUEST.	BG	10NOV2014
B	2014-108	HARNESS 15223,15224,23017 & 23925: ADJUSTED LENGTHS	RMJ	11MAR2014
A	2013-386	HARNESS 23925: ADDED MPU AND COOLING LOOP SENSOR CONNECTORS	BG	7JUN2013
REV	ECO	DESCRIPTION OF REVISION	BY	DATE





This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

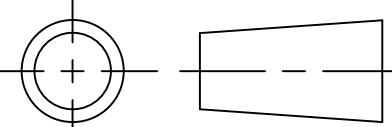
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE


ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
	MACHINE TOLERANCES .XX = ± 0.010 .XXX = ± 0.005 FORM TOLERANCES .X = ± 0.030 .XXX = ± 0.015 FAB TOLERANCES .XX = ± 0.080 .XXX = ± 0.030	MACHINE TOLERANCES .X = ± 0.4 .XX = ± 0.2 FORM TOLERANCES .X = ± 0.8 .XX = ± 0.4 FAB TOLERANCES .X = ± 1.5 .XX = ± 0.8


	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN	<h2 style="margin: 0;">KIT, WIRE HARNESSES QSB4.5 FIRE PUMP DRIVER, LH OPERATION</h2>
	DWG UNITS: INCH/LB/S	DRAWN BY: BG <b style="font-size: 10px;">AUTO CAD	
SCALE: EST WEIGHT:	SHEET 1 OF 1		DRAWING NO: 23924

KIT INCLUDES

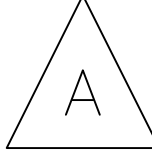-  1) 15712 HARNESS, WIRE, SENSOR AND ACTUATOR
- 2) 15713 HARNESS, WIRE, ECM A
-  3) 15714 HARNESS, WIRE, ECM B
-  4) 23938 HARNESS, WIRE, POWER
-  5) 23929 HARNESS, WIRE, INTERFACE


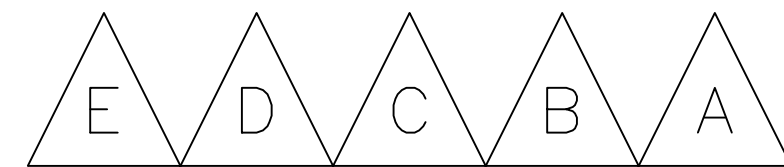


E	2014-867	HARNESS 23929: ADDED VARIABLE SPEED SEALING PLUG	BG	23DEC2014	This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. ©COPYRIGHT Cummins Fire Power LLC		CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
D	2014-732	HARNESS 23929: MOVED COOLING LOOP TEMP BRANCH	BG	15OCT2014				
C	2014-496	HARNESS 23929: EXTENDED MPU BRANCH LENGTH	BG	15JULY2014				
B	2014-108	HARNESS 23929: ADJUSTED LENGTHS	RMJ	11MAR2014				
A	2013-386	HARN 23929: ADDED MPU & COOLING LOOP SENSR CONNECTORS HARN: 15714, & 23938: ADJUSTED LENGTHS	BG	7JUN2013				
REV	ECO	DESCRIPTION OF REVISION	BY	DATE				

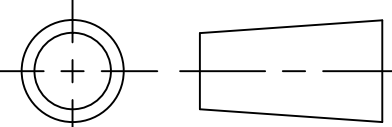
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE		
ANGULAR DIMENSIONS ± 1'	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION 	MACHINE TOLERANCES .XX = ± 0.010 .XXX = ± 0.005 FORM TOLERANCES .XX = ± 0.030 .XXX = ± 0.015 FAB TOLERANCES .XX = ± 0.080 .XXX = ± 0.030	MACHINE TOLERANCES .X = ± 0.4 .XX = ± 0.2 FORM TOLERANCES .X = ± 0.8 .XX = ± 0.4 FAB TOLERANCES .X = ± 1.5 .XX = ± 0.8

KIT, WIRE HARNESSES QSB6.7 FIRE PUMP DRIVER, LH OP			
DWG UNITS: INCH/LB/S	DRAWN BY: BG AUTO CAD	DATE: 21MAR2013 INIT ECO: 2013-165	
SCALE:	SHEET 10F1	DRAWING NO: 23928	
EST WEIGHT:			


TAGS	QTY	SUB	CATALOG	MFG	DESC
1	1	6"	WL10-9	WAYTEK	WIRE, GXL, WHITE, 10 AWG
2	1	1	32706	WAYTEK	TERMINAL, RING, 1/2", 10 AWG, INSULATED
3	1	14"	WC00-0	WAYTEK	CABLE, WELDING, 2/0 AWG, BLACK
4	4	1	36534	WAYTEK	TERMINAL, EYELET, HEAVY DUTY, 3/8", 2/0 AWG, NON-INSULATED
5	1	15"	WC00-0	WAYTEK	CABLE, WELDING, 2/0 AWG, BLACK
6	1	1	WC90397-1	LTL	4GA, GROUND STRAP (CNP PART NUMBER 9757)
7	1	1	32702	WAYTEK	TERMINAL, RING, 10 STUD, 10 AWG, INSULATED

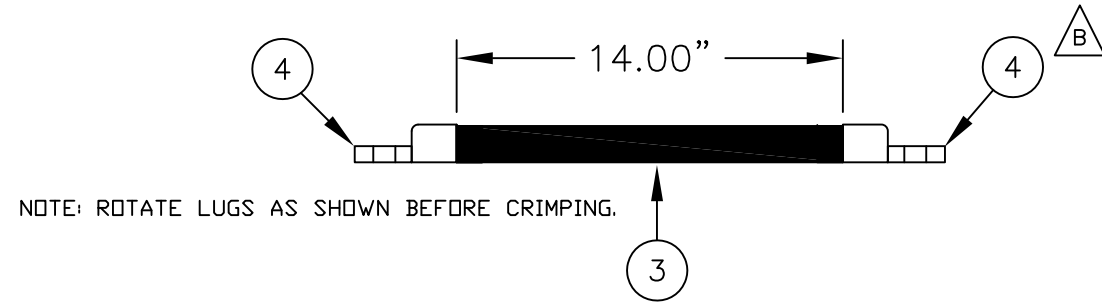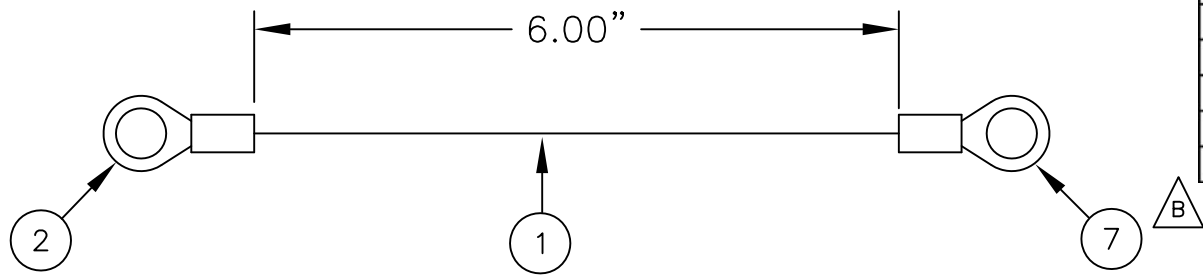

NOTE: ROTATE LUGS AS SHOWN BEFORE CRIMPING.

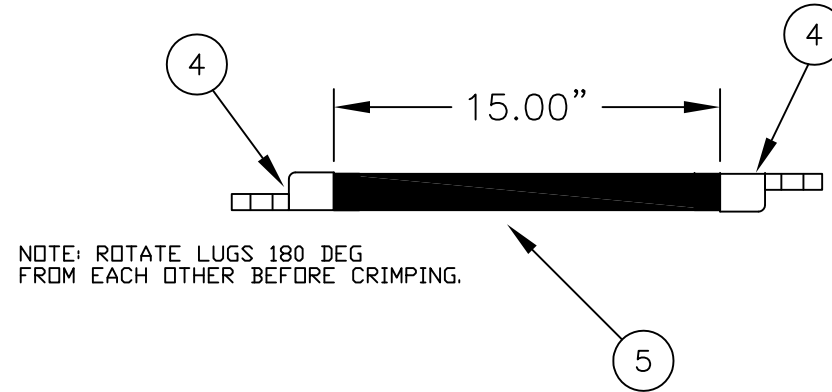

NOTE: ROTATE LUGS 180 DEG FROM EACH OTHER BEFORE CRIMPING.

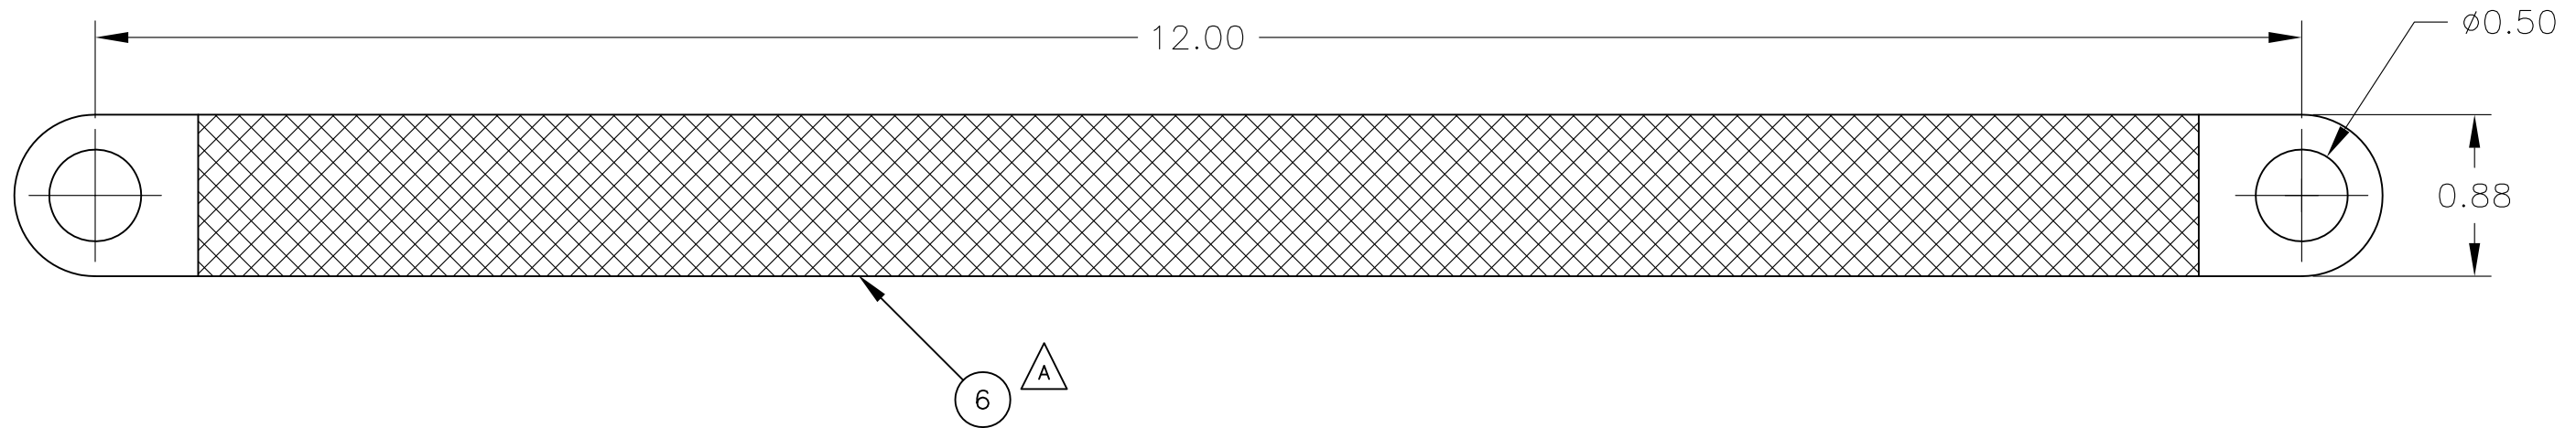

- NOTES: 1) USE RED HEAT SHRINK ON ALL BATTERY CABLE TERMINALS.
2) COMPONENTS MAY BE SUBSTITUTED AS LONG AS FIT, FORM, FUNCTION AND REGULATORY STANDARDS ARE MET OR EXCEEDED.

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND
UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

CABLES, BATTERY
CFP5E, 7E, 9E, 11E

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE		
ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES XX = ± 0.010 XX = ± 0.015	MACHINE TOLERANCES X = ± 0.4 XX = ± 0.2
	FORM TOLERANCES XX = ± 0.020 XXX = ± 0.015	FORM TOLERANCES X = ± 0.8 XX = ± 0.4
	FAB TOLERANCES XX = ± 0.020 XXX = ± 0.030	FAB TOLERANCES X = ± 1.2 XX = ± 0.8

DWG UNITS: INCH/LB/S	DRAWN BY: BG AUTO CAD	DATE: 16 JAN 2013
SCALE:	SHEET 10F1	DRAWING NO: 24234
EST WEIGHT:		

REV	ECO	DESCRIPTION OF REVISION	BY	DATE
B	2014-528	14" WIRE HAD A BURNDY YAV2CLTC12FX90 ON ONE END. 6" WIRE HAD AN AMP 52717-2 ON ONE END	PBS	06FEB2014
A	2014-076	ADDED 9757	PBS	06FEB2014

BILL OF MATERIAL

ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	CONTACTOR, MANUAL OVERRIDE, 12V, PN:535-0127, FIREPUMP	8824-12
2	1	CONTACTOR, MANUAL OVERRIDE, 24V, PN:535-0098, FIREPUMP	8824-24

1 2 3 4 5 6 7

PRO0010

DESIGN APPROVAL DATE UNspecified TOLERANCES
 DES.ENG. J.W. ±.005
 MFG.ENG. J. Machine Finish ±.010
 Q.C. Angles √125 Max.
 SALES Concentricity ±.1
 Squariness .001 per in.

This Drawing is the property of the Dumore Corporation. It must not be reproduced or copied without written permission.

PART NO. 535-0127
DUMORE CORPORATION
 1030 VETERANS ST. MAUSTON, WI 53948

DO NOT SCALE DRAWING REMOVE ALL BURRS BREAK SHARP CORNERS
 TITLE ASSEMBLY, SOLENOID

MATERIAL SPEC: Rec. per Piece Pattern No. RECEIVED AS DWG. BY CTH DATE 7/19/01 SCALE 1:2
 Q.C. BY DATE

REVISIONS
 RELEASED ECN # 25159 7/19/01 CTH

THE 535-0127 SOLENOID ASSEMBLY MUST BE INSTALLED IN A NEMA 2 ENVIRONMENT

ELECTRICAL SPECIFICATIONS
 VOLTS: 12 VDC
 CONTACT RATING: 400 AMPS (ROLLING CURRENT)
 800 AMPS (BREAKAWAY CURRENT)
 DUTY TYPE: INTERMITTENT
 CONTACT POSITION: NORMALLY OPEN

WHERE USED

3.00 ± .06
 2.34 ± .03
 17° - 20°
 5.74
 2.65 ± .03
 .275
 .255 TYP (4)
 .50 1.75
 6.00 ± .03

30° 30°
 10-32 UNF-2A THREAD TYP.(2)
 3/8-16 UNC-2A THREAD TYP.(2)
 U.L. & FACTORY MUTUAL DECAL.
 1.99 ± .03 TYP.
 1.90
 .354
 .334
 1.50
 3.00
 3.63 ± .03
 4.88 ± .06
 .28

ITEM:1 - 8824-12

1 2 3 4 5 6 7

SP4847

DESIGN APPROVAL DATE UNspecified TOLERANCES
 DES.ENG. J.W. ±.005
 MFG.ENG. J. Machine Finish ±.010
 Q.C. Angles √125 Max.
 SALES Concentricity ±.1
 Squariness .001 per in.

This Drawing is the property of the Dumore Corporation. It must not be reproduced or copied without written permission.

PART NO. 535-0098
DUMORE CORPORATION
 1030 VETERANS ST. MAUSTON, WI 53948

DO NOT SCALE DRAWING REMOVE ALL BURRS BREAK SHARP CORNERS
 TITLE ASSEMBLY, SOLENOID

MATERIAL SPEC: Rec. per Piece Pattern No. RECEIVED AS DWG. BY MED DATE 2/16/89 SCALE 1:2
 Q.C. BY DATE 8/13/91

REVISIONS

THE 535-0098 SOLENOID ASSEMBLY MUST BE INSTALLED IN A NEMA 2 ENVIRONMENT

ELECTRICAL SPECIFICATIONS
 VOLTS: 24 VDC
 CONTACT RATING: 400 AMPS (ROLLING CURRENT)
 800 AMPS (BREAKAWAY CURRENT)
 DUTY TYPE: INTERMITTENT
 CONTACT POSITION: NORMALLY OPEN

30° 30°
 10-32 UNF-2A THREAD TYP.(2)
 3/8-16 UNC-2A THREAD TYP.(2)
 U.L. & FACTORY MUTUAL DECAL.
 1.99 ± .03 TYP.
 1.90
 .354
 .334
 1.50
 3.00
 3.63 ± .03
 4.88 ± .06
 .28

3.00 ± .06
 2.34 ± .03
 17° - 20°
 5.74
 2.65 ± .03
 .275
 .255 TYP (4)
 .50 1.75
 6.00 ± .03

ITEM:2 - 8824-24

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

Cummins Fire Power

CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUERKLE ROAD
 WHITE BEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND UPFIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN


MANUAL SOLENOID

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE -

ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES .XX ± 0.010 .XX ± 0.005 FOM TOLERANCES .XX ± 0.020 .XX ± 0.015 FAB TOLERANCES .XX ± 0.080 .XX ± 0.030	MACHINE TOLERANCES .XX ± 0.2 .XX ± 0.1 FOM TOLERANCES .XX ± 0.4 .XX ± 0.3 FAB TOLERANCES .XX ± 1.0 .XX ± 0.8

DWG UNITS: IN/LB/S DRAWN BY: CMC DATE: 12JUNE2004
PRO-ENGINEER INIT ECO: -
 SCALE: 1.000 SHEET 1 OF 1 DRAWING NO: 8824
 EST WEIGHT: 42238.628

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
A	2011-068	UPDATED DRAWING FORMAT ADDED CNP LABEL TO PDF DRAWING	MAC	18FEB2011

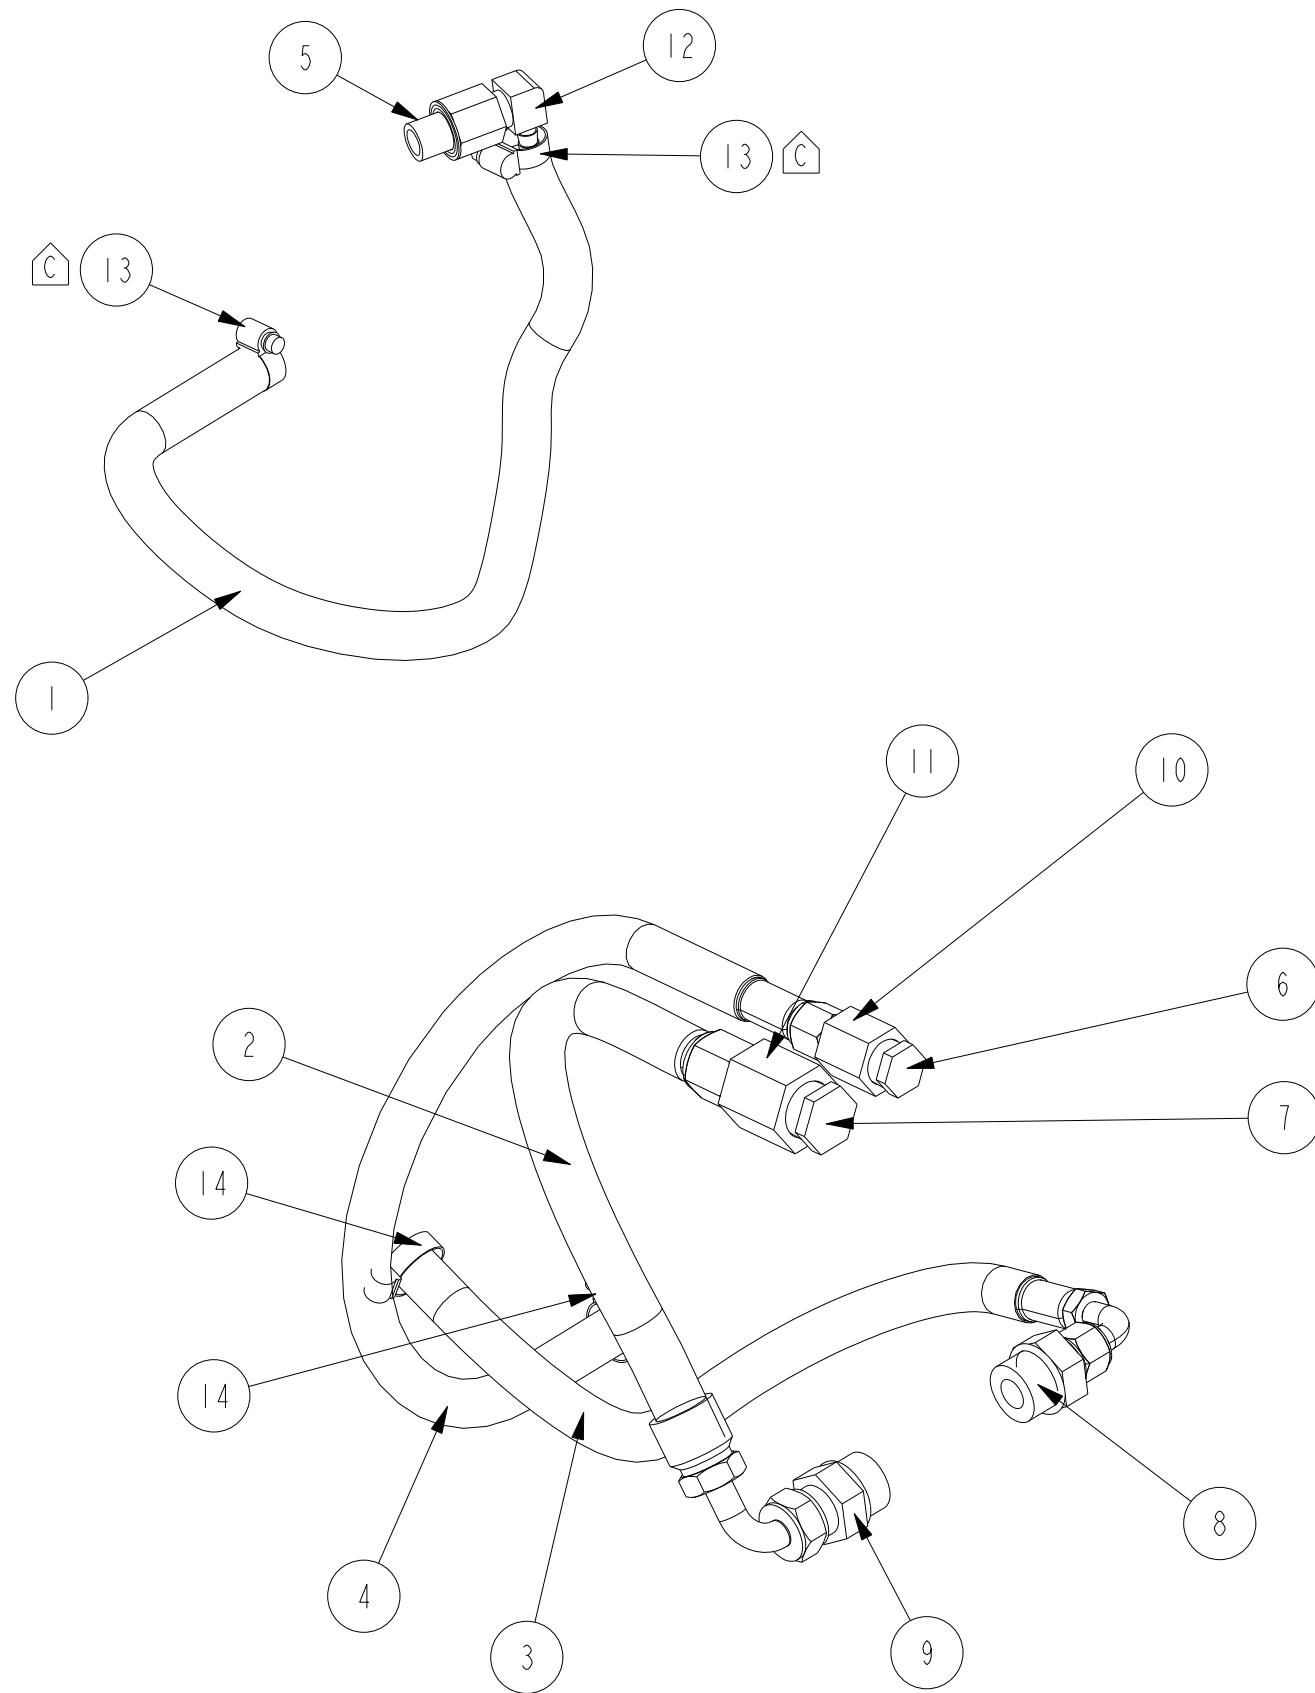

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, FUEL LINE, 221FR-5 X 20" LG, NO ENDS	14398
2	1	ASSEMBLY, HOSE, FUEL LINE, CFP5E SUPPLY	15263
3	1	ASSEMBLY, HOSE, FUEL LINE, CFP5E JUMPER	15264
4	1	ASSEMBLY, HOSE, FUEL LINE, CFP5E RETURN	15265
5	1	FTG, STR, M14 ORR X -4 FNPT	12181-M14-4
6	1	PLUG, PIPE, -6 NPT	12210-6
7	1	PLUG, PIPE, -8 NPT	12210-8
8	1	FTG, STR, -6 JIC X -10 ORB	12235-6-10
9	1	FTG, STR, -8 JIC X -10 ORB	12235-8-10
10	1	FTG, STR, -6 JIC X -6 FMNPT	12240-6-6
11	1	FTG, STR, -8 JIC X -8 FMNPT	12240-8-8
12	1	ELB, 90 DEG, -4 BARB X -4 NPT	12546-4-4
13	2	CLAMP, WORM, .25 - .63	14992-04
14	2	CLAMP, WORM, .31 - .88	14992-06

C NOTE: ADD THREAD SEALANT TO ALL NPT THREADS.

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

KIT, FUEL LINES, CFP5E
F10/20/30/40/50 - EXT ONLY


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1° IMPERIAL UNITS METRIC UNITS

THIRD ANGLE PROJECTION	MACHINE TOLERANCES .XX ± 0.010 .XX ± 0.005	MACHINE TOLERANCES .X ± 0.2 .X ± 0.1
	FORM TOLERANCES .XX ± 0.010 .XX ± 0.015	FORM TOLERANCES .X ± 0.8 .X ± 0.4
	FAB TOLERANCES .XX ± 0.080 .XX ± 0.030	FAB TOLERANCES .X ± 1.5 .X ± 0.8

DWG UNITS: IN/LB/S	DRAWN BY: DAN PRO-ENGINEER	DATE: 10-JUL-09 INIT ECO:
SCALE: 0.375	SHEET 1 OF 1	DRAWING NO: 15203
EST WEIGHT: 453.615		

C	2011-054	ADD NOTE, UPDATE COMPONENT	S DUBICK	29-APR-11
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

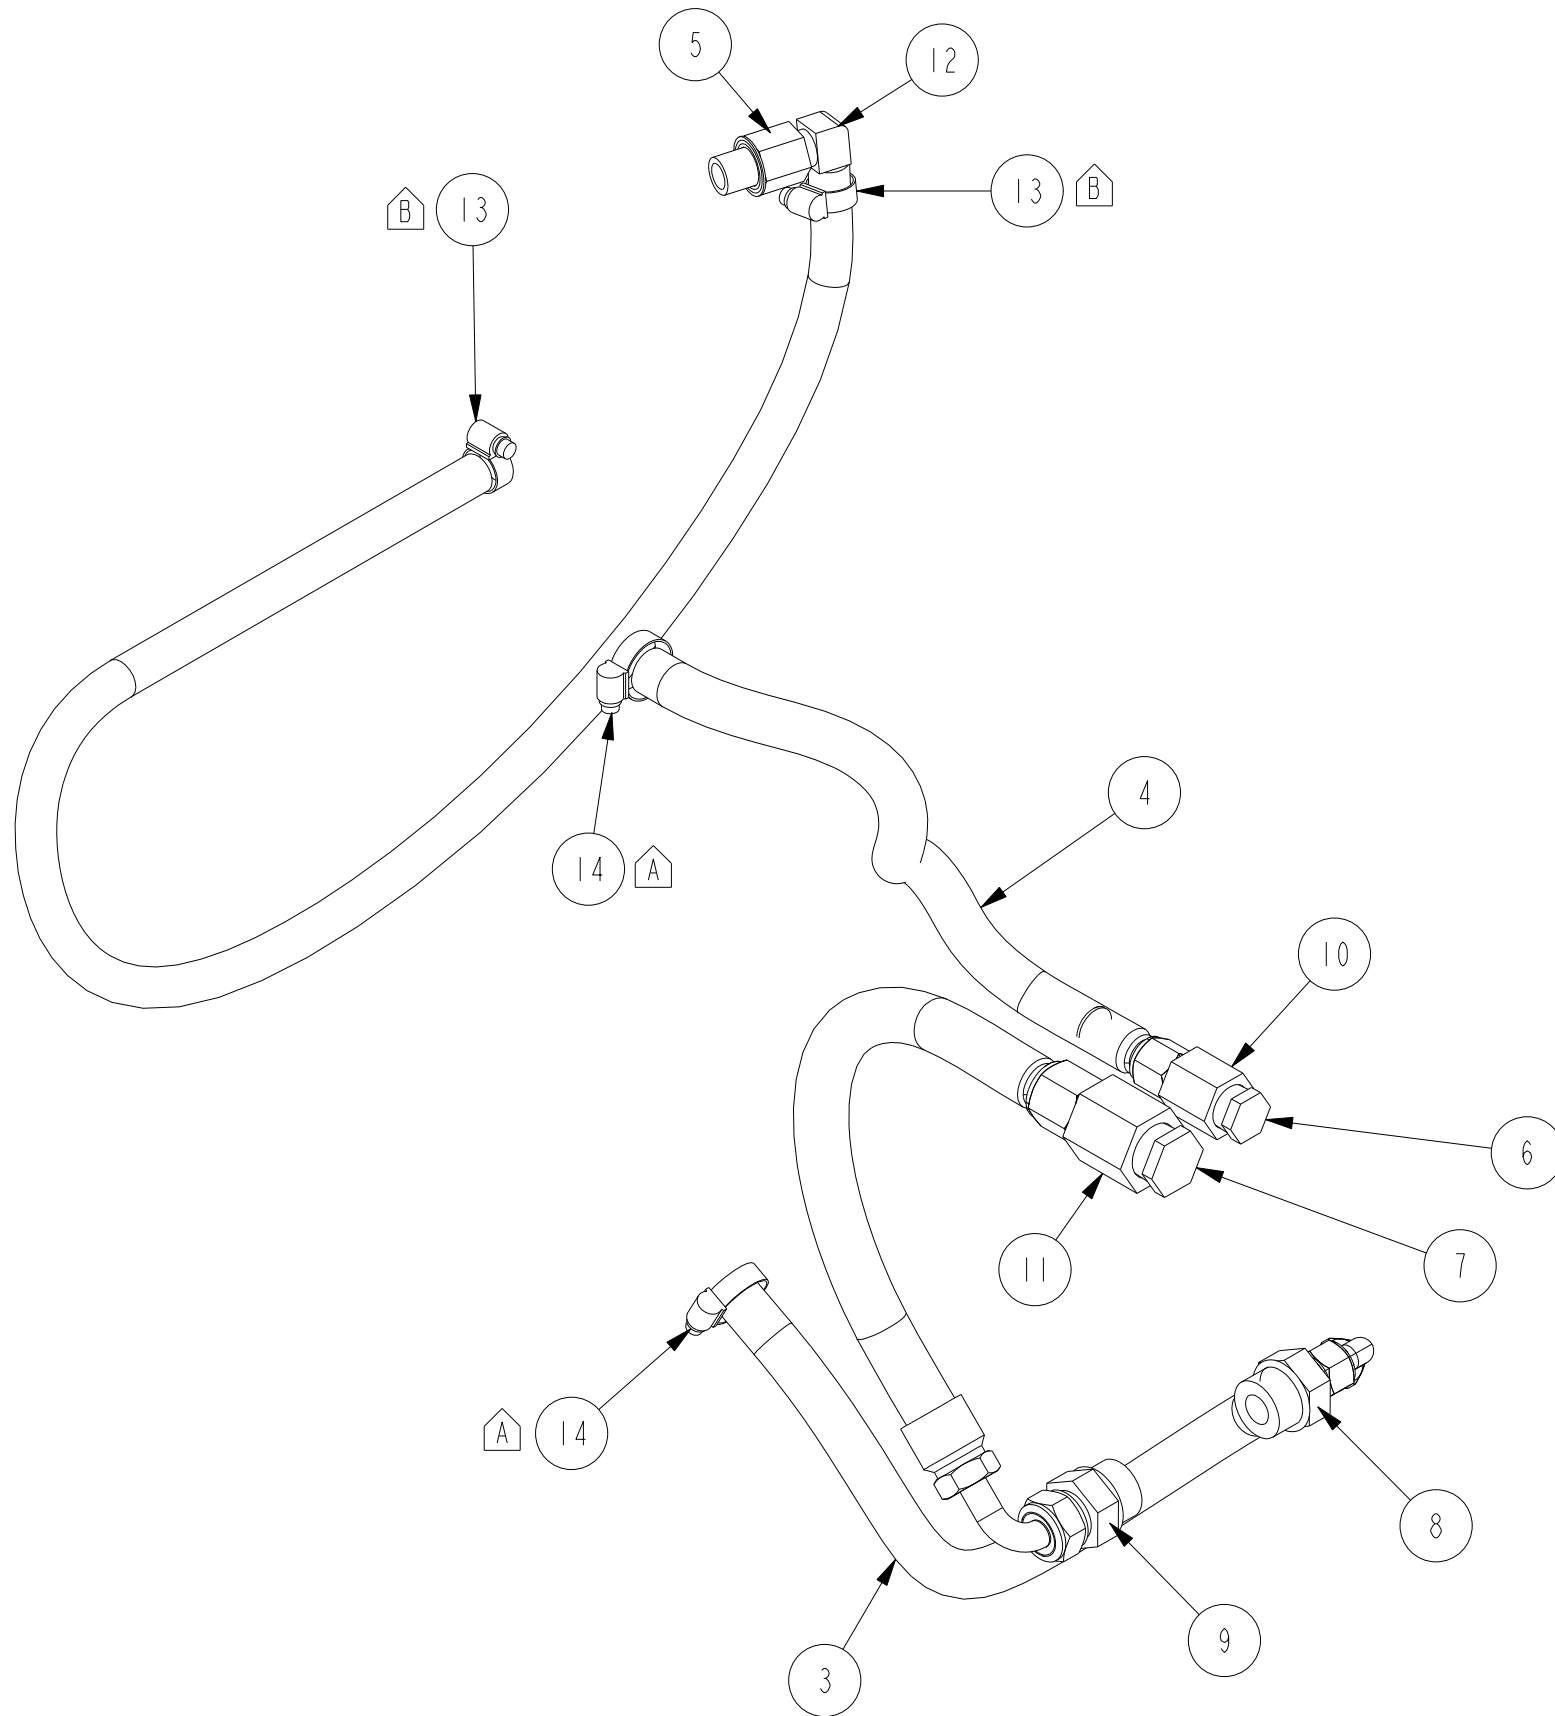

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	FUEL LINE, 22IFR-5 X 31" LG, NO ENDS	14395
2	1	ASSEMBLY, HOSE, FUEL LINE, CFP7E SUPPLY	15270
3	1	ASSEMBLY, HOSE, FUEL LINE, CFP7E JUMPER	15271
4	1	ASSEMBLY, HOSE, FUEL LINE, CFP7E RETURN	15272
5	1	FTG, STR, M14 ORR X -4 FNPT	12181-M14-4
6	1	PLUG. PIPE, -6 NPT	12210-6
7	1	PLUG. PIPE, -8 NPT	12210-8
8	1	FTG, STR, -6 JIC X -10 ORB	12235-6-10
9	1	FTG, STR, -8 JIC X -10 ORB	12235-8-10
10	1	FTG, STR, -6 JIC X -6 FMNPT	12240-6-6
11	1	FTG, STR, -8 JIC X -8 FMNPT	12240-8-8
12	1	ELB, 90 DEG, -4 BARB X -4 NPT	12546-4-4
13	2	CLAMP, WORM, .25 - .63	14992-04
14	2	CLAMP, WORM, .31 - .88	14992-06

B NOTE: ADD THREAD SEALANT TO ALL NPT THREADS.

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC




CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

D	2016-312	REMOVED: 133042000	PBS	19APR2016
C	2014-076	ADDED: 133042000	PBS	06FEB2014
B	2011-055	ADD NOTE PER SIX SIGMA UPDATE COMPONENT	S DUBICK	04-MAY-11
A	2010-114	CLAMP 14992-06 WAS 14990-06	DAN	16-MAR-10
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE		
ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES ±.010 ±.005 FORM TOLERANCES ±.010 ±.015 FAB TOLERANCES ±.010 ±.030	MACHINE TOLERANCES ±.1 ±.0.2 FORM TOLERANCES ±.1 ±.0.4 FAB TOLERANCES ±.1 ±.0.8

KIT, FUEL LINES, CFP7E F10/20/30/40/50/60 - EXT ONLY		
DWG UNITS: IN/LB/S	DRAWN BY: DAN PRO-ENGINEER	DATE: 10-JUL-09 INIT ECO:
SCALE: 0.375	SHEET 1 OF 1	DRAWING NO: 15206
EST WEIGHT: 19.372		

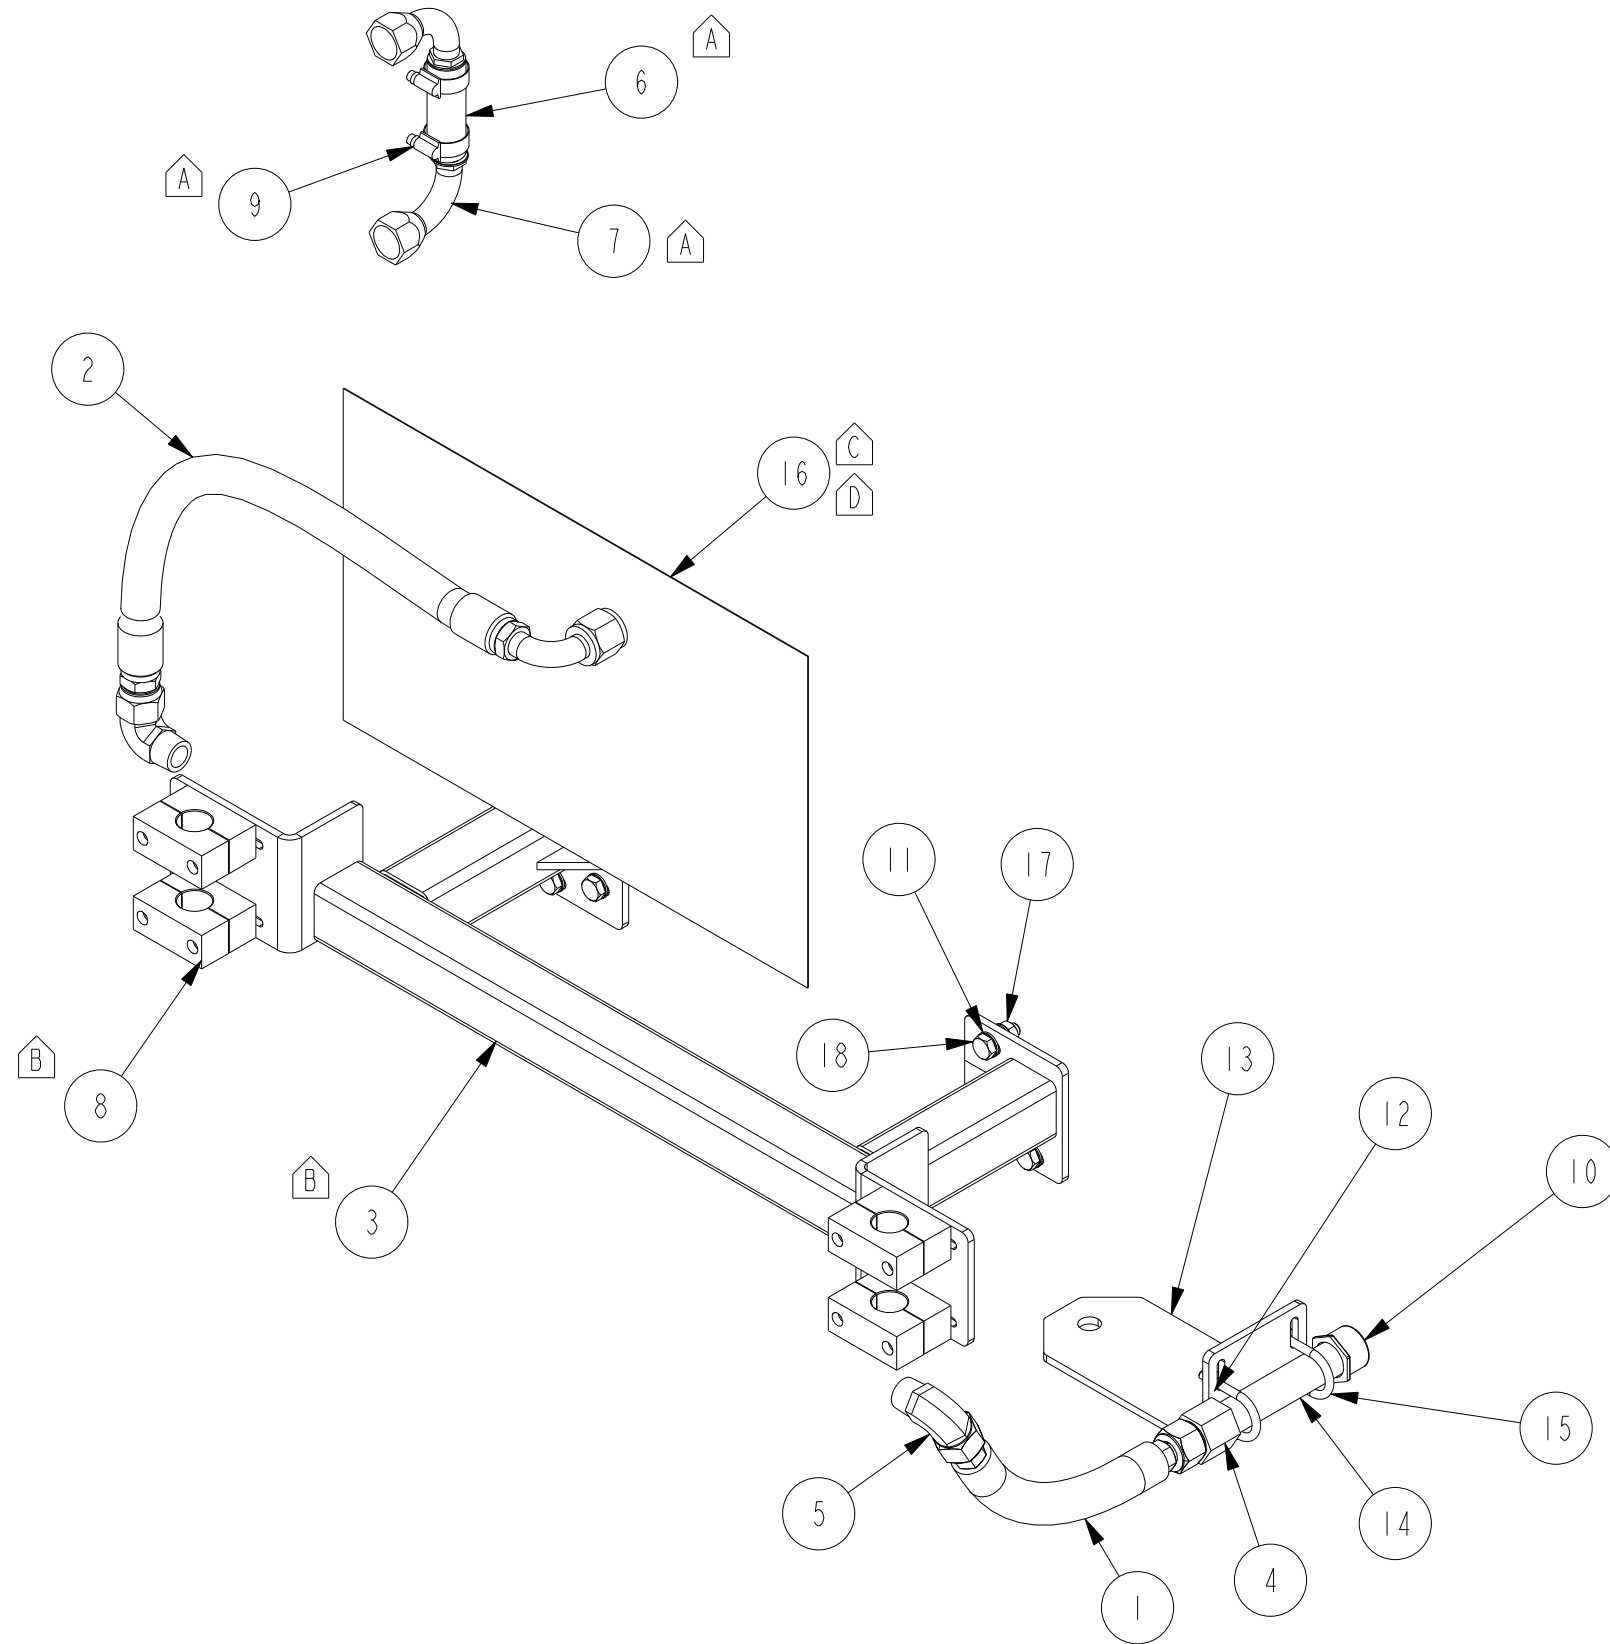







BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, ISOLATED COOLING LOOP	15299
2	1	HOSE, COOLING LOOP TO CAC, CFP5E	26159
3	1	BRACKET, COOLING LOOP, CFP5E	A042B375
4	1	FTG, STR, -12 JIC X -12 FMNPT	12240-12-12
5	2	ELB, 90 DEG, -12 JIC X -12 NPT	12270-12-12
6	1	HOSE, 3/4" I.D., HEATER (DAYCO), 4" LENGTH (80242GL)	13257
7	2	HOSE END, 90, -12 JIC X -12 HS	14591-12-12
8	4	CLAMP, PIPE, 3/4", PLASTIC	14926-03
9	2	CLAMP, WORM, .88 - 1.25	14990-12
10	1	CAP, PVC, NPT FEMALE, 3/4" NPT	16663-12
11	12	WASHER, FLAT, M10	20020-M10
12	4	WASHER, FLAT, SMALL, 0.25	20010-025
13	1	BRACKET, PIPE SUPPORT, ISOLATED FIRE PUMP	26134
14	1	NIPPLE, BLK, 3/4x6	71550
15	2	U-BOLT, 1-1/8" OD PIPE, W/NUTS	3201T13
16	1	DECAL, VALVE POSITION, RAW WATER LOOP, CFP15E	A042D485
17	6	NUT, HEX, PT, M10-1.50	20140-M10
18	6	SCREW, HH, M10-1.50x30	20310-030

NOTE:
1. REFERENCE DRAWING 26105 FOR INSTALLATION ON THE POWER UNIT

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
D	2014-874	A042D485 WAS 25350	PBS	30DEC2014
C	2014-806	ADDED 25350	JJW	20NOV2014
B	2014-239	DELETED 26133. 3201T13 WAS QTY 4 ADDED A042B375 AND 14926-03	PBS	20MAY2014
A	2014-076	ADDED 14591-12-12, 13257, 14990-12	PBS	05MAR2014

<small>This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC</small>				CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM		CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN	
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE							
ANGULAR DIMENSIONS ± 1° THIRD ANGLE PROJECTION		MACHINED SURFACES 		IMPERIAL UNITS .XX ± 0.010 .XXX ± 0.005 FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015 FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030		METRIC UNITS .X ± 0.4 .XX ± 0.2 FORM TOLERANCES .X ± 0.8 .XX ± 0.4 FAB TOLERANCES .X ± 1.0 .XX ± 0.8	
DWG UNITS: IN/LB/S		DRAWN BY: PBS PRO-ENGINEER		DATE: 08AUG2013 INIT ECO: 2013-458		SCALE: 0.180 EST WEIGHT: 42238.628	
SHEET 1 OF 1				DRAWING NO: 26132			

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	HOSE, COOLING LOOP TO CAC, CFPSE	26159
2	1	DECAL, COOLANT LOOP LABEL, VERTICAL MTG, ENGLISH	A042A453
3	1	ELB, 90 DEG, -12 JIC X -12 NPT	12270-12-12
4	1	HOSE, 3/4" I.D., HEATER (DAYCO), 4" LENGTH (80242GL)	13257
5	2	HOSE END, 90, -12 JIC X -12 HS	14591-12-12
6	2	CLAMP, WORM, .88 - 1.25	14990-12
7	1	WASHER, FLAT, 0.31	20000-031
8	8	WASHER, FLAT, M10	20020-M10
9	4	WASHER, FLAT, SMALL, 0.25	20010-025
10	1	SCREW, HH, 0.31-18x1.00	20231-100
11	2	BRACKET, MOUNTING, COOLING LOOP, 10" STAND OFF	26133
12	1	CLAMP, LOOM, 1.00 ID	26964-16
13	2	U-BOLT, 1-1/8" OD PIPE, W/NUTS	3201T13
14	4	NUT, HEX, PT, M10-1.50	20140-M10
15	1	NUT, HEX, 0.31-18	20100-031
16	4	SCREW, HH, M10-1.50x30	20310-030

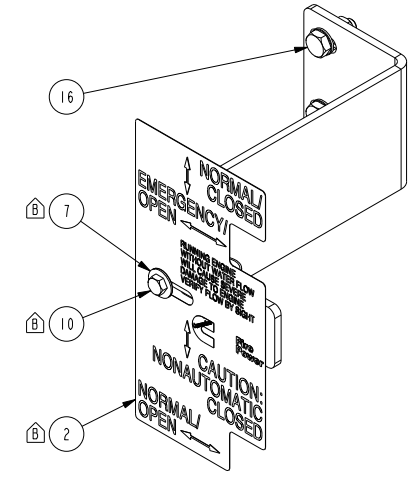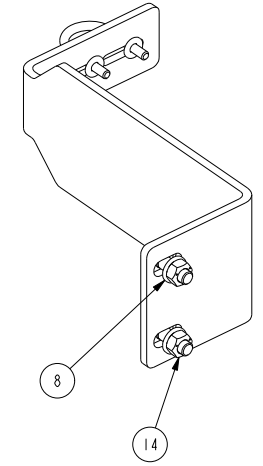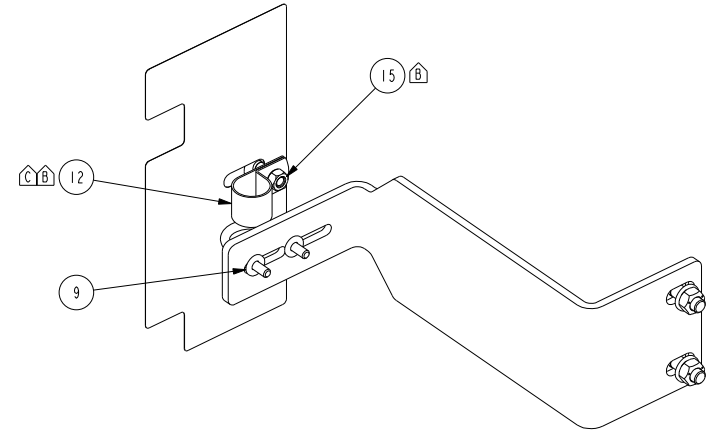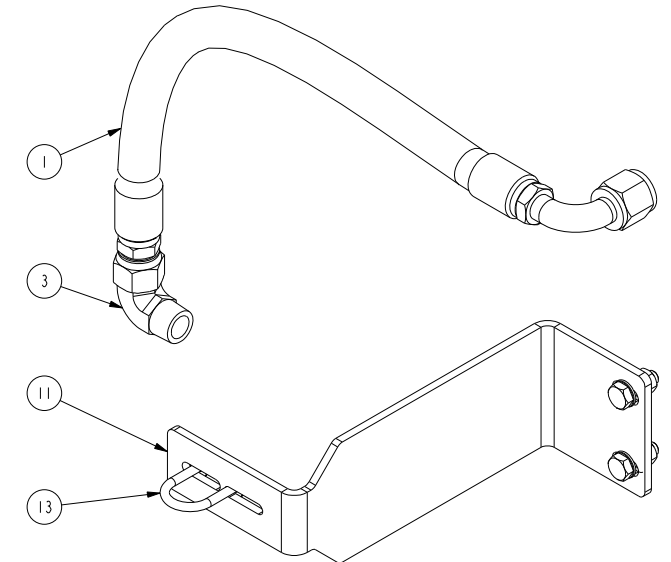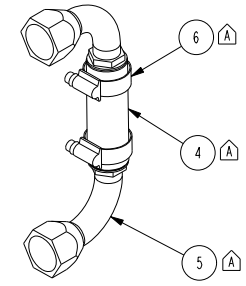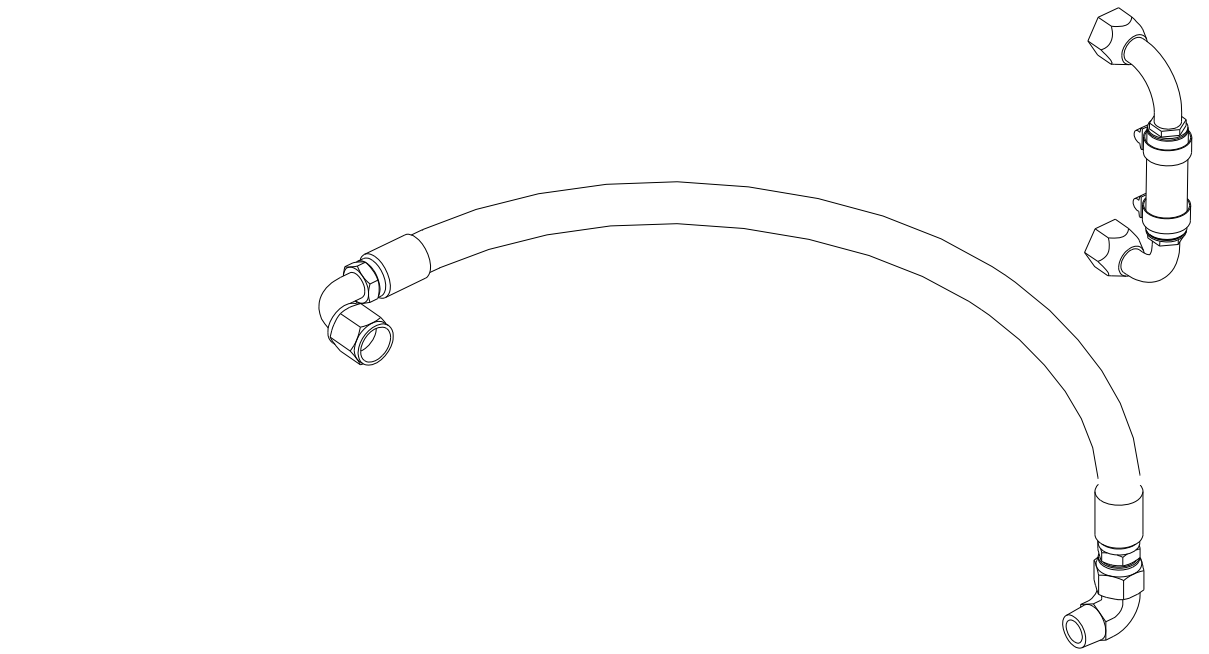

NOTE:
1. REFERENCE DRAWING 26105 FOR INSTALLATION ON THE POWER UNIT


This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is loaned to the recipient for use only. The recipient shall not disclose, disseminate, or otherwise make available to any third party the information contained herein, and shall return this document to the sender upon completion of the project. If you are not the intended recipient, you should not disseminate, distribute, or copy this document. If you have received this document in error, please notify the sender immediately by email at firepower@cummins.com or by phone at 1-800-451-7273. Thank you for your cooperation.

Fire Power CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUECKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE	UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE	ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS	DWG UNITS:	SCALE:	EST WEIGHT:	SHEET	DRAWING NO:
C	2016-152	REPLACED 14554 W/ 26964-16	KMS	07MAR2016						IN/LB/S	0.400	42238.628	1 OF 1	26261
B	2014-806	ADDED A042A453, 14554, 20000-031, 20231-100 & 20100-031	JJW	20NOV2014						IN/LB/S				
A	2014-076	ADDED 14591-12-12, 13257, 14990-12	PBS	05FEB2014						IN/LB/S				
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE						IN/LB/S				

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	VALVE, BALL, 3/4"NPT, BRASS, LOCKABLE	21504
2	1	SENDER, TEMPERATURE, DATCON #02022-00	8862
3	2	REGULATOR, 3/4" NPT, 400 PSI MAX, 25 TO 75 PSI OUT	8890
4	2	STRAINER, 3/4" NPT W/ PLUG	8891
5	1	GAUGE, PRESSURE, 1/4" NPT, DPG1-2 1/2, 0-100 PSI, (WATTS)	8892
6	1	CROSS, 3/4"NPT, STEEL, SCHEDULE 40 PIPE	21519
7	2	SENSOR, 300PSI, 1/8"NPT, VEETHREE-977035	21574
8	2	VALVE, 3/4" NPT CHECK, VALUE ADDED: CV075	25502
9	4	BUSHING, 3/4" NPT X 1/4" NPT, -	71494
10	4	NIPPLE, BLK, 3/4x6	71550
11	1	VALVE, BALL, 1/4" NPT FEMALE	A0420838
12	1	NIPPLE, 1/4" NPT x 1 1/2", BLK STEEL	LTL-CPN14112
13	10	NIPPLE, BLK, 3/4x1-1/2	LTL-CPN34
14	1	ELBOW, BLK, 3/4" NPT, 90 DEG.	LTL-E3490
15	2	PLUG, 1/2 NPT	LTL-SCSP12
16	3	REDUCER BUSHING, HEX, 1/4 x 1/8, BLK STEEL	LTL-SRB1418
17	4	TEE, BLACK PIPE, 3/4" NPT	LTL-ST34

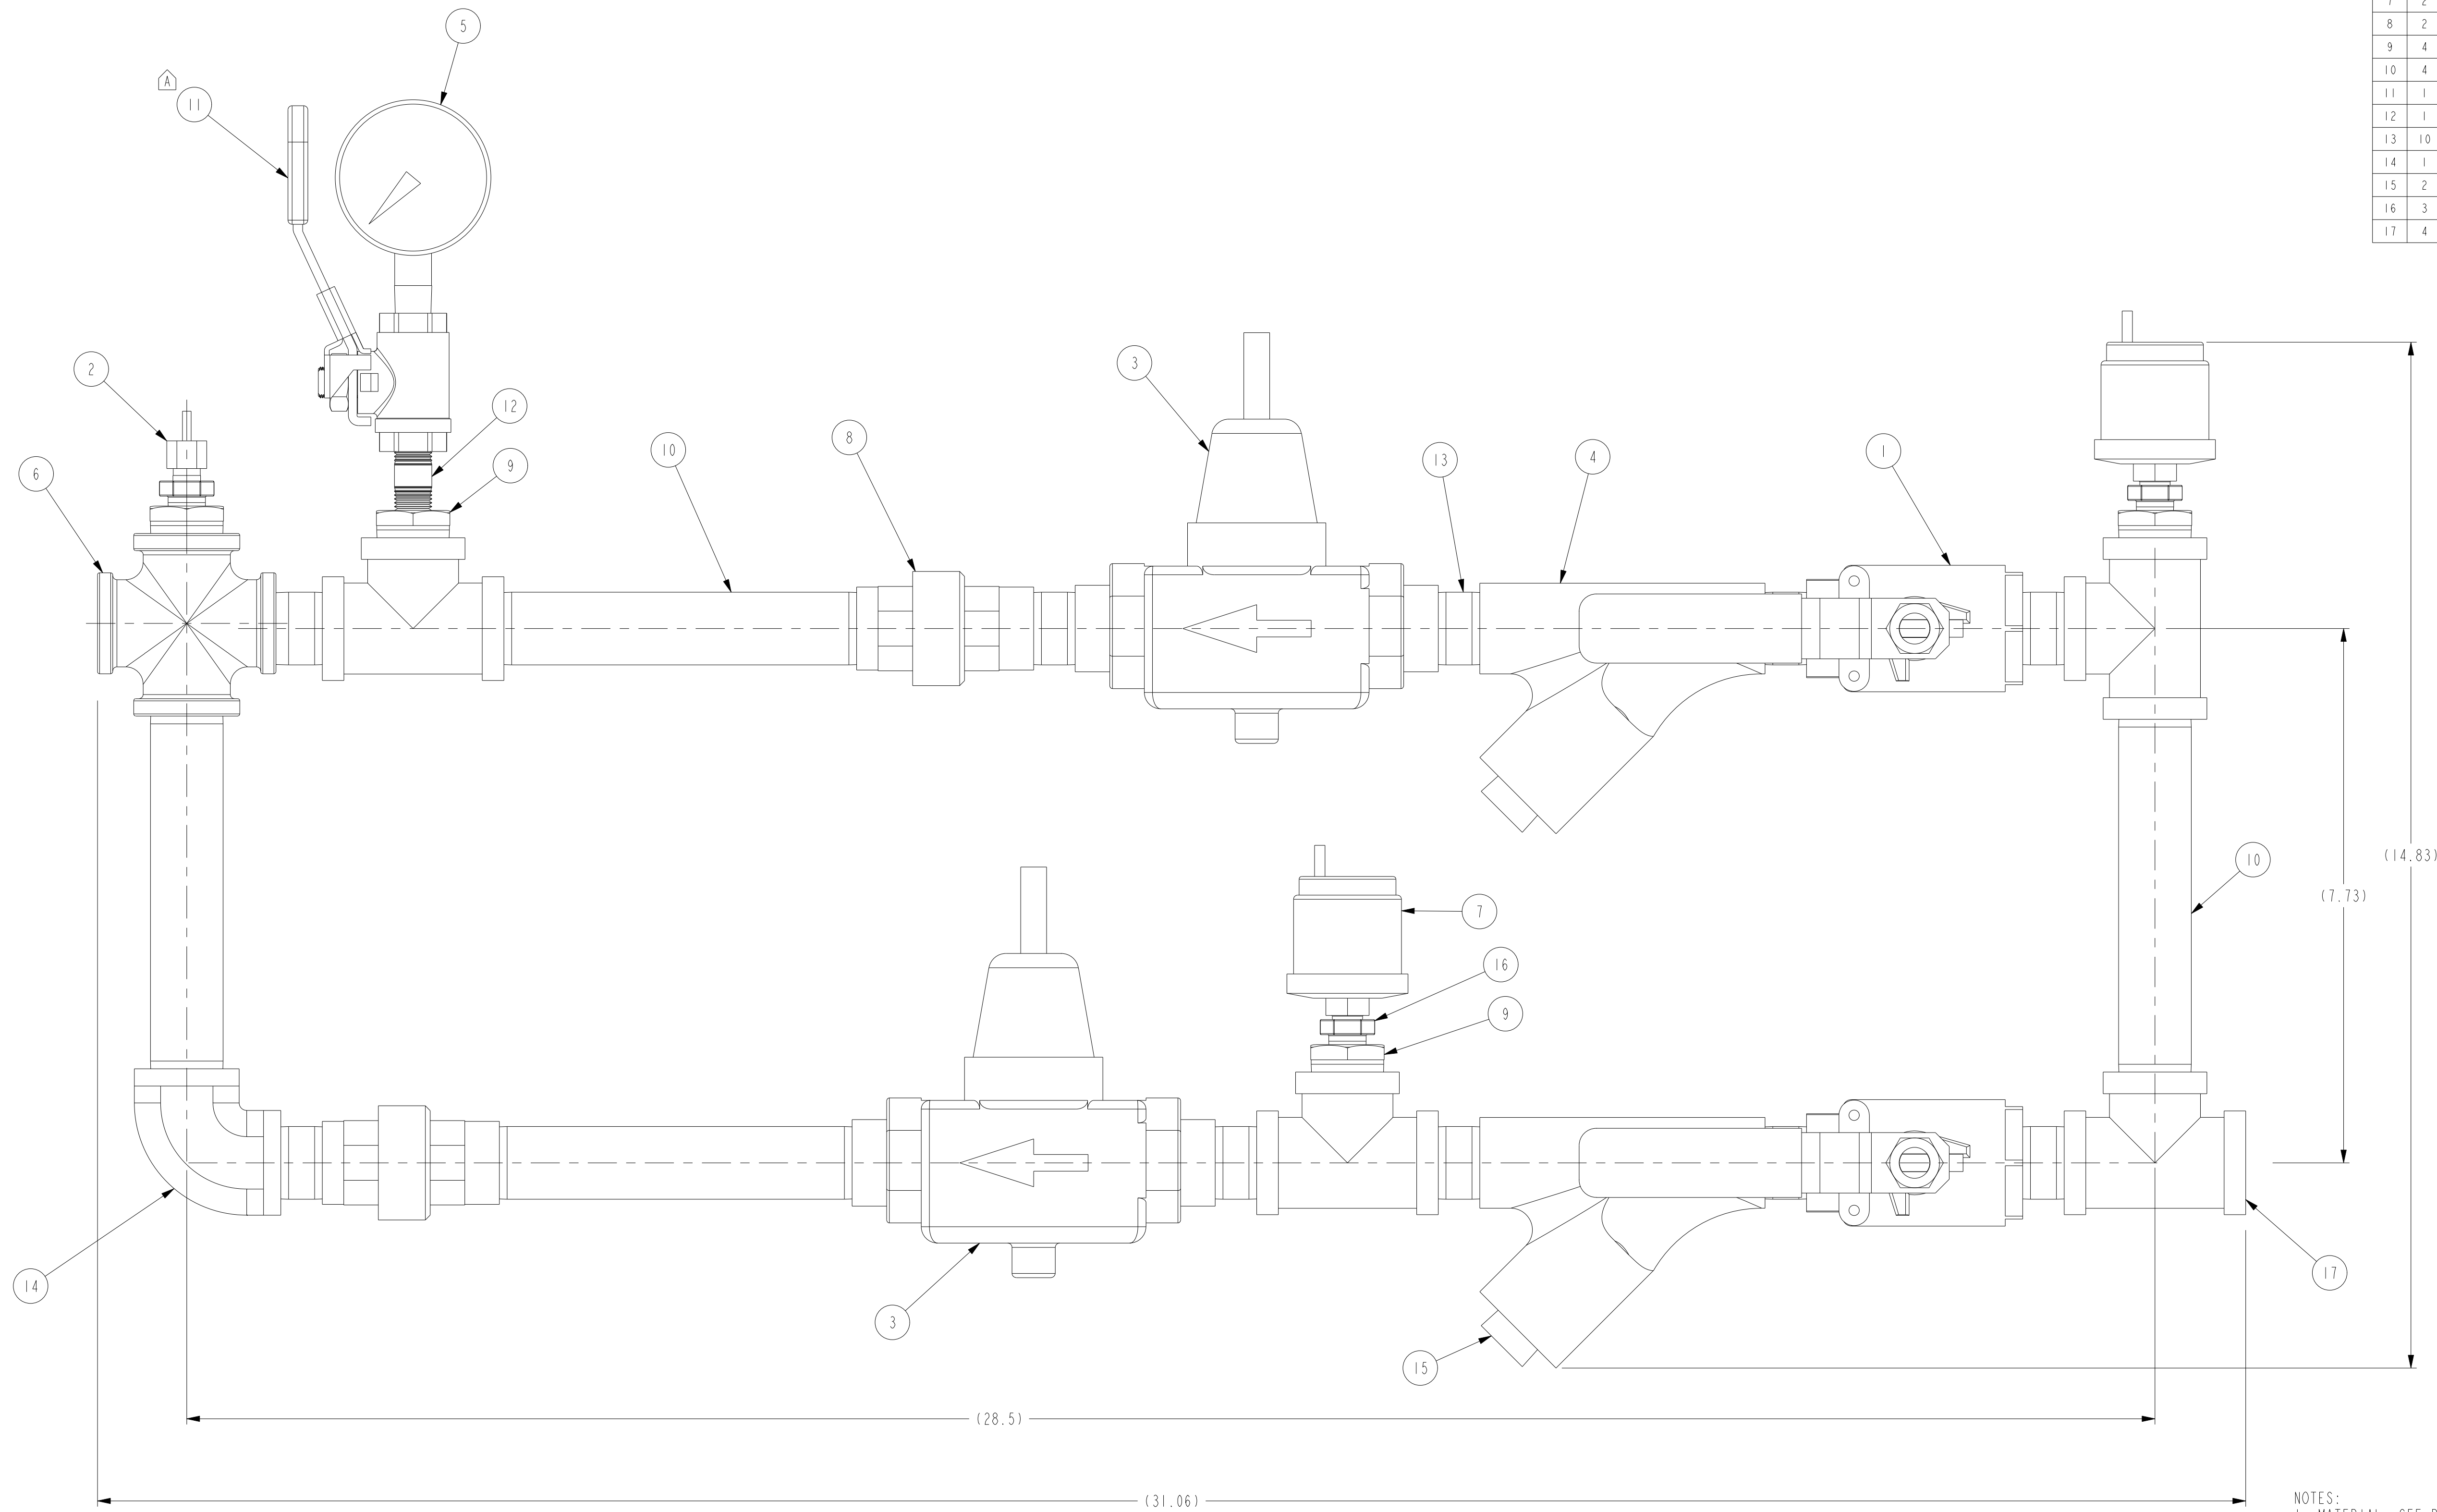

- NOTES:
 1. MATERIAL: SEE PARTS LIST
 2. REMOVE ALL SHARP EDGES PRIOR TO COATING
 3. LEAK TEST TO 60PSI AND PRESET REGULATORS TO 60PSI
 4. FINISH: COAT PER CUMMINS SPEC ES044 RAL 3001

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. It is to be returned to Cummins Fire Power LLC upon completion of the project. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Cummins Fire Power LLC. All rights reserved. © 2013 Cummins Fire Power LLC. All other rights reserved.

	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUEHALE ROAD WHITE SEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPGRADE CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	RAW WATER	

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE	ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS	DWG UNITS: IN/LB/S	SCALE: 0.750	EST WEIGHT: 28.865	RAW WATER
THIRD ANGLE PROJECTION	125	1/16" ± 0.0015	1/8" ± 0.002	1/4" ± 0.003	1/2" ± 0.004	3/4" ± 0.005	1" ± 0.006	1.5" ± 0.008
REV A	2015-043	ADDED SHEET 2 WITH MATERIAL SPECIFICATIONS A0420838 WAS FA60204-1	PBS	16 JAN 2015	SCALE: 0.750	EST WEIGHT: 28.865	RAW WATER	RAW WATER
REV ECO		DESCRIPTION OF REVISION	REV BY	DATE				
					DRAWN BY: BOB KROPP	DATE: 07MAR2012		
					PRO-ENGINEER	INIT: ECO: 2013-303		
					SHEET 1 OF 2	DRAWING NO: 21511		

Assembly	Component	Manufacture/pn	Description	Sub-Component	Material	Specification
21511			3/4" Vertical, Raw Water			
	21504	RUB, S95E45	3/4" ball valve			
				body	brass CW617N	EN12165
				seat	PTFE	
				ball	brass CW617N	EN12165
				end cap	brass CW617N	EN12165
				stem	brass CW617N	EN12164
				nut	CB4FF	EN10263-2
				O-ring	FPM	
				handle	DD11	EN10111
				handle coating	PVC	
				washer	PTFE	
	8862	Datcon, 02022-00	temperature sender			
	8890	Watts, N45BU-MI-3/4"	regulator			
				body	brass	
				seat	thermoplastic	
				cage	thermoplastic	
				integral strainer	stainless steel	
				diaphragm	reinforced EPDM	
				valve disc	elastomer	
	8891	Watts, 77S-MI-3/4"	strainer			
				body	cast iron	
				retainer cap	cast iron	ASTM A-126 Class B
				screen	304 stainless steel	
	8892	Watts, DPG1-2	pressure gauge			
				case	ABS polymer	
				window	Kostil polymer	
				sensing element	copper alloy Bourdon tube	
				welding	tin alloy	
				connection	brass	
	A042D838	RUB, S95B45	1/4" ball valve			
				body	CW617N	EN12165
				seat	PTFE	
				ball	CW617N	EN12165
				end cap	CW617N	EN12165
				stem	CW617N	EN12164
				nut	CB4FF	EN10263-2
				O-ring	FPM	
				handle	DD11	EN10111
				handle coating	PVC	
				washer	PTFE	
	21519		3/4" cross		black steel	ASTM A53/A733
	21574	Veethree, 977035	pressure sensor			
				housing	diecast	
				diaphragm	beryllium copper	
				wiper	phosphor bronze	
				contact	silver coated	
				wire	German nickel chrome resistance	
	25502	Euroblock, 100002	3/4" check valve			
				body	brass CW617N	EN12165
				end connection	brass CW617N	EN12165
				disc	polyetherimide	
				seat	NBP	
				spring	stainless steel	
	71494		3/4" x 1/4" reducing bushing		black steel	ASTM A53/A733
	71550		3/4" x 6" nipple		black steel	ASTM A53/A733
	LTL-CPN14112		1/4" x 1-1/2" nipple		black steel	ASTM A53/A733
	LTL-CPN34		3/4" x 1-1/2" nipple		black steel	ASTM A53/A733
	LTL-E3490		3/4", 90° elbow		black steel	ASTM A53/A733
	LTL-SCSP12		1/2" NPT plug		black steel	ASTM A53/A733
	LTL-SRB1418		1/4" x 1/8" reducing bushing		black steel	ASTM A53/A733
	LTL-ST34		3/4" TEE		black steel	ASTM A53/A733

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, without the prior written permission of Cummins Fire Power LLC. If you are not an authorized user, you are notified that any review, copying, or distribution of this document is strictly prohibited. If you are an authorized user, you are notified that any review, copying, or distribution of this document is strictly prohibited. If you are not an authorized user, you are notified that any review, copying, or distribution of this document is strictly prohibited. If you are an authorized user, you are notified that any review, copying, or distribution of this document is strictly prohibited.

Cummins Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUREAU ROAD
 WHITE SEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND UPGRADE CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± 1°
 THIRD ANGLE PROJECTION

MACHINED SURFACES: METRIC UNITS: 0.125
 IMPERIAL UNITS: 0.005
 UNMACHINED SURFACES: METRIC UNITS: 0.25
 IMPERIAL UNITS: 0.010

RAW WATER


DWG UNITS: IN/LB/S
 SCALE: 0.750
 EST WEIGHT: 28.865

DRAWN BY: BOB KROPP
PRO-ENGINEER
 SHEET 2 OF 2

DATE: 07MAR2012
 INIT ECO: 2013-303
 DRAWING NO: 21511

REV	2015-043	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	16JAN2015	
	ECO	DESCRIPTION OF REVISION	REV BY	DATE	

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	VALVE, BALL, 3/4"NPT, BRASS, LOCKABLE	21504
2	1	VALVE, SOLENOID, 3/4" NPT, 12VDC	A042B123
3	1	SENDER, TEMPERATURE, DATCON #02022-00	8862
4	2	REGULATOR, 3/4" NPT, 400 PSI MAX, 25 TO 75 PSI OUT	8890
5	2	STRAINER, 3/4" NPT W/ PLUG	8891
6	1	GAUGE, PRESSURE, 1/4" NPT, DPG1-2 1/2, 0-100 PSI, (WATTS)	8892
7	1	CROSS, 3/4"NPT, STEEL, SCHEDULE 40 PIPE	21519
8	2	SENSOR, 300PSI, 1/8"NPT, VEETHREE-977035	21574
9	2	VALVE, 3/4" NPT CHECK, VALUE ADDED: CV075	25502
10	4	BUSHING, 3/4" NPT X 1/4" NPT, -	71494
11	3	NIPPLE, BLK, 3/4x6	71550
12	1	VALVE, BALL, 1/4" NPT FEMALE	A042D838
13	1	NIPPLE, 1/4" NPT x 1 1/2", BLK STEEL	LTL-CPN14112
14	12	NIPPLE, BLK, 3/4x1-1/2	LTL-CPN34
15	1	ELBOW, BLK, 3/4" NPT, 90 DEG.	LTL-E3490
16	2	PLUG, 1/2 NPT	LTL-SCSP12
17	3	REDUCER BUSHING, HEX, 1/4 x 1/8, BLK STEEL	LTL-SRB1418
18	4	TEE, BLACK PIPE, 3/4" NPT	LTL-ST34

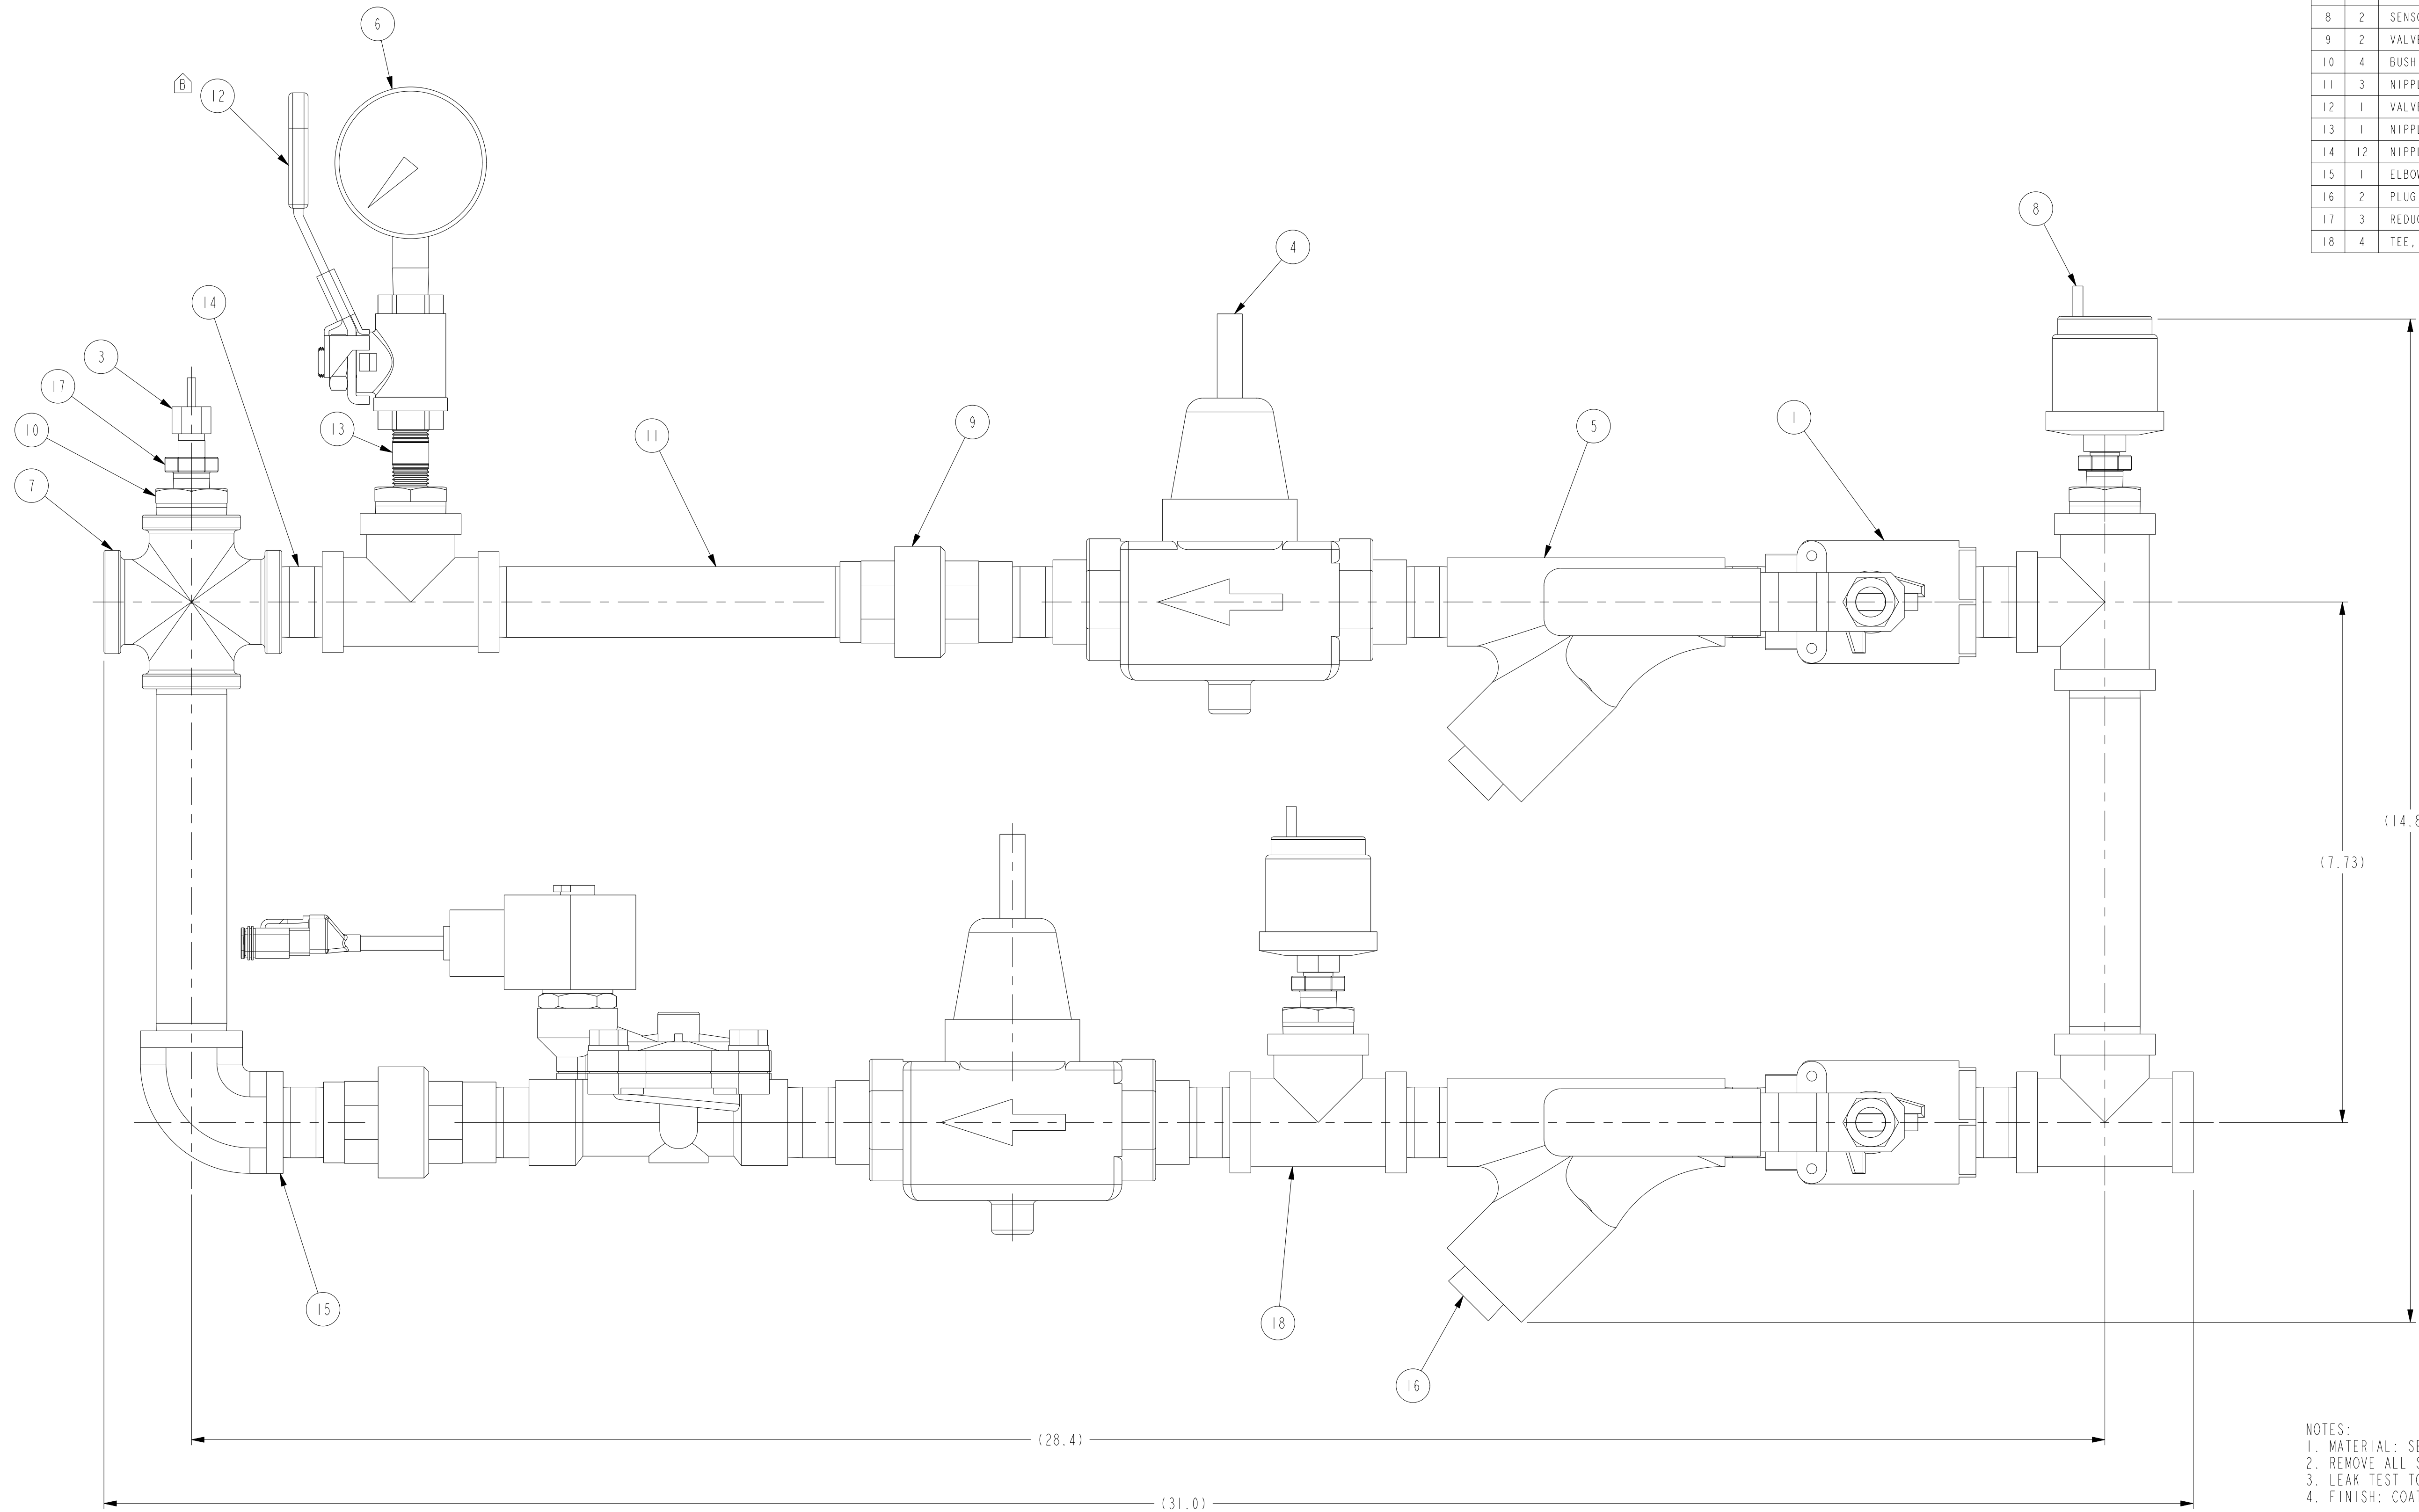

NOTES:
1. MATERIAL: SEE PARTS LIST
2. REMOVE ALL SHARP EDGES PRIOR TO COATING
3. LEAK TEST TO 60PSI AND PRESET REGULATORS TO 60PSI
4. FINISH: COAT PER CUMMINS SPEC ES044 RAL 3001

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be held in strict confidence. Any disclosure of this information to anyone other than those authorized to receive it is prohibited. If you are not an authorized recipient, you should not disseminate, distribute, or otherwise use this information. If you have received this document in error, please notify the sender immediately by return email or phone. The sender will take appropriate action to protect the confidentiality of this information. © 2013 Cummins Fire Power LLC.

Cummins Fire Power CORPORAATE OFFICE 1600 BUERALE ROAD WHITE SEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM

CUMMINS FIRE POWER LLC AND USPT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN

RAW WATER

COOLING LOOP, 3/4" ,12V

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS	DWG UNITS:	DRAWN BY: BOB KROPP	DATE: 06MAR2012
	±.005	IN/LB/S	MM	1/4"		INIT ECO: 2013-303
	±.010			SCALE: 0.750	SHEET	DRAWING NO:
				EST WEIGHT: NA	1 OF 2	21509

REV	DATE	DESCRIPTION OF REVISION	REV BY	DATE
B	2015-043	ADDED SHEET 2 WITH MATERIAL SPECIFICATIONS A042D838 WAS FA60204-1	PBS	16 JAN 2015
A	2014-241	A042B123 WAS 82106003	PBS	17 APR 2014
ECO				

Assembly	Component	Manufacture/pn	Description	Sub-Component	Material	Specification
21509			3/4" 12VDC, Raw Water			
	21504	RUB, S95E45	3/4" ball valve			
				body	CW617N	EN12165
				seat	PTFE	
				ball	CW617N	EN12165
				end cap	CW617N	EN12165
				stem	CW617N	EN12164
				nut	CB4FF	EN10263-2
				O-ring	FPM	
				handle	DD11	EN10111
				handle coating	PVC	
				washer	PTFE	
A042B123	Asco, 8210G003-12V	3/4" NPT 12V solenoid valve				
				body	brass	
				seals and discs	NBR or PTFE	
				disc holder	PA	
				core tube	305 stainless steel	
				core and plugnut	430F stainless steel	
				springs	302 stainless steel	
				shading coil	copper	
8862	Datcon, 02022-00	temperature sender		Body	brass	
8890	Watts, N45BU-MI-3/4"	regulator				
				body	bronze	
				seat	thermoplastic	
				cage	thermoplastic	
				integral strainer	stainless steel	
				diaphragm	reinforced EPDM	
				valve disc	elastomer	
8891	Watts, 77S-MI-3/4"	strainer				
				body	cast iron	
				retainer cap	cast iron	ASTM A-126 Class B
				screen	304 stainless steel	
8892	Watts, DPG1-2	pressure gauge				
				case	ABS polymer	
				window	Kostil polymer	
				sensing element	copper alloy Bourdon tube	
				welding	tin alloy	
				connection	brass	
A042D838	RUB, S95B45	1/4" ball valve				
				body	CW617N	EN12165
				seat	PTFE	
				ball	CW617N	EN12165
				end cap	CW617N	EN12165
				stem	CW617N	EN12164
				nut	CB4FF	EN10263-2
				O-ring	FPM	
				handle	DD11	EN10111
				handle coating	PVC	
				washer	PTFE	
21519		3/4" cross			black steel	ASTM A53/A733
21574	Veethree, 977035	pressure sensor				
				housing	diecast	
				diaphragm	beryllium copper	
				wiper	phosphor bronze	
				contact	silver coated	
				wire	German nickel chrome resistance	
25502	Euroblock, 100002	3/4" check valve				
				body	brass CW617N	EN12165
				end connection	brass CW617N	EN12165
				disc	polyetherimide	
				seat	NBP	
				spring	stainless steel	
71494		3/4" x 1/4" reducing bushing			black steel	ASTM A53/A733
71550		3/4" x 6" nipple			black steel	ASTM A53/A733
LTL-CPN14112		1/4" x 1-1/2" nipple			black steel	ASTM A53/A733
LTL-CPN34		3/4" x 1-1/2" nipple			black steel	ASTM A53/A733
LTL-E3490		3/4", 90° elbow			black steel	ASTM A53/A733
LTL-SCSP12		1/2" NPT plug			black steel	ASTM A53/A733
LTL-SRB1418		1/4" x 1/8" reducing bushing			black steel	ASTM A53/A733
LTL-ST34		3/4" TEE			black steel	ASTM A53/A733

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Cummins Fire Power LLC. If you are not an authorized user, you are notified that you are in violation of the law. If you are an authorized user, you are notified that you are in violation of the law if you do not use this document for the purposes intended. If you are not an authorized user, you are notified that you are in violation of the law. If you are an authorized user, you are notified that you are in violation of the law if you do not use this document for the purposes intended. If you are not an authorized user, you are notified that you are in violation of the law. If you are an authorized user, you are notified that you are in violation of the law if you do not use this document for the purposes intended.

	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUREAU ROAD WHITE SEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	RAW WATER	

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:


ANGULAR DIMENSIONS ± (°)	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
		IN/LB/S	MM/KG/M
		±.005	±.125
		±.002	±.050
		±.001	±.025

COOLING LOOP, 3/4" ,12V

DWG UNITS:	DRAWN BY: BOB KROPP	DATE: 06MAR2012
SCALE: 0.750	SHEET	INIT ECO: 2013-303
EST WEIGHT: 42238.628	2 OF 2	DRAWING NO: 21509

B	2015-043	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	16JAN2015		125
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE		

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	VALVE, BALL, 3/4"NPT, BRASS, LOCKABLE	21504
2	1	VALVE, SOLENOID, 3/4" NPT, 24VDC	A042B125
3	1	SENDER, TEMPERATURE, DATCON #02022-00	8862
4	2	REGULATOR, 3/4" NPT, 400 PSI MAX, 25 TO 75 PSI OUT	8890
5	2	STRAINER, 3/4" NPT W/ PLUG	8891
6	1	GAUGE, PRESSURE, 1/4" NPT, DPGI-2 1/2, 0-100 PSI, (WATTS)	8892
7	1	CROSS, 3/4"NPT, STEEL, SCHEDULE 40 PIPE	21519
8	2	SENSOR, 300PSI, 1/8"NPT, VEETHREE-977035	21574
9	2	VALVE, 3/4" NPT CHECK, VALUE ADDED: CV075	25502
10	4	BUSHING, 3/4" NPT X 1/4" NPT, -	71494
11	3	NIPPLE, BLK, 3/4x6	71550
12	1	VALVE, BALL, 1/4" NPT FEMALE	A042D838
13	1	NIPPLE, 1/4" NPT x 1 1/2", BLK STEEL	LTL-CPN14112
14	12	NIPPLE, BLK, 3/4x1-1/2	LTL-CPN34
15	1	ELBOW, BLK, 3/4" NPT, 90 DEG.	LTL-E3490
16	2	PLUG, 1/2 NPT	LTL-SCSP12
17	3	REDUCER BUSHING, HEX, 1/4 x 1/8, BLK STEEL	LTL-SRB1418
18	4	TEE, BLACK PIPE, 3/4" NPT	LTL-ST34

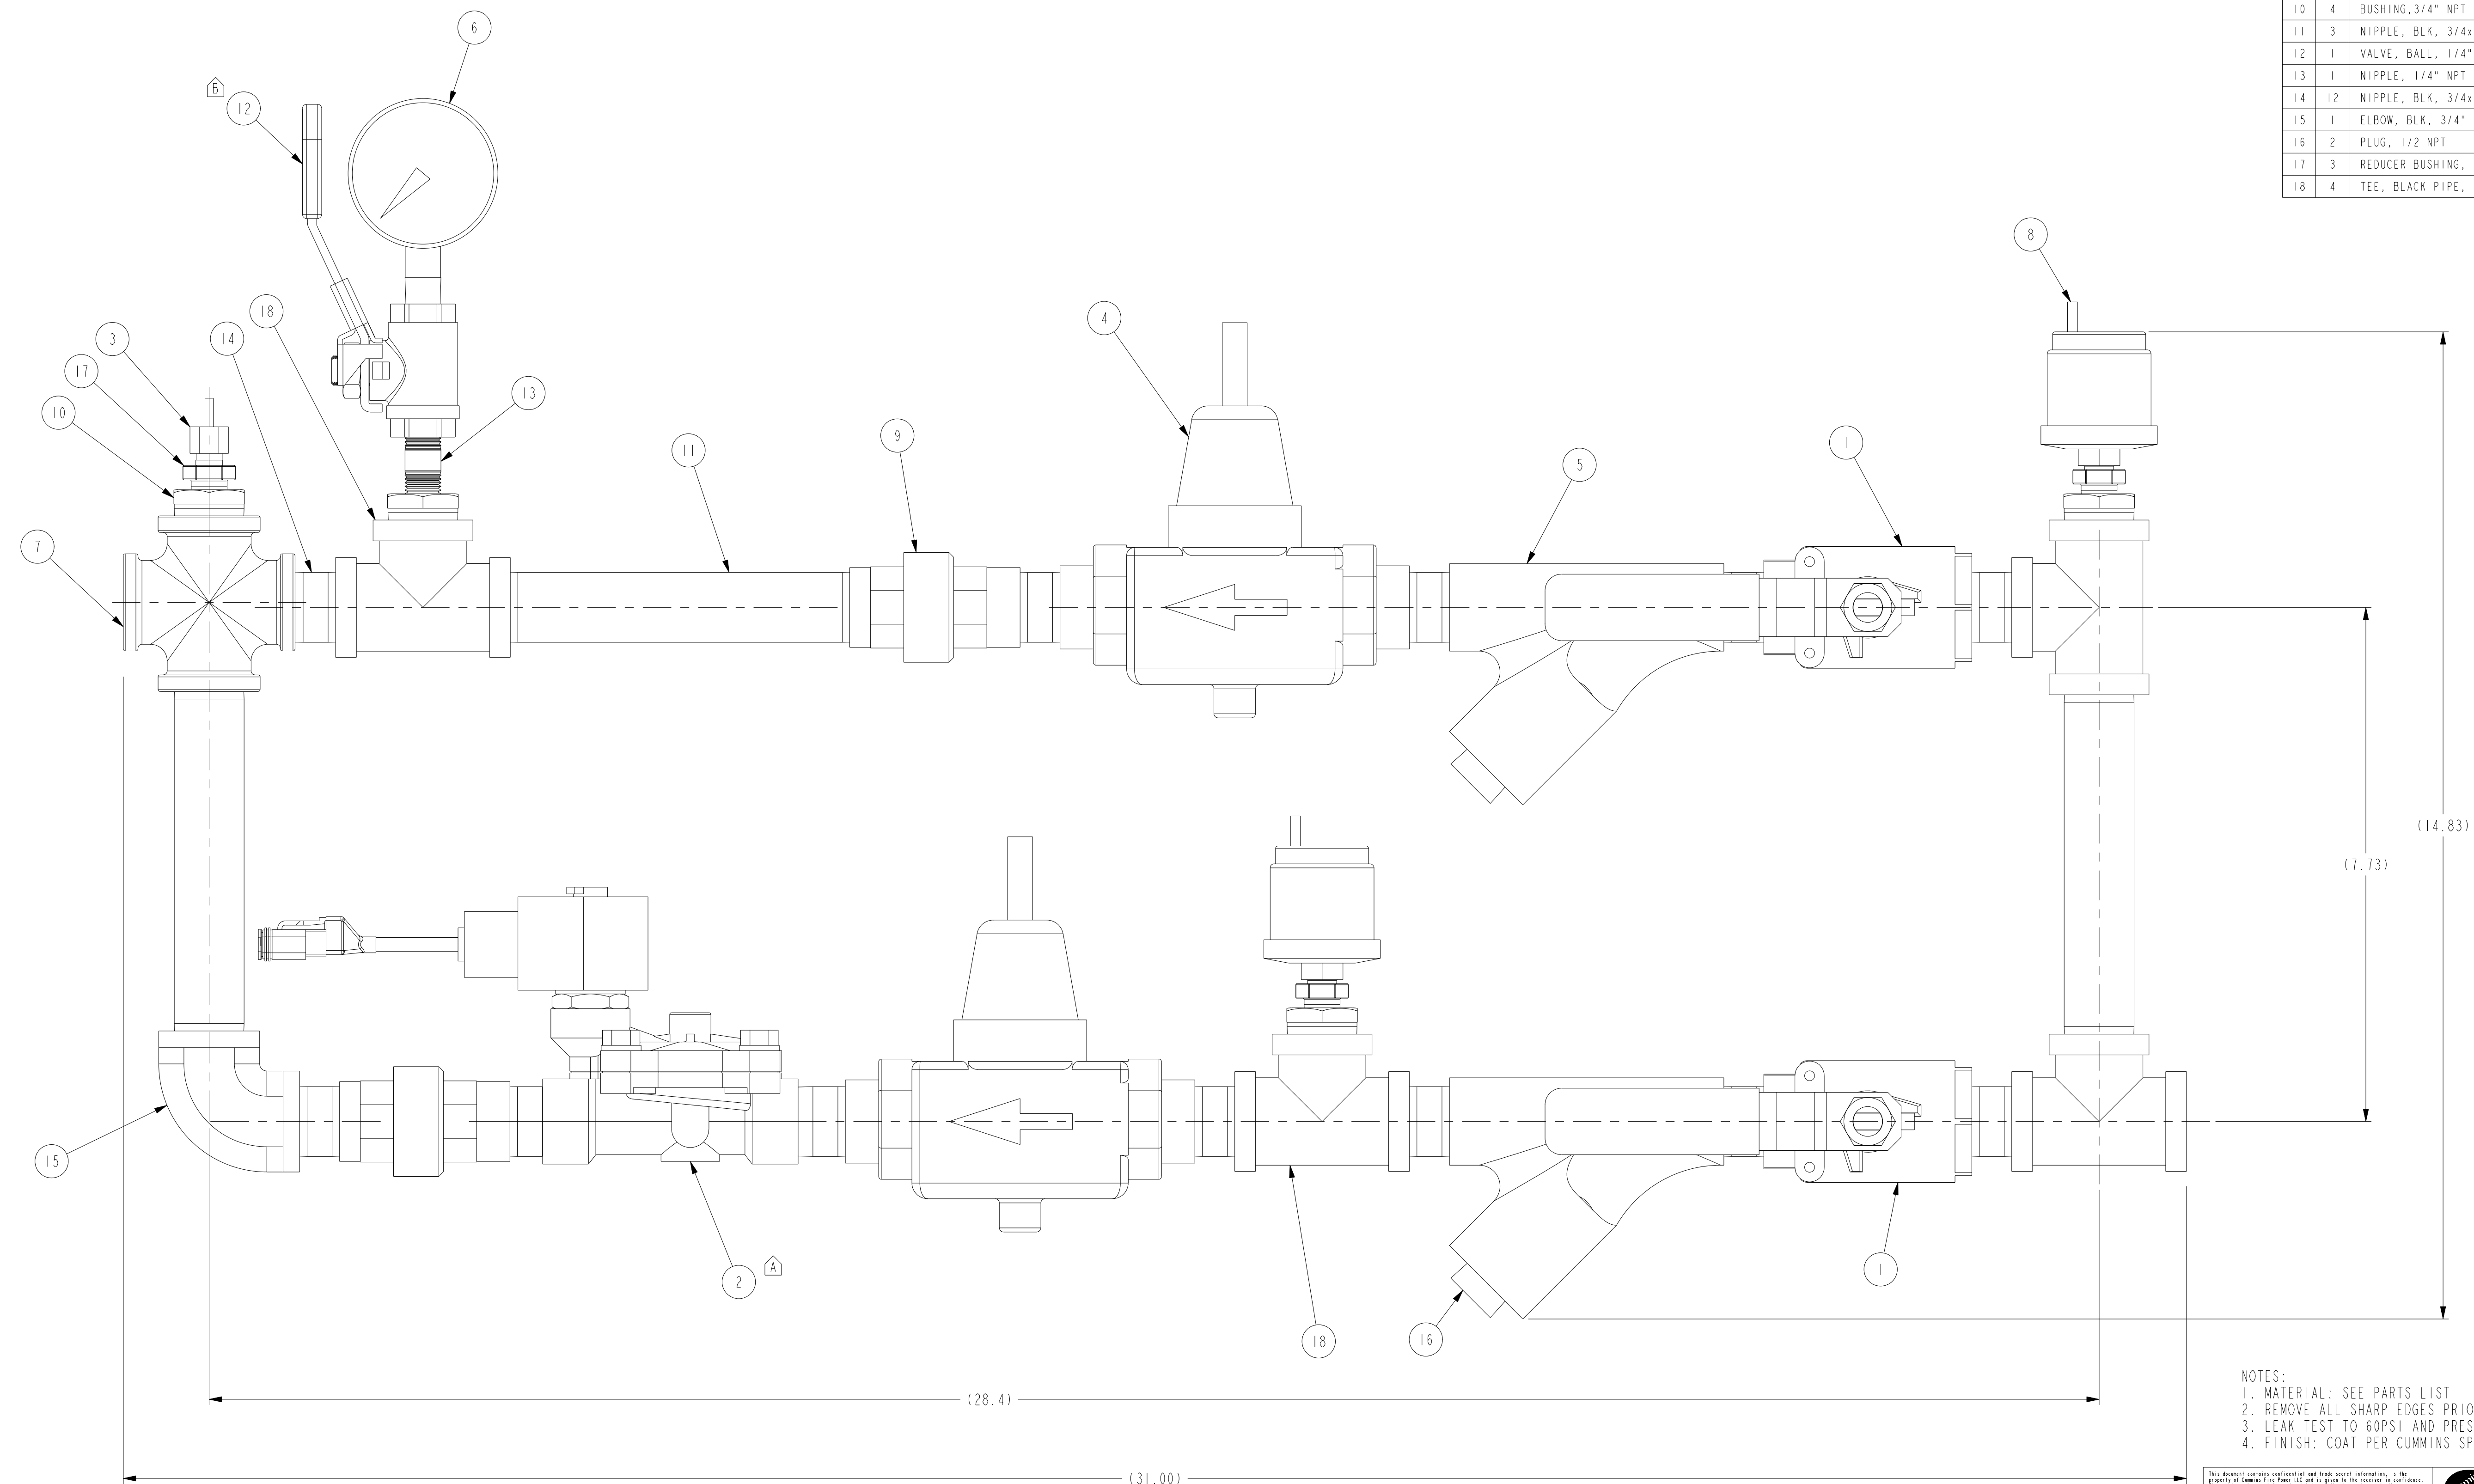

- NOTES:
 1. MATERIAL: SEE PARTS LIST
 2. REMOVE ALL SHARP EDGES PRIOR TO COATING
 3. LEAK TEST TO 60PSI AND PRESET REGULATORS TO 60PSI
 4. FINISH: COAT PER CUMMINS SPEC ES044 RAL 3001

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is not to be released, in any manner, to any third party without the express written consent of Cummins Fire Power LLC. If you are not an authorized recipient, you are notified that disclosing, copying, distributing, taking any action in reliance on the contents of this information, or in any way using the contents of this information is strictly prohibited. If you are an authorized recipient, you are notified that disclosing, copying, distributing, taking any action in reliance on the contents of this information, or in any way using the contents of this information is strictly prohibited. © 2013 Cummins Fire Power LLC. All rights reserved.

Cummins Fire Power
 CORPORATE OFFICE
 1600 BUREAU ROAD
 WHITE SEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM


CUMMINS FIRE POWER LLC
 CUSTOM DESIGN
 AND UPGIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

COOLING LOOP, 3/4", 24V
 RAW WATER

B	2015-043	ADDED SHEET 2 WITH MATERIAL SPECIFICATIONS A042D838 WAS FA60204-1	PBS	16 JAN 2015	ANGULAR DIMENSIONS ± 1° THIRD ANGLE PROJECTION	MACHINED SURFACES 125	IMPERIAL UNITS IN/LB/S	METRIC UNITS MM/KG	DWG UNITS: SCALE: 0.750 EST WEIGHT: NA	DRAWN BY: BOB KROPP PRO-ENGINEER	DATE: 06MAR2012 INIT: ECO: 2013-303
A	2014-241	A042B125 WAS 82106003-24V	PBS	17 APR 2014						SHEET 1 OF 2	DRAWING NO: 21510
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE							

Assembly	Component	Manufacture/pn	Description	Sub-Component	Material	Specification
21510			3/4" 24VDC, Raw Water			
	21504	RUB, S95E45	3/4" ball valve			
				body	CW617N	EN12165
				seat	PTFE	
				ball	CW617N	EN12165
				end cap	CW617N	EN12165
				stem	CW617N	EN12164
				nut	CB4FF	EN10263-2
				O-ring	FPM	
				handle	DD11	EN10111
				handle coating	PVC	
				washer	PTFE	
	A042B125	Asco, 8210G003-24V	3/4" NPT 24V solenoid valve			
				body	brass	
				seals and discs	NBR or PTFE	
				disc holder	PA	
				core tube	305 stainless steel	
				core and plugnut	430F stainless steel	
				springs	302 stainless steel	
				shading coil	copper	
	8862	Datcon, 02022-00	temperature sender	Body	brass	
	8890	Watts, N45BU-MI-3/4"	regulator			
				body	bronze	
				seat	thermoplastic	
				cage	thermoplastic	
				integral strainer	stainless steel	
				diaphragm	reinforced EPDM	
				valve disc	elastomer	
	8891	Watts, 77S-MI-3/4"	strainer			
				body	cast iron	
				retainer cap	cast iron	ASTM A-126 Class B
				screen	304 stainless steel	
	8892	Watts, DPGI-2	pressure gauge			
				case	ABS polymer	
				window	Kostil polymer	
				sensing element	copper alloy Bourdon tube	
				welding	tin alloy	
				connection	brass	
	A042D838	RUB, S95B45	1/4" ball valve			
				body	CW617N	EN12165
				seat	PTFE	
				ball	CW617N	EN12165
				end cap	CW617N	EN12165
				stem	CW617N	EN12164
				nut	CB4FF	EN10263-2
				O-ring	FPM	
				handle	DD11	EN10111
				handle coating	PVC	
				washer	PTFE	
	21519		3/4" cross		black steel	ASTM A53/A733
	21574	Veethree, 977035	pressure sensor			
				housing	diecast	
				diaphragm	beryllium copper	
				wiper	phosphor bronze	
				contact	silver coated	
				wire	German nickel chrome resistance	
	25502	Euroblock, 100002	3/4" check valve			
				body	brass CW617N	EN12165
				end connection	brass CW617N	EN12165
				disc	polyetherimide	
				seat	NBP	
				spring	stainless steel	
	71494		3/4" x 1/4" reducing bushing		black steel	ASTM A53/A733
	71550		3/4" x 6" nipple		black steel	ASTM A53/A733
	LTL-CPN14112		1/4" x 1-1/2" nipple		black steel	ASTM A53/A733
	LTL-CPN34		3/4" x 1-1/2" nipple		black steel	ASTM A53/A733
	LTL-E3490		3/4", 90° elbow		black steel	ASTM A53/A733
	LTL-SCSPI2		1/2" NPT plug		black steel	ASTM A53/A733
	LTL-SRB1418		1/4" x 1/8" reducing bushing		black steel	ASTM A53/A733
	LTL-ST34		3/4" TEE		black steel	ASTM A53/A733


This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Cummins Fire Power LLC. If you are not an authorized user, you are notified that you have accessed this document in violation of the terms and conditions of the license agreement. If you are an authorized user, you are notified that you have accessed this document in violation of the terms and conditions of the license agreement. If you are not an authorized user, you are notified that you have accessed this document in violation of the terms and conditions of the license agreement. If you are an authorized user, you are notified that you have accessed this document in violation of the terms and conditions of the license agreement.

	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUREAU ROAD WHITE SEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPGRADE CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	RAW WATER	


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± 1°
 THIRD ANGLE PROJECTION
 MACHINED SURFACES: METRIC UNITS
 SURFACES: IMPERIAL UNITS
 DIMENSIONS: METRIC UNITS
 DIMENSIONS: IMPERIAL UNITS
 DIMENSIONS: METRIC UNITS
 DIMENSIONS: IMPERIAL UNITS

DWG UNITS: 1N/LB/S	SCALE: 0.750	EST WEIGHT: 42238.628
PRO-ENGINEER	SHEET 2 OF 2	DRAWING NO: 21510
DATE: 06MAR2012	INIT ECO: 2013-303	

REV	2015-043	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	16JAN2015	
	ECO	DESCRIPTION OF REVISION	REV BY	DATE	

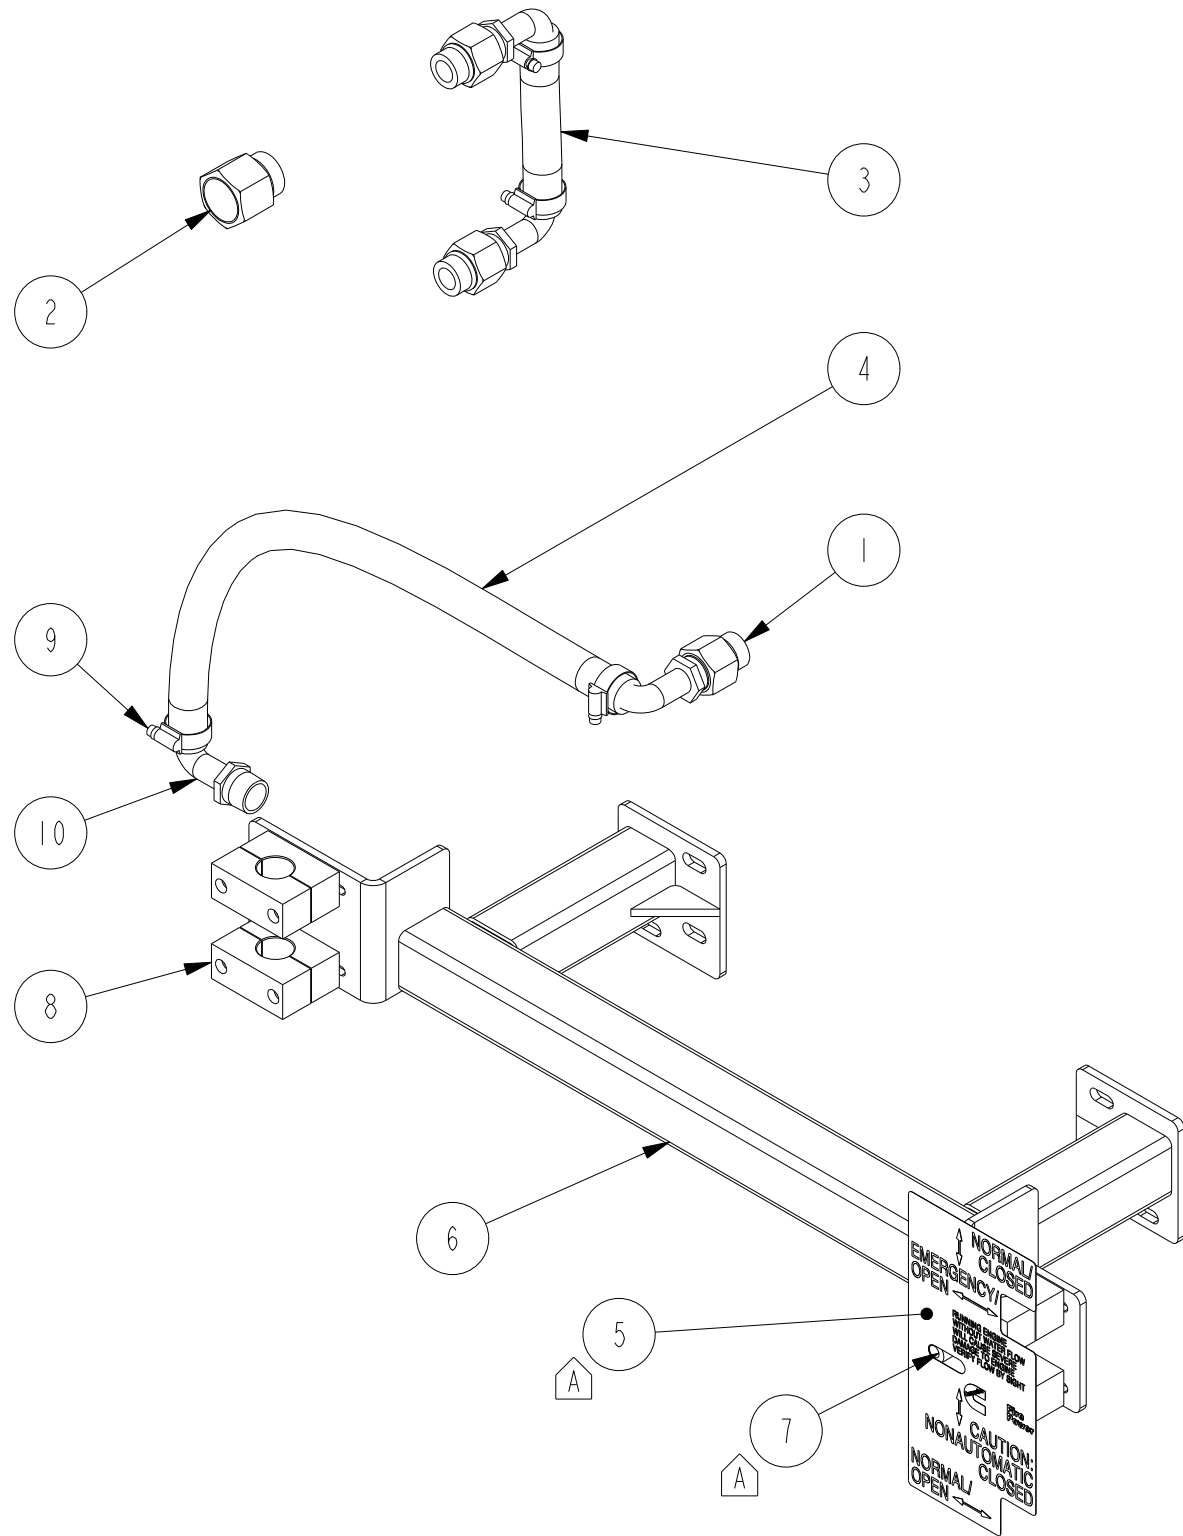

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	3	ASSY, ADAPTER, 3/4" ORD x FNPT, W / O-RING	17245
2	1	ASSY, ADAPTER, 1.0" ORD x FNPT, W / O-RING	17246
3	1	HOSE, SILICONE, HIGH TMEP, 6" LONG	80242GL
4	1	HOSE, SILICONE, HIGH TEMP, 34" LONG	80242GL
5	1	DECAL, COOLANT LOOP LABEL, VERTICAL MTG, ENGLISH	A042A453
6	1	BRACKET, COOLING LOOP, CFP5E	A042B375
7	1	SPACER, FEMALE, UNTHREADED ROUND	11585
8	4	CLAMP, PIPE, 3/4", PLASTIC	14926-03
9	4	CLAMP, WORM, .88 - 1.25	14990-12
10	4	ELBOW, NAVAL BRONZE, NPT X BARB, 3/4" NPT X 3/4" BARB	15767-12-12
11	1	CLAMP, LOOM, 1.00 ID	26964-16

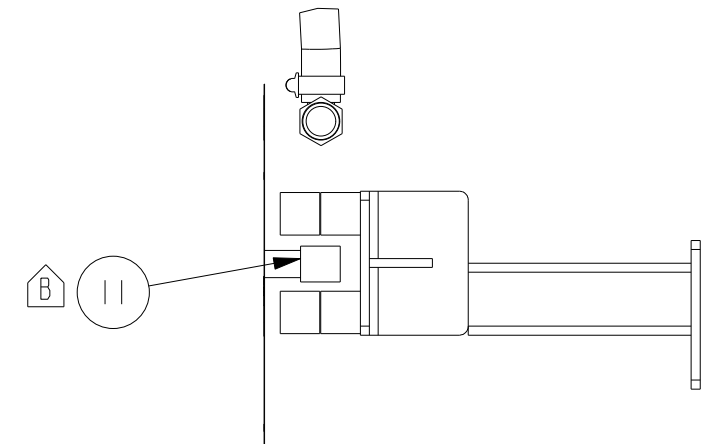

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
B	2016-232	REPLACED 14554 W/ 26964-16	KMS	16MAR2016
A	2015-219	ADDED: A042A453, 11585, 14554	PBS	07APR2015


This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	125	MACHINE TOLERANCES .XX ± 0.010 .XXX ± 0.005	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2
		FORM TOLERANCES .XX ± 0.030 .XXX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
		FAB TOLERANCES .XX ± 0.060 .XXX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8

	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPFIT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	MISCELLANEOUS PIPING CFP7E, SEA WATER COMPATIBLE	
DWG UNITS: IN/LB/S	DRAWN BY: PBS PRO-ENGINEER	DATE: 27MAY2014 INIT ECO: 2014-363
SCALE: 0.188 EST WEIGHT:	SHEET 1 OF 1	DRAWING NO: A042B480

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	2	VALVE, BALL, 3/4"NPT, SEA WATER COMPATIBLE, LOCKABLE	21434
2	1	SENDER, TEMPERATURE, DATCON #02022-00	8862
3	1	GUAGE, 0-100 PSI, 1/4" NPT STN STL	13113
4	2	REGULATOR/STRAINER, 3/4" NPT, SEA WATER COMPATIBLE	13703
5	4	TEE, MARINE GRADE, 3/4" NPT	15755-12
6	1	ELBOW, MARINE GRADE, 3/4" NPT	15756-12
7	4	BUSHING, MARINE GRADE, 3/4" X 1/4"	15758-12-4
8	3	BUSHING, MARINE GRADE, 1/4" X 1/8"	15758-4-2
9	1	VALVE, BALL, 1/4" NPT., APOLLO 77-100 (MARINE)	15759-04
10	1	NIPPLE, NAVAL BRONZE, 1/4" X CLOSE	15760
11	6	NIPPLE, MARINE GRADE, 3/4" X 1-3/8"	15761
12	2	NIPPLE, MARINE GRADE, 3/4" X 2-1/2"	15762
13	4	NIPPLE, MARINE GRADE, 3/4" X 6"	15764
14	2	CHECK VALVE, MARINE GRADE, 3/4" NPT	15768-12
15	1	CROSS, 3/4,NVL-BRNZ, SCHEDULE 40 PIPE	21436
16	2	SENSOR, 300PSI, 1/8NPT, VEETHREE-977035	21574

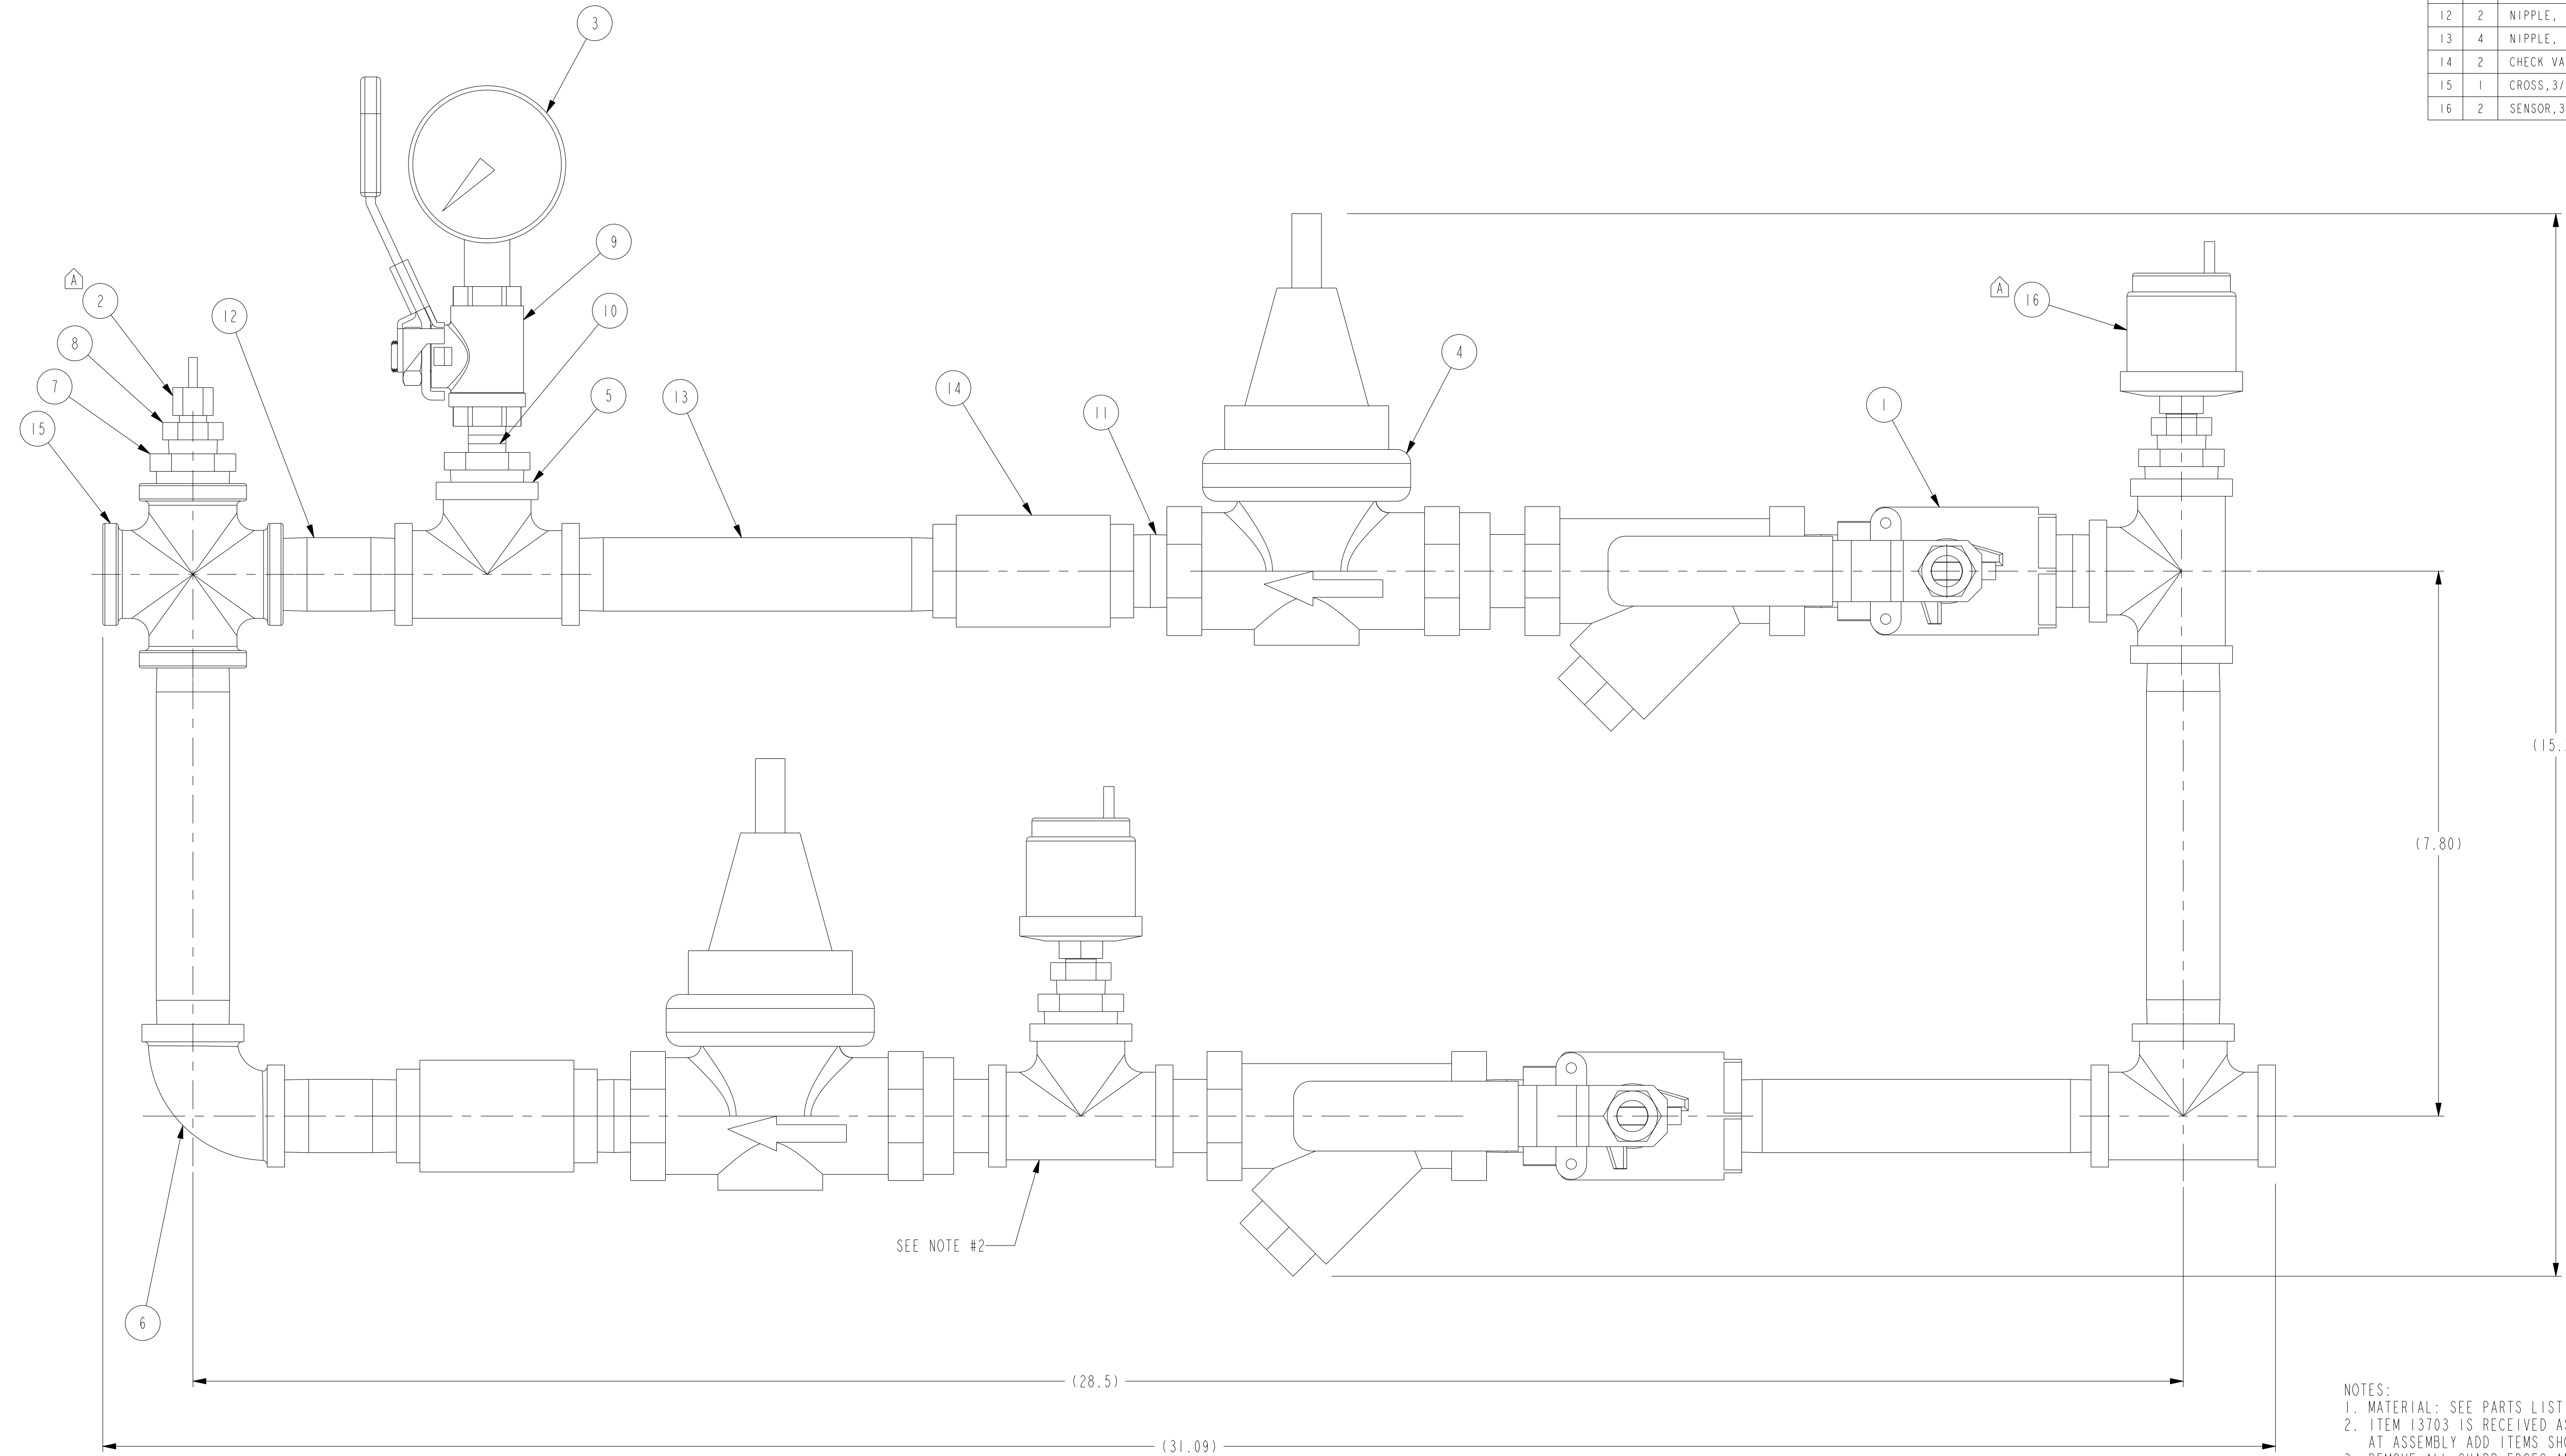

SEE NOTE #2

- NOTES:
 1. MATERIAL: SEE PARTS LIST
 2. ITEM 13703 IS RECEIVED AS AN UNASSEMBLED KIT. AT ASSEMBLY ADD ITEMS SHOWN
 3. REMOVE ALL SHARP EDGES AND BURRS
 4. LEAK TEST TO 60PSI AND PRESET REGULATORS TO 60PSI

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be held in strict confidence. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Cummins Fire Power LLC. If you are not an authorized recipient of this document, you should not disseminate, distribute, or copy this document. If you have received this document in error, please notify the sender immediately by email at cumminsfirepower@cumminsfirepower.com. All rights reserved. © 2013 Cummins Fire Power LLC.

Cummins Fire Power
 CORPORATE OFFICE
 1600 BUEHALE ROAD
 WHITE SEAS LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUMMINS FIRE POWER LLC
 AND UPFIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

COOLING LOOP, 3/4" VERT SEA WATER COMPATIBLE	DWG UNITS: IN/LB/S	SCALE: 0.750	SHEET 1 OF 2	DATE: 07MAR2012	DRAWING NO: 21512
UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS	EST WEIGHT: NA	
ANGULAR DIMENSIONS ±	THIRD ANGLE PROJECTION	125			

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
B	2015-043	ADDED SHEET 2 WITH MATERIAL SPECIFICATIONS	PBS	16JAN2015
A	2013-611	REPLACED 21008 & 21009 WITH 21574 & 8862	PBS	02OCT2013

Assembly	Component	Manufacture/pn	Description	Sub-Component	Material	Specification
21512			3/4" Vertical, Sea Water			
	21434	Apollo, 75-104-01	3/4" ball valve			
				lever and grip	steel, zinc plated w/vinyl	
				stem packing	MPTFE	
				stem bearing	RPTFE	
				ball	chrome plated	ASTM B16
				seat	RPTFE	
				retainer		ASTM B16
				gland nut		ASTM B16
				stem		ASTM B16
				lever nut	steel, zinc plated	
				body seal	PTFE	
				body		ASTM B524-C84400
	8862	Datcon 02022-00	temperature sender	body	brass	
	13113	Grainger, 4RY95	pressure gauge			
				case	stainless steel	
				socket	316 stainless steel	
				tube	316 stainless steel	
				lens	polycarbonate	
				ring	316 stainless steel	
	13703	Wilkins, 500YSBRHLRSW	3/4" regulator/strainer			
				body	cast bronze	ASTM B584
				access covers	cast bronze	ASTM B584
					brass	ASTM B16
				fasteners	300 series stainless steel	
				stem & plunger	cast bronze	ASTM B584
					brass	ASTM B16
				elastomers	Buna Nitrile	FDA approved
					EPDM	FDA approved
				cap gaskets	natural vulcanized fibre	
					Acetal (Delrin 500)	NSF Listed
				springs	oil tempered wire	ASTM A229
				strainer screen	300 series stainless steel	
				seat	300 series stainless steel	
	15755-12		3/4" tee		Copper Alloy	ASTM B62-09
	15756-12		3/4" elbow		Copper Alloy	ASTM B62-09
	15758-12-4		3/4" x 1/4" reducing bushing		Copper Alloy	ASTM B62-09
	15758-4-2		1/4" x 1/8" reducing bushing		Copper Alloy	ASTM B62-09
	15759-04	Apollo, 77-101-01	1/4" ball valve			
				lever and grip	steel, zinc plated w/vinyl	
				stem packing	MPTFE	
				stem bearing	RPTFE	
				ball	chrome plated	ASTM B16
				seat	RPTFE	
				retainer		ASTM B16
				gland nut		ASTM B16
				stem		ASTM B16
				lever nut	steel, zinc plated	
				body seal	PTFE	
				body		ASTM B524-C84400
	15760		1/4" close nipple		Copper Alloy	ASTM B62-09
	15761		3/4" x 1-3/8" nipple		Copper Alloy	ASTM B62-09
	15762		3/4" x 2-1/2" nipple		Copper Alloy	ASTM B62-09
	15764		3/4" x 6" nipple		Copper Alloy	ASTM B62-09
	15768-12	Watts, series 600	3/4" check valve		Copper Alloy	ASTM B62-09
				body	bronze	
				guide bushing	stainless steel	
				spring	stainless steel	
				check	brass	
				seat	PTFE	
				O-ring	Nitrile	
				adapter	brass	
	21436		3/4" cross		Copper Alloy	ASTM B62-09
	21574	Veethree, 977035	pressure sensor			
				housing	diecast	
				diaphragm	beryllium copper	
				wiper	phosphor bronze	
				contact	silver coated	
				wire	German nickel chrome resistance	

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is not to be released, in any manner, to any third party without the written approval of Cummins Fire Power LLC. If you are not an authorized user, you are not to disseminate, copy, reproduce, or otherwise use this document. If you are an authorized user, you are not to disseminate, copy, reproduce, or otherwise use this document without the prior written approval of Cummins Fire Power LLC. If you are not an authorized user, you are not to disseminate, copy, reproduce, or otherwise use this document without the prior written approval of Cummins Fire Power LLC. If you are an authorized user, you are not to disseminate, copy, reproduce, or otherwise use this document without the prior written approval of Cummins Fire Power LLC.

	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUREAU ROAD WHITE SEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPGRADE CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
--	---	--


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
ANGULAR DIMENSIONS ± 1°
THIRD ANGLE PROJECTION

MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
± 0.005	± 0.005	± 0.125
± 0.002	± 0.002	± 0.050
± 0.001	± 0.001	± 0.025

COOLING LOOP, 3/4", VERT SEA WATER COMPATIBLE		
DWG UNITS: IN/LB/S	DRAWN BY: BOB KROPP	DATE: 07MAR2012
SCALE: 0.750	SHEET 2 OF 2	INIT ECO: 2013-303
EST WEIGHT: 42238.628		DRAWING NO: 21512

B	2015-043	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	16JAN2015	
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE	

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	VALVE, SOLENOID, 3/4" NPT, 12VDC, SEA WATER COMPATIBLE	15738
2	2	VALVE, BALL, 3/4"NPT, SEA WATER COMPATIBLE, LOCKABLE	21434
3	1	SENDER, TEMPERATURE, DATCON #02022-00	8862
4	1	GUAGE, 0-100 PSI, 1/4" NPT STN STL	13113
5	2	REGULATOR/STRAINER, 3/4" NPT, SEA WATER COMPATIBLE	13703
6	4	TEE, MARINE GRADE, 3/4" NPT	15755-12
7	1	ELBOW, MARINE GRADE, 3/4" NPT	15756-12
8	4	BUSHING, MARINE GRADE, 3/4" X 1/4"	15758-12-4
9	3	BUSHING, MARINE GRADE, 1/4" X 1/8"	15758-4-2
10	1	VALVE, BALL, 1/4" NPT., APOLLO 77-100 (MARINE)	15759-04
11	1	NIPPLE, NAVAL BRONZE, 1/4" X CLOSE	15760
12	7	NIPPLE, MARINE GRADE, 3/4" X 1-3/8"	15761
13	3	NIPPLE, MARINE GRADE, 3/4" X 2-1/2"	15762
14	3	NIPPLE, MARINE GRADE, 3/4" X 6"	15764
15	2	CHECK VALVE, MARINE GRADE, 3/4" NPT	15768-12
16	1	CROSS, 3/4, NVL-BRNZ, SCHEDULE 40 PIPE	21436
17	2	SENSOR, 300PSI, 1/8"NPT, VEETHREE-977035	21574

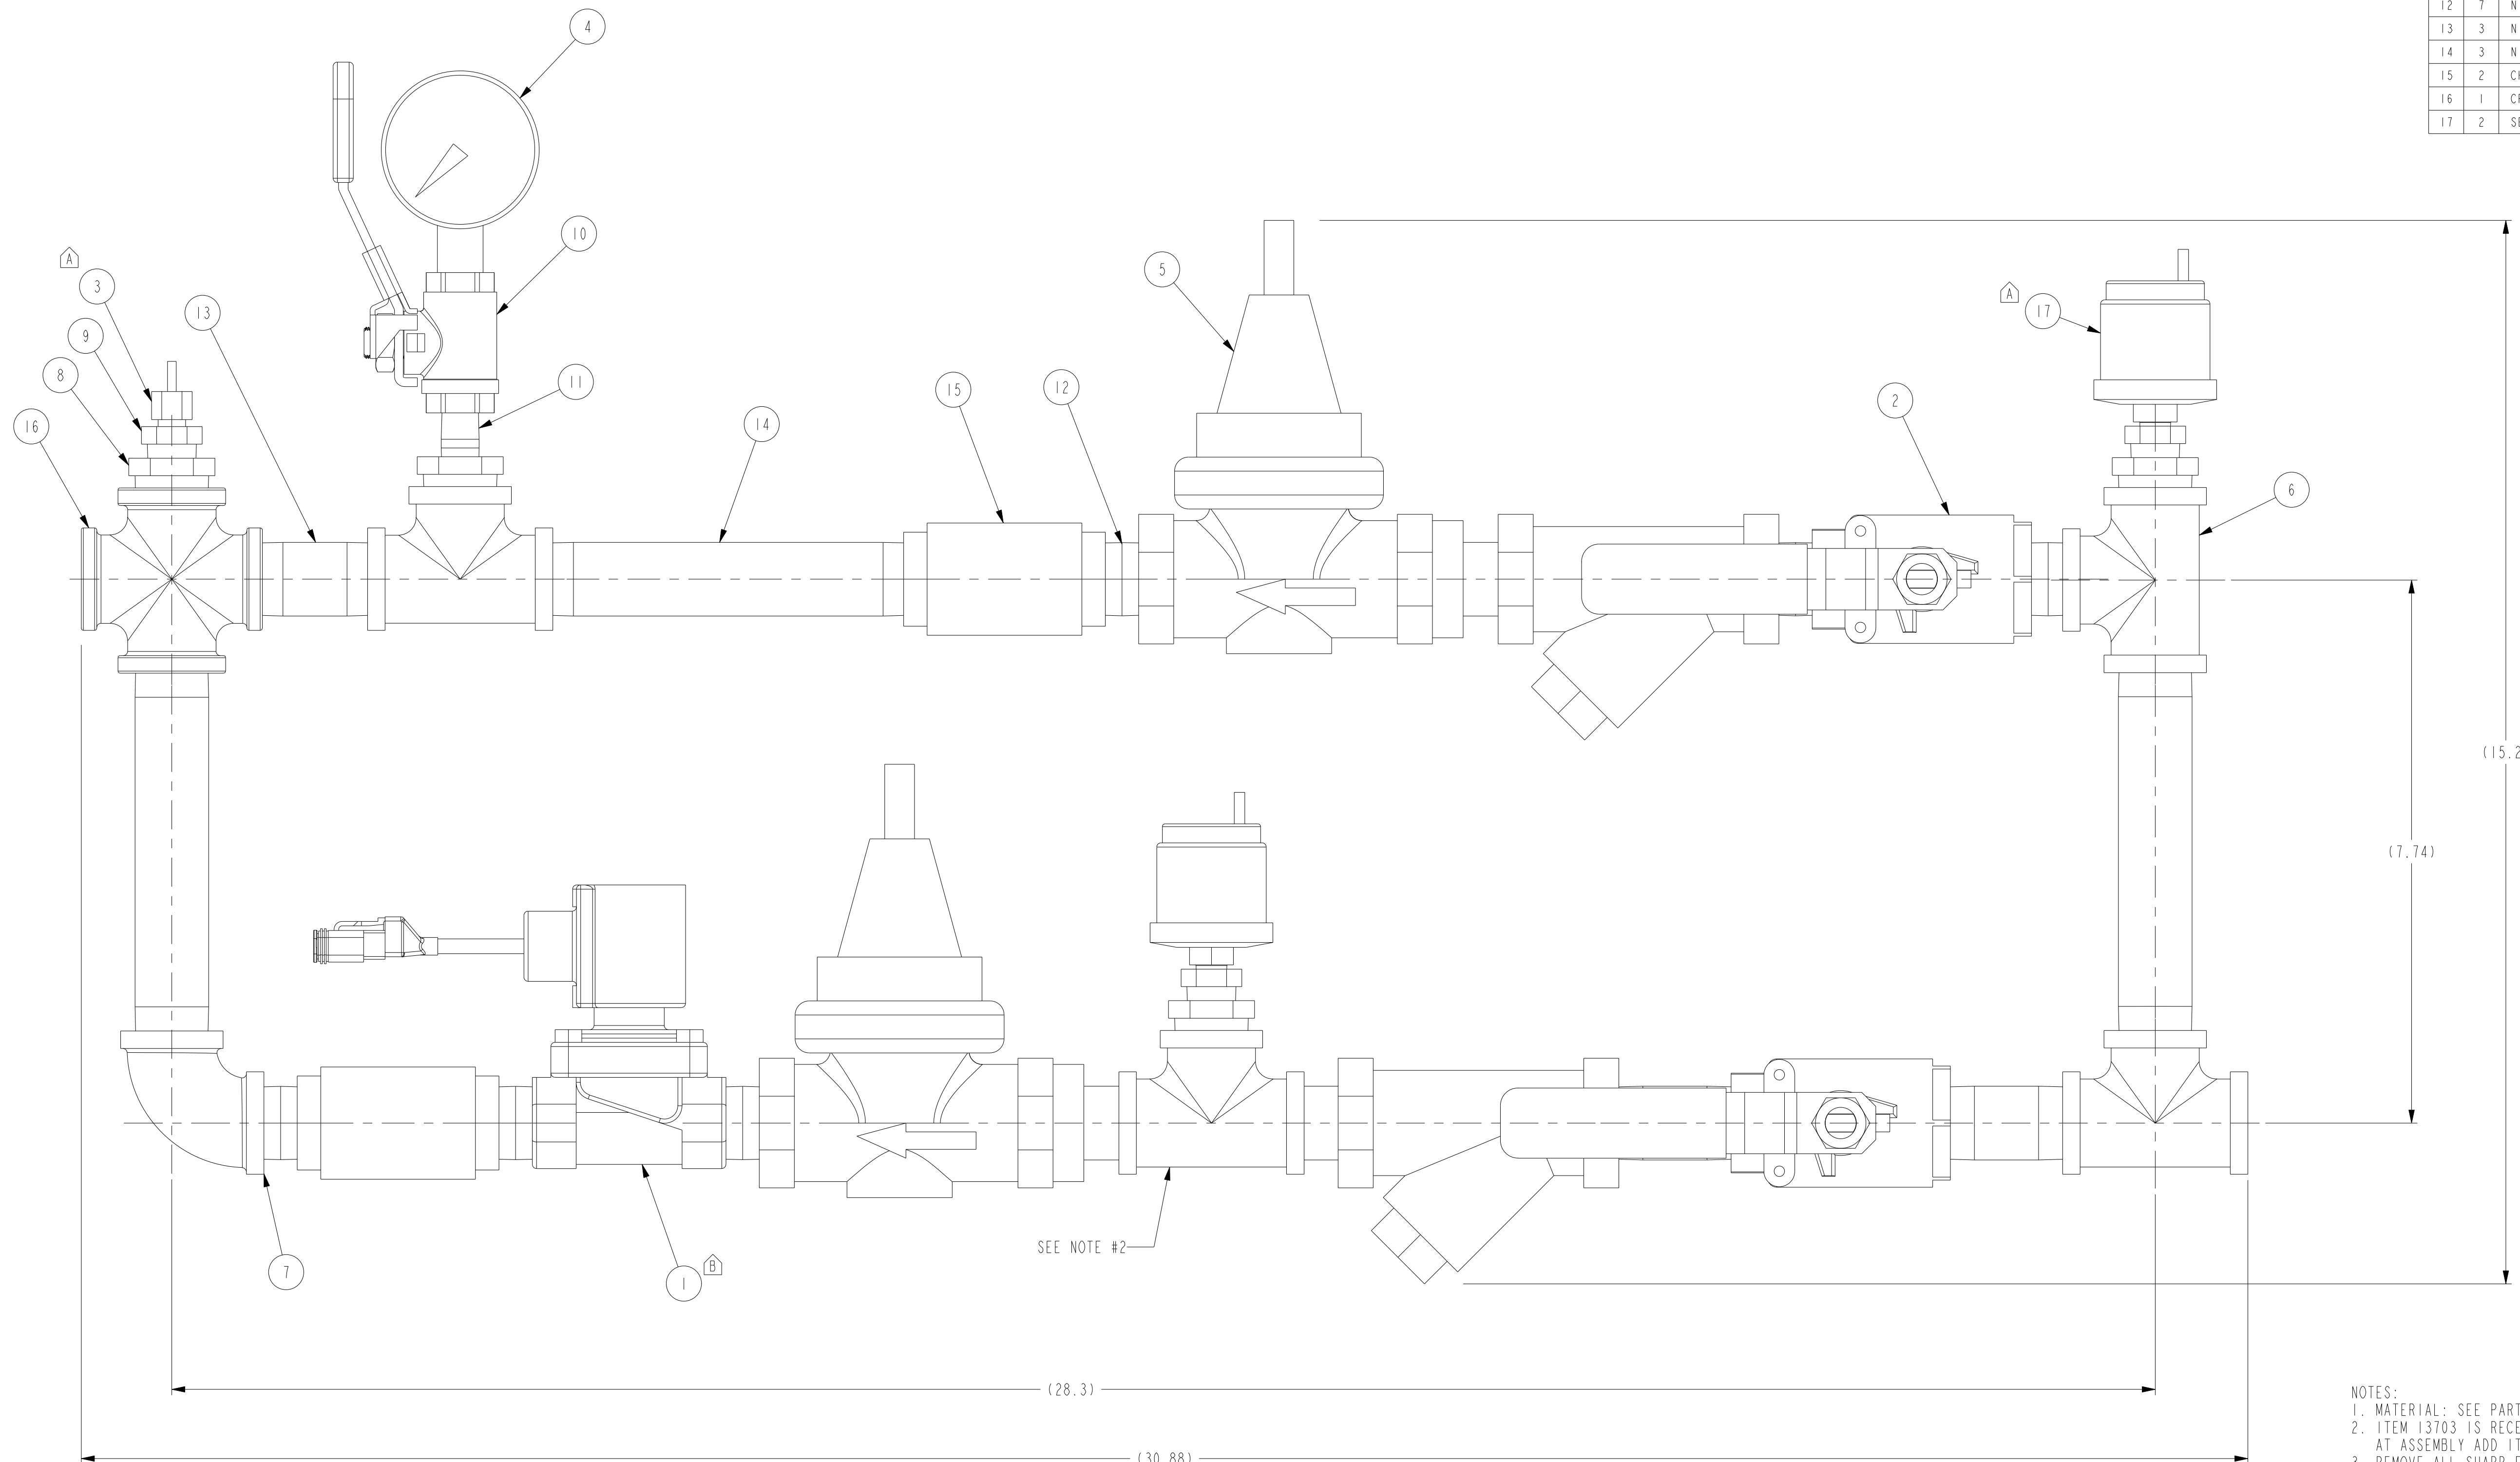

- NOTES:
 1. MATERIAL: SEE PARTS LIST
 2. ITEM 13703 IS RECEIVED AS AN UNASSEMBLED KIT. AT ASSEMBLY ADD ITEMS SHOWN
 3. REMOVE ALL SHARP EDGES AND BURRS
 4. LEAK TEST TO 60PSI AND PRESET REGULATORS TO 60PSI

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. It is not to be distributed, copied, or otherwise used without the express written permission of Cummins Fire Power LLC. If you are not an authorized user, you are notified that any use of this document is strictly prohibited. If you are an authorized user, you are notified that you are responsible for maintaining the confidentiality of this information. If you are not an authorized user, you are notified that you are prohibited from using this information for any purpose other than that for which it was provided. If you are an authorized user, you are notified that you are responsible for maintaining the confidentiality of this information. If you are not an authorized user, you are notified that you are prohibited from using this information for any purpose other than that for which it was provided.

Cummins Fire Power
 CORPORATE OFFICE
 1600 BUREAU ROAD
 WHITE SEAS LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND UPGRADE CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE	ANGULAR DIMENSIONS ± 1/2°	MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS	SCALE: 0.750	SHEET 1 OF 2	DRAWING NO: 21438
C	2015-043	ADDED SHEET 2 WITH MATERIAL SPECIFICATIONS	PBS	16JAN2015					EST WEIGHT: NA	DRAWN BY: BOB KROPP	DATE: 02MAR2012
B	2014-241	UPDATED TO SHOW LEADS ON SOLENOID VALVE	PBS	17APR2014							
A	2013-611	REPLACED 21008 & 21009 WITH 21574 & 8862	PBS	02OCT2013							

Assembly	Component	Manufacture/pn	Description	Sub-Component	Material	Specification
21438			3/4" 12VDC, Sea Water			
	15738	GC Valves, S211GF15JTEG5	3/4" NPT 12V solenoid valve			
				valve body/bonnet	316 stainless steel	ASTM A351 CF8M
				plunger tube -tub head	430FR	ASTM A838 alloy 2
				tube head shading ring	commercial grade silver	ASTM B742-90
				plunger tube	304 stainless steel	ASTM A269
				valve plunger	430FR	ASTM A838 alloy 2
				plunger spring	302 stainless steel	ASTM 313-08
				diaphragm pilot orifice	303 stainless steel	ASTM A8582
				diaphragm back plate/dish plate	304 stainless steel	ASTM A276-13
21434	Apollo, 75-104-01		3/4" ball valve			
				lever and grip	steel, zinc plated w/vinyl	
				stem packing	MPTFE	
				stem bearing	RPTFE	
				ball	chrome plated	ASTM B16
				seat	RPTFE	
				retainer		ASTM B16
				gland nut		ASTM B16
				stem		ASTM B16
				lever nut	steel, zinc plated	
				body seal	PTFE	
				body		ASTM B524-C84400
8862	Datcon 02022-00		temperature sender	Body	brass	
13113	Grainger, 4RY95		pressure gauge			
				case	stainless steel	
				socket	316 stainless steel	
				tube	316 stainless steel	
				lens	polycarbonate	
				ring	316 stainless steel	
13703	Wilkins, 500YSBRHLRSW		3/4" regulator/strainer			
				body	cast bronze	ASTM B584
				access covers	cast bronze	ASTM B584
					brass	ASTM B16
				fasteners	300 series stainless steel	
				stem & plunger	cast bronze	ASTM B584
					brass	ASTM B16
				elastomers	Buna Nitrile	FDA approved
					EPDM	FDA approved
				cap gaskets	natural vulcanized fibre	
					Acetal (Delrin 500)	NSF Listed
				springs	oil tempered wire	ASTM A229
				strainer screen	300 series stainless steel	
				seat	300 series stainless steel	
15755-12			3/4" tee		Copper Alloy	ASTM B62-09
15756-12			3/4" elbow		Copper Alloy	ASTM B62-09
15758-12-4			3/4" x 1/4" reducing bushing		Copper Alloy	ASTM B62-09
15758-4-2			1/4" x 1/8" reducing bushing		Copper Alloy	ASTM B62-09
15759-04	Apollo, 77-101-01		1/4" ball valve			
				lever and grip	steel, zinc plated w/vinyl	
				stem packing	MPTFE	
				stem bearing	RPTFE	
				ball	chrome plated	ASTM B16
				seat	RPTFE	
				retainer		ASTM B16
				gland nut		ASTM B16
				stem		ASTM B16
				lever nut	steel, zinc plated	
				body seal	PTFE	
				body		ASTM B524-C84400
15760			1/4" close nipple		Copper Alloy	ASTM B62-09
15761			3/4" x 1-3/8" nipple		Copper Alloy	ASTM B62-09
15762			3/4" x 2-1/2" nipple		Copper Alloy	ASTM B62-09
15764			3/4" x 6" nipple		Copper Alloy	ASTM B62-09
15768-12	Watts, series 600		3/4" check valve			
				body	bronze	
				guide bushing	stainless steel	
				spring	stainless steel	
				check	brass	
				seat	PTFE	
				O-ring	Nitrile	
				adapter	brass	
21436			3/4" cross		Copper Alloy	ASTM B62-09
21574	Veethree, 977035		pressure sensor			
				housing	diecast	
				diaphragm	beryllium copper	
				wiper	phosphor bronze	
				contact	silver coated	
				wire	German nickel chrome resistance	

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be held in strict confidence. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Cummins Fire Power LLC. If you are not an intended recipient of this document, you should not disseminate, distribute, or copy this document. If you have received this document in error, please notify the sender immediately by e-mail at info@cuminsfirepower.com. All rights reserved. © 2013 Cummins Fire Power LLC.

Cummins Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUREAU ROAD
 WHITE SEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND UPGRADE CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

COOLING LOOP, 3/4" 12V
 SEA WATER COMPATIBLE


DWG UNITS: IN/LB/S
 SCALE: 0.750
 EST WEIGHT: 28.157

DATE: 02MAR2012
 INIT ECO: 2013-303

SHEET 2 OF 2
 DRAWING NO: 21438

C	2015-043	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	16JAN2015			
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE			

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	VALVE, SOLENOID, 3/4" NPT, 24VDC, SEA WATER COMPATIBLE	15739
2	2	VALVE, BALL, 3/4"NPT, SEA WATER COMPATIBLE, LOCKABLE	21434
3	1	SENDER, TEMPERATURE, DATCON #02022-00	8862
4	1	GUAGE, 0-100 PSI, 1/4" NPT STN STL	13113
5	2	REGULATOR/STRAINER, 3/4" NPT, SEA WATER COMPATIBLE	13703
6	4	TEE, MARINE GRADE, 3/4" NPT	15755-12
7	1	ELBOW, MARINE GRADE, 3/4" NPT	15756-12
8	4	BUSHING, MARINE GRADE, 3/4" X 1/4"	15758-12-4
9	3	BUSHING, MARINE GRADE, 1/4" X 1/8"	15758-4-2
10	1	VALVE, BALL, 1/4" NPT., APOLLO 77-100 (MARINE)	15759-04
11	1	NIPPLE, NAVAL BRONZE, 1/4" X CLOSE	15760
12	6	NIPPLE, MARINE GRADE, 3/4" X 1-3/8"	15761
13	3	NIPPLE, MARINE GRADE, 3/4" X 2-1/2"	15762
14	3	NIPPLE, MARINE GRADE, 3/4" X 6"	15764
15	2	CHECK VALVE, MARINE GRADE, 3/4" NPT	15768-12
16	1	CROSS, 3/4, NVL-BRNZ, SCHEDULE 40 PIPE	21436
17	2	SENSOR, 300PSI, 1/8"NPT, VEETHREE-977035	21574

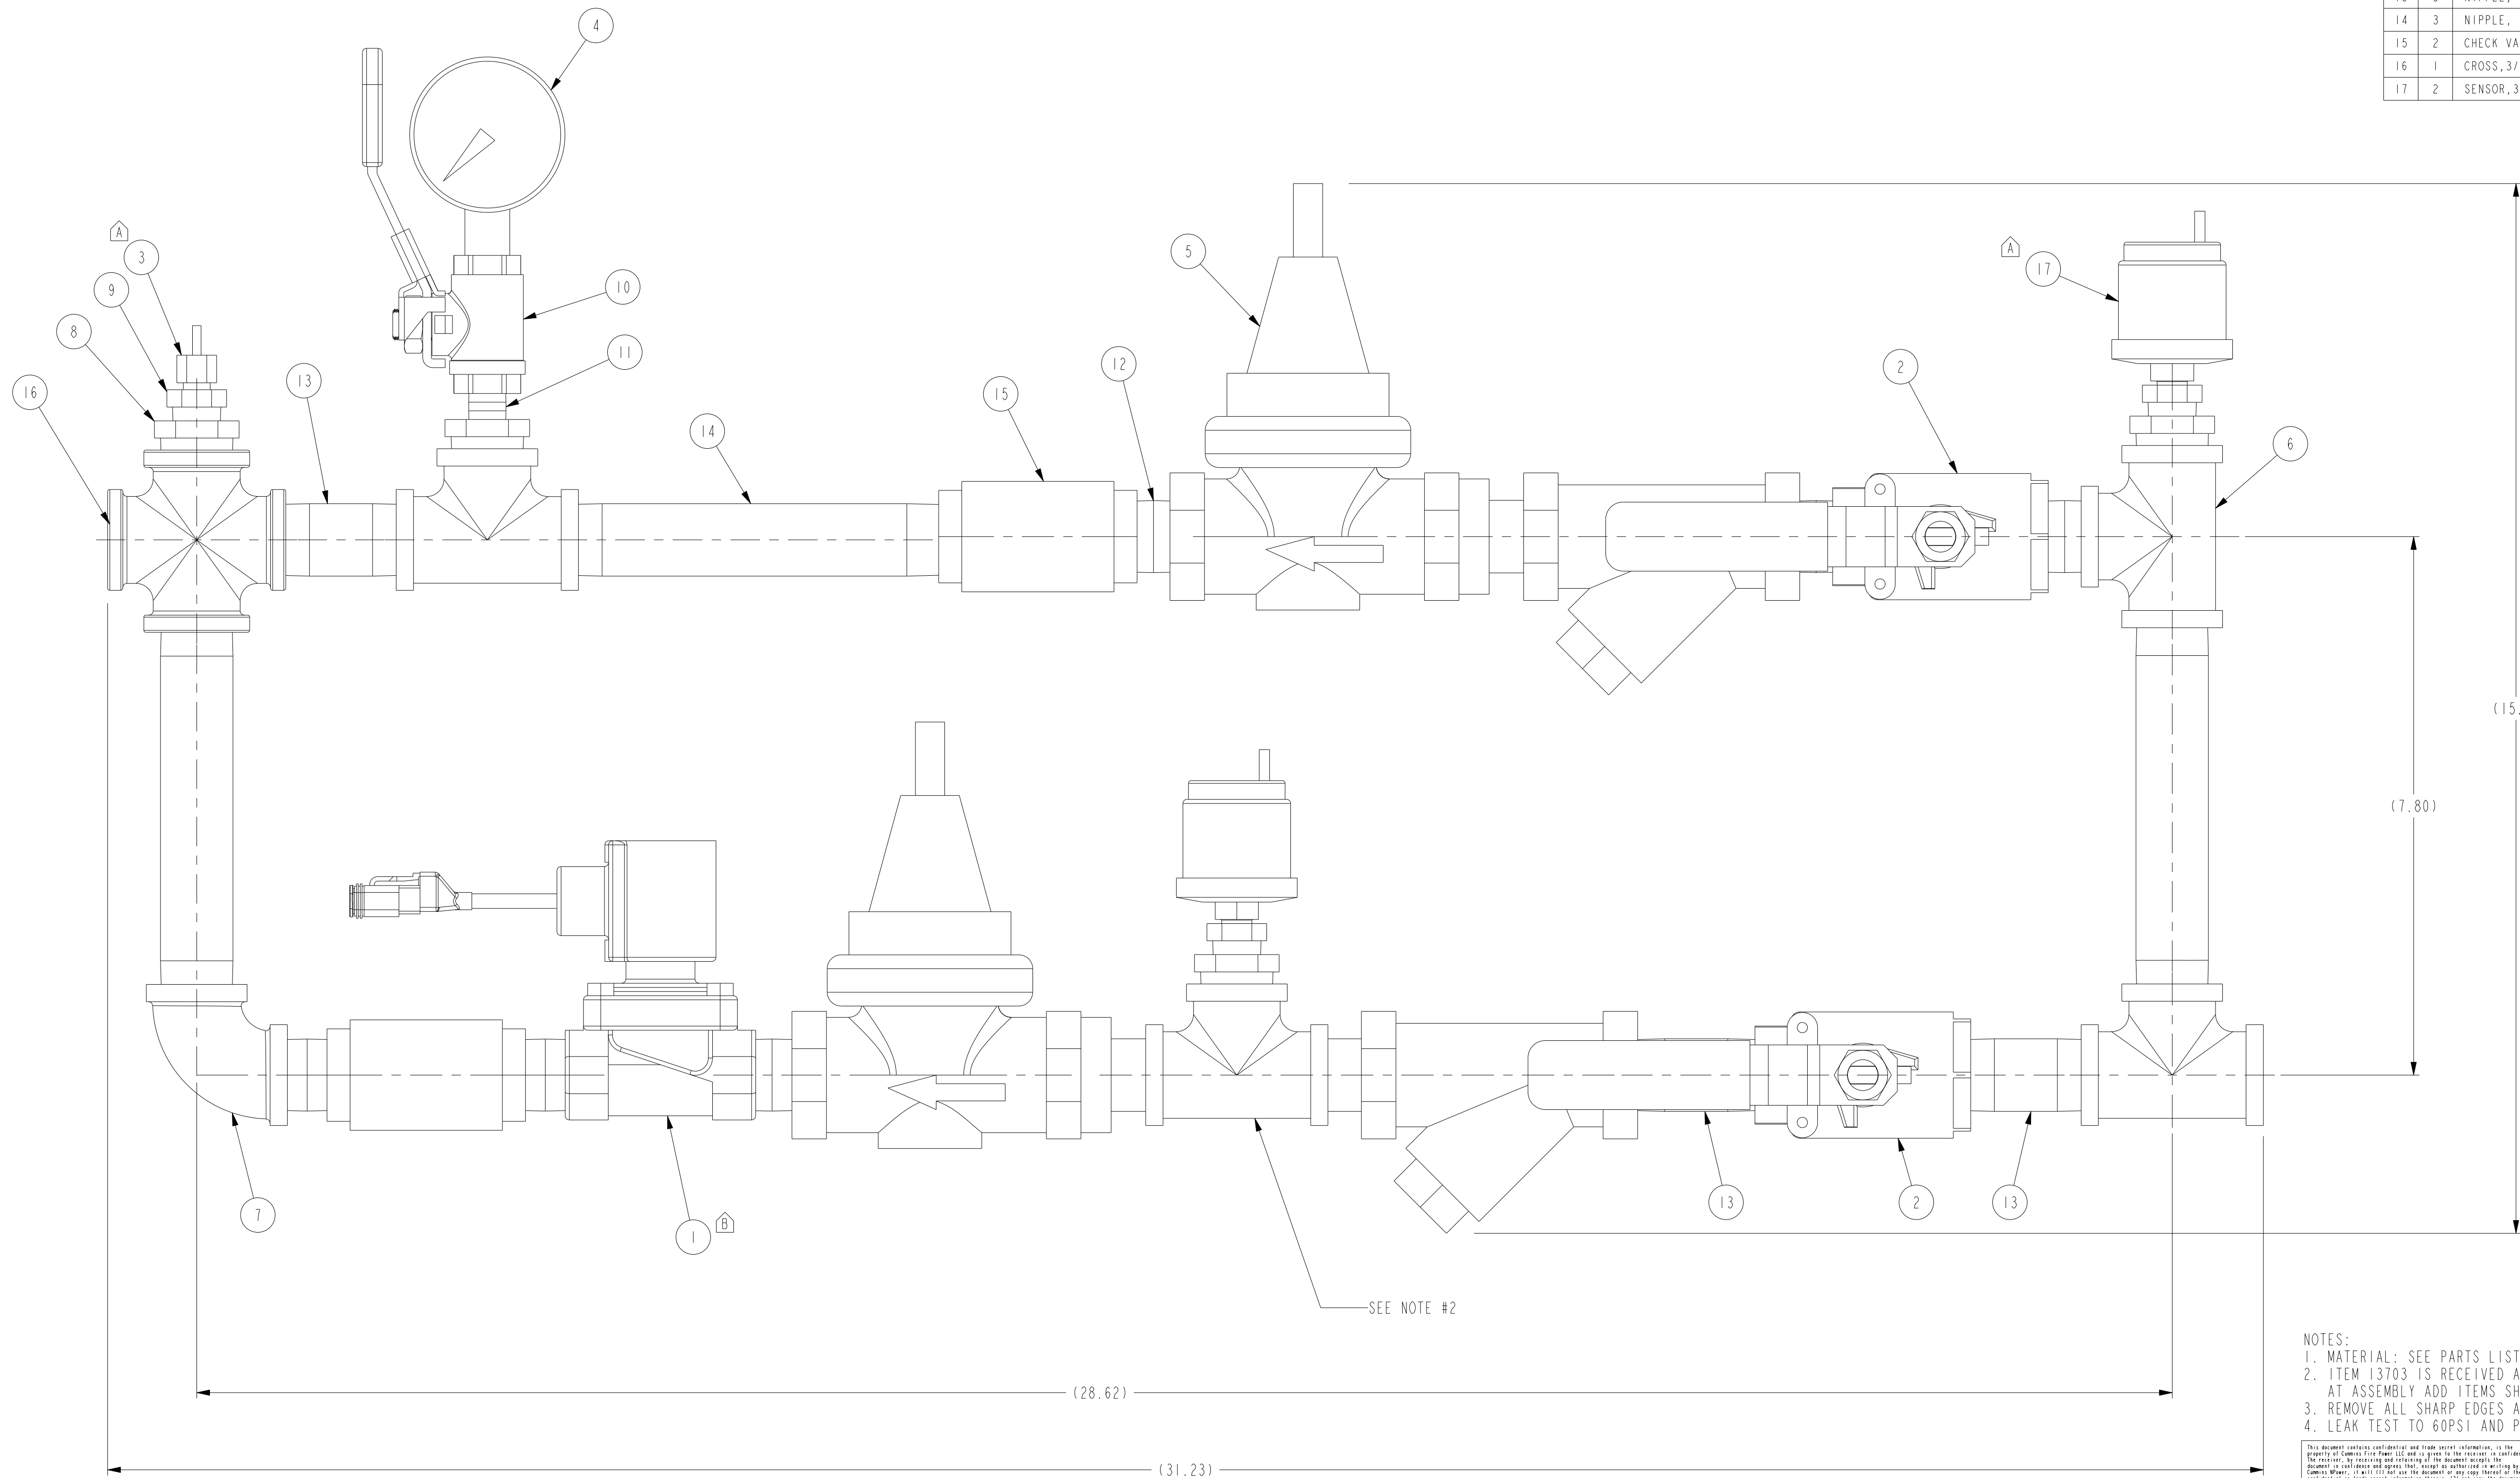

- NOTES:
1. MATERIAL: SEE PARTS LIST
 2. ITEM 13703 IS RECEIVED AS AN UNASSEMBLED KIT. AT ASSEMBLY ADD ITEMS SHOWN
 3. REMOVE ALL SHARP EDGES AND BURRS
 4. LEAK TEST TO 60PSI AND PRESET REGULATORS TO 60PSI

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Cummins Fire Power LLC. All rights reserved. © 2013 Cummins Fire Power LLC. All other rights reserved. This document is the property of Cummins Fire Power LLC. All other rights reserved.

Cummins Fire Power
 CORPORATE OFFICE
 1600 BUREAU ROAD
 WHITE SEAS LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUMMINS FIRE POWER LLC
 AND UFSIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
C	2015-043	ADDED SHEET 2 WITH MATERIAL SPECIFICATIONS	PBS	16JAN2015
B	2014-241	UPDATED TO SHOW LEADS ON SOLENOID VALVE	PBS	17APR2014
A	2013-611	REPLACED 21008 & 21009 WITH 21574 & 8862	PBS	02OCT2013


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± 1°
 THIRD ANGLE PROJECTION



SCALE: 0.750
 EST WEIGHT: NA

Cooling Loop, 3/4", 24V SEA WATER COMPATIBLE
 DWG UNITS: IN/LB/S
 DRAWN BY: BOB KROPP
 PRO-ENGINEER
 SHEET 1 OF 2
 DATE: 02MAR2012
 INIT ECO: 2013-303
 DRAWING NO: 21439




Assembly	Component	Manufacture/pn	Description	Sub-Component	Material	Specification
21439			3/4" 24VDC, Sea Water			
	15739	GC Valves, S211GF16J7EG5	3/4" NPT 24V solenoid valve			
				valve body/bonnet	316 stainless steel	ASTM A351 CF8M
				plunger tube - tub head	430FR	ASTM A838 alloy 2
				tube head shading ring	commercial grade silver	ASTM B742-90
				plunger tube	304 stainless steel	ASTM A269
				valve plunger	430FR	ASTM A838 alloy 2
				plunger spring	302 stainless steel	ASTM 313-08
				diaphragm pilot orifice	303 stainless steel	ASTM A8582
				diaphragm back plate/dish plate	304 stainless steel	ASTM A276-13
	21434	Apollo, 75-104-01	3/4" ball valve			
				lever and grip	steel, zinc plated w/vinyl	
				stem packing	MPTFE	
				stem bearing	RPTFE	
				ball	chrome plated	ASTM B16
				seat	RPTFE	
				retainer		ASTM B16
				gland nut		ASTM B16
				stem		ASTM B16
				lever nut	steel, zinc plated	
				body seal	PTFE	
				body		ASTM B524-C84400
	8862	Datcon 02022-00	temperature sender	Body	brass	
	13113	Grainger, 4RY95	pressure gauge			
				case	stainless steel	
				socket	316 stainless steel	
				tube	316 stainless steel	
				lens	polycarbonate	
				ring	316 stainless steel	
	13703	Wilkins, 500YSBRHLRSW	3/4" regulator/strainer			
				body	cast bronze	ASTM B584
				access covers	cast bronze	ASTM B584
					brass	ASTM B16
				fasteners	300 series stainless steel	
				stem & plunger	cast bronze	ASTM B584
					brass	ASTM B16
				elastomers	Buna Nitrile	FDA approved
					EPDM	FDA approved
				cap gaskets	natural vulcanized fibre	
					Acetal (Delrin 500)	NSF Listed
				springs	oil tempered wire	ASTM A229
				strainer screen	300 series stainless steel	
				seat	300 series stainless steel	
	15755-12		3/4" tee		Copper Alloy	ASTM B62-09
	15756-12		3/4" elbow		Copper Alloy	ASTM B62-09
	15758-12-4		3/4" x 1/4" reducing bushing		Copper Alloy	ASTM B62-09
	15758-4-2		1/4" x 1/8" reducing bushing		Copper Alloy	ASTM B62-09
	15759-04	Apollo, 77-101-01	1/4" ball valve		Copper Alloy	ASTM B62-09
				lever and grip	steel, zinc plated w/vinyl	
				stem packing	MPTFE	
				stem bearing	RPTFE	
				ball	chrome plated	ASTM B16
				seat	RPTFE	
				retainer		ASTM B16
				gland nut		ASTM B16
				stem		ASTM B16
				lever nut	steel, zinc plated	
				body seal	PTFE	
				body		ASTM B524-C84400
	15760		1/4" close nipple		Copper Alloy	ASTM B62-09
	15761		3/4" x 1-3/8" nipple		Copper Alloy	ASTM B62-09
	15762		3/4" x 2-1/2" nipple		Copper Alloy	ASTM B62-09
	15764		3/4" x 6" nipple		Copper Alloy	ASTM B62-09
	15768-12	Watts, series 600	3/4" check valve			
				body	bronze	
				guide bushing	stainless steel	
				spring	stainless steel	
				check	brass	
				seat	PTFE	
				O-ring	Nitrile	
				adapter	brass	
	21436		3/4" cross		Copper Alloy	ASTM B62-09
	21574	Veethree, 977035	pressure sensor			
				housing	diecast	
				diaphragm	beryllium copper	
				wiper	phosphor bronze	
				contact	silver coated	
				wire	German nickel chrome resistance	

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is to be used only for the purposes intended. No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, without the prior written permission of Cummins Fire Power LLC. If you are not an authorized user, you are notified that you are in violation of the law. If you are an authorized user, you are notified that you are in violation of the law if you do not use this document in accordance with the terms of the license agreement. If you are not an authorized user, you are notified that you are in violation of the law. If you are an authorized user, you are notified that you are in violation of the law if you do not use this document in accordance with the terms of the license agreement. If you are not an authorized user, you are notified that you are in violation of the law. If you are an authorized user, you are notified that you are in violation of the law if you do not use this document in accordance with the terms of the license agreement.


	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUREAU ROAD WHITE SEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND OFFICE CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	COOLING LOOP, 3/4", 24V SEA WATER COMPATIBLE	

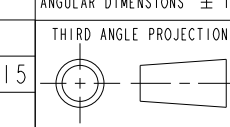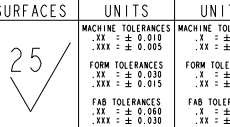C	2015-043	SEE SHEET 1 FOR LATEST REVISION DETAILS	PBS	16JAN2015			DWG UNITS: IN/LB/S	DRAWN BY: BOB KROPP PRO-ENGINEER	DATE: 02MAR2012 INIT ECO: 2013-303
REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE					

TYPICAL GUARDING FASTENERS
SCALE 0.500

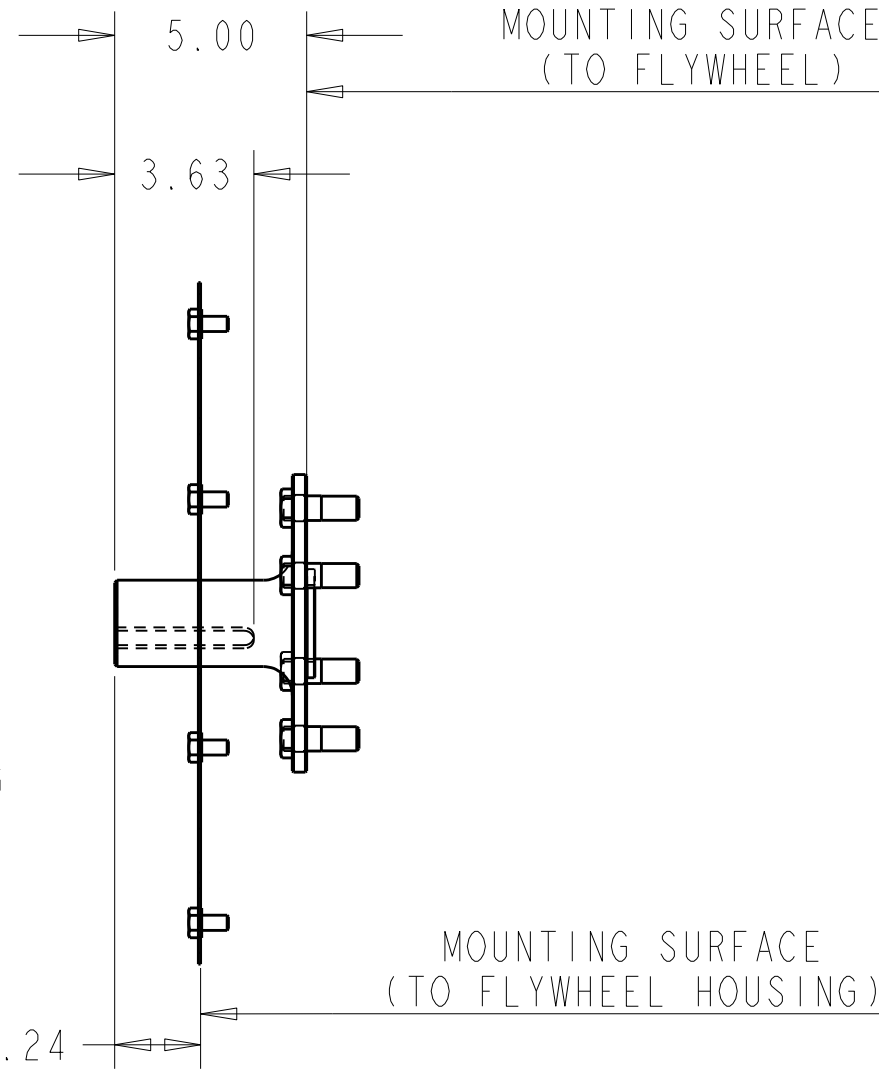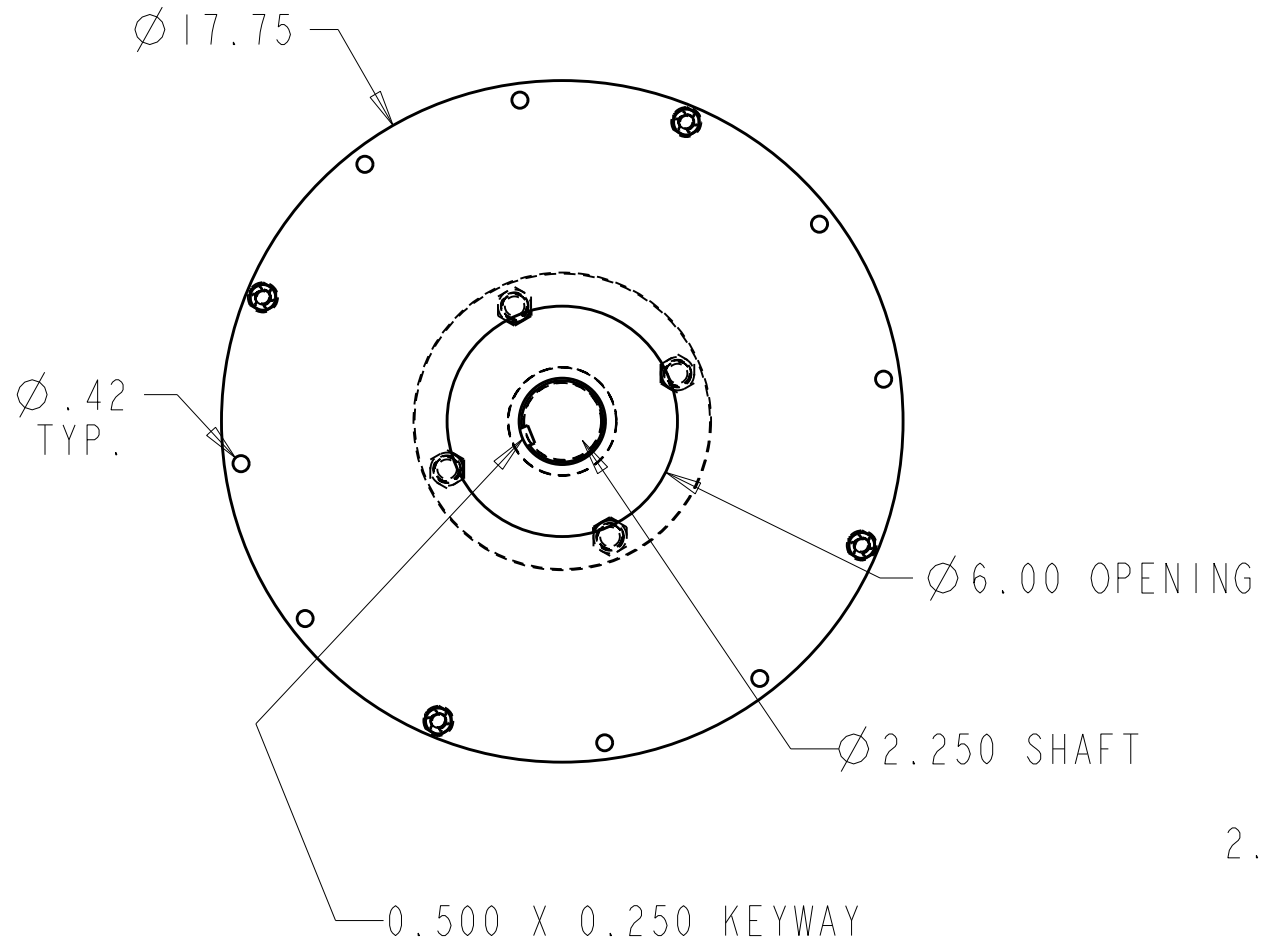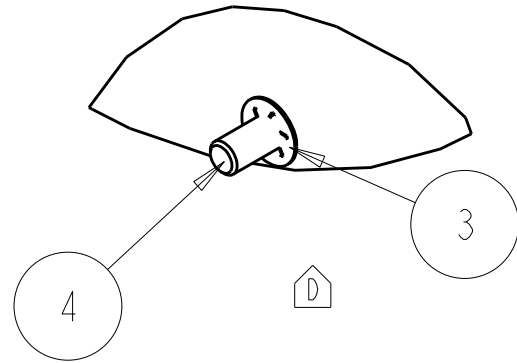

TORQUE CLASS 1
260-290 N*M

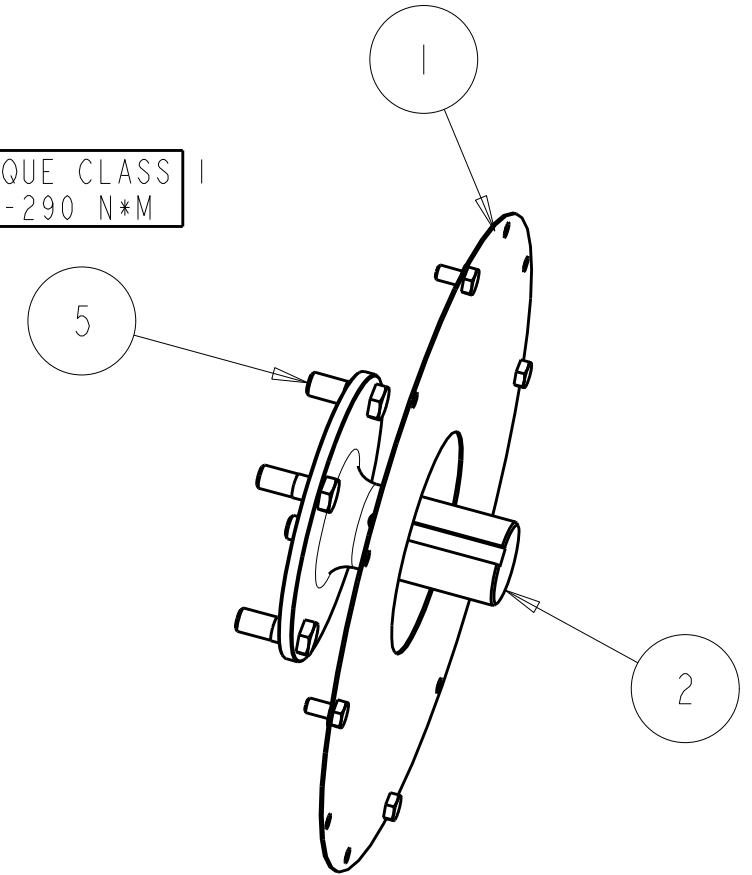

BILL OF MATERIAL			
ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	GUARD, STUB SHAFT, SAE #3 FLYWHEEL, FIREPUMP	8611
2	1	STUB SHAFT, SAE #3 FLYWHEEL, HAYES #, FIREPUMP	9624
3	4	RETAINING WASHER, PUSHNUT, 3/8" BOLT	16662-06
4	4	SCREW, CAP, HEX HEAD, M10-1.5	HHCS_M10
5	4	SCREW, CAP, HEX HEAD, M16 x 50	HHCS_M16_50

NOTES:
1. MASS: 13.9 LBS, INERTIA: 67.49 IB.IN^2

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins NPower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
AND UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
THIRD ANGLE PROJECTION	MACHINE TOLERANCES .XX ± 0.010 .XX ± 0.005	MACHINE TOLERANCES .X ± 0.4 .XX ± 0.2
	FORM TOLERANCES .XX ± 0.030 .XX ± 0.015	FORM TOLERANCES .X ± 0.8 .XX ± 0.4
	FAB TOLERANCES .XX ± 0.080 .XX ± 0.030	FAB TOLERANCES .X ± 1.5 .XX ± 0.8

ASSEMBLY, STUB SHAFT, 2.25" DIA
FIREPUMP


DWG UNITS: IN/LB/S
DRAWN BY: DAVE N
DATE: 15OCT2004

SCALE: 0.200
EST WEIGHT: 33.399



SHEET 1 OF 1
DRAWING NO: 8619

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE
D	2010-098	ADDED RETAINING FASTENERS	DAN	04-MAR-10
C	2009-620	ADDED MASS & INERTIA DATA	S DUBICK	12/23/09

CONTROL PANEL ENCLOSURE

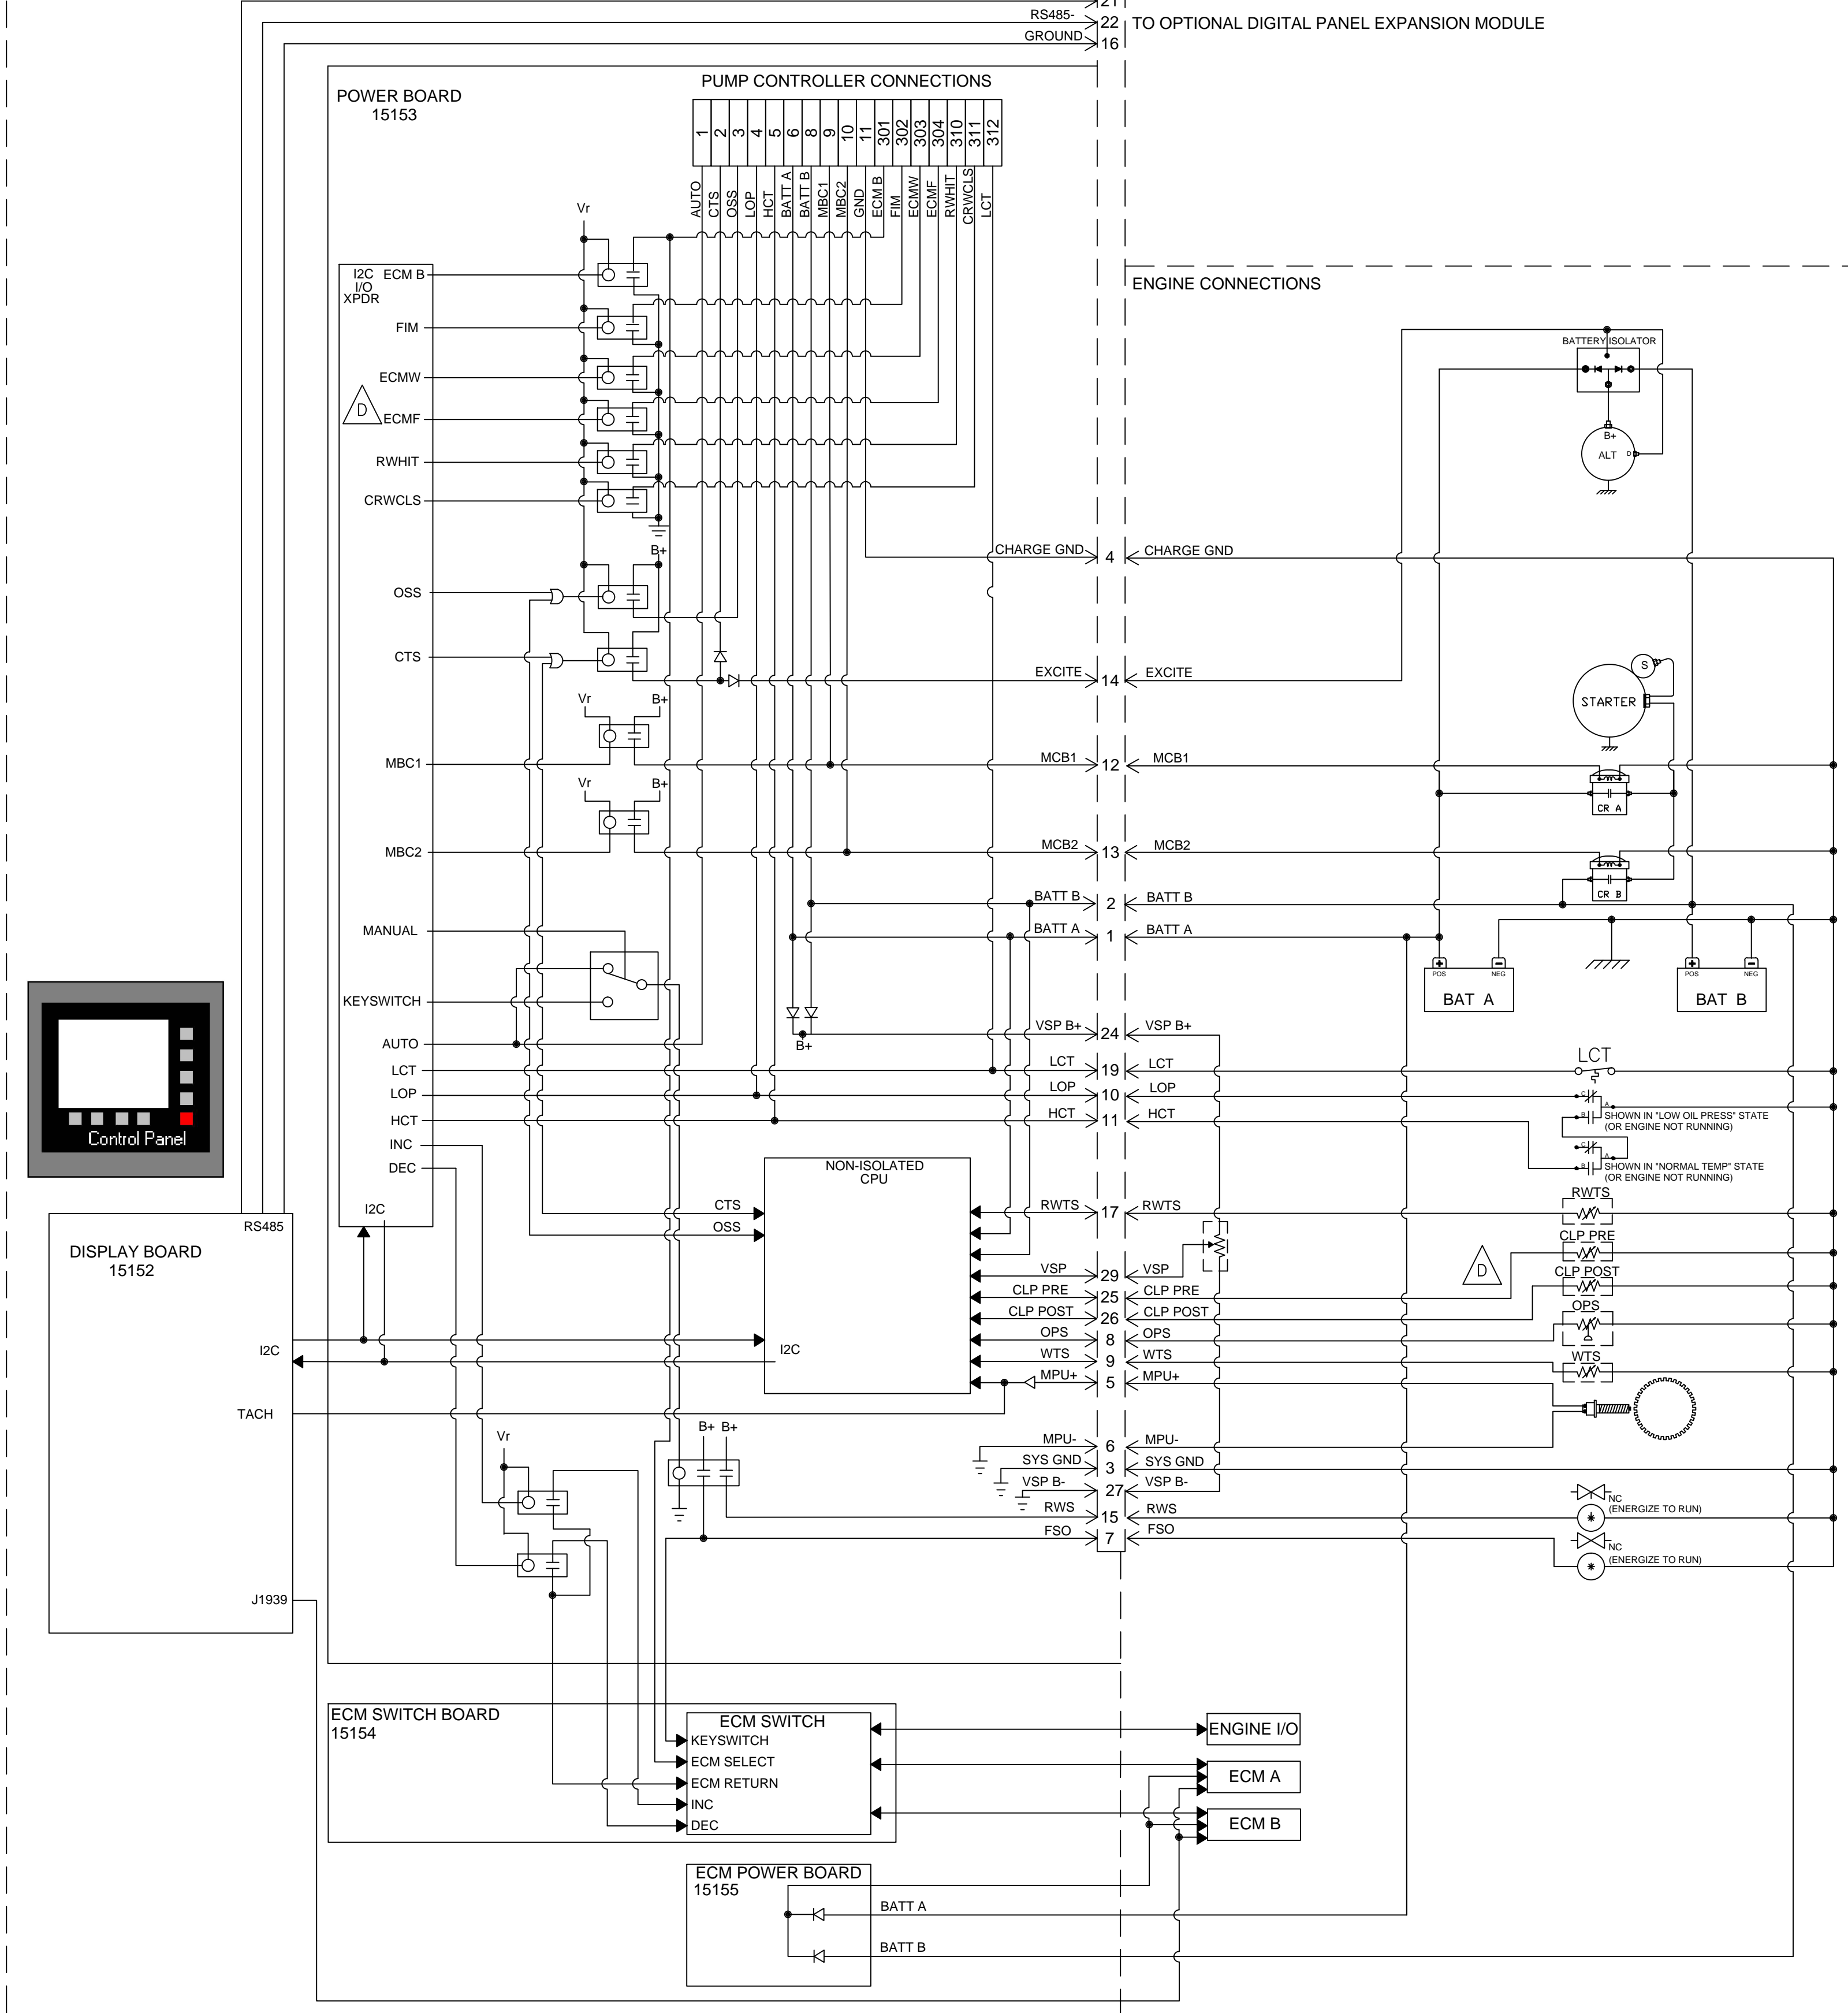

- LEGEND:**
- OSS = OVER SPEED SWITCH
 - CTS = CRANK TERMINATION SWITCH
 - MBC1 = MAIN BATTERY CONTACTOR 1
 - MBC2 = MAIN BATTERY CONTACTOR 2
 - LCT = LOW COOLANT TEMPERATURE
 - HCT = HIGH COOLANT TEMPERATURE
 - LOP = LOW OIL PRESSURE
 - FSD = FUEL SHUT OFF
 - RWS = RAW WATER SOLENOID
 - VSP = VARIABLE SPEED PRESURE
 - DOP PRE = DIFFERENTIAL OIL PRESSURE PRE
 - DOP POST = DIFFERENTIAL OIL PRESSURE POST
 - OPS = OIL PRESSURE SENDER
 - WTS = WATER TEMPERATURE SENDER
 - MPU = MAGNETIC PICK-UP
 - RWHT = RAW WATER HIGH INLET TEMP
 - CRWCLS = CLOGGED RAW WATER COOLING LOOP STRAINER
 - CLP PRE = COOLING LOOP PRESSURE PRE STRAINER
 - CLP POST = COOLING LOOP PRESSURE POST STRAINER
 - RWTS = RAW WATER TEMPERATURE SENDER
 - ECMW = ELECTRONIC CONTROL MODULE WARNING
 - ECMF = ELECTRONIC CONTROL MODULE FAILURE

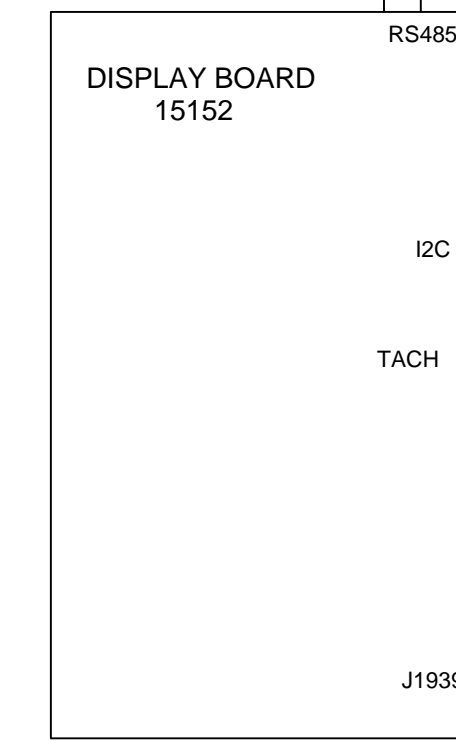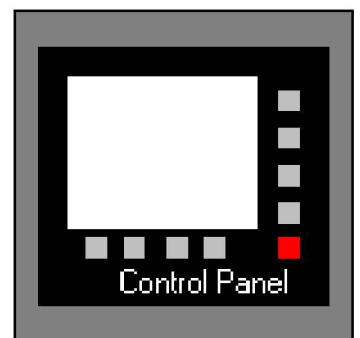

- NOTES:**
- 1) SEE SHEET 2 FOR CFP5E ECM SWITCH SCHEMATIC
 - 2) SEE SHEET 3 FOR CFP7E ECM SWITCH SCHEMATIC
 - 3) SEE SHEET 4 FOR CFP9E ECM SWITCH SCHEMATIC
 - 4) SEE SHEET 5 FOR CFP11E ECM SWITCH SCHEMATIC
 - 5) SEE SHEET 6 FOR CFP15E ECM SWITCH SCHEMATIC
 - 6) SEE SHEET 7 FOR CFP23E ECM SWITCH SCHEMATIC




REV	ENF	DESCRIPTION OF REVISION	BY	DATE
D	2014-107	ADDED COOLING LOOP SENSORS	RHL	21FEB2014
C		ADDED LOW COOLANT TEMP SWITCH WIRING	KAK	03DEC2013
B	2011-307	MODIFIED SHEET 7, CFP23E	S DUBICK	12-JAN-12
A	2011-189	ADDED RS485 WIRES	PBS	15JUN2011

Fire Power
 SCHEMATIC, FIRE PUMP DRIVERS
 CFP MODELS: 5E, 7E, 9E, 11E, 15E, 23E
 DWG UNITS: INCH/LB/S
 SCALE: 1:1
 EST WEIGHT: SHEET 10F7 DRAWING NO: 16260

CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUENLE ROAD
 WHITE BEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND
 LIFT CENTER
 375 LAMARINE DRIVE
 DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± 1°
 IMPERIAL UNITS METRIC UNITS
 THIRD ANGLE PROJECTION

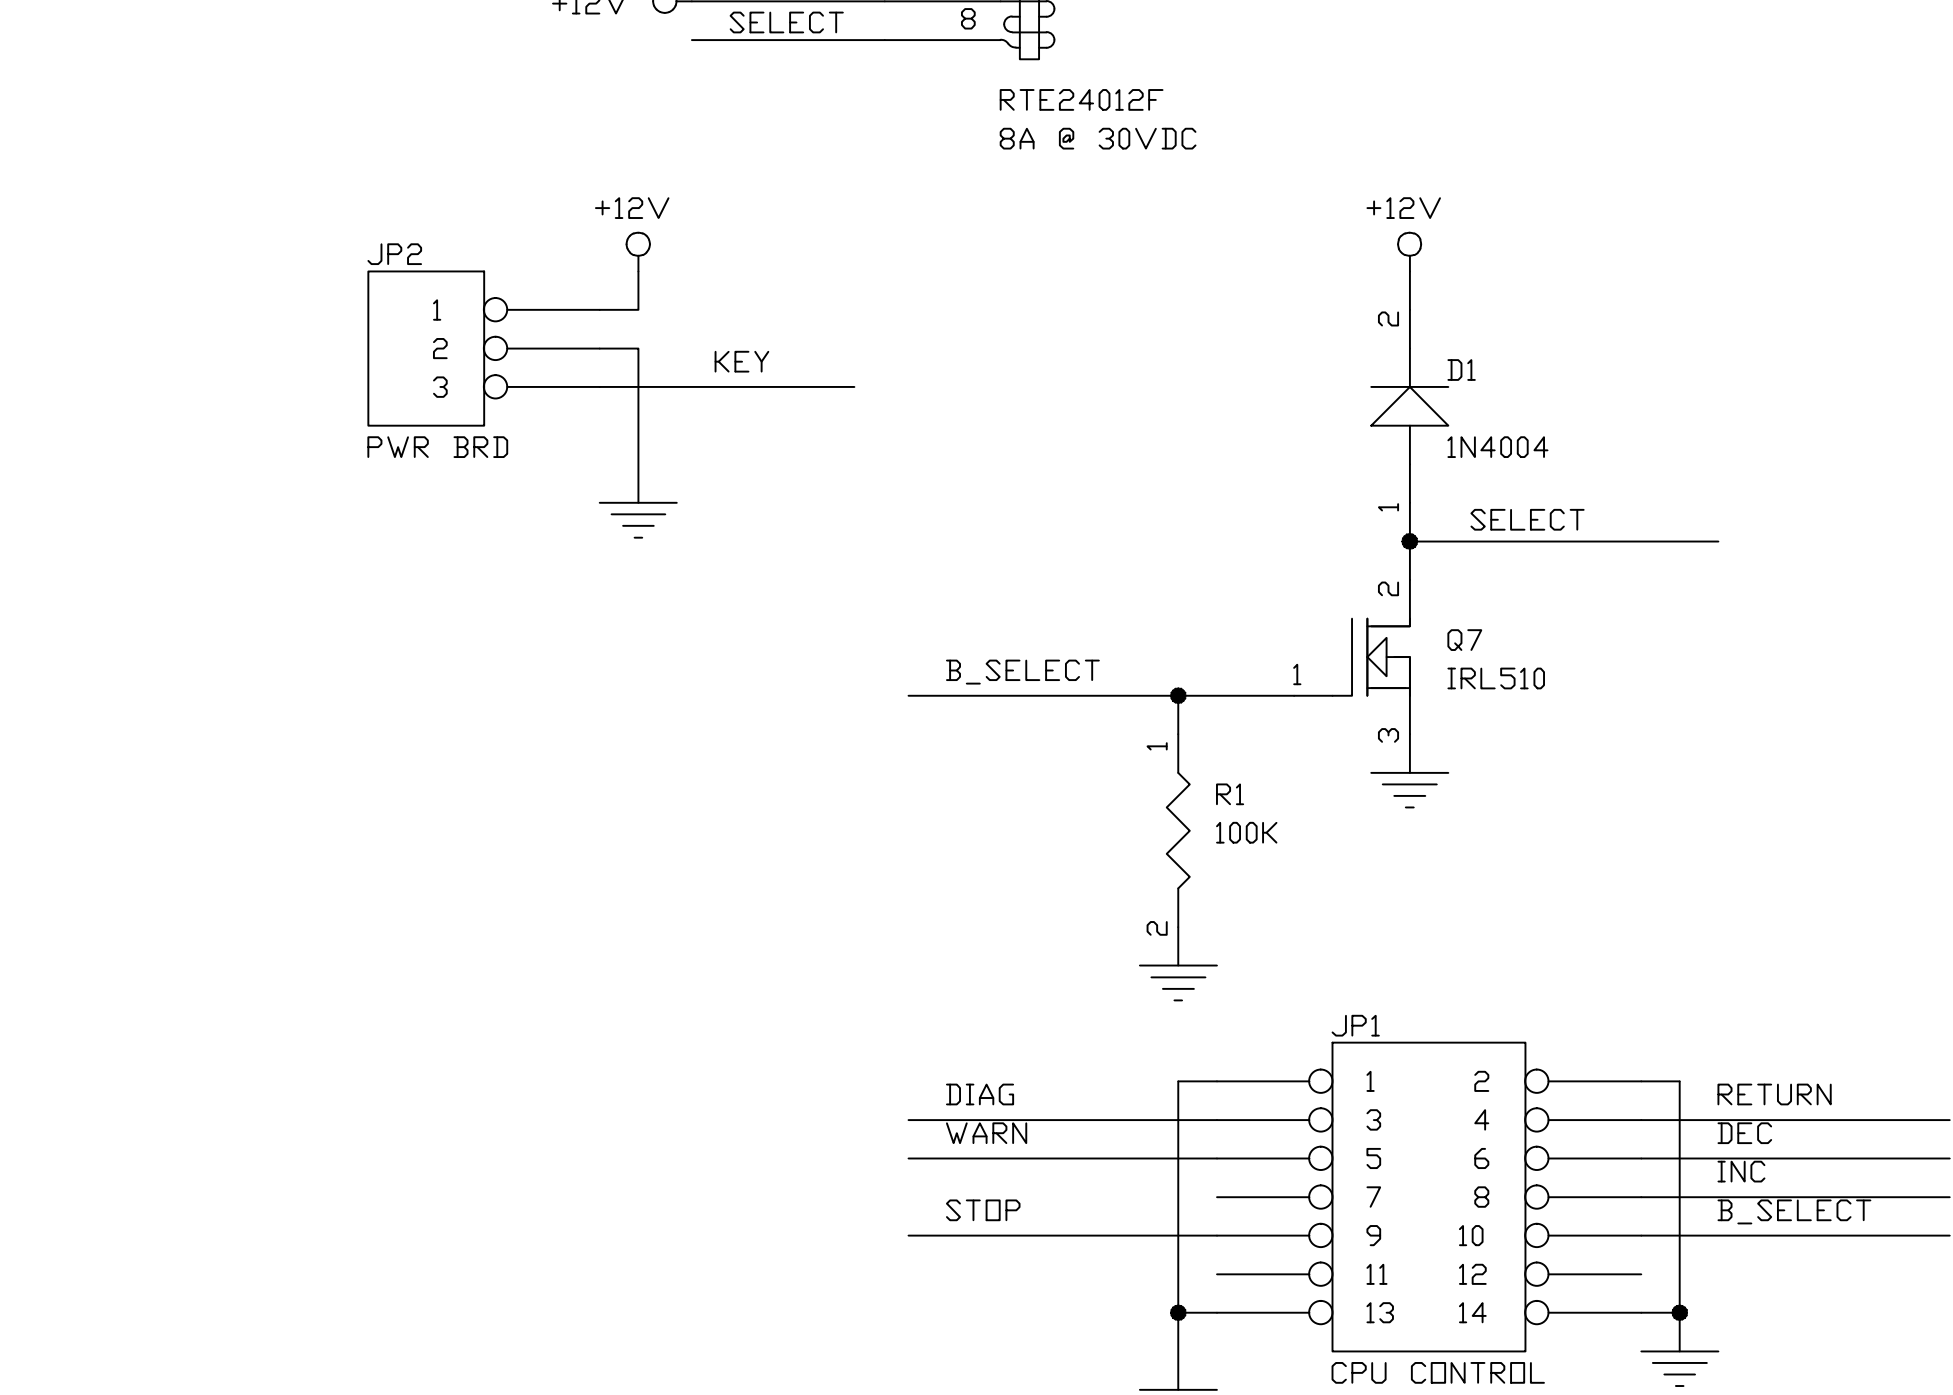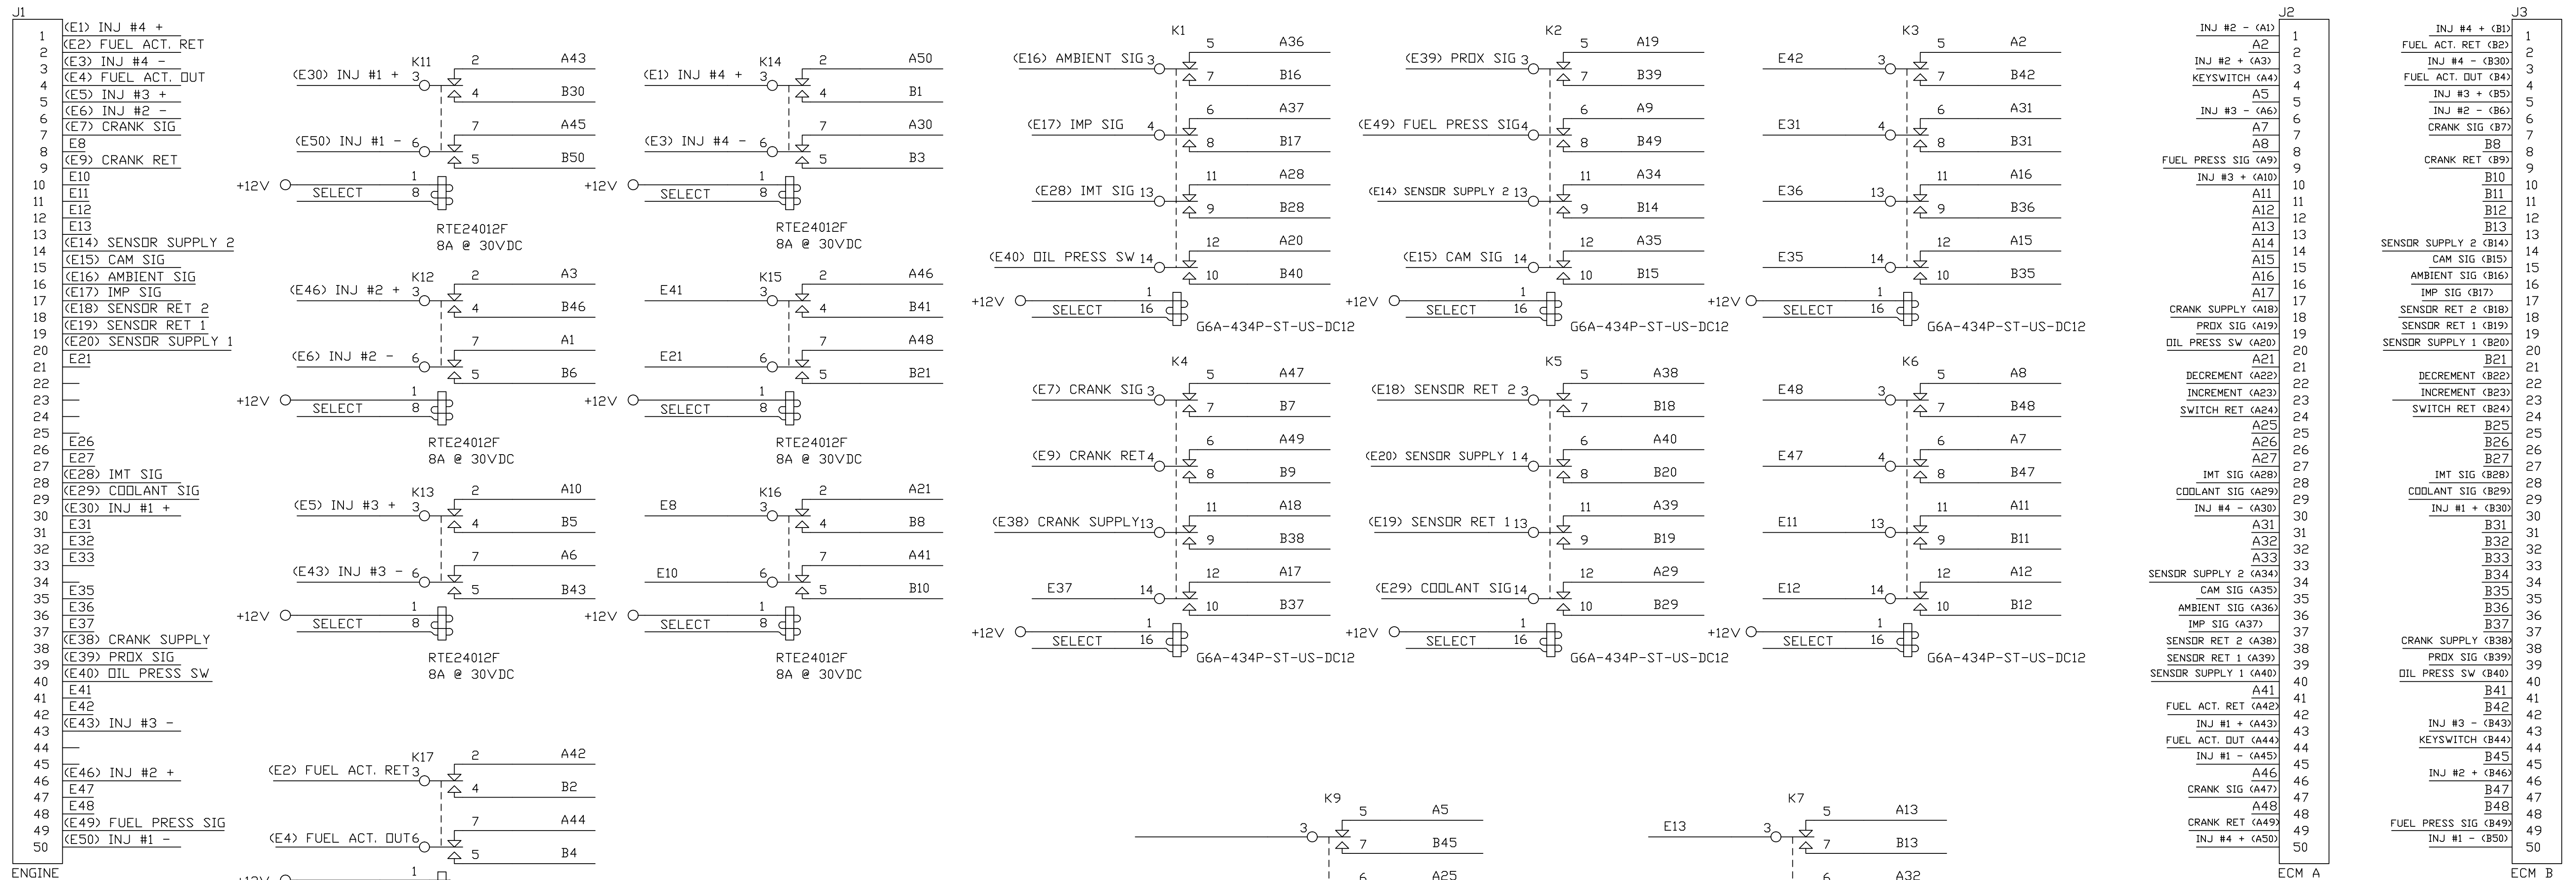

D	2014-107	SEE SHEET 1 FOR LATEST REVISION.	RMJ	24FEB2014
C		SEE SHEET 1 FOR LATEST REVISION.	KAK	03DEC2013
REV	ENF	DESCRIPTION OF REVISION	BY	DATE

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°	IMPERIAL UNITS	METRIC UNITS
	MACHINE TOLERANCES XX = ± 0.010 XX = ± 0.005	MACHINE TOLERANCES XX = ± 0.1 XX = ± 0.2
	FIBER TOLERANCES XX = ± 0.010 XX = ± 0.005	FIBER TOLERANCES XX = ± 0.1 XX = ± 0.2

THIRD ANGLE PROJECTION

Cummins Fire Power

CUMMINS FIRE POWER LLC
CORPORATE OFFICE
1600 BUERKLE ROAD
WHITE BEAR LAKE, MN
WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND
UPFIT CENTER
875 LAWRENCE DRIVE
DEPERE, WISCONSIN

**SCHEMATIC, ECM SWITCH
CFP5E FIRE PUMP DRIVER**

DWG UNITS: INCH/LB/S
SCALE: EST WEIGHT:

DRAWN BY: KAK
AUTO CAD







DATE: 14 DEC 2009
REF DRWG:

SHEET 20F7
DRAWING NO: 16260

J1

1 (E1) INJ #4 +
 2 (E2) FUEL ACT. RET
 3 (E3) INJ #4 -
 4 (E4) FUEL ACT. OUT
 5 (E5) INJ #3 +
 6 (E6) INJ #2 -
 7 (E7) CRANK SIG
 8 (E8) INJ #6 +
 9 (E9) CRANK RET
 10 (E10) INJ #6 -
 11 E11
 12 E12
 13 E13
 14 (E14) SENSOR SUPPLY 2
 15 (E15) CAM SIG
 16 (E16) AMBIENT SIG
 17 (E17) IMP SIG
 18 (E18) SENSOR RET 2
 19 (E19) SENSOR RET 1
 20 (E20) SENSOR SUPPLY 1
 21 (E21) INJ #5 -
 22
 23
 24
 25 E26
 26 E27
 27 (E28) IMT SIG
 28 (E29) COOLANT SIG
 29 (E30) INJ #1 +
 30 E31
 31 E32
 32 E33
 33
 34 E35
 35 E36
 36 E37
 37 (E38) CRANK SUPPLY
 38 (E39) PROX SIG
 39 (E40) OIL PRESS SW
 40 (E41) INJ #5 +
 41 E42
 42 (E43) INJ #3 -
 43
 44
 45 (E46) INJ #2 +
 46 E47
 47 E48
 48 (E49) FUEL PRESS SIG
 49 (E50) INJ #1 -
 50

ENGINE

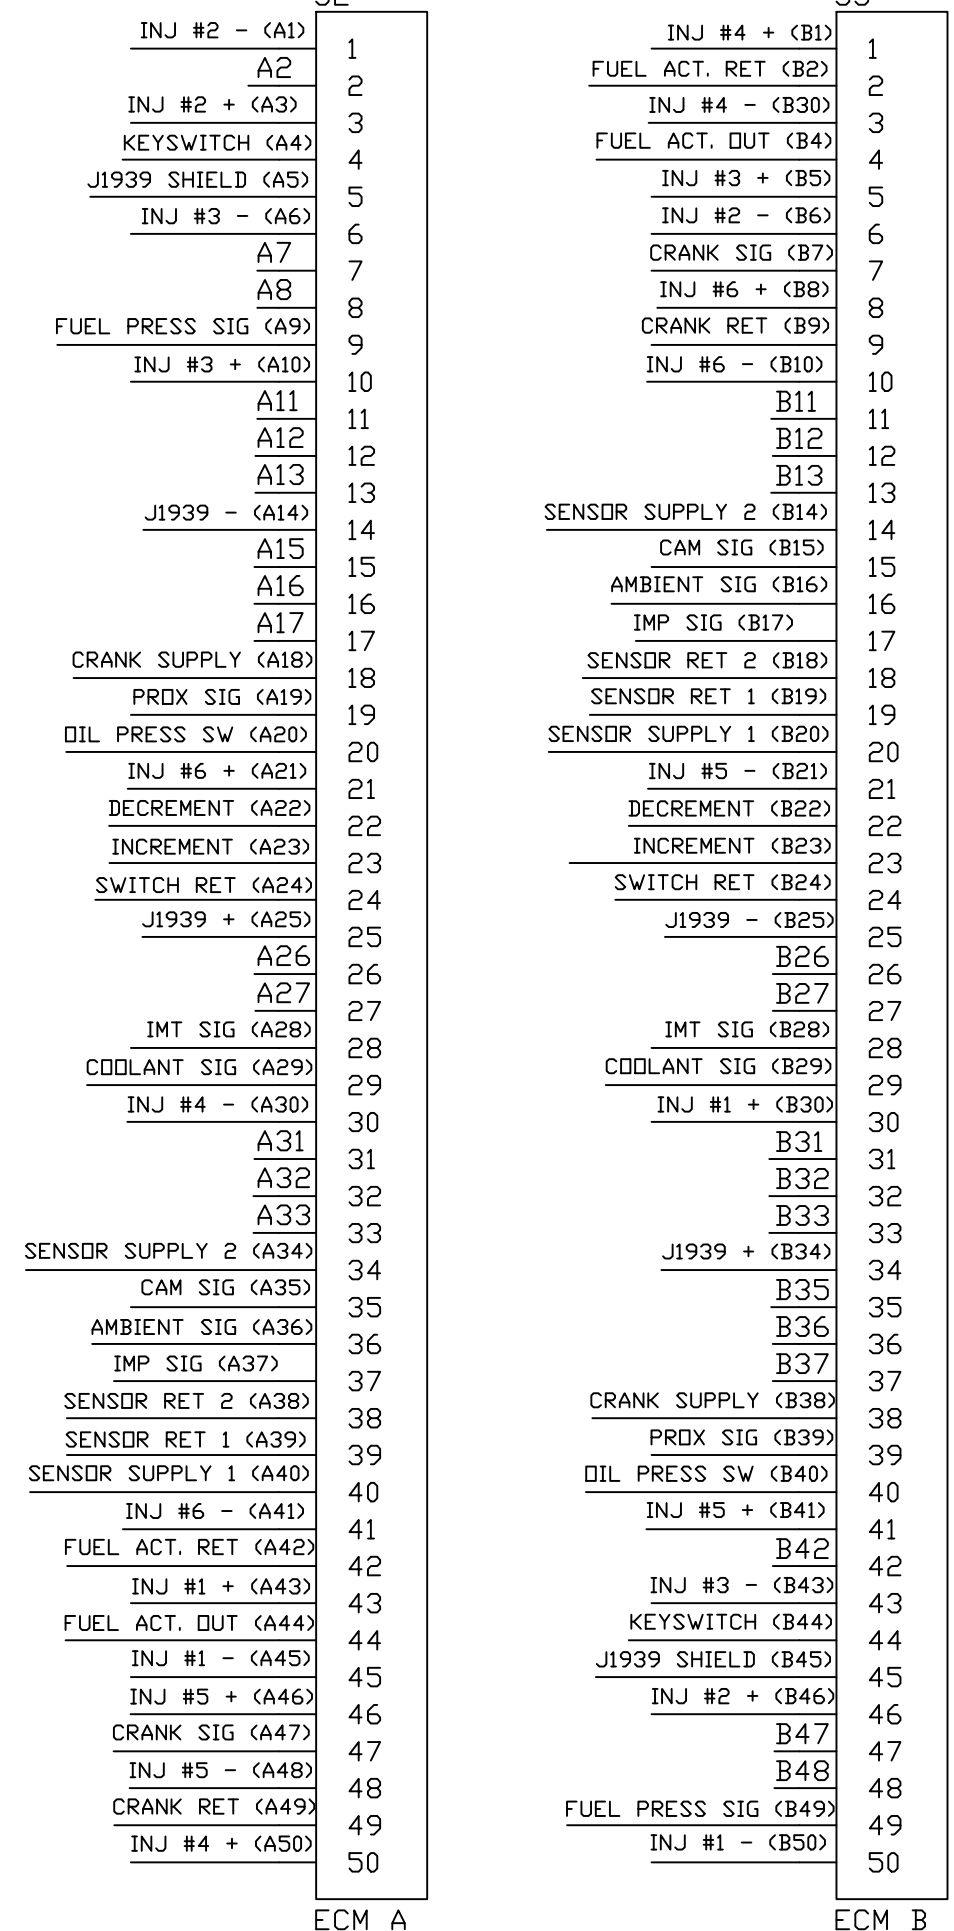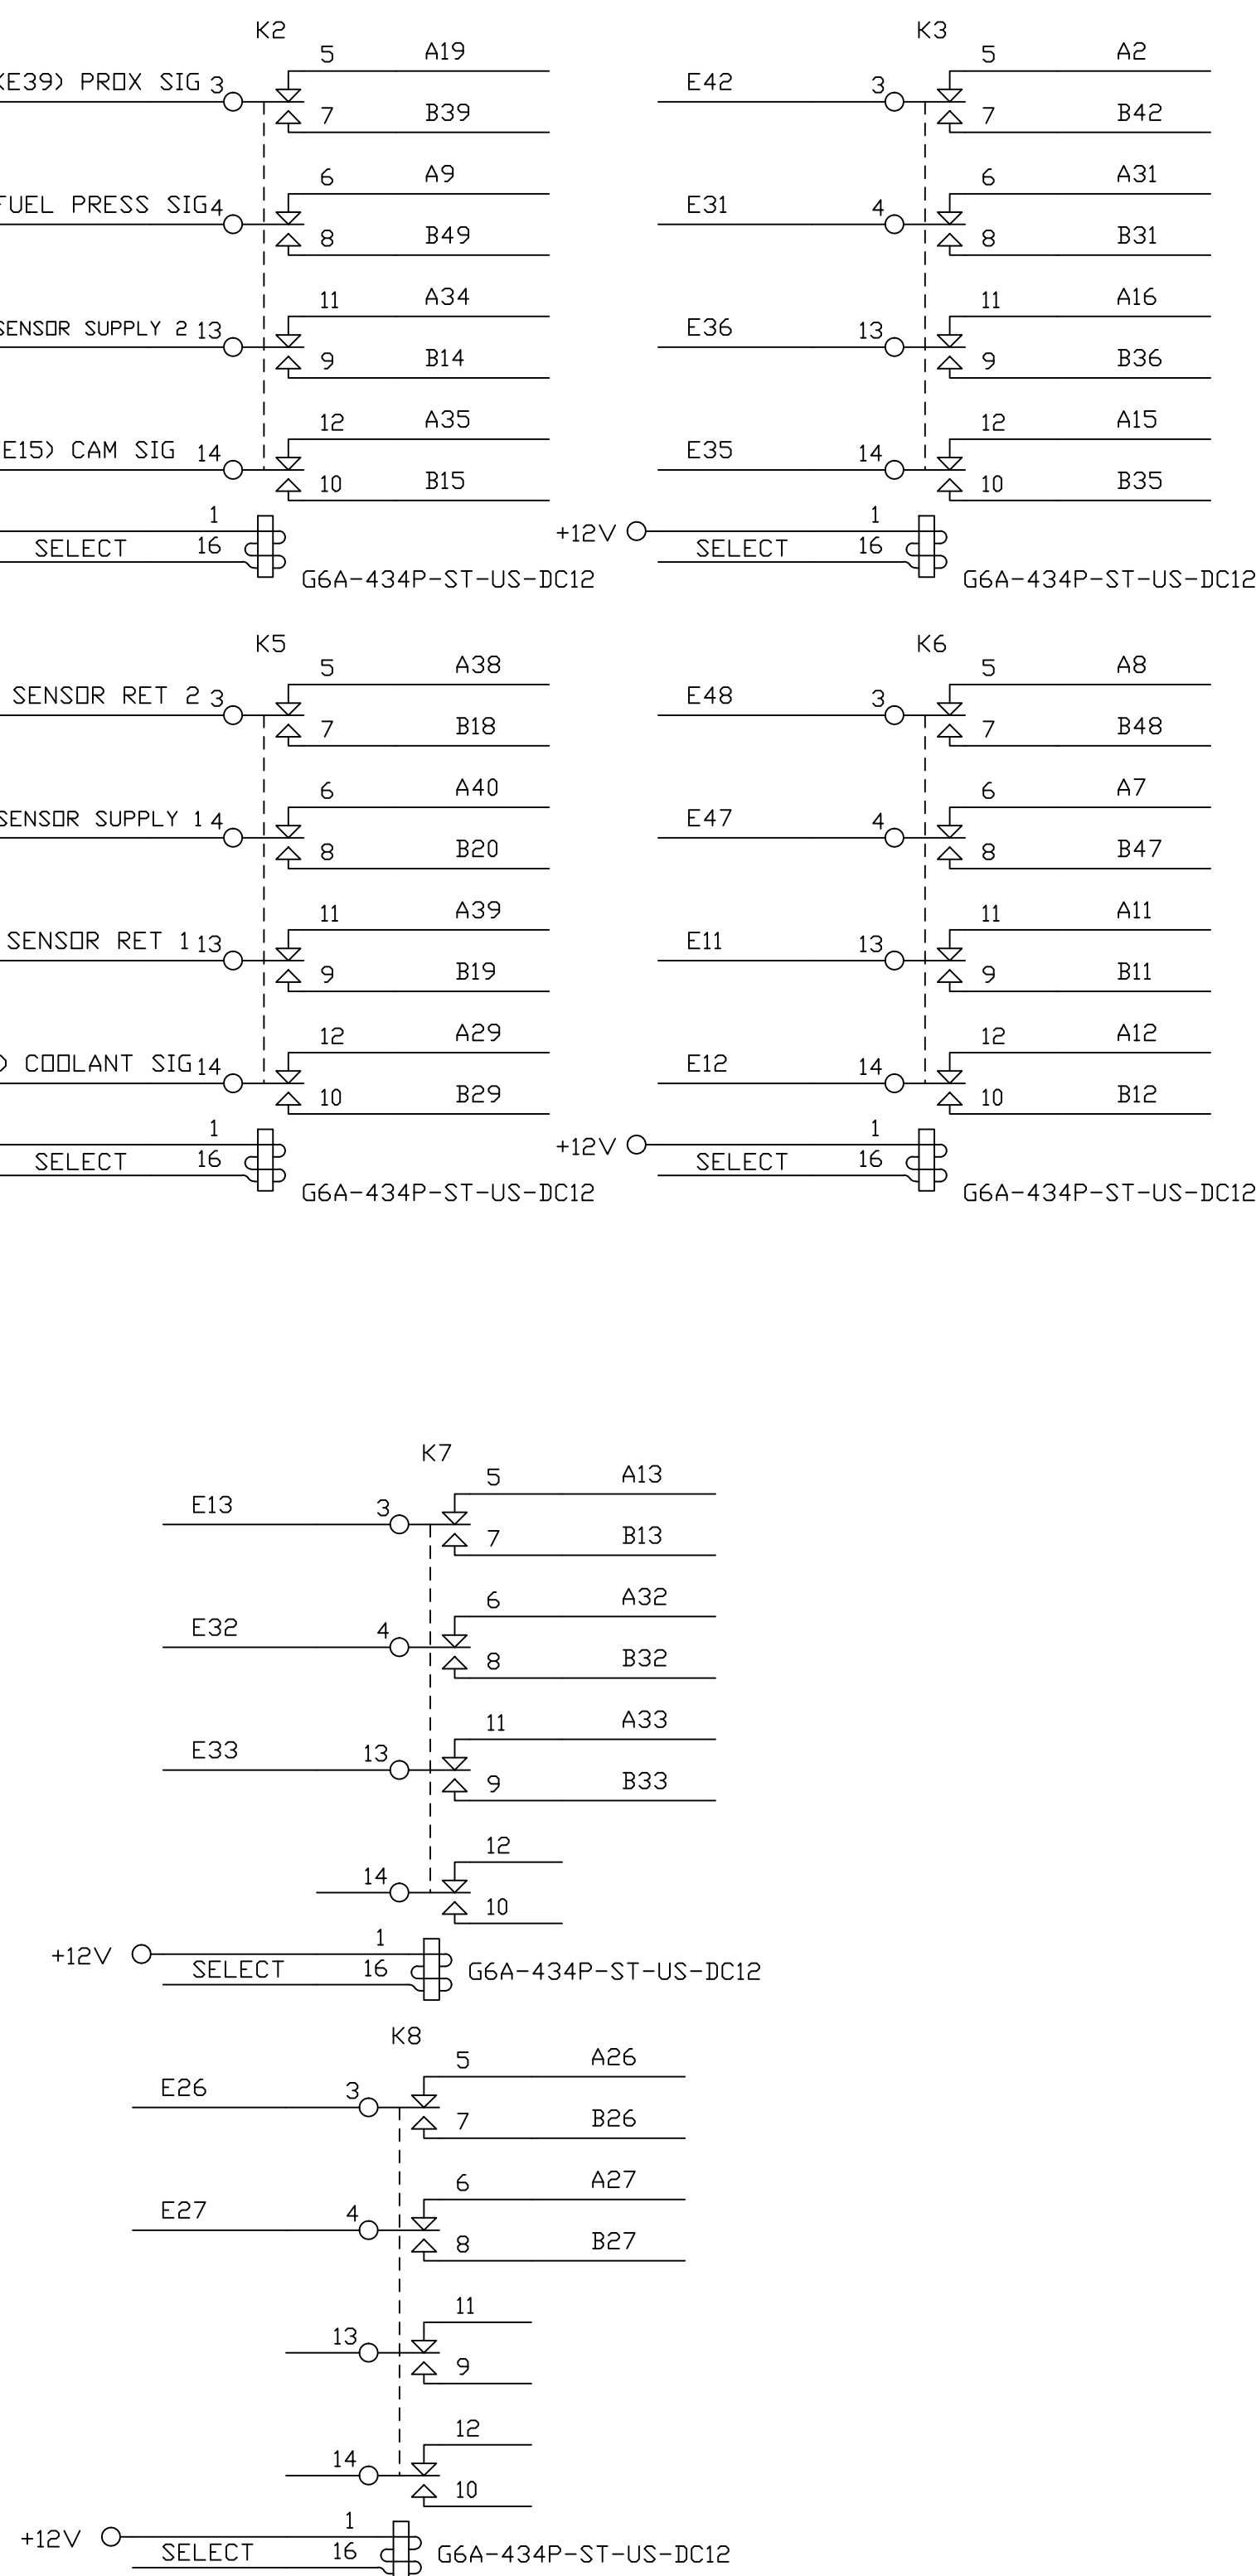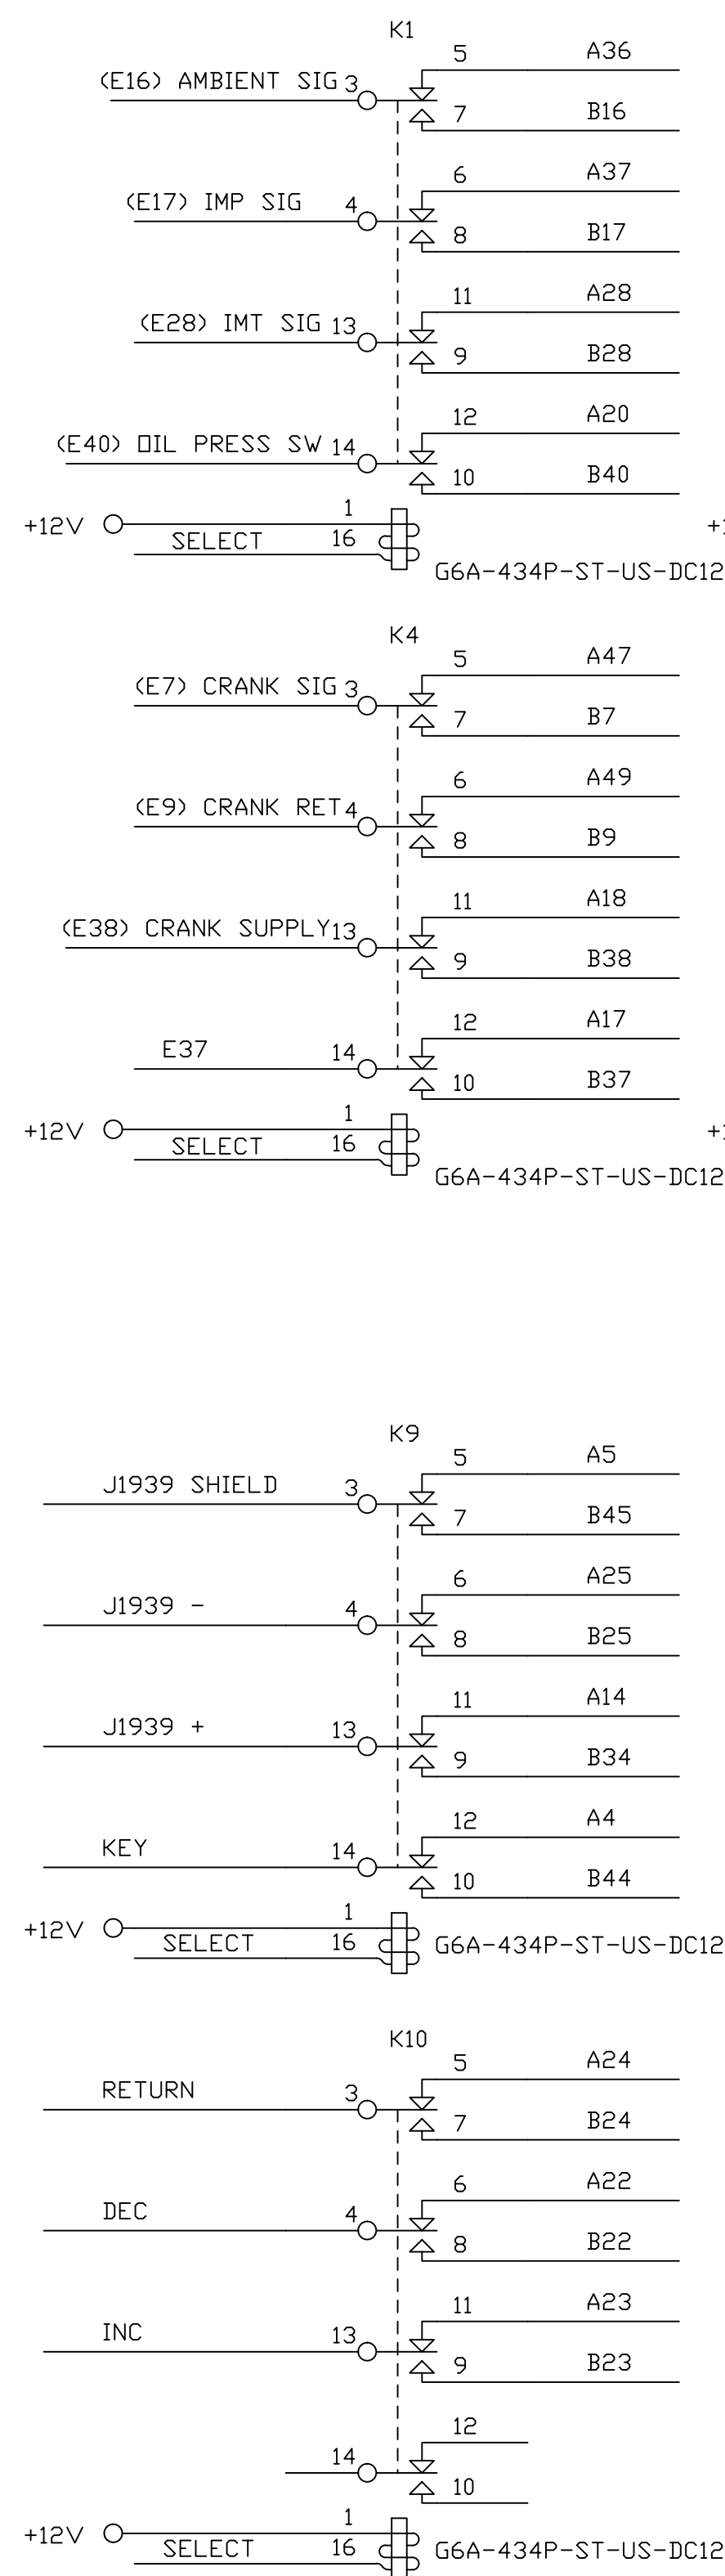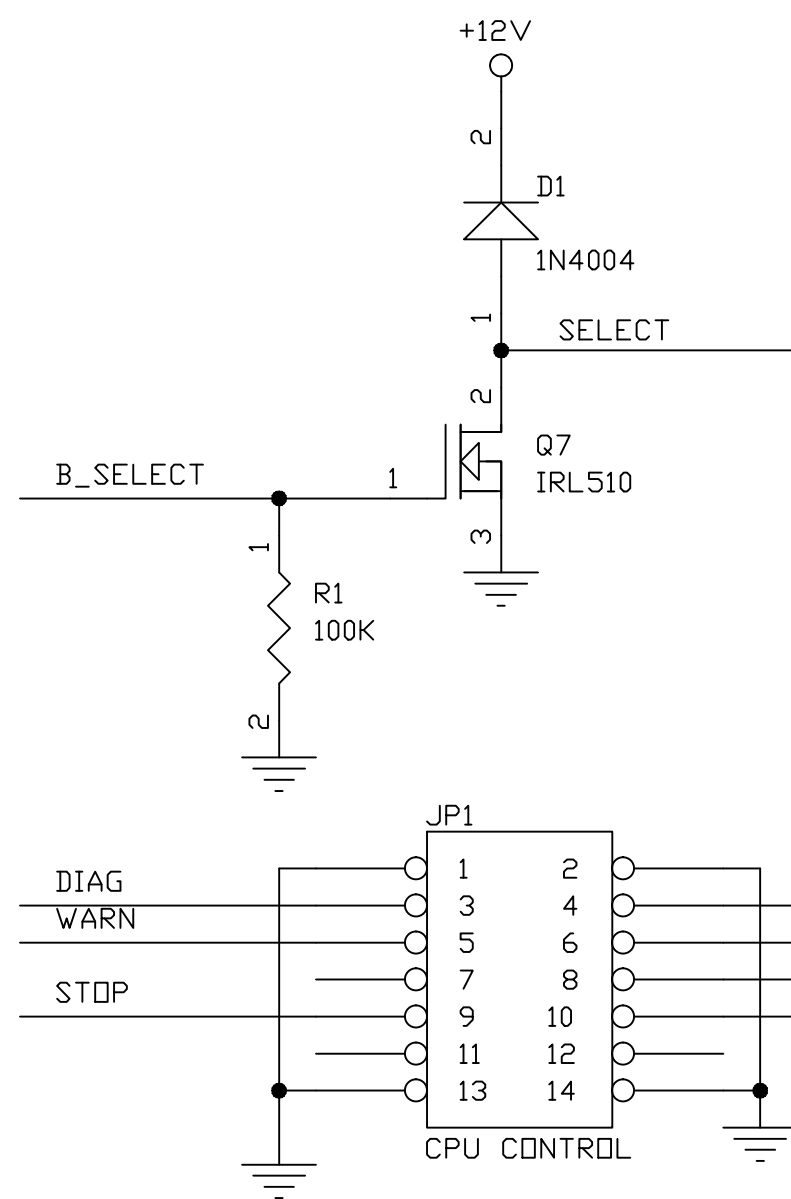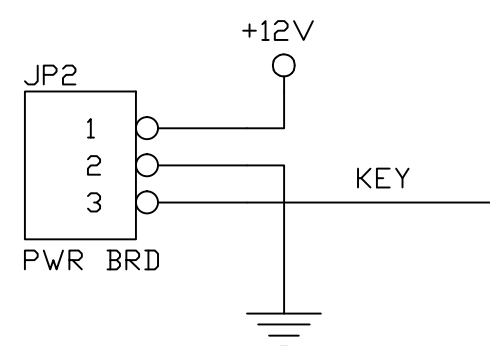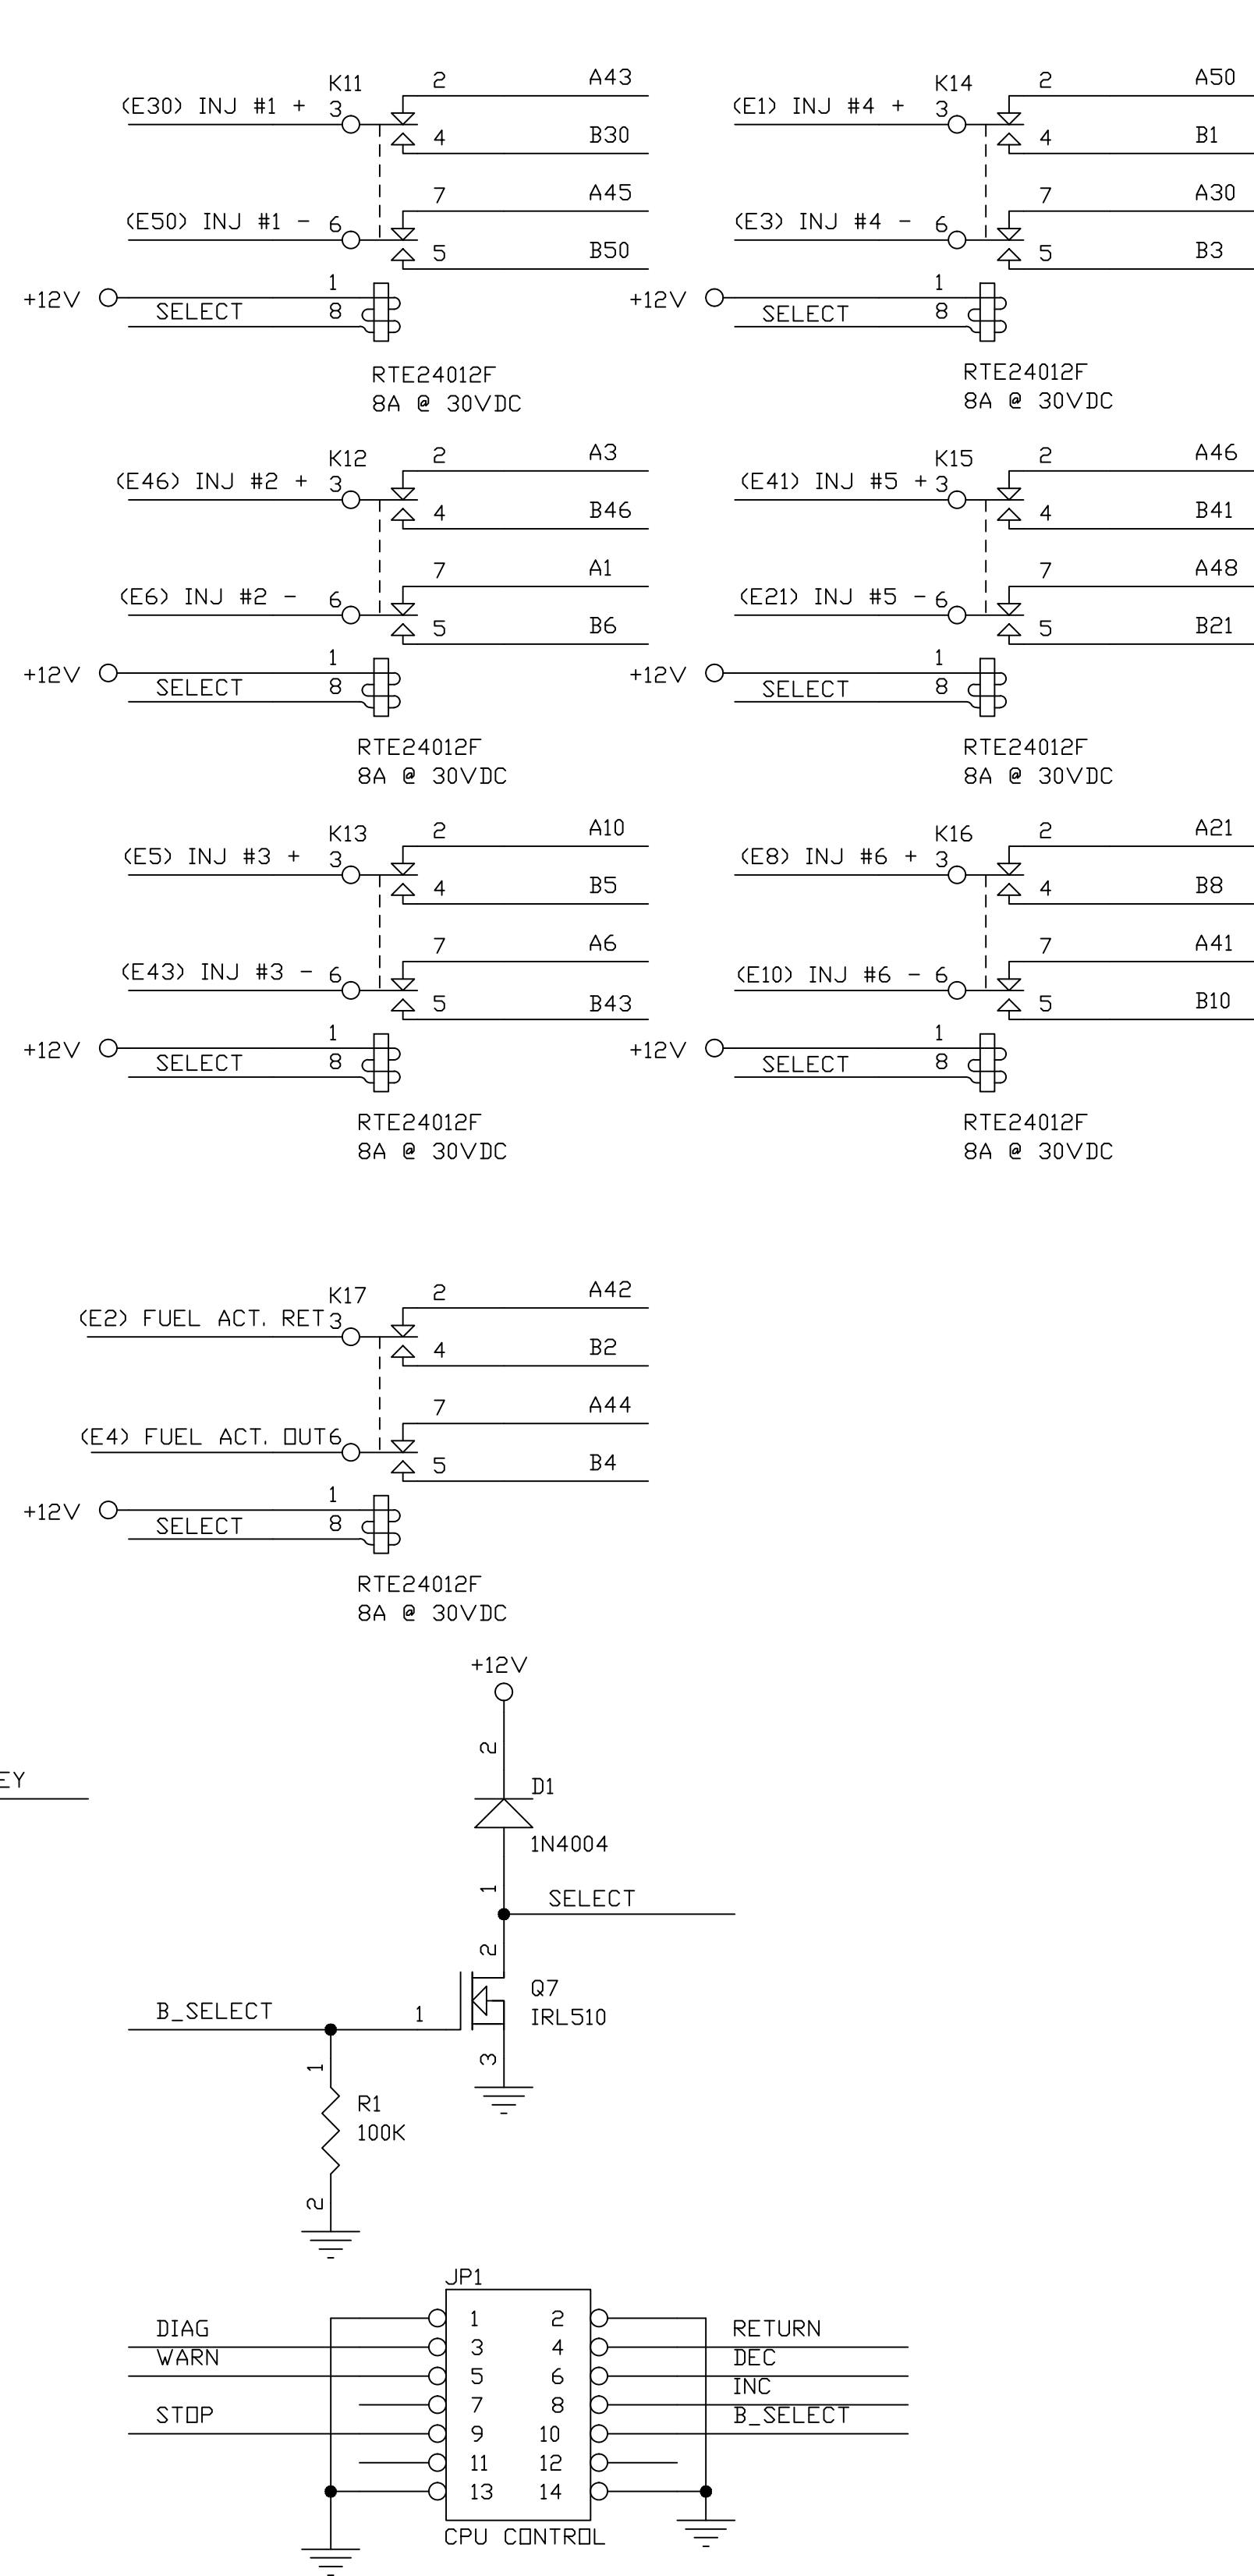

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC



CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUERKLE ROAD
 WHITE BEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND
 UPTIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

**SCHEMATIC, ECM SWITCH
 CFP7E FIRE PUMP DRIVER**








UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE
 ANGULAR DIMENSIONS ± 1°
 IMPERIAL UNITS
 METRIC UNITS
 THIRD ANGLE PROJECTION

DWG UNITS: INCH/LB/S
 SCALE: EST WEIGHT:
 DRAWN BY: KAK
AUTO CAD
 DATE: 14 DEC 2009
 REF DRWG:
 SHEET 30F7
 DRAWING NO: 16260

D	2014-107	SEE SHEET 1 FOR LATEST REVISION.	RMJ	24FEB2014
C		SEE SHEET 1 FOR LATEST REVISION.	KAK	03DEC2013
REV	ENF	DESCRIPTION OF REVISION	BY	DATE

C1

1 (E1) INJ #4 +
 2 (E2) FUEL ACT. RET
 3 (E3) INJ #4 -
 4 (E4) FUEL ACT. DUT
 5 (E5) INJ #3 +
 6 (E6) INJ #2 -
 7 (E7) CRANK SIG
 8 (E8) INJ #6 +
 9 (E9) CRANK RET
 10 (E10) INJ #6 -
 11 E11
 12 E12
 13 E13
 14 (E14) SENSDR SUPPLY 2
 15 (E15) CAM SIG
 16 (E16) AMBIENT SIG
 17 (E17) IMP SIG
 18 (E18) SENSOR RET 2
 19 (E19) SENSOR RET 1
 20 (E20) SENSDR SUPPLY 1
 21 (E21) INJ #5 -
 22
 23
 24
 25
 26 E26
 27 E27
 28 (E28) IMT SIG
 29 (E29) COOLANT SIG
 30 (E30) INJ #1 +
 31 (E31) LIFT PUMP RET
 32 E32
 33 E33
 34
 35 E35
 36 E36
 37 E37
 38 (E38) CRANK SUPPLY
 39 (E39) PROX SIG
 40 (E40) OIL PRESS SIG
 41 (E41) INJ #5 +
 42 (E42) LIFT PUMP SUPPLY
 43 (E43) INJ #3 -
 44
 45 (E46) INJ #2 +
 46 E47
 47 E48
 48 (E49) FUEL PRESS SIG
 49 (E50) INJ #1 -
 50

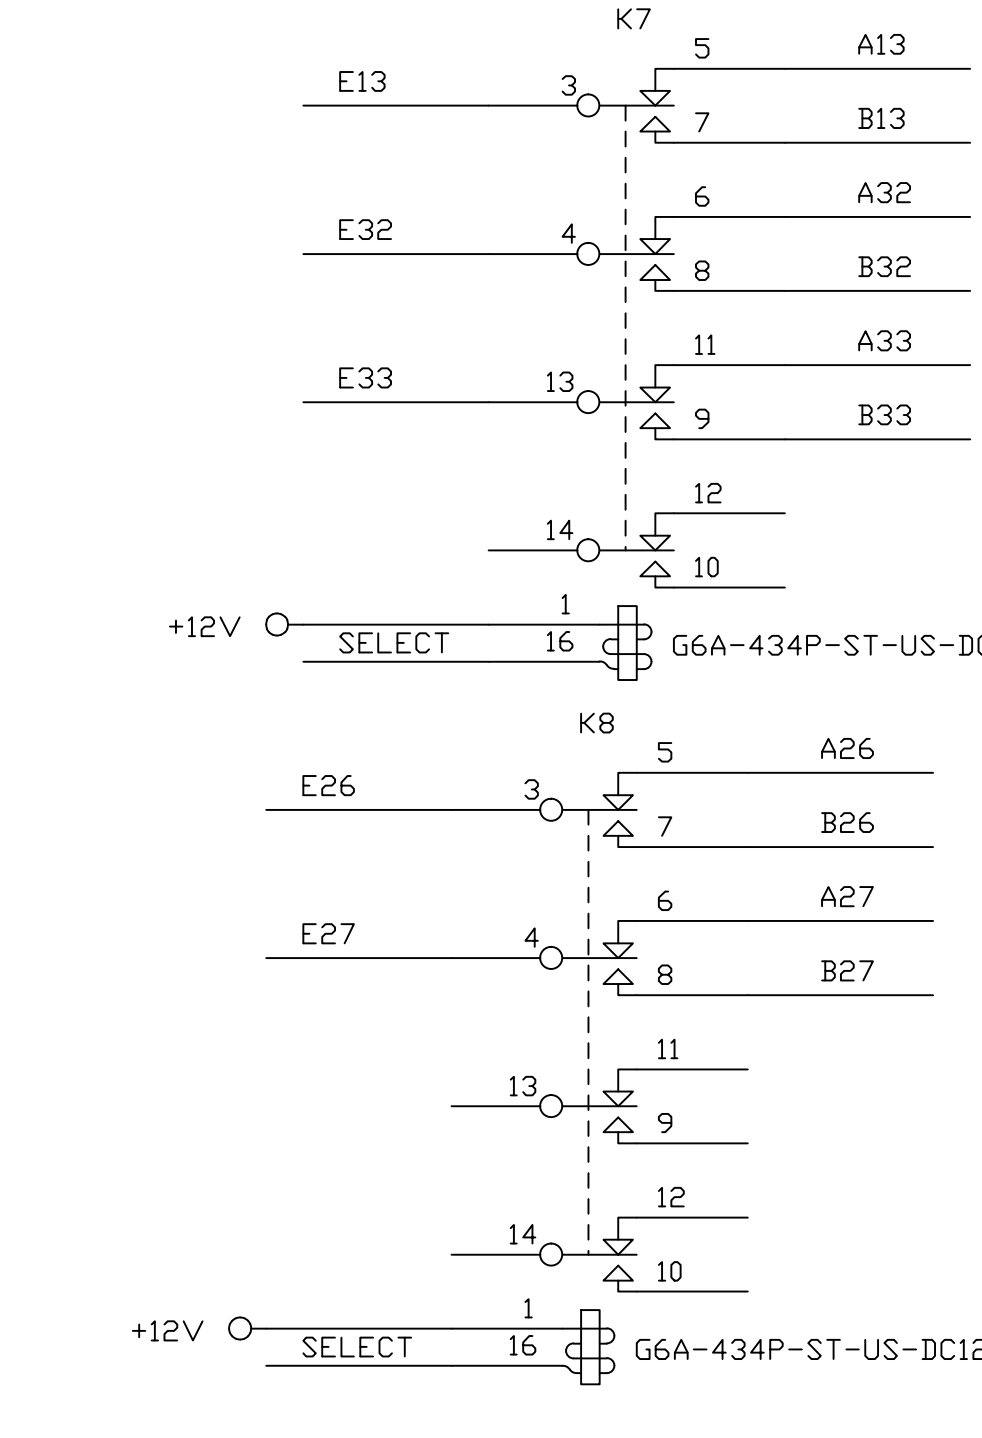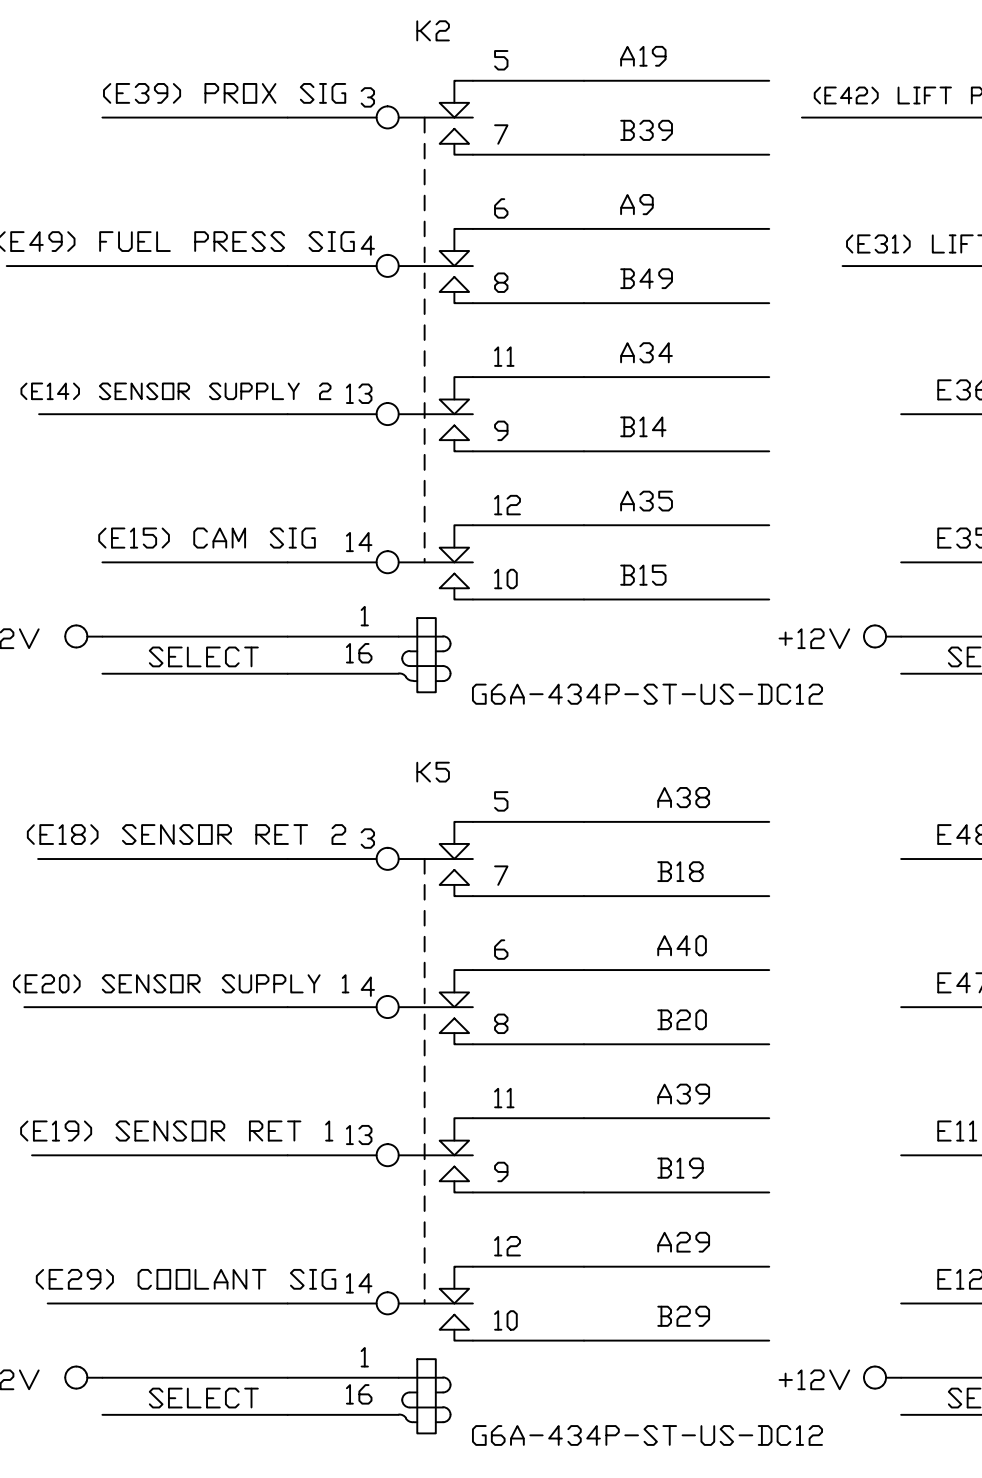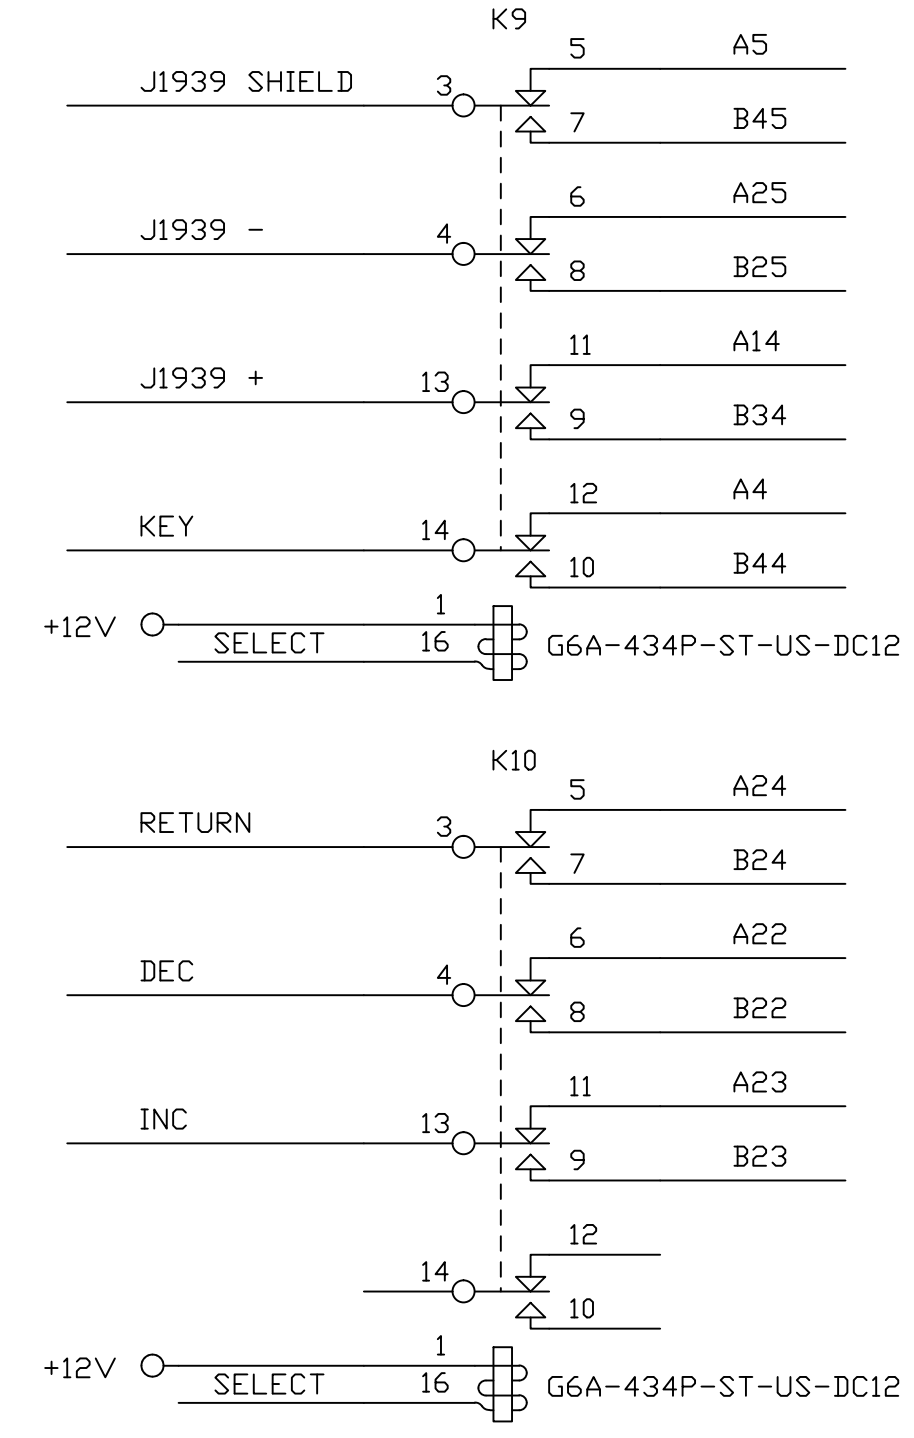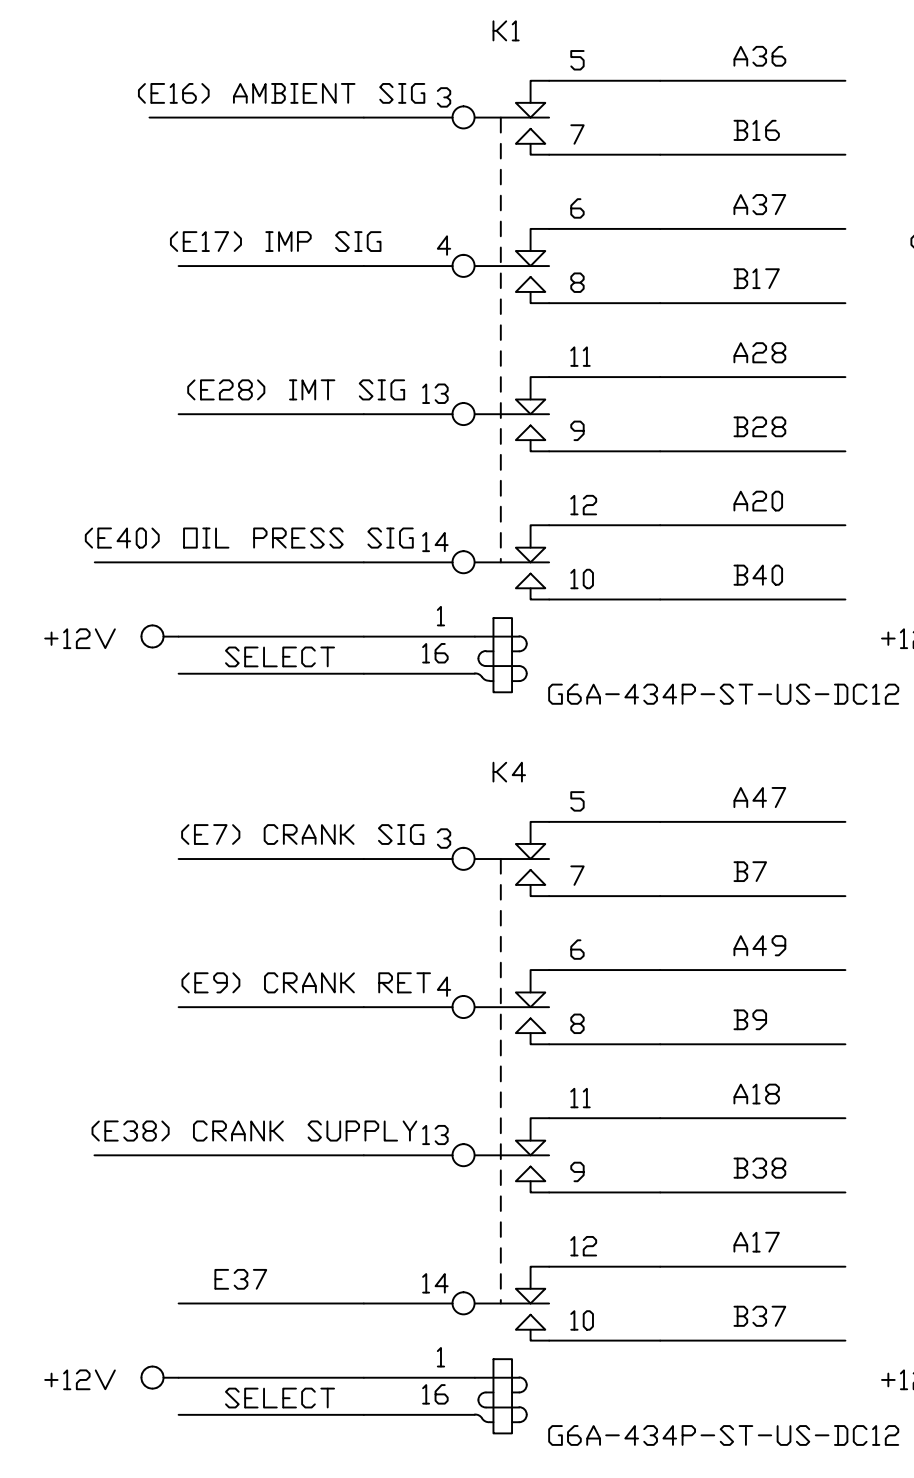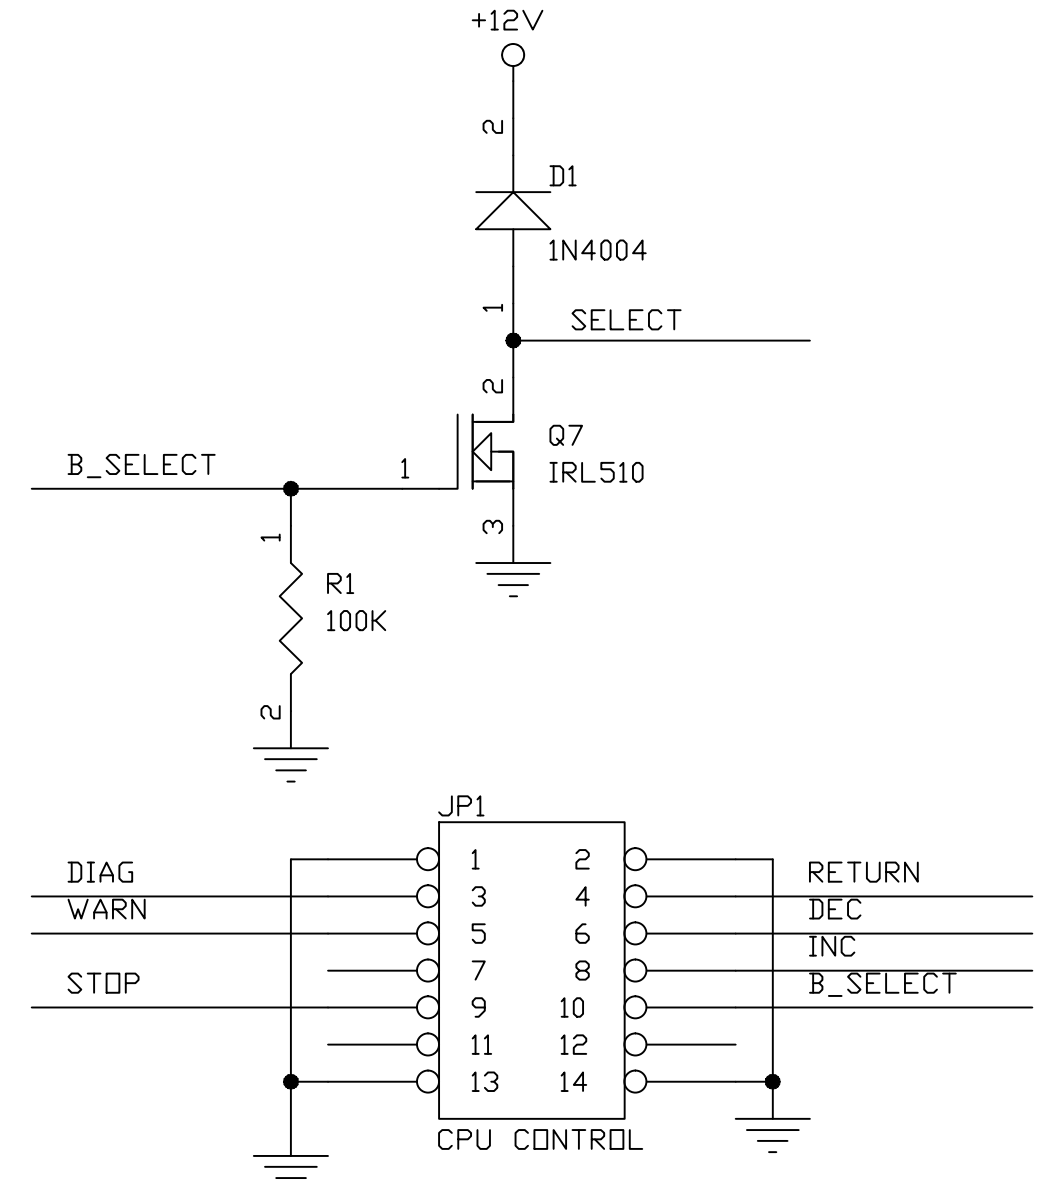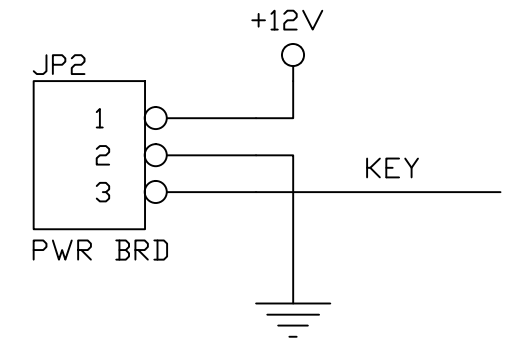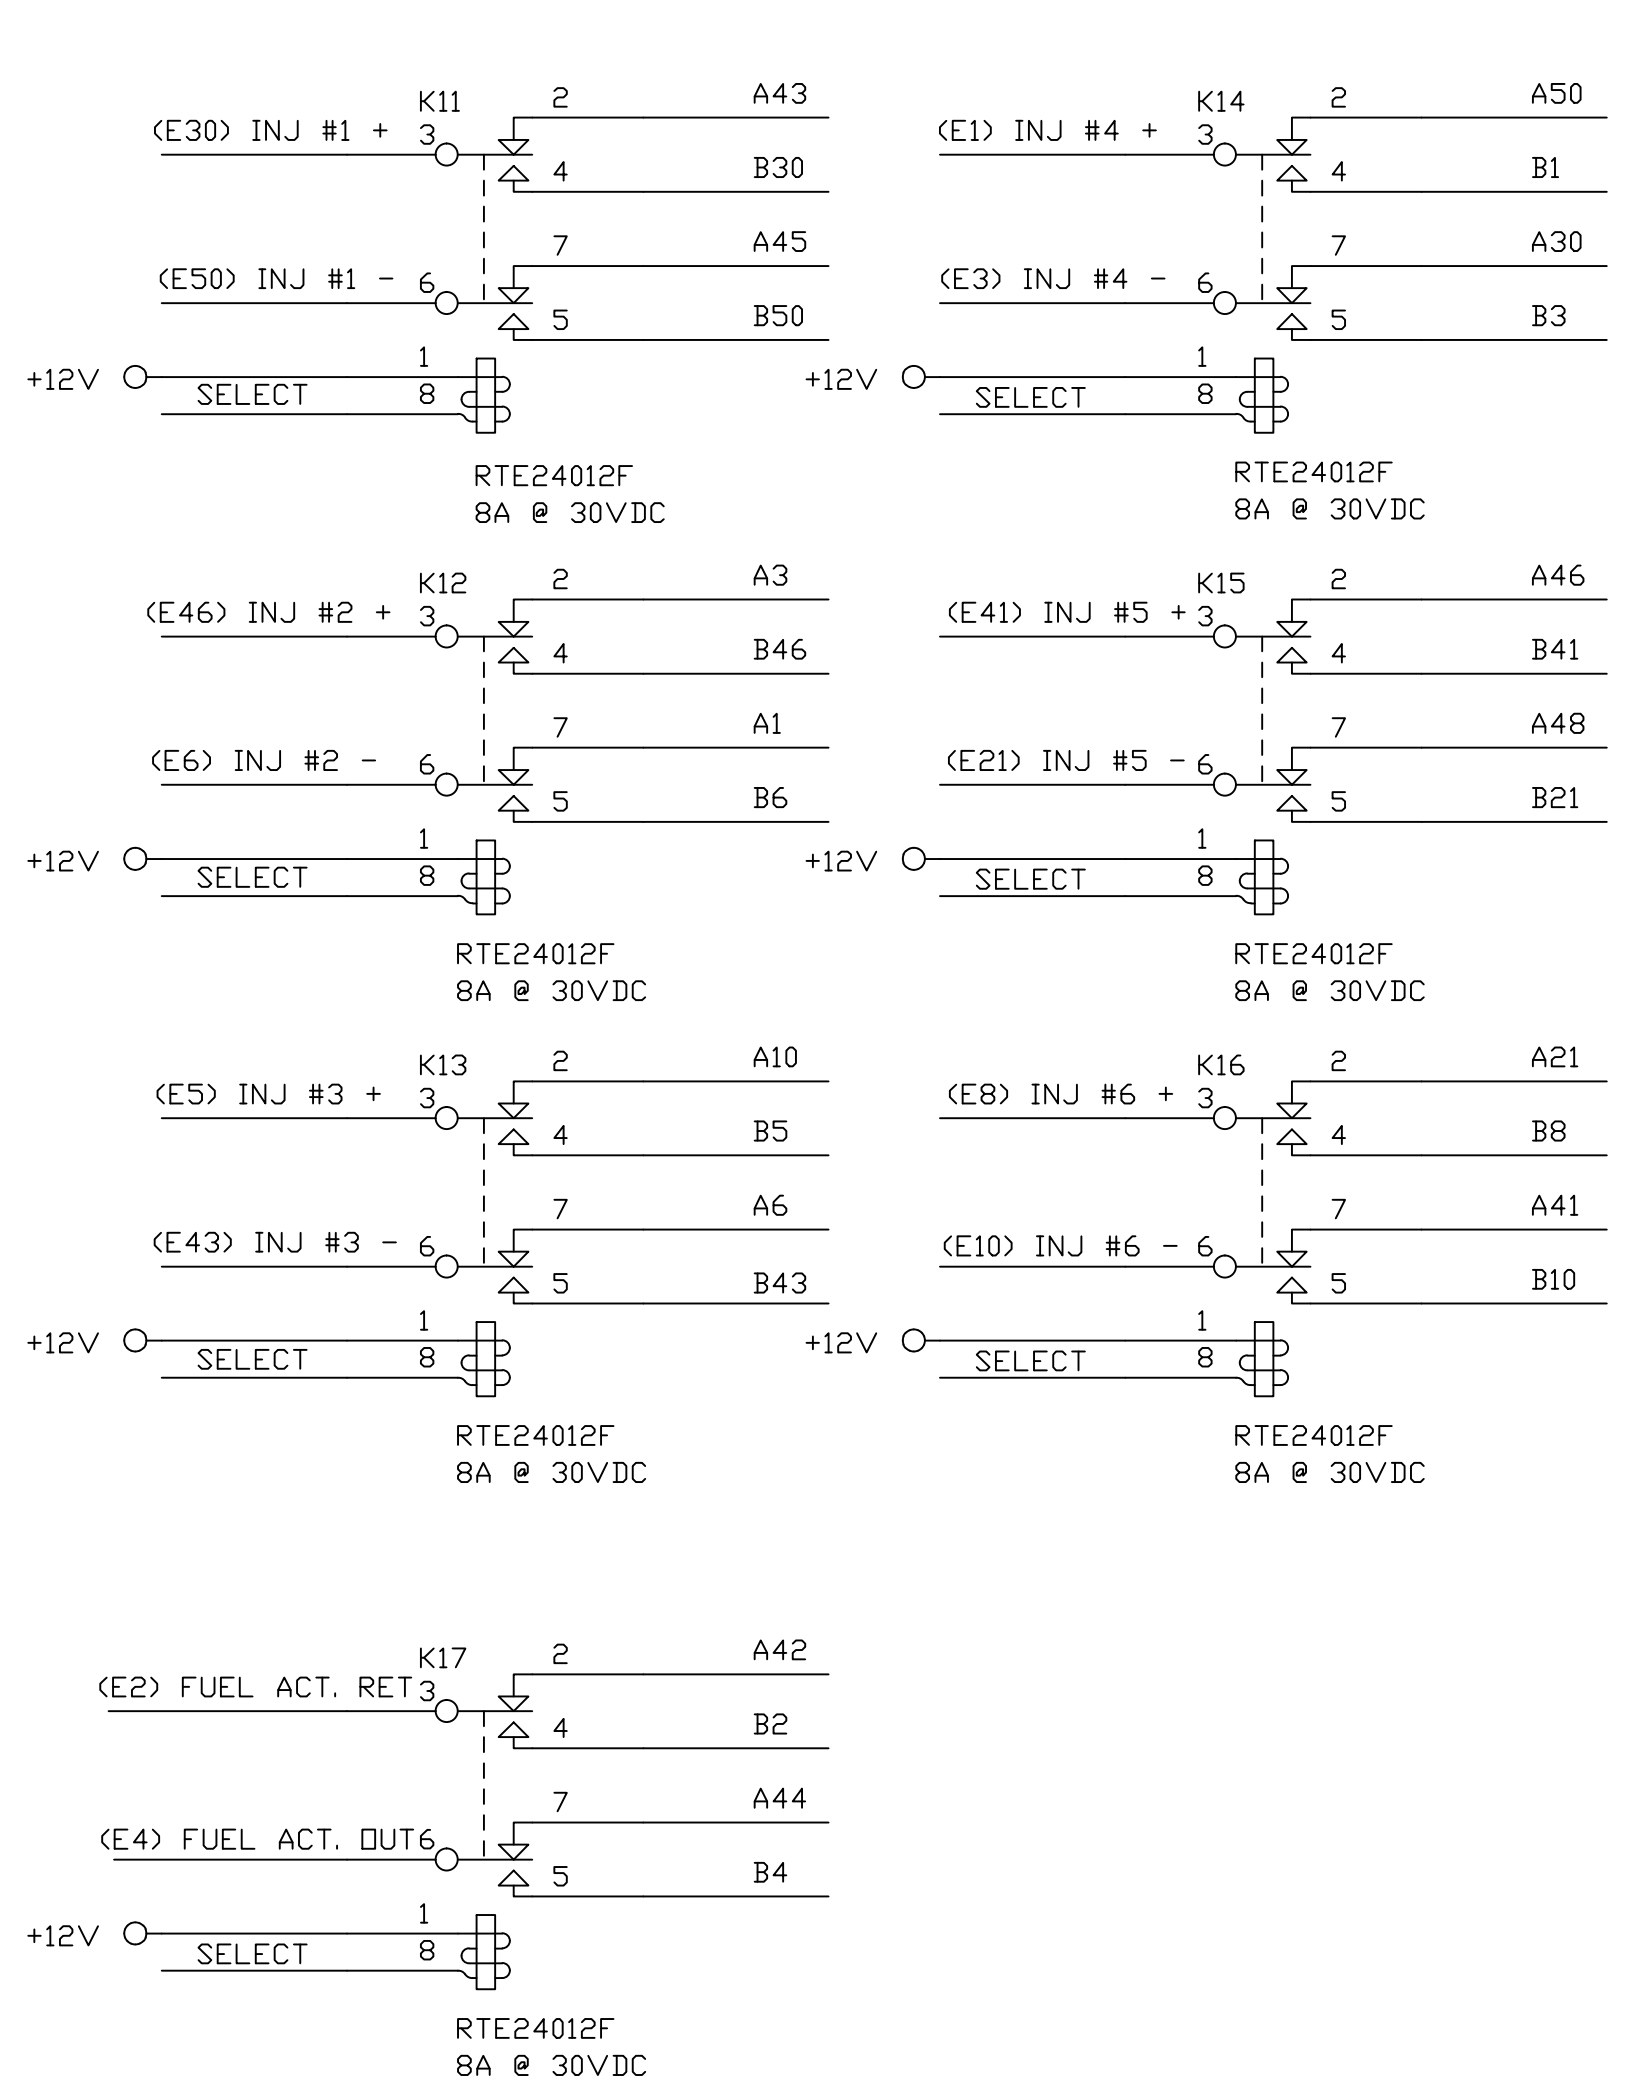

C2


1 INJ #2 - (A1)
 2 LIFT PUMP SUPPLY (A2)
 3 INJ #2 + (A3)
 4 KEYSWITCH (A4)
 5 J1939 SHIELD (A5)
 6 INJ #3 - (A6)
 7 A7
 8 FUEL PRESS SIG (A9)
 9 INJ #3 + (A10)
 10 A11
 11 A12
 12 A13
 13 J1939 + (A14)
 14 A15
 15 AMBIENT SIG (B16)
 16 IMP SIG (B17)
 17 CRANK SUPPLY (A18)
 18 PROX SIG (A19)
 19 OIL PRESS SIG (A20)
 20 INJ #6 + (A21)
 21 DECREMENT (A22)
 22 INCREMENT (A23)
 23 SWITCH RET (A24)
 24 J1939 - (A25)
 25 A26
 26 A27
 27 IMT SIG (A28)
 28 COOLANT SIG (A29)
 29 INJ #4 - (A30)
 30 LIFT PUMP RET (A31)
 31 A32
 32 A33
 33 SENSDR SUPPLY 2 (A34)
 34 CAM SIG (A35)
 35 AMBIENT SIG (A36)
 36 IMP SIG (A37)
 37 SENSOR RET 2 (A38)
 38 SENSOR RET 1 (A39)
 39 SENSDR SUPPLY 1 (A40)
 40 INJ #6 - (A41)
 41 FUEL ACT. RET (A42)
 42 INJ #1 + (A43)
 43 FUEL ACT. DUT (A44)
 44 INJ #1 - (A45)
 45 INJ #5 + (A46)
 46 CRANK SIG (A47)
 47 INJ #5 - (A48)
 48 CRANK RET (A49)
 49 INJ #4 + (A50)
 50

ECM A

C3

1 INJ #4 + (B1)
 2 FUEL ACT. RET (B2)
 3 INJ #4 - (B30)
 4 FUEL ACT. DUT (B4)
 5 INJ #3 + (B5)
 6 INJ #2 - (B6)
 7 CRANK SIG (B7)
 8 INJ #6 + (B8)
 9 CRANK RET (B9)
 10 INJ #6 - (B10)
 11 B11
 12 B12
 13 B13
 14 SENSDR SUPPLY 2 (B14)
 15 CAM SIG (B15)
 16 AMBIENT SIG (B16)
 17 IMP SIG (B17)
 18 SENSOR RET 2 (B18)
 19 SENSOR RET 1 (B19)
 20 SENSDR SUPPLY 1 (B20)
 21 INJ #5 - (B21)
 22 DECREMENT (B22)
 23 INCREMENT (B23)
 24 SWITCH RET (B24)
 25 J1939 - (B25)
 26 B26
 27 B27
 28 IMT SIG (B28)
 29 COOLANT SIG (B29)
 30 INJ #1 + (B30)
 31 LIFT PUMP RET (B31)
 32 B32
 33 B33
 34 J1939 + (B34)
 35 B35
 36 B36
 37 B37
 38 CRANK SUPPLY (B38)
 39 PROX SIG (B39)
 40 OIL PRESS SIG (B40)
 41 INJ #5 + (B41)
 42 LIFT PUMP SUPPLY (B42)
 43 INJ #3 - (B43)
 44 KEYSWITCH (B44)
 45 J1939 SHIELD (B45)
 46 INJ #2 + (B46)
 47 B47
 48 B48
 49 FUEL PRESS SIG (B49)
 50 INJ #1 - (B50)

ECM B

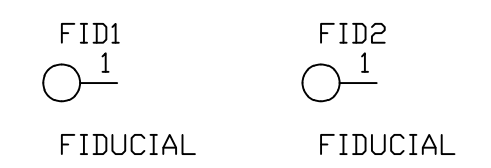

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

Cummins Fire Power

CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUERKLE ROAD
 WHITE BEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND
 UPGRADE CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE

D	2014-107	SEE SHEET 1 FOR LATEST REVISION.	RMJ	24FEB2014
C		SEE SHEET 1 FOR LATEST REVISION.	KAK	03DEC2013
REV	ENF	DESCRIPTION OF REVISION	BY	DATE

ANGULAR DIMENSIONS ± 1°

THIRD ANGLE PROJECTION

WORKING TOLERANCES	IMPERIAL UNITS	METRIC UNITS
XX ± 0.002		XX ± 0.02
XXX ± 0.003		XXX ± 0.03
FORM TOLERANCES		FORM TOLERANCES
XX ± 0.004		XX ± 0.04
XXX ± 0.005		XXX ± 0.05
FIN TOLERANCES		FIN TOLERANCES
XX ± 0.006		XX ± 0.06
XXX ± 0.008		XXX ± 0.08

DWG UNITS: INCH/LB/S

SCALE: SHEET 40F7

EST WEIGHT:


DATE: 14 DEC 2009




REF DRWG:

DRAWN BY: KAK

AUTO CAD

DRAWING NO: 16260

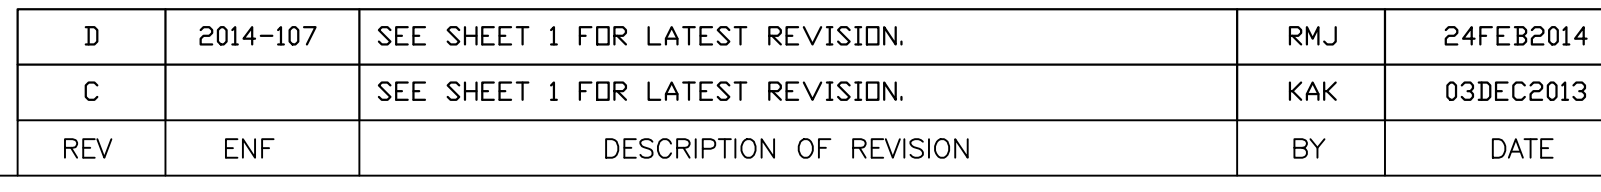


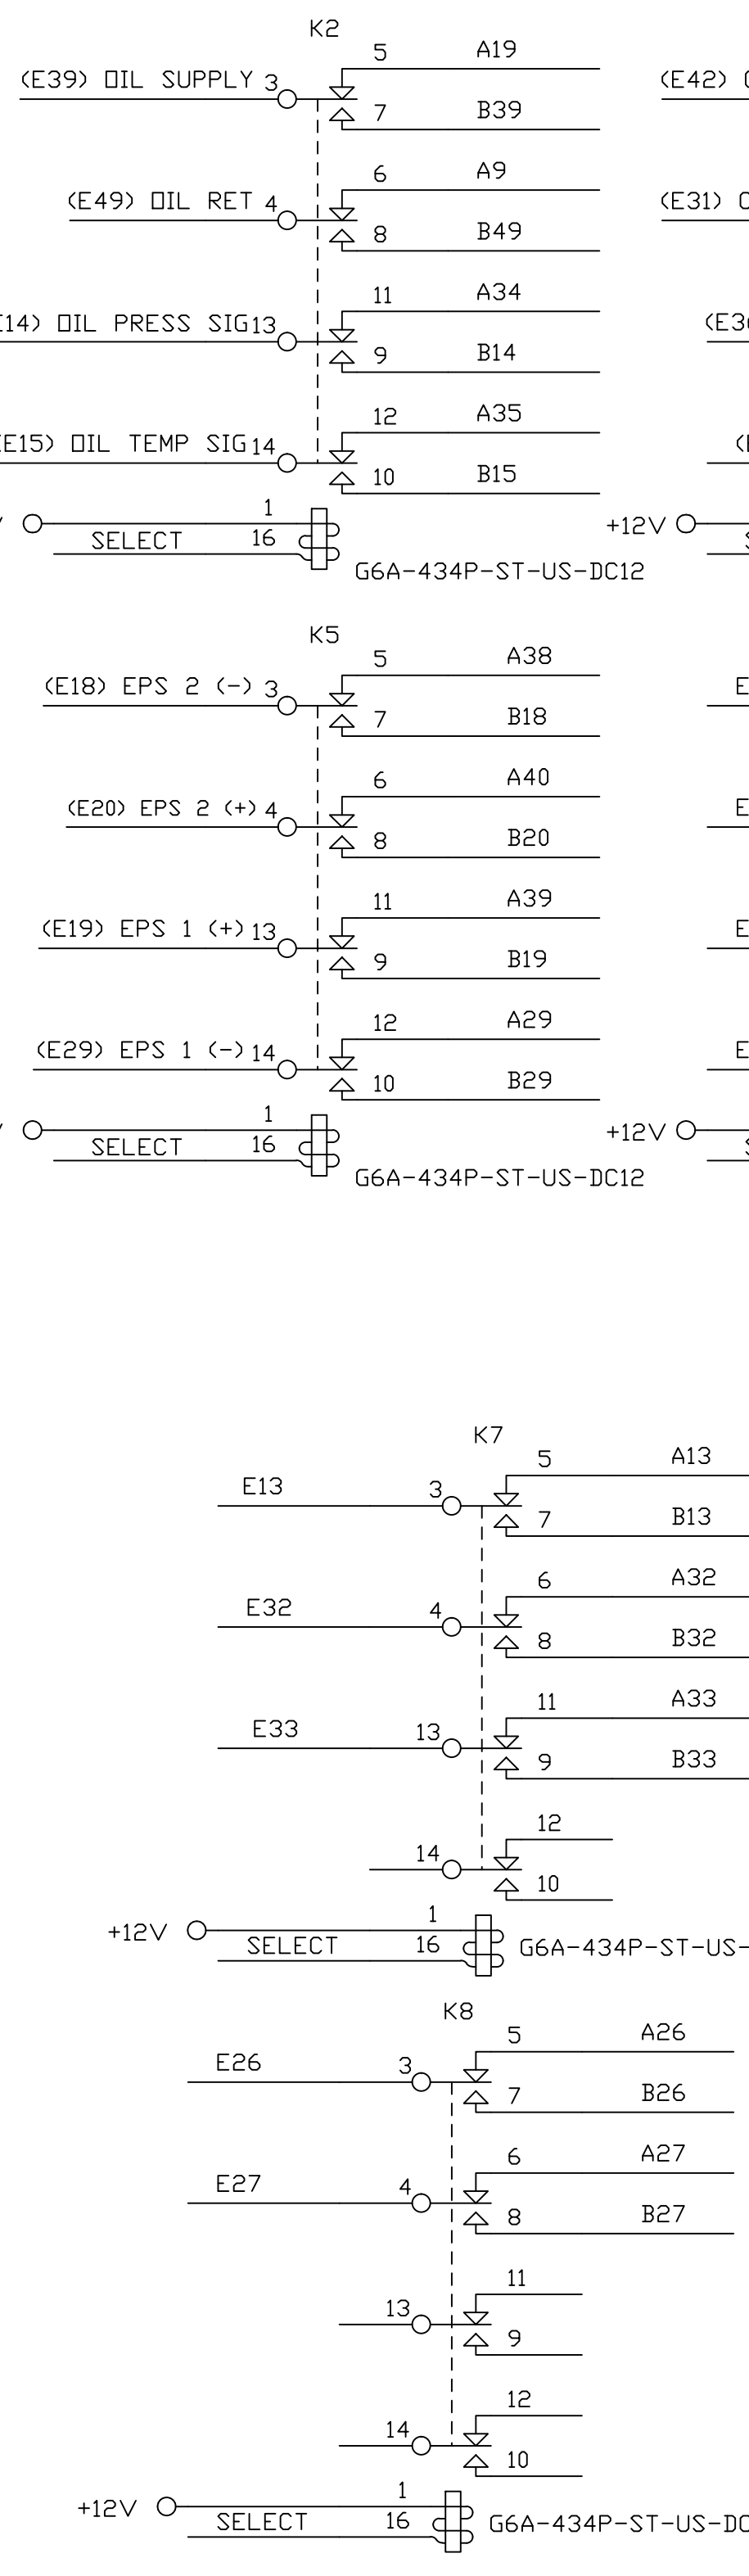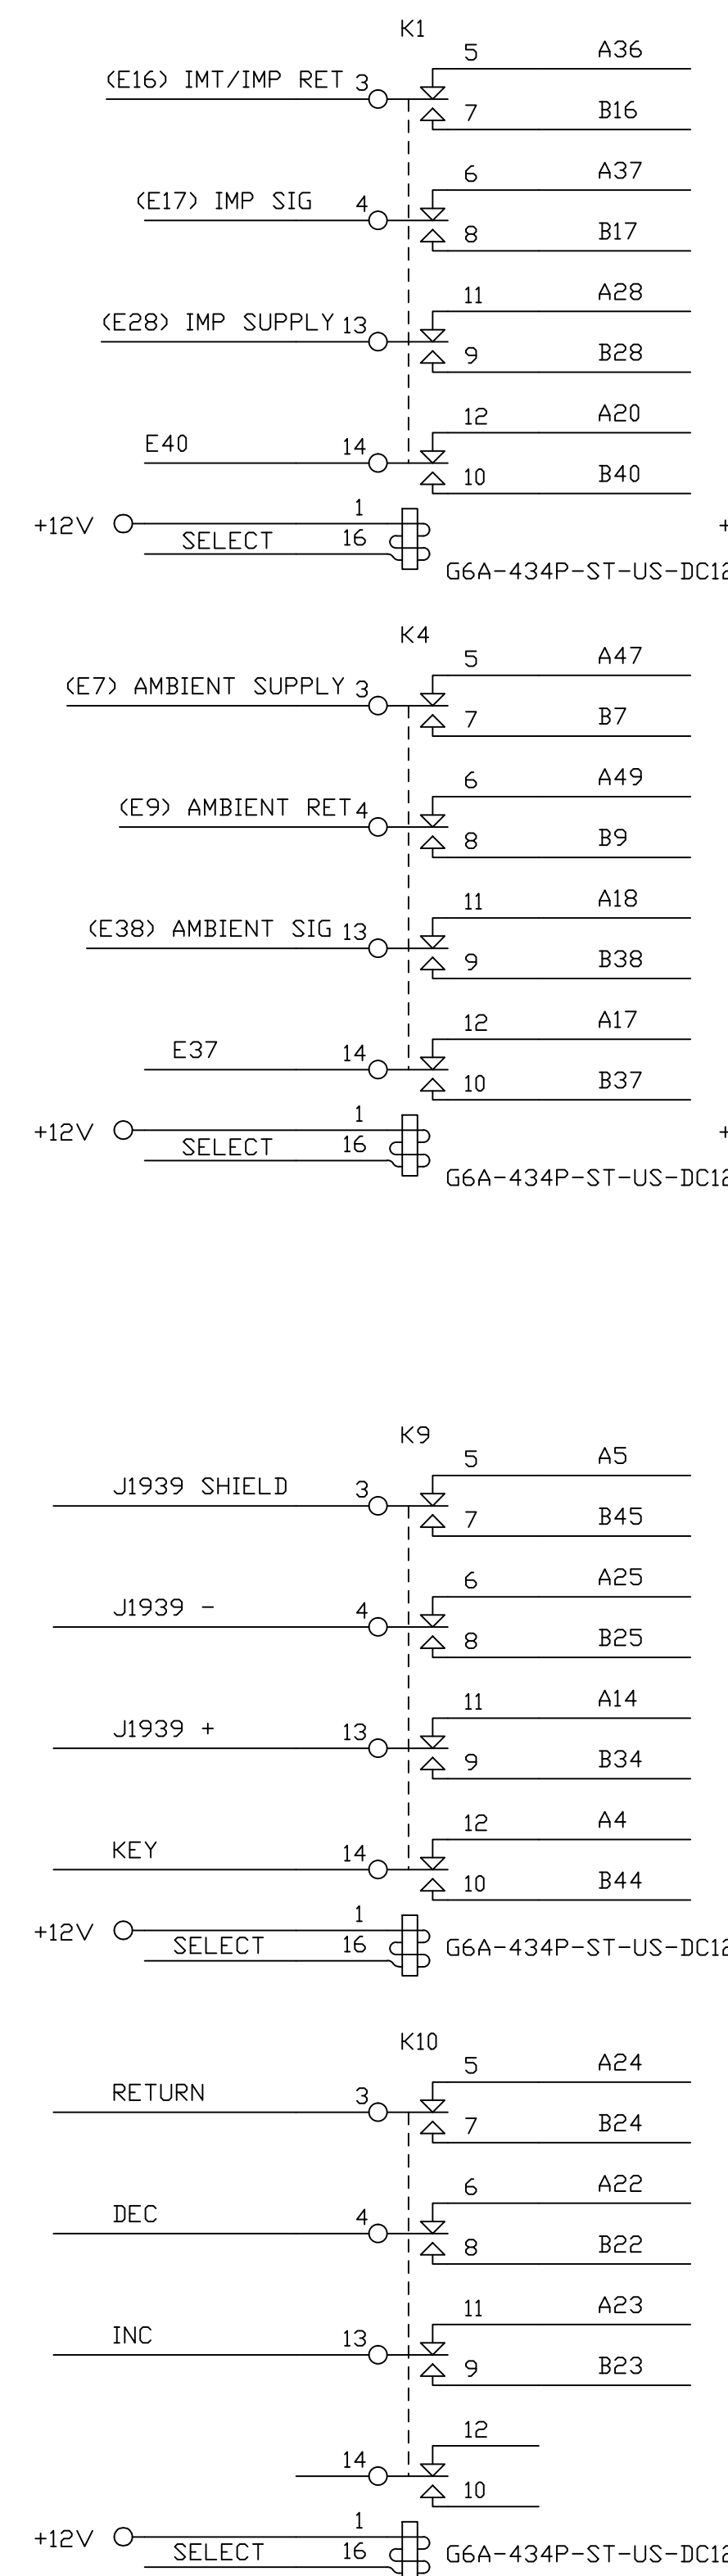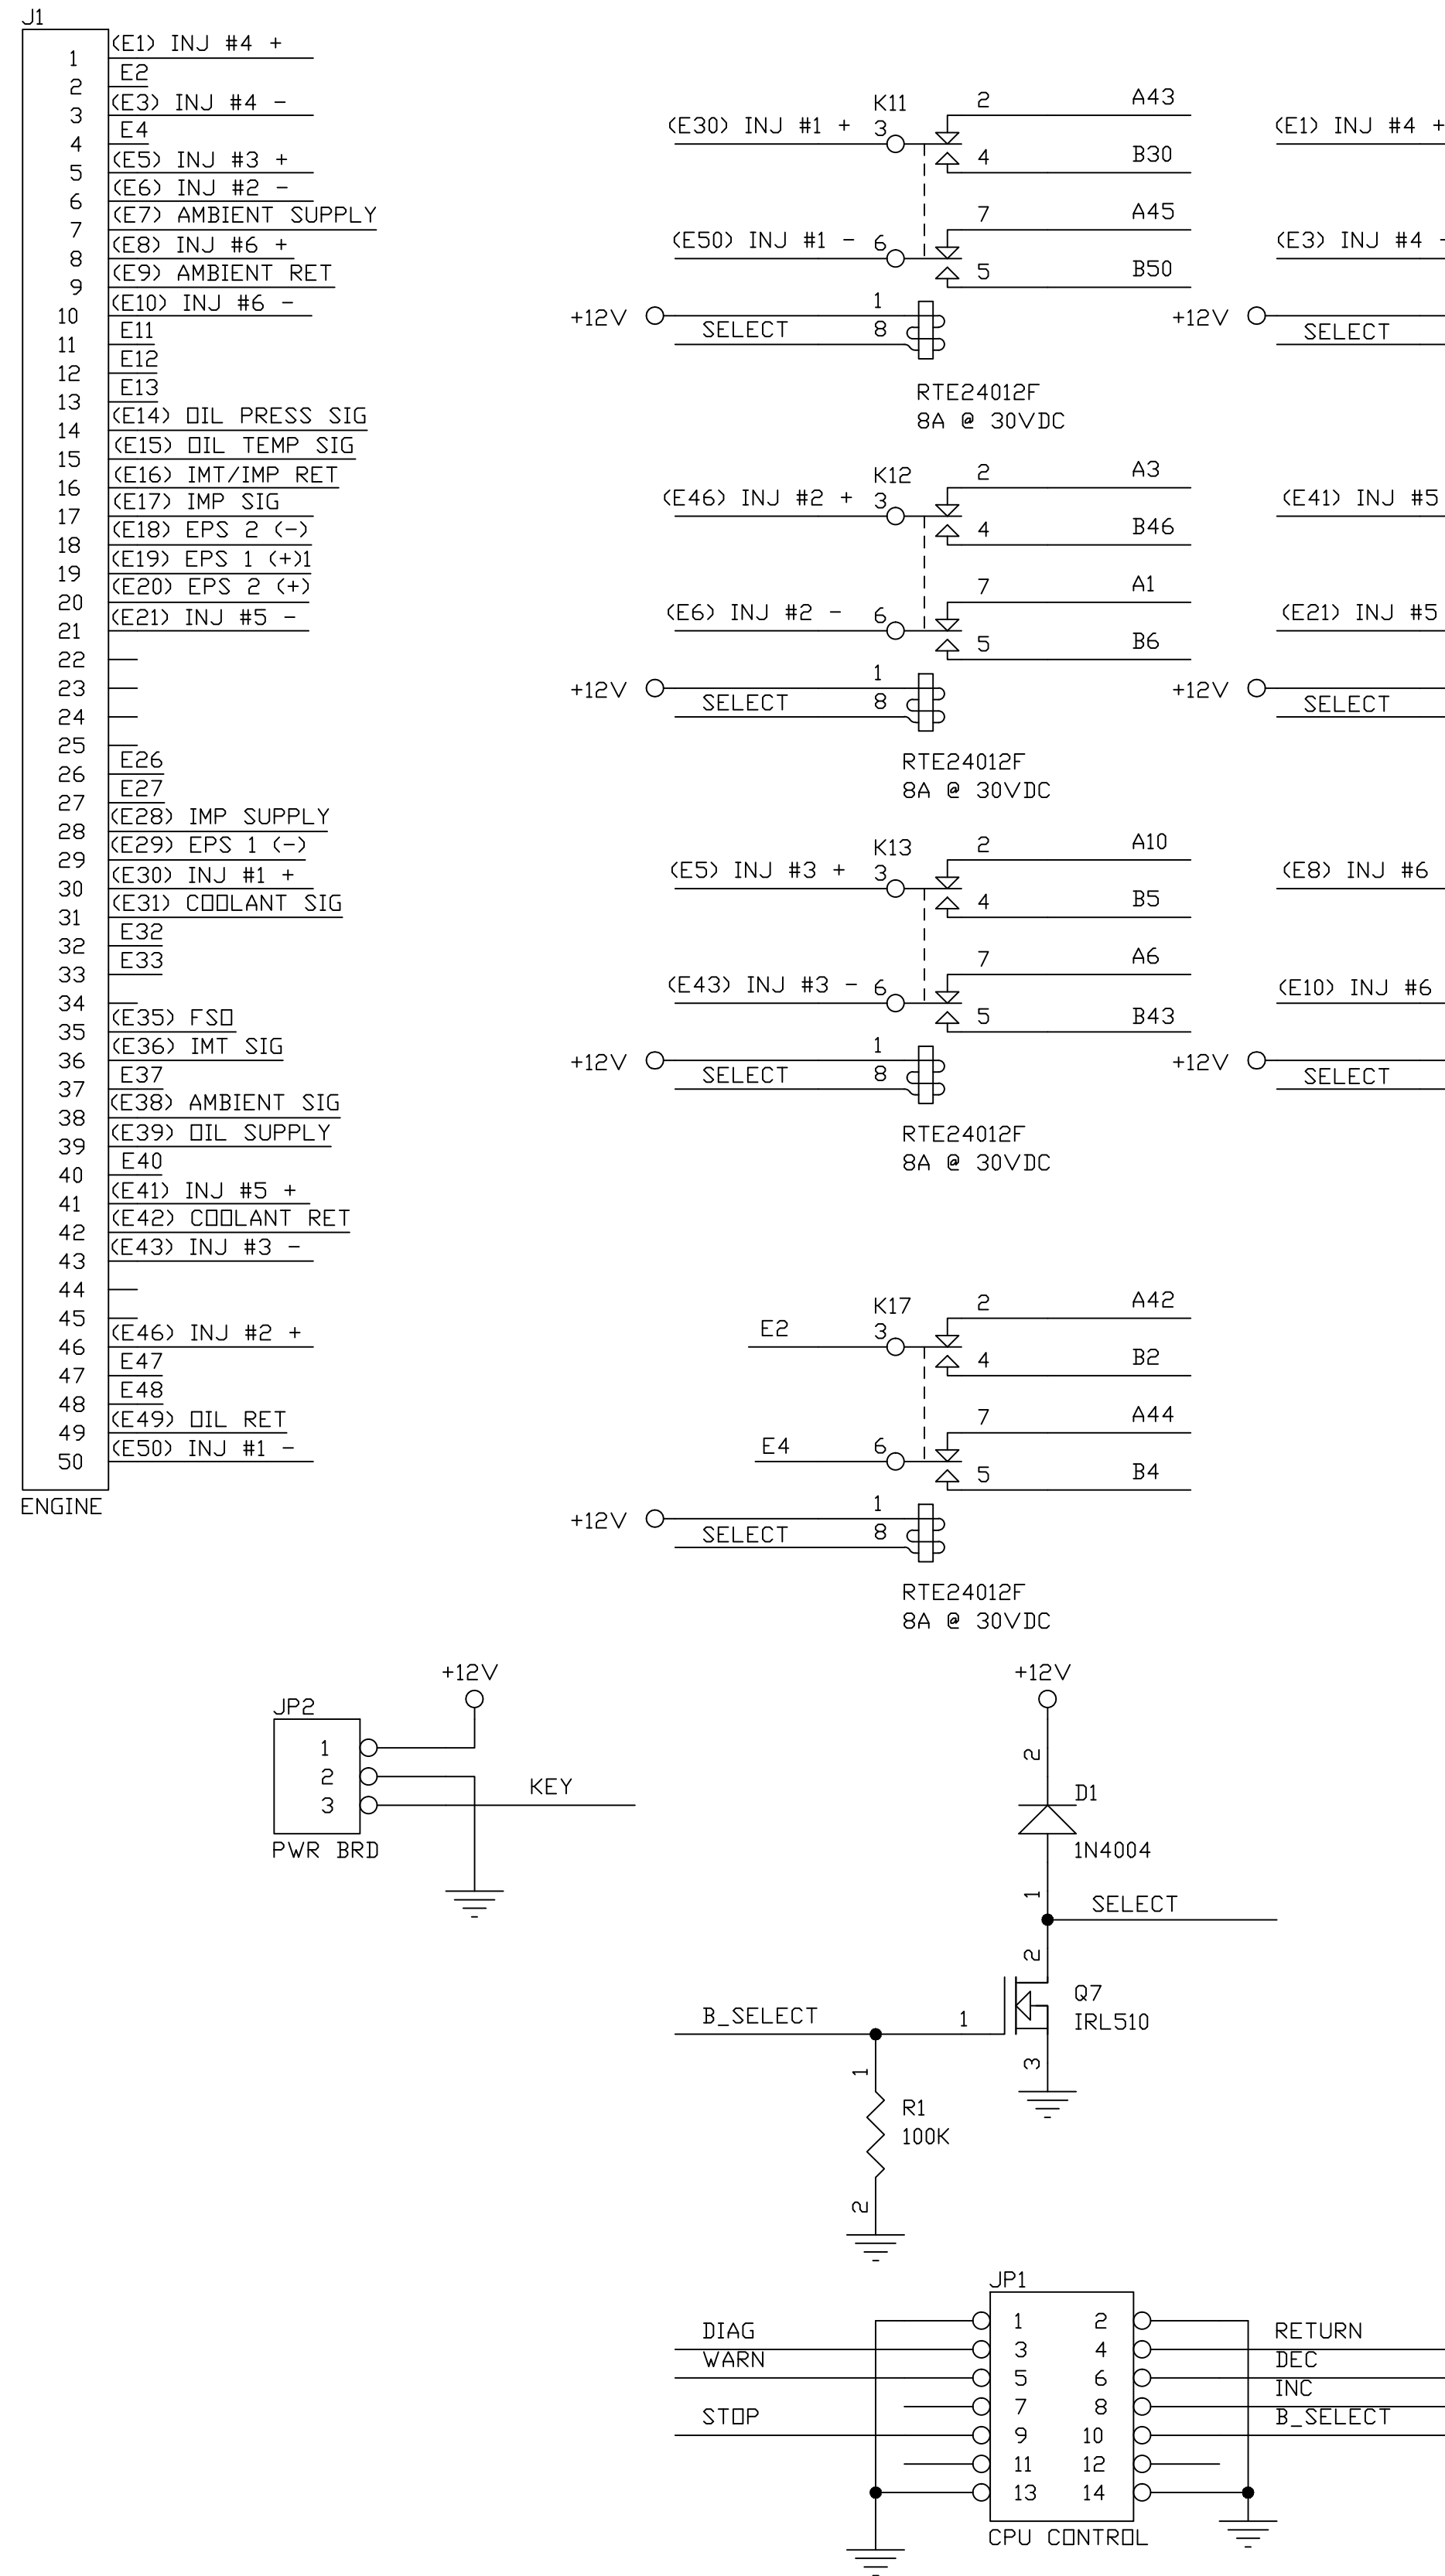

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining the document, accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC




	CUMMINS FIRE POWER LLC CORPORATE OFFICE 1600 BUERKLE ROAD WHITE BEAR LAKE, MN WWW.CUMMINSFIREPOWER.COM	CUSTOM DESIGN AND UPLIFT CENTER 875 LAWRENCE DRIVE DEPERE, WISCONSIN
	SCHEMATIC, ECM SWITCH CFP11E FIRE PUMP DRIVER	
DWG UNITS: INCH/LB/S	DRAWN BY: KAK AUTO CAD	DATE: 14 DEC 2009 REF DRWG:
EST WEIGHT:	SHEET 50F7	DRAWING NO: 16260

D	2014-107	SEE SHEET 1 FOR LATEST REVISION.	RMJ	24FEB2014
C		SEE SHEET 1 FOR LATEST REVISION.	KAK	03DEC2013
REV	ENF	DESCRIPTION OF REVISION	BY	DATE

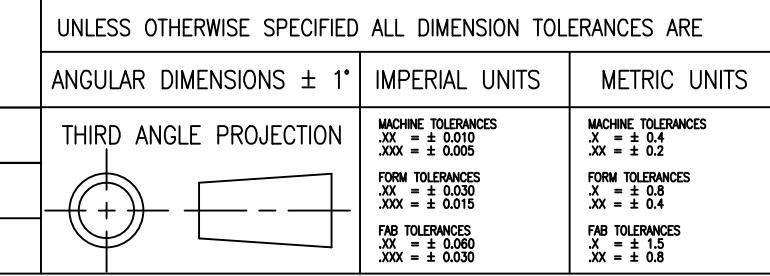


DWG UNITS: INCH/LB/S	DRAWN BY: KAK AUTO CAD	DATE: 14 DEC 2009 REF DRWG:
EST WEIGHT:	SHEET 50F7	DRAWING NO: 16260

1	(E1) RFA +
2	(E2) LIFT PUMP RET
3	(E3) RFA -
4	(E4) FSV
5	(E5) RTA +
6	(E6) FTA -
7	(E7) CRANK SIG
8	E8
9	(E9) CRANK RET
10	E10
11	(E11) IMT/IMP SUPPLY
12	(E12) IMT/IMP RET
13	(E13) COOLANT SIG
14	(E14) OIL PRESS SUPPLY
15	(E15) OIL PRESS RET
16	(E16) AMBIENT SIG
17	(E17) AMBIENT SUPPLY
18	(E18) FUEL PRESS SIG
19	(E19) FUEL PRESS RET
20	(E20) FUEL PRESS SUPPLY
21	E21
22	
23	
24	
25	E26
26	E27
27	(E28) AMBIENT RET
28	(E29) COOLANT SIG
29	(E30) FFA +
30	(E31) CAM SUPPLY
31	E32
32	(E33) COOLANT RET
33	
34	E35
35	(E36) CAM RET
36	E37
37	(E38) CRANK SUPPLY
38	(E39) OIL PRESS SIG
39	E40
40	E41
41	(E42) CAM SIG
42	(E43) RTA -
43	
44	
45	(E46) FTA +
46	(E47) IMP SIG
47	(E48) IMT SIG
48	(E49) OIL TEMP SIG
49	(E50) FFA -
50	

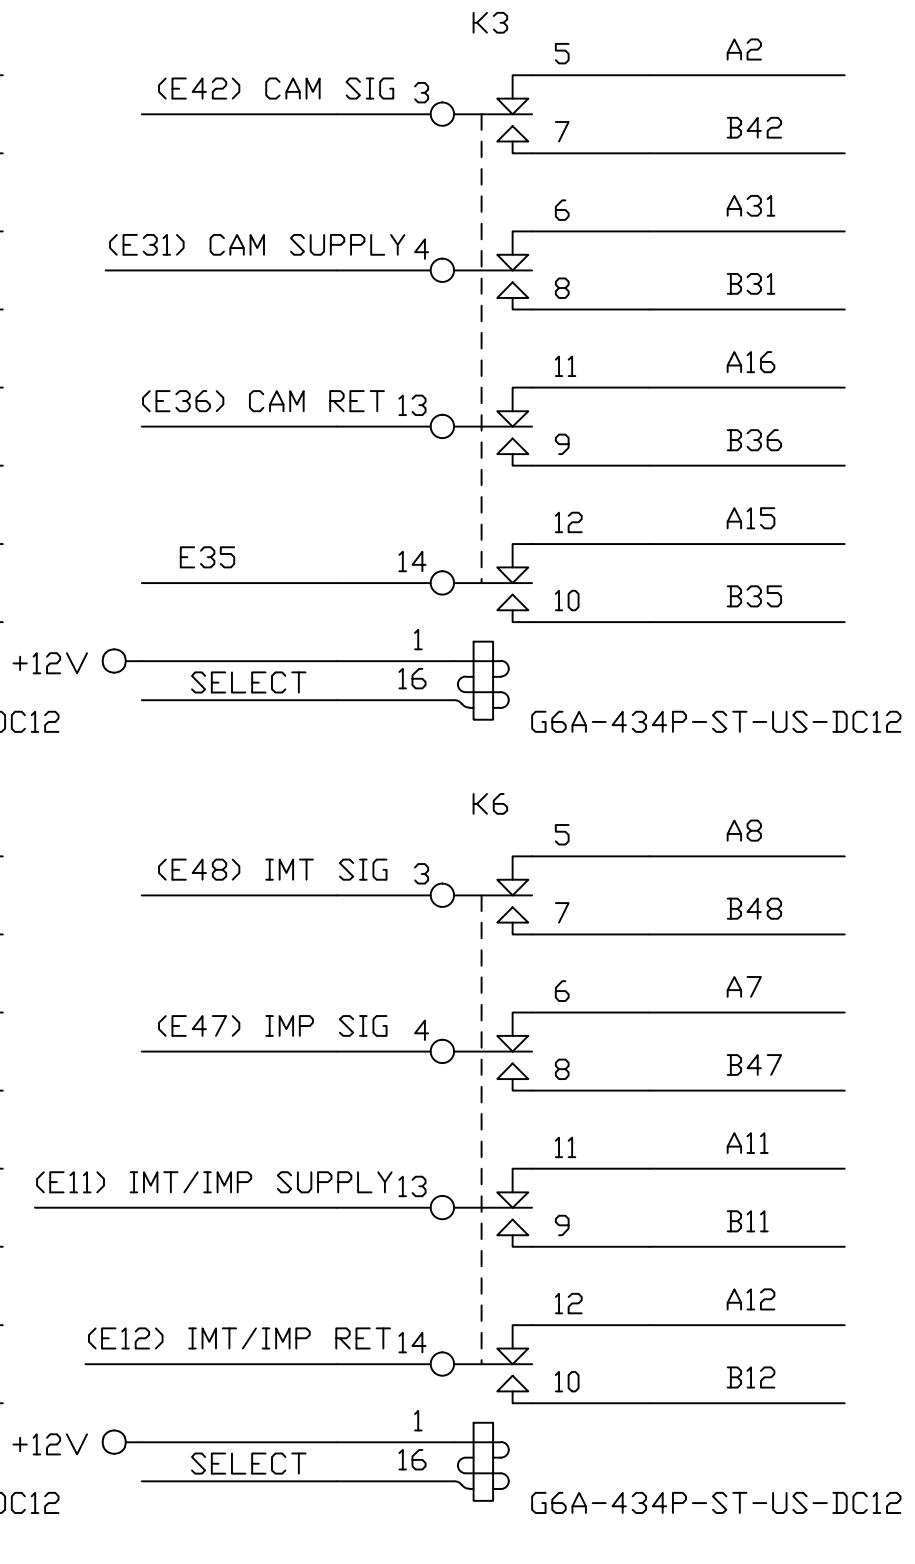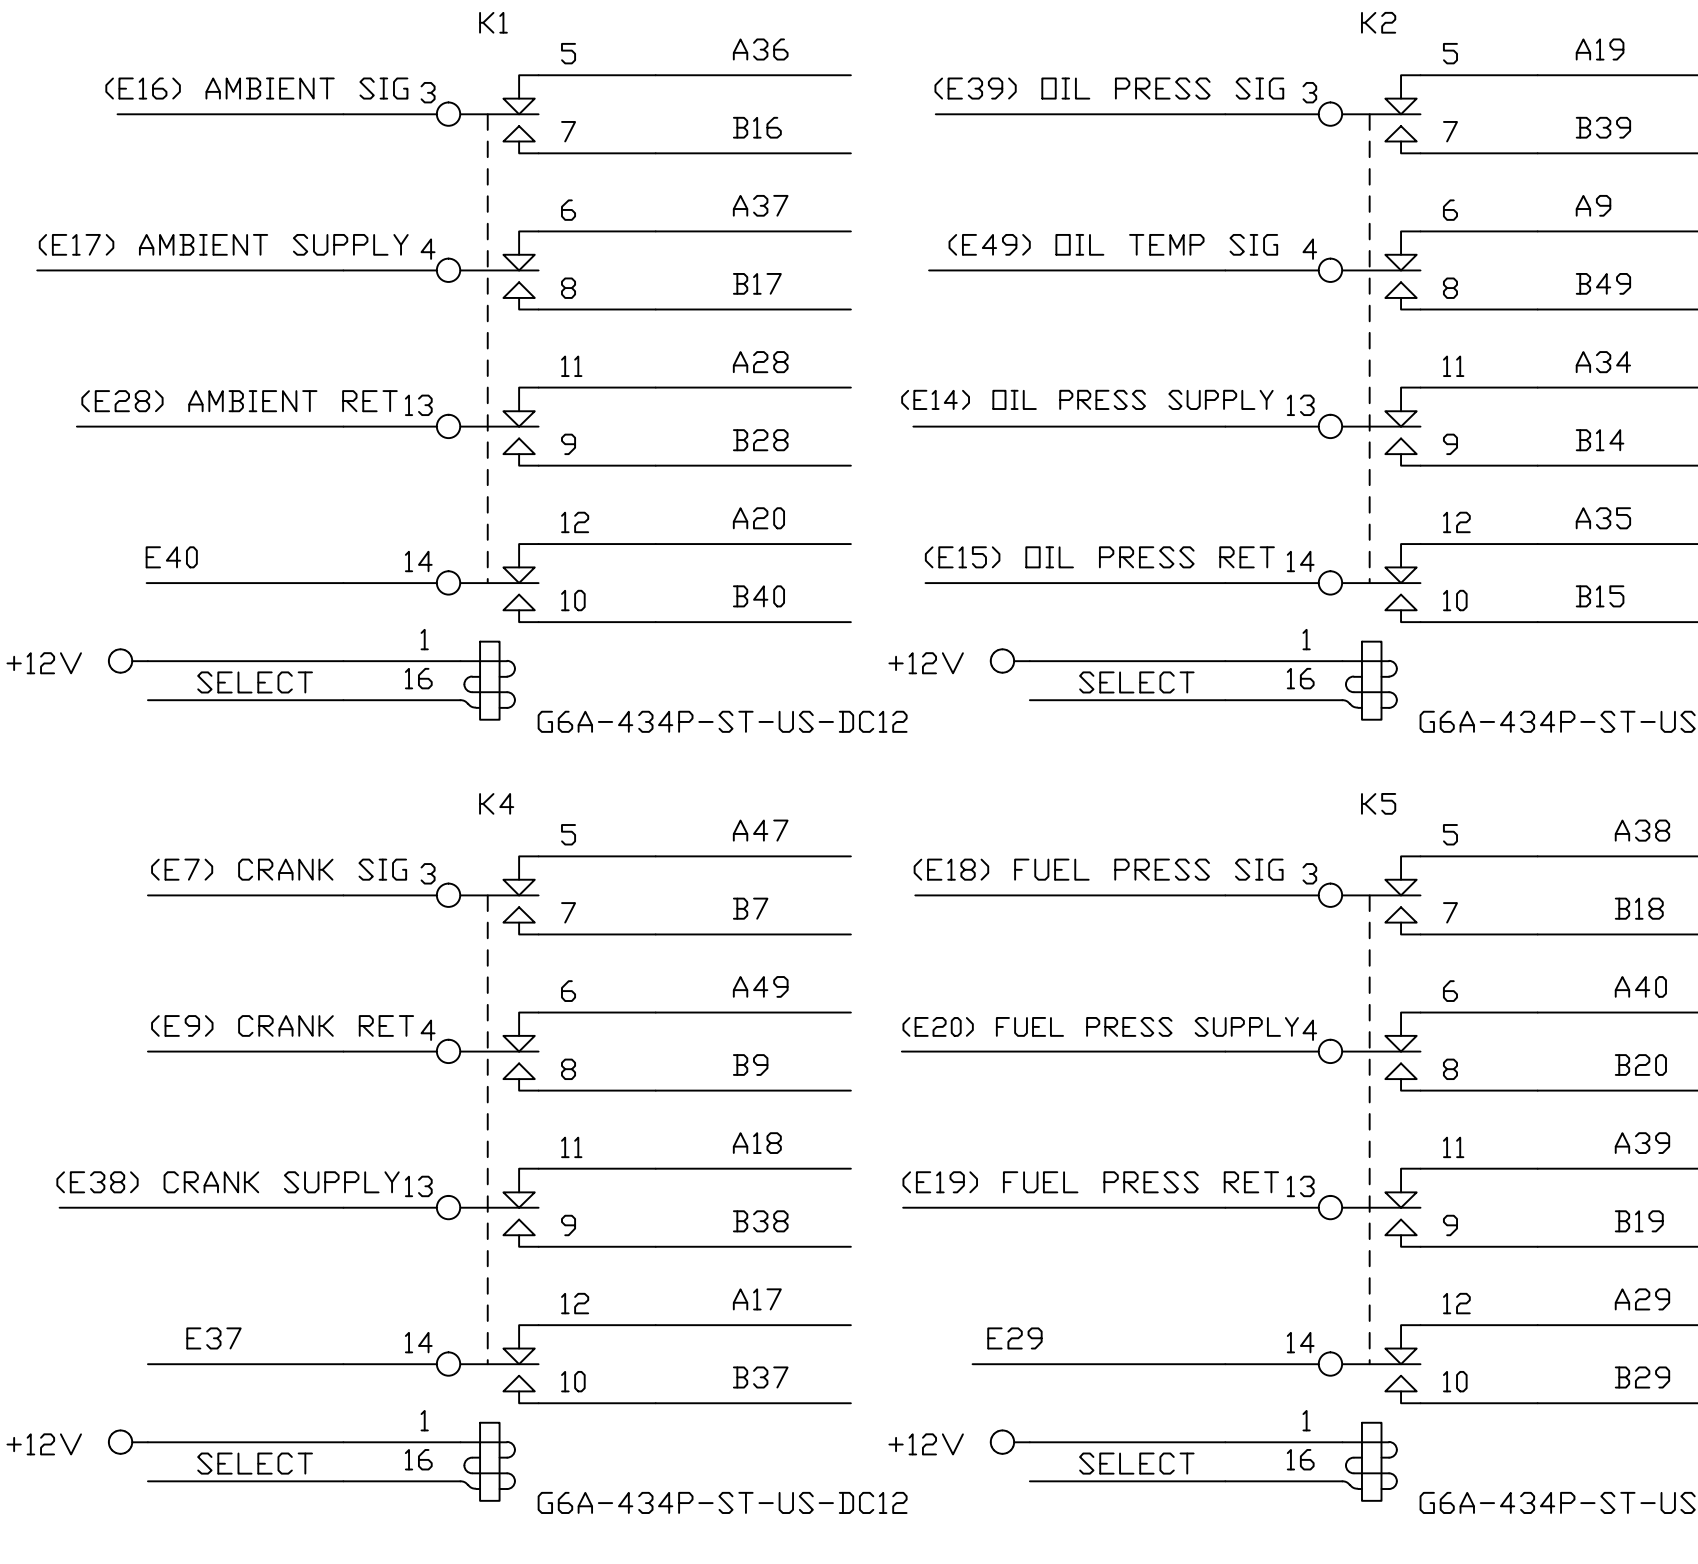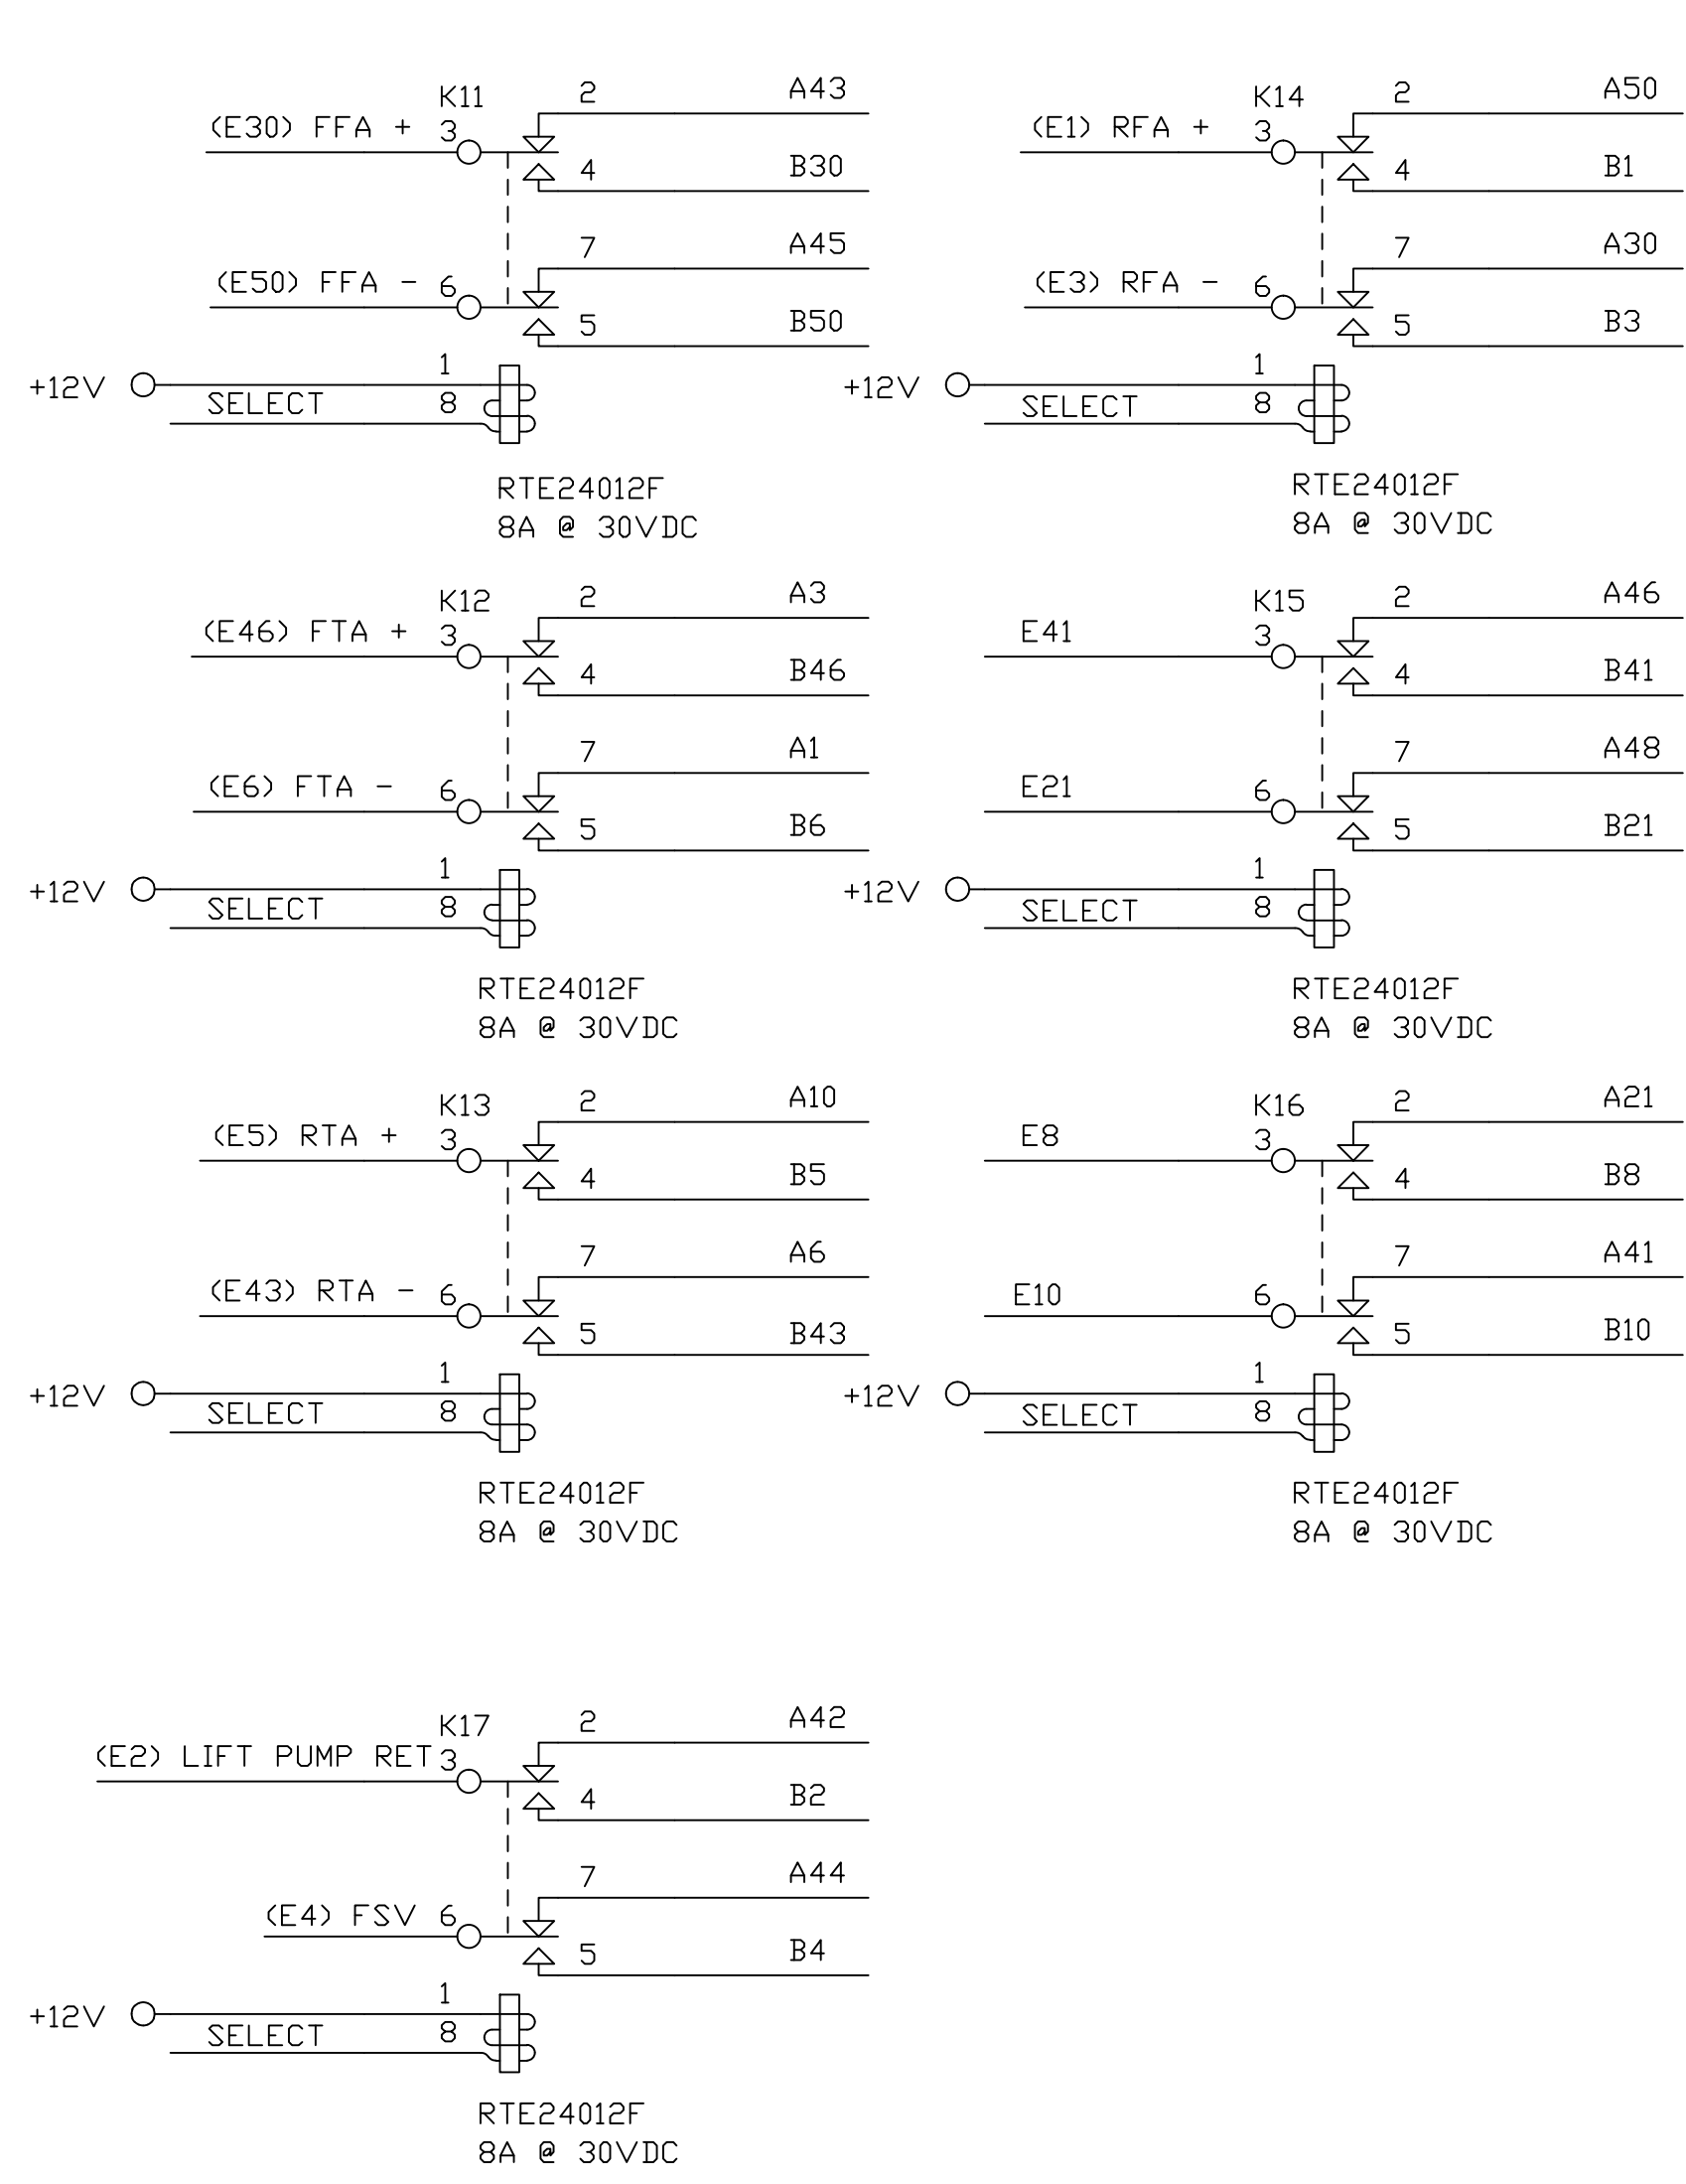

1	FTA - (A1)
2	CAM SIG (A2)
3	FTA + (A3)
4	KEYSWITCH (A4)
5	J1939 SHIELD (A5)
6	RTA - (A6)
7	IMP SIG (A7)
8	IMT SIG (A8)
9	OIL TEMP SIG (A9)
10	RTA + (A10)
11	IMT/IMP SUPPLY (A11)
12	IMT/IMP RET (A12)
13	COOLANT SIG (A13)
14	J1939 (+) (A14)
15	A15
16	CAM RET (A16)
17	A17
18	CRANK SUPPLY (A18)
19	OIL PRESS SIG (A19)
20	A20
21	DECREMENT (A22)
22	INCREMENT (A23)
23	SWITCH RET (A24)
24	J1939 (-) (A25)
25	A26
26	A27
27	AMBIENT RET (A28)
28	A29
29	RFA - (A30)
30	CAM SUPPLY (A31)
31	A32
32	COOLANT RET (A33)
33	OIL PRESS SUPPLY (A34)
34	OIL PRESS RET (A35)
35	AMBIENT SIG (A36)
36	AMBIENT SUPPLY (A37)
37	FUEL PRESS SIG (A38)
38	FUEL PRESS RET (A39)
39	FUEL PRESS SUPPLY (A40)
40	A41
41	LIFT PUMP RET (A42)
42	FFA + (A43)
43	FSV (A44)
44	FFA - (A45)
45	A46
46	CRANK SIG (A47)
47	A48
48	CRANK RET (A49)
49	RFA + (A50)
50	

1	RFA + (B1)
2	LIFT PUMP RET (B2)
3	RFA - (B3)
4	FSV (B4)
5	RTA + (B5)
6	FTA - (B6)
7	CRANK SIG (B7)
8	BB
9	CRANK RET (B9)
10	B10
11	IMT/IMP SUPPLY (B11)
12	IMT/IMP RET (B12)
13	COOLANT SIG (B13)
14	OIL PRESS SUPPLY (B14)
15	OIL PRESS RET (B15)
16	AMBIENT SIG (B16)
17	AMBIENT SUPPLY (B17)
18	FUEL PRESS SIG (B18)
19	FUEL PRESS RET (B19)
20	FUEL PRESS SUPPLY (B20)
21	B21
22	DECREMENT (B22)
23	INCREMENT (B23)
24	SWITCH RET (B24)
25	J1939 (-) (B25)
26	B26
27	B27
28	AMBIENT RET (B28)
29	B29
30	FFA + (B30)
31	CAM SUPPLY (B31)
32	B32
33	COOLANT RET (B33)
34	J1939 (+) (B34)
35	B35
36	CAM RET (B36)
37	B37
38	CRANK SUPPLY (B38)
39	OIL PRESS SIG (B39)
40	B40
41	B41
42	CAM SIG (B42)
43	RTA - (B43)
44	KEYSWITCH (B44)
45	J1939 SHIELD (B45)
46	FTA + (B46)
47	IMP SIG (B47)
48	IMT SIG (B48)
49	OIL TEMP SIG (B49)
50	FFA - (B50)

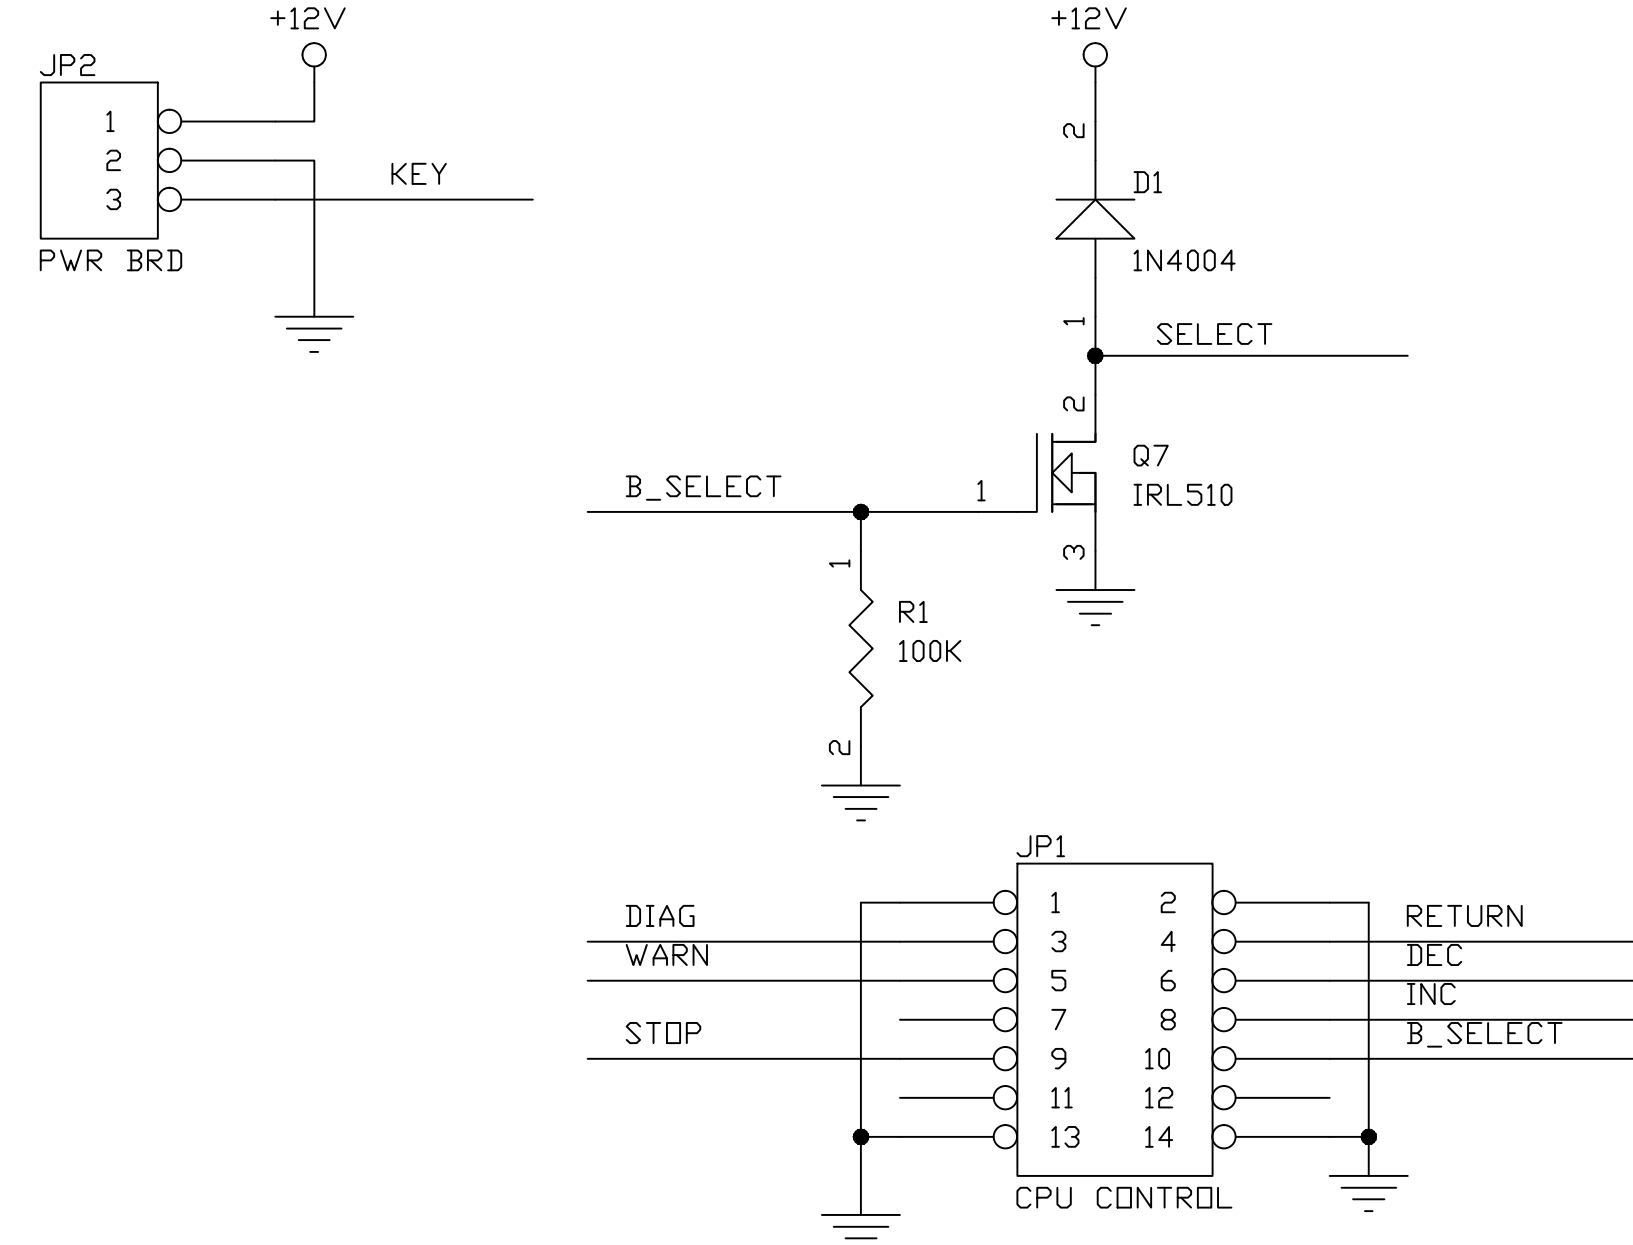

ABBREVIATIONS: FFA = FRONT FUELING ACTUATOR
 FTA = FRONT TIMING ACTUATOR
 RTA = REAR TIMING ACTUATOR
 RFA = REAR FUELING ACTUATOR
 FSV = FUEL SHUTOFF VALVE
 IMT = INTAKE MANIFOLD TEMP
 IMP = INTAKE MANIFOLD PRESS

This document contains confidential and trade secret information, is the property of Cummins Fire Power LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. ©2009 Cummins Fire Power LLC

Cummins Fire Power

CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUERKLE ROAD
 WHITE BEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND
 UPFIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE


D	2014-107	SEE SHEET 1 FOR LATEST REVISION.	RMJ	24FEB2014
C		SEE SHEET 1 FOR LATEST REVISION.	KAK	03DEC2013
REV	ENF	DESCRIPTION OF REVISION	BY	DATE

ANGULAR DIMENSIONS ± 1°
 IMPERIAL UNITS
 METRIC UNITS
 THIRD ANGLE PROJECTION

WORKING TOLERANCES:
 DIMS ± 0.010
 DIA ± 0.005
 HOLE TOLERANCES:
 DIA ± 0.010
 DIA ± 0.005
 DIA ± 0.005

DWG UNITS: INCH/LB/S
 SCALE: EST WEIGHT:
 DRAWN BY: KAK
AUTO CAD
 DATE: 14 DEC 2009
 REF DRWG:
 SHEET 60F7
 DRAWING NO: 16260

D	2014-107	SEE SHEET 1 FOR LATEST REVISION.	RMJ	24FEB2014
C		SEE SHEET 1 FOR LATEST REVISION.	KAK	03DEC2013
REV	ENF	DESCRIPTION OF REVISION	BY	DATE

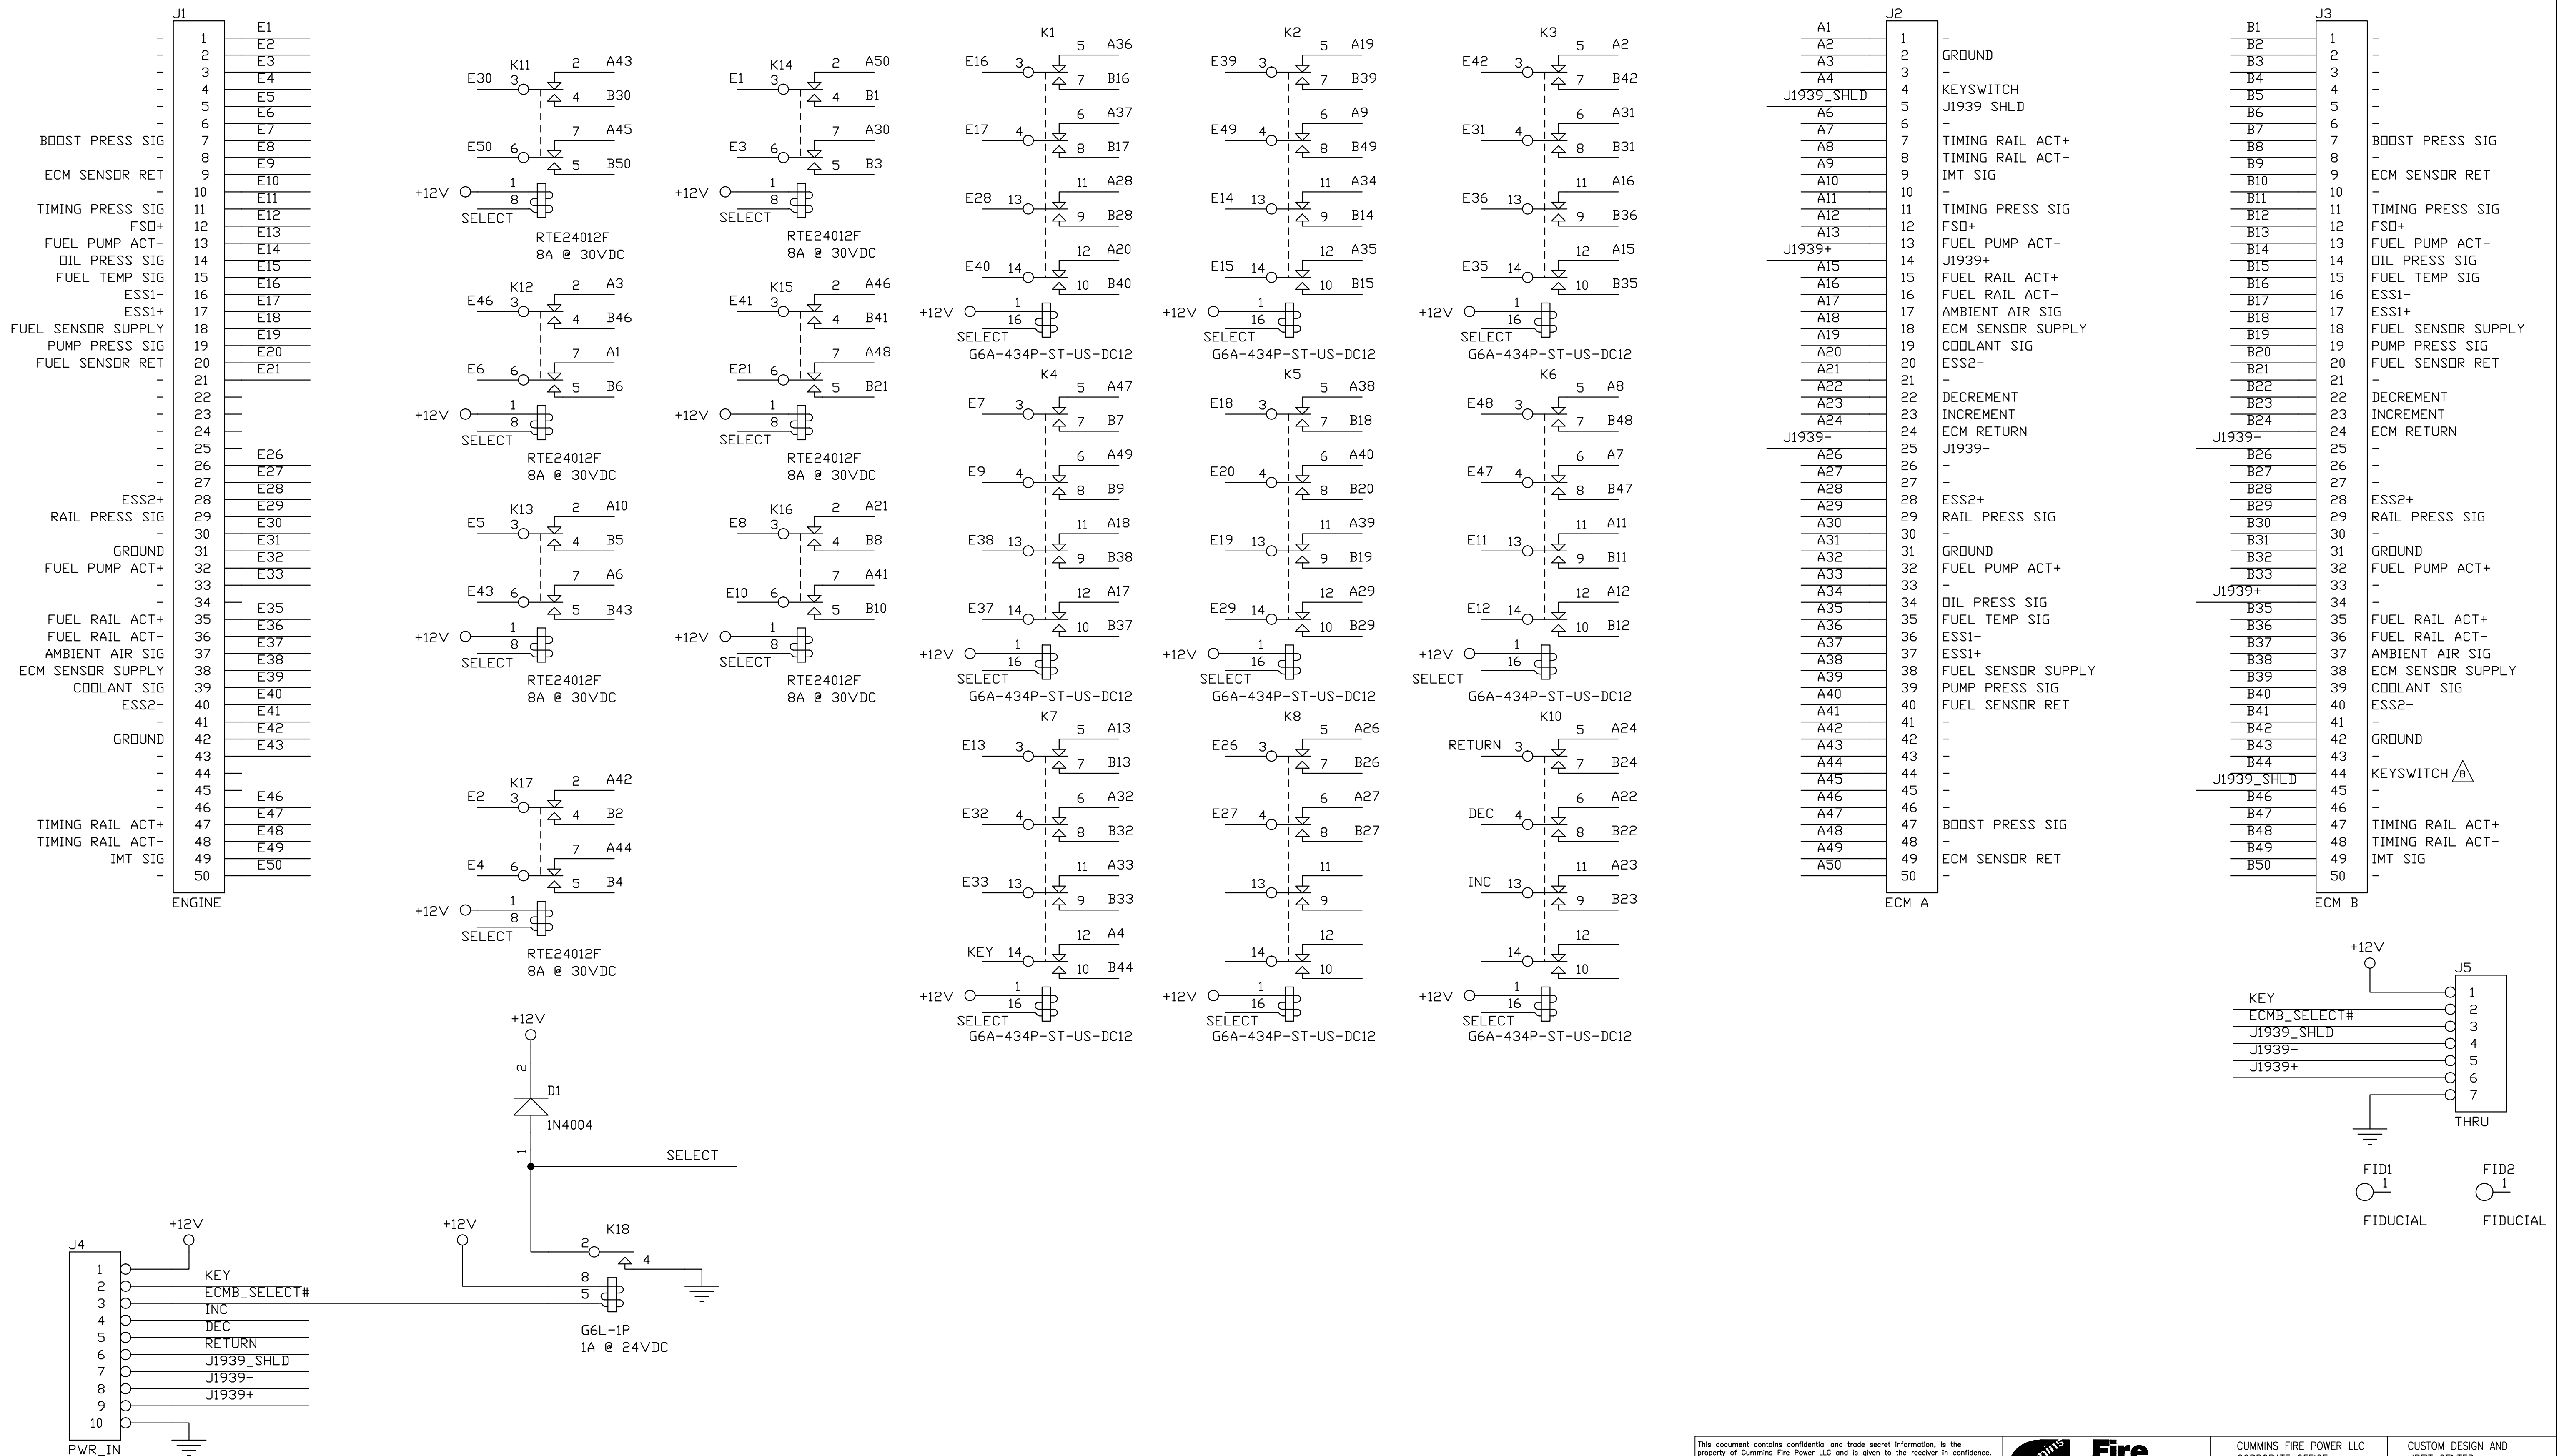

This document contains confidential and trade secret information, is the property of Cummins Fire Power, LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins Fire Power, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins Fire Power LLC

Cummins Fire Power
 CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUERKLE ROAD
 WHITE BEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN AND
 UPFIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

**SCHMATIC, ECM SWITCH
 CFP23E FIRE PUMP DRIVER**


UNLESS OTHERWISE SPECIFIED ALL DIMENSION TOLERANCES ARE:
 ANGULAR DIMENSIONS ± 1°
 IMPERIAL UNITS
 METRIC UNITS

DWG UNITS: INCH/LB/S
 SCALE: EST WEIGHT:
 DRAWN BY: KAK
AUTO CAD
 SHEET 70F7
 DATE: 14 DEC 2009
 REF DRWG:
 DRAWING NO: 16260

D	2014-107	SEE SHEET 1 FOR LATEST REVISION.	RMJ	24FEB2014
C		SEE SHEET 1 FOR LATEST REVISION.	KAK	03DEC2013
REV	ENF	DESCRIPTION OF REVISION	BY	DATE

BILL OF MATERIAL

ITEM	QTY	DESCRIPTION	PART NUMBER
1	1	BRACKET, PRESSURE TRANSMITTER	A042E427
2	1	TRANSMITTER, PRESSURE, DWYER: 626-13-GH-PI-E3-S4	A042E425

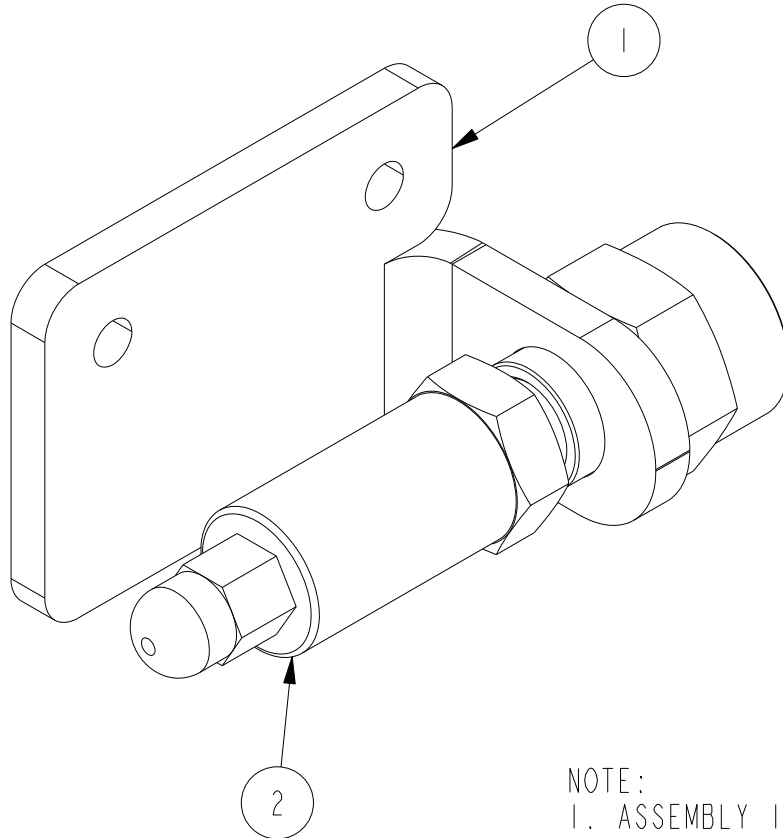

NOTE:
 1. ASSEMBLY INSTALLS BELOW THE DIGITAL CONTROL PANEL. USING THE SAME TWO HOLES AS THE DIGITAL CONTROL PANEL MOUNTING BRACKET.

This document contains confidential and trade secret information, is the property of Cummins FirePower LLC and is given to the receiver in confidence. The receiver, by receiving and retaining of the document accepts the document in confidence and agrees that, except as authorized in writing by Cummins FirePower, it will (1) not use the document or any copy thereof or the confidential or trade secret information therein, (2) not copy the document, (3) not disclose to others either the document or the confidential or trade secret information therein, and (4) upon completion of the need to retain the document, or upon demand, return the document, all copies thereof, and all material copied therefrom. COPYRIGHT Cummins FirePower LLC



CUMMINS FIRE POWER LLC
 CORPORATE OFFICE
 1600 BUERKLE ROAD
 WHITE BEAR LAKE, MN
 WWW.CUMMINSFIREPOWER.COM

CUSTOM DESIGN
 AND UPFIT CENTER
 875 LAWRENCE DRIVE
 DEPERE, WISCONSIN

UNLESS OTHERWISE SPECIFIED
 ALL DIMENSION TOLERANCES ARE

ANGULAR DIMENSIONS ± 1°		
MACHINED SURFACES	IMPERIAL UNITS	METRIC UNITS
125	MACHINE TOLERANCES	MACHINE TOLERANCES
	.X ± 0.06	X ± 1.5
	.XX ± 0.010	XX ± 0.5
WELD TOLERANCES	WELDED TOLERANCES	
.X ± 0.25	X ± 5	
.XX ± 0.12	XX ± 3	
.XXX ± 0.06	XXX ± 1.50	

ASSEMBLY, VSPLD PRESSURE TRANSMITTER		
DWG UNITS: IN/LB/S	DRAWN BY: PBS PRO-ENGINEER	DATE: 09APR2015
EST WEIGHT: 1.404	SHEET 1 OF 1	INIT ECO: 2015-227
SCALE: 1.000		DRAWING NO: A042E428

REV	ECO	DESCRIPTION OF REVISION	REV BY	DATE